

2000
DODGE RAM QUAD CAB/CLUB CAB
(BE)



Jeep

CHRYSLER • PLYMOUTH • DODGE • JEEP

THE MOPAR DIFFERENCE

VIN PLATE DECODING INFORMATION

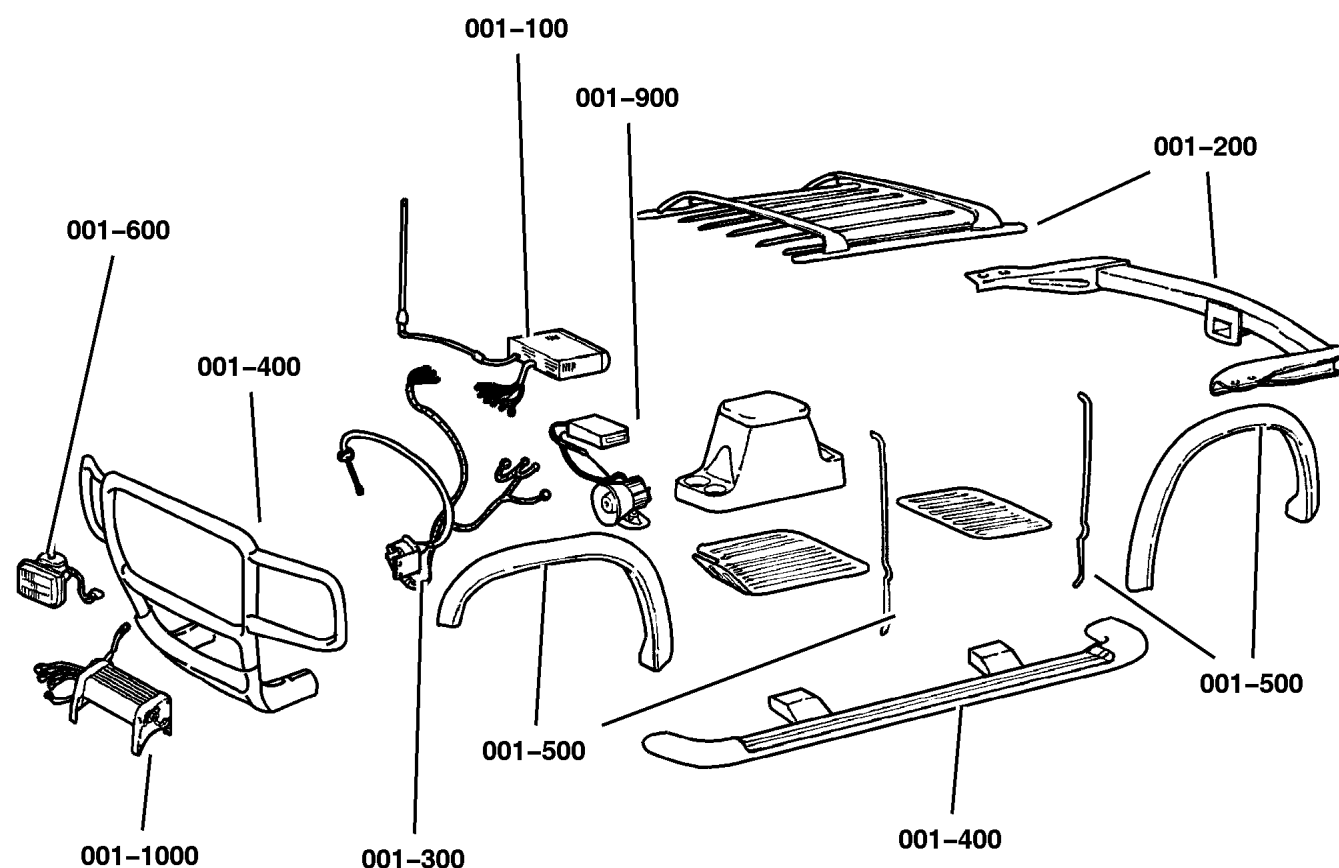
1	2	3	4	5	6	7	8	9	10	11	12 thru 17
Country	Make	Vehicle Type	Other	Line	Series	Body Style	Engine	Check Digit	Model Year	Assy. Plant	Sequence No.

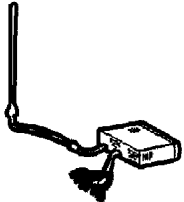

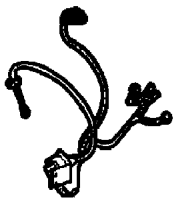
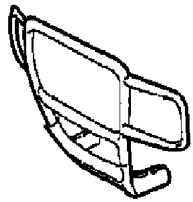



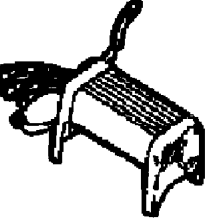
The following table interprets the VIN Plate positions shown above.

Position	Interpretation	Codes = Description
1	Country of Origin	1 = Built in U.S. by DaimlerChrysler Corporation 3 = Built in Mexico by DaimlerChrysler de Mexico
2	Make	B = Dodge
3	Vehicle type	7 = Truck
4	GVWR & Pass. Safety	D=0-1360 kg (1-3000 lbs) E=1361-1814 kg (3001-4000 lbs) F=1815-2267 kg (4001-5000 lbs) G=2268-2721 kg (5001-6000 lbs) H=2722-3175 kg (6001-7000 lbs) J=3176-3628 kg (7001-8000 lbs) K=3629-4082 kg (8001-9000 lbs) L=4083-4535 kg (9001-10000 lbs) M=4536-6350 kg (10001-14000 lbs)
5	Vehicle Line	C = Ram Cab /Ram Pick Up (4x2) F = Ram Cab /Ram Pick Up (4x4)
6	Series	1 = 1500 2 = 2500 3 = 3500
7	Body Style	2 = Club Cab (2WD) 3 = Quad Cab (2WD&4WD)
8	Engine	Y = 5.2L 8 Cyl. (ELF) 7 = 5.9L 6 Cyl. (ETH) 6 = 5.9L 6 Cyl. (ETC) 5 = 5.9L 8 Cyl. (EMM) Z = 5.9L 8 Cyl. (EML) W = 8.0L 10 Cyl (EWA)
9	Check Digit	
10	Model Year	Y = 2000
11	Assembly Plant	G = Saltillo J = St. Louis North M = Lago Alberto
12 thru 17	Vehicle Build Sequence	Model Year Assembly Sequence

Group – 001

Component Parts for Mopar Accessories



001-100 Audio & Electronics 	001-200 Carriers & Cargo Hauling 	001-300 Driving Convenience 	001-400 Exterior Appearance 
001-500 Exterior Protection 	001-600 Fog Lights & Electrical 	001-900 Security 	001-1000 4 - Wheeling & Off Road 

GROUP 1 - Component Parts for Mopar Accessories

Illustration Title

Group-Fig. No.

Audio & Electronics

Player Kit	Fig. 001-110
Player Kit - 12 Disc	Fig. 001-120

Carriers & Cargo Hauling

Cover Kit, Tonneau Sport	Fig. 001-210
Cover Kit, Tonneau - Folding	Fig. 001-212
Cover Kit, Tonneau - Hard	Fig. 001-216
Mirror Package - Trailer Tow	Fig. 001-230
Wiring Kit - Trailer Tow	Fig. 001-240
Adapter Kit - Ball Mount	Fig. 001-250

Driving Convenience

Speed Control Kit	Fig. 001-310
-------------------------	--------------

Exterior Appearance

Step Bumper	Fig. 001-410
Step Kit	Fig. 001-420
Running Board	Fig. 001-430
Grille Guard	Fig. 001-440

Exterior Protection

Molding Kit	Fig. 001-510
Shield Kit - Air Front	Fig. 001-520
Skid Plate	Fig. 001-530

Fog Lights & Electrical

Light Kit - Fog	Fig. 001-610
Light Kit - Off Road	Fig. 001-612
Fog Lamp Kit - Brush Guard	Fig. 001-620
Fog Lamp Kit - Fascia	Fig. 001-622
Installation Kit - Off Road Lamps	Fig. 001-630
Heater Kit	Fig. 001-640


Security

Security	Fig. 001-910
----------------	--------------

4 - Wheeling & Off Road

Winch Kit - Power	Fig. 001-1010
-------------------------	---------------

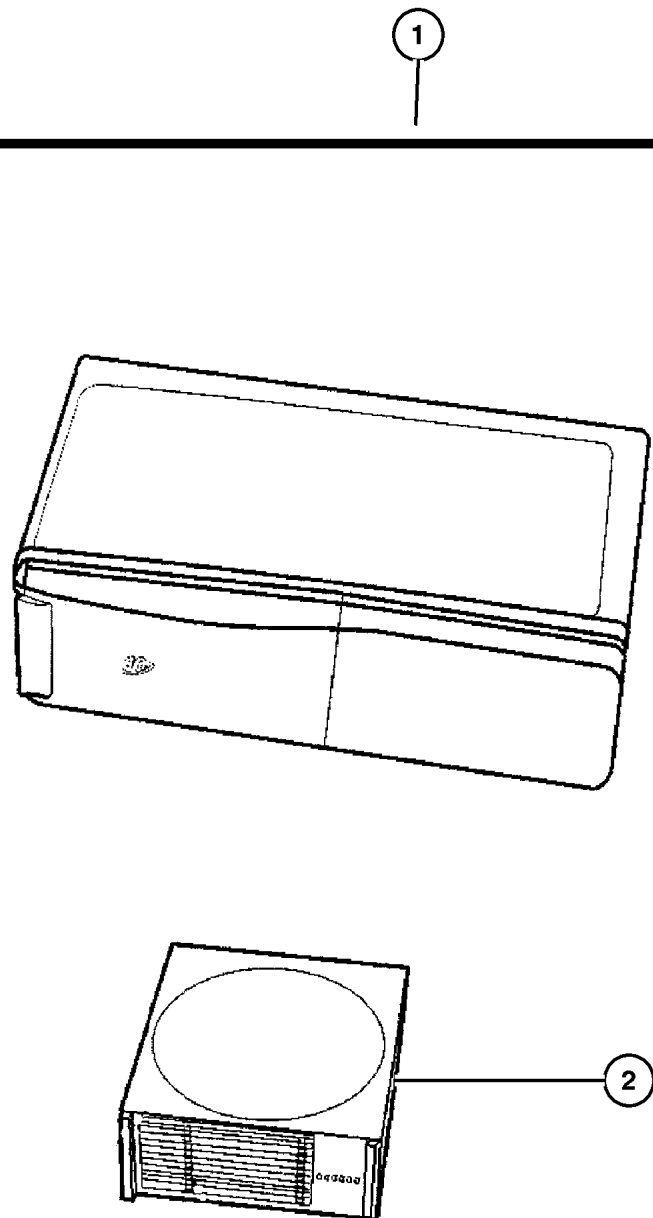Player Kit Figure 001-110



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE: Use with CD-Controlled radios. For radios without CD Changer controls, use FM-Modulator Kit 82202292

1	8220 2700	1	PLAYER KIT, CD Changer - 6 Disc
2	4797 433	1	MAGAZINE, CD Changer


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

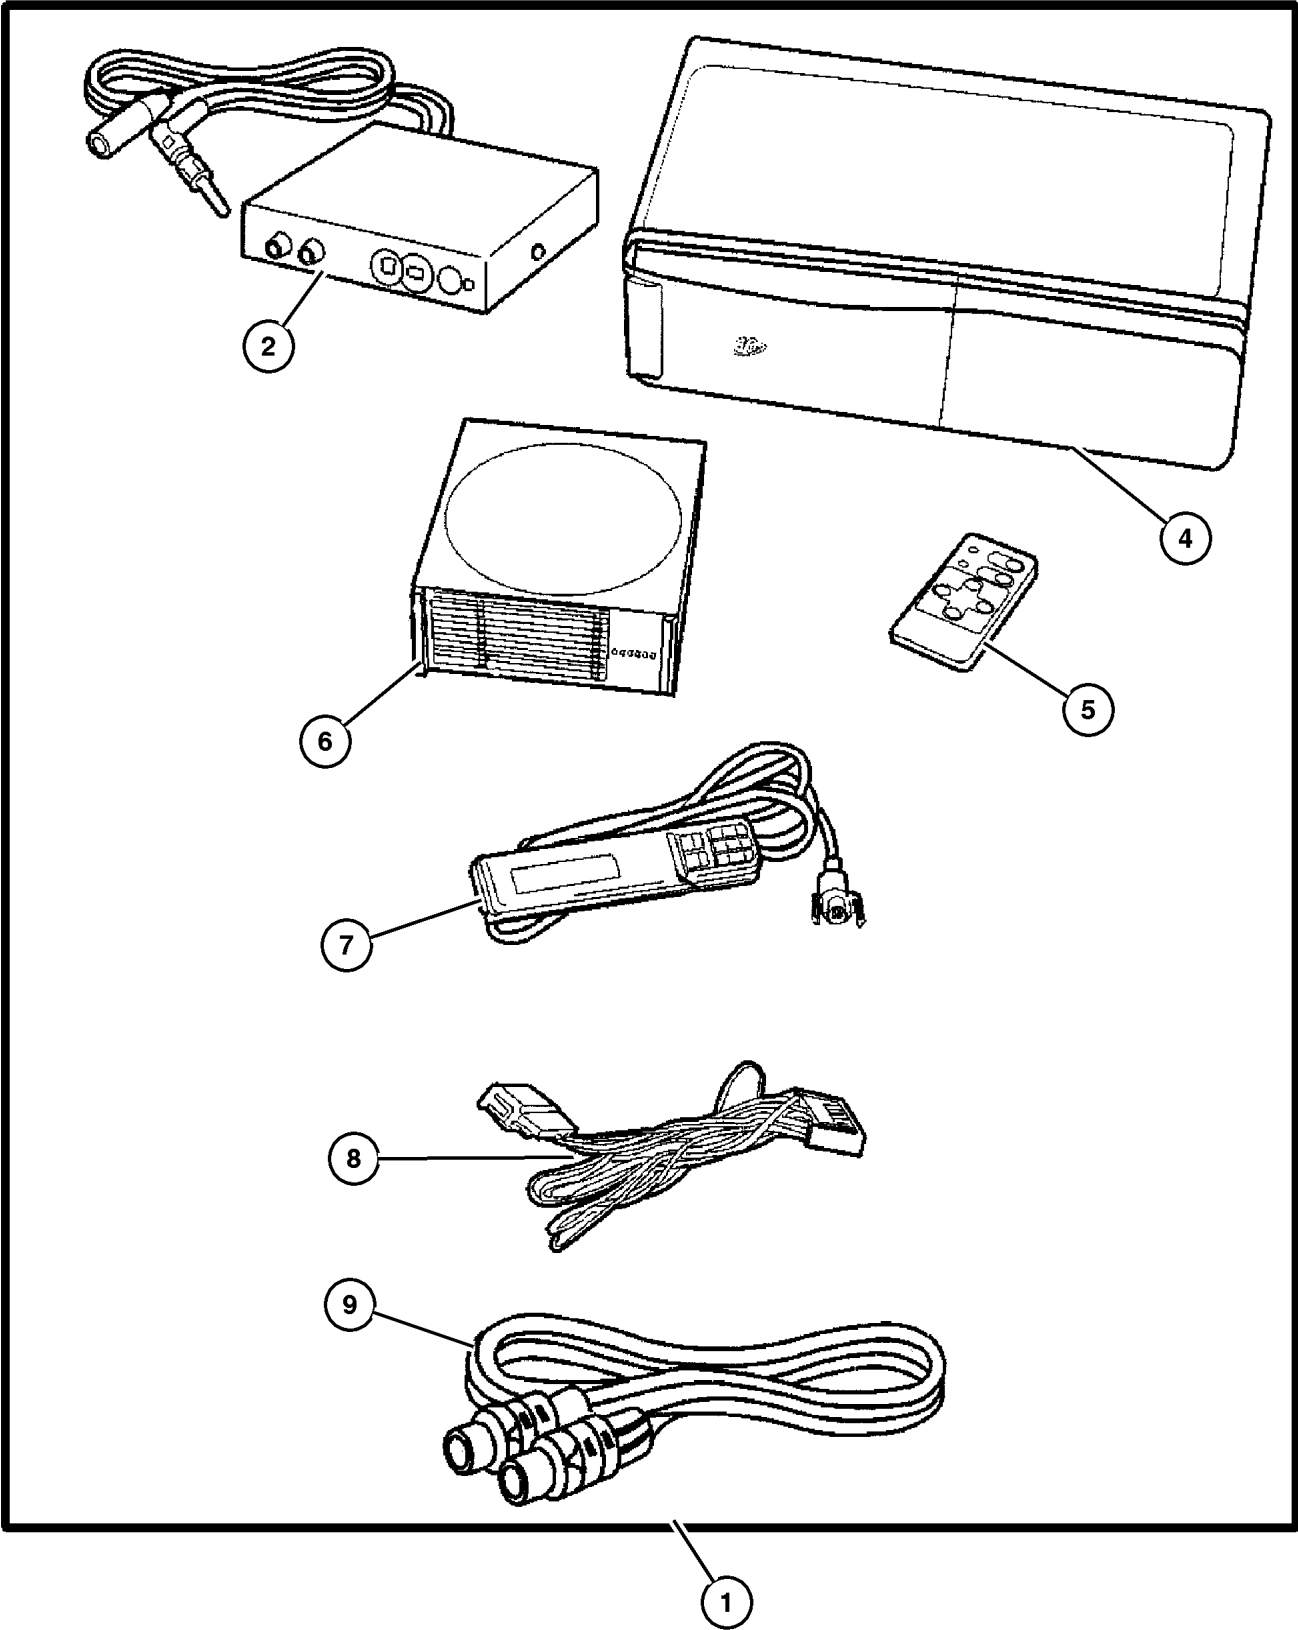Player Kit - 12 Disc
 Figure 001-120




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE; For radio without CD controls. Pentastar Logo, Includes RF Modulator, Power Cord, Din Cord, Hand Held and IR Remote Controller and Operating manual, 12 Disc Magazine.									
1	8220 4730	1			31, 33, 34				PLAYER KIT, CD Changer - 12 Disc
2	5013 804AA	1			31, 33, 34				MODULATOR, FM
-3	5013 800AA-	1			31, 33, 34				HARDWARE KIT, Mounting
4	5013 806AA	1			31, 33, 34				CHANGER, CD
5	5013 802AA	1			31, 33, 34				CONTROLLER, CD Wireless
6	5013 805AA	1			31, 33, 34				MAGAZINE, CD Changer
7	5013 803AA	1			31, 33, 34				CONTROLLER, CD Wired
8	4465 117	1			31, 33, 34				ADAPTOR, A/C
9	5013 801AA	1			31, 33, 34				DIN CORD, CD Player

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

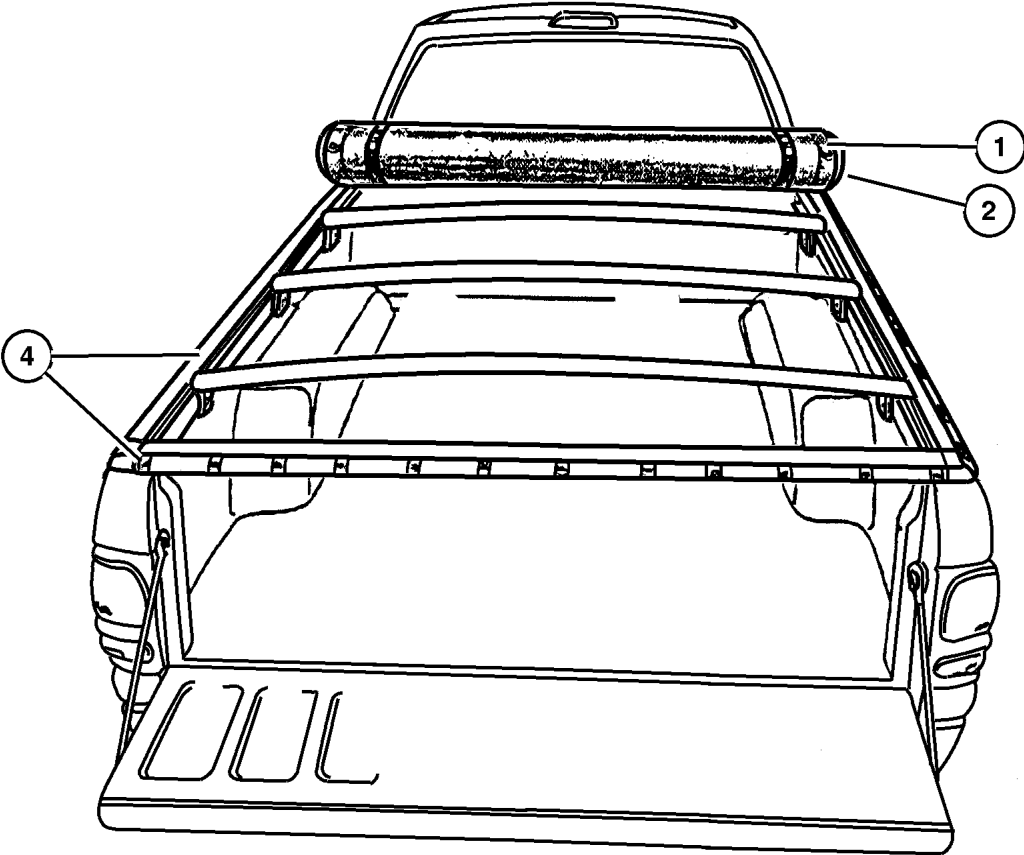Cover Kit, Tonneau Sport
Figure 001-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE; Not for use with OverRail Bedliners. Cover Kits have new material and new bow system.

1	8220 3124	1			31, 33				COVER, Tonneau 6.5' Bed Snap Style
	8220 3125	1			34				8' Bed Snap Style
2									COVER KIT, Tonneau with Frame- Vinyl
	8240 1379	1			31, 33				Premium Snap Style 6.5' Bed
	8240 1380	1			34				Premium Snap Style 8' Bed
-3									SNAP KIT, Tonneau Cover
	5017 515AA-	1			34				Package of 10
		1			31, 33				Package of 10
4	5017 802AA	1			34				RAIL KIT, Tonneau - Rear Mounting Snaps and Mounting Hardware
		1			31, 33				Snaps and Mounting Hardware


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Cover Kit, Tonneau - Folding
Figure 001-212

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									COVER KIT, Tonneau-Folding
	8220 3920	1			31, 33				6.5 Foot Bed
	8220 3921	1			34				8 Foot Bed
-2	5018 118AA-	1			31, 33				LOCK KIT, folding-tonneau
-3	5018 386AA-	1			31, 33				KEY, Master
-4									HARDWARE KIT, Tonneau - Folding
	8220 3246	1			31, 33				6.5 Foot Bed
	8220 3247	1			34				8 Foot Bed

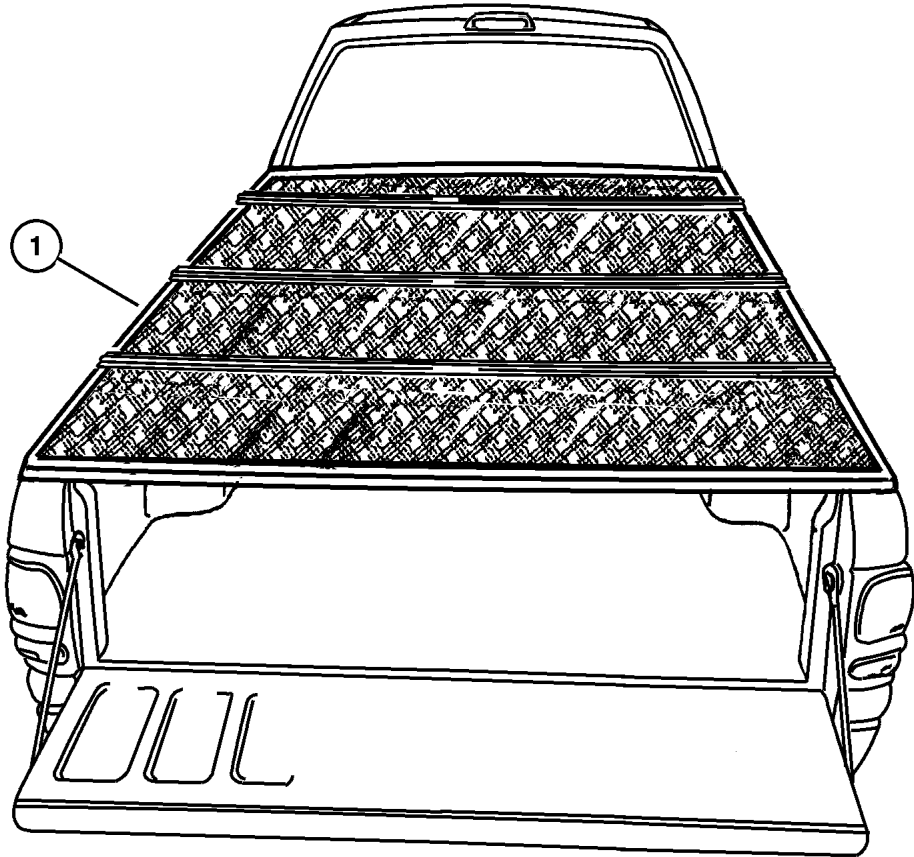


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Cover Kit, Tonneau - Hard Figure 001-216

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
.NOTE; Use the Gas Props for the rear only. The kit contains two gas props, gas prop brackets for lid and frame - 2 of each bracket.									
1									COVER KIT, Tonneau-Hard
	8220 4378	1			31, 33				White [PW7]
	8220 4380	1							Black [PX8]
	8220 4382	1			31, 33				Flame Red [PR4]
	8220 4386	1			31, 33				Chestnut [PU1]
	8220 4388	1			31, 33				Metallic Red [PRC]
	8220 4390	1			31, 33				Driftwood [PFA]
-2	5018 117AA-	1			31, 33				LOCK KIT, hard-tonneau
-3	5018 343AA-	1			31, 33				KEY, Master
-4	5018 067AA-	1			31, 33				GAS PROP KIT, tonneau-hard, Contains: Gas Props, Brackets for Lid and Frame - Two of each.

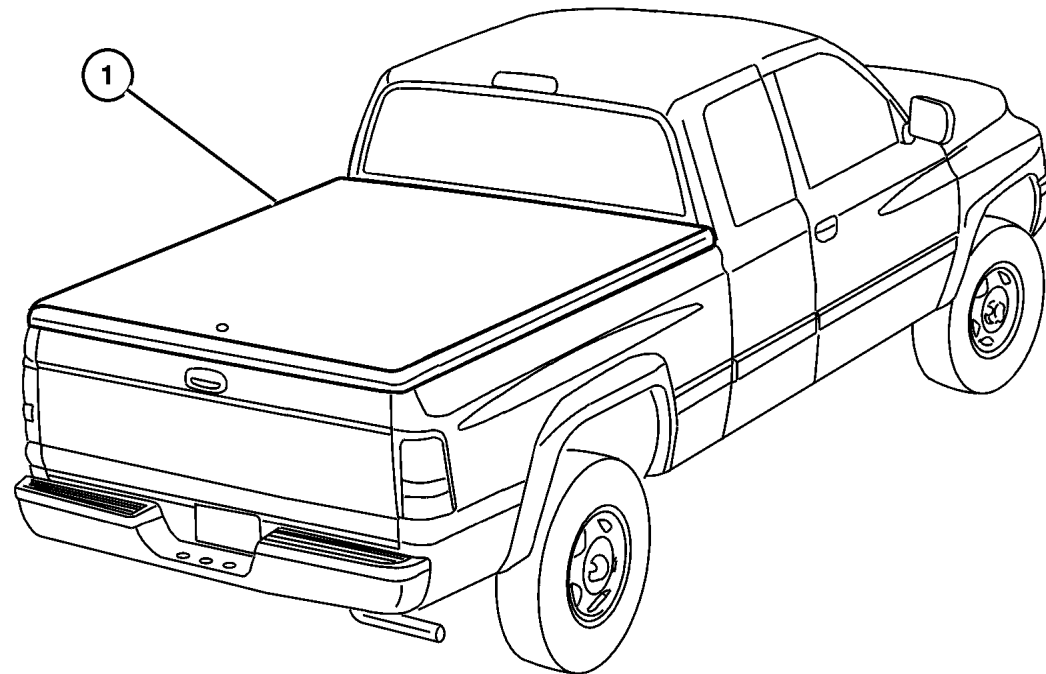


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM, EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

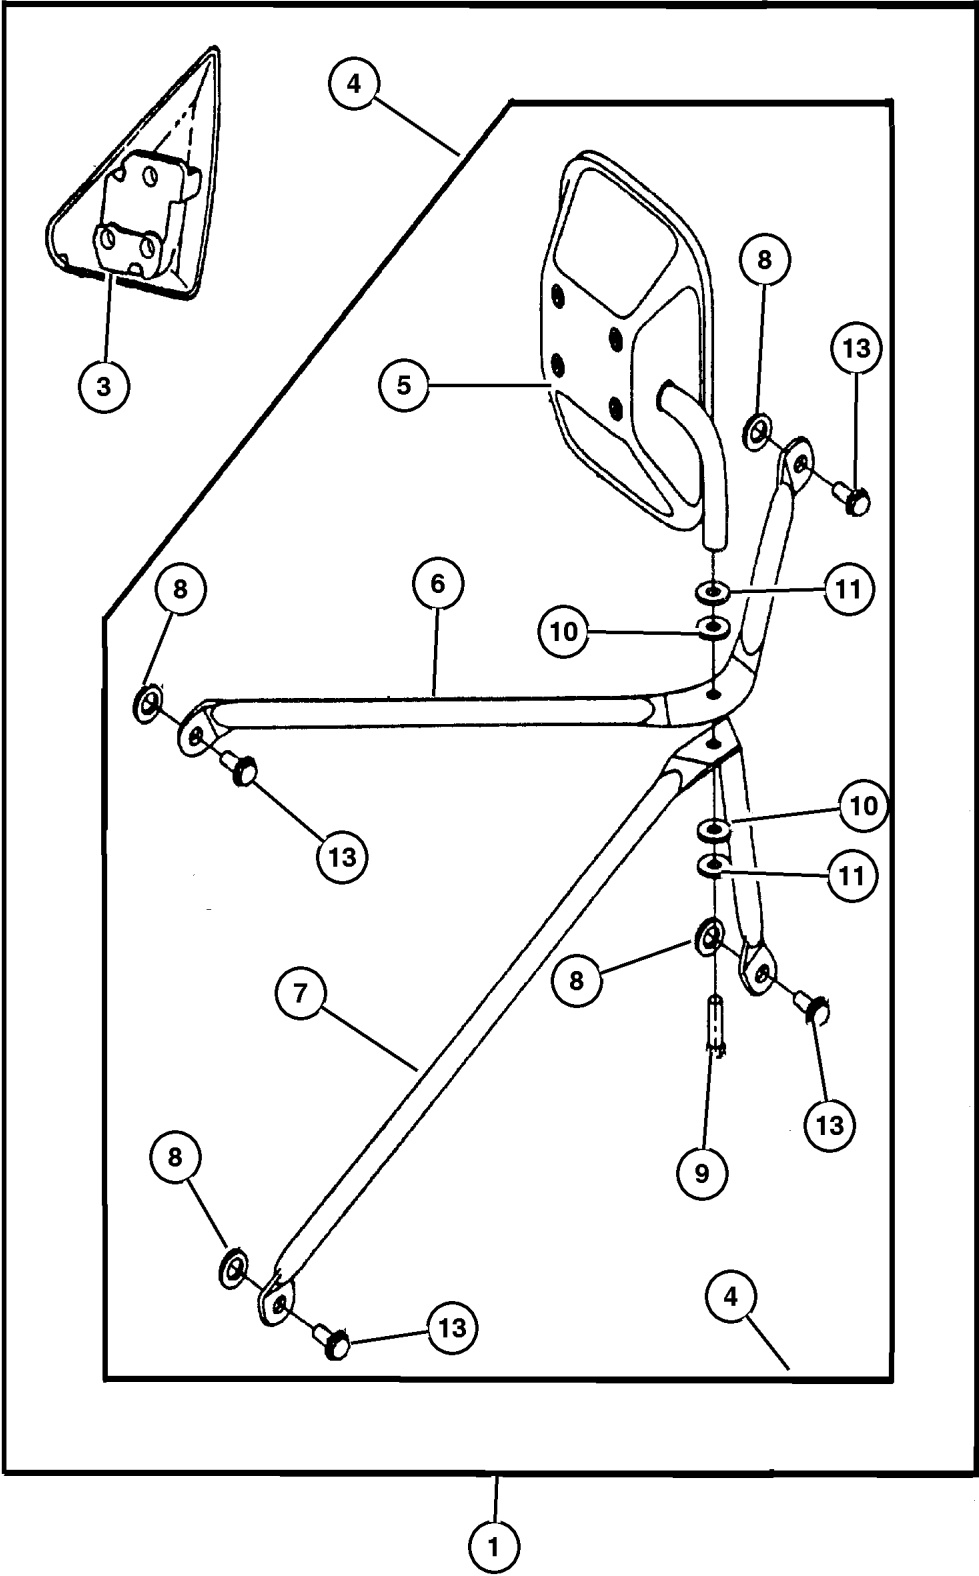Mirror Package - Trailer Tow
Figure 001-230




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	8240 1002	1			31, 33, 34				MIRROR PACKAGE, Exterior
-2 3	6031 438	8							NUT AND SEALER, .250-20 COVER, Mirror Flag
	5507 5444	1							Right
	5507 5445	1							Left
4	5507 4917	1							MIRROR KIT, Trailor Tow
5	4746 372	1							MIRROR, Outside Rearview
6									BRACKET, Mirror
	4746 368	1							Upper, Right
	4746 369	1							Upper, Left
7									BRACKET, Mirror
	4746 374	1							Lower, Right
	4746 375	1							Lower, Left
8	4746 373	8							WASHER, Mirror, Black
9	4746 376	1							BOLT, Mirror
10	4723 110	1							WASHER, Outside Mirror, Phenolic
11	4723 109	1							WASHER, Outside Mirror
-12 13	5513 5182	2							SEAL, Mirror Opening SCREW, Hex Head, .25-20x.75, (NOT SERVICED) (Not Serviced)

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

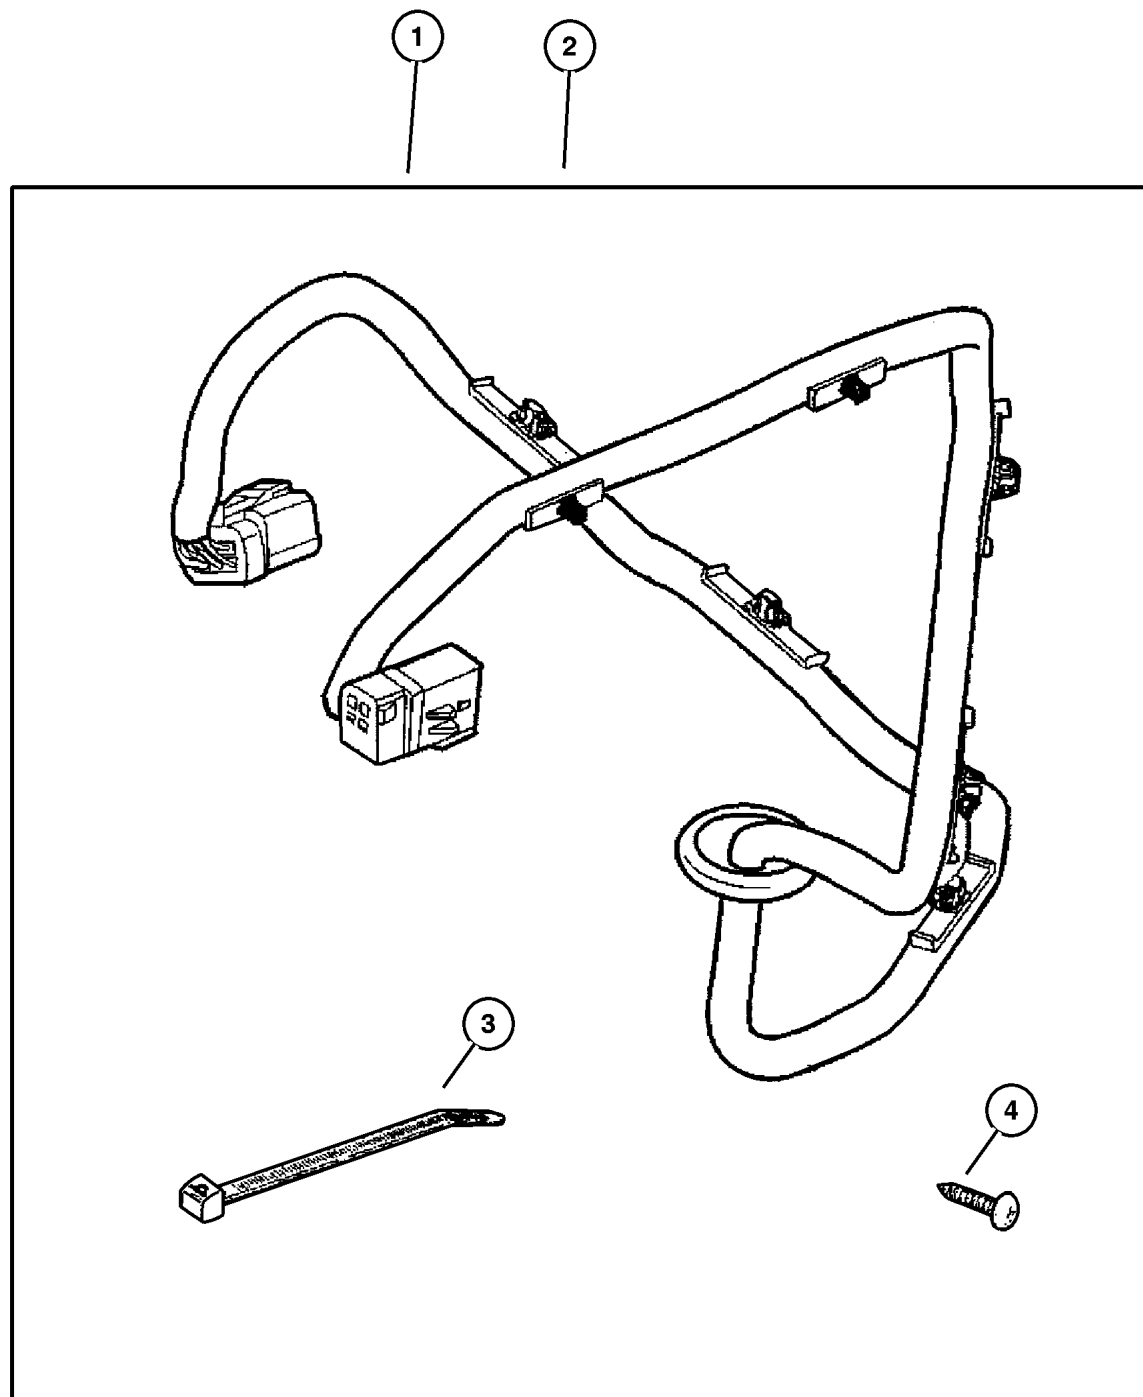Wiring Kit - Trailer Tow Figure 001-240

[illegible]


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Adapter Kit - Ball Mount

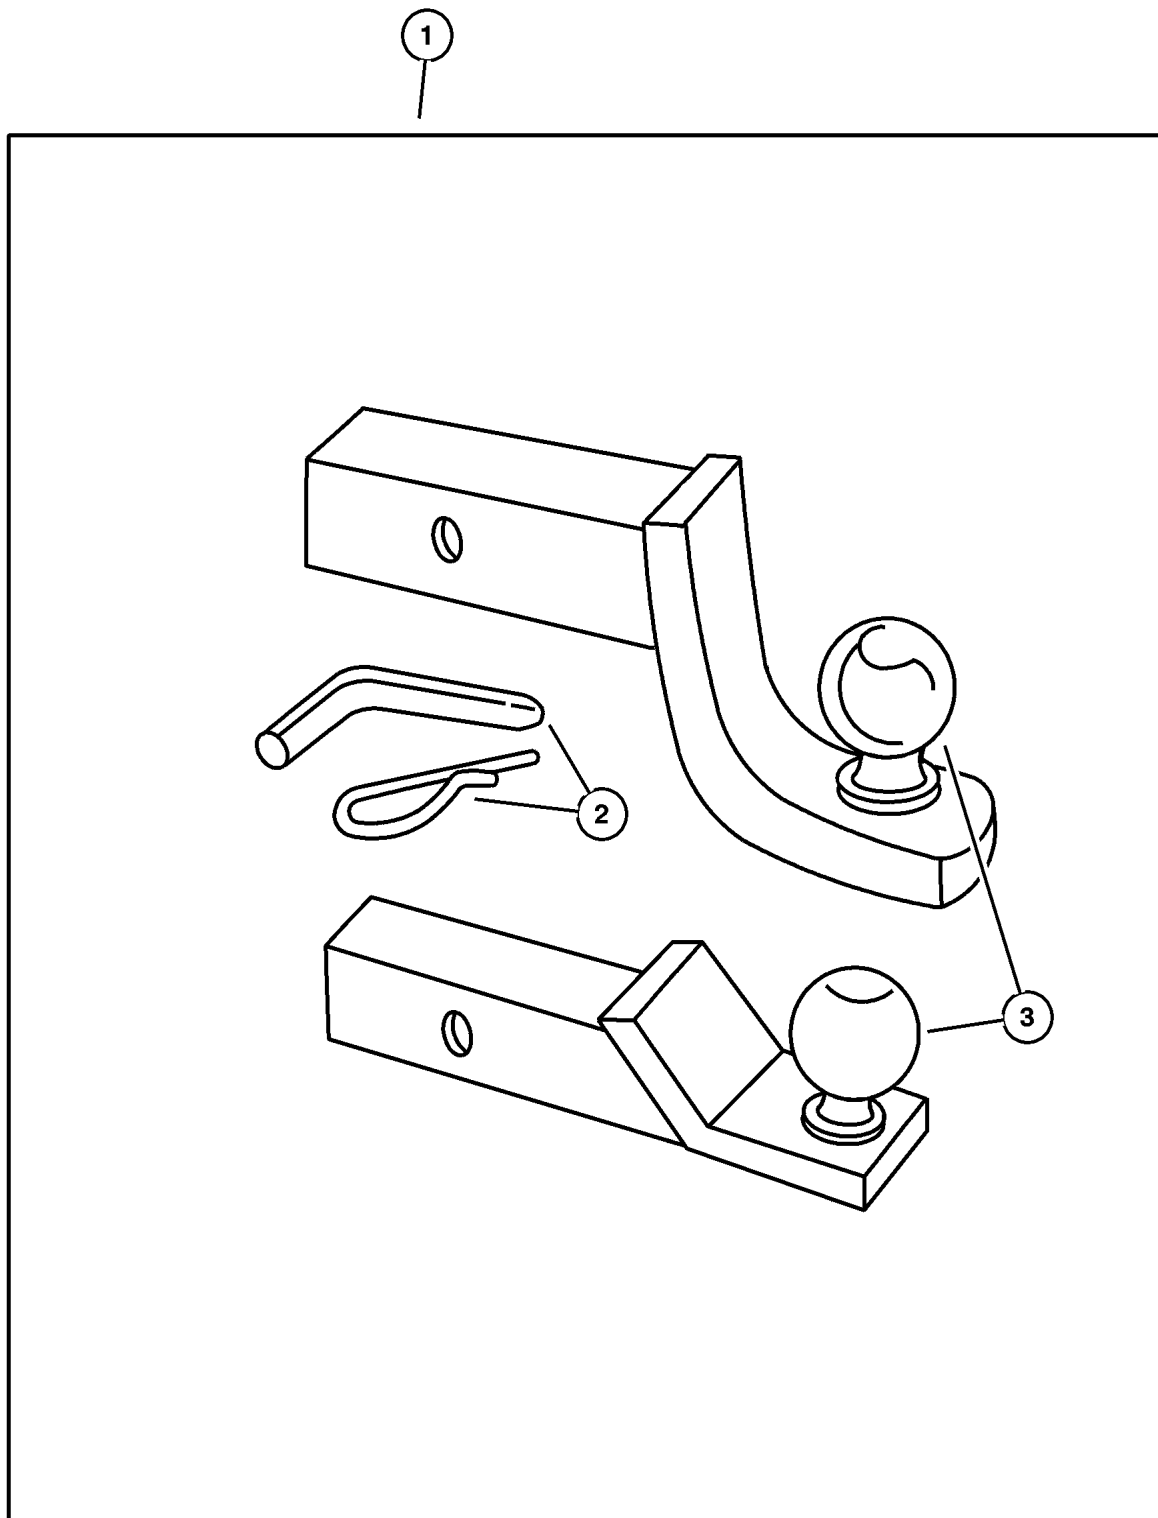Figure 001-250



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									ADAPTER KIT, Ball Mount
	8220 0248	1							3.5' Rise 2.75' Drop 2,000 lb. Rating 200 lb. Tongue Weight
	8220 1148	1							1.75' Rise 1' Drop 5,000 lb Tow Rating 500 lb Tongue Weight
	8220 1149	1							3' Rise 2.25' Drop 5,000 lb. Tow Rating 500 lb. Tongue Weight
2	5016 666AA	1			31, 33, 34				PIN, Hitch
3									BALL KIT, Trailer Tow
	8240 1102	1			31, 33, 34				1 7/8' Ball 1x2 1/2' Shank
	8240 1103	1			31, 33, 34				2' Ball 1x2 1/8' Shank
	8240 1104	1			31, 33, 34				1 7/8' Ball 3/4x1 3/4' Shank
	8240 1106	1			31, 33, 34				2' Ball 1x2 7/8' Shank
	8240 1197	1			31, 33, 34				1 7/8' Ball 3/4x2 5/16 Shank
	8240 1216	1			31, 33, 34				1 7/8' Ball 1x2 7/8' Shank
	8240 1218	1			31, 33, 34				2 5/16' Ball 1x2 1/8' Shank
	8240 1219	1			31, 33, 34				2 5/16' Ball 1x2 7/8 Shank

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE

$$\begin{aligned} 1, 6 &= 1500 \\ 2, 7 &= 2500 \\ 3, 8 &= 3500 \end{aligned}$$

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

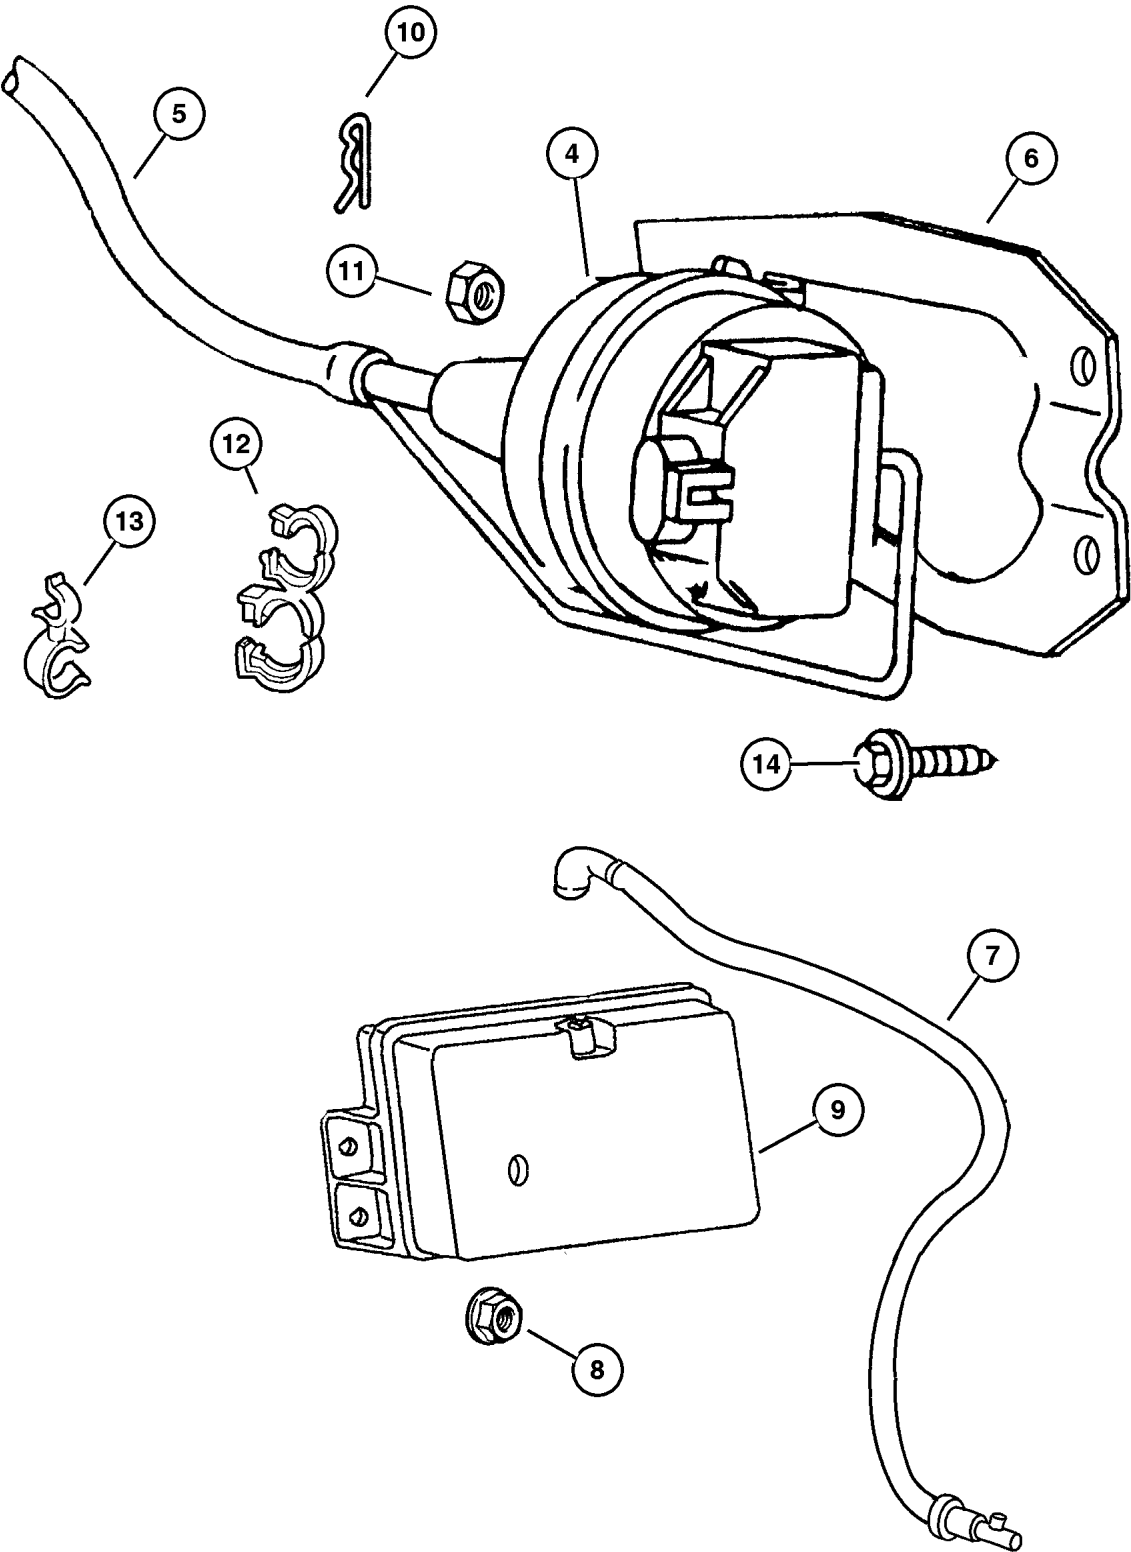
ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

Speed Control Kit
Figure 001-310




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-1									CONTROL PACKAGE, Speed
	8220 4651	1			33, 34				Control
	8220 4652	1			31, 33, 34				V10 V6 and V8
	8220 4654	1			33, 34				Diesel
-2									SWITCH, Speed Control
	56021 332AB-	1							Right
	56021 333AB-	1							Left
-3	56045 455AD-	1							CLOCKSPRING
4	4669 977	1							SERVO, Speed Control
5									CABLE, Speed Control
	5207 8598	1							V6 and V8
	5207 9311	1							V10
	5303 1574	1							Diesel
6	5300 7958	1							BRACKET, Speed Control Servo
7									HARNESS, Vacuum Speed Control
	5207 8320	1							V6 and V8
	5207 8323	1							V10 and Diesel
8	6100 775	2							NUT, Hex Flange, M5x.8
9	5503 5614	1							RESERVOIR, Vacuum
10	6025 867	1							CLIP, Cable to Servo Attach
11	6502 493	2							NUT, Hex Flange Serration, M6x1
12	5207 8479	1							CLIP, Vacuum Harness
13	6503 441	1							CLIP, Cruise Control
14	6032 988	3							SCREW

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

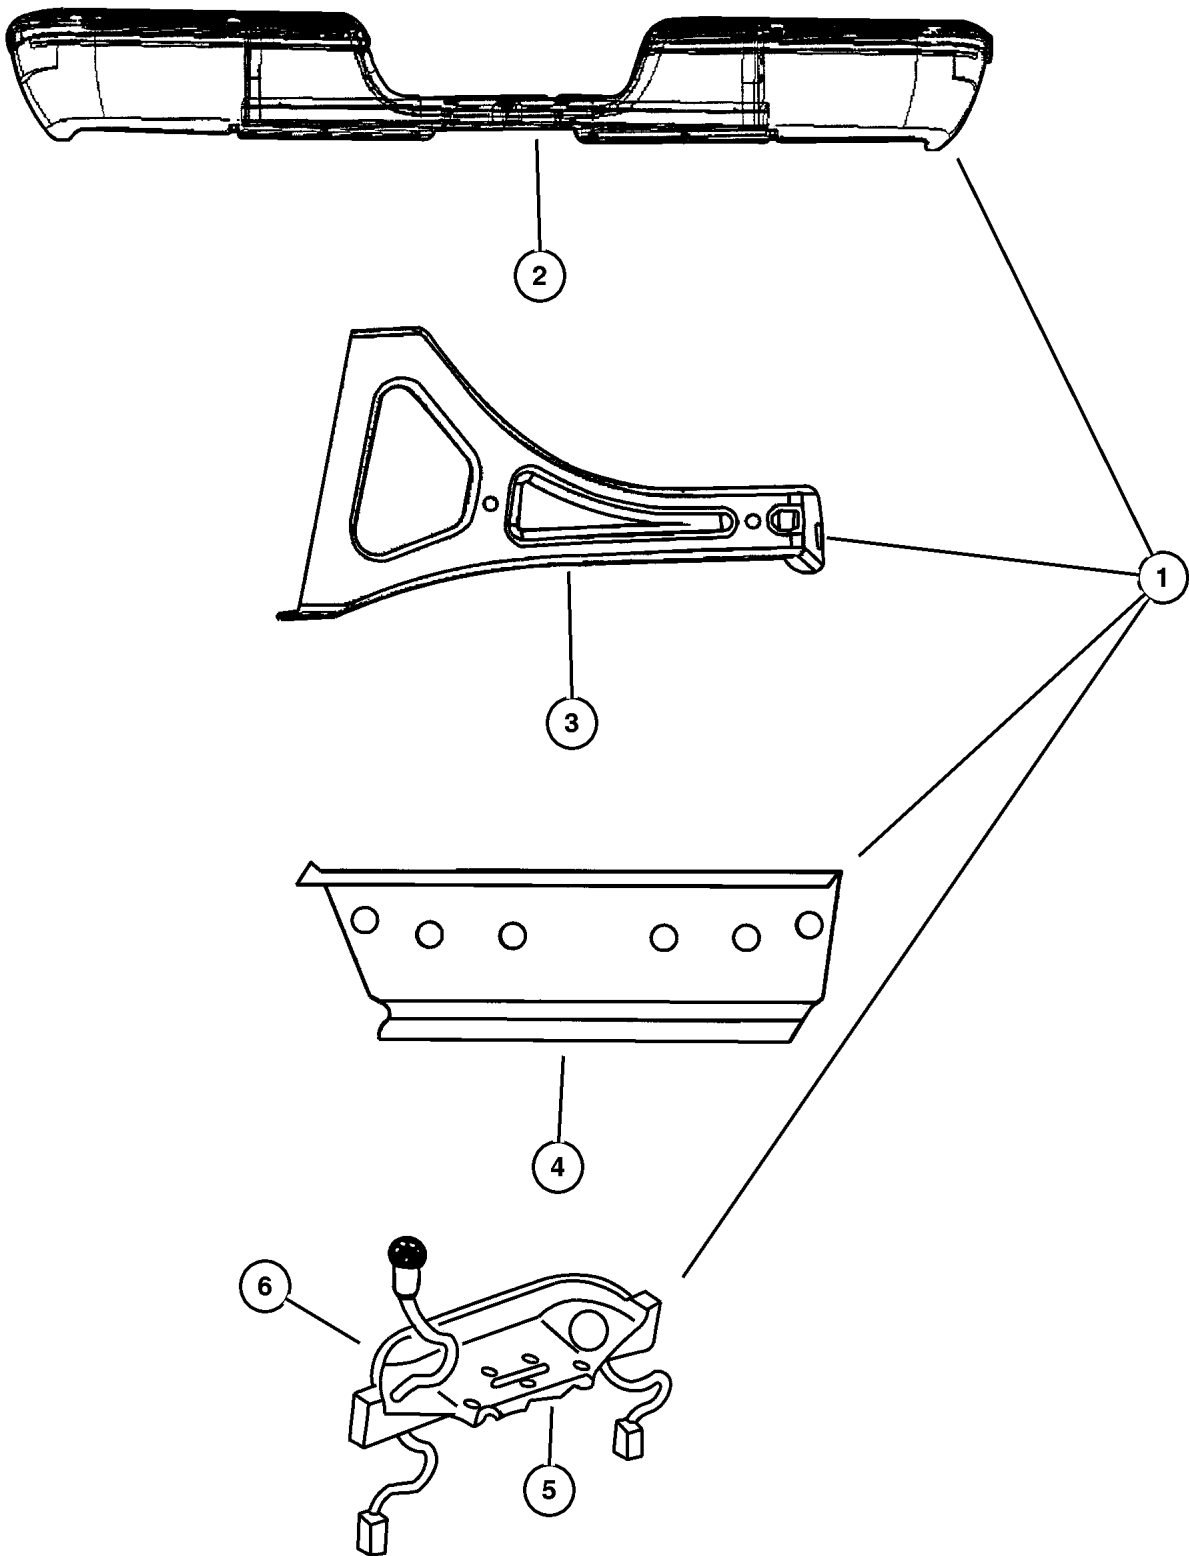Step Bumper
Figure 001-410




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									BUMPER KIT, Step Rear
	8240 1315	1			31, 33, 34				Argent
	8240 1316	1			31, 33, 34				Bright
2									BUMPER, Rear
	55076 634AE	1							Bright
	5FG80 GW7AE	1							Painted P.A.R.
3									BRACKET, Rear Bumper Side
	5527 4868	1							Right
	5527 4869	1							Left
4	5527 4863	2							BRACKET, Rear Bumper
5	8240 1107	1			31, 33, 34				PANEL PACKAGE, License Plate
									With Light
6	5507 6850	1							PANEL, License Plate
-7	5505 4891	2							LENS, License Lamp
-8	L000 0168	2							BULB, 168
-9	5601 8807	2							WIRING, Taillamp Socket
-10	6504 394	4							BOLT AND RETAINER, M12X1. 75X35.00
-11	6505 099AA-	8							NUT, Hex Flange Lock, M12x1.75
-12	6504 122	2							BOLT, m12x1.75x35.00
-13	6100 055	4							NUT AND WASHER, Hex Nut-Coned Washer, M12 x 1.75
-14	6504 394	2							BOLT AND RETAINER, M12X1. 75X35.00

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

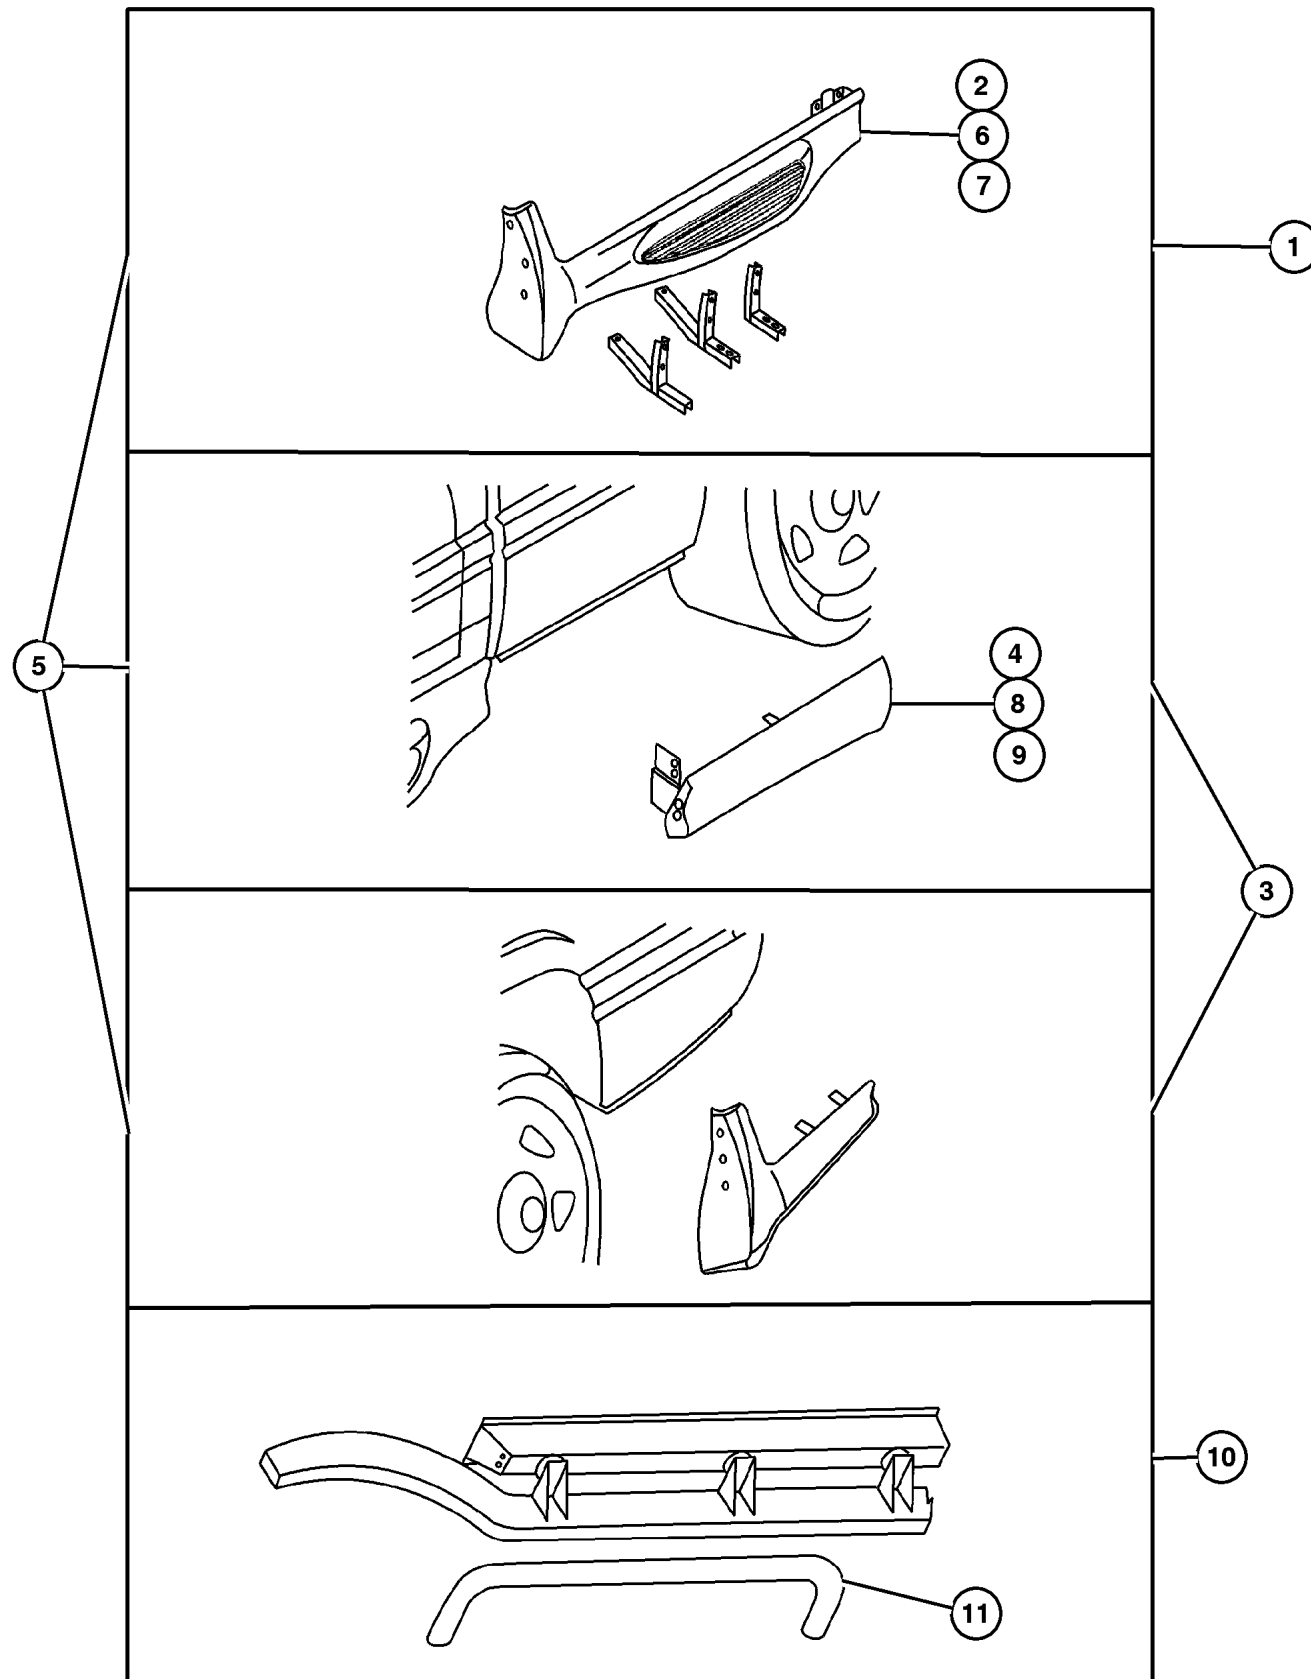Step Kit
Figure 001-420



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: P.A.R. = Paint as Required									
1									STEP KIT, Truck - Cab, Moulded with Ground Effects Solar Yellow - [VYH] Metalic Red - [PRF]
	8220 5110	1			33, 34				
	8220 5149	1			31, 33, 34				White - [PW7]
	8220 5150	1			31, 33, 34				Driftwood - [PFA]
	8220 5151	1			31, 33, 34				Emerald Green - [PGF]
	8220 5152	1			31, 33, 34				Flame Red - [PR4]
	8220 5153	1			31, 33, 34				Black - [PX8]
	8220 5154	1			31, 33, 34				Forest Green - [SG8]
	8220 5155	1			31, 33, 34				Deep Amethyst - [TCU]
	8220 5156	1			31, 33, 34				Intense Blue - [SPG]
	8220 5157	1			31, 33, 34				Patriot Blue - [WBT/WB7]
	8220 5751	1			31, 33, 34				Dark Garnet Red - [XRV]
	8220 5752	1			31, 33, 34				Sierra Bronze - [XTL]
	8220 5753	1			31, 33, 34				
2									STEP KIT, Truck - Cab [P.A.R.], Replacement Board, Right
	5017 982AA	1			31, 33, 34				
	5017 983AA	1							[P.A.R.], Replacement Board, Left
3									STEP KIT, Extension - Rear
	8220 4242	1			31, 33				Flame Red - [PR4], 6.5 Foot Bed
	8220 4243	1	1, 2, 6, 7		32, 34				Flame Red - [PR4], 8 Foot Bed, without Dual Rear Wheels
	8220 4244	1			31, 33				Black - [PX8], 6.5 Foot Bed
	8220 4245	1			34				Black - [PX8], 8 Foot Bed, without Dual Rear Wheels
	8220 4246	1			31, 33				White [PW7], 6.5 Foot Bed


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

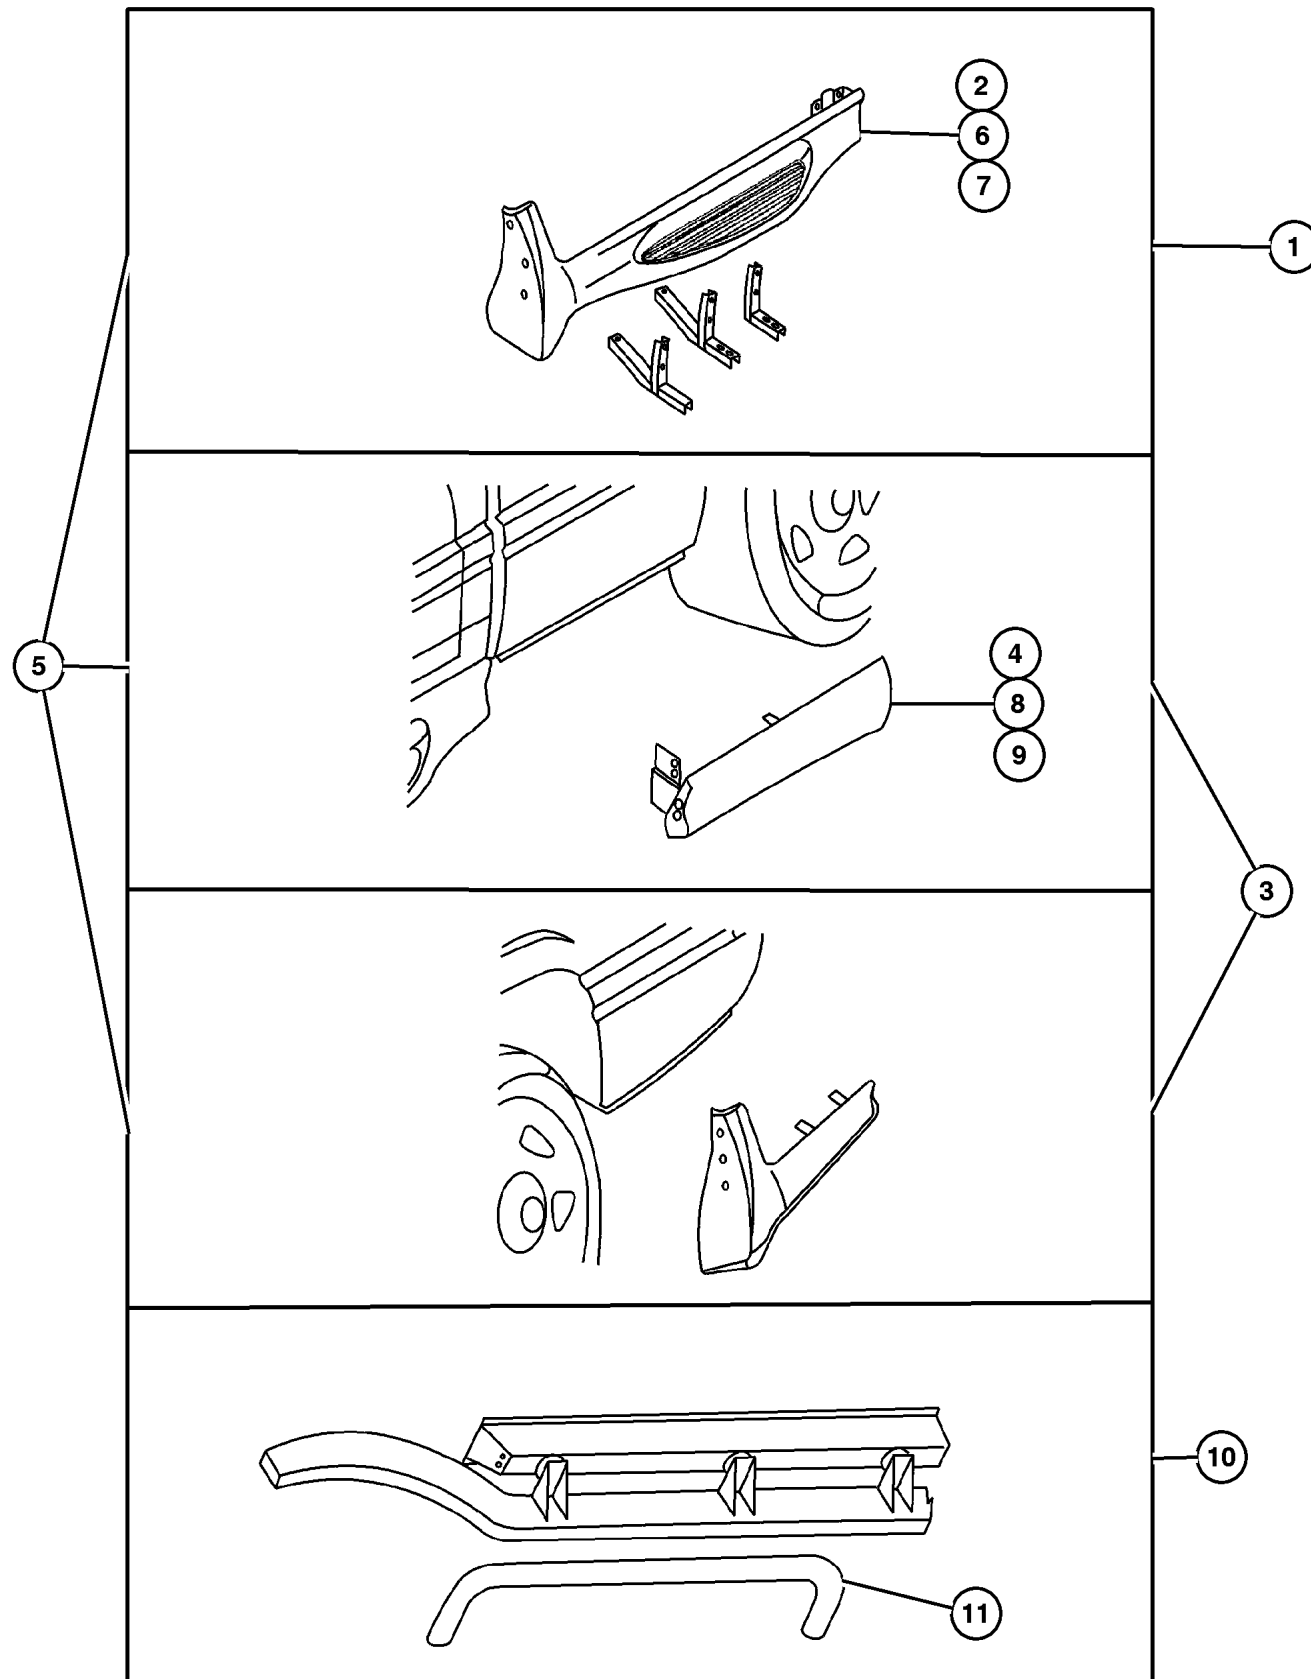Step Kit Figure 001-420



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	8220 4247	1	1, 2, 6, 7		32, 34				White - [PW7], 8 Foot Bed, without Dual Rear Wheels
	8220 4250	1			31, 33				Driftwood [PFA], 6.5 Foot Bed
	8220 4251	1	1, 2, 6, 7		34				Driftwood [PFA], 8 Foot Bed, without Dual Rear Wheels
	8220 4254	1							Metalic Red - [PRF], 6.5 Foot Bed
	8220 4255	1			34				Metalic Red - [PRF], 8 Foot Bed, without Dual Rear Wheels
	8220 4256	1			31, 33				Forest Green - [PG8], 6.5 Foot Bed
	8220 4257	1	1, 2, 6, 7		32, 34				Forest Green - [PG8], 8 Foot Bed, without Dual Rear Wheels
	8220 4258	1			31, 33				Deep Amethyst - [TCU], 6.5 Foot Bed
	8220 4259	1	1, 2, 6, 7		32, 34				Deep Amethyst - [TCU], 8 Foot Bed, without Dual Rear Wheels
	8220 4260	1			31, 33				Intense Blue - [SPG], 6.5 Foot Bed
	8220 4261	1			34				Intense Blue - [SPG], 8 Foot Bed, without Dual Rear Wheels
	8220 5111	1			31, 33				Solar Yellow - [VYH], 6.5 Foot Bed
	8220 5112	1			34				Solar Yellow - [VYH], 8 Foot Bed, without Dual Rear Wheels
	8220 5754	1			31, 33				Patriot Blue - [WBT/WB7], 6.5 Foot Bed
	8220 5757	1			34				Patriot Blue - [WBT/WB7], 8 Foot Bed, without Dual Rear Wheels
	8220 5755	1			31, 33				Dark Garnet Red - [XRV], 6.5 Foot Bed
	8220 5758	1			34				Dark Garnet Red - [XRV], 8 Foot Bed, without Dual Rear Wheels
	8220 5756	1			31, 33				Sierra Bronze - [XTL], 6.5 Foot Bed
	8220 5759	1			34				Sierra Bronze - [XTL], 8 Foot Bed, without Dual Rear Wheels
4									STEP KIT, Extension - Rear
	5017 978AA	1			31, 33				[P.A.R.], 6.5 Foot Bed, Right
	5017 979AA	1			31, 33				[P.A.R.], 6.5 Foot Bed, Left
	5017 980AA	1			34				[P.A.R.], 8 Foot Bed, Right
	5017 981AA	1			34				[P.A.R.], 8 Foot Bed, Left
5									STEP KIT, Truck - Full
	8220 4287	1			31, 33				Forest Green - [SG8], 6.5 Foot Bed
	8220 4288	1			31, 33				Bright White - [GW7], 6.5 Foot Bed

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

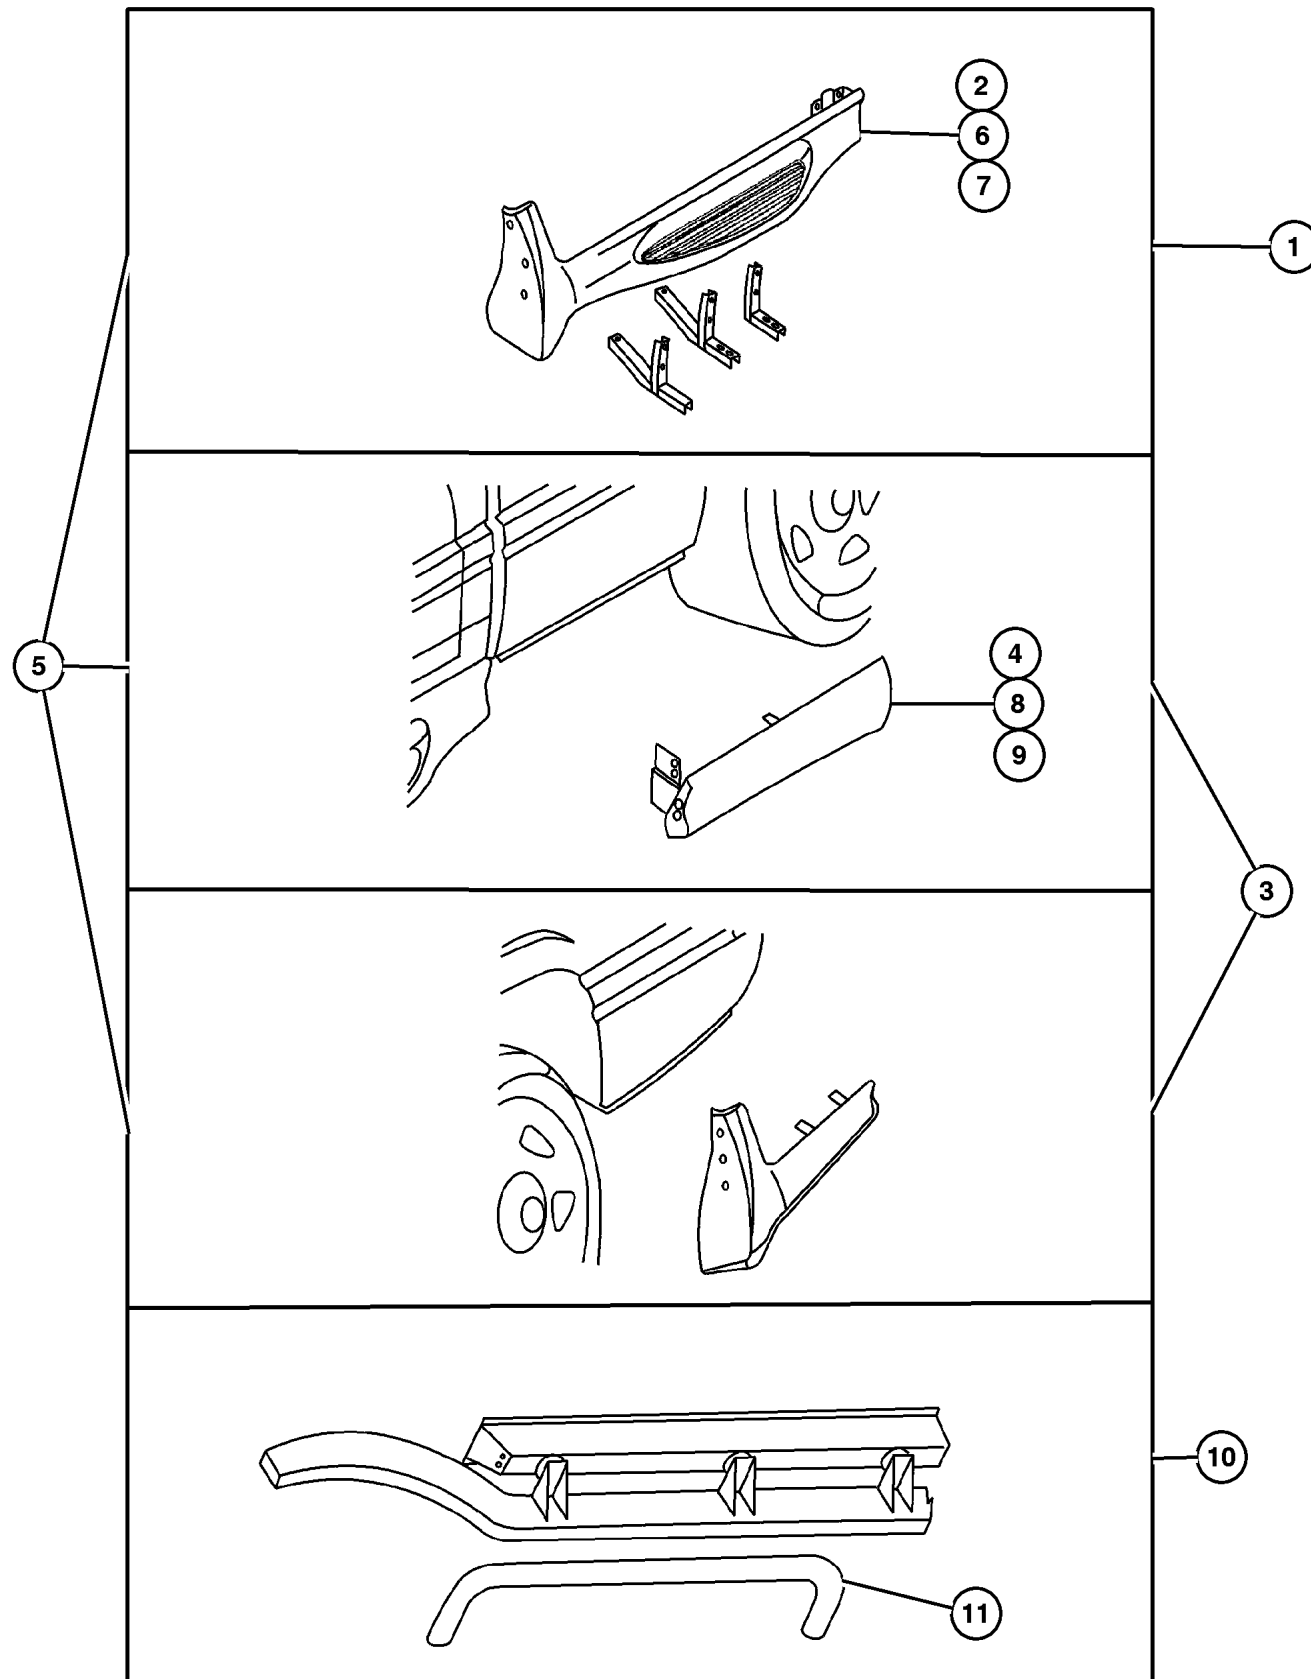
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Step Kit Figure 001-420



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	8220 4289	1			31, 33				Flame Red - [PR4], 6.5 Foot Bed
	8220 4290	1			31, 33				Metalic Red - [LRF], 6.5 Foot Bed
	8220 4291	1			31, 33				Black - [DX8], 6.5 Foot Bed
	8220 4292	1			31				Intense Blue - [VB3], 6.5 Bed
	8220 4538	1			31, 33				Driftwood - [RFA], 6.5 Foot Bed
	8220 4915	1			31, 33				Solar Yellow - [VYH], 6.5 Foot Bed
6	5018 070AA	1			31, 33				STEP KIT, Right Side, [P.A.R.], Cab Side
7	5018 071AA	1			31, 33				STEP KIT, Left Side, [P.A.R.], Cab Side
8	5018 072AA	1			31, 33				STEP KIT, Right Side, [P.A.R.], Bed Side, 6.5 Foot Bed
9	5018 073AA	1			31, 33				STEP KIT, Left Side, [P.A.R.], Bed Side, 6.5 Foot Bed
10									STEP KIT, Tubular Side
	8220 3927	1			31, 33, 34				Black Steel with Step Plate, Club Cab
	8220 3928	1			31, 33, 34				Black Anodized Aluminum with Step Plate, Club Cab
	8220 3929	1			31, 33, 34				Natural Anodized Aluminum with Step Plate, Club Cab
	8220 3930	1			31, 33, 34				Chromed Steel with Step Plate, Club Cab
11									STEP KIT, Tubular Side
	5018 028AA	1							Black Steel with Step Plate, Club Cab, Right
	5018 029AA	1							Black Steel with Step Plate, Club Cab, Left
	5018 030AA	1							Black Anodized Aluminum with Step Plate, Club Cab, Right
	5018 031AA	1							Black Anodized Aluminum with Step Plate, Club Cab, Left
	5018 032AA	1							Natural Anodized Aluminum with Step Plate, Club Cab, Right
	5018 033AA	1							Natural Anodized Aluminum with Step Plate, Club Cab, Left
	5018 034AA	1							Chromed Steel with Step Plate, Club Cab, Right
	5018 035AA	1							Chromed Steel with Step Plate, Club Cab, Left

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

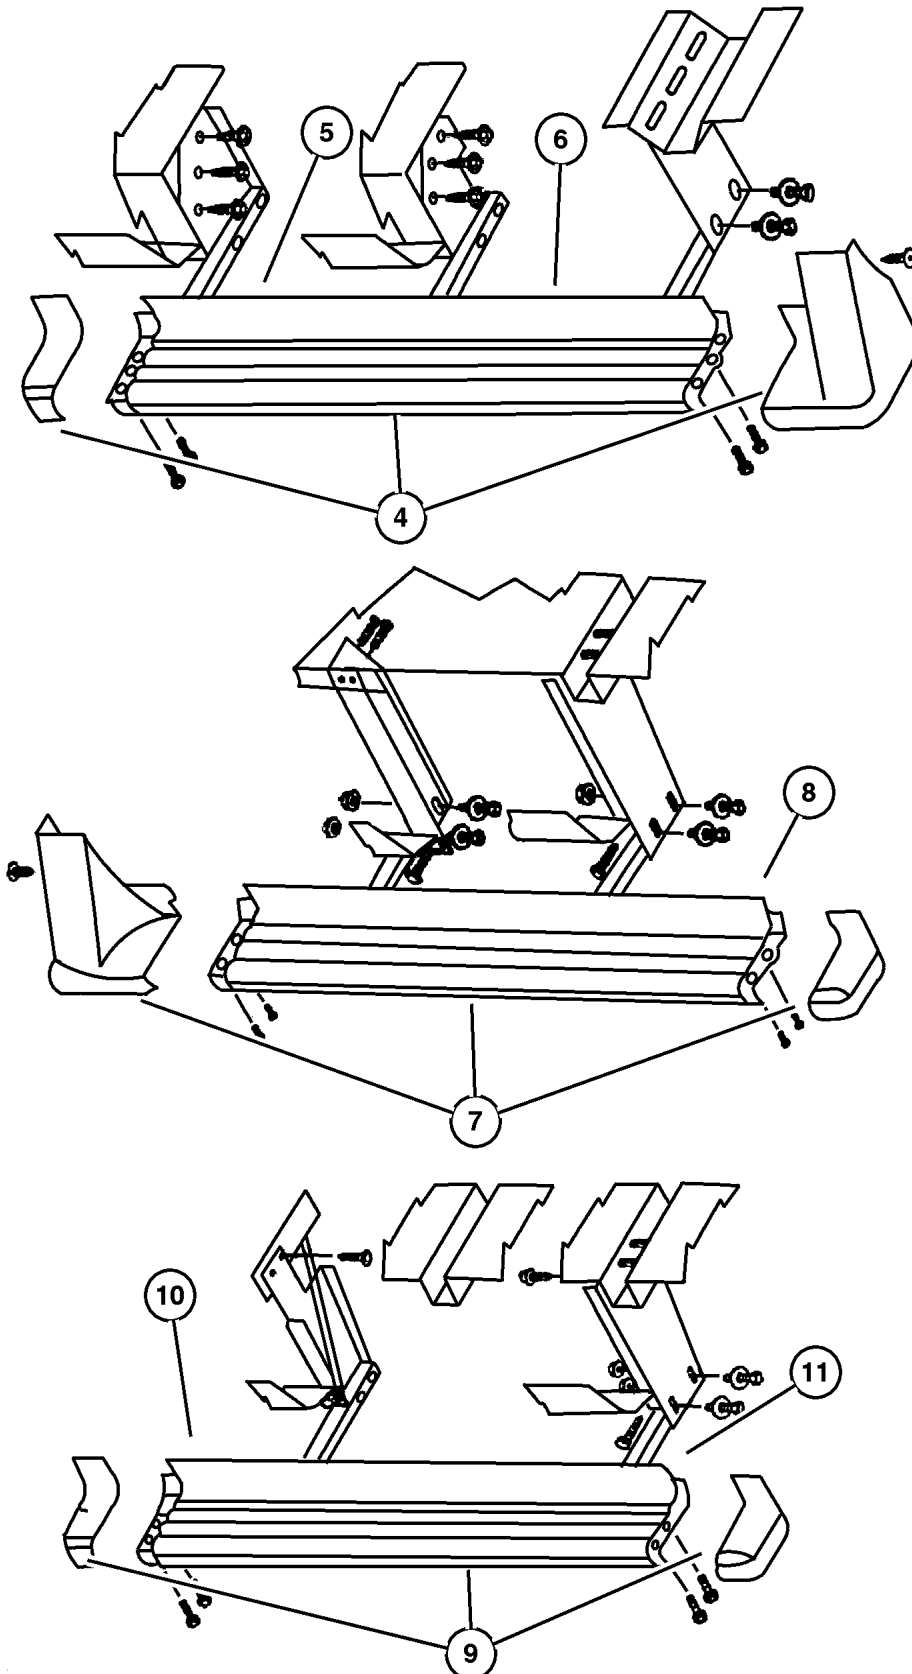
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Running Board Figure 001-430



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: P.A.R.= Paint As Required.									
-1									RUNNING BOARD KIT, Full
	8220 2469	1			31, 33				Flat Black, 6.5 Foot Bed, with Rear Splash Gaards
	8220 2470	1	3, 8		34				Flat Black, 6.5 Foot Bed, with Rear Splash Gaards, with Dual Rear Wheels
	8220 2495	1	1, 6		31				Flat Black, 6.5 Foot Bed, without Rear Splash Gaards
	8220 2471	1			34				Flat Black, 8 Foot Bed, with Rear Splash Gaurd, without Dual Rear Wheels
	8220 3040	1			31, 33				Bright White [GW7], 6.5 Foot Bed
	8220 3042	1			34				Bright White [GW7], 8 Foot Bed, without Dual Rear Wheels
	8220 3044	1			31, 33				Flame Red [PR4], 6.5 Foot Bed
	8220 3046	1			34				Flame Red [PR4], 8 Foot Bed, without Dual Rear Wheels
	8220 3048	1			31, 33				Black [PX8], 6.5 Foot Bed
	8220 3050	1			34				Black [PX8], 8 Foot Bed, without Dual Rear Wheels
	8220 3052	1			31, 33				Emerald Green [PGF], 6.5 Foot Bed
	8220 3054	1			34				Emerald Green [PGF], 8 Foot Bed, without Dual Rear Wheels
	8220 3060	1			31, 33				Light Driftwood [MFA], 6.5 Foot Bed
	8220 3062	1			34				Light Driftwood [MFA], 8 Foot Bed, without Dual Rear Wheels
	8220 3297	1			31, 33				Metalic Red [LRF], 6.5 Foot Bed
	8220 3299	1			34				Metalic Red [LRF], 8 Foot Bed, without Dual Rear Wheels
	8220 3313	1			31, 33				Chestnut [TU3], 6.5 Foot Bed
	8220 3315	1			34				Chestnut [TU3], 8 Foot Bed, without Dual Rear Wheels
	8220 3933	1			31, 33				Forest Green [SG8], 6.5 Foot Bed
	8220 3934	1			34				Forest Green [SG8], 8 Foot Bed, without Dual Rear Wheels
	8220 3937	1			31, 33				Deep Amethyst [TCU], 6.5 Foot Bed

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

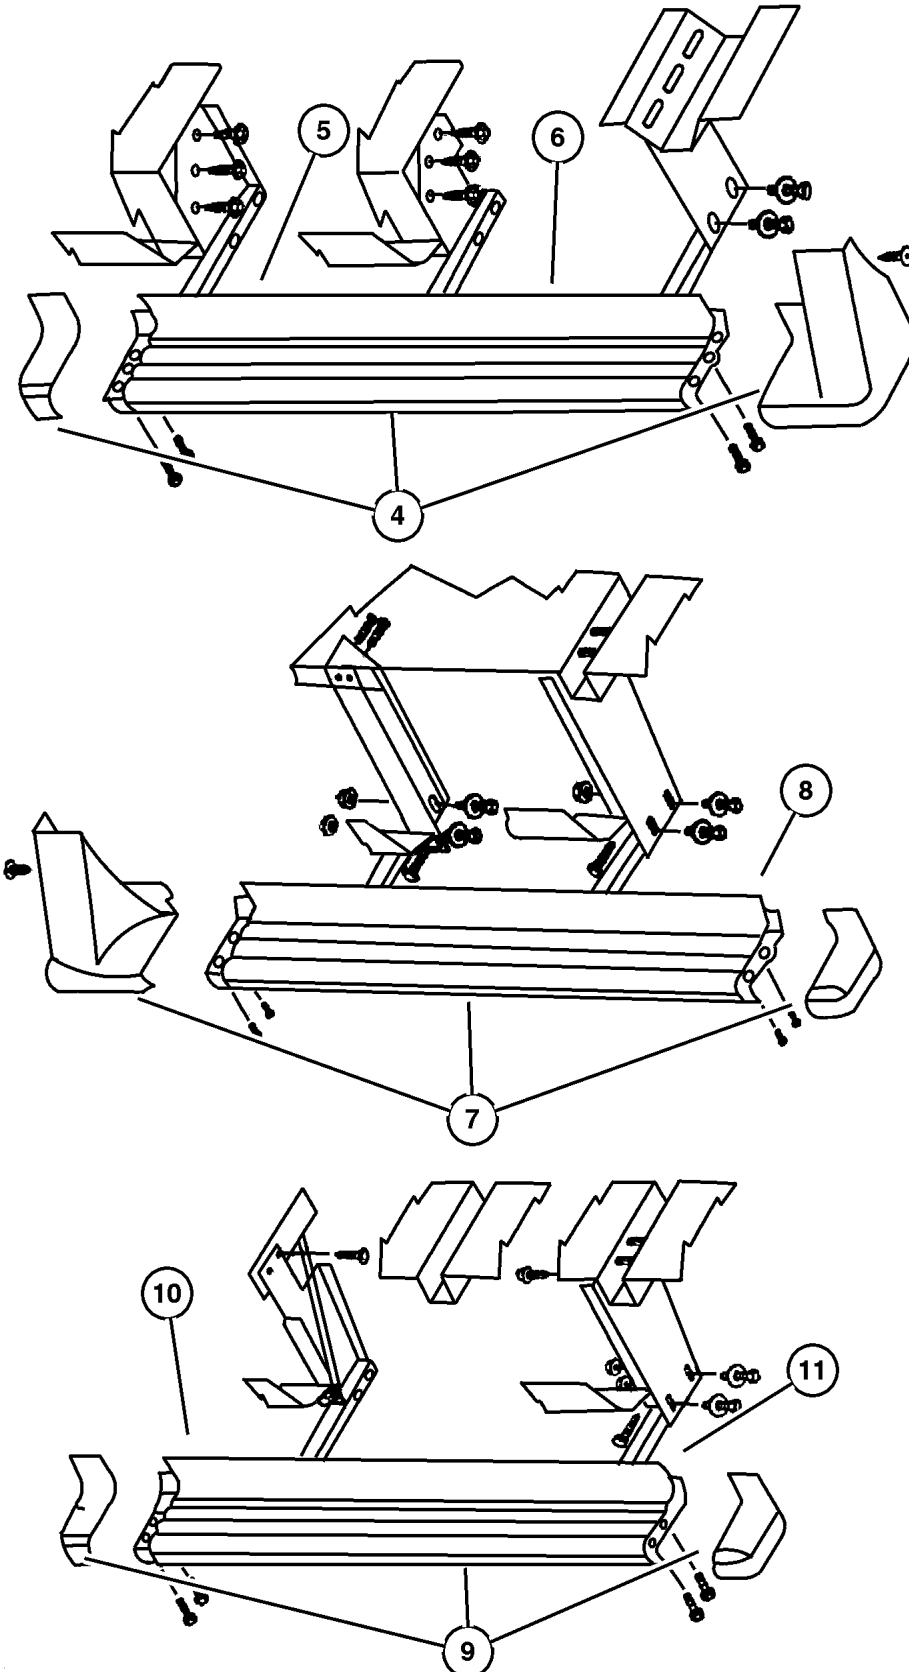
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Running Board Figure 001-430



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	8220 3938	1			34				Deep Amethyst [TCU], 8 Foot Bed, without Dual Wheels
	8220 3941	1			31, 33				Intense Blue [SPG], 6.5 Foot Bed
	8220 3942	1			34				Intense Blue [SPG], 8 Foot Bed, without Dual Rear Wheels
-2	8220 4913	1			31, 33				Solar Yellow [VYH], 6.5 Foot Bed
	5017 898AA-	1			31, 33				RUNNING BOARD, Right Side [P.A.R.], Bed Section, 6.5 Foot Bed
	5017 900AA-	1			31, 33				[P.A.R.], Cab Section, 6.5 Foot Bed
	5017 902AA-	1			31, 33				[P.A.R.], Bed Section, 6.5 Foot Bed
	5017 914AA-	1			34				[P.A.R.], Cab Section, 8 Foot Bed
	5017 916AA-	1			34				[P.A.R.], Bed Section, 8 Foot Bed
	5017 936AA-	1			31, 33,				[P.A.R.], Cab Section, 6.5 Foot Bed
	5017 938AA-	1			34				
	5017 950AA-	1			31, 33,				[P.A.R.], Bed Section, 6.5 Foot Bed
	5017 952AA-	1			34				[P.A.R.], Cab Section, 8 Foot Bed
-3	5017 899AA-	1			31, 33				RUNNING BOARD, Left Side [P.A.R.], Bed Section, 8 Foot Bed
	5017 901AA-	1			31, 33				[P.A.R.], Cab Section, 6.5 Foot Bed
	5017 915AA-	1			31, 33				[P.A.R.], Bed Section, 6.5 Foot Bed
	5017 917AA-	1			34				[P.A.R.], Cab Section, 8 Foot Bed
	5017 937AA-	1			34				[P.A.R.], Bed Section, 8 Foot Bed
	5017 939AA-	1			31, 33,				[P.A.R.], Cab Section, 6.5 Foot Bed
	5017 951AA-	1			34				
	5017 953AA-	1			31, 33				[P.A.R.], Cab Section, 8 Foot Bed
4	8220 2465	1			31				[P.A.R.], Bed Section, 8 Foot Bed
5	5017 936AA	1			31				RUNNING BOARD KIT, Cab, Black
					31, 33,				RUNNING BOARD, Right Side, Cab, Black
					34				
6	5017 937AA	1			31, 33,				RUNNING BOARD, Left Side, Cab, Black
					34				
7	8220 2490	1							RUNNING BOARD KIT, Cab, Aluminum Diamond Plate, Club Cab
8									Cab
	5018 016AA	1							RUNNING BOARD, Left Side Right
	5018 017AA	1							Left

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

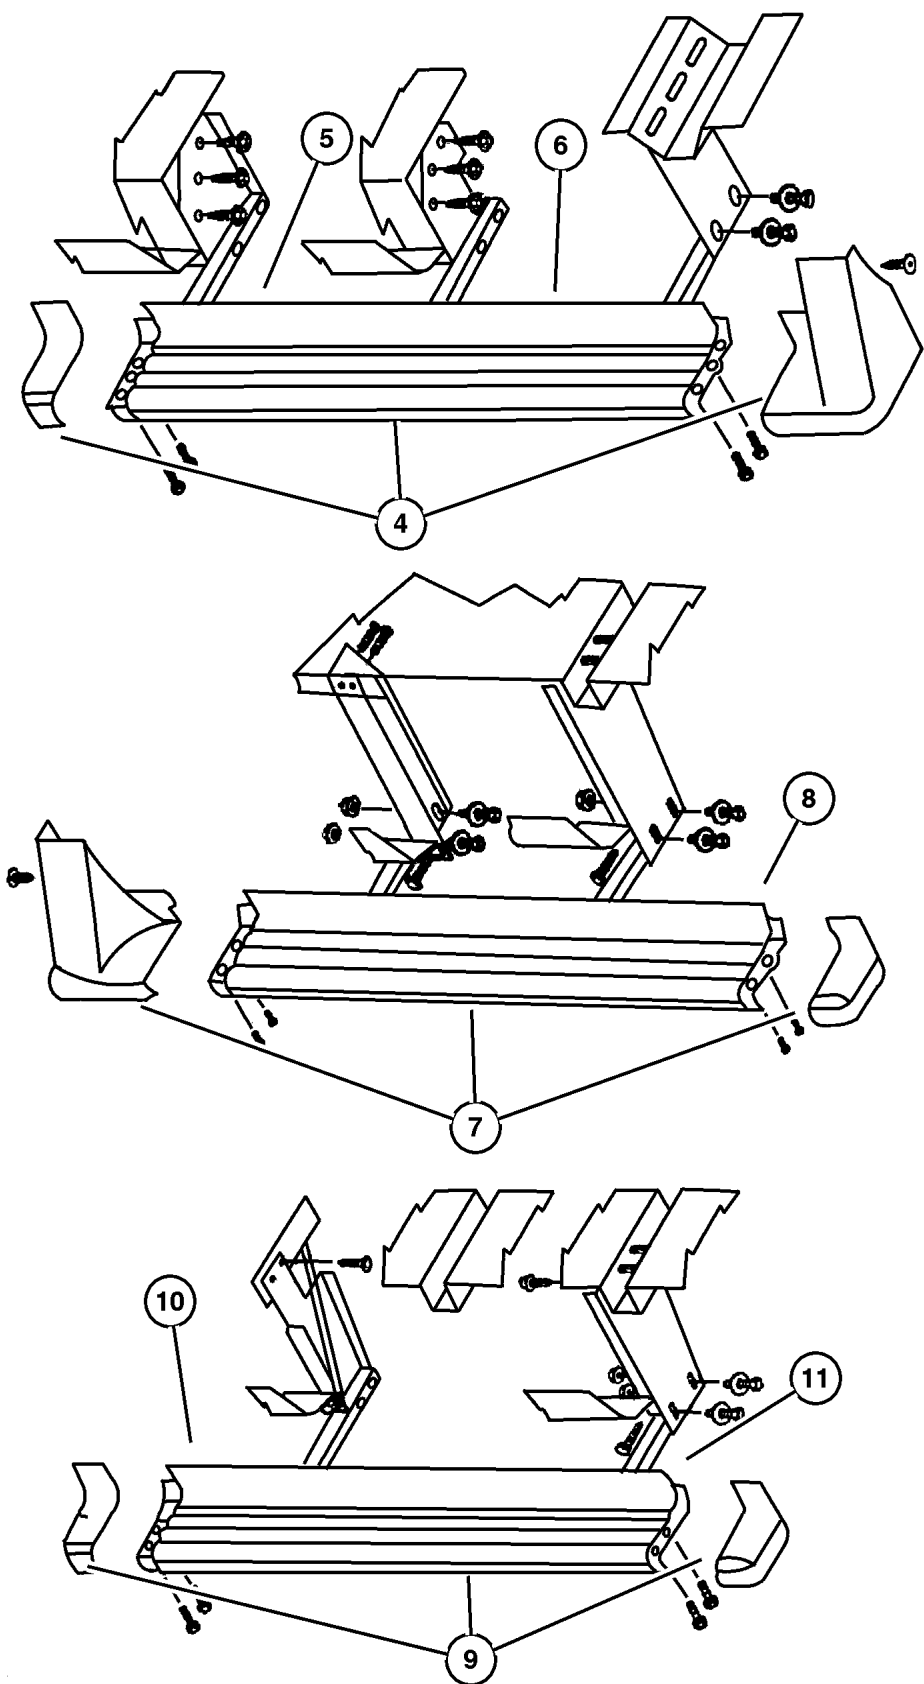
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year


September 16, 2005

Running Board
Figure 001-430



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
9									RUNNING BOARD KIT, Bed
	8220 2473	1	1, 2, 6, 7		31, 33				Black, 6.5 Foot Box, with Rear Splash Guard
	8220 2474	1			34				Black, 8 Foot Box, without Rear Splash Guard
10									RUNNING BOARD, Right Side
	5017 934AA	1	1, 2, 6, 7		31, 33				Black, 6.5 Foot Box, with Rear Splash Guard
	5017 948AA	1			34				Black, 8 Foot Box, without Rear Splash Guard
11									RUNNING BOARD, Left Side
	5017 935AA	1	1, 2, 6, 7		31, 33				Black, 6.5 Foot Box, with Rear Splash Guard
	5017 949AA	1			34				Black, 8 Foot Box, without Rear Splash Guard

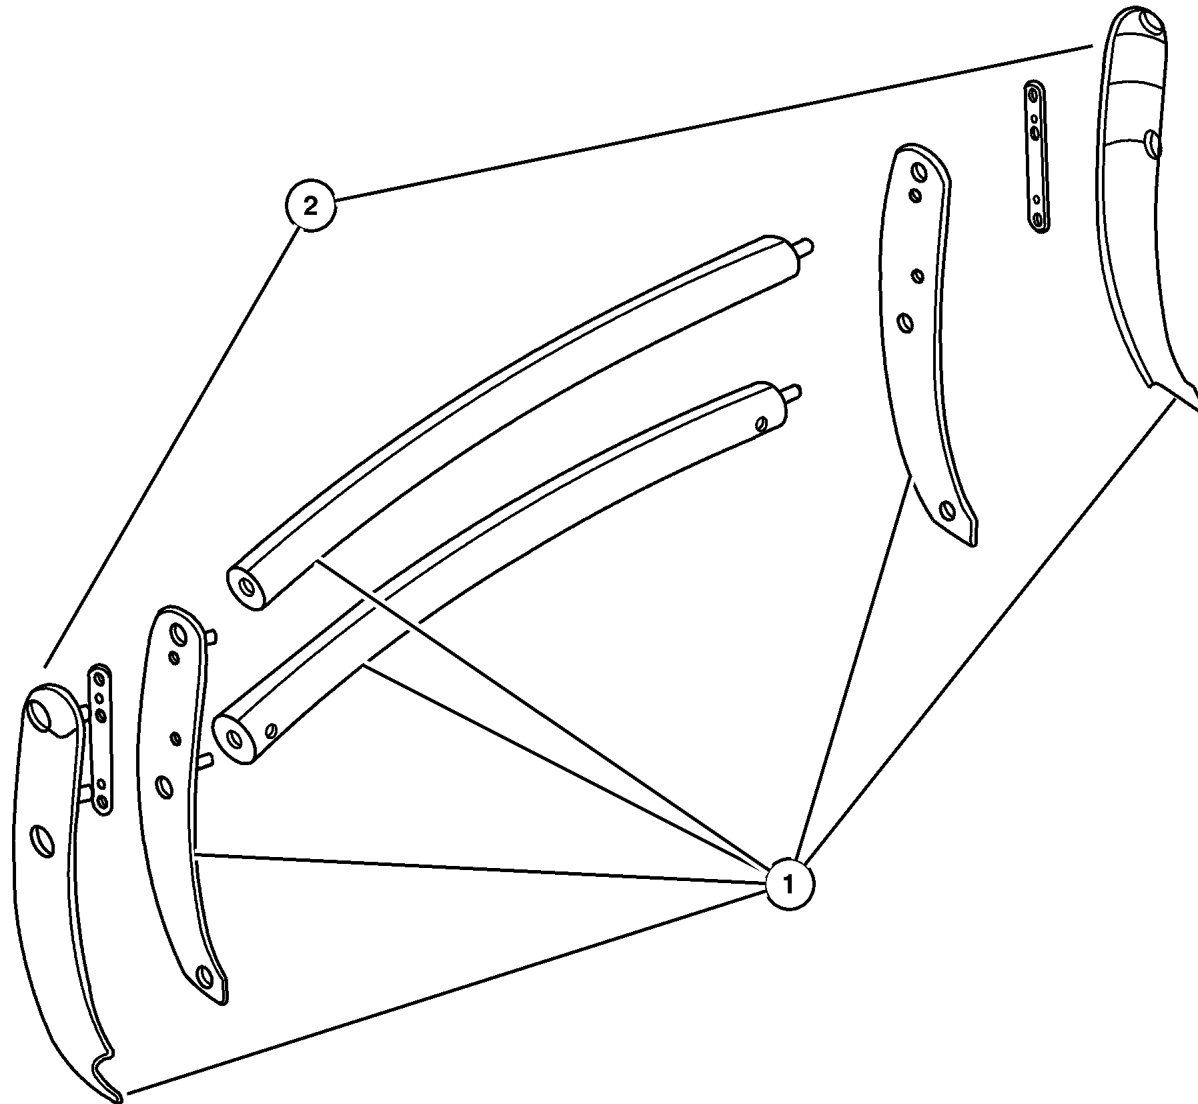**Grille Gaurd
Figure 001-440**

[illegible]

DODGE RAM QUAD CAB/CLUB CAB (BE)

**BODGE RAM QUAD
SERIES**
L = Ram Truck (All)

LINE

1, 6 = 1500

$$2, 7 = 2500$$
$$3, 8 = 3500$$

BODY

31 = Club Cab (138WB)

33 = QuadCab(138WB)

34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.

ETC, ET0, ETH = 5.9L 6 Cil.

EML, EMM, EMO = 5.9L 8 C

EWA, EW0 = 8.0L

EAA = All Engines
EAG = All Gas Engines

TRANSMISSION

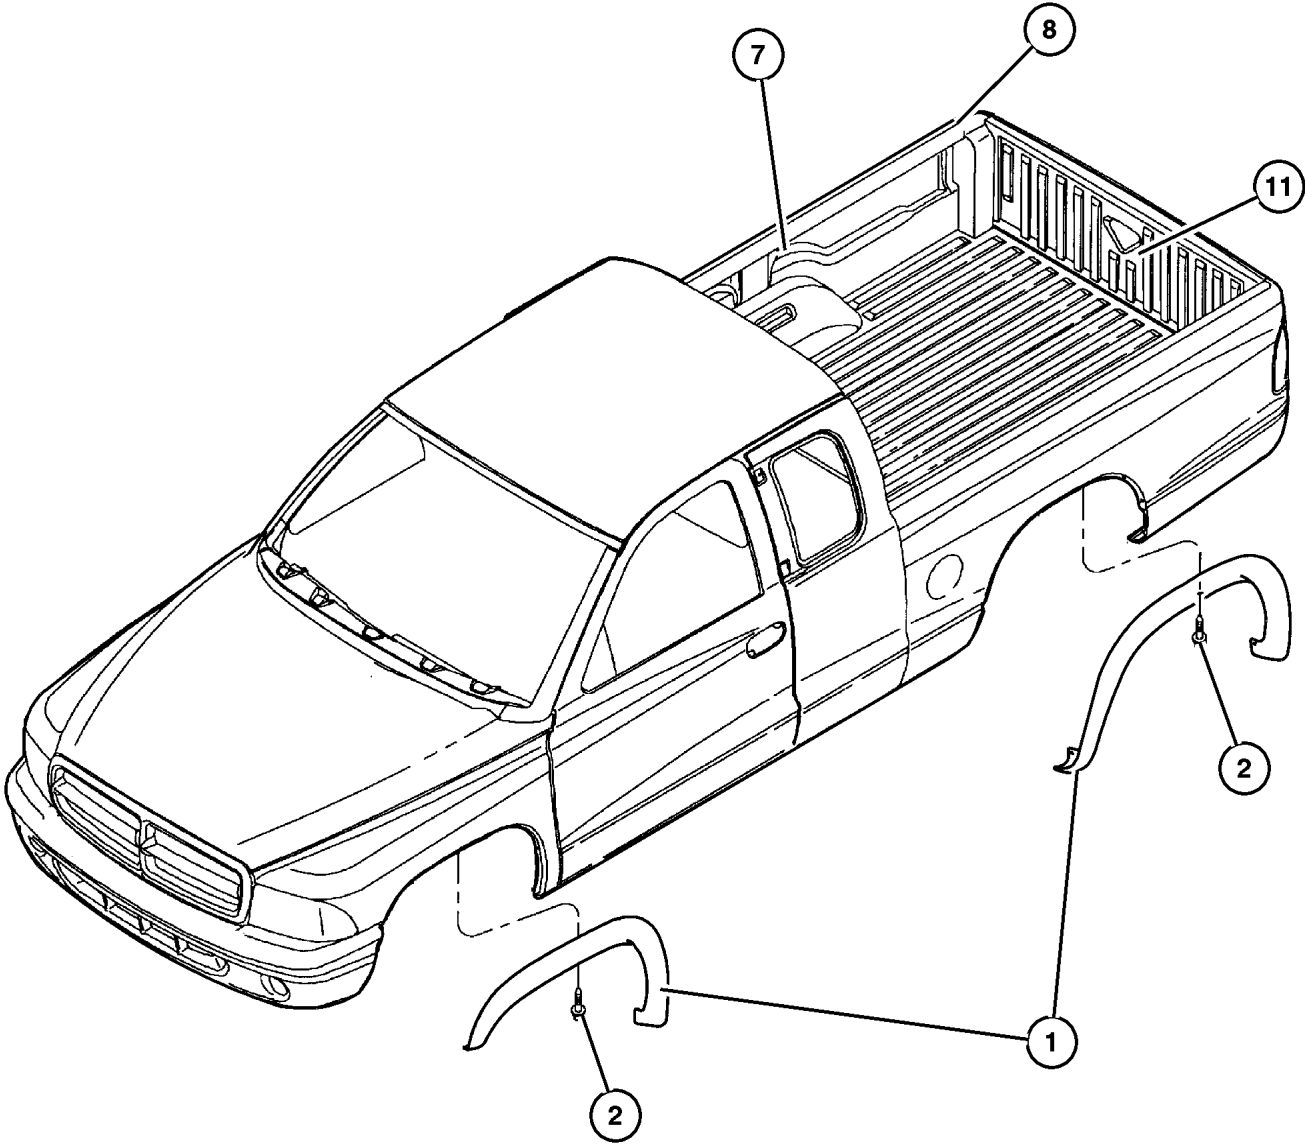
DGP = 47RE 4 Speed Auto.

DGT, DG0 = 46RE 4 Speed Auto.

DDX, DDC = 5 Speed HD Manual

DDP, DD0 = 5 Speed Manual

Molding Kit
Figure 001-510



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									MOLDING KIT, Wheel Lip Opening
	8220 4931	1			31, 33, 34				Bright White PW7
	8220 4932	1			31, 33, 34				Flame Red PR4
	8220 4933	1			31, 33, 34				Black PX8
	8220 4934	1			31, 33, 34				Solar Yellow PYH
	8220 4937	1			31, 33, 34				Forest Green PG8
	8220 4938	1			31, 33, 34				Intense Blue PB3
	8220 4939	1			31, 33, 34				Moled Black (can be painted)
	8220 5338	1			31, 33, 34				Light Driftwood PFA
2									SCREW, (NOT SERVICED) (Not Serviced)
-3	5017 966AA-	1			31, 33, 34				MOLDING KIT, Wheel Lip Opening, [P.A.R.], Replacement, Right Front
-4	5017 967AA-	1			31, 33, 34				MOLDING KIT, Wheel Lip Opening, [P.A.R.], Replacement, Left Front
-5	5017 968AA-	1			31, 33, 34				MOLDING KIT, Wheel Lip Opening, [P.A.R.], Replacement, Right Rear
-6	5017 969AA-	1			31, 33, 34				MOLDING KIT, Wheel Lip Opening, [P.A.R.], Replacement, Left Rear
7									BEDLINER KIT, Under Rail
	8220 3890	1			31, 33				6.5' Bed
	8220 3891	1			34				8' Bed
	8220 5008	1			31, 33				6.5' Bed Heavy Duty
	8220 5009	1			34				8' Bed Heavy Duty
8									BEDLINER KIT, Over Rail
	8220 3892	1			31, 33				6.5' Bed
	8220 3893	1			34				8' Bed
-9	5011 297AA-	1							INSTALL KIT, Bedliner - Under Rail
-10	5011 298AA-	1							INSTALL KIT, Bedliner - Over Rail
11	8220 5217	1			31, 33, 34				COVER KIT, Tailgate-Molded


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Shield Kit - Air Front
Figure 001-520

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									SHIELD KIT, Air - Front
	8220 4150	1			31, 33, 34				Smoke, Wrap Around
	8220 4324	1			31, 33, 34				Smoke, W/Silver Rams Head Logo
	8220 4738	1			31, 33, 34				Smoke. W/Fender Shields
2	5014 754AA	1			31, 33, 34				SPACER, Air Deflector

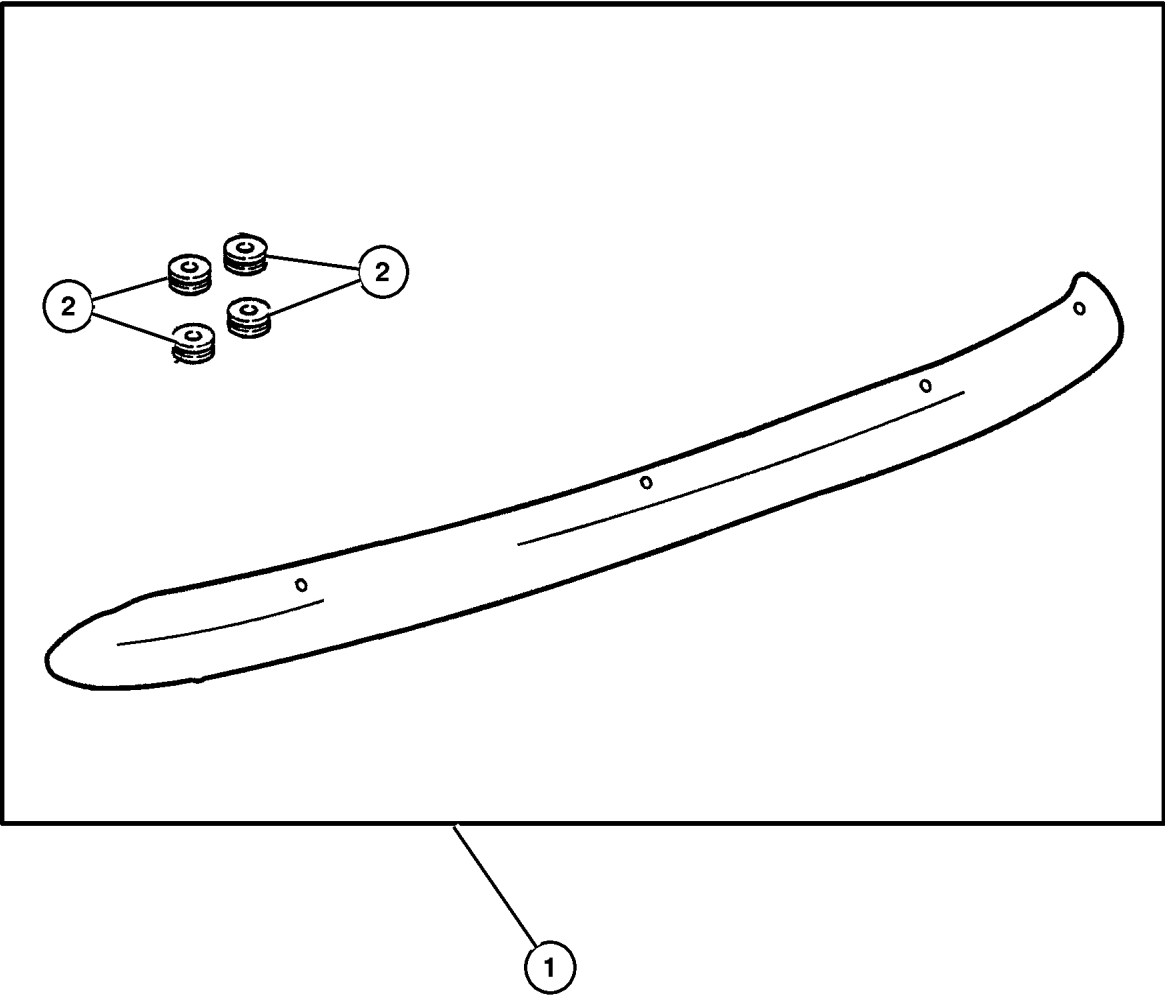


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Skid Plate
Figure 001-530

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-1	6101 340	2	6, 7, 8						U-NUT, M10-1.50
2	52058 674AC	1	6, 7, 8						SKID PLATE, Front
3	6505 524AA	2	6, 7, 8						RETAINER
-4	6506 164AA-	2	6, 7, 8						SCREW AND WASHER, Hex Head

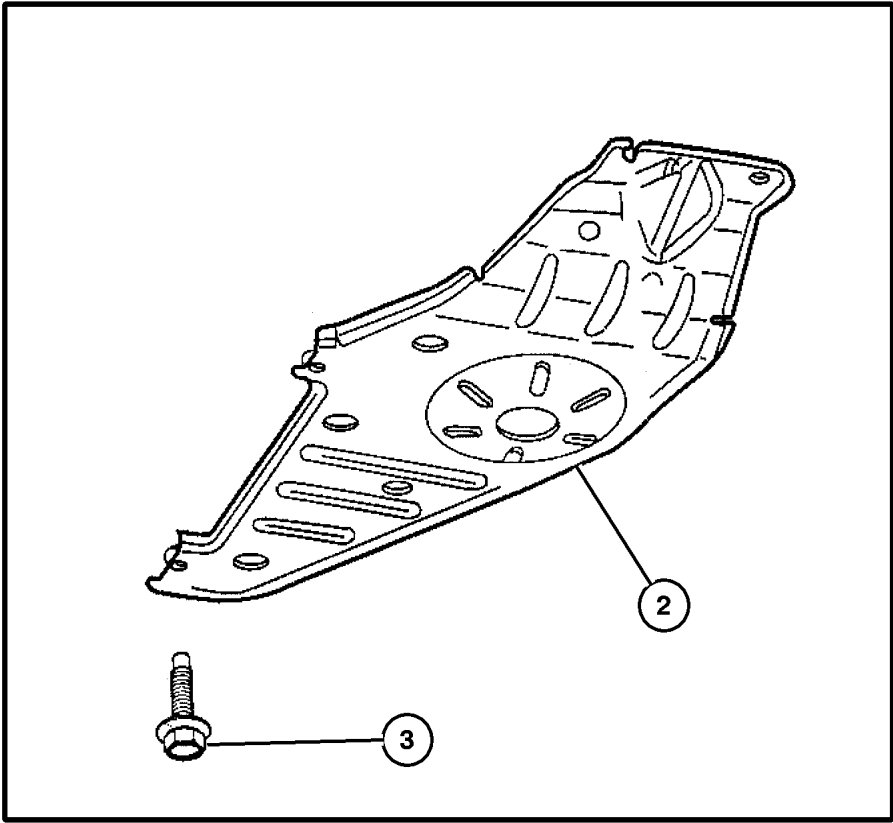

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Light Kit - Fog
Figure 001-610

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE: Light Packages - use 55 watt Bulb only. Complete kit including lights for mounting on a Brush Guard.




1	8220 5656	1			31, 33, 34				INSTALL PACKAGE, Fog Light For Vehicles w/Cargo Lamp Complete Lamp Kit
	8220 5657	1			31, 33, 34				For Vehicles w/o Cargo Lamps Complete Lamp Kit
2	55076 940AB	1							LAMP, Fog Right
	55076 941AB	1							Left
3	55076 786AB	1							SHIELD, Bumper Right
	55076 787AB	1							Left
4	56021 675AE	1							SWITCH, Headlamp, W/ Cargo Lamp
-5	8220 4779	1			31, 33, 34				WIRING, Fog/Driving Light

DODGE RAM QUAD CAB/CLUB CAB (BE)									
SERIES	LINE	BODY	ENGINE	TRANSMISSION					
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.					
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.					
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual					
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual					
			EAA = All Engines	DEE = 6 Speed HD Manual					
			EAG = All Gas Engines						

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

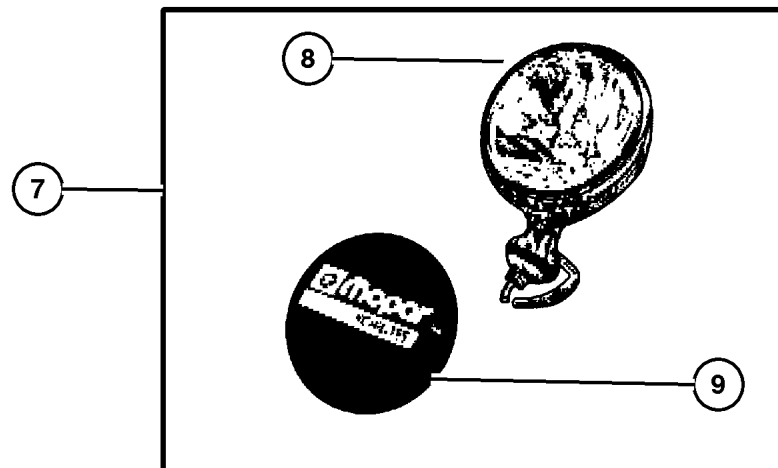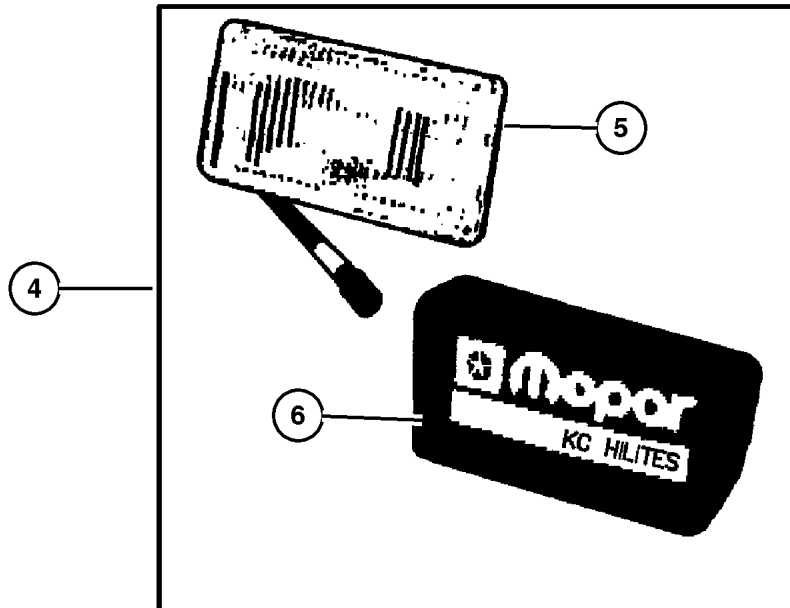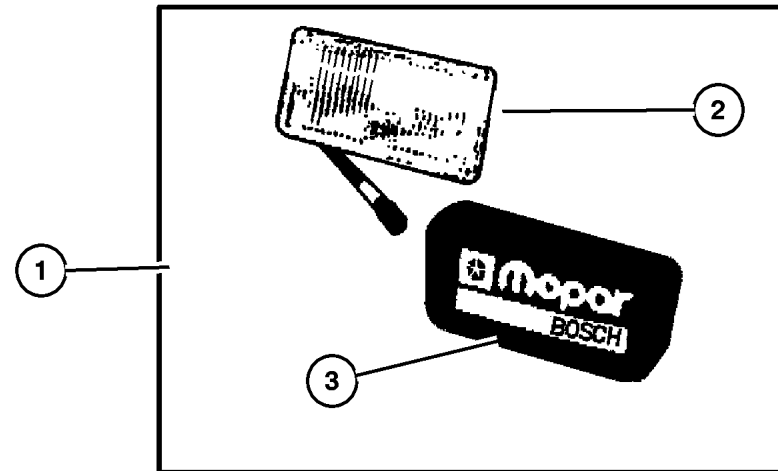Light Kit - Off Road
Figure 001-612



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:

82204005 Contains Two of 82202528

1	8220 1252	1			31, 33, 34				LIGHT KIT, Off Road, 5 x 7 Inch Black Plastic
	8220 1775	1			31, 33, 34				
	8220 1777	1			31, 33, 34				Black Chrome
2	4720 330	1							LENS, Fog Lamp, Off Road
3	4720 332	1							COVER, Fog Lamp, Off Road
4	8220 3691	1			31, 33, 34				LIGHT KIT, Off Road, 6 x 9 Inch Black
	8220 3692	1			31, 33, 34				Chrome
5	4720 316	1			31, 33, 34				LENS, Fog Lamp
6	4720 317	1			31, 33, 34				COVER, Fog Lamp
7									LIGHT KIT, Off Road, 6 Inch Round
	8220 1777	1			31, 33, 34				Black Chrome
	8220 1778	1			31, 33, 34				Bright Chrome
8	4720 333	1							LENS, Fog Lamp, Off Road
9	4720 327	1							COVER, Off Road Lamp, Off Road
-10	8220 4005	1			31, 33, 34				LIGHT KIT, Off Road, 6 Inch Round, Black, Light Bar Mount
-11	8220 2528	1			31, 33, 34				LIGHT KIT, Off Road, 6 Inch Round, Black, Light Bar Mount
-12	8220 4503	1							COVER KIT, Light, Ram Logo
-13	4419 298	1							BULB, 100 Watt
-14	L00H 355W	1							BULB, Fog Lamp, H-3 55 WATT


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

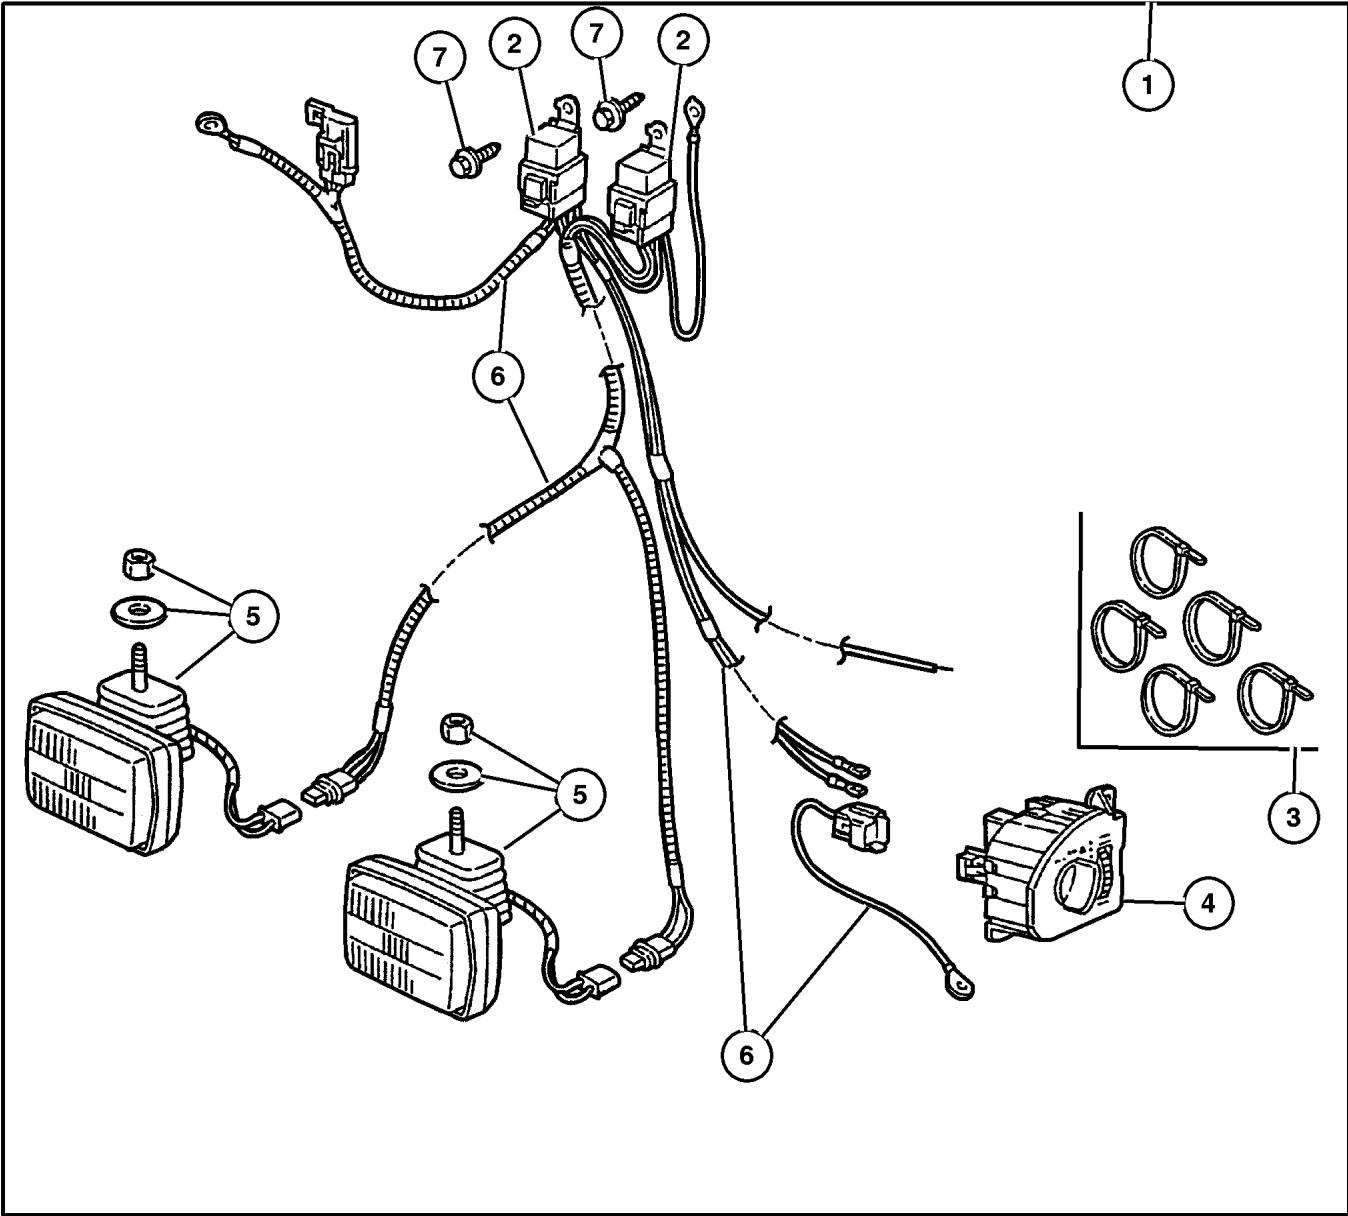Fog Lamp Kit - Brush Guard
Figure 001-620



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									LIGHT PACKAGE, Fog
	8220 5660	1			31, 33, 34				Without Cargo Lamp
	8220 5661	1			31, 33, 34				With Cargo Lamp
2	4638 271	1			31, 33, 34				RELAY PACKAGE, Electrical
3	4641 780	1							STRAP, Tie
4									SWITCH, Headlamp
	56021 675AE	1							With Cargo Lamp
	56021 676AE	1			31, 33, 34				Without Cargo Lamp
5	8220 1230	1			31, 33, 34				LIGHT KIT, Fog, Chrome 5x7
6									WIRING KIT, Fog/Driving Light, Serviced in Package, (NOT SERVICED) (Not Serviced)
7	0154 552	1							SCREW, Hex Head, .190-16x.625

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Fog Lamp Kit - Fascia
Figure 001-622


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									LIGHT PACKAGE, Fog
	8220 5656	1			31, 33, 34				With Cargo Lamp
	8220 5657	1			31, 33, 34				Without Cargo Lamp
2	6015 756	1							STRAP, Tie
3	6035 422	4							BOLT, Square Head, .312-18x.875
4	6035 423	4							NUT AND WASHER, Hex Coned, .312-18
5	6503 938	4							RIVET, Blind, .25xM4/M7
6	55076 786AB	1							SHIELD, Bumper
7	55076 787AB	1							SHIELD, Bumper
8	8220 4779	1			31, 33, 34				WIRING, Fog/Driving Light
-9									RELAY, Serviced in Package, (NOT SERVICED) (Not Serviced)
10	5269 430	1			31, 33, 34				SWITCH, Fog Lamp
11	55076 940AB	1							LAMP, Fog
12	55076 941AB	1							LAMP, Fog

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

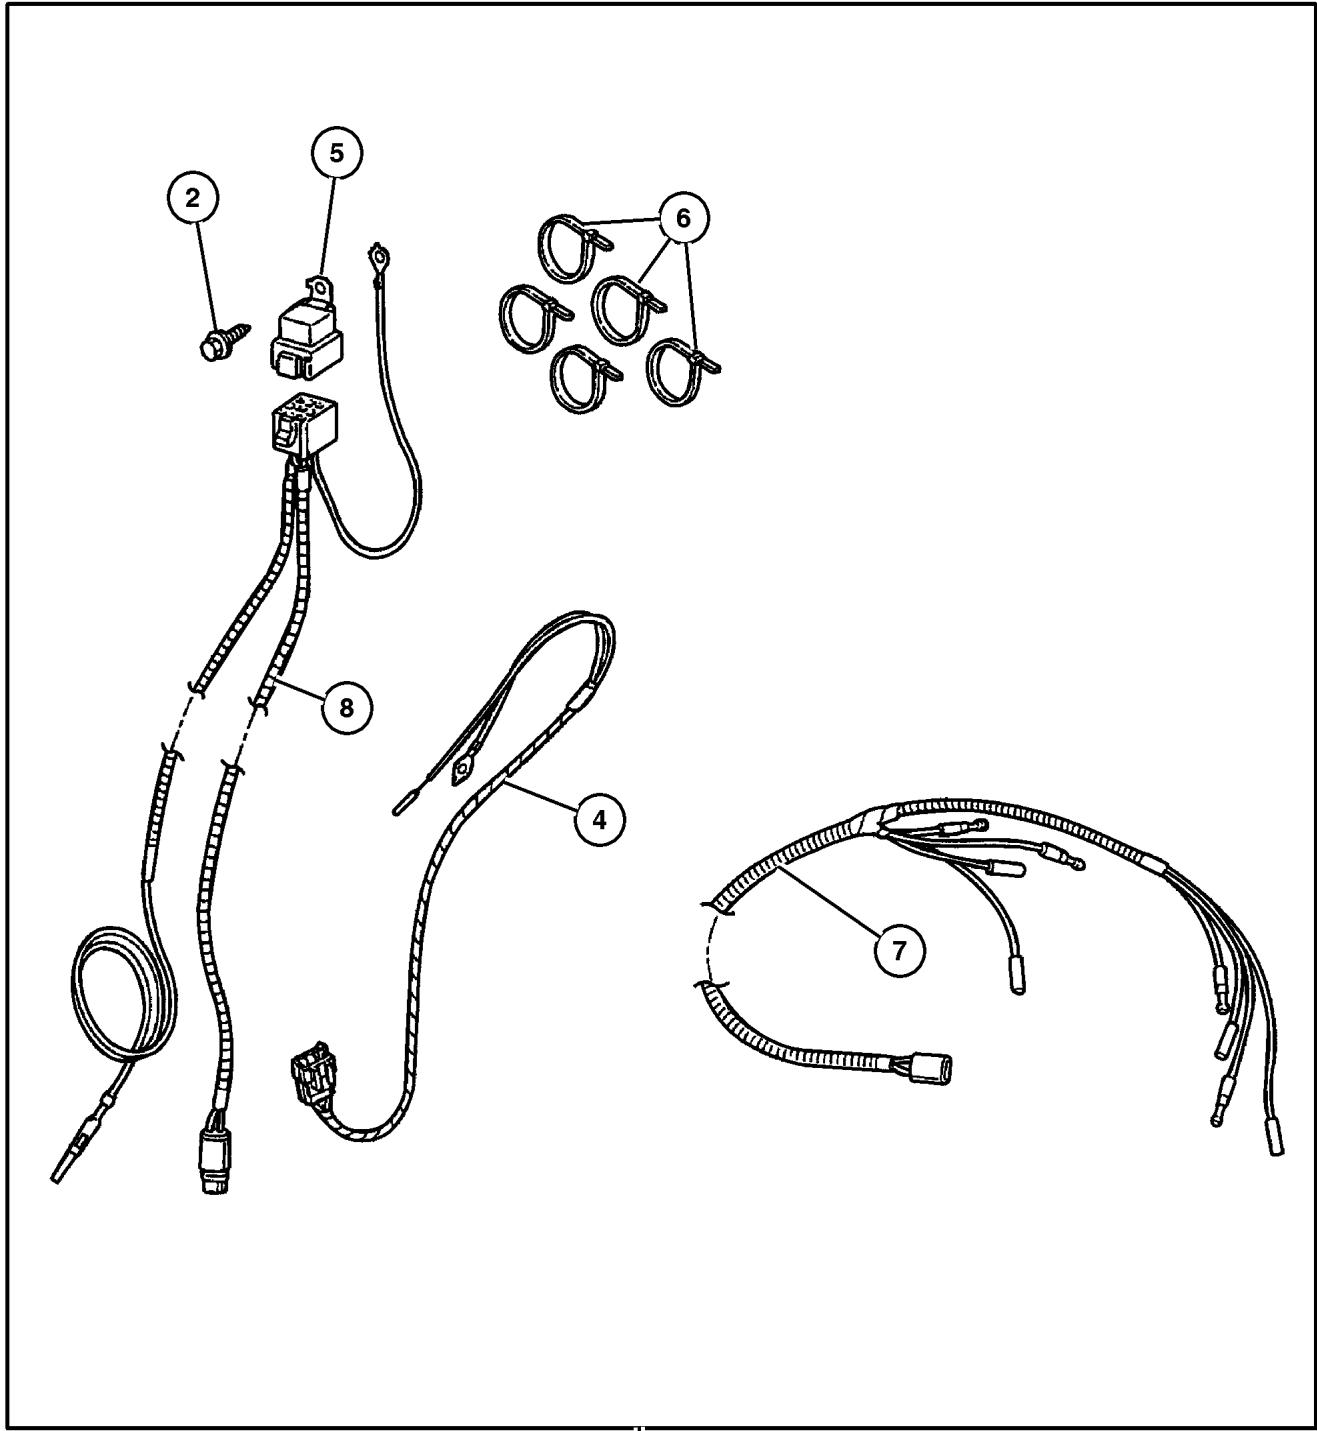Installation Kit - Off Road Lamps
Figure 001-630



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	8220 5342	1			31, 33, 34				INSTALL PACKAGE, Off Road Light
2	0154 552	1							SCREW, Hex Head, .190-16x.625
-3	5269 430	1			31, 33, 34				SWITCH, Fog Lamp
4									WIRING, Fog Lamp, (NOT SERVICED) (Not Serviced)
5	4638 271	1			31, 33, 34				RELAY PACKAGE, Electrical
6	6015 756	1							STRAP, Tie
7									WIRING, Light Bar, (NOT SERVICED) (Not Serviced)
8									WIRING, Off Road Light, (NOT SERVICED) (Not Serviced)

DODGE RAM QUAD CAB/CLUB CAB (BE)


SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Heater Kit
Figure 001-640

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Serviced as a Kit Only.									
1	8230 0749	1			31, 33, 34				HEATER KIT, Engine Block
2	4798 276AB	1							HEATER PACKAGE, Engine Block, EL0, EM0, EW0
-3	6501 445	AR							O RING, Engine Block Heater 11/64 Width
	6501 446	1							9/64 Width
4	5602 0061	1							CORD, Engine Block Heater

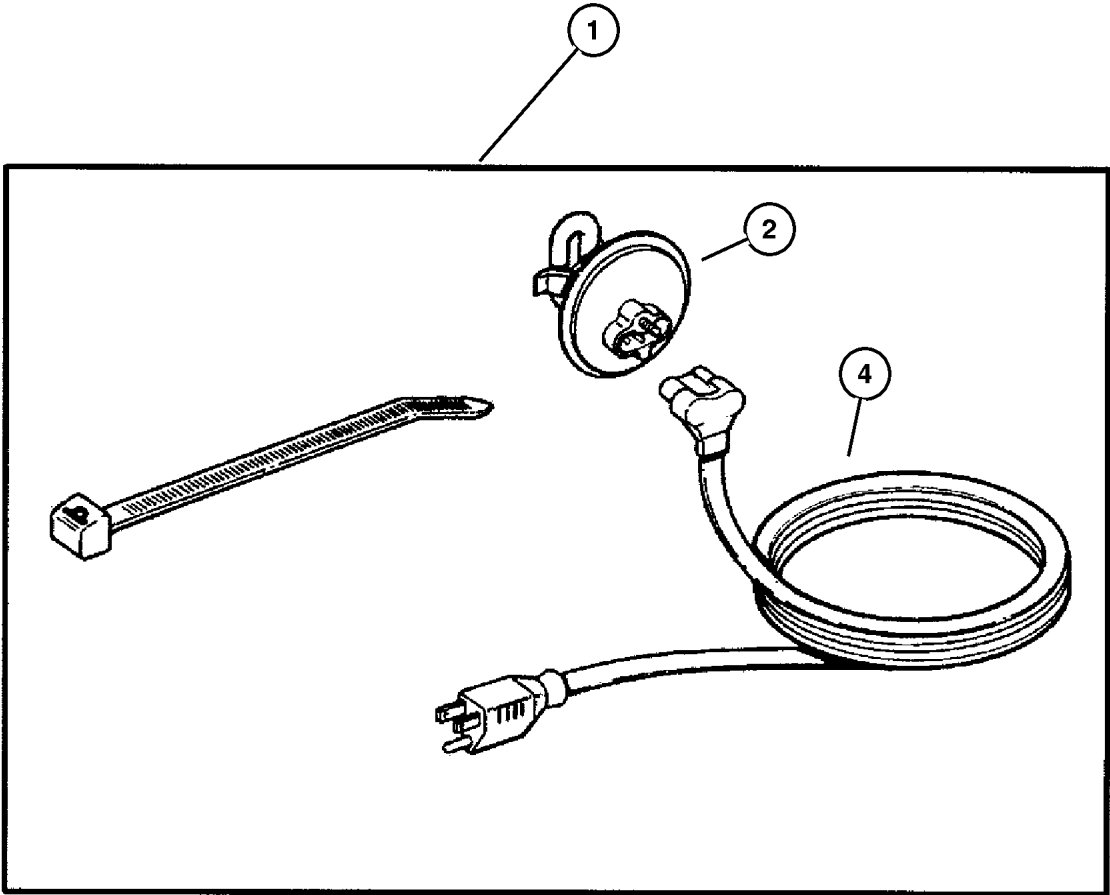


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

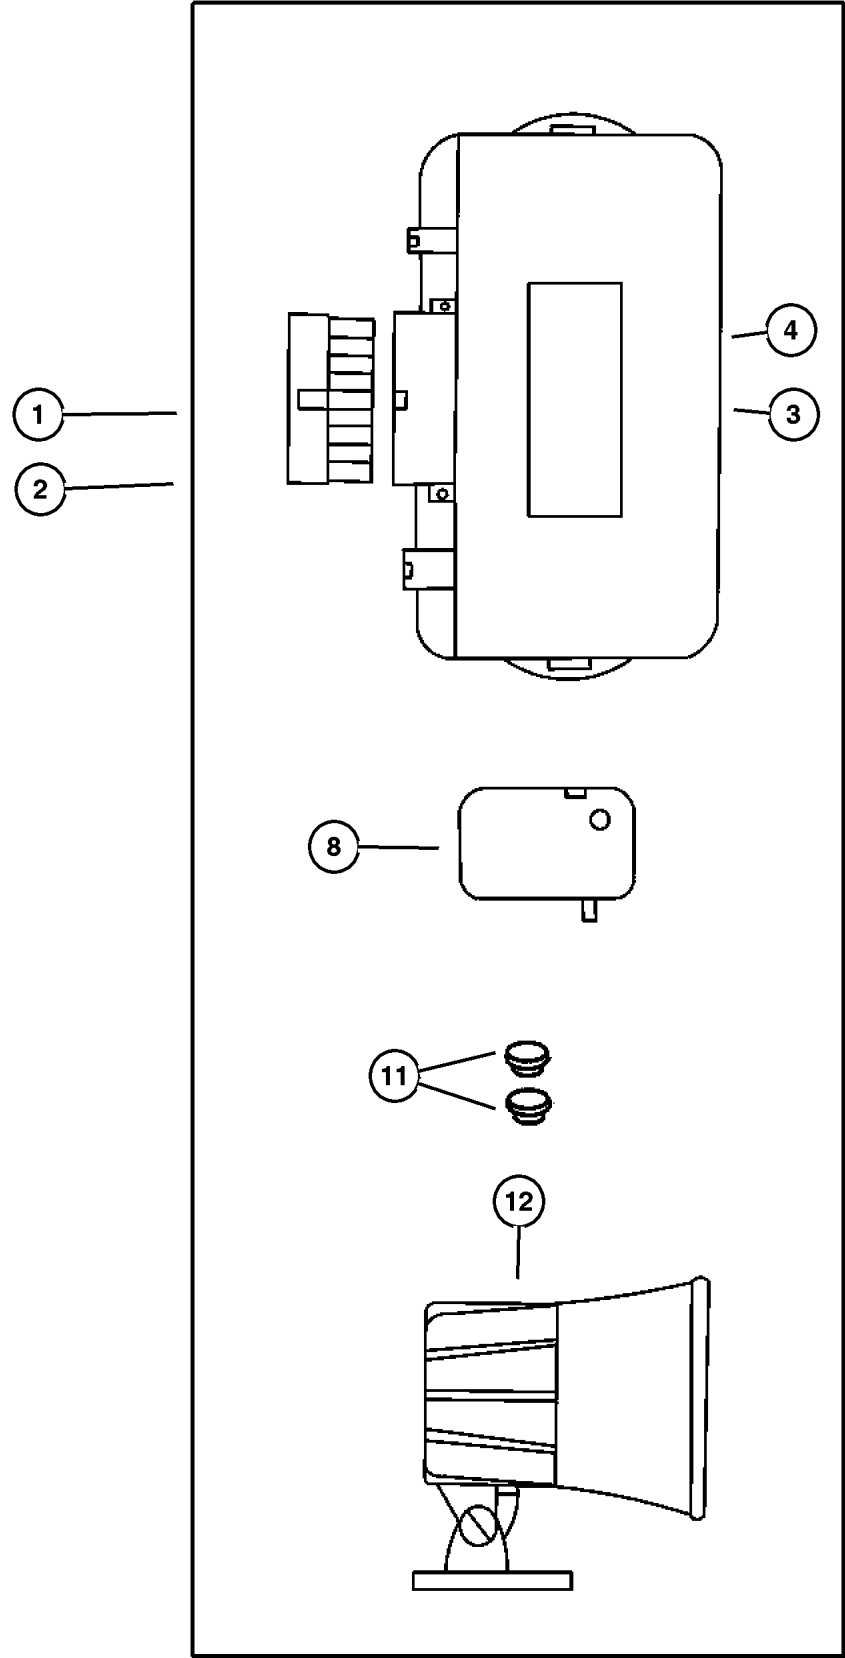Security
Figure 001-910



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	8230 0985	1			31, 33, 34				MODULE KIT, Alarm with Keyless
2	8230 0986	1			31, 33, 34				MODULE, Keyless Entry
3	4883 255	1			31, 33, 34				MODULE, Security Alarm, Replacement Module For 82300985
4	4883 257	1			31, 33, 34				MODULE, Keyless Entry Receiver, Replacement Module for 82300986
-5	8220 4681	1			31, 33, 34				WIRING KIT, Alarm with Keyless
-6	8220 5262	1			31, 33, 34				WIRING KIT, Park and Headlight
-7	4886 258AA-	1			31, 33, 34				SWITCH, Programing Bypass
8	4886 374AA	1			31, 33, 34				TRANSMITTER, Alarm or Keyless
-9	8220 4681	1			31, 33, 34				WIRING KIT, Alarm with Keyless
-10	8220 5262	1			31, 33, 34				WIRING KIT, Park and Headlight
11	4636 141	1			31, 33, 34				BATTERY, Transmitter
12	8220 3198	1			31, 33, 34				SIREN, Alarm, Replacement Siren

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

The diagram illustrates the assembly of a winch kit. A power cable, labeled with a circled '1', is shown connected to a winch unit, labeled with a circled '2'. The winch unit is depicted with its mounting bracket and various electrical connections. The cable has a standard power plug on one end and a multi-pin connector on the other, which is plugged into the winch's electrical port. The winch unit itself is shown from a side perspective, highlighting its mounting bracket and the various electrical terminals and connectors on its side.

September 16, 2005

Group – 002
Front Suspension & Drive

GROUP 2 - Front Suspension & Drive

Illustration Title Group-Fig. No.

Front Suspension

Upper and Lower Control Arms,Springs and Shocks,BE 1,2,3	Fig. 002-110
Upper and Lower Control Arms,Springs and Shocks,BE 6,7,8	Fig. 002-120
Front Stabilizer Bar,BE 1,2,3 BR 1,2,3	Fig. 002-130
Front Stabilizer Bar and Track Bar,BE 6,7,8 BR 6,7,8	Fig. 002-140

Front Axle Drive Shafts

Front Axle Shafts,Dana M44/216MM [DJC],M60/248MM [DJF],BE 6,7,8	Fig. 002-210
---	--------------

Front Axle Housing

Front Axle Housing,Dana Model 44,BE 6	Fig. 002-310
Front Axle Housing,Dana Model 60,BE 7,8	Fig. 002-320

Front Axle Assembly


Axle Assy Front	Fig. 002-410
-----------------------	--------------







Front Axle Disconnect

Vacuum Lines,Front Axle and Transfer Case	Fig. 002-510
---	--------------


Front Axle Differential

Differential, Front Axle Dana Model 44,BE 6	Fig. 002-610
Differential, Front Axle,Dana Model 60,BE 7,8	Fig. 002-620

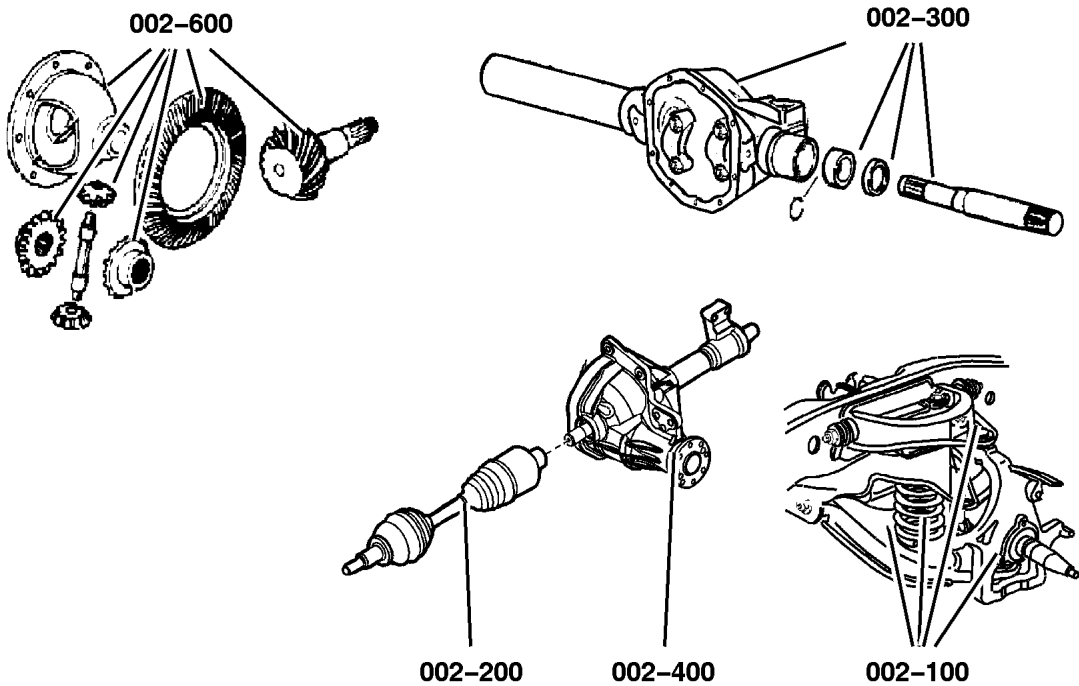
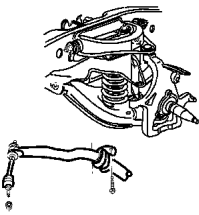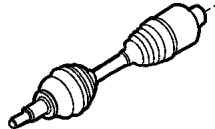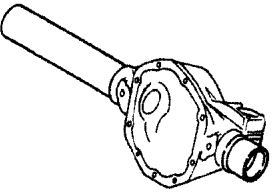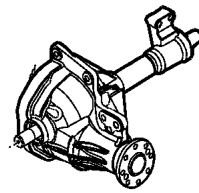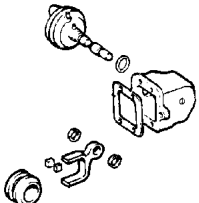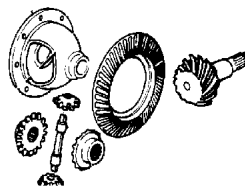
<div>002-100</div> <div>Front Suspension</div> <div></div>	<div>002-200</div> <div>Front Axle Drive Shafts</div> <div></div>	<div>002-300</div> <div>Front Axle Housing</div> <div></div>	<div>002-400</div> <div>Front Axle Assembly</div> <div></div>
<div>002-500</div> <div>Front Axle Disconnect</div> <div></div>	<div>002-600</div> <div>Front Axle Differential</div> <div></div>		

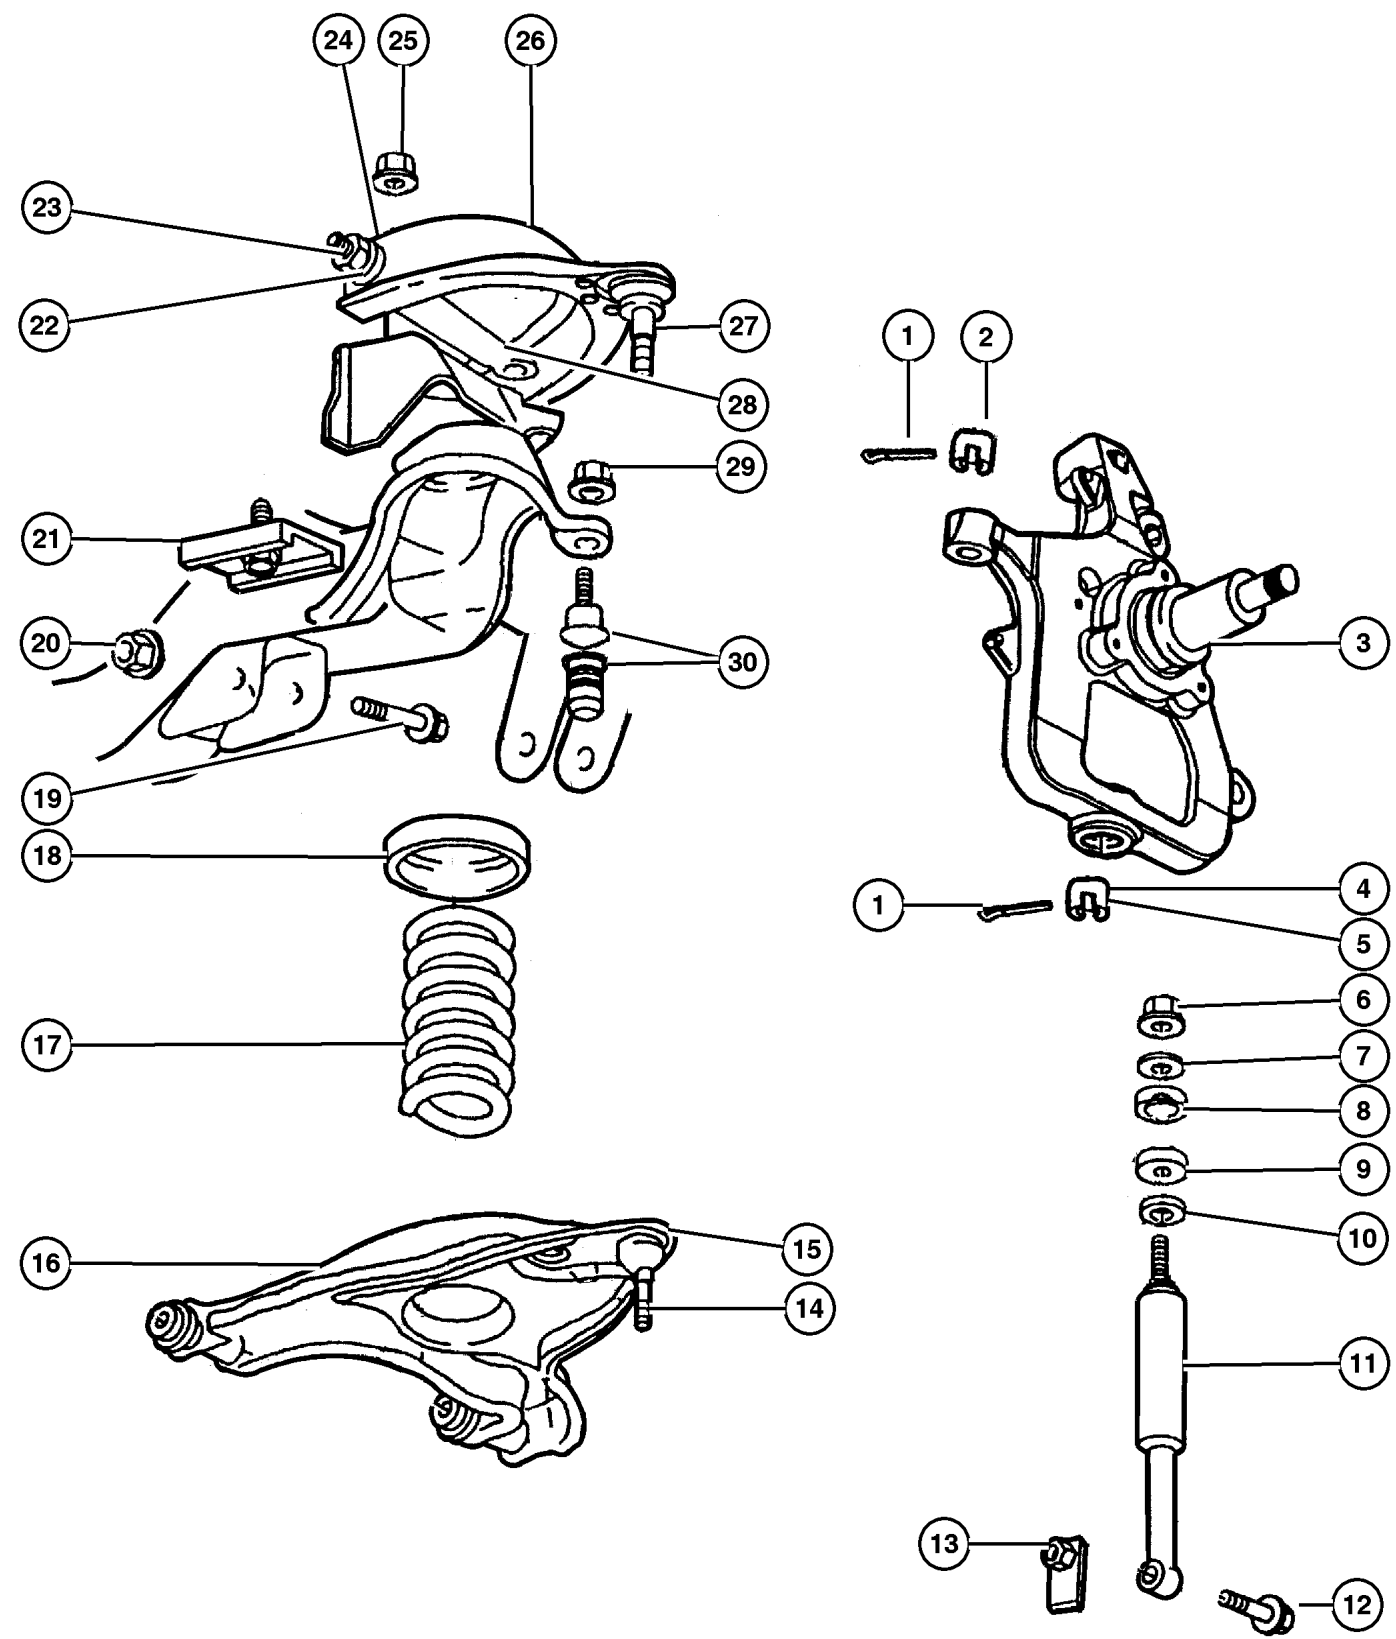Upper and Lower Control Arms,Springs and Shocks,BE 1,2,3
Figure 002-110



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note: UCA=Upper Control Arm---LCA=Lower Control Arm---XBC=Without Box---XBS=Sweptline Box---AGL=Super Sport Group
(SS/T)---EH0=3.9L V-6 Gas Engine---EL0 5.2L 8 Cylinder Gas Engine---EM0=5.9L 8 Cylinder Gas Engine---EW0=8.0L V-10 Gas
codes on the coil springs.


1	0120 123	2	1, 2, 3						PIN, Cotter, UCA and LCA Ball Joint
2	6502 749	2	1, 2, 3						NUT, Castle, M14x1.5, UCA Ball
3									Joint Mounting
	52106 424AA	1	1						KNUCKLE, Front
	52106 425AA	1	1						Right
	52106 220AA	1	2, 3						Left
	52106 221AA	1	2, 3						Right
4	6502 857	2	2, 3						Left
									NUT, Hex, M20x1.5, LCA Ball Joint
									Mounting
5	6502 858	2	1						NUT, Castle, M16x1.50, LCA Ball
									Joint Mounting
6	6503 029	2							NUT, Hex, M12x1.25, Shock Upper
									Mounting
7	52106 432AA	2	1, 2, 3						RETAINER, Front Suspension,
									Upper
8	52106 543AA	2	1, 2, 3						GROMMET, Shock Absorber, Upper
9	52106 983AA	2	1, 2, 3						GROMMET, Shock Absorber, Lower
10	52106 432AA	2	1, 2, 3						RETAINER, Front Suspension,
									Lower
11									SHOCK ABSORBER PACKAGE,
									Suspension, Front
	5017 167AA	2	1			EL0,			Z1B
						EM0			
	5017 608AA	2	2		33, 34	EL0,			Z2B
						EM0			
	5017 610AA	2	2		33, 34	ET0			Z2B
	5017 613AA	2	2		33	EW0			Z2B
	5017 609AA	2	2		34	EW0			Z2B
	5017 611AA	2	3		34	EL0,			Z3A
						EM0,			
						EW0			
	5017 612AA	2	3		34	ET0			Z3A
12	6502 818	2							BOLT, Hex Flange Head, M14x2.
									00x80, Lower Shock Mounting
13	6502 817	2							LOCK NUT, M14-2.00, Lower Shock
									Mounting

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

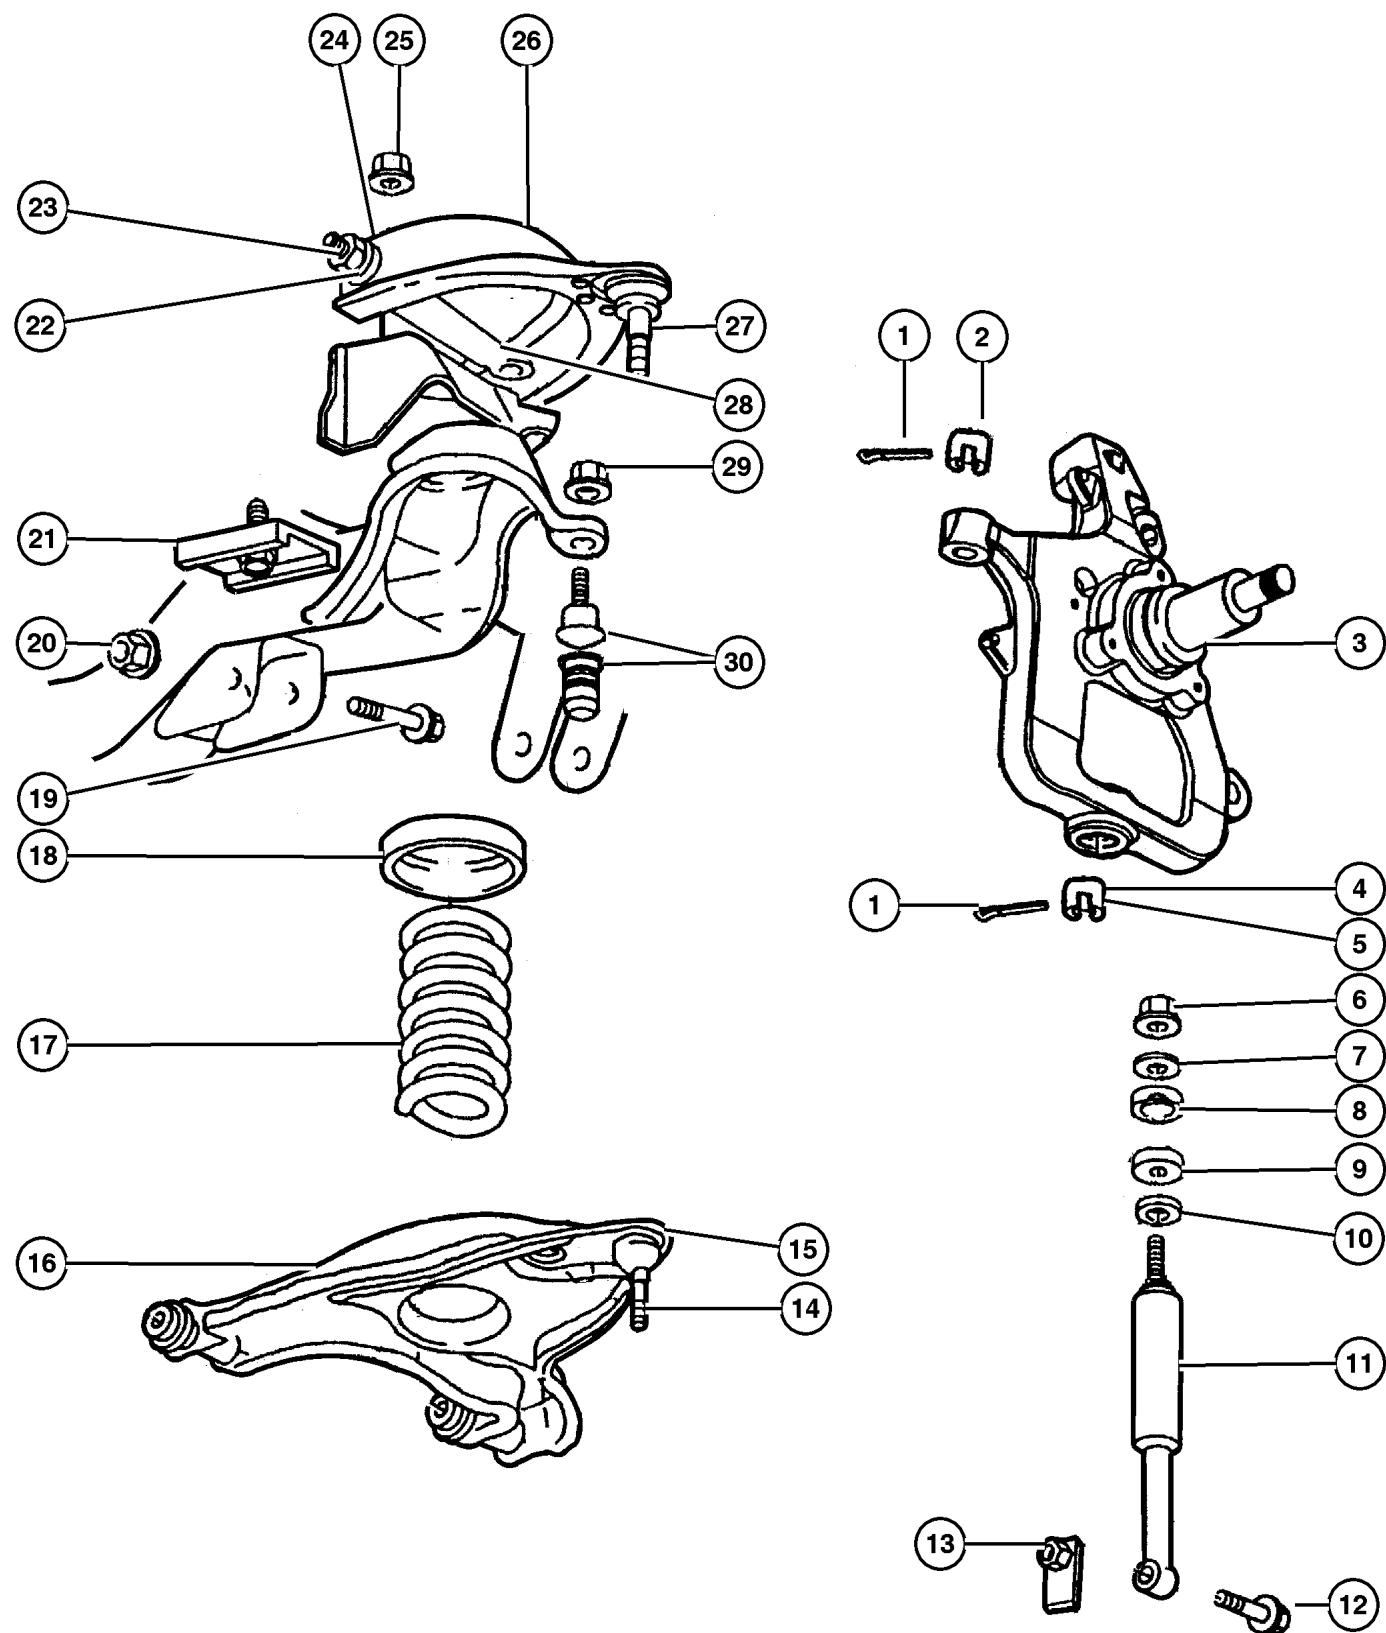Upper and Lower Control Arms,Springs and Shocks,BE 1,2,3
Figure 002-110




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
14									BALL JOINT, Lower Control Arm, (NOT SERVICED) (Not Serviced)
15									SNAP RING, Control Arm, (NOT SERVICED) (Not Serviced)
16									ARM, Lower Control, Front
	52113 888AA	1	1						Right
	52113 889AA	1	1						Left
	52113 678AA	1	2, 3						Right
	52113 679AA	1	2, 3						Left
17									SPRING, Front Coil
	5203 9018	1							Tag #018,ZHA,ZWA
	5203 9019	1							Tag #019,ZHB,ZWB
	5203 9020	1							Tag #020,ZHC,ZWC
	5203 9021	1							Tag #021,ZHD,ZWD
	5203 9022	1							Tag #022,ZHE,ZWE
	5203 9023	1							Tag #023,ZHF,ZWF
	5203 9024	1							Tag #024,ZHG,ZWG
	5203 9026	1							Tag #026,ZJA,ZXA
	5203 9027	1							Tag #027,ZJB,ZXB
	5203 9035	1							Tag #035,ZJC,ZXC
	5203 9036	1							Tag #036,ZJD,ZXD
	5203 9037	1							Tag #037,ZJE,ZXE
	5203 9038	1							Tag #038,ZJF,ZXF
	5203 9039	1							Tag #039,ZJG,ZXHG
	5203 9046	1							Tag #046,ZJH,ZXH
	5203 9047	1							Tag #047,ZJJ,ZXJ
	5203 9054	1							Tag #054,ZAA,ZNA
	5203 9059	1							Tag #059,ZAF,ZNF
	5203 9060	1							Tag #060,ZAG,ZNG
	5203 9072	1							Tag #072,ZDC,ZSC
	5203 9073	1							Tag #073,ZDD,ZSD
	5203 9074	1							Tag #074,ZDE,ZSE
	5203 9075	1							Tag #075,ZDF,ZSF
	5203 9076	1							Tag #076,ZDG,ZSG
	52106 225AA	1							Tag #225AA,ZHJ,ZWJ
	52106 228AA	1							Tag #226AA,ZHK,ZWK
	52106 229AA	1							Tag #229AA,ZHL,ZWL
	52106 230AA	1							Tag #230AA,ZJL,ZXL
	52106 231AA	1							Tag #231AA,ZAJ,ZNJ
	52106 232AA	1							Tag #232AA,ZCE,ZRE
	52106 233AA	1							Tag #233AA,ZCF,ZRF

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

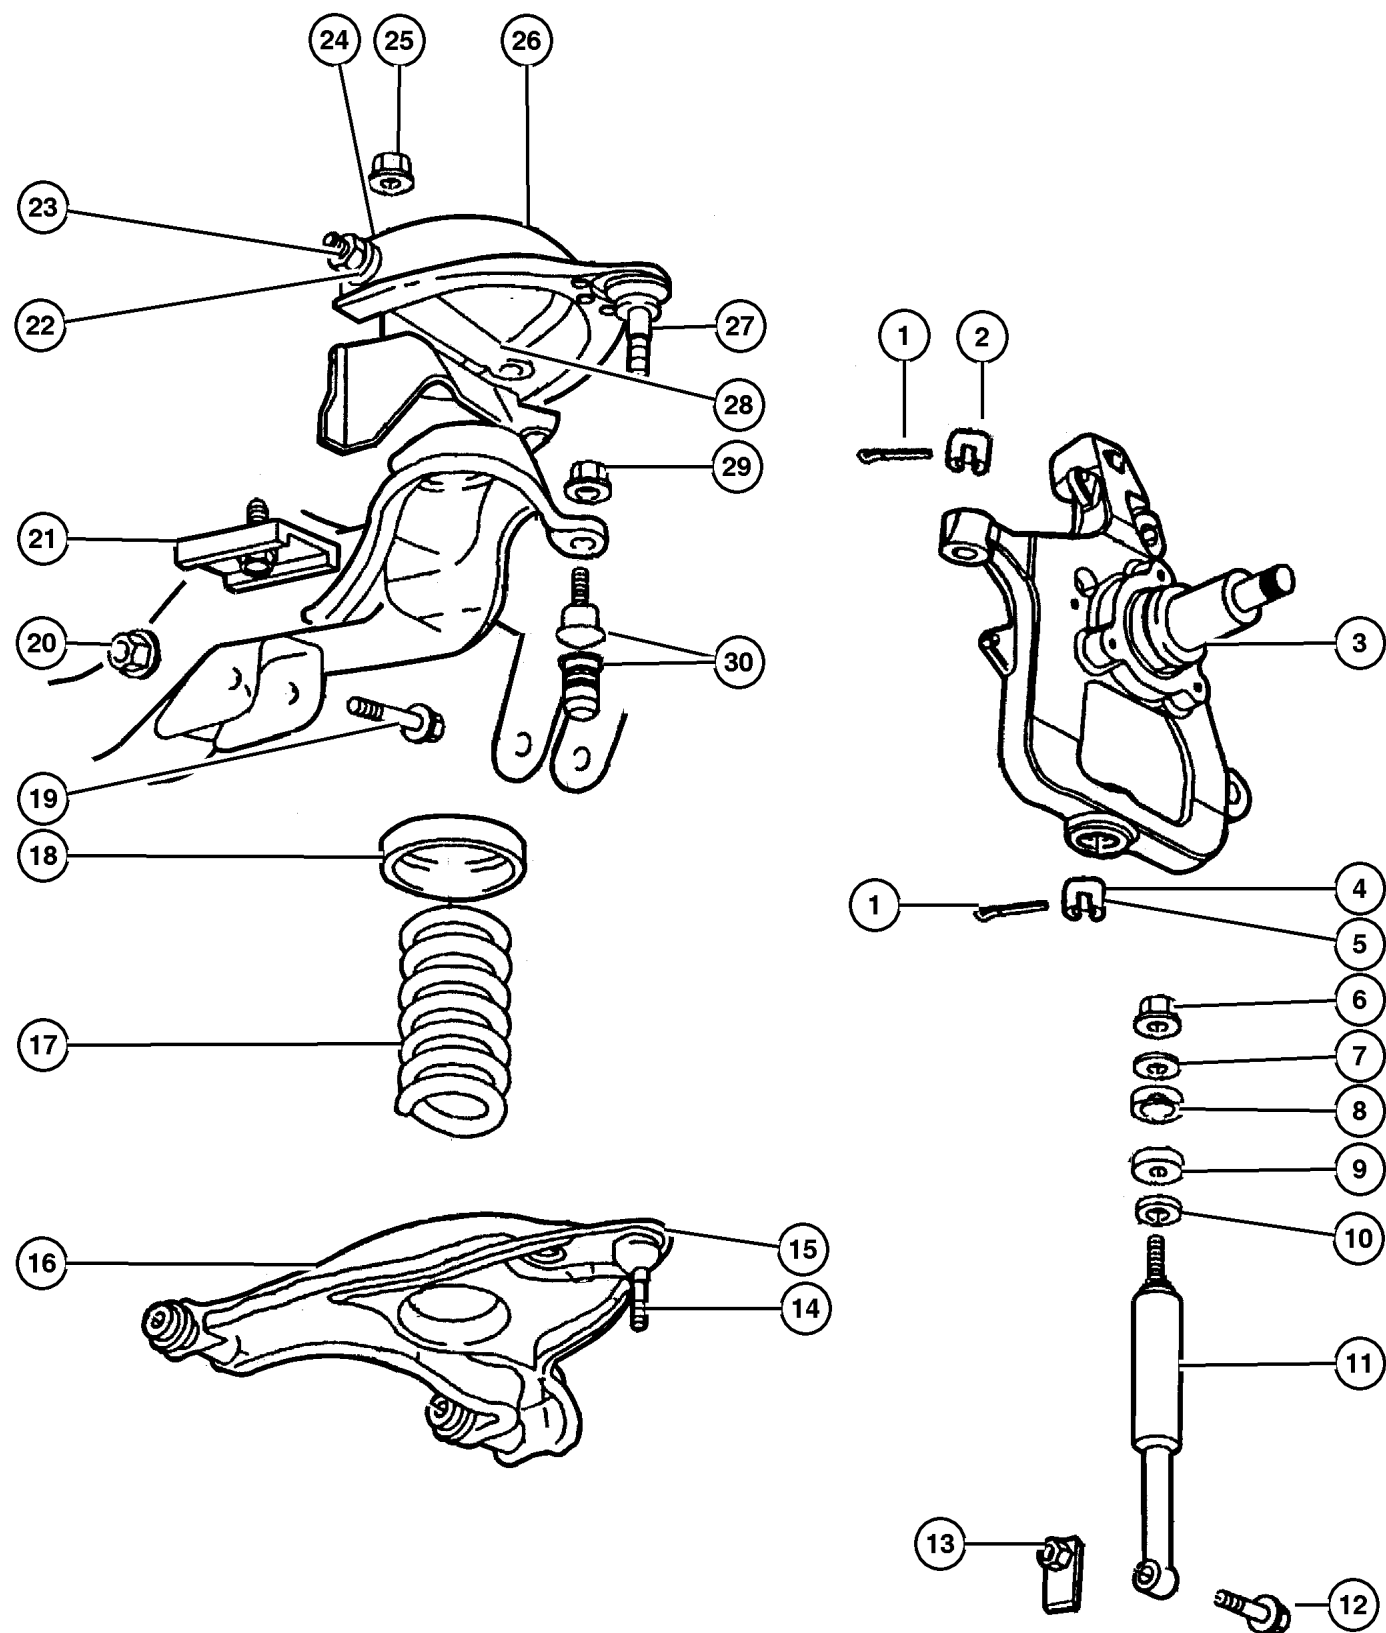Upper and Lower Control Arms,Springs and Shocks,BE 1,2,3
Figure 002-110



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	52106 240AA	1							Tag #240AA,ZDJ,ZSJ
	52106 241AA	1							Tag #241AA,ZDH,ZSH
	52113 165AA	1	1						Tag #165AA,ZEA,ZTA
	52113 166AA	1	1						Tag #166AA,ZEB,ZTB
	52113 167AA	1	1						Tag #167AA,ZEC,ZTC
	52113 168AA	1	1						Tag #168AA,ZED,ZTD
	52113 169AA	1	1						Tag #169AA,ZEE,ZTE
	52113 170AA	1	1						Tag #170AA,ZEF,ZTF
	52113 171AA	1	1						Tag #171AA,ZEG,ZTG
	52113 172AA	1	1						Tag #172AA,ZEH,ZTH
	52113 173AA	1	1						Tag #173AA,ZEJ,ZTJ
	52113 174AA	1	2, 3		33, 34				Tag #174AA,ZFA,ZUA
	52113 175AA	1	2, 3		33, 34				Tag #175AA,ZFB,ZUB
	52113 176AA	1	2, 3		33, 34				Tag #176AA.ZFC.ZUC
	52113 005AA	1	2, 3		33, 34				Tag #005AA,ZFF,ZUF
	52113 006AA	1	2, 3		33, 34				Tag #006AA,ZFG,ZUG
	52113 007AA	1	2, 3		33, 34				Tag #007AA,ZFH,ZUH
	52113 008AA	1	2, 3		33, 34				Tag #008AA,ZFJ,ZUJ
	52113 077AA	1	2, 3		33, 34				Tag #077AA,ZFD,ZUD
	52113 078AA	1	2, 3		33, 34				Tag #078AA,ZFE,ZUE
18	5203 7718	2	1, 2, 3						ISOLATOR, Spring, Coil
19	6503 047	4	1, 2, 3						BOLT, Hex Flange Head, M16x2.00x135, LCA Mounting
20	6504 707	4	1, 2, 3						NUT, LCA Mounting
21	6505 804AA	4	1, 2, 3						BOLT AND RETAINER, Suspension Arm
22	5203 7673	4	1, 2, 3						BUSHING, Control Arm, Upper
23	6505 476AA	4	1, 2, 3						NUT, Upper
24	5203 8241	4	1, 2, 3						WASHER, Control Arm Shaft, Upper
25	6504 707	4	1, 2, 3						NUT, UCA to Frame, Upper
26	52106 678AA	2	1, 2, 3						ARM, Upper Control, Front
27									BALL JOINT, Upper Control Arm, (NOT SERVICED) (Not Serviced)
28	52106 301AA	2	1, 2, 3						SHAFT, Control Arm, Upper
29	6101 448	2	1, 2, 3						NUT AND WASHER, Hex Nut-Coned Washer, M10 x 1.5
30	5208 7636	2	1, 2, 3						BUMPER, Jounce

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Upper and Lower Control Arms,Springs and Shocks,BE 6,7,8
Figure 002-120

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

AWL = Off Road Group

EL0 = All 5.2L 8 Cyl Gas Engines

EM0 = All 5.9L 8 Cyl Gas Engines

ET0 = All 5.9L Turbo Diesel Engines

EW0 = All 8.0L Gas Engines

UCA=Upper Control Arm

LCA=Lower Control Arm

Check the VIN number for the 'Z' sales codes on suspension and springs.


1	6503 029	2							NUT, Hex, M12x1.25, Shock Mounting, Upper
2	5203 8257	2	6, 7, 8						RETAINER, Shock Absorber, Upper
3	52106 742AA	2	6, 7, 8						GROMMET, Shock Absorber, Upper
4	6502 696	6	6, 7, 8						NUT, Hex Flange Lock, M10x1.5, Shock Bracket to Frame, Mounting
5	5203 8111	2	6, 7, 8						BRACKET, Upper Shock Cup
6	5203 8105	2	6, 7, 8						RING, Shock Absorber, With Studs
7	5203 7719	2	6, 7, 8						ISOLATOR, Spring
8	5203 8838	2	6, 7, 8						BUMPER, Jounce
9	52106 798AA	2	6						ARM, Control Upper
	52106 799AA	2	7, 8						Upper
10	6502 698	2	6, 7, 8						NUT, Hex Flange Lock UCA to Frame, Mounting
		2	6, 7, 8						UCA to Axle, Mounting
11	6504 989AA	2	6, 7, 8						SCREW AND WASHER, Hex Head, M14-2x95 UCA to Frame, Mounting
		2	6, 7, 8						UCA to Axle, Mounting
12	6502 396	2	6, 7, 8						NUT, Hex Flange Lock LCA to Frame, Mounting
		2	6, 7, 8						LCA to Axle, Mounting
13	6505 444AA	2	6, 7, 8						SCREW, Hex Flange Head, LCA to Frame, Mounting
14	52106 777AA	2	6						ARM, Control Lower
	52106 778AA	2	7, 8						Lower
15	6505 741AA	2	6, 7, 8						WASHER, Flat, LCA to Axle, Mounting
16	6505 742AA	2	6, 7, 8						SCREW, LCA to Axle, Mounting

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual


AR = Use as required - = Non illustrated part # = New this model year

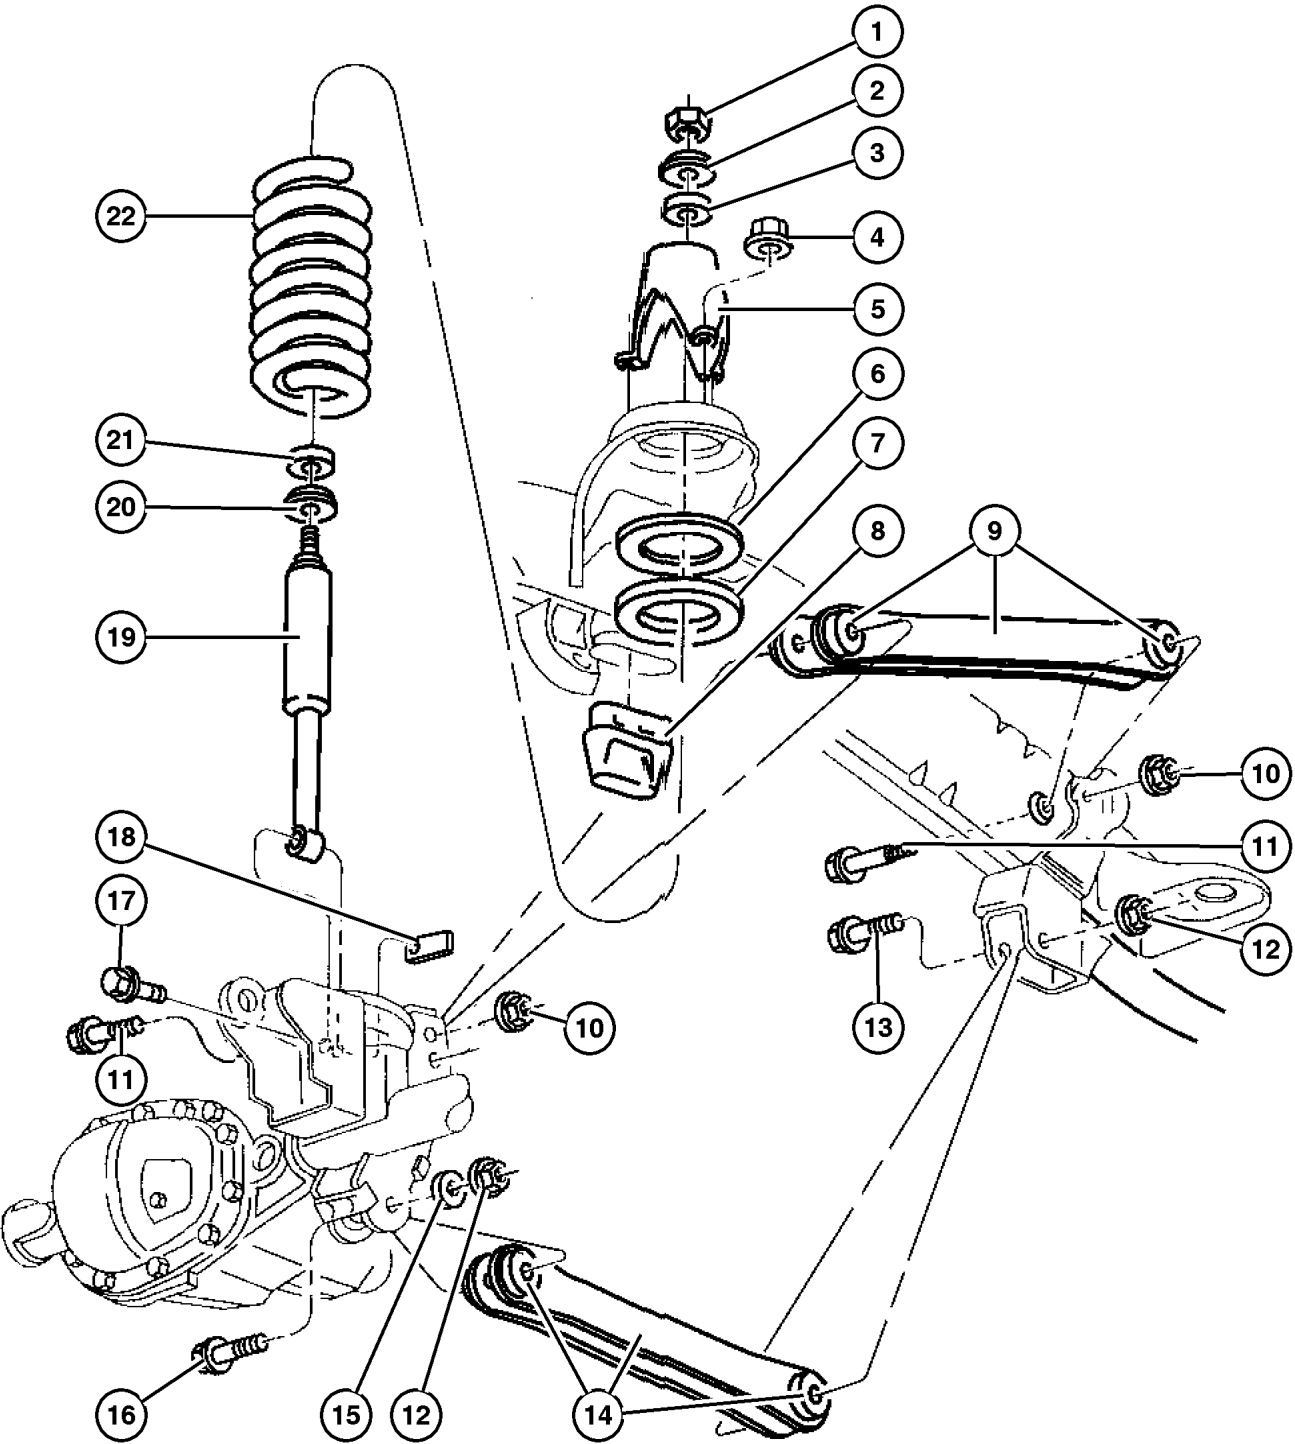September 16, 2005



Upper and Lower Control Arms,Springs and Shocks,BE 6,7,8

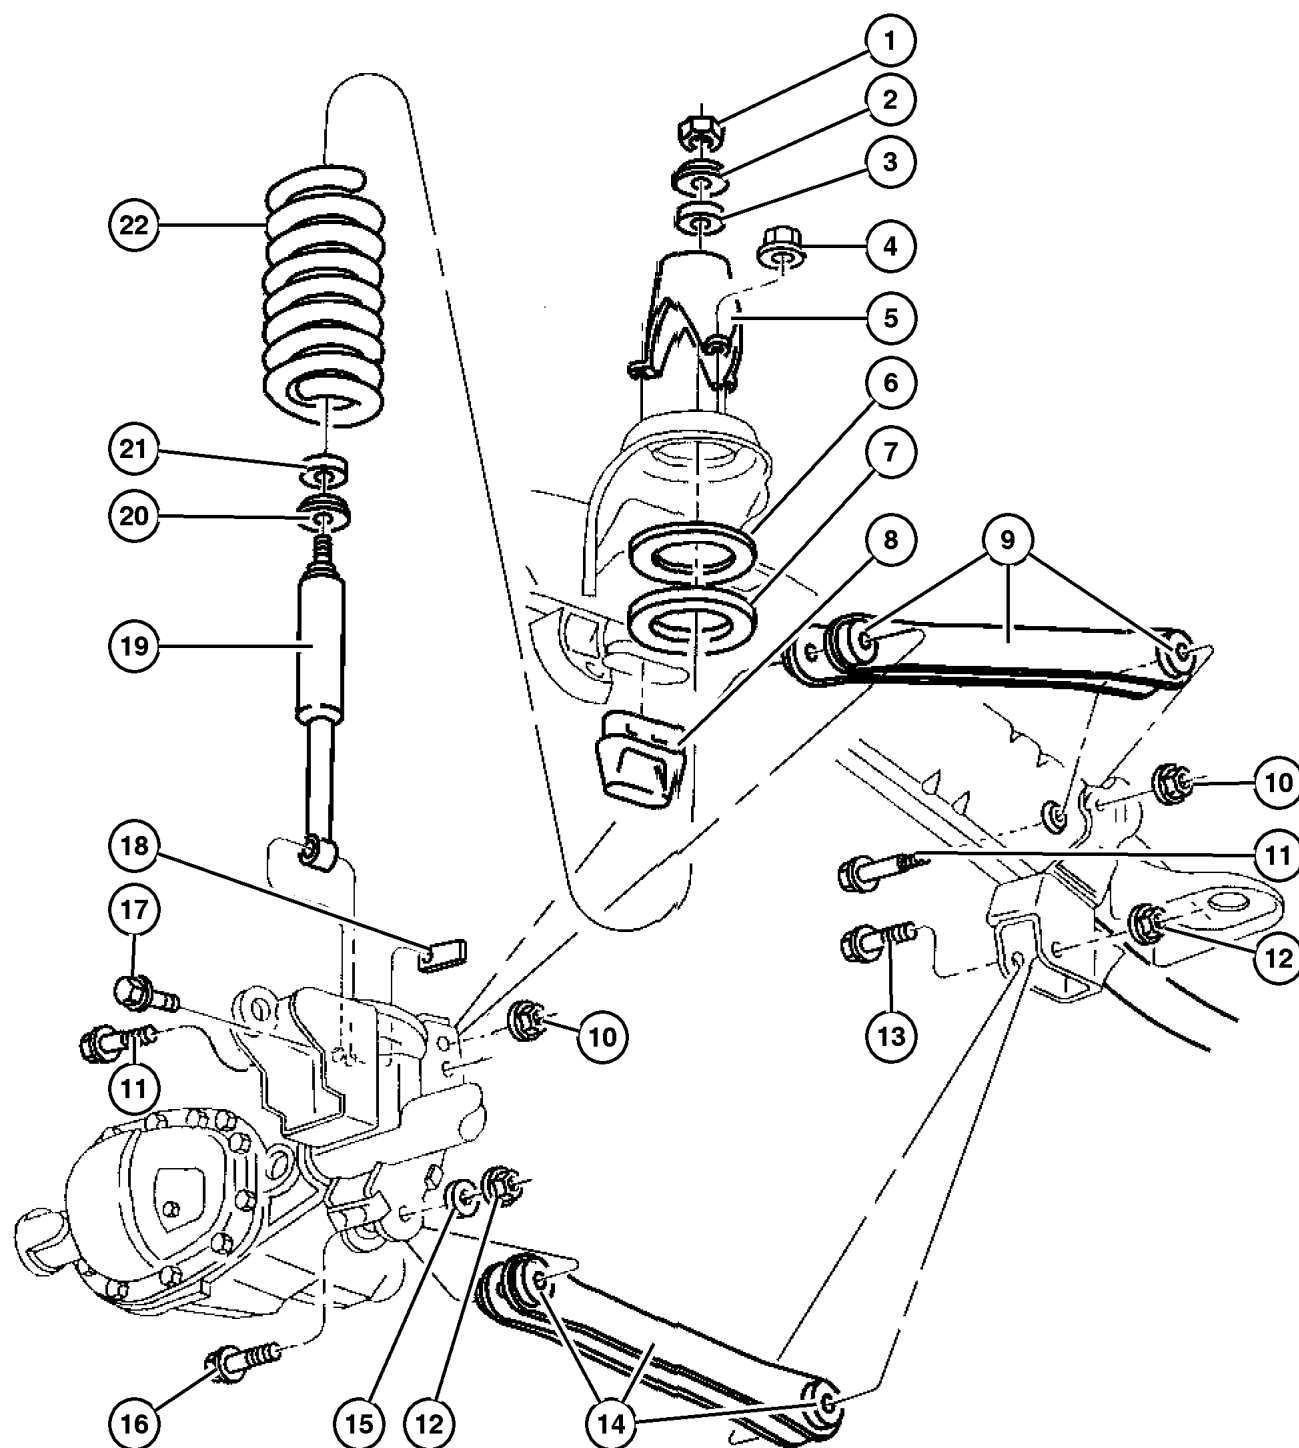Figure 002-120



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
17	6502 818	2							BOLT, Hex Flange Head, M14x2.00x80, Shock Mounting, Lower
18	6502 817	2							LOCK NUT, M14-2.00, Shock Mounting, Lower
19									SHOCK ABSORBER PACKAGE, Suspension, Front
	4897 472AC	2	6			EL0, EM0			Z6B,-AWL
	5015 240AC	2	6		31, 33	EL0,			Z6B,+AWL
	4897 468AC	2	7		33, 34	EM0, EL0, EM0, EW0			Z7B
	4897 469AC	2	7		33	ET0			Z7B
	4897 473AC	2	7		34	ET0			Z7B
	4897 464AC	2	8		34				Z8B
20	5203 8258	2	6, 7, 8						RETAINER, Shock Absorber, Lower
21	52106 747AA	2	6, 7, 8						GROMMET, Shock Absorber, Lower
22									SPRING, Front Coil
	5203 9018	1							Tag #018,ZWA,ZHA
	5203 9019	1							Tag #019,ZWB,ZHB
	5203 9020	1							Tag #020,ZWC,ZHC
	5203 9021	1							Tag #021,ZWD,ZHD
	5203 9022	1							Tag #022,ZWE,ZHE
	5203 9023	1							Tag #023,ZWF,ZHF
	5203 9024	1							Tag #024,ZWG,ZHG
	5203 9026	1							Tag #026,ZXA,ZJA
	5203 9027	1							Tag #027,ZXB,ZJB
	5203 9035	1							Tag #035,ZXC,ZJC
	5203 9036	1							Tag #036,ZXD,ZJD
	5203 9037	1							Tag #037,ZXE,ZJE
	5203 9038	1							Tag #038,ZXF,ZJF
	5203 9039	1							Tag #039,ZXG,ZJG
	5203 9046	1							Tag #046,ZXH,ZJH
	5203 9054	1							Tag #054,ZNA,ZAA
	5203 9059	1							Tag #059,ZNF,ZAF
	5203 9060	1							Tag #060,ZNG,ZAG
	5203 9072	1							Tag #072,ZSC,ZDC
	5203 9073	1							Tag #073,ZSD,ZDD
	5203 9074	1							Tag #074,ZSE,ZDE
	5203 9075	1							Tag #075,ZSF,ZDF

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year


September 16, 2005

Front Stabilizer Bar, BE 1,2,3 BR 1,2,3
Figure 002-130

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	6504 010	4							SCREW AND WASHER, Hex Head, M10x1.50x35, Sway Bar Retainer to Frame Mounting
2	5203 8455	1	1, 2, 3						BAR, Front Sway
3	5203 8851	2	1, 2, 3						BUSHING, Sway Bar
4	5203 7710	2	1, 2, 3						RETAINER, Sway Bar
5	6101 687	4	1, 2, 3						NUT, Hex Lock, M10x1.5
6	5203 8115	4	1, 2, 3						RETAINER, Sway Bar, Upper
7	5203 7916	8	1, 2, 3						GROMMET, Link
8	5203 8116	4	1, 2, 3						RETAINER, Sway Bar, Lower
9	52037 712AB	2	1, 2, 3						LINK, Sway Eliminator

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

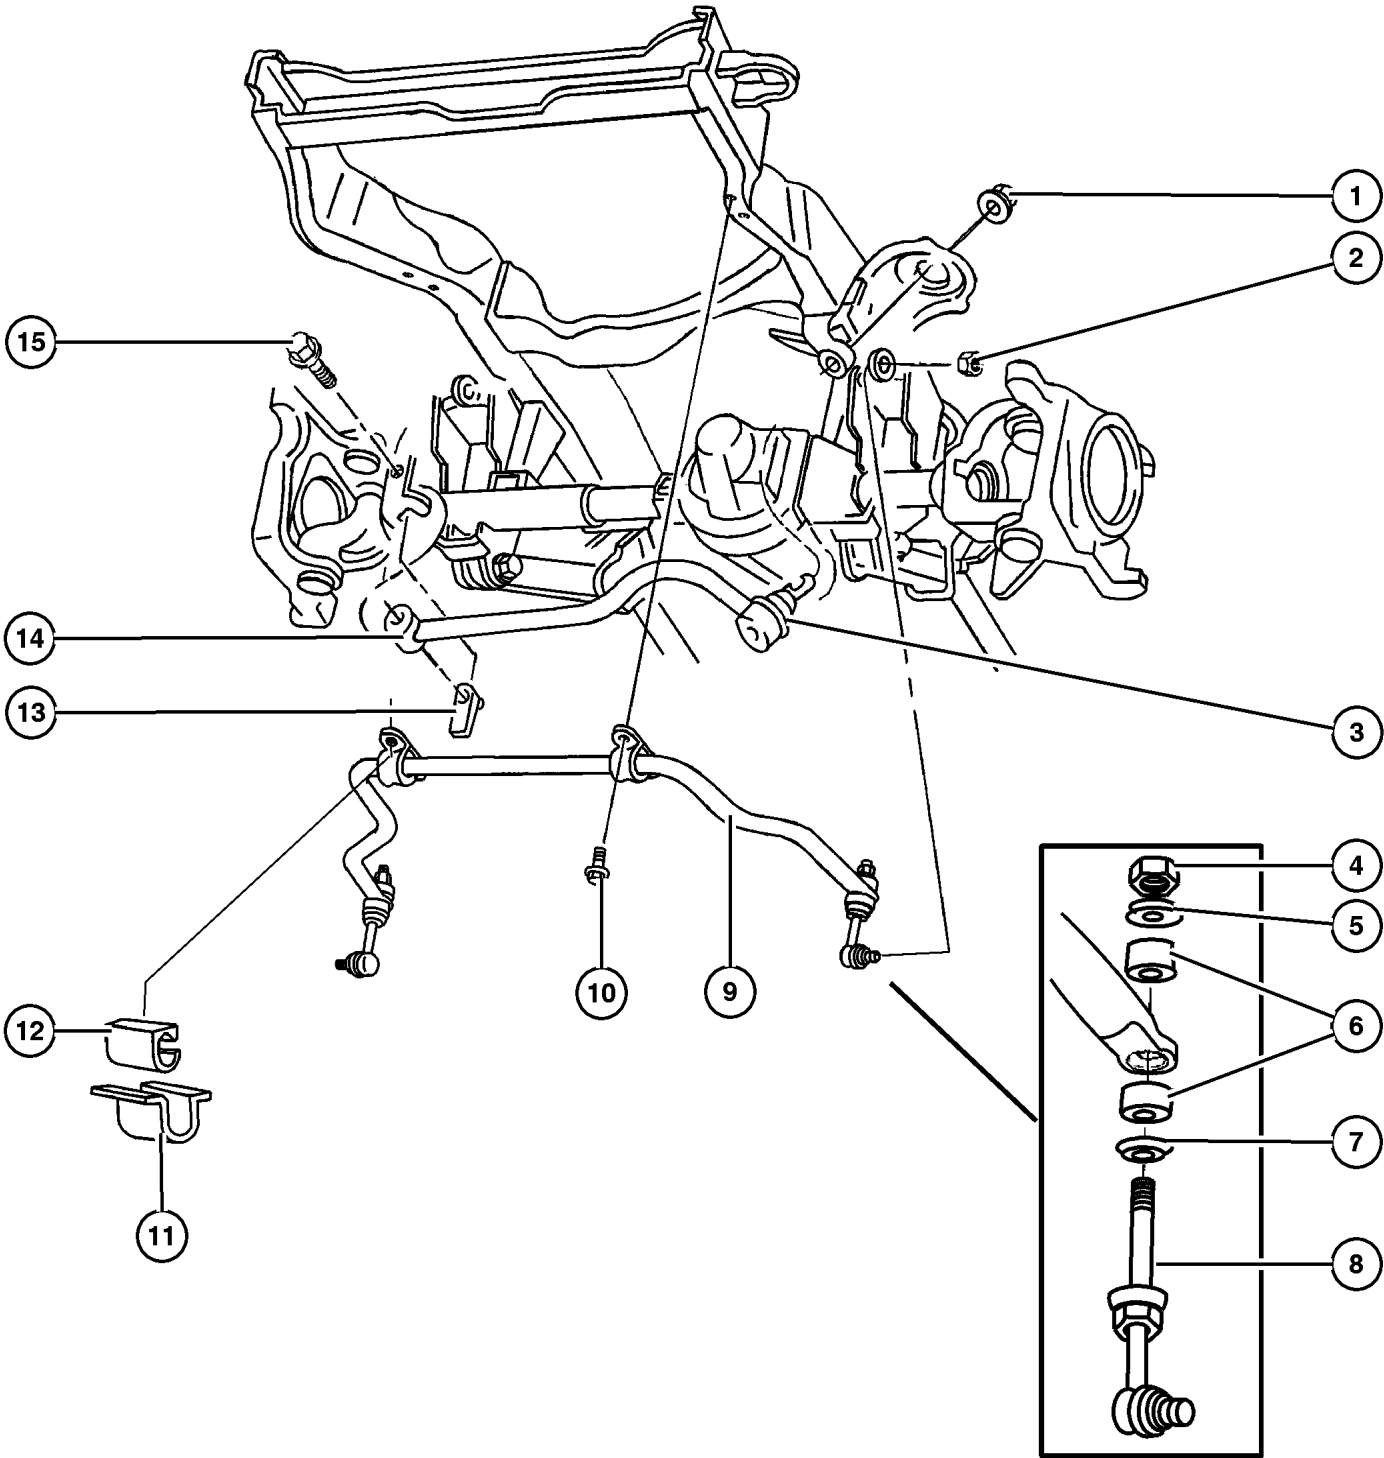Front Stabilizer Bar and Track Bar, BE 6,7,8 BR 6,7,8
Figure 002-140



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	6505 682AA	1	1, 2, 3						NUT, Hex Flange Lock, M16x1.5, Track Bar to Frame Mounting
2	6503 046	2	6, 7, 8						NUT, Hex Lock, M12 x 1.25, Lower Link
3	5018 748AA	1	6, 7, 8						SEAL, Dust
4	6101 687	2	6, 7, 8						NUT, Hex Lock, M10x1.5, Upper Link
5	5203 8115	2	6, 7, 8						RETAINER, Sway Bar, Grommet, Upper
6	5203 7916	4	6, 7, 8						GROMMET, Link
7	5203 8116	2	6, 7, 8						RETAINER, Sway Bar, Grommet, Lower
8	52106 481AA	2	6, 7, 8						LINK, Sway Eliminator
9									BAR, Front Sway
	5203 9440	1	6						
	52113 551AA	1	7, 8			33, 34			
10	6504 010	4							SCREW AND WASHER, Hex Head, M10x1.50x35
11	5203 7710	2	6, 7, 8						RETAINER, Sway Bar
12	5203 8851	2	6, 7, 8						BUSHING, Sway Bar
13	6502 817	1	6, 7, 8						LOCK NUT, M14-2.00, Track Bar to Axle
14	5203 8933	1	6, 7, 8						BAR, Track
15	6503 576	1	6, 7, 8						BOLT, Hex Flange Head, M14x2. 00x67.50, Track Bar to Axle

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Front Axle Shafts,Dana M44/216MM [DJC],M60/248MM [DJF],BE 6,7,8
Figure 002-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:Sales Codes,

[DJC]=Axle - Front,Dana M44/216MM

[DJF]=Axle - Front,Dana M60/248mm

1	5015 136AB	1	6						SHAFT, Axle Right
	5015 137AB	1	6						Left
	5015 208AB	1	7		33, 34				Right
	5015 209AB	1	7		33, 34				Left
	5015 208AB	1	8		34				Right
2	5015 209AB	1	8		34				Left
	5015 138AA	2	6						SHAFT, Stub Right or Left
	5015 194AA	1	7		33, 34				Right or Left
3		1	8		34				Right or Left
	4137 757	1	6						U JOINT, Front Axle Right or Left
	5003 004AB	1	7		33, 34				Right or Left
4		1	8		34				Right or Left
	5252 686	1	6						BUSHING, Intermediate Shaft
		1	7		33, 34				
5		1	8		34				
	4778 548	1	6						COLLAR, Axle Shift
	5015 212AA	1	7		33, 34				
6		1	8		34				
	4137 740	1	6						BUSHING, Axle Shaft
	5017 907AA	1	7		33, 34				
7		1	8		34				
	4506 005AB	1	6						SEAL, Axle Drive Shaft Right
	5015 198AA	1	7		33, 34				Right
8		1	8		34				Right
	4762 162	1	6						SHAFT, Axle Intermediate
	5015 203AA	1	7		33, 34				
9		1	8		34				
	4116 366AB	1	6						SEAL, Axle Drive Shaft Left

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005


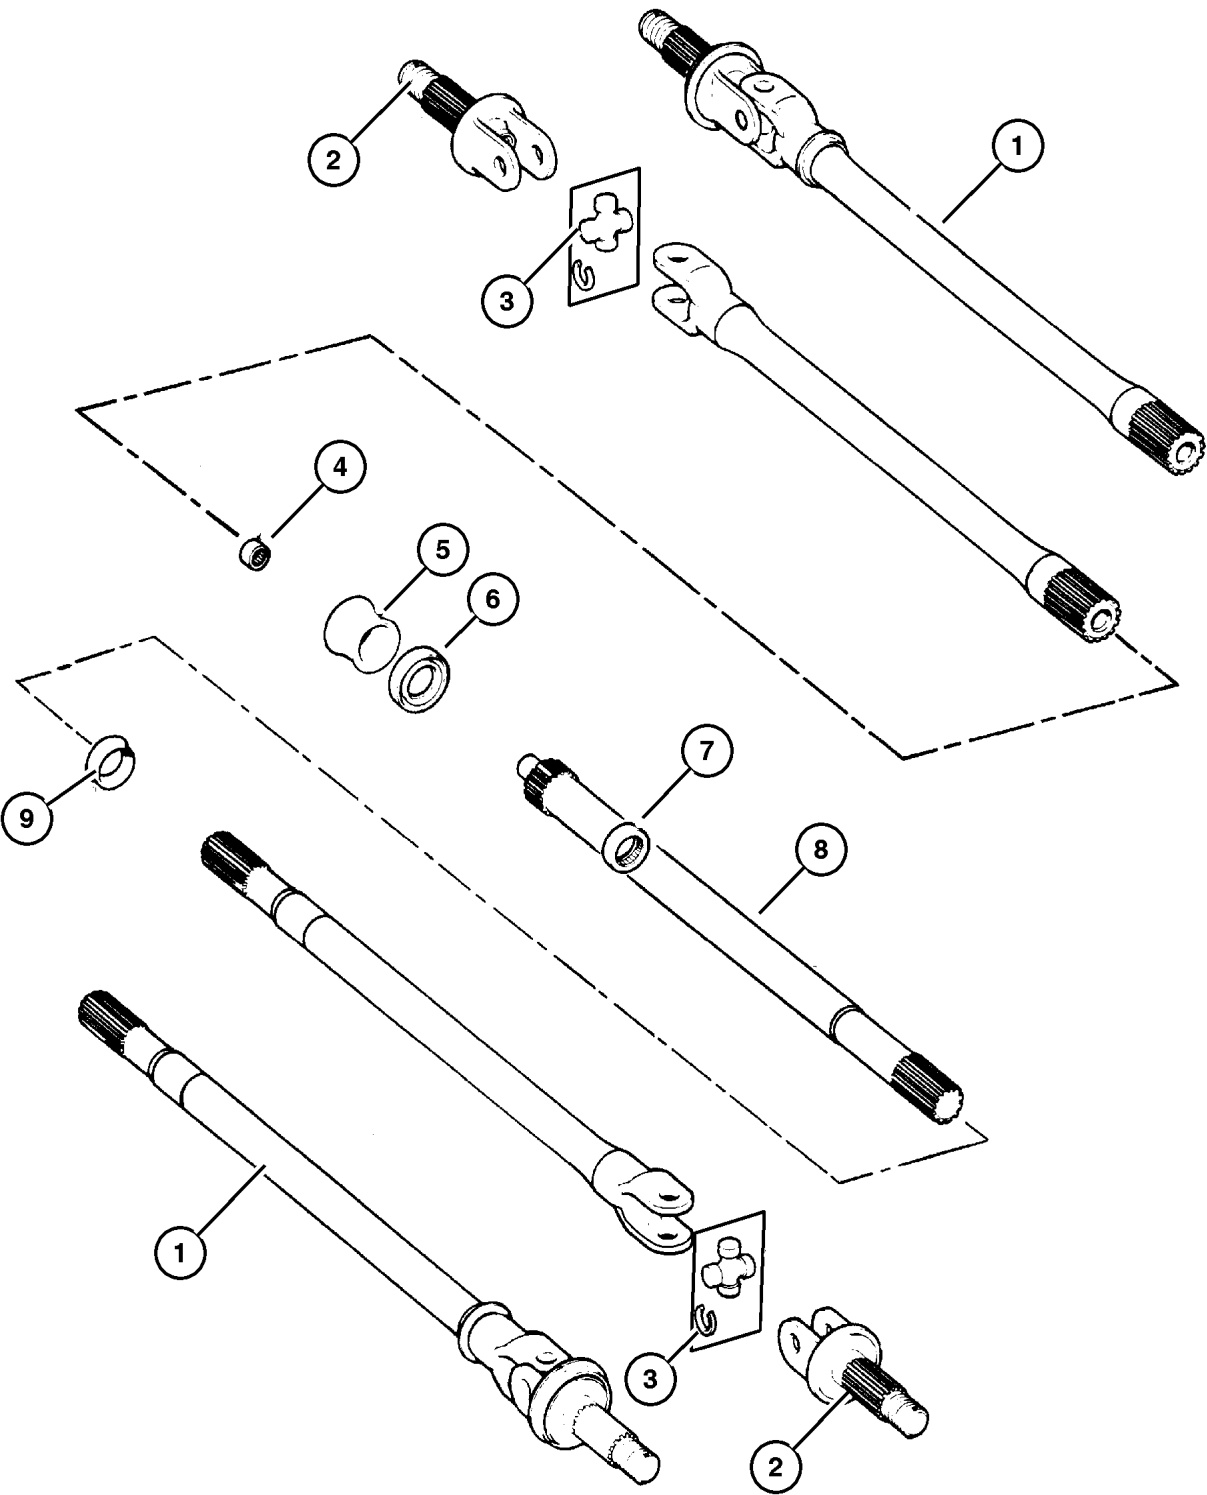


Figure 002-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5015 201AA	1	7		33, 34				Left
		1	8		34				Left

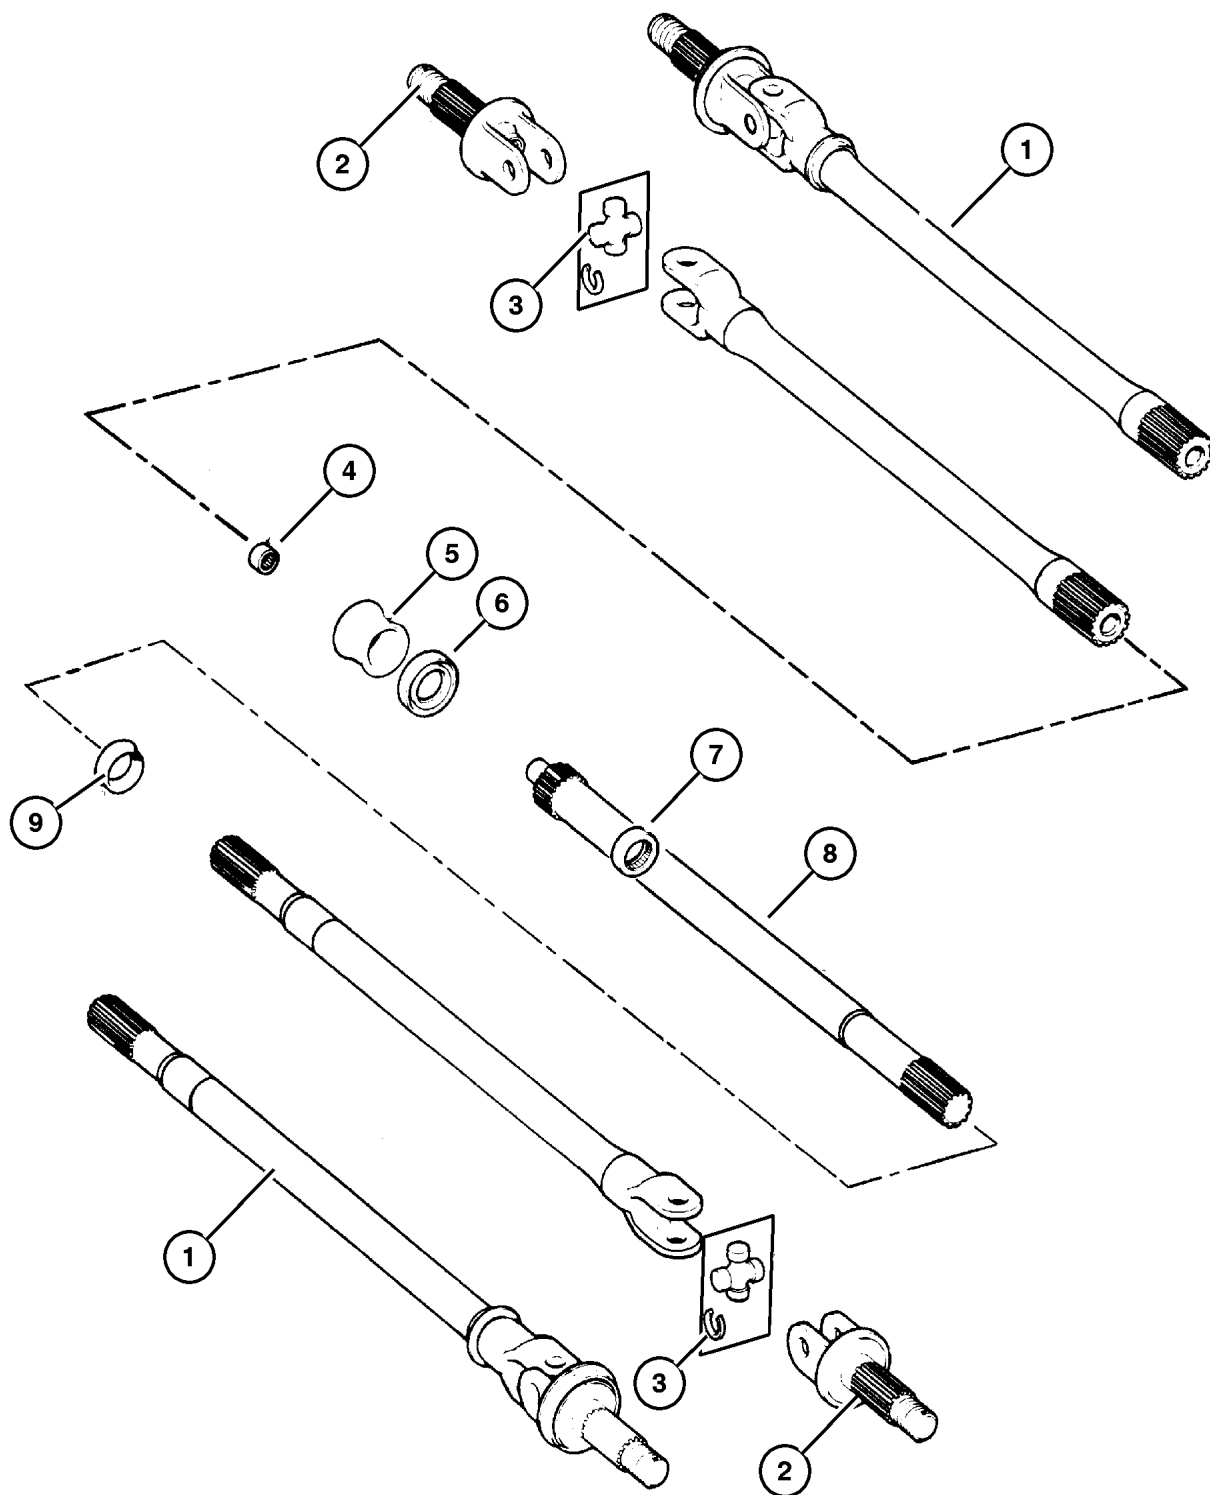

DODGE RAM QUAD CAB/CLUB CAB (BE)

**DODGE RAM QUAD
SERIES**
L = Ram Truck (All)

LINE

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

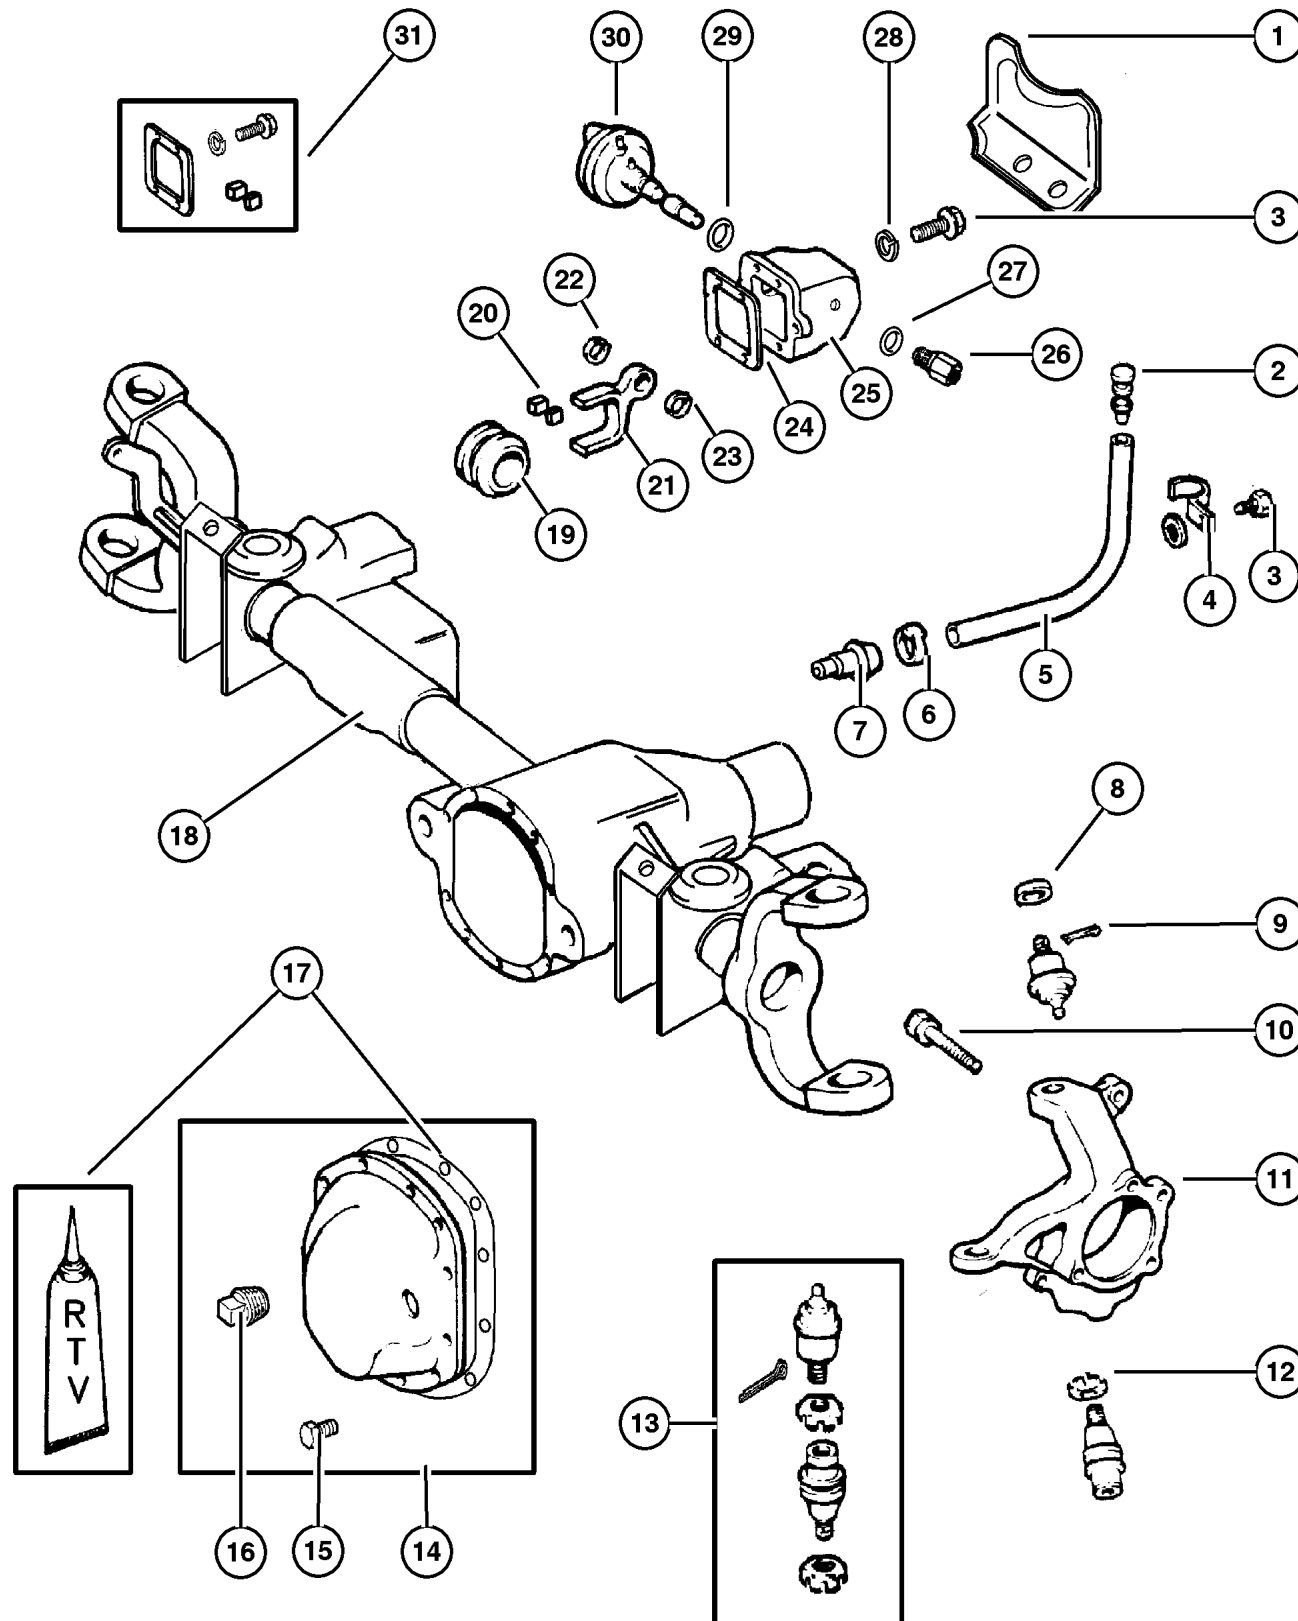
ENGINE
ELF, ELO = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Front Axle Housing,Dana Model 44,BE 6 Figure 002-310



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	4506 117	1	6						SHIELD, Vacuum Disconnect
2	J535 2955	1							VENT, Axle, Upper
3	4137 734	4	6						BOLT, Axle Disconnect Cover
4	5200 3837	1	6						BRACKET, Engine Splash Guard, Breather Hose
5	4443 176	1							HOSE, Fuel, .31 I.D. 50 Foot Roll
6	0153 455	1							CLAMP, Hose, .620
7	5011 283AA	1	6						VENT, Axle
8	J012 5258	2	6						NUT, Steering Knuckle Socket, Upper
9	J013 7214	2	6						PIN, Cotter
10	4746 775	6	6						BOLT, Hub
11									KNUCKLE, Front
	5015 134AA	1	6						Right
	5015 135AA	1	6						Left
12	3634 267	2	6						NUT, Steering Knuckle Socket, Lower
13	5017 061AA	2	6						BALL JOINT, Front Knuckle, Kit
14	4762 688	1	6						COVER, Differential
15	2954 031	10	6						BOLT, Differential Cover
16	3640 792	1	6						PLUG, Differential Cover
17	5010 884AA	1	6						SEALANT, RTV
18									HOUSING, Axle [DMD,DMH] [DMF]
	5015 132AA	1	6						
	5017 060AA	1	6						
19	4778 548	1	6						COLLAR, Axle Shift
20	4137 731	2	6						CLIP, Axle Disconnect Fork
21	4137 727	1	6						FORK, Axle Shift
22	4137 728	1	6						SNAP RING, Vacuum Motor
23	4137 729	2	6						SNAP RING, Vacuum Motor
24	4137 732	1	6						GASKET, Axle Disconnect Housing
25	4384 169	1	6						COVER, Axle Disconnect
26	4289 880	1	6						SWITCH, Hub Lock Indicator
27	5209 912	1	6						GASKET, Axle Disconnect Switch
28	4137 733	4	6						LOCK WASHER
29	4137 726	1	6						O RING, Shaft Disconnect
30	4882 682	1	6						MOTOR KIT, Axle Vacuum
31	J813 3708	1	6						CLIP KIT, Axle Disconnect

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

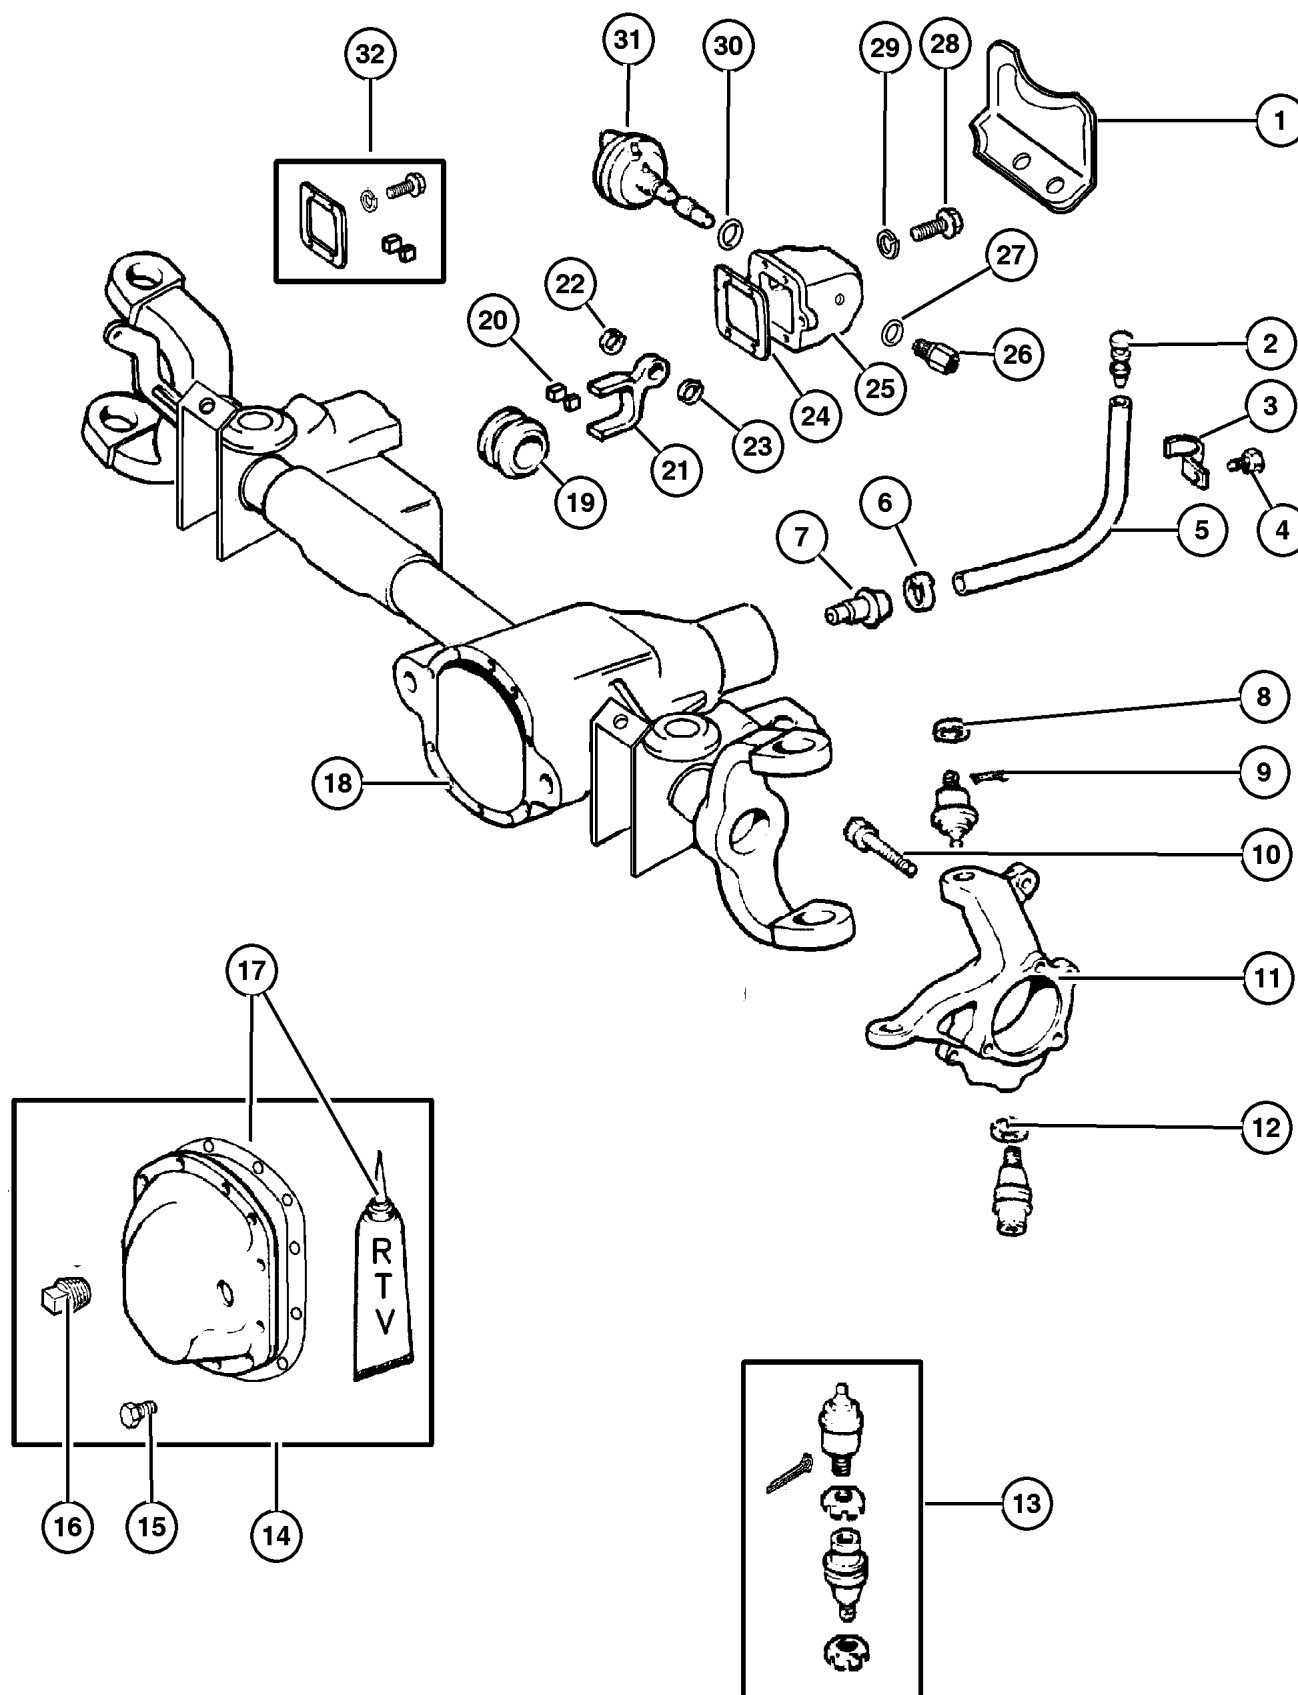
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Front Axle Housing,Dana Model 60,BE 7,8 Figure 002-320



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:DJF = Dana 60 Axle									
1	4506 117	1	7		33, 34				SHIELD, Vacuum Disconnect Motor
		1	8		34				Motor
2	J535 2955	1	6, 7, 8						VENT, Axle, Upper
3	5200 3837	1	7		33, 34				BRACKET, Engine Splash Guard
		1	8		34				Breather Hose
4	4137 734	4	7		33, 34				BOLT, Axle Disconnect Cover
		4	8		34				
5	4443 176	1							HOSE, Fuel, .31 I.D. 50 Foot Roll, Bulk Roll
6	0153 455	1	6, 7, 8						CLAMP, Hose, .620
7	5011 283AA	1	7		33, 34				VENT, Axle
		1	8		34				
8	5015 124AA	1	7		33, 34				NUT, Steering Knucle Socket
		1	8		34				Upper
9	0120 123	3							PIN, Cotter, Upper
10	5015 125AA	8	7		33, 34				BOLT, Hub
		8	8		34				Mounting
11	5015 238AA	1	7		33, 34				Right
	5015 239AA	1	7		33, 34				Left
	5015 238AA	1	8		34				Right
	5015 239AA	1	8		34				Left
12	3634 267	2	7		33, 34				NUT, Steering Knucle Socket
		2	8		34				
13	5015 114AA	2	7		33, 34				BALL JOINT, Front Knuckle
		2	8		34				
14	5015 193AA	1	7		33, 34				COVER, Differential
		1	8		34				Disconnect Housing
15	2952 474	10	7		33, 34				BOLT, Hex Flange Head
									Cover

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines


TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Front Axle Housing,Dana Model 60,BE 7,8

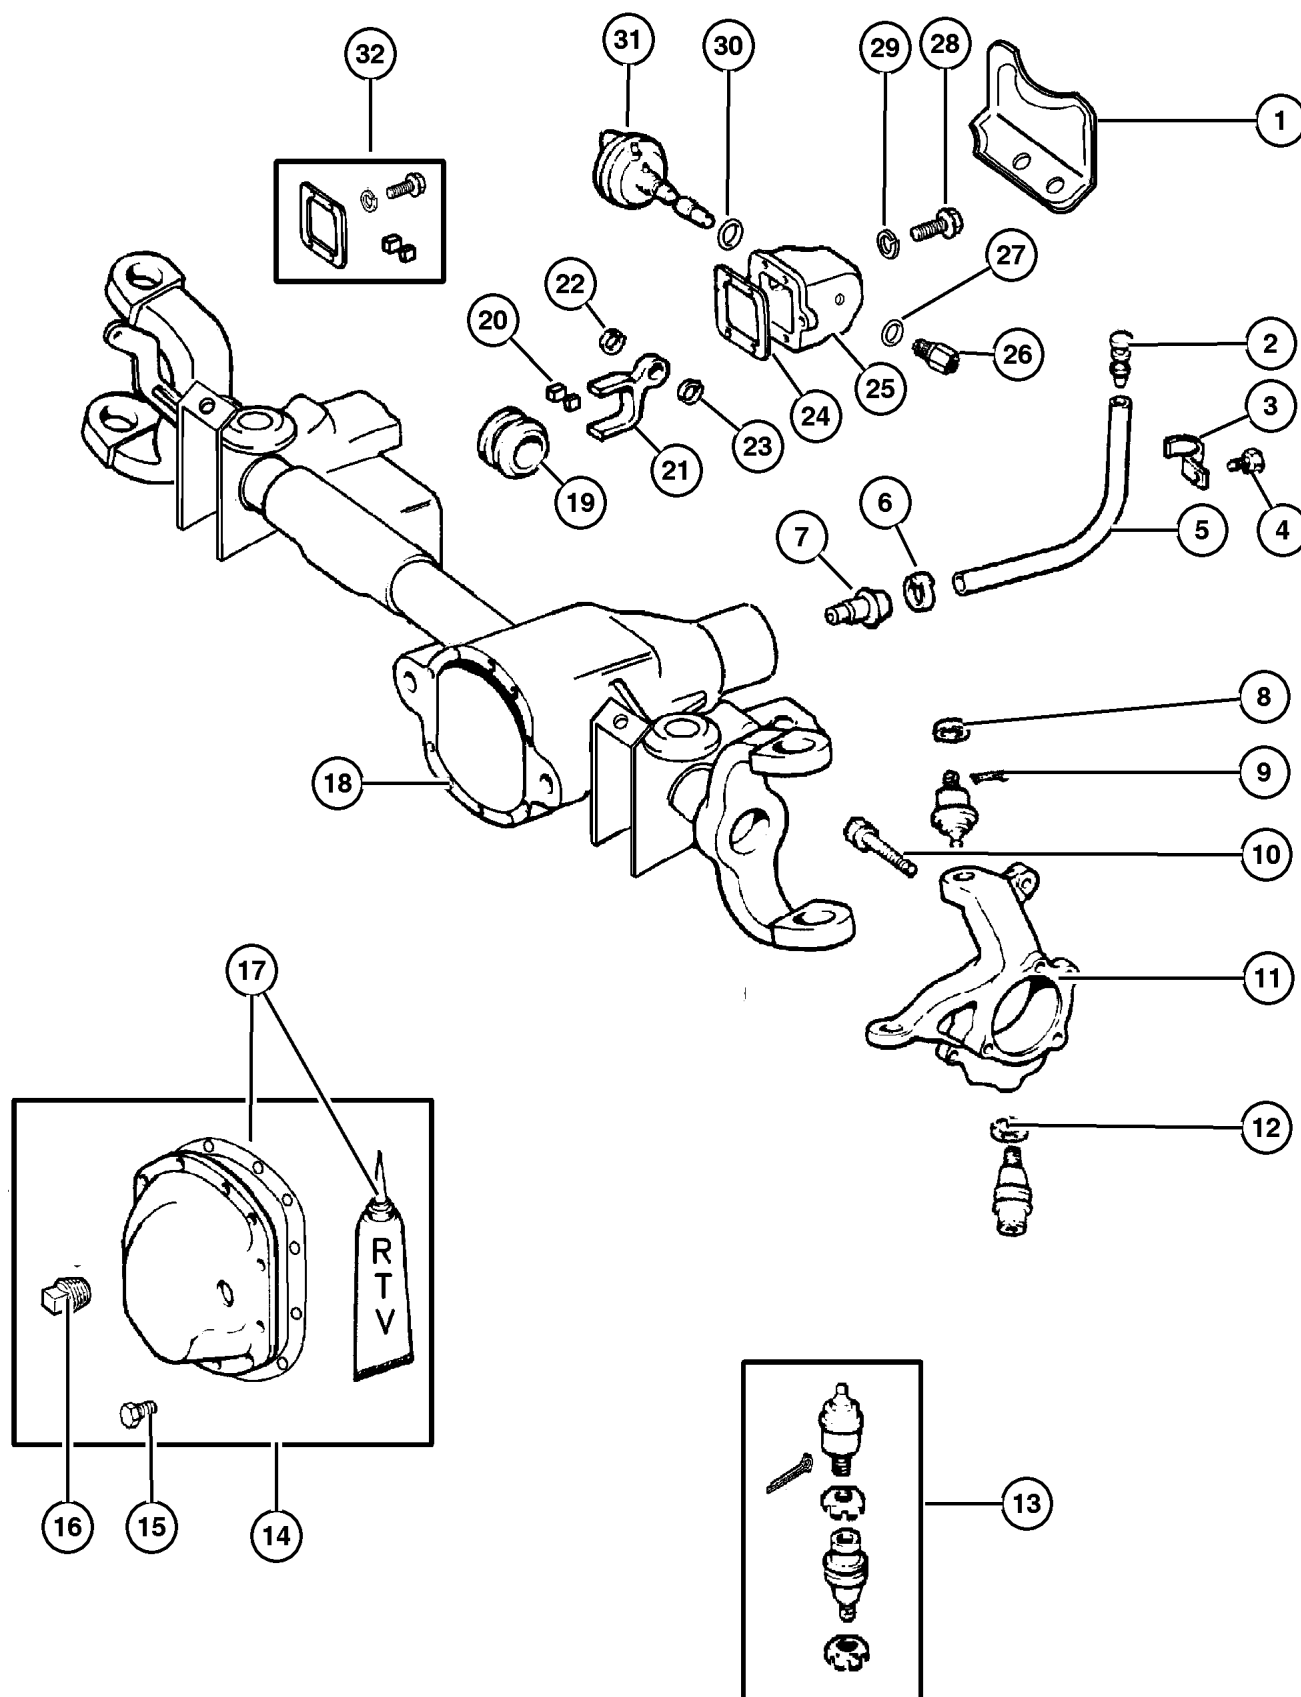Figure 002-320



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
			10		8		34		Cover
16	3640 792	1	7		33, 34				PLUG, Differential Cover
		1	8		34				Cover
17									SEALANT, RTV
	5010 884AA	1	7		33, 34				
		1	8		34				
18	5015 189AA	1	7		33, 34				HOUSING, Axle
		1	8		34				
19	5015 212AA	1	7		33, 34				COLLAR, Axle Shift
		1	8		34				
20	4137 731	2	7		33, 34				CLIP, Axle Disconnect Fork
		2	8		34				
21	5015 215AA	1	7		33, 34				FORK, Axle Shift
		1	8		34				
22	4137 728	1	7		33, 34				SNAP RING, Vacuum Motor
		1	8		34				
23	4137 729	2	7		33, 34				SNAP RING, Vacuum Motor
		2	8		34				
24	4137 732	1	7		33, 34				GASKET, Axle Disconnect Housing
		1	8		34				
25	4384 169	1	7		33, 34				COVER, Axle Disconnect
		1	8		34				
26	4289 880	1	7		33, 34				SWITCH, Hub Lock Indicator
		1	8		34				
27	5209 912	1	7		33, 34				GASKET, Axle Disconnect Switch
		1	8		34				
28	4137 734	4	7		33, 34				BOLT, Axle Disconnect Cover
		4	8		34				
29									LOCK WASHER

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Front Axle Housing,Dana Model 60,BE 7,8
Figure 002-320


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
30	4137 733	4	7		33, 34				O RING, Shaft Disconnect
		4	8		34				
	4137 726	1	7		33, 34				
		1	8		34				
31									MOTOR KIT, Axle Vacuum
	4882 682	1	7		33, 34				
32									CLIP KIT, Axle Disconnect
		1	8		34				
-33	J813 3708	1	7		33, 34				SENSOR KIT, Anti-Lock Brakes
		1	8		34				
	5015 882AA-	1	7		33, 34				
		1	8		34				

DODGE RAM QUAD CAB/CLUB CAB (BE)									
SERIES	LINE	BODY	ENGINE	TRANSMISSION					
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.					
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.					
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual					
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual					
			EAA = All Engines	DEE = 6 Speed HD Manual					
			EAG = All Gas Engines						

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

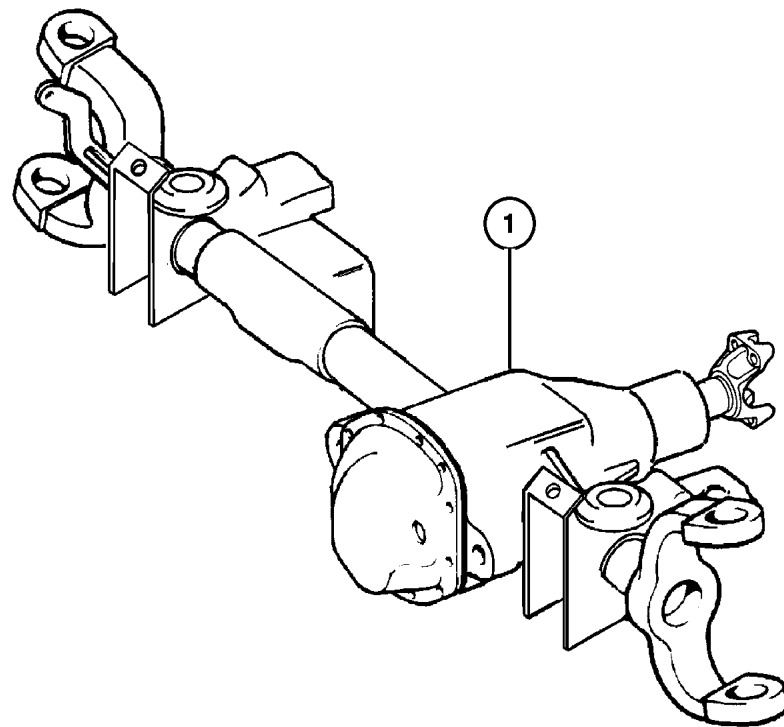Axle Assy Front
Figure 002-410




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									AXLE, Service Front
	5015 161AA	1	6						[DJC,DMD] with Tag 52070130AI, 52070143AI
	5015 170AA	1	6						[DJC,DMH] with Tag 52070132AI, 52070144AI
	5015 183AB	1	6						[DJC,DMF] with Tag 52070196AB
	5015 195AA	1	7		33, 34				[DJF,DMD] with Tag 52070136AI, 52070148AG
	5015 243AA	1	7		33, 34				[DJF,DMF] with Tag 52070137AI, 52070152AG
	5015 195AA	1	8		34				[DJF,DMD] with Tag 52070138AJ
	5015 243AA	1	8		34				[DJF,DMF] with Tag 52070139AI

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

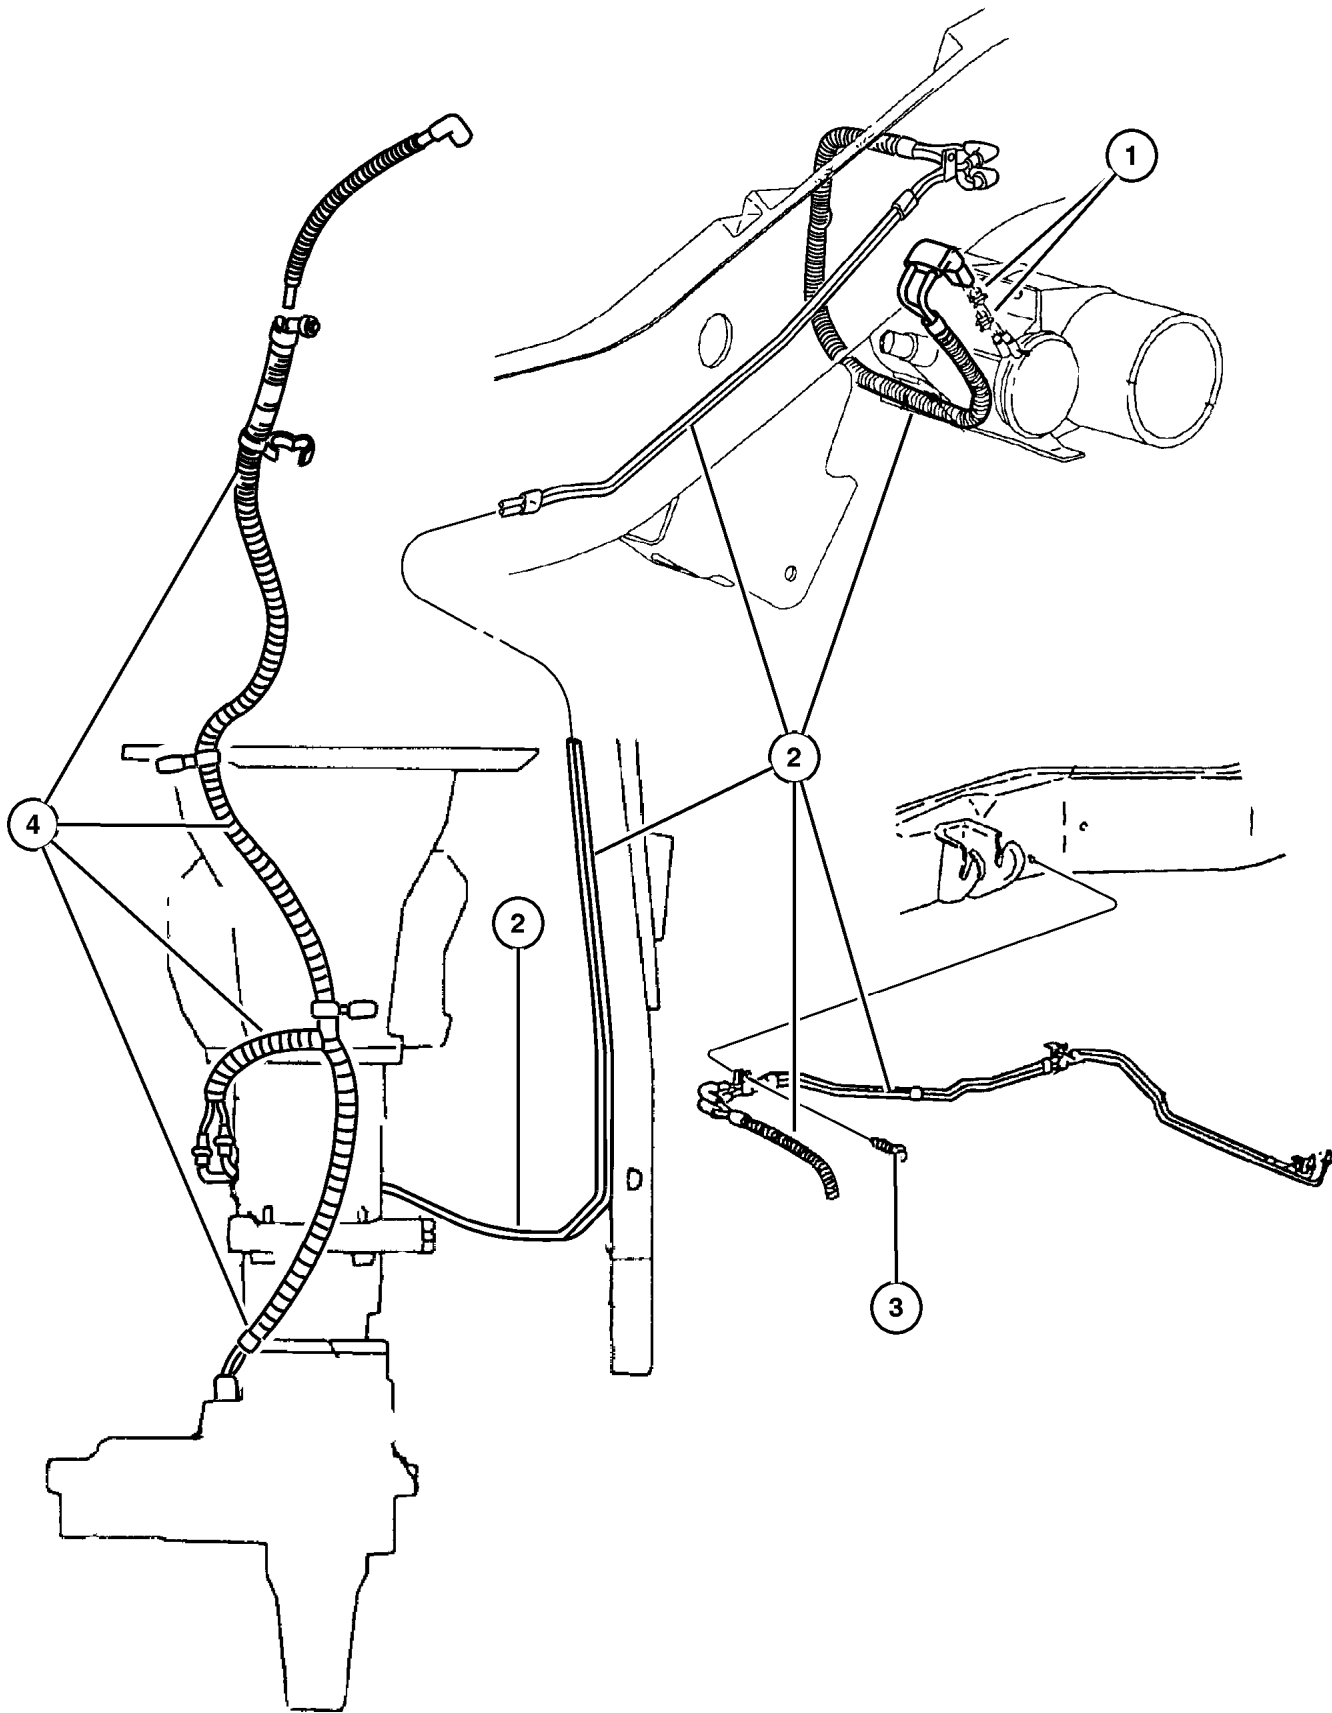Vacuum Lines,Front Axle and Transfer Case
Figure 002-510




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	6032 173	2	6, 7, 8						CLAMP, Tube, .335 Diameter, Front Axle Disconnect to Vacuum Motor
2	52105 299AB	1	6, 7, 8						HARNESS, Vacuum Front Axle
3	6503 319	3	6, 7, 8						SCREW, Hex Head, M6x1x20, From Front Axle Vacuum Disconnect
4	52105 317AB	1	6, 7, 8						Motor to Transmission HARNESS, Vacuum Front Axle

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

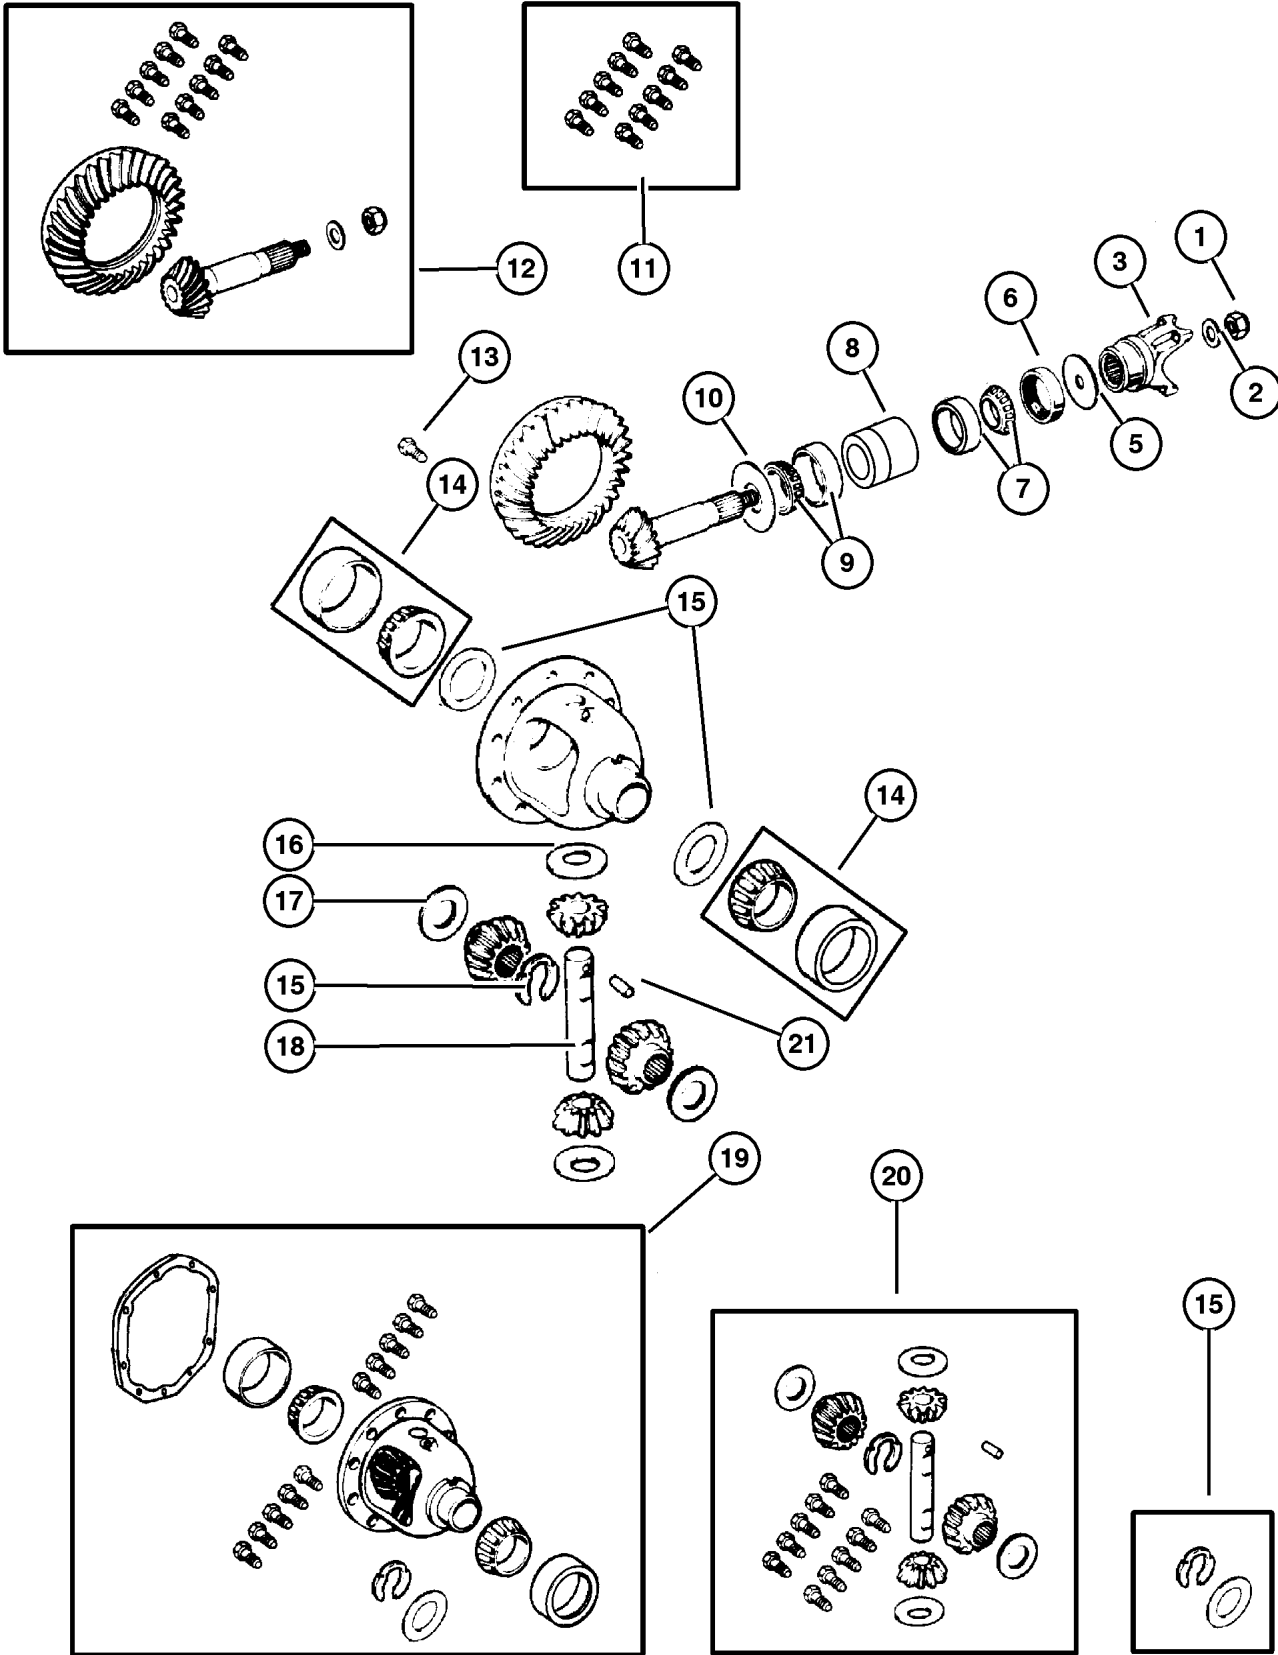Differential, Front Axle Dana Model 44,BE 6
Figure 002-610



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: DJC = Dana 44 Axle--- DMD = 3.54 Ratio--- DMH = 3.92 Ratio---DMF = 4.09 Ratio									
1	1791 575	1	6						NUT, Pinion Yoke
2	1791 576	1	6						WASHER, Pinion Yoke
3	5015 133AA	1	6						YOKE, Drive Shaft
-4	5012 453AA-	1	6						O RING, Pinion Flange, Fits Over
5	4031 974	1	6						Hub of Axle Yoke
6	5012 454AA	1	6						SLINGER, Drive Pinion
7	J812 4052	1	6						SEAL, Drive Pinion
8	4746 771	1	6						BEARING, Drive Pinion, Bearing and
9	J812 6499	1	6						Cup, Front
10	4761 647	1	6						SPACER, Drive Pinion Bearing,
11	4720 891	1	6						Crush
12									BEARING, Drive Pinion, Bearing and
	4137 749	1	6						Cup, Rear
	4506 120	1	6						SHIM KIT, Pinion Shaft
	4882 844	1	6						BOLT KIT, Consists of 10 5252503
13	5252 503	10	6						Screws
14	4746 733	1	6						GEAR KIT, Ring And Pinion
15	4137 769	1	6						3.54 Ratio
16	1791 561	2	6						3.92 Ratio
17	4137 755	2	6						4.09 Ratio
18	8350 3069	1	6						SCREW, Drive Gear
19									BEARING, Differential Case,
20									Consists of 2 Bearings and 2 Cups
21									SHIM KIT, Differential
									WASHER, Pinion Thrust
									WASHER, Differential Side Gear,
									Thrust
									SHAFT, Differential
									CASE, Differential
									3.54 Ratio
									3.92,4.09 Ratio
									GEAR KIT, Center Differential
									PIN, Differential Shaft

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005


Differential, Front Axle,Dana Model 60,BE 7,8
Figure 002-620

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:DJF = Dana 60---DMD = 3.54 Ratio---DMF = 4.10 Ratio									
1	1795 173	1	7		33, 34				NUT, Pinion Yoke
		1	8		34				
2	1795 175	1	7		33, 34				WASHER, Pinion Yoke
		1	8		34				
3	5015 190AA	1	7		33, 34				YOKE, Axle
		1	8		34				
-4	5012 847AA-	1	7		33, 34				O RING, Pinion Flange
		1	8		34				Fits Over Hub of Axle Yoke
5	4746 867	1	7		33, 34				SLINGER, Drive Pinion
		1	8		34				
6	5012 846AB	1	7		33, 34				SEAL, Drive Pinion
		1	8		34				
7	4746 604	1	7		33, 34				BEARING, Drive Pinion
		1	8		34				Bearing and Cup, Front
8	4746 606	1	7		33, 34				SPACER, Drive Pinion Bearing
		1	8		34				Crush
9	4746 603	1	7		33, 34				BEARING, Drive Pinion
		1	8		34				Bearing and Cup, Rear
10	4746 868	1	7		33, 34				SHIM KIT, Pinion Shaft
		1	8		34				
11	4762 222	1	7		33, 34				GEAR KIT, Ring And Pinion
		1	8		34				3.54 Ratio
	4864 966	1	7		33, 34				3.54 Ratio
		1	8		34				4.10 Ratio
12	4506 066	12	7		33, 34				SCREW, Hex Head
		12	8		34				Drive Gear
13									BEARING, Differential

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

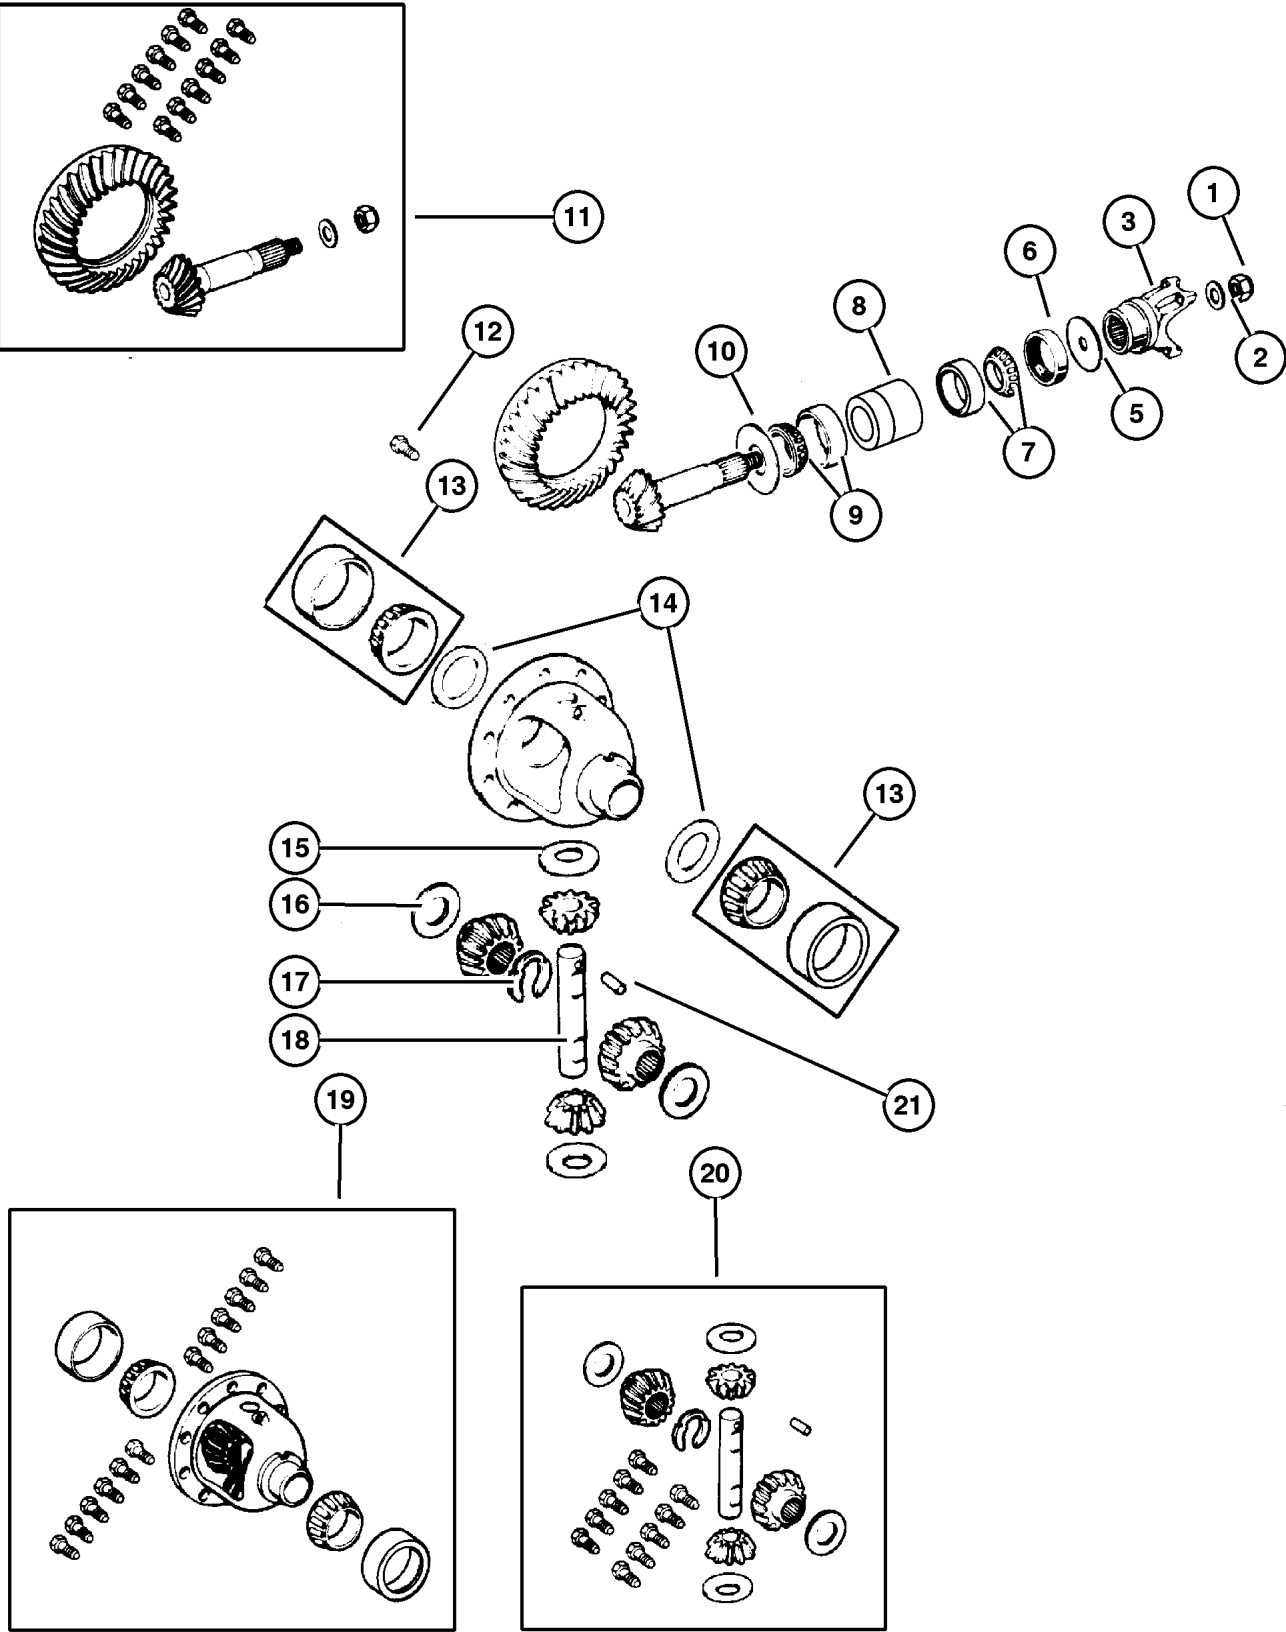September 16, 2005



Differential, Front Axle,Dana Model 60,BE 7,8
Figure 002-620

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
14	4746 605	1	7		33, 34				Consists of 2 Cups and 2 Cones
		1	8		34				Consists of 2 Cups and 2 Cones
	3898 313AB	1	7		33, 34				SHIM, Differential Bearing
		1	8		34				
15	3507 543	2	7		33, 34				WASHER
		2	8		34				Pinion, Thrust
16									WASHER, Differential Side Gear,
									[Purchase Center Differential Gear
17									Kit], (NOT SERVICED) (Not
									Serviced)
18	1922 276	1	7		33, 34				SNAP RING, Axle Shaft, [Purchase
		1	8		34				Center Differential Gear Kit], (NOT
19	5015 191AA	1	7		33, 34				SERVICED) (Not Serviced)
		1	8		34				SHAFT, Differential
20	5015 192AA	1	7		33, 34				CASE, Differential
		1	8		34				
21	4883 560AA	1	7		33, 34				GEAR KIT, Center Differential
		1	8		34				
		1	7		33, 34				ROLL PIN, Differential
		1	8		34				


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Group – 003

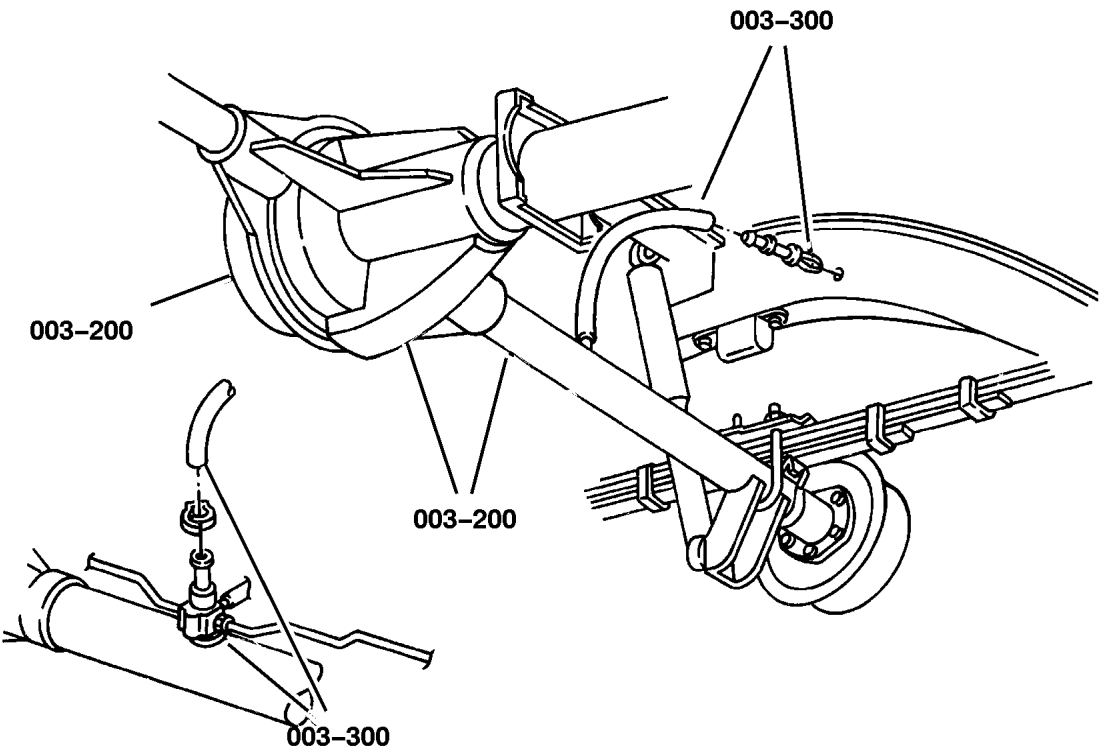Rear Axle



GROUP 3 - Rear Axle

Illustration Title Group-Fig. No.

Rear Axle




Axle Assembly,Rear,Chrysler Model 9.25,BE 1,6	Fig. 003-110
Axle Assembly,Rear,Dana Model 60,BE 2,7	Fig. 003-120
Axle Assembly,Rear,Dana Model 70,BE 2,7	Fig. 003-130
Axle Assembly,Rear,Dana Model 80,BE 2,3,7,8	Fig. 003-140

Differential and Housing

Axle,Rear,with Differential Parts,Chrysler 9.25,BE 1,6	Fig. 003-210
Axle,Rear,with Differential Parts,Dana Model 60,BE 2,7	Fig. 003-220
Axle,Rear,with Differential Parts,Dana Model 70,BE 2,7	Fig. 003-230
Axle,Rear,with Differential Parts,Dana Model 80,BE 2,3,7,8	Fig. 003-240

Rear Axle Vent

Vent, Rear Axle	Fig. 003-310
-----------------	--------------

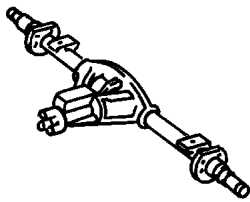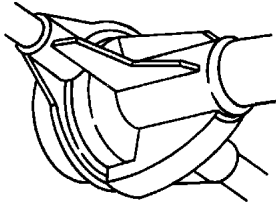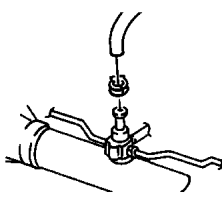
003-100 Rear Axle	003-200 Differential and Housing	003-300 Rear Axle Vent	
			

Axle Assembly,Rear,Chrysler Model 9.25,BE 1,6
Figure 003-110

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note: DRB = 9.25 Chrysler Axle Light Duty---DMC = 3.21 Ratio---DMD = 3.55 Ratio---DMH = 3.92 Ratio---DMF= 4.10 Ratio---DSA = Anti-Spin Differential

1									AXLE, Service Rear
	5015 360AA	1	1						Tag #52069941AA [DMC,-DSA]
	5015 388AA	1	1						Tag #52069943AA [DMD,+DSA]
	5015 375AA	1	1						Tag #52069942AA [DMD,-DSA]
	5015 404AA	1	1						Tag #52069944AA [DMH,+DSA]
	5015 417AA	1	6						Tag #52069944AA [DMD,+DSA]
	5015 411AA	1	6						Tag #52069945AA [DMD,-DSA]
	5015 374AA	1	6			31, 33			Tag #52069999AA [DMF,+DSA]
	5015 418AA	1	6						Tag #52069947AA [DMH,+DSA]

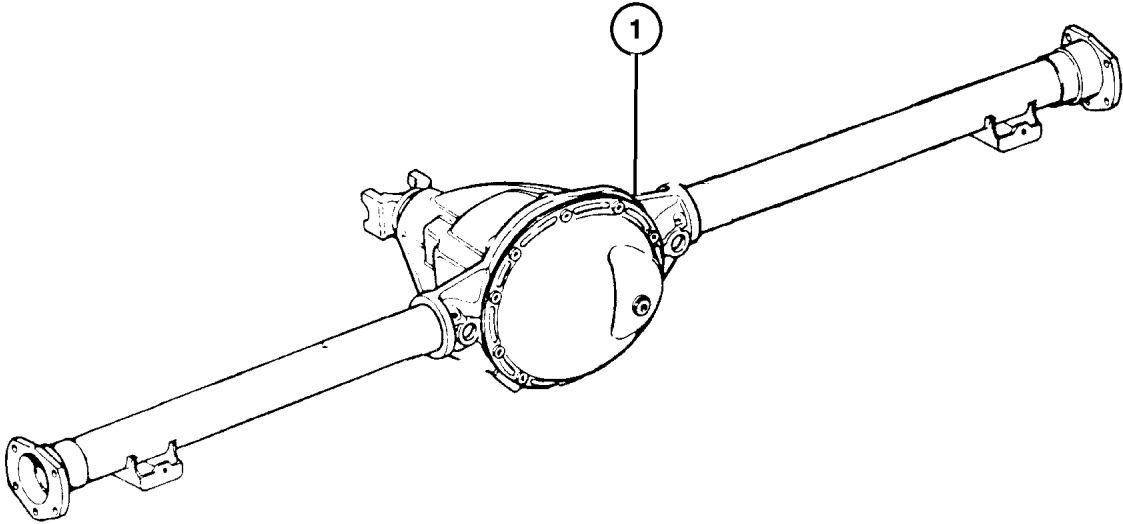

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year


September 16, 2005

Axle Assembly,Rear,Dana Model 60,BE 2,7
Figure 003-120

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:DRC = 5500LB Axle---DRD = 6200LB. Axle---DMD = 3.54 Ratio---DMF =4.09 Ratio---DSA = Limited Slip Differential or Trac-
Lok---Check the VIN number for the 'Z' codes on the suspension.

1									AXLE, Service Rear
	5015 461AB	1	2		33, 34				Tag #52069454AG [DMD,-DSA]
	5015 560AB	1	2		33, 34				Tag #52069455AG [DMF,+DSA]
	5015 673AB	1	7		33, 34				Tag #52069456AI [DMD,-DSA]
	5015 674AB	1	7		33, 34				Tag #52069457AI [DMF,+DSA]

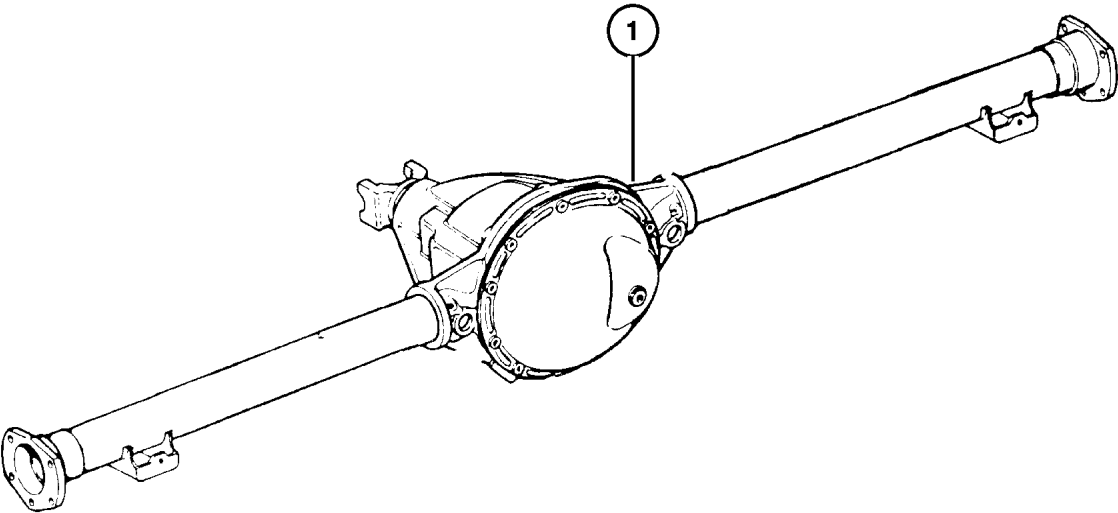

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year


September 16, 2005

Axle Assembly,Rear,Dana Model 70,BE 2,7
Figure 003-130

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:DRE =Dana 70 Rear Axle---DMD=3.54 Ratio---DMF =4.10 Ratio---DSA = Limited Slip Differential

1									AXLE, Service Rear
	5015 589AB	1	2		33, 34				Tag #52069458AH [DMD,-DSA]
	5015 601AB	1	2		33, 34				Tag #52069459AH [DMD,+DSA]
	5015 604AB	1	2		33, 34				Tag #52069460AH [DMF,-DSA]
	5015 605AB	1	2		33, 34				Tag #52069467AH [DMF,+DSA]
	5015 676AB	1	7		33, 34				Tag #52069468AJ [DMD,-DSA]
	5015 677AB	1	7		33, 34				Tag #52069469AJ [DMD,+DSA]
	5015 687AB	1	7		33, 34				Tag #52069470AJ [DMF,-DSA]
	5015 688AB	1	7		33, 34				Tag #52069471AJ [DMF,+DSA]

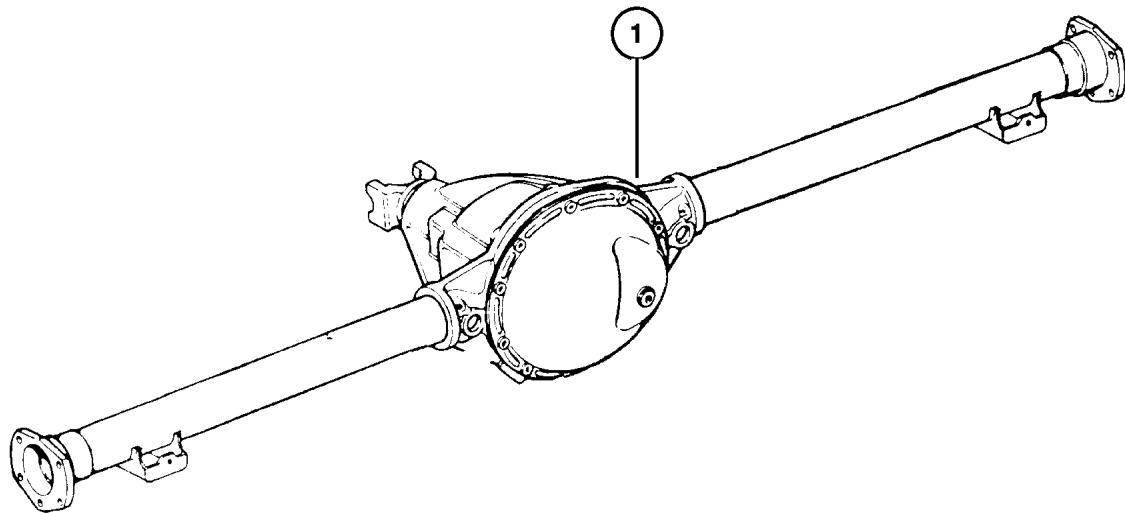


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

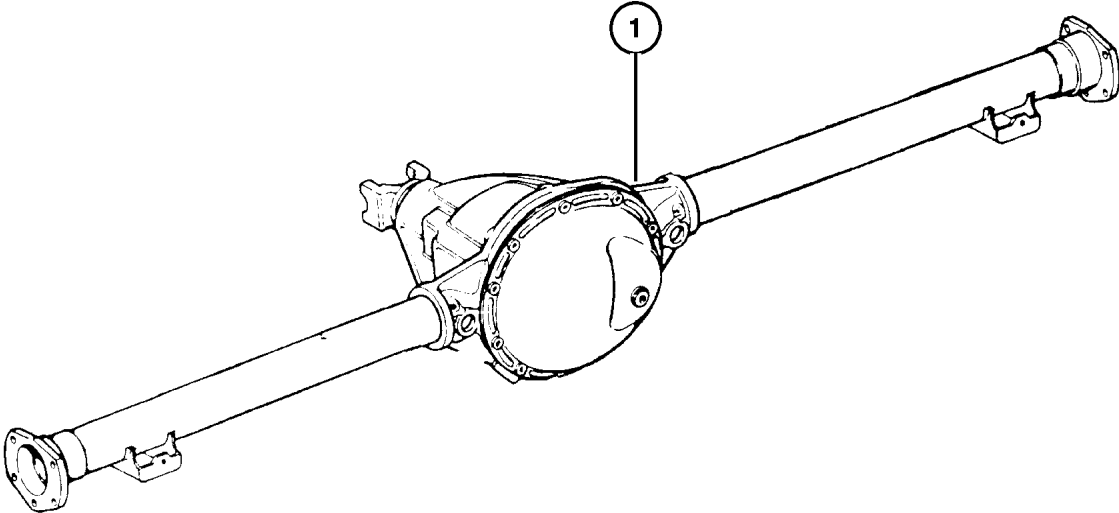Axle Assembly,Rear,Dana Model 80,BE 2,3,7,8
Figure 003-140




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:DRL = Dana 80 Axle---DMD = 3.54 Ratio---DMF = 4.10 Ratio---DSA = Limited Slip Differential---WLA = Dual Rear Wheels									
1									AXLE, Service Rear
	5015 615AB	1	2		33, 34				Tag #52069472AG [DMD,-DSA]
	5015 620AB	1	2		33, 34				Tag #52069473AG [DMD,+DSA]
	5015 621AB	1	2		33, 34				Tag #52069474AG [DMF,-DSA]
	5015 637AB	1	2		33, 34				Tag #52069475AG [DMF,+DSA]
	5015 642AB	1	3		34				Tag #52069480AH [DMD,-DSA]
	5015 645AB	1	3		34				Tag #52069481AH [DMD,+DSA]
	5015 647AB	1	3		34				Tag #52069482AH [DMF,-DSA]
	5015 648AB	1	3		34				Tag #52069483AH [DMF,+DSA]
	5015 691AB	1	7		33, 34				Tag #52069476AI [DMD,-DSA]
	5015 692AB	1	7		33, 34				Tag #52069477AI [DMD,+DSA]
	5015 699AB	1	7		33, 34				Tag #52069478AI [DMF,-DSA]
	5015 700AB	1	7		33, 34				Tag #52069479AI [DMF,+DSA]
	5015 704AB	1	8		34				Tag #52069484AH [DMD,-DSA]
	5015 710AB	1	8		34				Tag #52069485AH [DMD,+DSA]
	5015 730AB	1	8		34				Tag #52069486AH [DMF,-DSA]
	5015 733AB	1	8		34				Tag #52069487AH [DMF,+DSA]

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

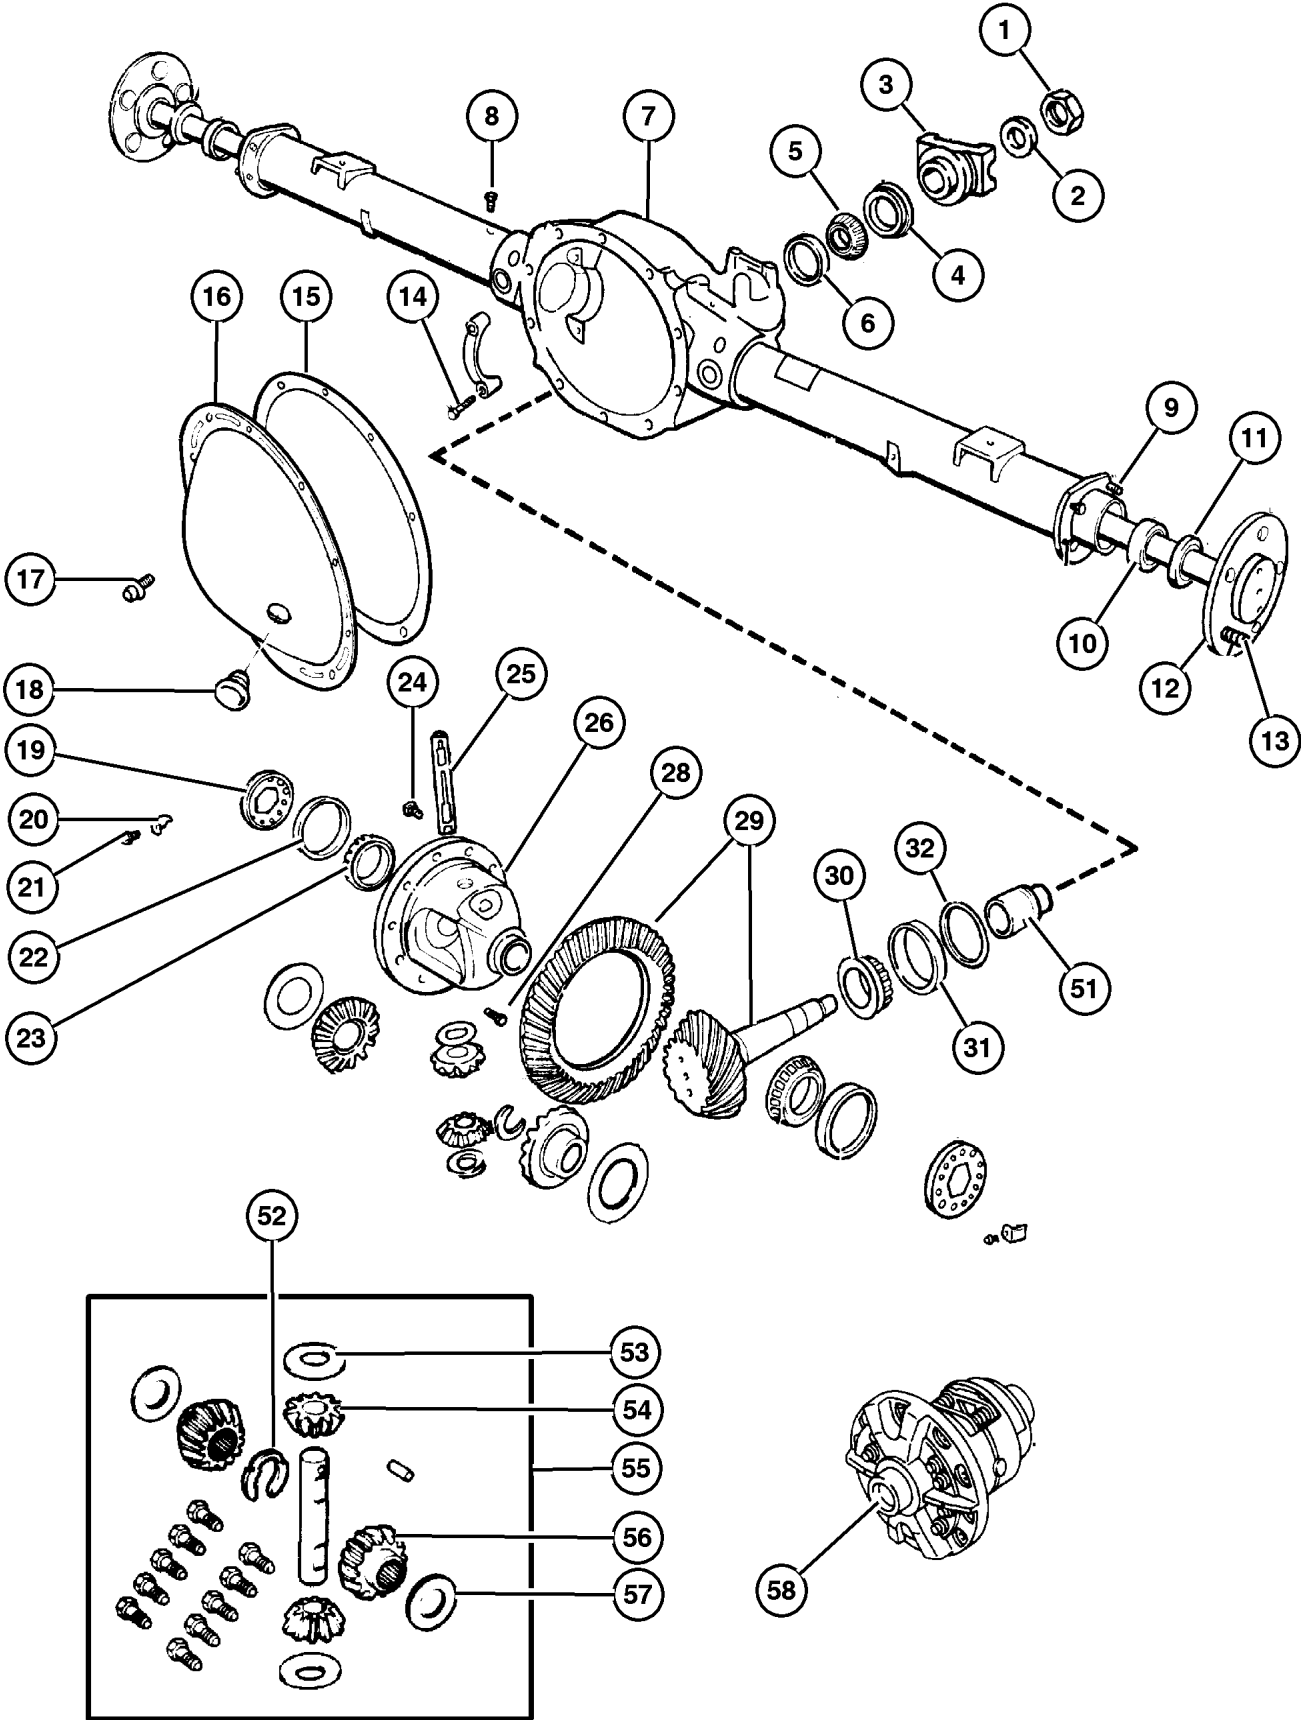Axle,Rear,with Differential Parts,Chrysler 9.25,BE 1,6
Figure 003-210




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:DRB =9.25 Chrysler Axle---DMC= 3.21 Ratio---DMD=3.55 Ratio---DMH=3.92 Ratio---DMF=4.10 Ratio---DSA= Anti-Spin									
Differential									
1	6028 041	1	1						NUT, Pinion Yoke
		1	6						
2	2070 117	1	1						WASHER, Pinion Yoke
		1	6						
3	5210 5064	1	1						FLANGE, Driveshaft Yoke
		1	6						
4	52070 340AA	1	1						SEAL, Drive Pinion
		1	6						
5	1820 552	1	1						BEARING, Drive Pinion
		1	6						Front
6	1820 551	1	1						CUP, Drive Pinion Bearing
		1	6						Front
7	5015 359AA	1	1						HOUSING, Rear Axle
	5015 373AA	1	6						
8	4137 696AB	1							BOLT, Axle Vent
9	3723 668	8	1						STUD
		8	6						Axle Housing to Backing Plate
10	3507 898AB	2	1						BEARING, Wheel
		2	6						
11	4137 426	2	1						SEAL, Axle Drive Shaft
		2	6						
12	5206 7614	2	1						SHAFT, Axle
		2	6						
13	6034 731	1	1						STUD, Wheel
		1	6						
14									SCREW, Hex Head, .50-13x2.38

DODGE RAM QUAD CAB/CLUB CAB (BE)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.	
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.	
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual	
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual	
			EAA = All Engines	DEE = 6 Speed HD Manual	
			EAG = All Gas Engines		

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

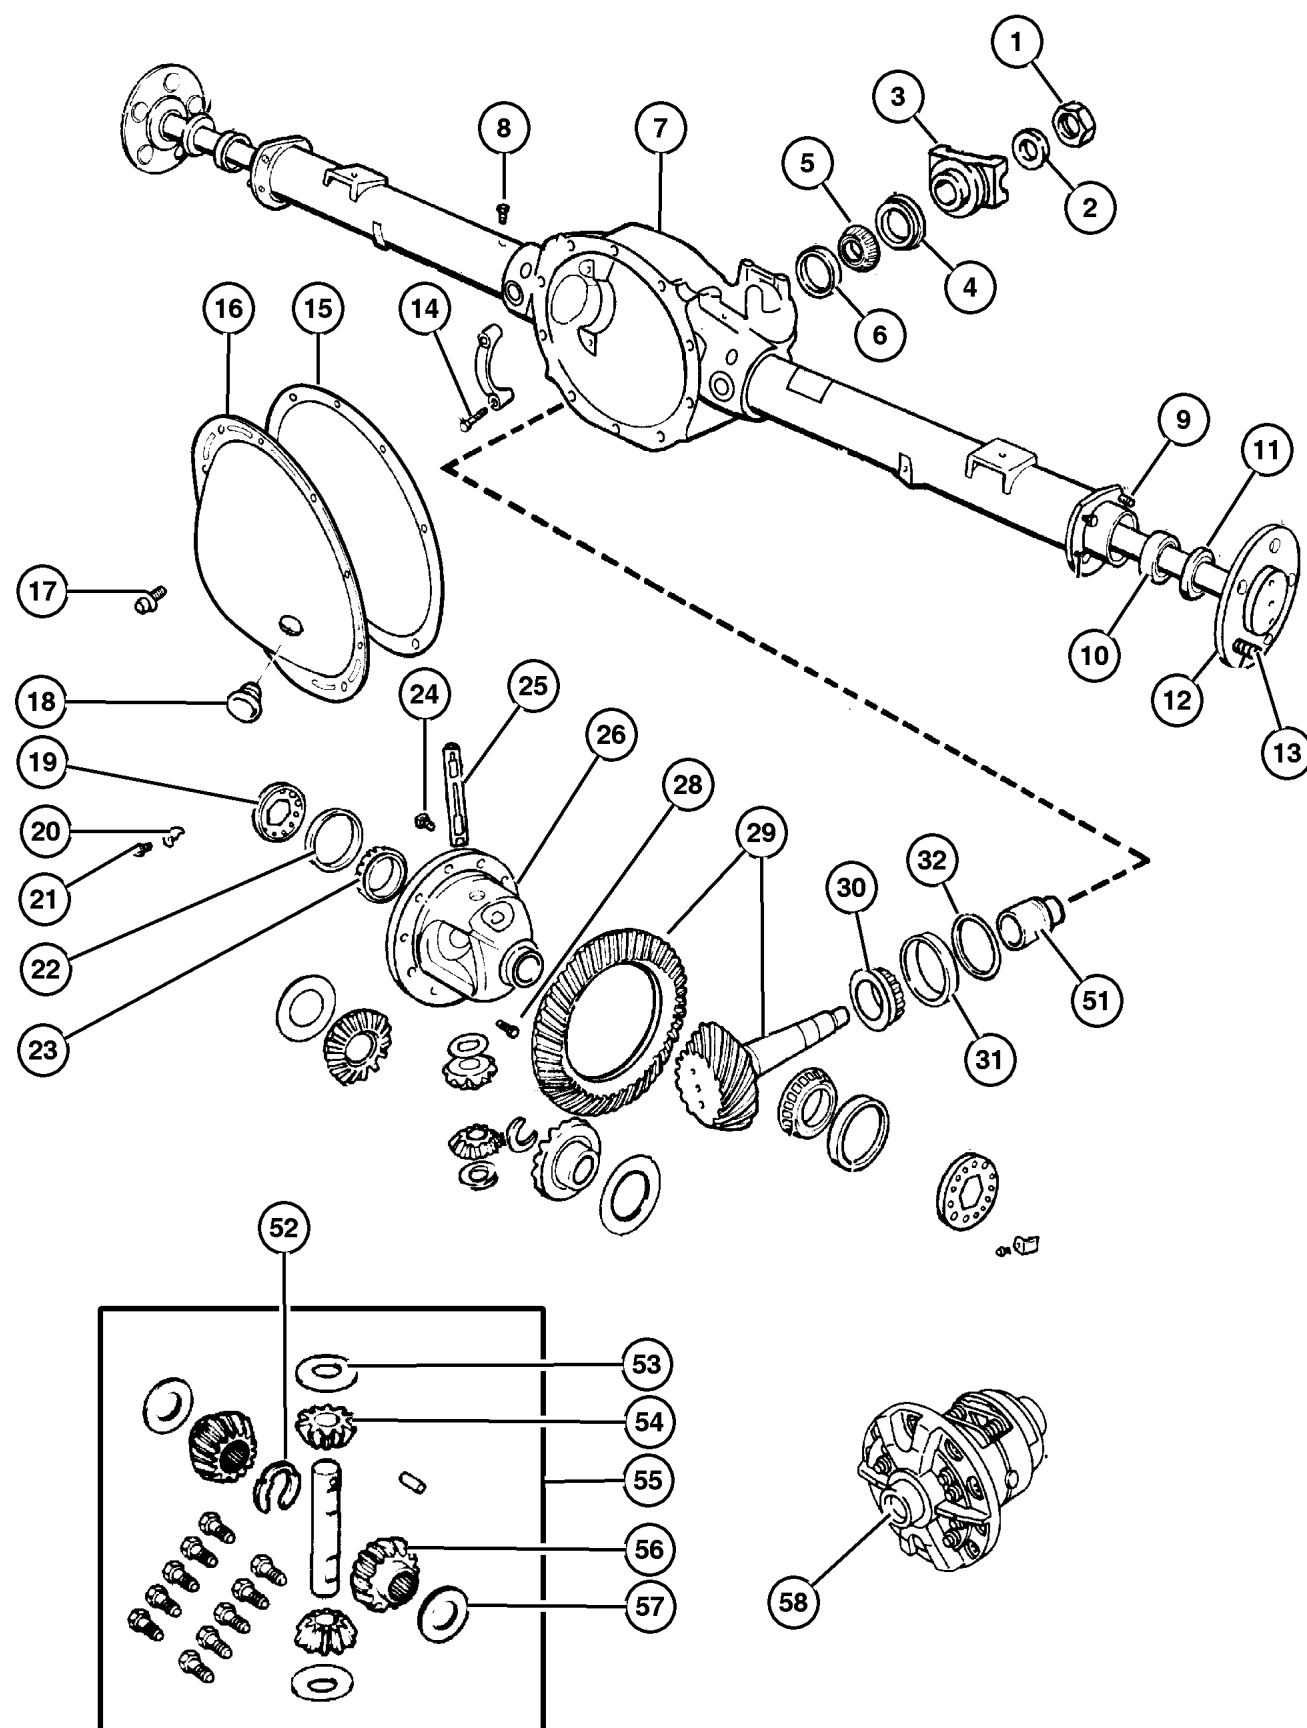Axle,Rear,with Differential Parts,Chrysler 9.25,BE 1,6
 Figure 003-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
15	3432 695	4	1						Carrier Bearing Cap Screws
		4	6						Carrier Bearing Cap Screws
	5010 884AA	1	1						SEALANT, RTV
16		1	6						
	4384 293AC	1	1						COVER, Differential
17		1	6						
									SCREW AND WASHER, Hex Flange
18	6033 043	12	1						Head, .312-18x.562
		12	6						Differential, Cover
									Differential, Cover
19									PLUG, Differential Cover
	3723 687	1	1						
20		1	6						
	3507 723	2	1						ADJUSTER, Differential Bearing
21		2	6						
	3723 858	2	1						LOCK, Differential Bearing
22		2	6						
									SCREW AND WASHER, Hex Head, .25-20x.50
23	6023 092	2	1						Differential Bearing Lock
		2	6						Differential Bearing Lock
24									CUP, Differential Side Bearing
	3723 148	2	1						
25		2	6						
	3723 149	2	1						BEARING, Differential
26		2	6						
									SCREW, Hex Flange Head, .437-20x.88
27	6036 054AA	12	1						Ring Gear Attaching
		12	6						Ring Gear Attaching
28									SHAFT, Differential
	1633 928	1	1						[-DSA]
29		1	6						[-DSA]
	4384 222	1	1						CASE, Differential
30									[-DSA]


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

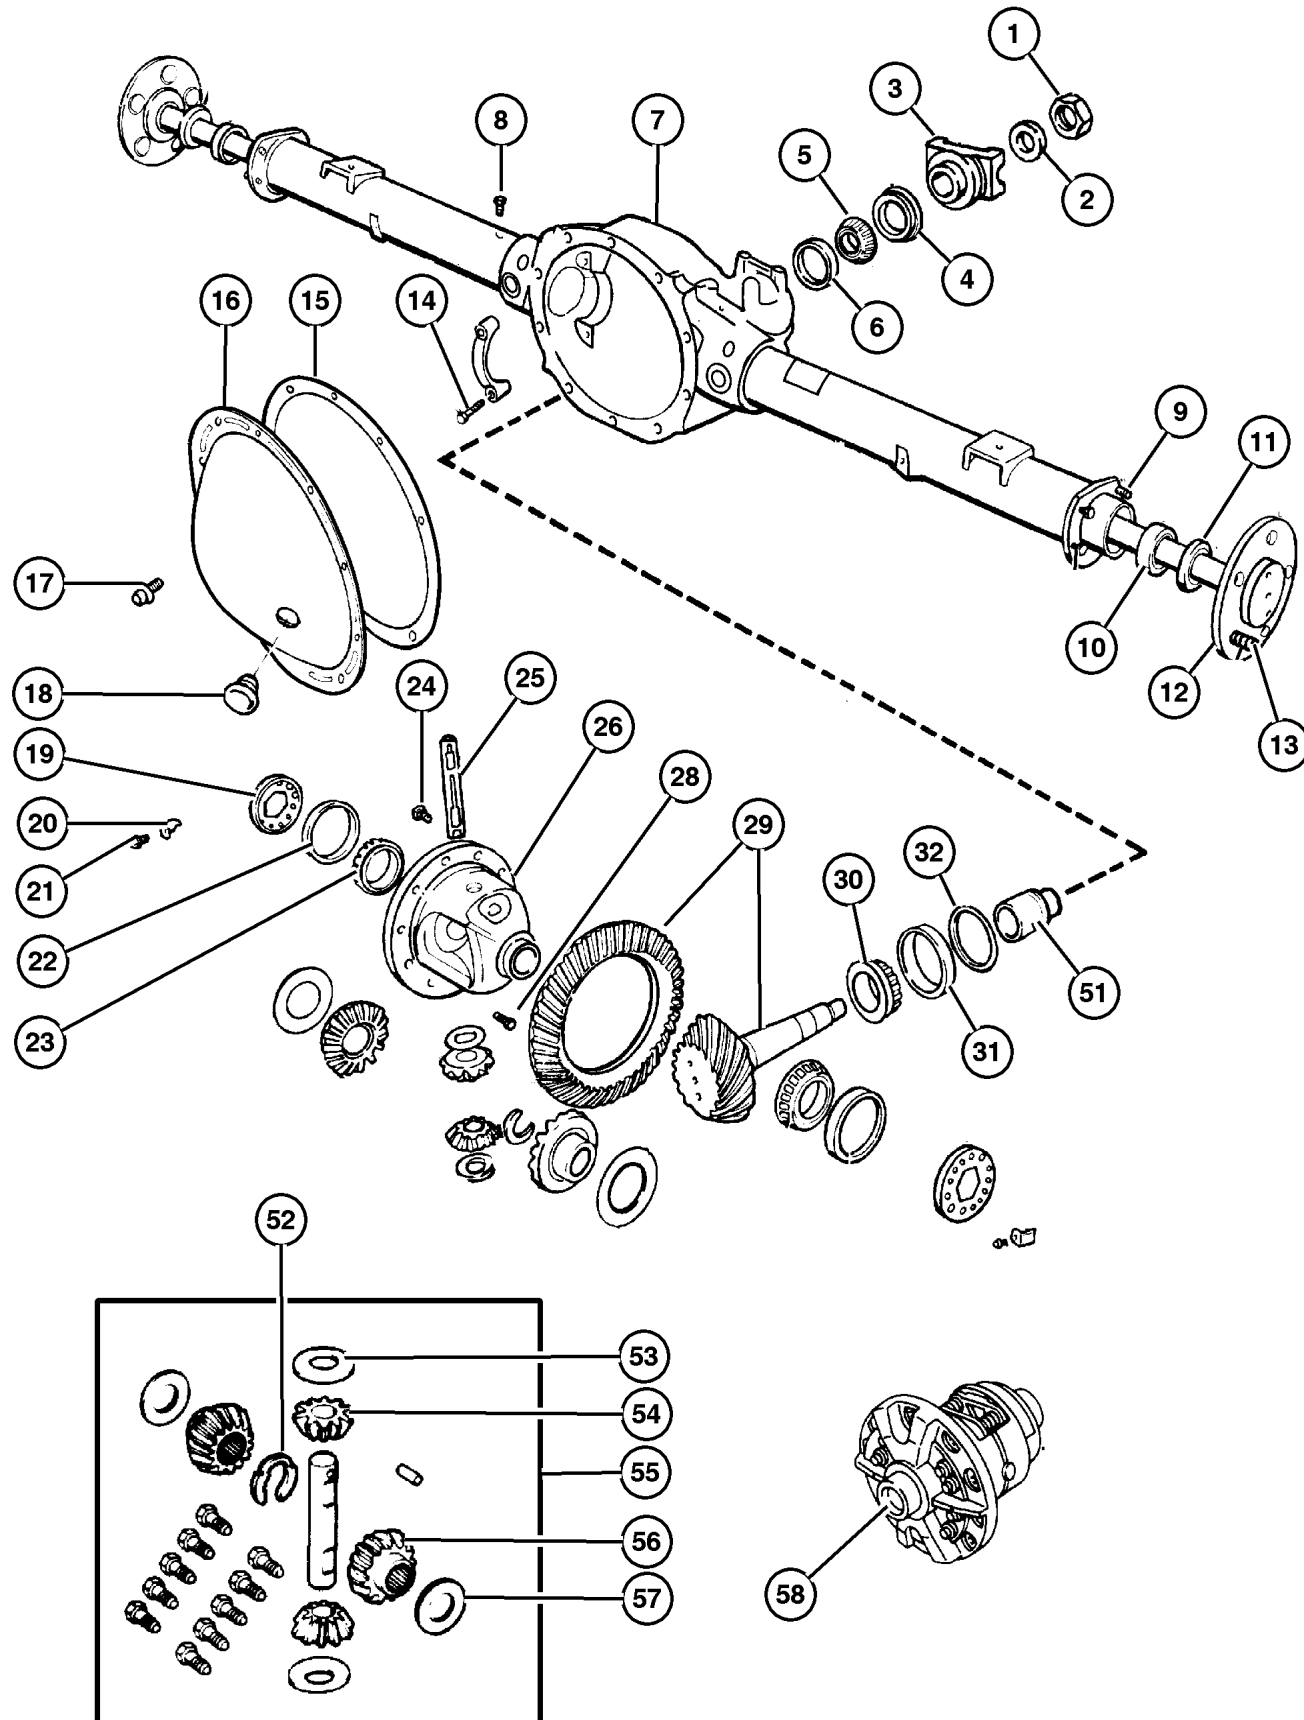Axle,Rear,with Differential Parts,Chrysler 9.25,BE 1,6
Figure 003-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	6						[-DSA]
-27									TONE RING, Sensor
	4384 227	1	1						
		1	6						
28									SCREW, Hex Head, .312-18x1.80
	3507 724	2	1						Differential Shaft Lock[-DSA]
		2	6						Differential Shaft Lock[-DSA]
29									GEAR KIT, Ring And Pinion
	5015 358AA	1	1						[DMC]
	5010 322AA	1	1						[DMD]
	5010 321AA	1	1						[DMH]
	5010 322AA	1	6						[DMD]
	5010 321AA	1	6						[DMH]
	5015 371AA	1	6		31, 33				[DMF]
30									BEARING, Drive Pinion
	2852 731	1	1						Rear
		1	6						Rear
31									CUP, Drive Pinion Bearing
	2852 732	1	1						Rear
		1	6						Rear
32									SHIM, Drive Pinion Bearing, .020
	3432 320	1	1						
		1	6						
-33									SHIM, Drive Pinion Bearing, .021
	3432 321	1	1						
		1	6						
-34									SHIM, Drive Pinion Bearing, .022
	3432 322	1	1						
		1	6						
-35									SHIM, Drive Pinion Bearing, .023
	3432 323	1	1						
		1	6						
-36									SHIM, Drive Pinion Bearing, .024
	3432 324	1	1						
		1	6						
-37									SHIM, Drive Pinion Bearing, .025
	3432 325	1	1						
		1	6						
-38									SHIM, Drive Pinion Bearing, .026
	3432 326	1	1						

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

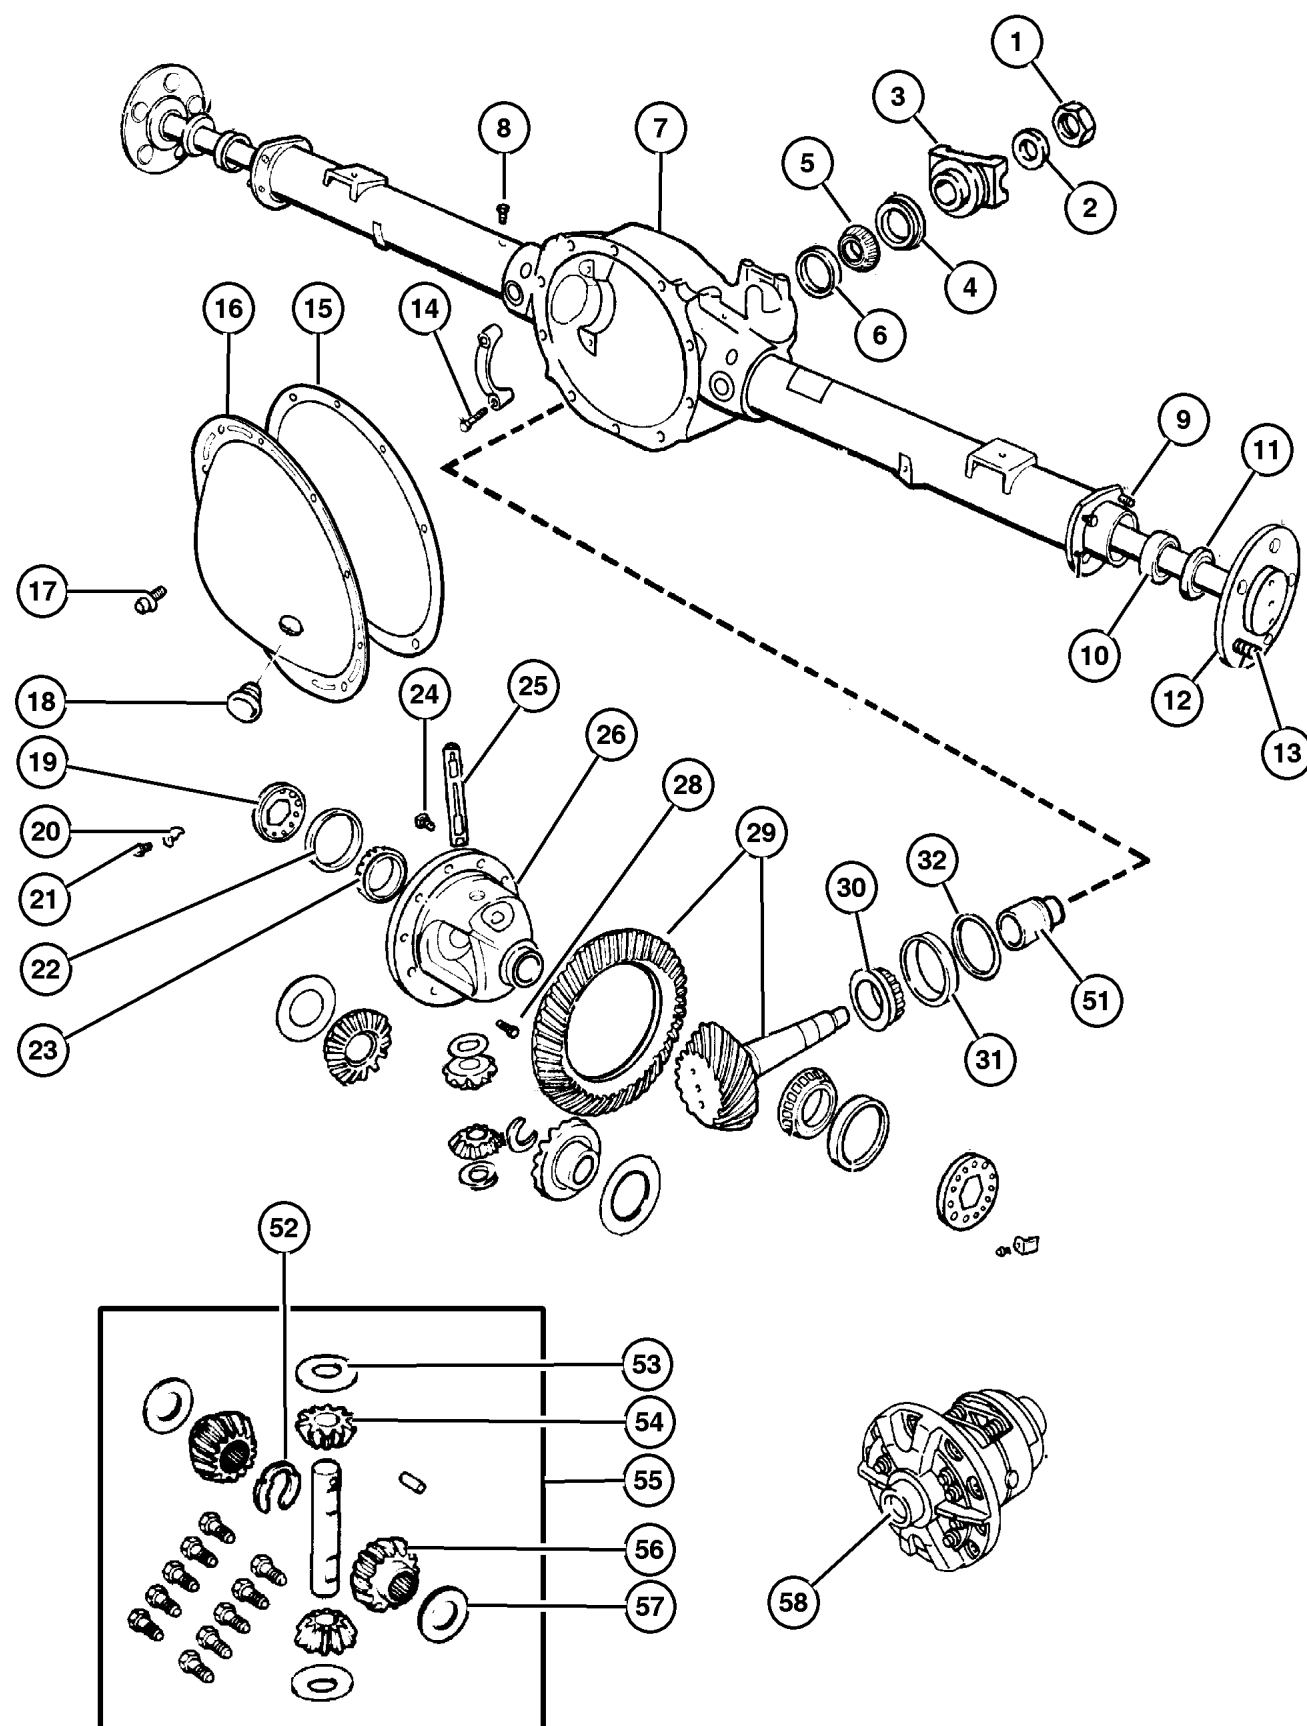
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Axle,Rear,with Differential Parts,Chrysler 9.25,BE 1,6
 Figure 003-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	6						
-39	3432 327	1	1						SHIM, Drive Pinion Bearing, .027
		1	6						
-40	3432 328	1	1						SHIM, Drive Pinion Bearing, .028
		1	6						
-41	3432 329	1	1						SHIM, Drive Pinion Bearing, .029
		1	6						
-42	3432 330	1	1						SHIM, Drive Pinion Bearing, .030
		1	6						
-43	3432 331	1	1						SHIM, Drive Pinion Bearing, .031
		1	6						
-44	3432 332	1	1						SHIM, Drive Pinion Bearing, .032
		1	6						
-45	3432 333	AR	1						SHIM, Drive Pinion Bearing, .033
		AR	6						
-46	3432 334	1	1						SHIM, Drive Pinion Bearing, .034
		1	6						
-47	3432 335	1	1						SHIM, Drive Pinion Bearing, .035
		1	6						
-48	3432 336	1	1						SHIM, Drive Pinion Bearing, .036
		1	6						
-49	3432 337	1	1						SHIM, Drive Pinion Bearing, .037
		1	6						
-50	3432 338	1	1						SHIM, Drive Pinion Bearing, .038
		1	6						
51	3507 678	1	1						SPACER, Drive Pinion Bearing Crush
		1	6						Crush
52									LOCK, Drive Shaft

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

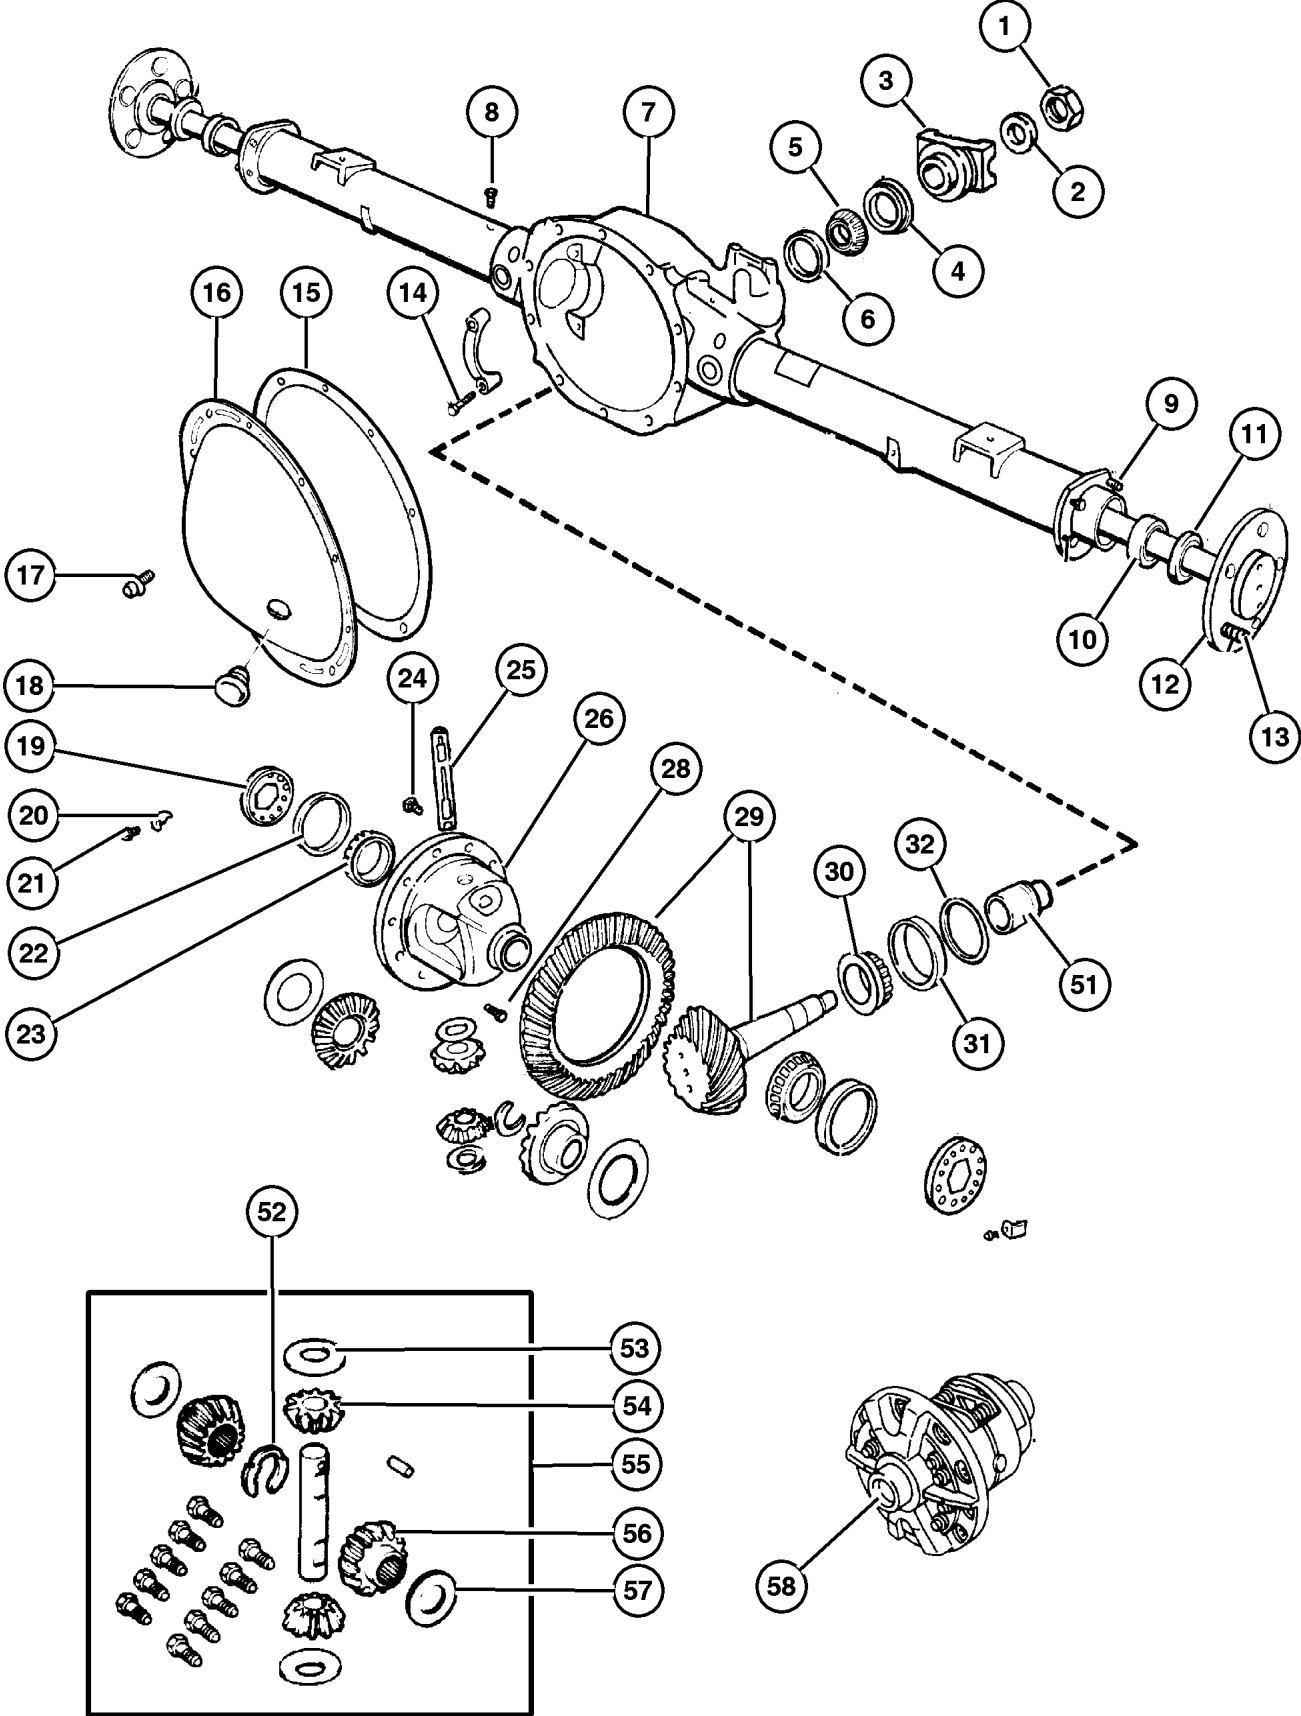
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Axle,Rear,with Differential Parts,Chrysler 9.25,BE 1,6
Figure 003-210




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4137 669	2	1						
		2	6						
53	3507 641	2	1						WASHER, Pinion Thrust
		2	6						
54									PINION, Differential, Serviced in Differential GEAR PACKAGE, (NOT SERVICED) (Not Serviced)
55									GEAR PACKAGE, Differential
	4798 912	1	1						
		1	6						
56									GEAR, Differential, Serviced in Differential GEAR PACKAGE, (NOT SERVICED) (Not Serviced)
57									WASHER PACKAGE, Side Gear Thrust
	4131 294	1	1						
		1	6						
58	5206 8450	1	1						CASE, Differential [+DSA]
		1	6						[+DSA]

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

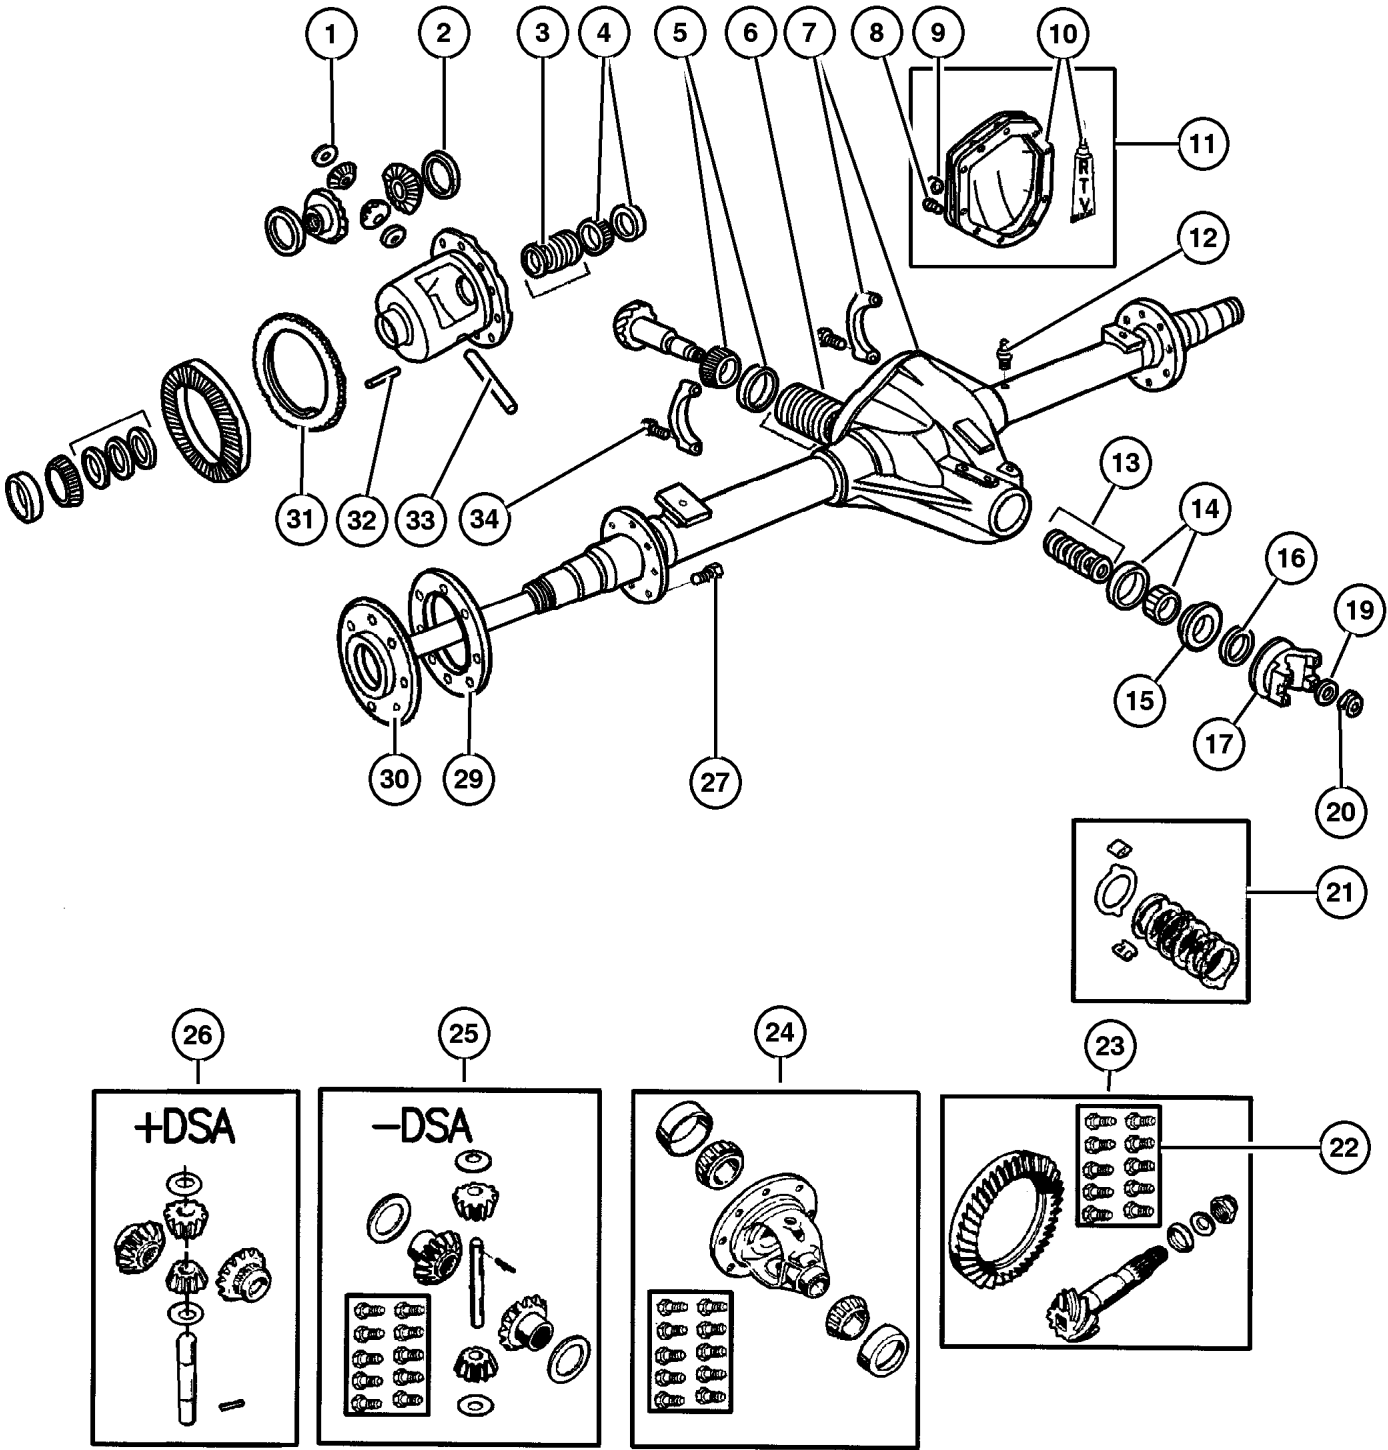Axle,Rear,with Differential Parts,Dana Model 60,BE 2,7
Figure 003-220



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: DRD = Dana Model 60---DMD = 3.55 Ratio---DMF = 4.09 Ratio---DSA = Limited Slip Differential									
1	3507 543	2	2		33, 34				WASHER Differential Pinion Gear Thrust
		2	7		33, 34				Differential Pinion Gear Thrust
2	2961 848	2	2		33, 34				WASHER Differential Side Gear Thrust
		2	7		33, 34				Differential Side Gear Thrust
3	3898 313AB	1	2		33, 34				SHIM, Differential Bearing Bearing Adjusting
		1	7		33, 34				Bearing Adjusting
4	4746 605	1	2		33, 34				BEARING, Differential
		1	7		33, 34				
5	4746 603	1	2		33, 34				BEARING, Drive Pinion Rear
		1	7		33, 34				Rear
6	4746 868	1	2		33, 34				SHIM KIT, Pinion Shaft
		1	7		33, 34				
7	5015 457AA	1	2		33, 34				HOUSING, Rear Axle
	5015 672AA	1	7		33, 34				
8	2952 474	10	2		33, 34				BOLT, Hex Flange Head Cover
		10	7		33, 34				Cover
9	3640 792	1	2		33, 34				PLUG, Differential Cover Cover
		1	7		33, 34				Cover
10	5010 884AA	1	2		33, 34				SEALANT, RTV
		1	7		33, 34				
11	4773 402	1	2		33, 34				COVER, Differential
	4773 403	1	7		33, 34				
12	4137 696AB	1							BOLT, Axle Vent
13	4746 606	1	2		33, 34				SPACER, Drive Pinion Bearing Crush
		1	7		33, 34				Crush
14	4746 604	1	2		33, 34				BEARING, Drive Pinion Front


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

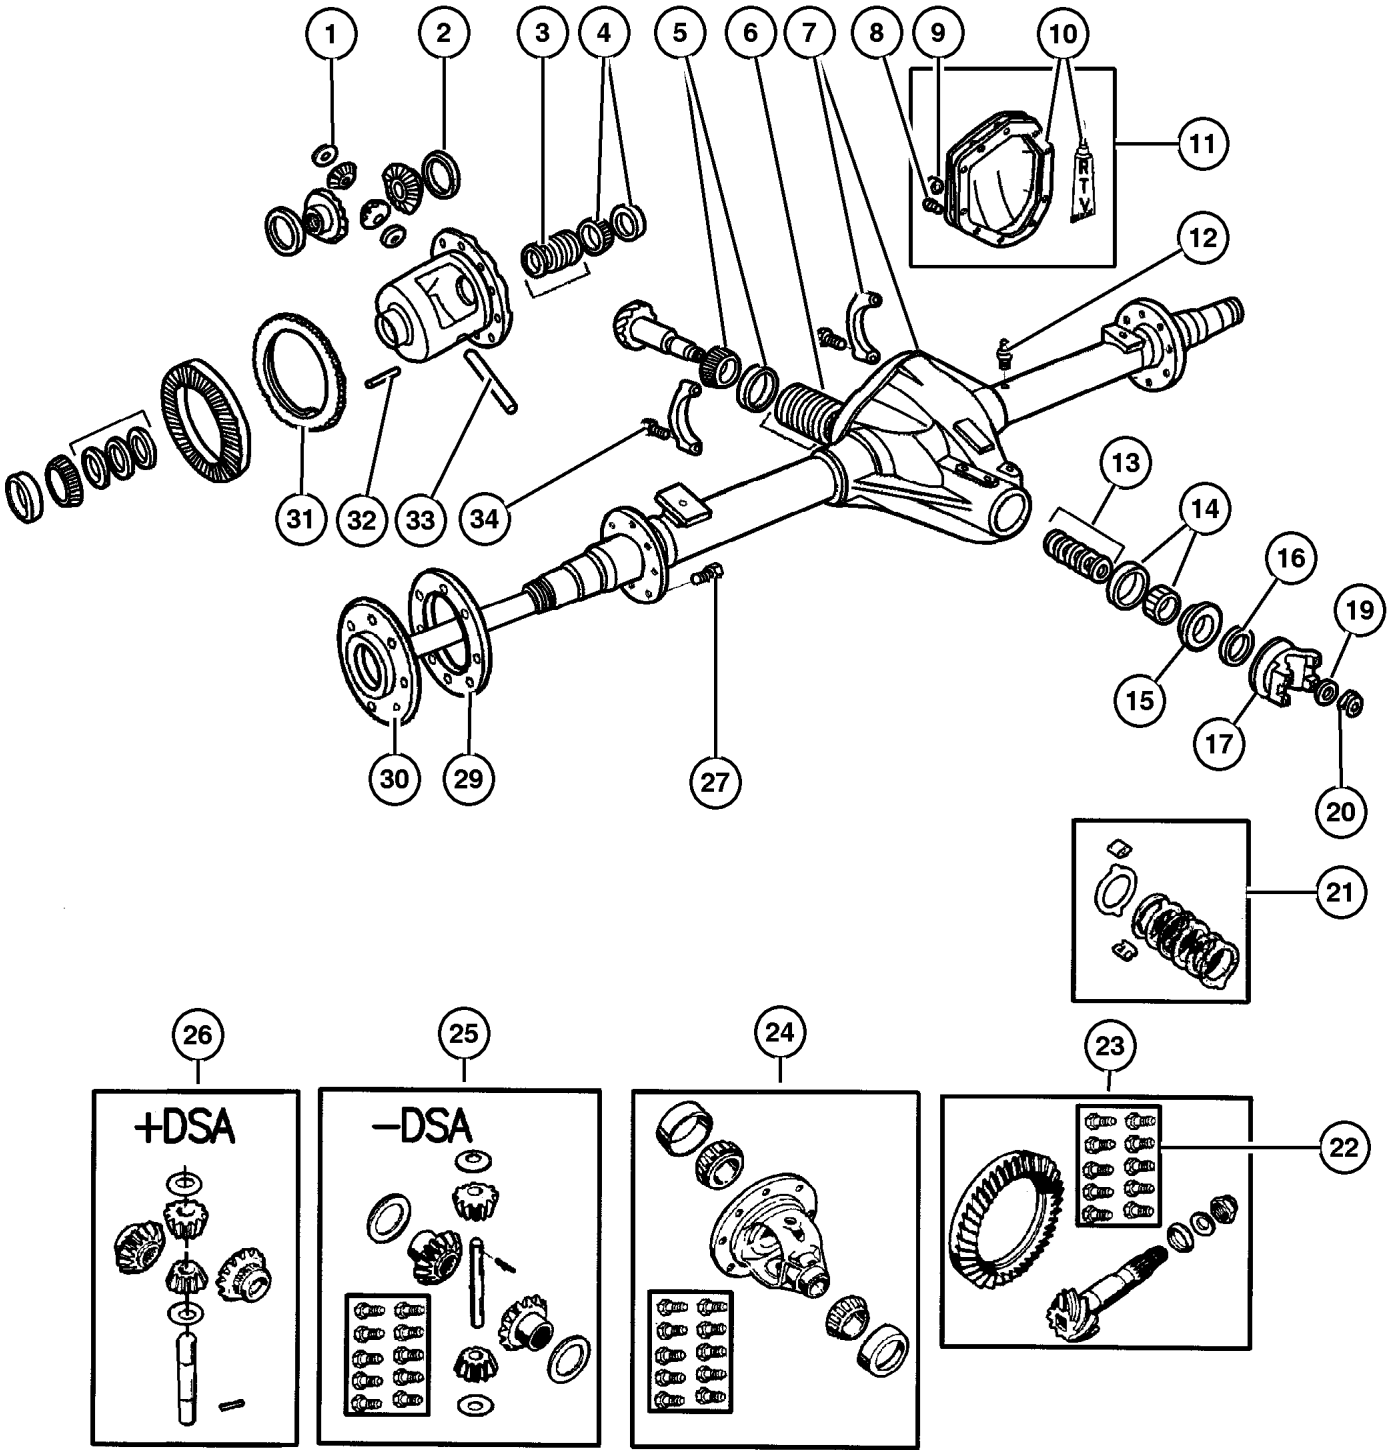Axle,Rear,with Differential Parts,Dana Model 60,BE 2,7
Figure 003-220



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	7		33, 34				Front
15									SLINGER, Drive Pinion
	4746 867	1	2		33, 34				
		1	7		33, 34				
16									SEAL, Drive Pinion
	5012 846AA	1	2		33, 34				
		1	7		33, 34				
17									YOKE, Axle
	5016 791AA	1	2		33, 34				
		1	7		33, 34				
-18									O RING, Pinion Flange Fits Over Hub of Axle Yoke Fits Over Hub of Axle Yoke
	5012 847AA-	1	2		33, 34				
		1	7		33, 34				
19									WASHER, Pinion Yoke
	1795 175	1	2		33, 34				
		1	7		33, 34				
20									NUT, Pinion Yoke
	1795 173	1	2		33, 34				
		1	7		33, 34				
21									DISC AND PLATE KIT, Differential
	4506 060	1	2		33, 34				
		1	7		33, 34				
22									SCREW, Hex Head Ring Gear Mounting Ring Gear Mounting
	4506 066	12	2		33, 34				
		12	7		33, 34				
23									GEAR KIT, Ring And Pinion [DMD] [DMF] [DMD] [DMF]
	4762 222	1	2		33, 34				
	4864 966	1	2		33, 34				
	4762 222	1	7		33, 34				
	4864 966	1	7		33, 34				
24									CASE, Differential [-DSA] [+DSA] [-DSA] [+DSA]
	4746 024AB	1	2		33, 34				
	4506 058AB	1	2		33, 34				
	4746 024AB	1	7		33, 34				
	4506 058AB	1	7		33, 34				
25									GEAR KIT, Center Differential [-DSA] [-DSA]
	4746 027	1	2		33, 34				
		1	7		33, 34				
26									GEAR KIT, Center Differential [+DSA]
	4506 059	1	2		33, 34				


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

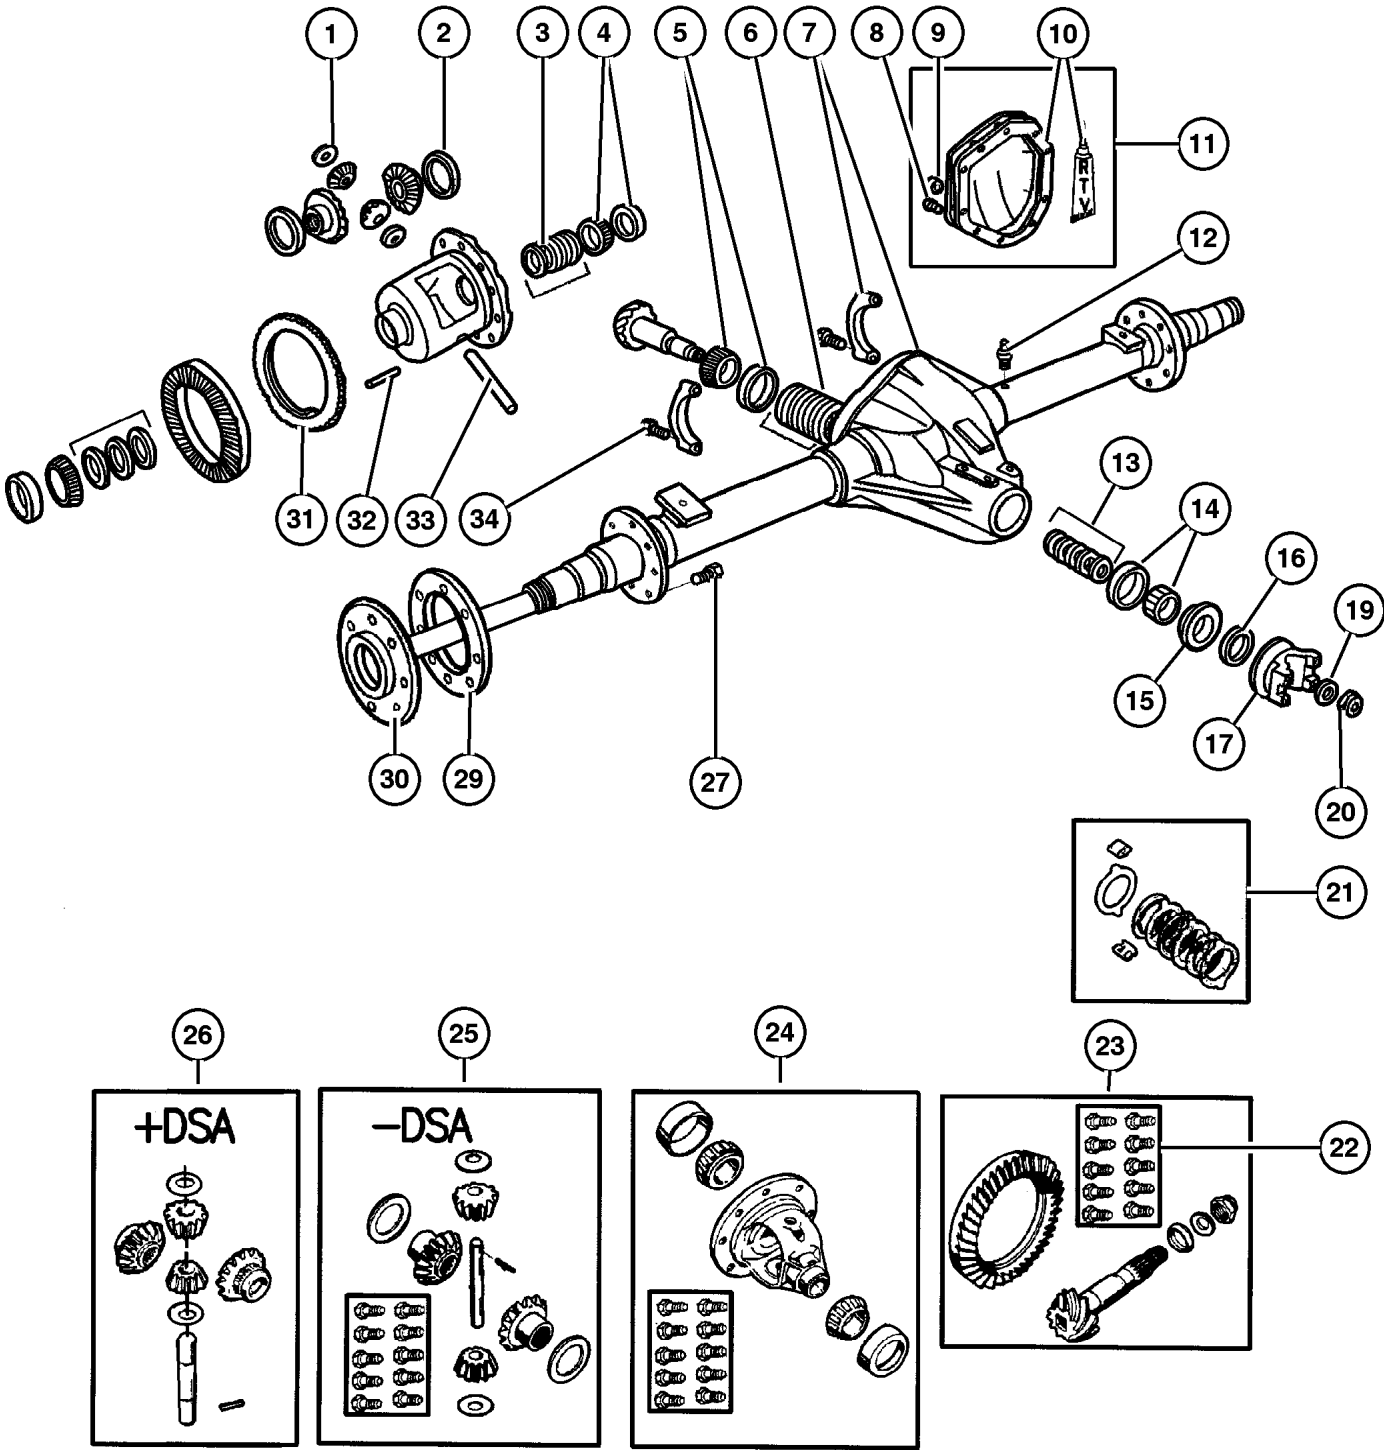Axle,Rear,with Differential Parts,Dana Model 60,BE 2,7
Figure 003-220




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	7		33, 34				[+DSA]
27	5003 932AA	8	2		33, 34				STUD Axle Housing to Backing Plate
		8	7		33, 34				Axle Housing to Backing Plate
-28	5003 934AA-	8	2		33, 34				NUT Axle Housing to Backing Plate
		8	7		33, 34				Axle Housing to Backing Plate
29	4384 186	2	2		33, 34				GASKET, Axle Shaft Axle Shaft to Hub Mounting
		2	7		33, 34				Axle Shaft to Hub Mounting
30	4746 601	2	2		33, 34				SHAFT, Axle
		2	7		33, 34				
31	4506 057	1	2		33, 34				TONE RING, Sensor
		1	7		33, 34				
32	4883 560AA	1	2		33, 34				ROLL PIN, Differential
		1	7		33, 34				
33	1922 276	1	2		33, 34				SHAFT, Differential
		1	7		33, 34				
34	5003 648AA	4	2		33, 34				BOLT, Differential
		4	7		33, 34				

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

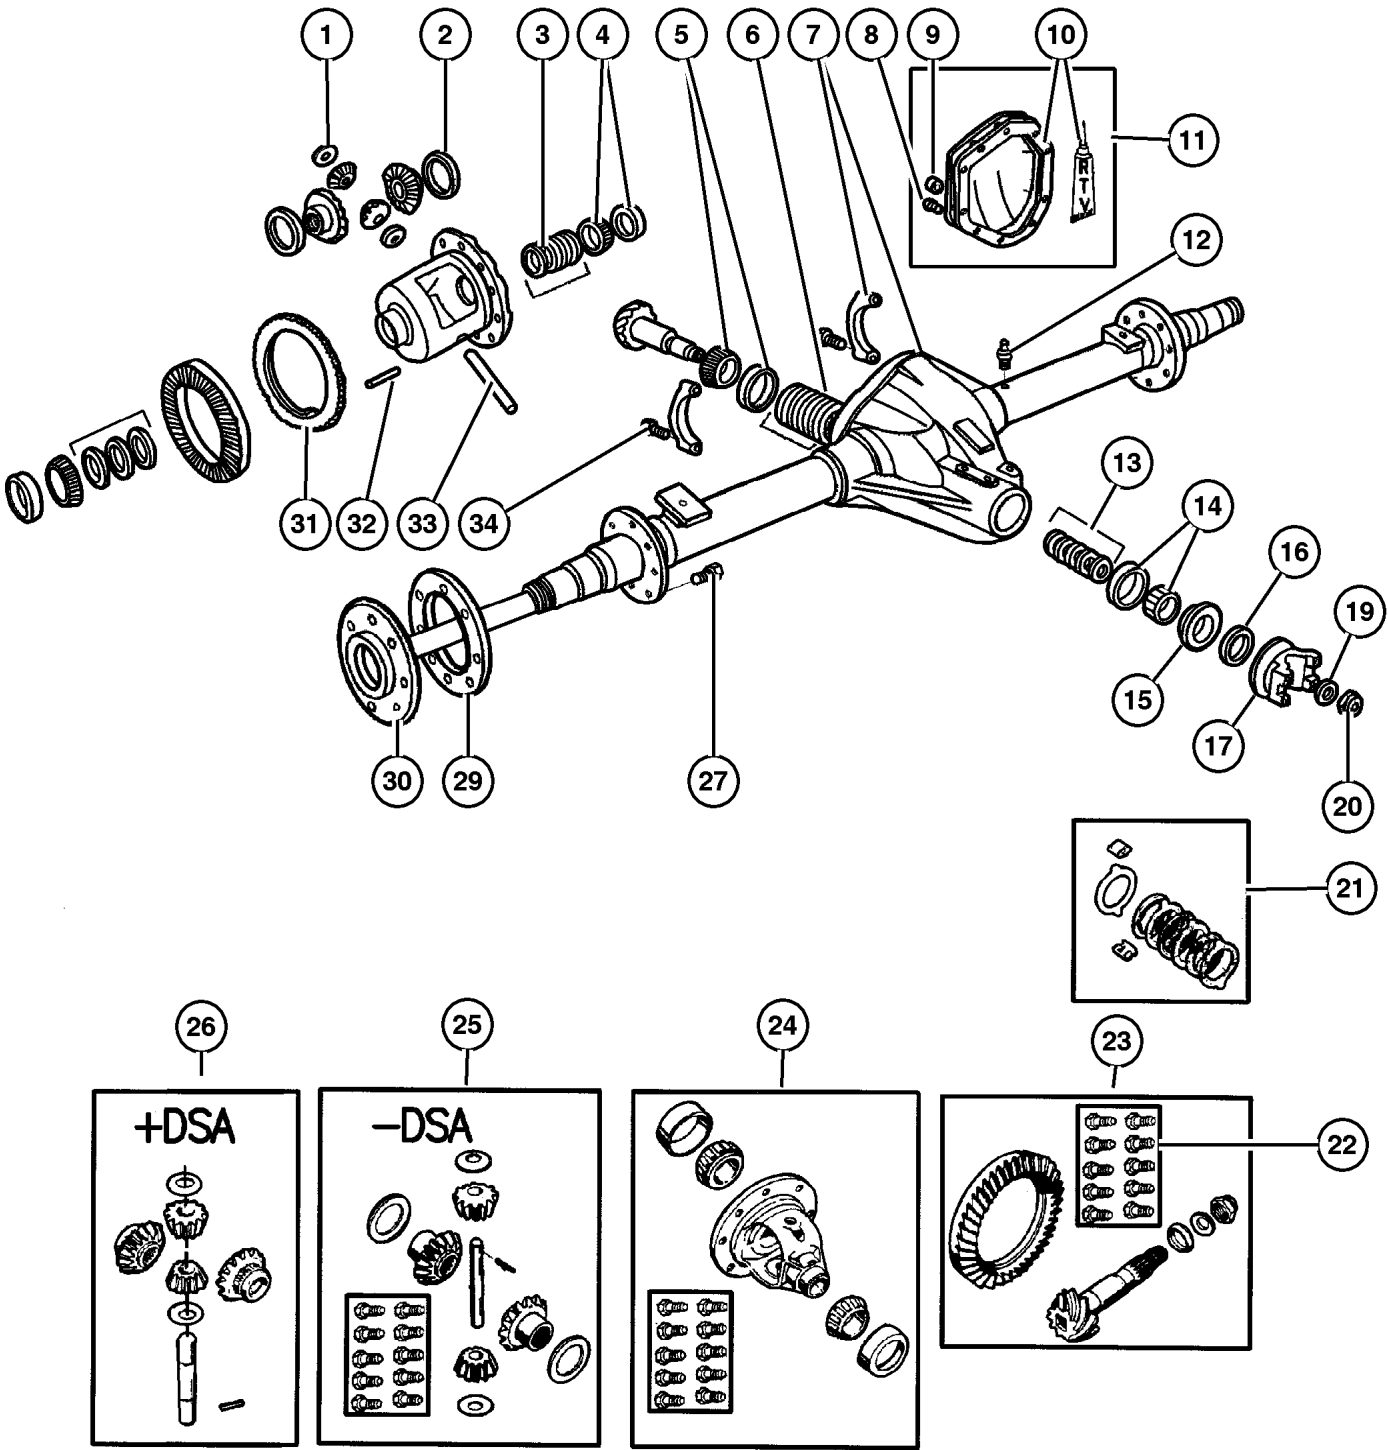Axle,Rear,with Differential Parts,Dana Model 70,BE 2,7
Figure 003-230




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: DRE=Dana Model 70---DMD = 3.54 Ratio---DMF = 4.10 Ratio---DSA = Limited Slip Differential									
1									WASHER, (NOT SERVICED) (Not Serviced)
2									WASHER, (NOT SERVICED) (Not Serviced)
3	3898 313AB	1	2		33, 34				SHIM, Differential Bearing
		1	7		33, 34				Adjusting
4	4746 605	1	2		33, 34				BEARING, Differential
		1	7		33, 34				
5	4746 617	1	2		33, 34				BEARING, Drive Pinion
		1	7		33, 34				Rear
6	4746 616	1	2		33, 34				SHIM KIT, Pinion Shaft
		1	7		33, 34				
7	5015 587AA	1	2		33, 34				HOUSING, Rear Axle
	5015 675AA	1	7		33, 34				
8	2952 474	10	2		33, 34				BOLT, Hex Flange Head
		10	7		33, 34				Cover
9	3640 792	1	2		33, 34				PLUG, Differential Cover
		1	7		33, 34				Cover
10	5010 884AA	1	2		33, 34				SEALANT, RTV
		1	7		33, 34				
11	4773 401	1	2		33, 34				COVER, Differential
	4773 400	1	7		33, 34				
12	4137 696AB	1							BOLT, Axle Vent
13	4773 913	1	2		33, 34				SPACER, Drive Pinion Bearing
		1	7		33, 34				
14	4746 604	1	2		33, 34				BEARING, Drive Pinion
		1	7		33, 34				Front
15									SLINGER, Drive Pinion

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

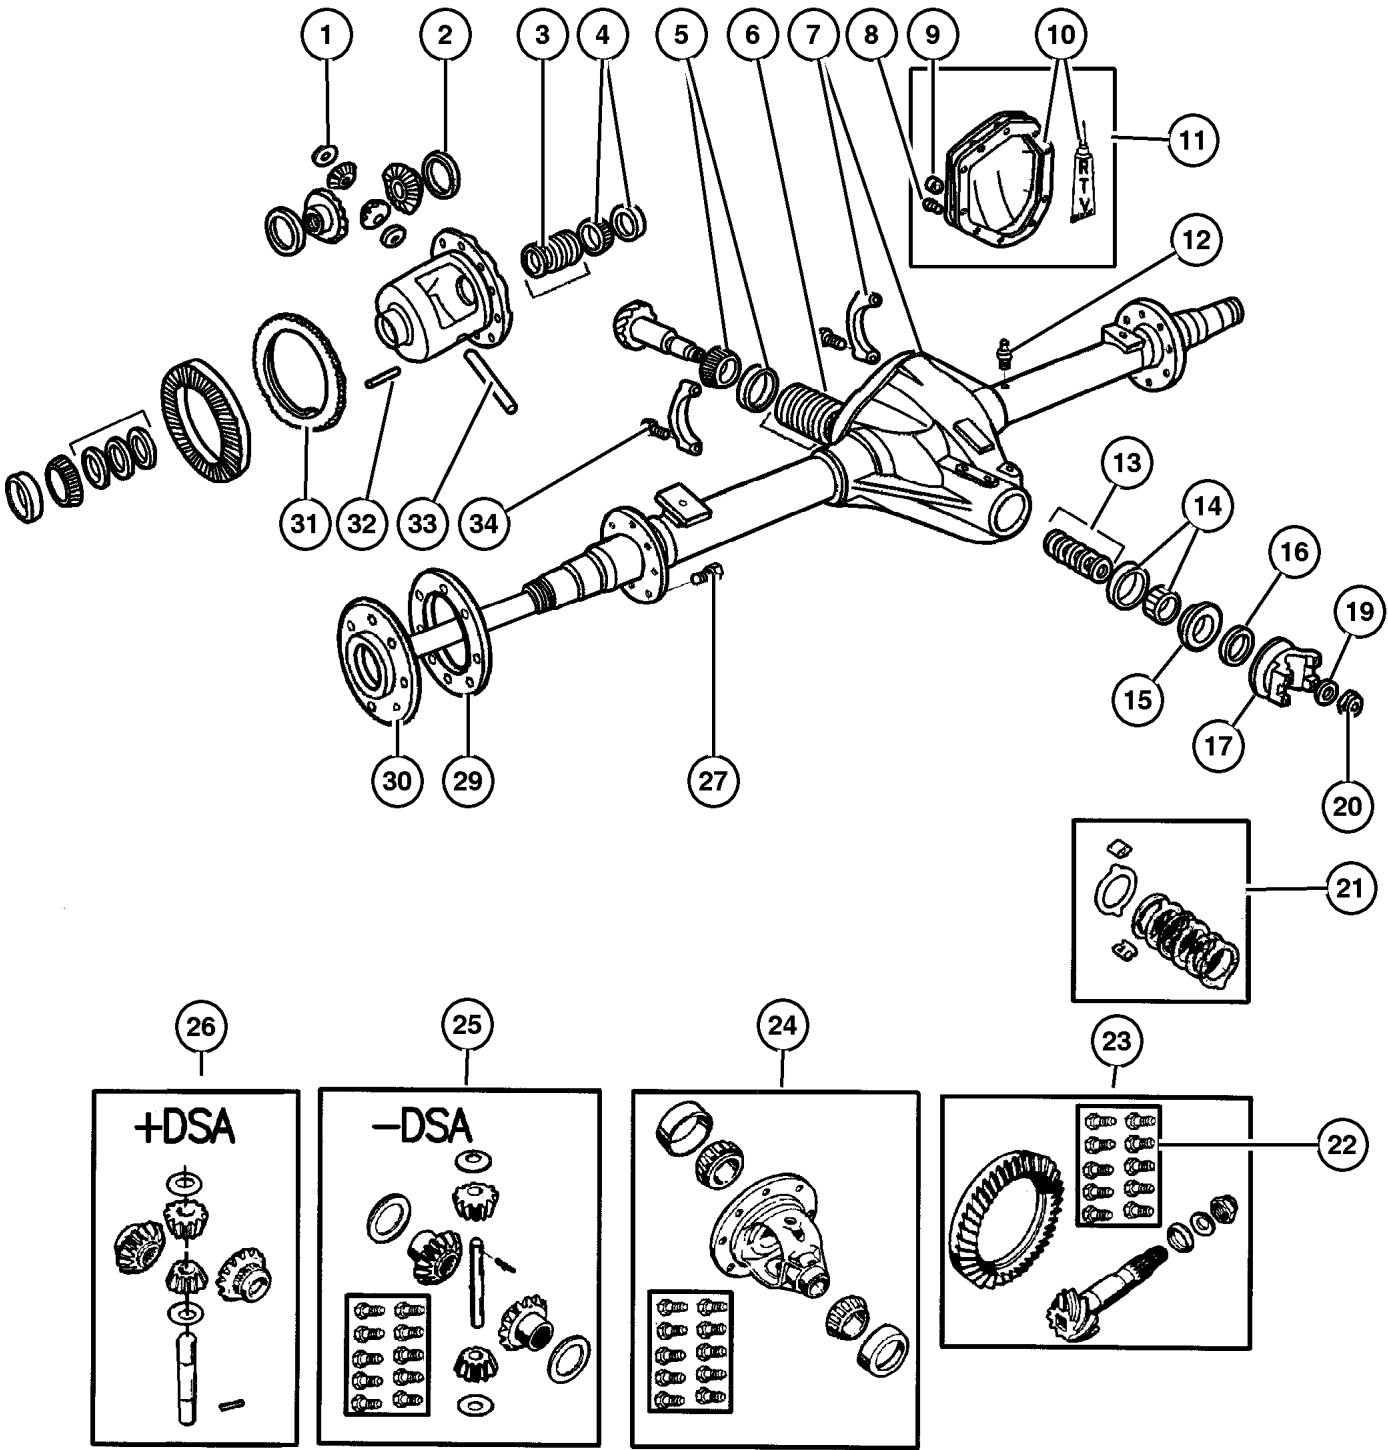Axle,Rear,with Differential Parts,Dana Model 70,BE 2,7
Figure 003-230




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4746 867	1	2		33, 34				
		1	7		33, 34				
16	5012 846AA	1	2		33, 34				SEAL, Drive Pinion
		1	7		33, 34				
17	5015 458AA	1	2		33, 34				YOKE, Axle
		1	7		33, 34				
-18	5012 847AA-	1	2		33, 34				O RING, Pinion Flange
		1	7		33, 34				Fits Over Hub of Axle Yoke
19	2070 117	1	2		33, 34				WASHER, Pinion Yoke
		1	7		33, 34				
20	1795 173	1	2		33, 34				NUT, Pinion Yoke
		1	7		33, 34				
21	4506 072	1	2		33, 34				DISC AND PLATE KIT, Differential
		1	7		33, 34				
22									SCREW, Hex Head
	4506 066	12	2		33, 34				Ring Gear Mounting
		12	7		33, 34				Ring Gear Mounting
23									GEAR KIT, Ring And Pinion
	4746 618AB	1	2		33, 34				[DMD]
	4746 624AB	1	2		33, 34				[DMF]
	4746 618AB	1	7		33, 34				[DMD]
	4746 624AB	1	7		33, 34				[DMF]
24									CASE, Differential
	4746 621AB	1	2		33, 34				[-DSA]
	4638 254AB	1	2		33, 34				[+DSA]
	4746 621AB	1	7		33, 34				[-DSA]
	4638 254AB	1	7		33, 34				[+DSA]
25									GEAR KIT, Center Differential
	4746 622	1	2		33, 34				[-DSA]
		1	7		33, 34				[-DSA]
26									GEAR KIT, Center Differential
	4638 255	1	2		33, 34				[+DSA]
		1	7		33, 34				[+DSA]
27									STUD

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

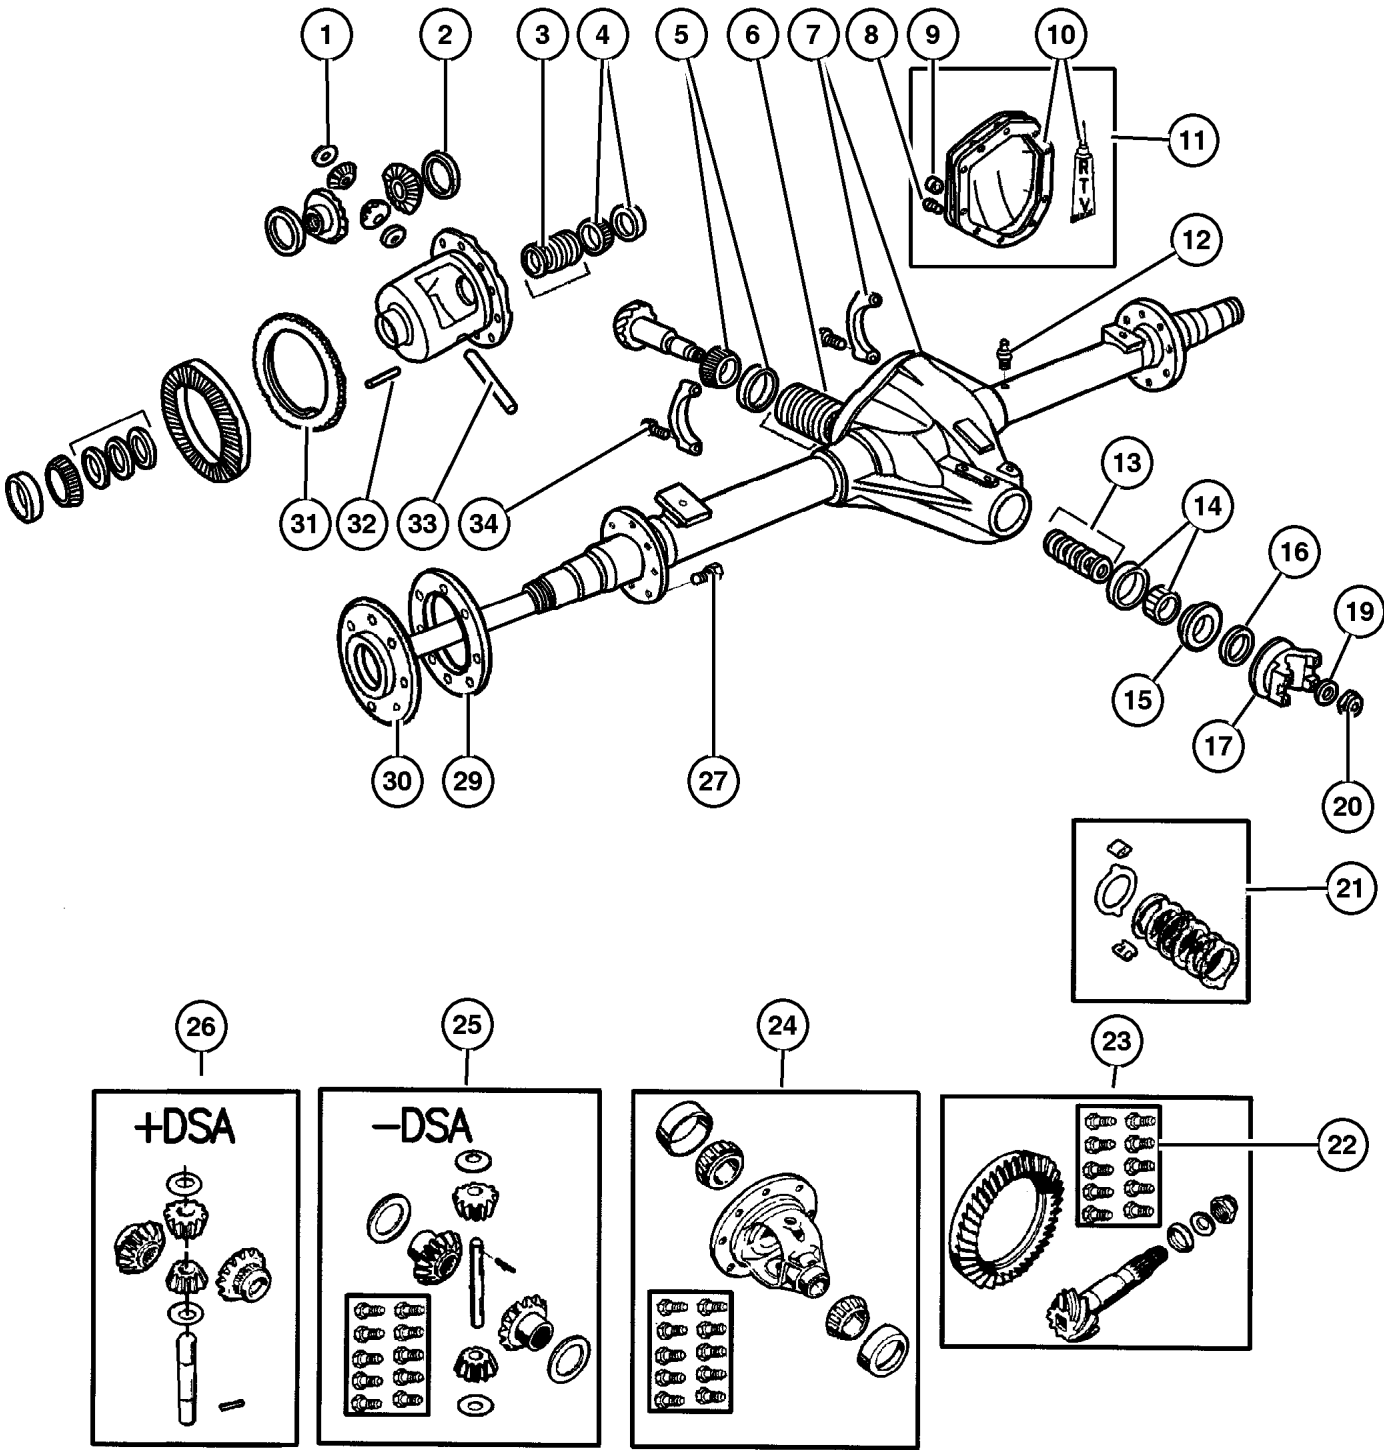Axle,Rear,with Differential Parts,Dana Model 70,BE 2,7
Figure 003-230




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5003 932AA	8	2		33, 34				Axle Housing to Backing Plate
		8	7		33, 34				Axle Housing to Backing Plate
-28									NUT
	5003 934AA-	8	2		33, 34				Axle Housing to Backing Plate
		8	7		33, 34				Axle Housing to Backing Plate
29									GASKET, Axle Shaft
	4384 186	2	2		33, 34				Axle Shaft to Hub Mounting
		2	7		33, 34				Axle Shaft to Hub Mounting
30									SHAFT, Axle
	4746 620	2	2		33, 34				
		2	7		33, 34				
31									RING, Tone
	4506 069	1	2		33, 34				
		1	7		33, 34				
32									ROLL PIN, Differential, (NOT SERVICED) (Not Serviced)
33									SHAFT, Differential, (NOT SERVICED) (Not Serviced)
34									BOLT, Differential
	5003 648AA	4	2		33, 34				
		4	7		33, 34				

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

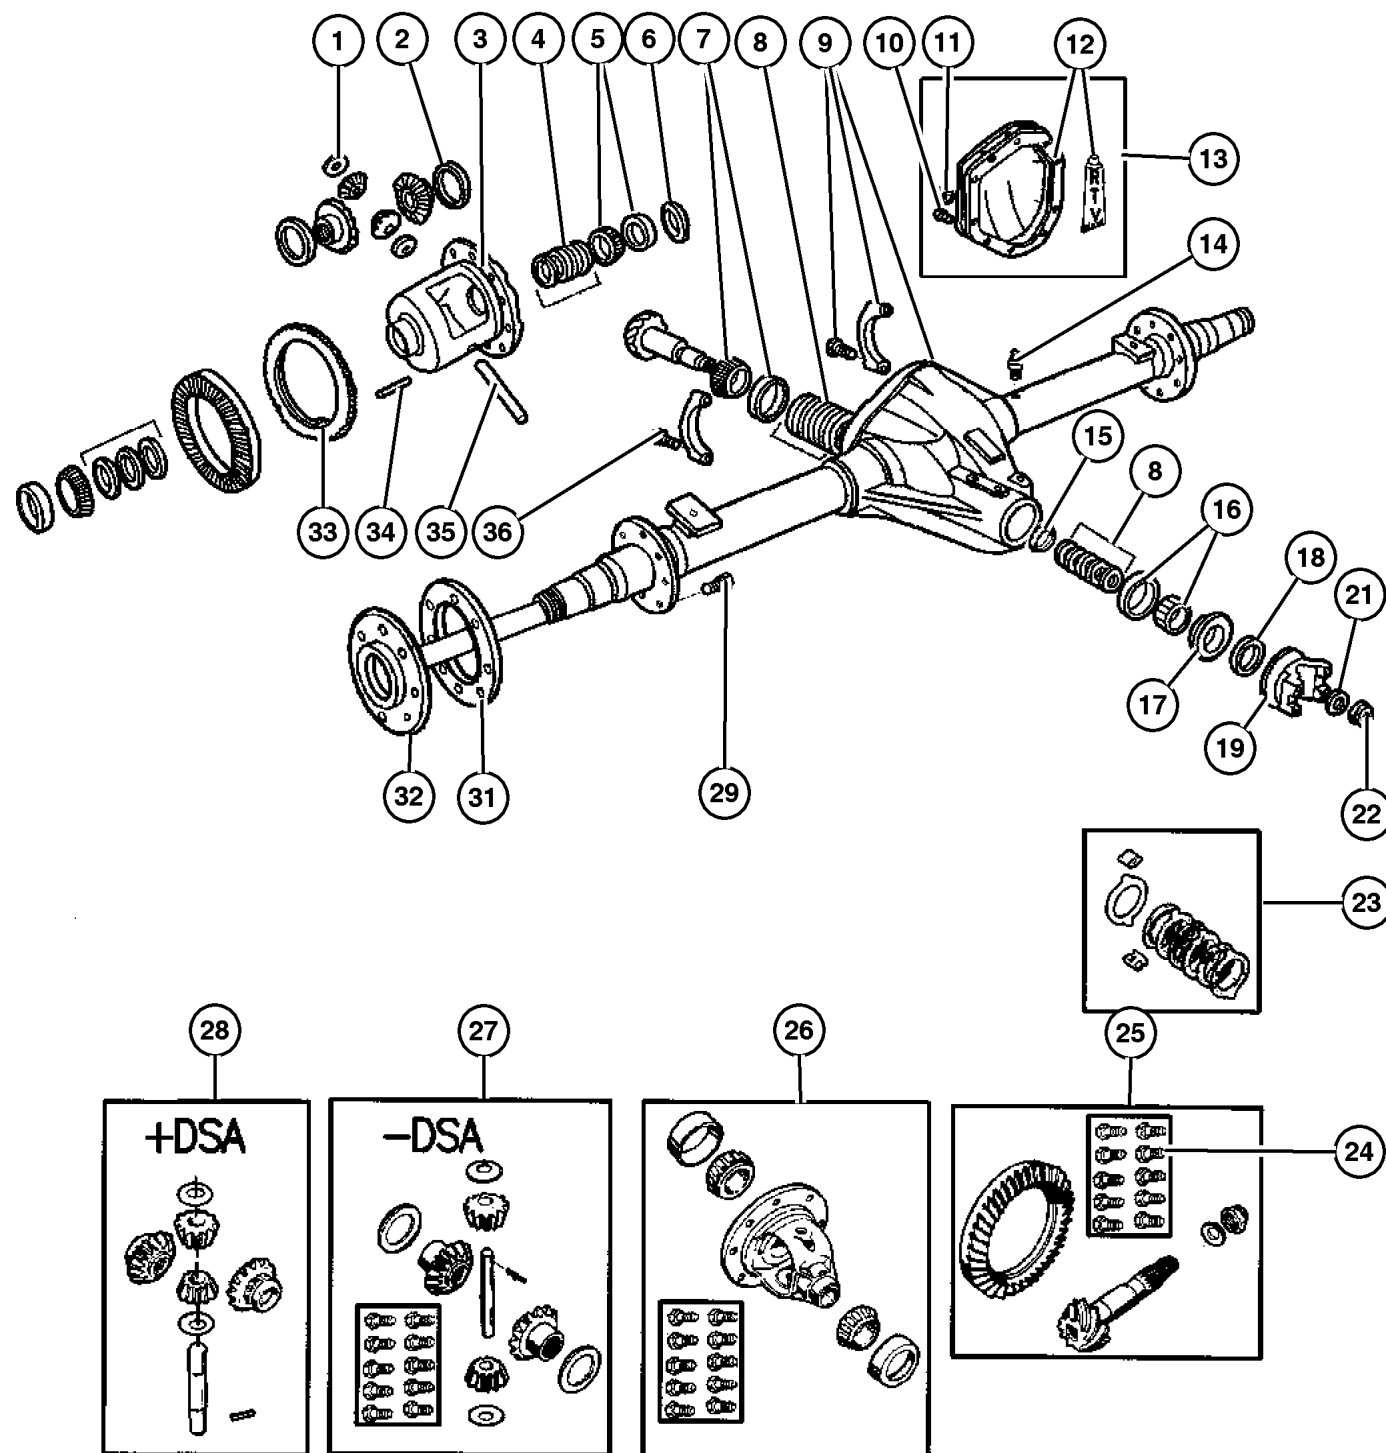Axle,Rear,with Differential Parts,Dana Model 80,BE 2,3,7,8
Figure 003-240



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: DRL=Dana Model 80---DMD = 3.54 Ratio---DMF = 4.10 Ratio---DSA = Limited Slip Differential									
1									WASHER, (NOT SERVICED) (Not Serviced)
2									WASHER, (NOT SERVICED) (Not Serviced)
3	4778 763AC	1	2		33, 34				CASE, Differential [DMD,DSA] Includes items 4,5,23, 24,28
	4778 772AC	1	2		33, 34				[DMF,DSA] Includes items 4,5,23, 24,28
	4778 763AC	1	3		34				[DMD,DSA] Includes items 4,5,23, 24,28
	4778 772AC	1	3		34				[DMF,DSA] Includes items 4,5,23, 24,28
	4778 763AC	1	7		33, 34				[DMD,DSA] Includes items 4,5,23, 24,28
	4778 772AC	1	7		33, 34				[DMF,DSA] Includes items 4,5,23, 24,28
	4778 763AC	1	8		34				[DMD,DSA] Includes items 4,5,23, 24,28
	4778 772AC	1	8		34				[DMF,DSA] Includes items 4,5,23, 24,28
4	4746 982AB	1	2		33, 34				SHIM KIT, Differential
		1	3		34				
		1	7		33, 34				
		1	8		34				
5	4746 981	1	2		33, 34				BEARING, Differential Consists of 2 Bearings and 2 Cups
		1	3		34				Consists of 2 Bearings and 2 Cups
		1	7		33, 34				Consists of 2 Bearings and 2 Cups
		1	8		34				Consists of 2 Bearings and 2 Cups
6	4746 984	1	2		33, 34				SPACER KIT, differential Consists of 2 Flat Spacers
		1	3		34				Consists of 2 Flat Spacers
		1	7		33, 34				Consists of 2 Flat Spacers
		1	8		34				Consists of 2 Flat Spacers
7	4746 978	1	2		33, 34				BEARING, Drive Pinion Bearing and Cup, Rear
		1	3		34				Bearing and Cup, Rear


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

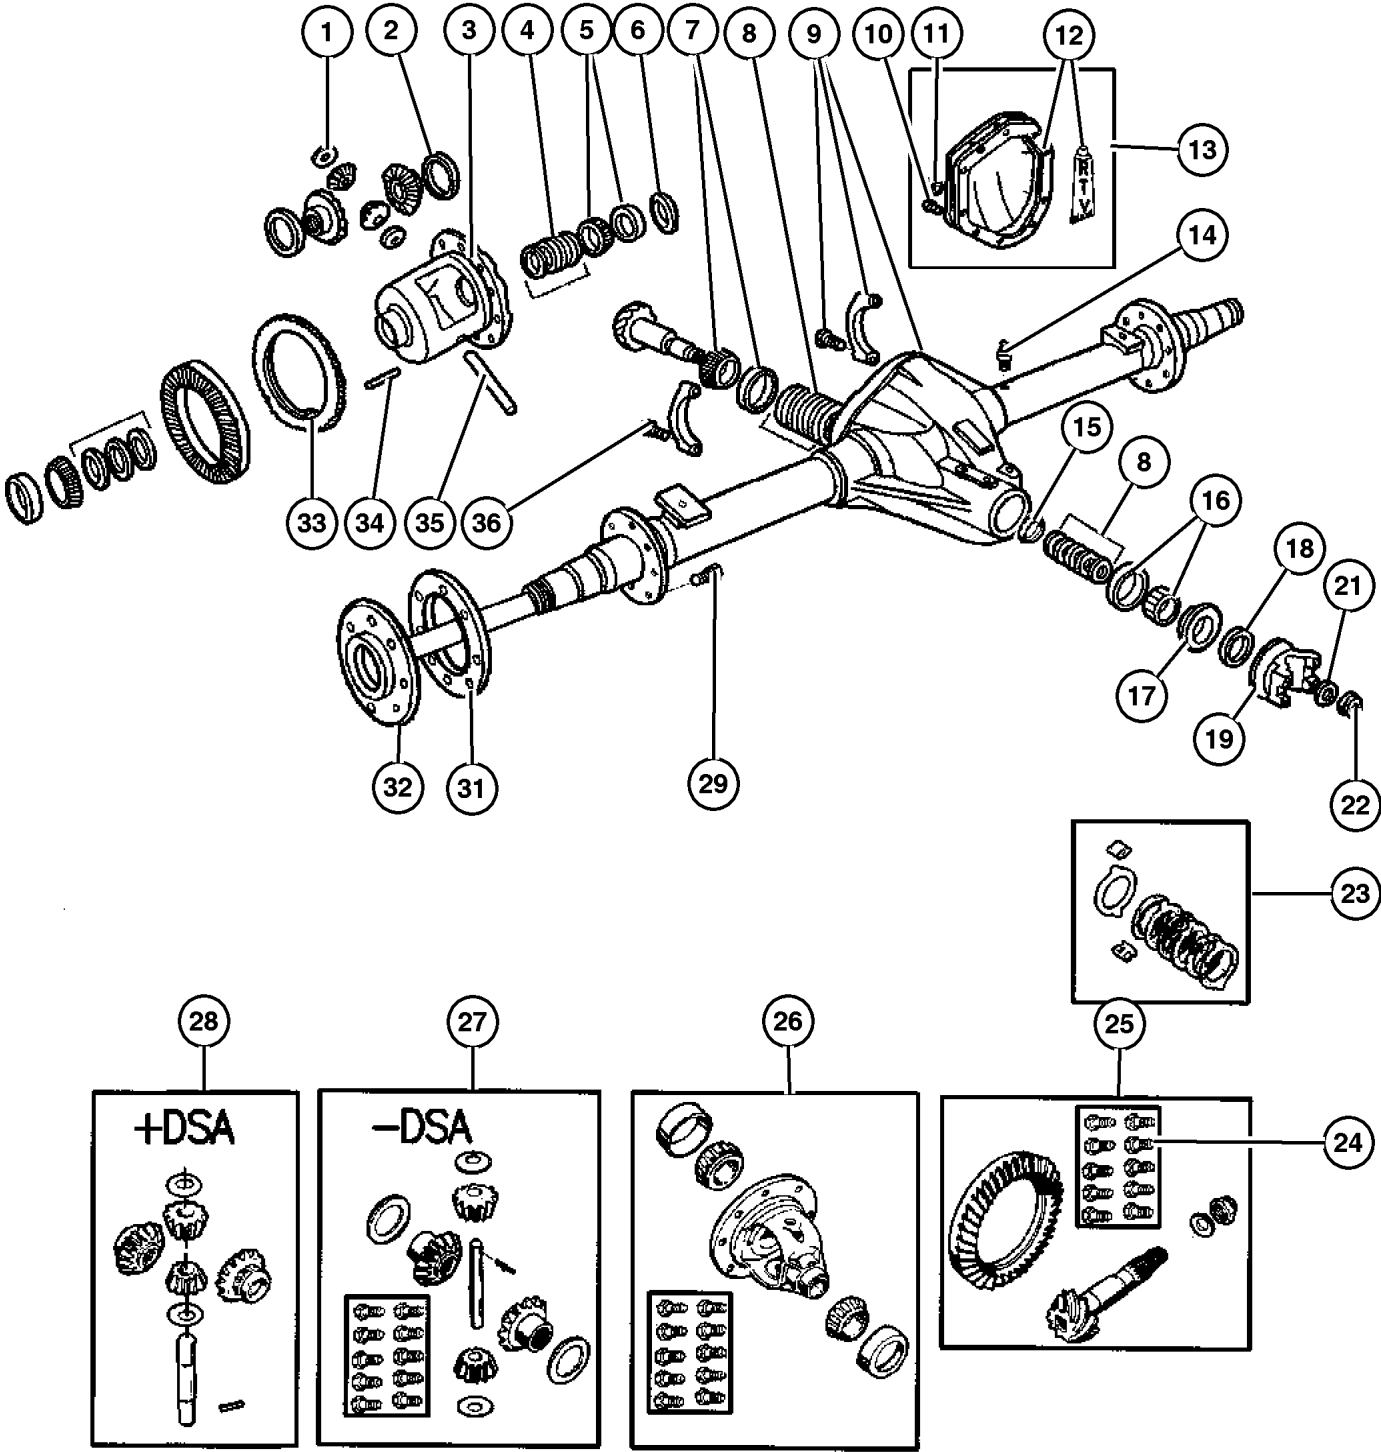Axle,Rear,with Differential Parts,Dana Model 80,BE 2,3,7,8
Figure 003-240




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
8	4746 983	1	7		33, 34				Bearing and Cup, Rear
		1	8		34				Bearing and Cup, Rear
		1	2		33, 34				SHIM KIT, Pinion Shaft
		1	3		34				Front and Rear
9	5015 613AA	1	7		33, 34				Front and Rear
		1	8		34				Front and Rear
		1	2		33, 34				HOUSING, Rear Axle
		1	2		33, 34				[DMD]
		1	2		33, 34				[DMF]
		1	3		34				[DMD]
		1	3		34				[DMF]
		1	7		33, 34				[DMD]
10	2952 474	1	7		33, 34				[DMF]
		1	8		34				[DMD]
		1	8		34				[DMF]
		1	8		34				[DMF]
11	3640 792	10	2		33, 34				BOLT, Differential Cover
		10	3		34				Mounting
		10	7		33, 34				Mounting
		10	8		34				Mounting
12	5010 884AA	1	2		33, 34				PLUG, Differential Cover
		1	3		34				
		1	7		33, 34				
		1	8		34				
13	4746 985	1	2		33, 34				SEALANT, RTV
		1	3		34				
		1	7		33, 34				
		1	8		34				
14	4746 989	1	2		33, 34				COVER, Differential
		1	3		34				
		1	7		33, 34				
		1	8		34				
15	4773 230	1	2		33, 34				BOLT, Axle Vent
		1	3		34				SPACER, Drive Pinion

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

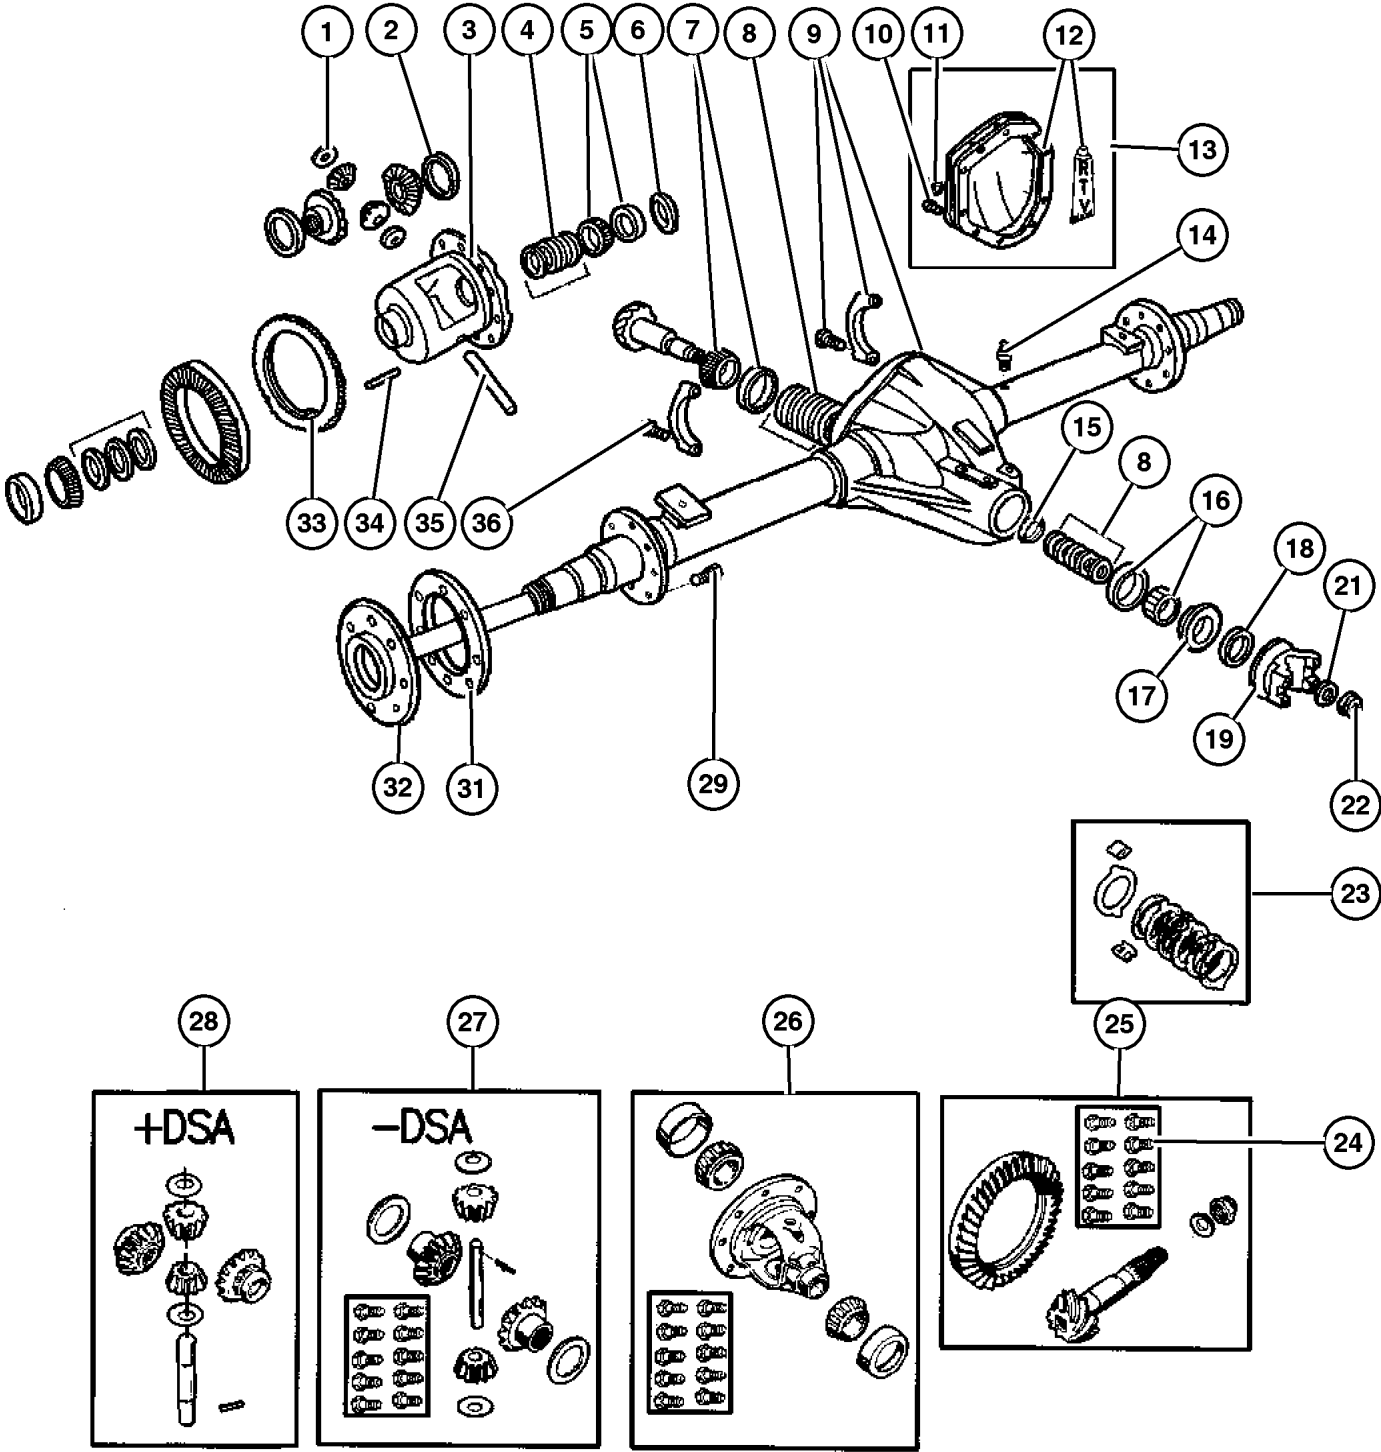Axle,Rear,with Differential Parts,Dana Model 80,BE 2,3,7,8
Figure 003-240




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	7		33, 34				
		1	8		34				
16	4746 979	1	2		33, 34				BEARING, Drive Pinion
		1	3		34				Bearing and Cup, Front
		1	7		33, 34				Bearing and Cup, Front
		1	8		34				Bearing and Cup, Front
17		1	7		33, 34				SLINGER, Drive Pinion, Order Yoke
		1	8		34				Assembly, (NOT SERVICED) (Not Serviced)
18	5015 618AB	1	2		33, 34				SEAL, Drive Pinion
		1	3		34				
		1	7		33, 34				
		1	8		34				
19	5015 614AA	1	2		33, 34				YOKE, Axle
	5015 641AA	1	3		34				
	5015 614AA	1	7		33, 34				
	5015 641AA	1	8		34				
-20									O RING, Pinion Flange
	5015 619AA-	1	2		33, 34				Fits Over Hub of Flange
		1	3		34				Fits Over Hub of Flange
		1	7		33, 34				Fits Over Hub of Flange
		1	8		34				Fits Over Hub of Flange
21	4773 240	1	2		33, 34				WASHER, Pinion Yoke
		1	3		34				
		1	7		33, 34				
		1	8		34				
22	4773 239	1	2		33, 34				NUT, Pinion Yoke
		1	3		34				
		1	7		33, 34				
		1	8		34				
23	5015 623AA	1	2		33, 34				DISC AND PLATE KIT, Differential
		1	3		34				With [DSA]
		1	7		33, 34				With [DSA]
		1	8		34				With [DSA]
24									BOLT, Ring Gear

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

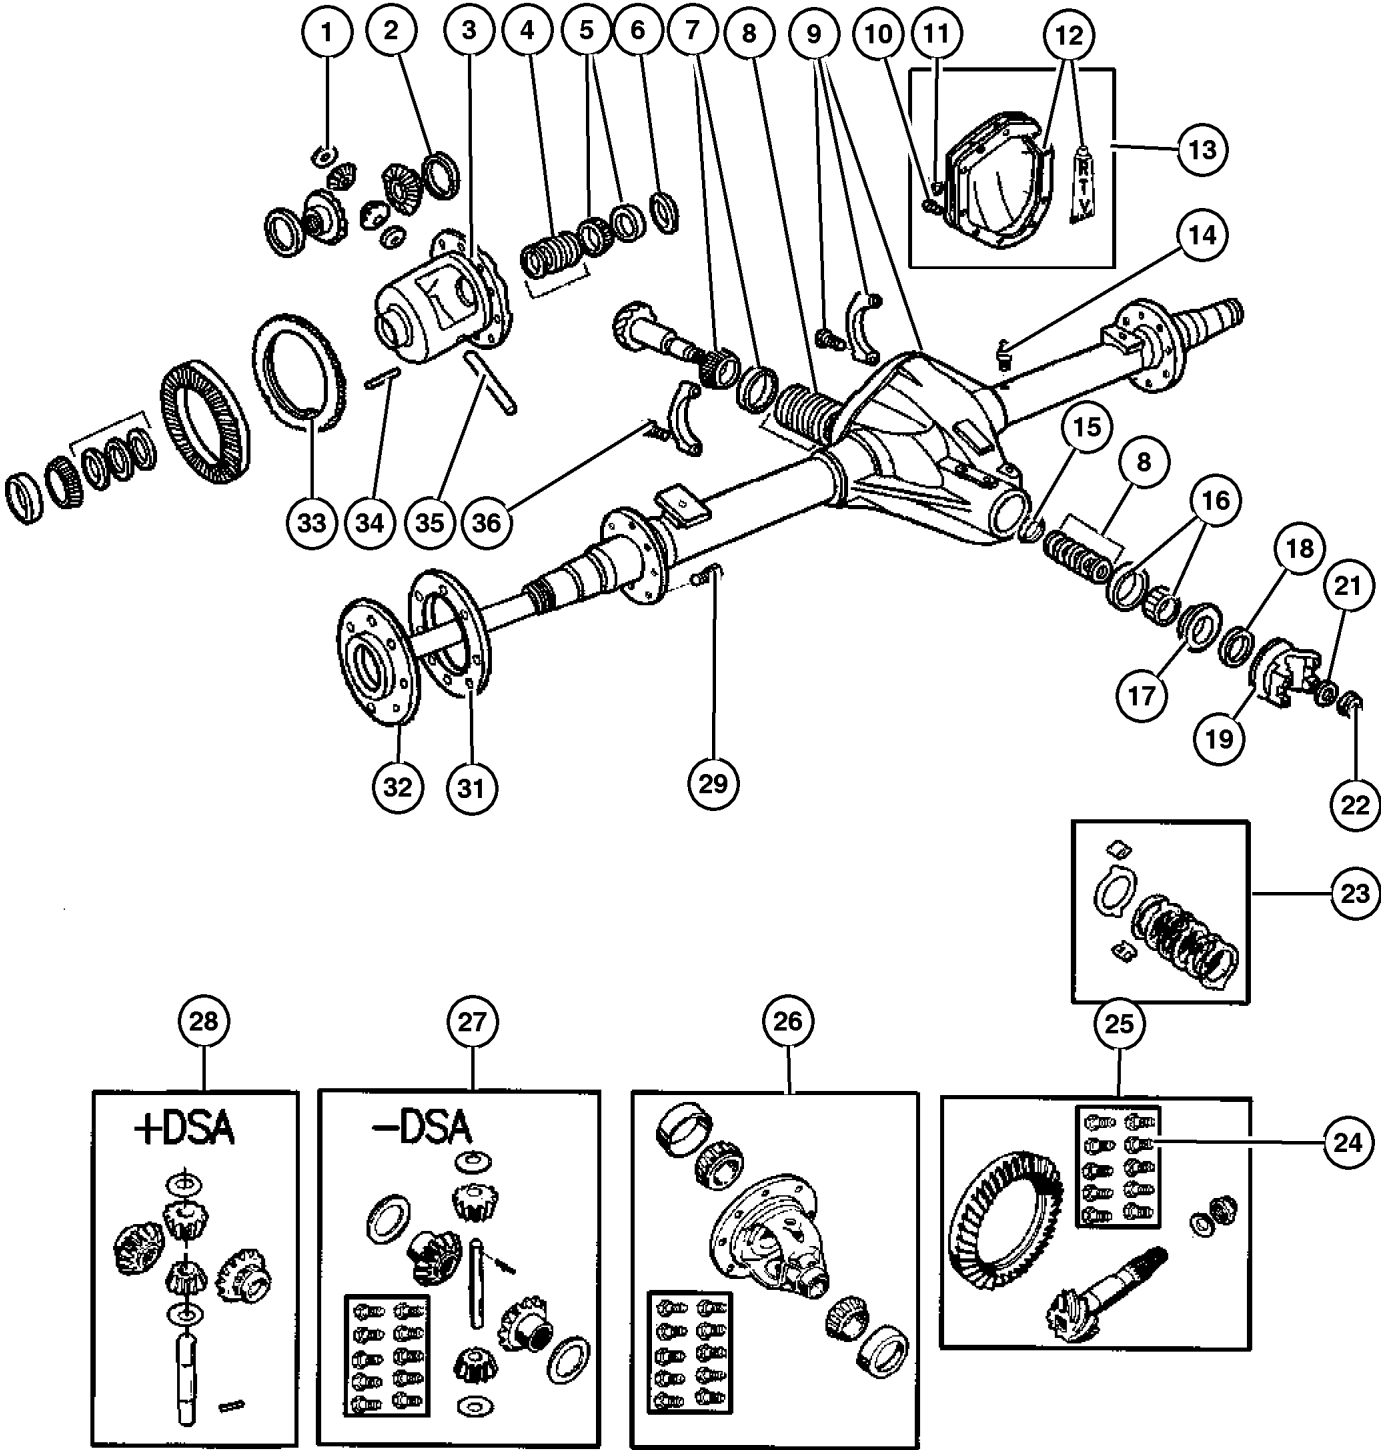Axle,Rear,with Differential Parts,Dana Model 80,BE 2,3,7,8
Figure 003-240



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4773 238	12	2		33, 34				Mounting
		12	3		34				Mounting
		12	7		33, 34				Mounting
		12	8		34				Mounting
25									GEAR KIT, Ring And Pinion
	4746 976	1	2		33, 34				[DMD]
	4746 992	1	2		33, 34				[DMF]
	4746 976	1	3		34				[DMD]
	4746 992	1	3		34				[DMF]
	4746 976	1	7		33, 34				[DMD]
	4746 992	1	7		33, 34				[DMF]
	4746 976	1	8		34				[DMD]
	4746 992	1	8		34				[DMF]
26									CASE, Differential
	4746 977AB	1	2		33, 34				[DMD] Without [DSA] Includes Items 4,24,27
	4746 993AB	1	2		33, 34				[DMF] Without [DSA] Includes Items 4,24,27
	4746 977AB	1	3		34				[DMD] Without [DSA] Includes Items 4,24,27
	4746 993AB	1	3		34				[DMF] Without [DSA] Includes Items 4,24,27
	4746 977AB	1	7		33, 34				[DMD] Without [DSA] Includes Items 4,24,27
	4746 993AB	1	7		33, 34				[DMF] Without [DSA] Includes Items 4,24,27
	4746 977AB	1	8		34				[DMD] Without [DSA] Includes Items 4,24,27
	4746 993AB	1	8		34				[DMF] Without [DSA] Includes Items 4,24,27
27									GEAR KIT, Center Differential
	4746 980	1	2		33, 34				Without [DSA]
		1	3		34				Without [DSA]
		1	7		33, 34				Without [DSA]
		1	8		34				Without [DSA]
28									GEAR KIT, Center Differential
	5015 622AA	1	2		33, 34				With [DSA]
		1	3		34				With [DSA]
		1	7		33, 34				With [DSA]
		1	8		34				With [DSA]
29									SCREW, Round Head, .50-20x1.25


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

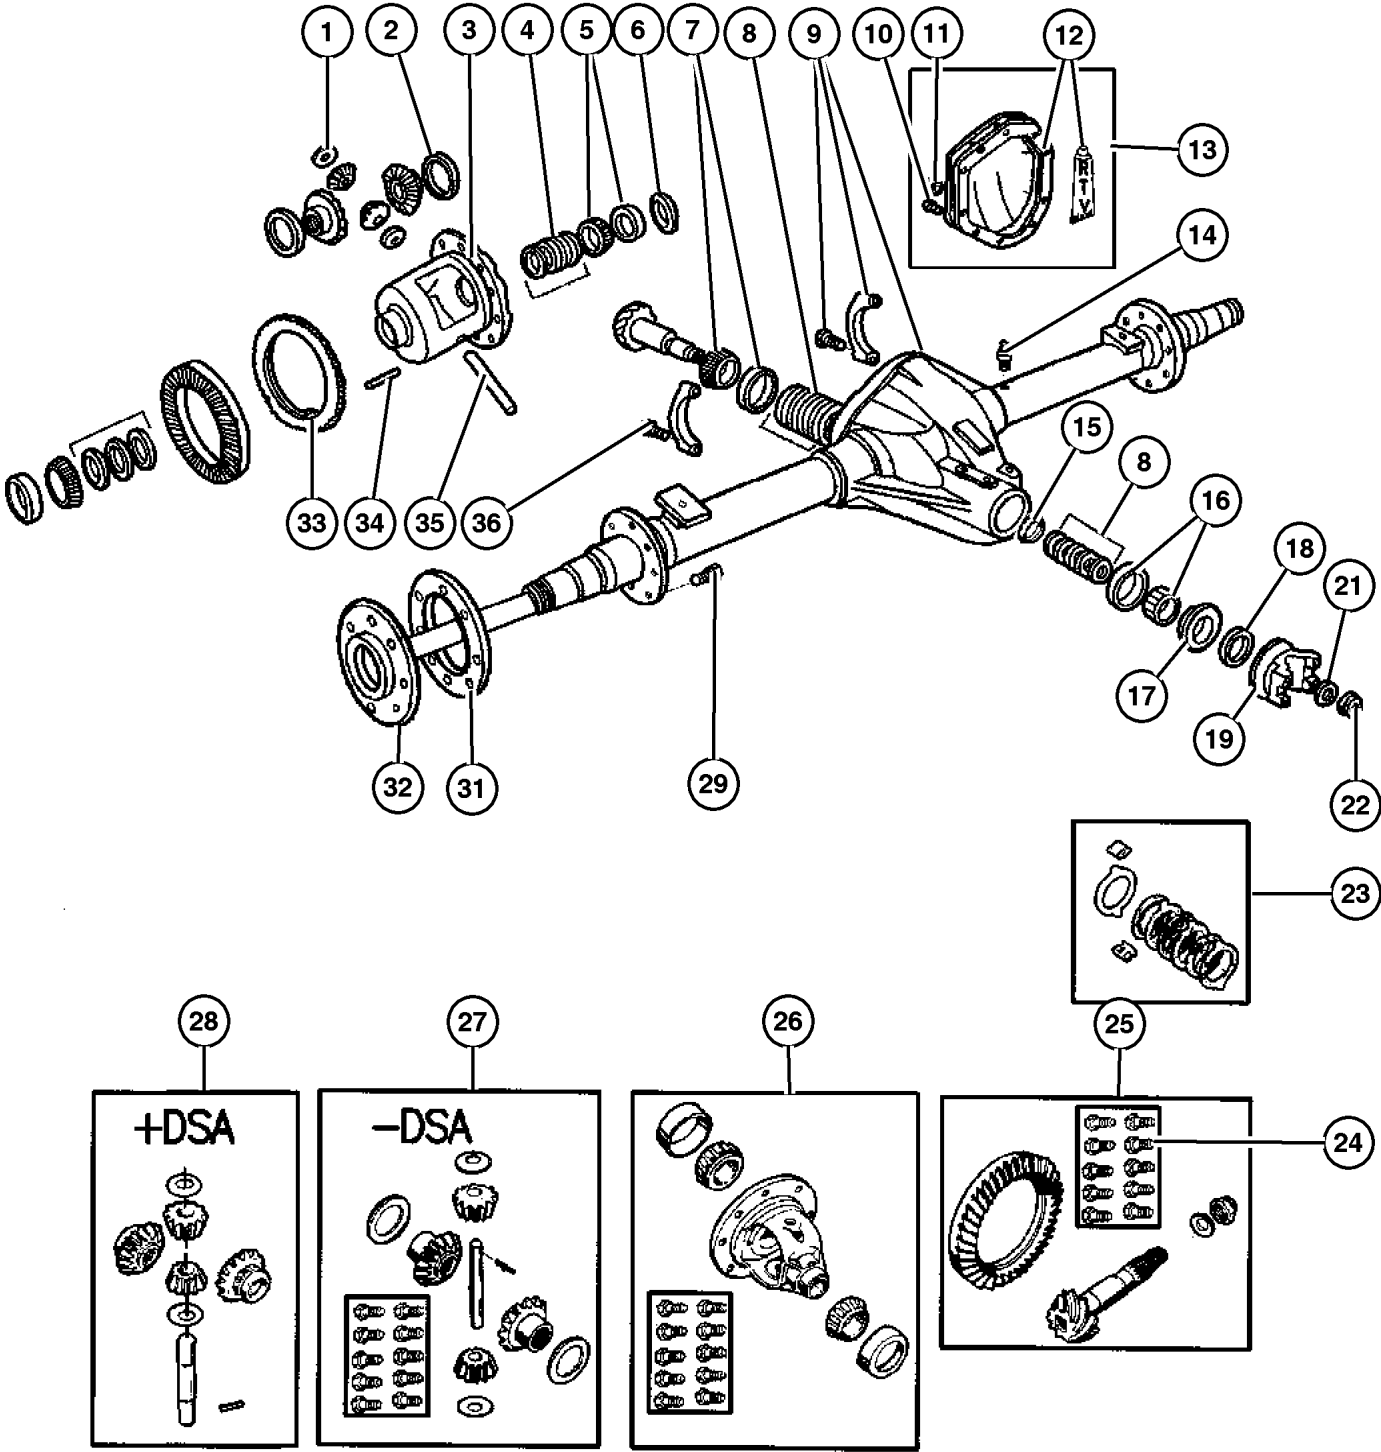Axle,Rear,with Differential Parts,Dana Model 80,BE 2,3,7,8
Figure 003-240



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	1664 518	8	2		33, 34				Axle Housing to Backing Plate, Mounting
		8	3		34				Axle Housing to Backing Plate, Mounting
		8	7		33, 34				Axle Housing to Backing Plate, Mounting
		8	8		34				Axle Housing to Backing Plate, Mounting
-30									NUT
	5003 934AA-	8	2		33, 34				Axle Housing to Backing Plate, Mounting
		8	3		34				Axle Housing to Backing Plate, Mounting
		8	7		33, 34				Axle Housing to Backing Plate, Mounting
		8	8		34				Axle Housing to Backing Plate, Mounting
31									GASKET, Axle Shaft
	4384 186	2	2		33, 34				Axle Shaft to Hub, Mounting
		2	3		34				Axle Shaft to Hub, Mounting
		2	7		33, 34				Axle Shaft to Hub, Mounting
		2	8		34				Axle Shaft to Hub, Mounting
32									SHAFT, Axle
	4746 995	2	2		33, 34				
	4746 967	2	3		34				
	4746 995	2	7		33, 34				
	4746 967	2	8		34				
33									RING, Tone
	4761 653	1	2		33, 34				ABS Sensor
		1	3		34				ABS Sensor
		1	7		33, 34				ABS Sensor
		1	8		34				ABS Sensor
34									ROLL PIN, Differential, (NOT SERVICED) (Not Serviced)
35									SHAFT, Differential, (NOT SERVICED) (Not Serviced)
36									BOLT, Differential
	5003 648AA	4	2		33, 34				
		4	3		34				
		4	7		33, 34				

DODGE RAM QUAD CAB/CLUB CAB (BE)


SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Figure 003-240

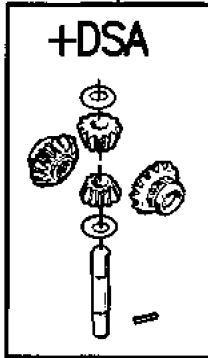4 8 34



L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

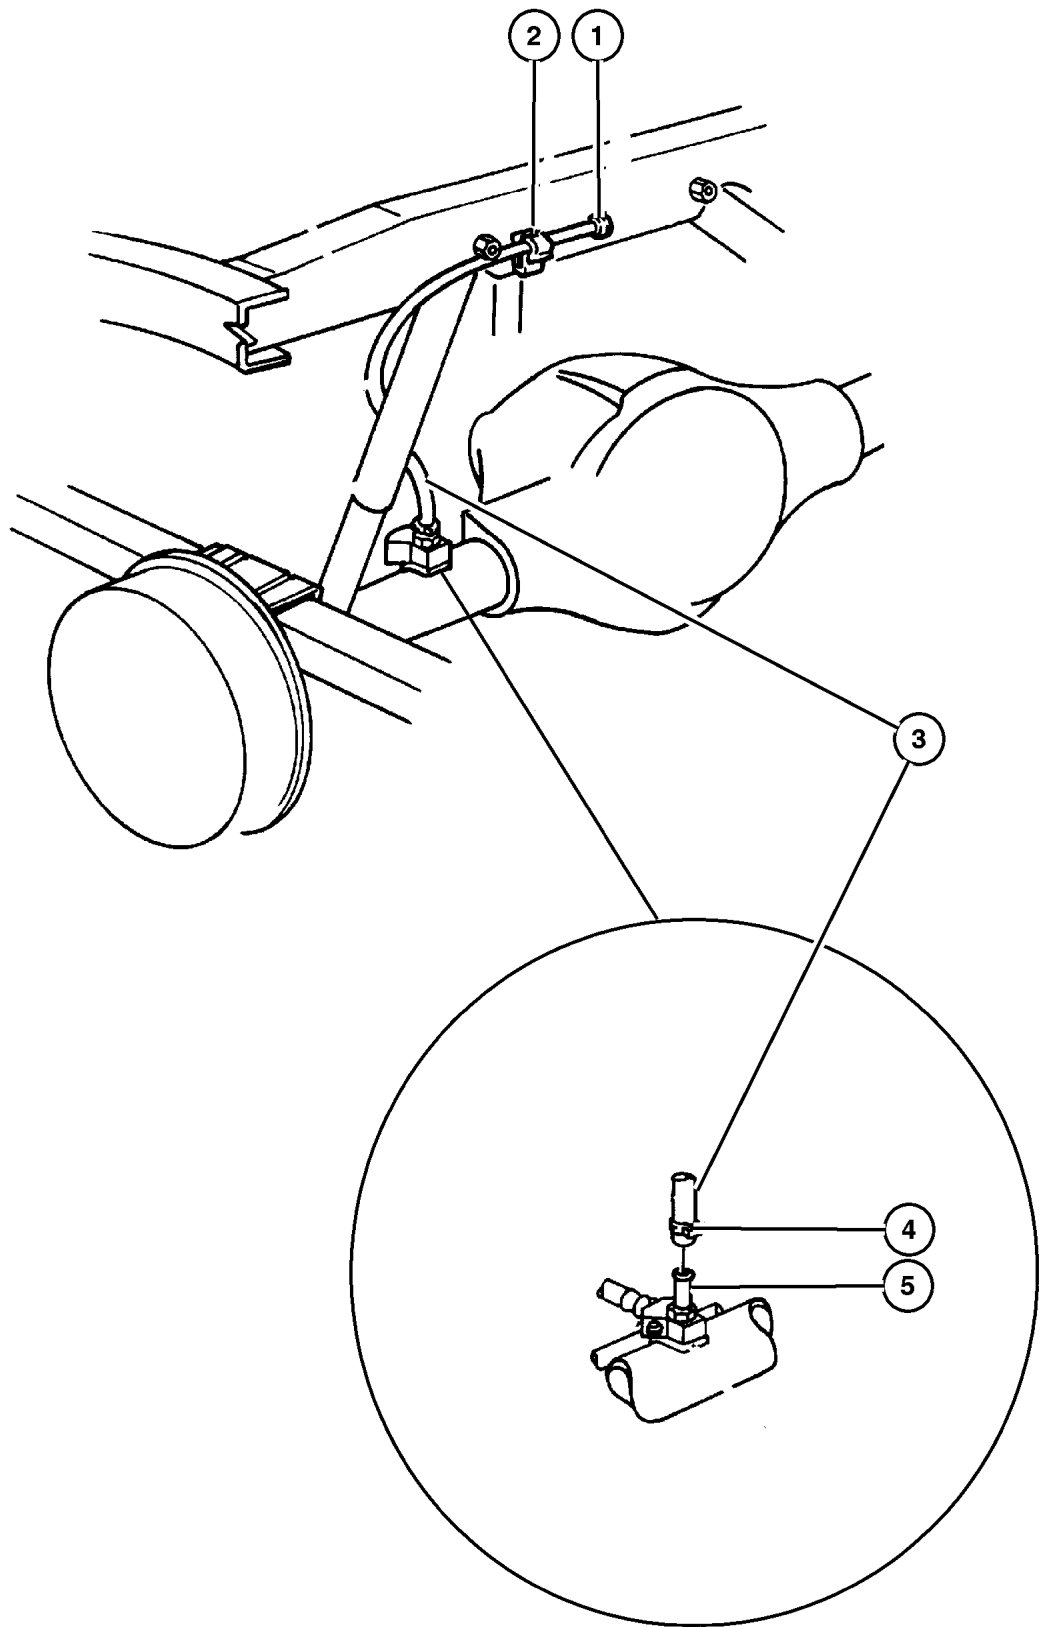
BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, ELO = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

September 16, 2005

Vent, Rear Axle
Figure 003-310



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	J535 2955	1							VENT, Axle, Upper
2	6032 633	1							CLIP, Vent Tube
3	4443 176	1							HOSE, Fuel, .31 I.D. 50 Foot Roll
4	0153 455	1							CLAMP, Hose, .620
5	4137 696AB	1							BOLT, Axle Vent, Lower

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Group – 004

Parking Brake


GROUP 4 - Parking Brake


Illustration Title

Group-Fig. No.


Parking Brake Lever and Cables

Parking Brake Lever	Fig. 004-110
Parking Brake Cable	Fig. 004-120

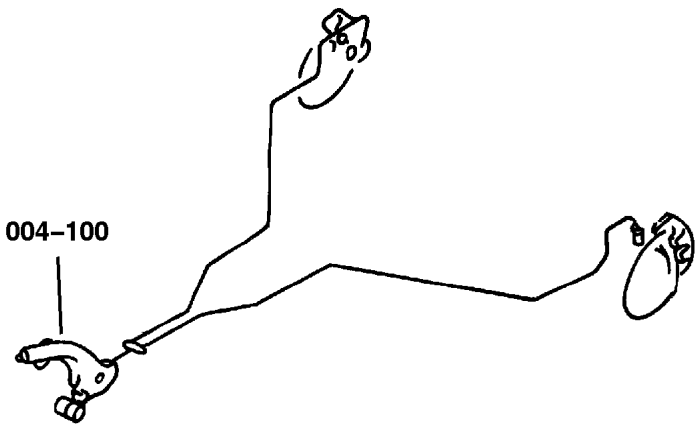
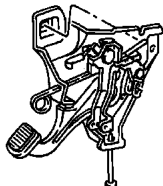
<div>004-100</div> <div>Parking Brake Lever and Cables</div> <div></div>			
---	--	--	--

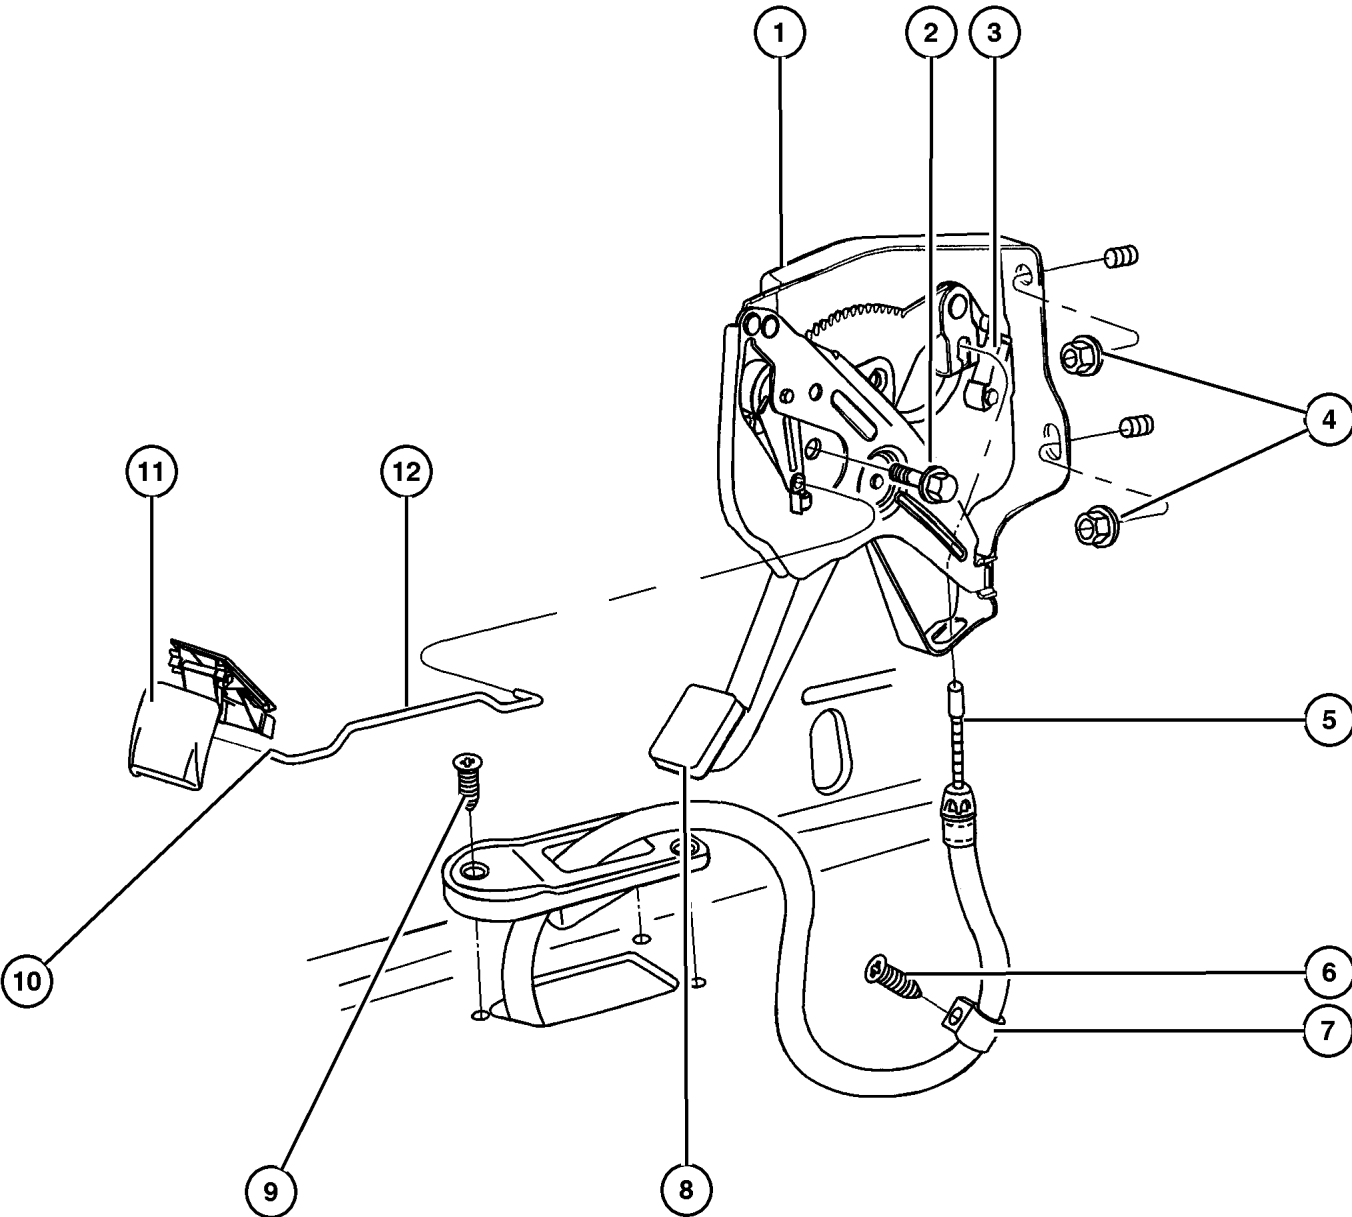Parking Brake Lever
Figure 004-110




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									LEVER, Park Brake
	52009 842AC	1							Upto and Including 03-26-00
	52009 842AD	1							03-27-00 and After
2	6101 787	1							SCREW, Tapping, M8x20, Parking Brake Lever Attaching
3	5017 047AA	1							SWITCH, Parking Brake
4	3420 1711	2							NUT, Hex Flange, M8x1.25, Parking Brake Assembly to Lever to Dash CABLE, Parking Brake
5	52009 767AA	1							SCREW, Round Head, .164-18x.560, Parking Brake Cable Clip Mounting
6	J400 4642	1							CLIP, Cable
7	0120 524	1							PAD, Parking Brake Pedal
8	5017 048AA	1							SCREW, Round Head, .164-18x.560, Parking Brake Cable Seal Mounting
9	J400 4642	3							CLIP, Latch Link
10	4658 677	1							RELEASE, Parking Brake
11	RU38 LAZAA	1							Agate
	RU38 VK9AA	1							Suede
	RU38 RC8AA	1							Cirrus
12									ROD, Parking Brake Release
	52009 907AB	1							Upto and Including 03-26-00
	52009 907AC	1							03-27-00 and After

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

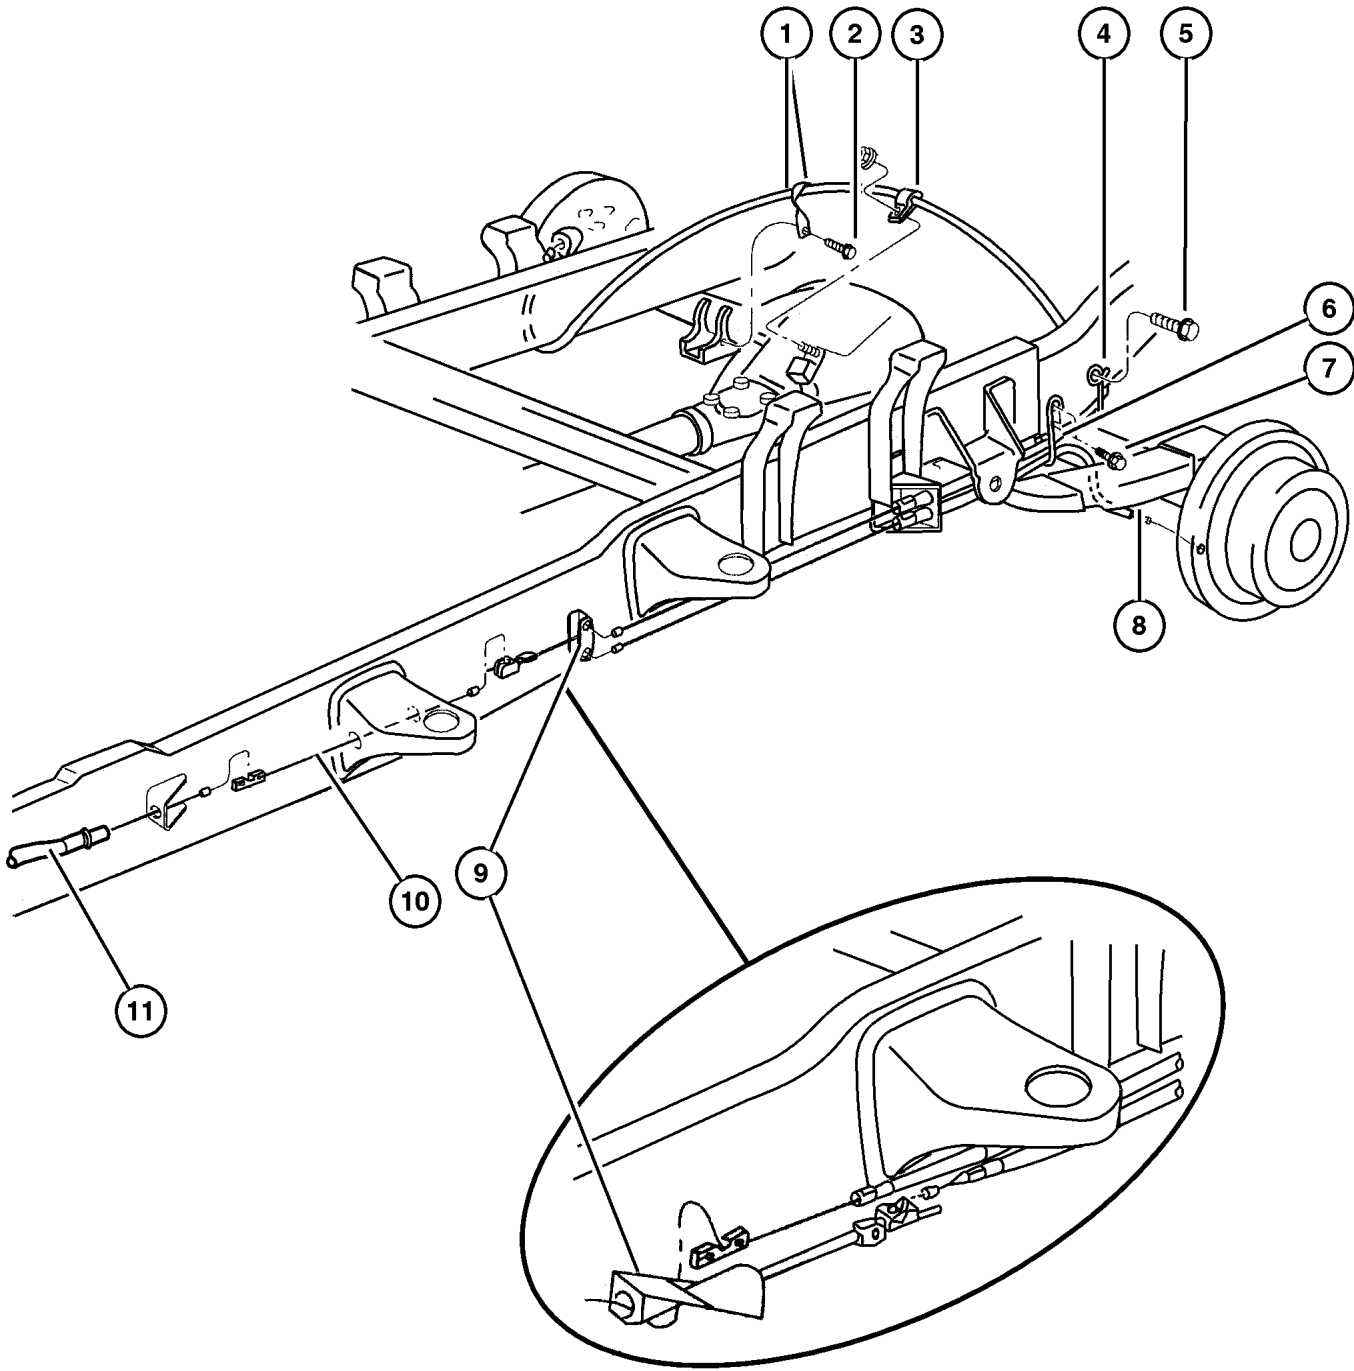Parking Brake Cable
Figure 004-120



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									CABLE, Parking Brake
	52009 934AA	1	1, 6						Right
	52009 712AA	1	2, 3, 7, 8		33, 34				Right
2									SCREW, Hex Flange Head, M8x1.25x25.00, (NOT SERVICED) (Not Serviced)
3	6503 291	1							CLIP, Brake Cable, 23x45x.76
4	5200 9060	1							GUIDE, Parking Brake Cable
5									SCREW, Hex Flange Head, M8x1.25x25.00, (NOT SERVICED) (Not Serviced)
6	5200 8943	1							GUIDE, Parking Brake Cable
7	6502 282	2							SCREW, Hex Head, M8x1.25x30
8									CABLE, Parking Brake
	52009 923AA	1	1, 6						Left
	52009 713AA	1	2, 3		33, 34				Left
	52009 697AA	1	7, 8		33, 34				Left
9									TENSIONER, Parking Brake Cable
	52008 437AD	1	1, 6						
	52009 841AA	1	2, 3, 7, 8		33, 34				
10									CABLE, Parking Brake
	52010 077AB	1	1, 6		31, 33				Intermediate
	52010 078AA	1	1, 6		34				Intermediate
	52010 070AB	1	2, 7		33				Intermediate
	52009 696AB	1	2, 3, 7, 8		34				Intermediate
11	52009 767AA	1							CABLE, Parking Brake, Front

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Group – 005

Service Brakes

GROUP 5 - Service Brakes

Illustration Title
 Group-Fig. No.

Front Brakes

Brakes,Front,BE 1,6	Fig. 005-110
Brakes,Front,BE 2,3,7,8	Fig. 005-120

Rear Brakes

Brakes, Rear,11 Inches X 2.25 Inches,BE 1,6	Fig. 005-210
Brakes, Rear, 12.125 Inches X 3.5 Inches,BE 2,3,7,8	Fig. 005-220
Drums And Bearing, Rear Brake,12.125 X 3.5 Inches,BE 2,3,7,8	Fig. 005-230

Power Brake Booster

Booster--Power Brake and Hydro	Fig. 005-310
--------------------------------	--------------

Brake Master Cylinder

Master Cylinder--Brake,All Bodies	Fig. 005-410
Hydraulic Control Unit,Brake,R.W.A.L and A.W.A.L	Fig. 005-420

Brake Lines and Hoses


Rear Height Sensing System	Fig. 005-510
Lines And Hoses,Brake,Front and Chassis	Fig. 005-520
Lines And Hoses,Brake,Rear	Fig. 005-530

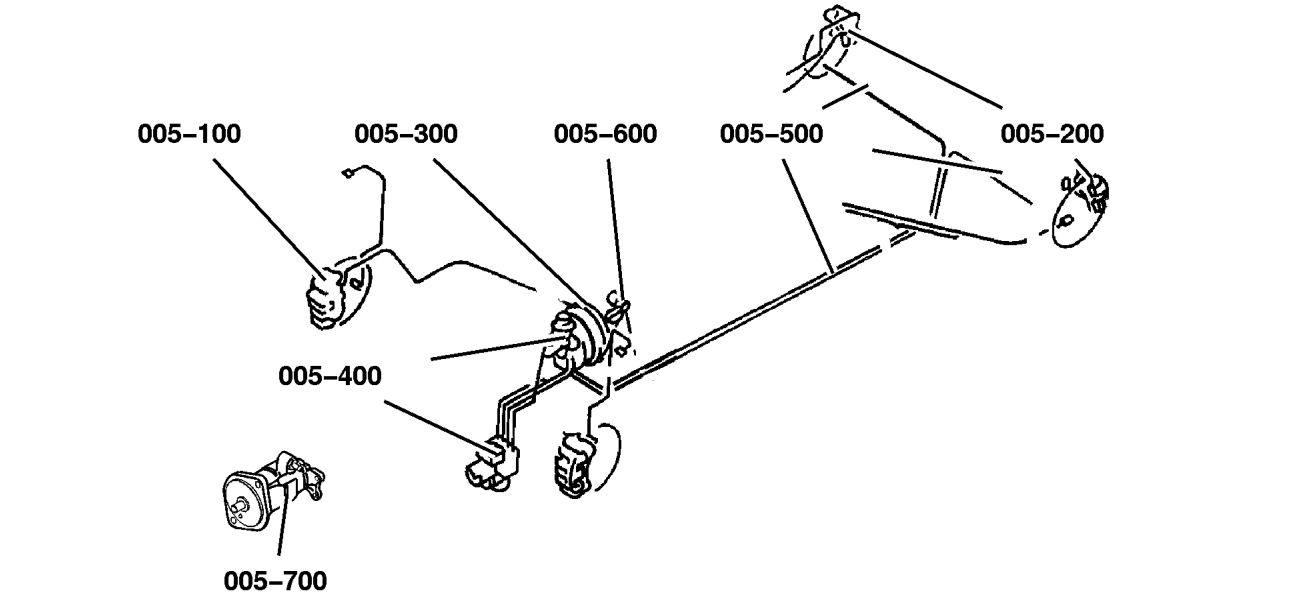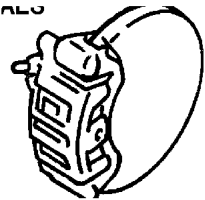
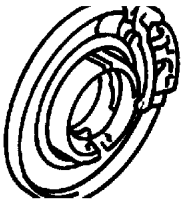
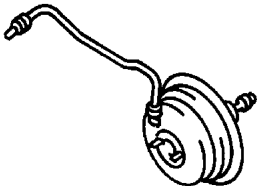
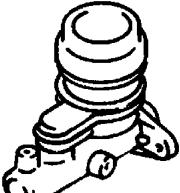
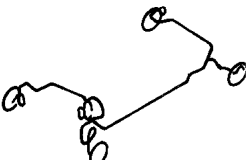

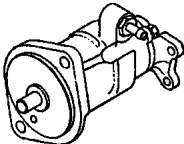
Brake Pedals

Pedal.Brake	Fig. 005-610
-------------	--------------


Vacuum Pump

Vacuum Pump, Brake,BE 2,3,7,8	Fig. 005-710
-------------------------------	--------------



005-100 Front Brakes 	005-200 Rear Brakes 	005-300 Power Brake Booster 	005-400 Brake Master Cylinder 
005-500 Brake Lines and Hoses 	005-600 Brake Pedals 	005-700 Vacuum Pump 	

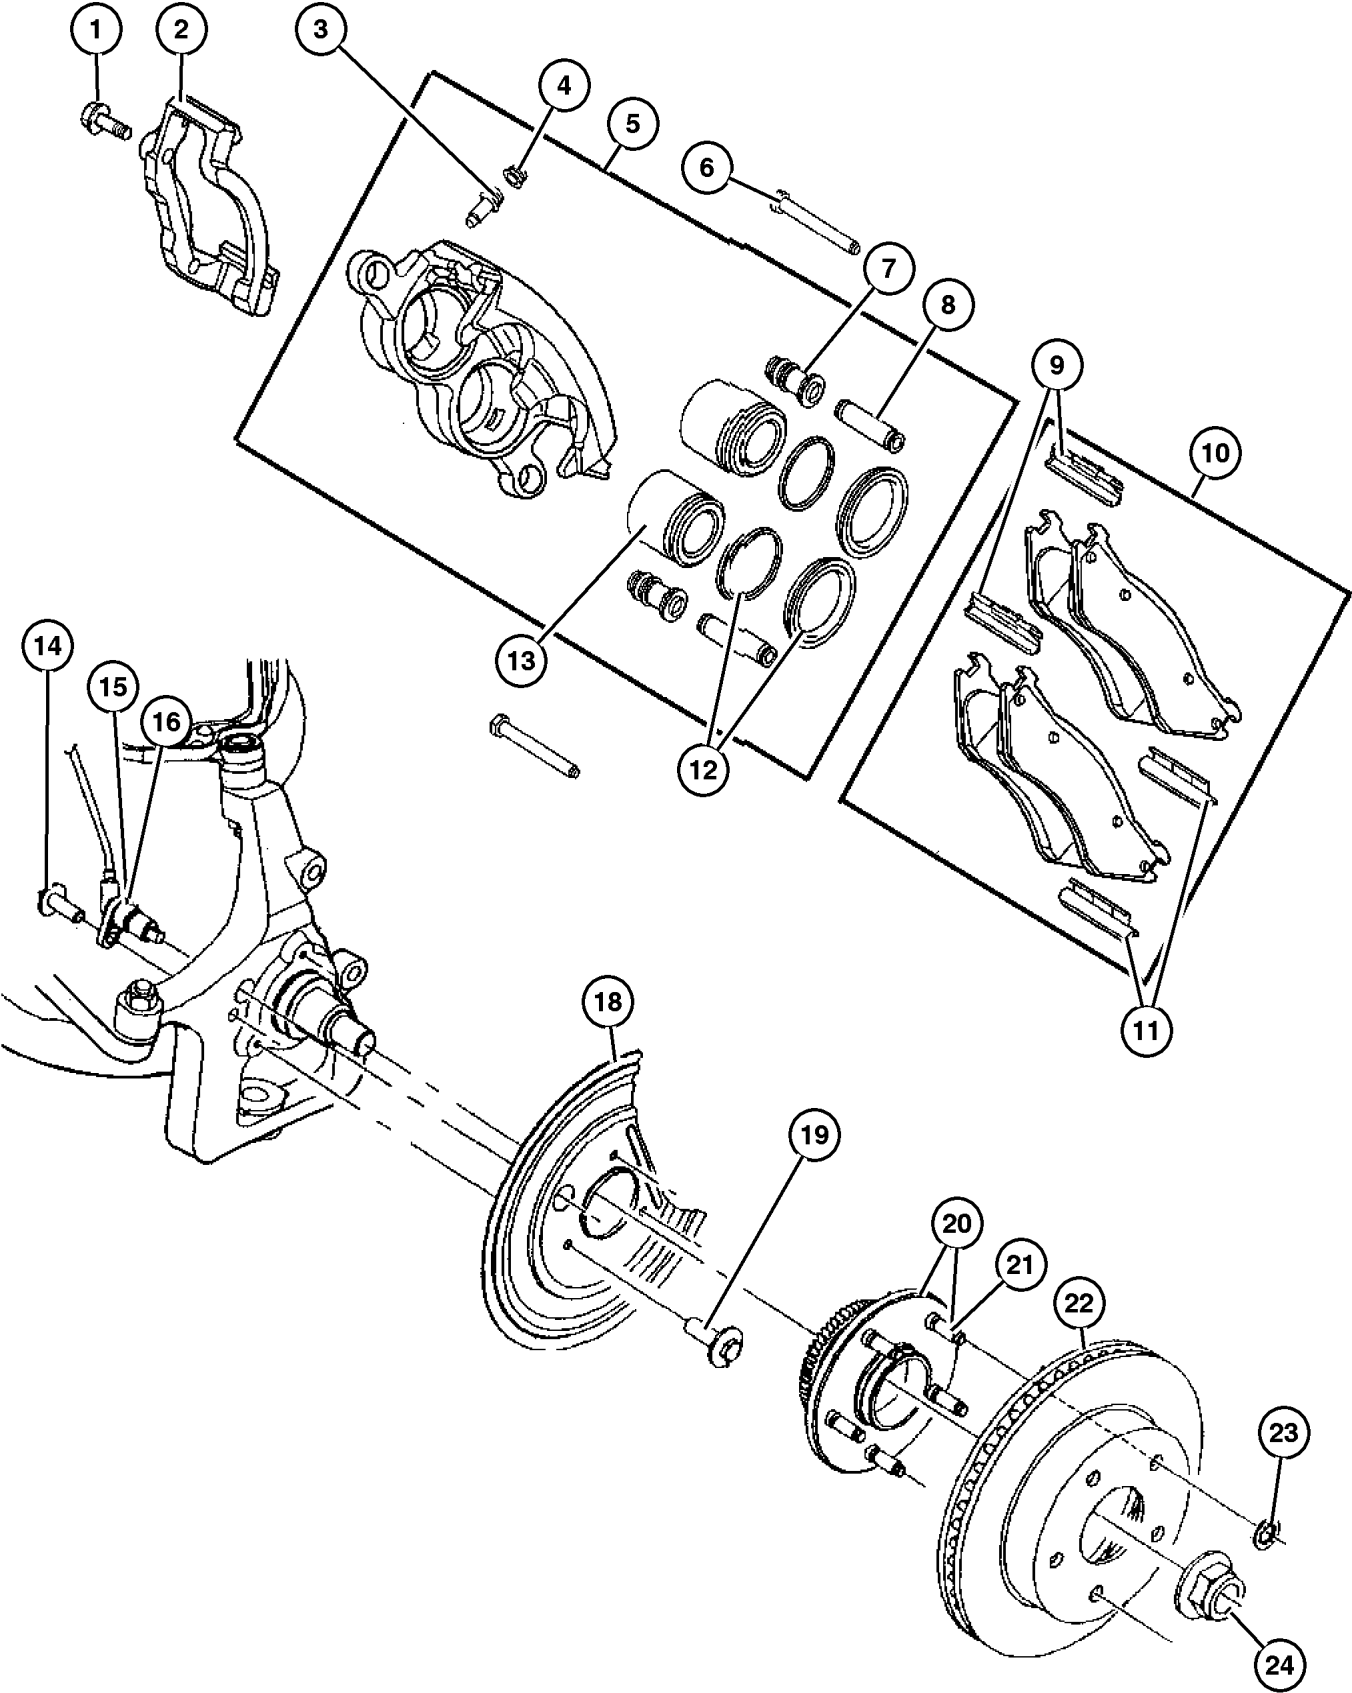Brakes,Front,BE 1,6
Figure 005-110




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:The Up To Anti-Rattle Clip is without Center Tab and the After is with Center Tab									
1	6504 691	4	1						BOLT Adapter-Upto and Including 12-07-99, Mounting
	6506 599AA	4	1						Adapter-12-08-99 and After, Mounting
	6504 691	4	6						Adapter-Upto and Including 12-07-99, Mounting
	6506 599AA	4	6						Adapter-12-08-99 and After, Mounting
2	5015 251AB	1	1						ADAPTER, Disc Brake Caliper
		1	6						
3	5015 248AA	1	1						BLEEDER SCREW, Brake
		1	6						
4	4238 717	1	1						CAP, Bleeder
		1	6						
5	5018 236AA	1	1						CALIPER, Disc Brake Right
	5018 237AA	1	1						Left
	5018 236AA	1	6						Right
	5018 237AA	1	6						Left
6	4423 639	2	1						PIN, Caliper
		2	6						
7	5003 896AA	2	1						BUSHING, Disc Brake Caliper
		2	6						
8	5018 238AA	2	1						SLEEVE, Disc Brake Caliper
		2	6						
9	5015 249AA	1	1						CLIP, Brake Anti-Rattle Leading-Upto and Including 02-04-00
		1	6						Leading-Upto and Including 02-04-00
	5018 403AA	1	6						Leading-02-05-00 and After
10									PAD KIT, Front Disc Brake

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

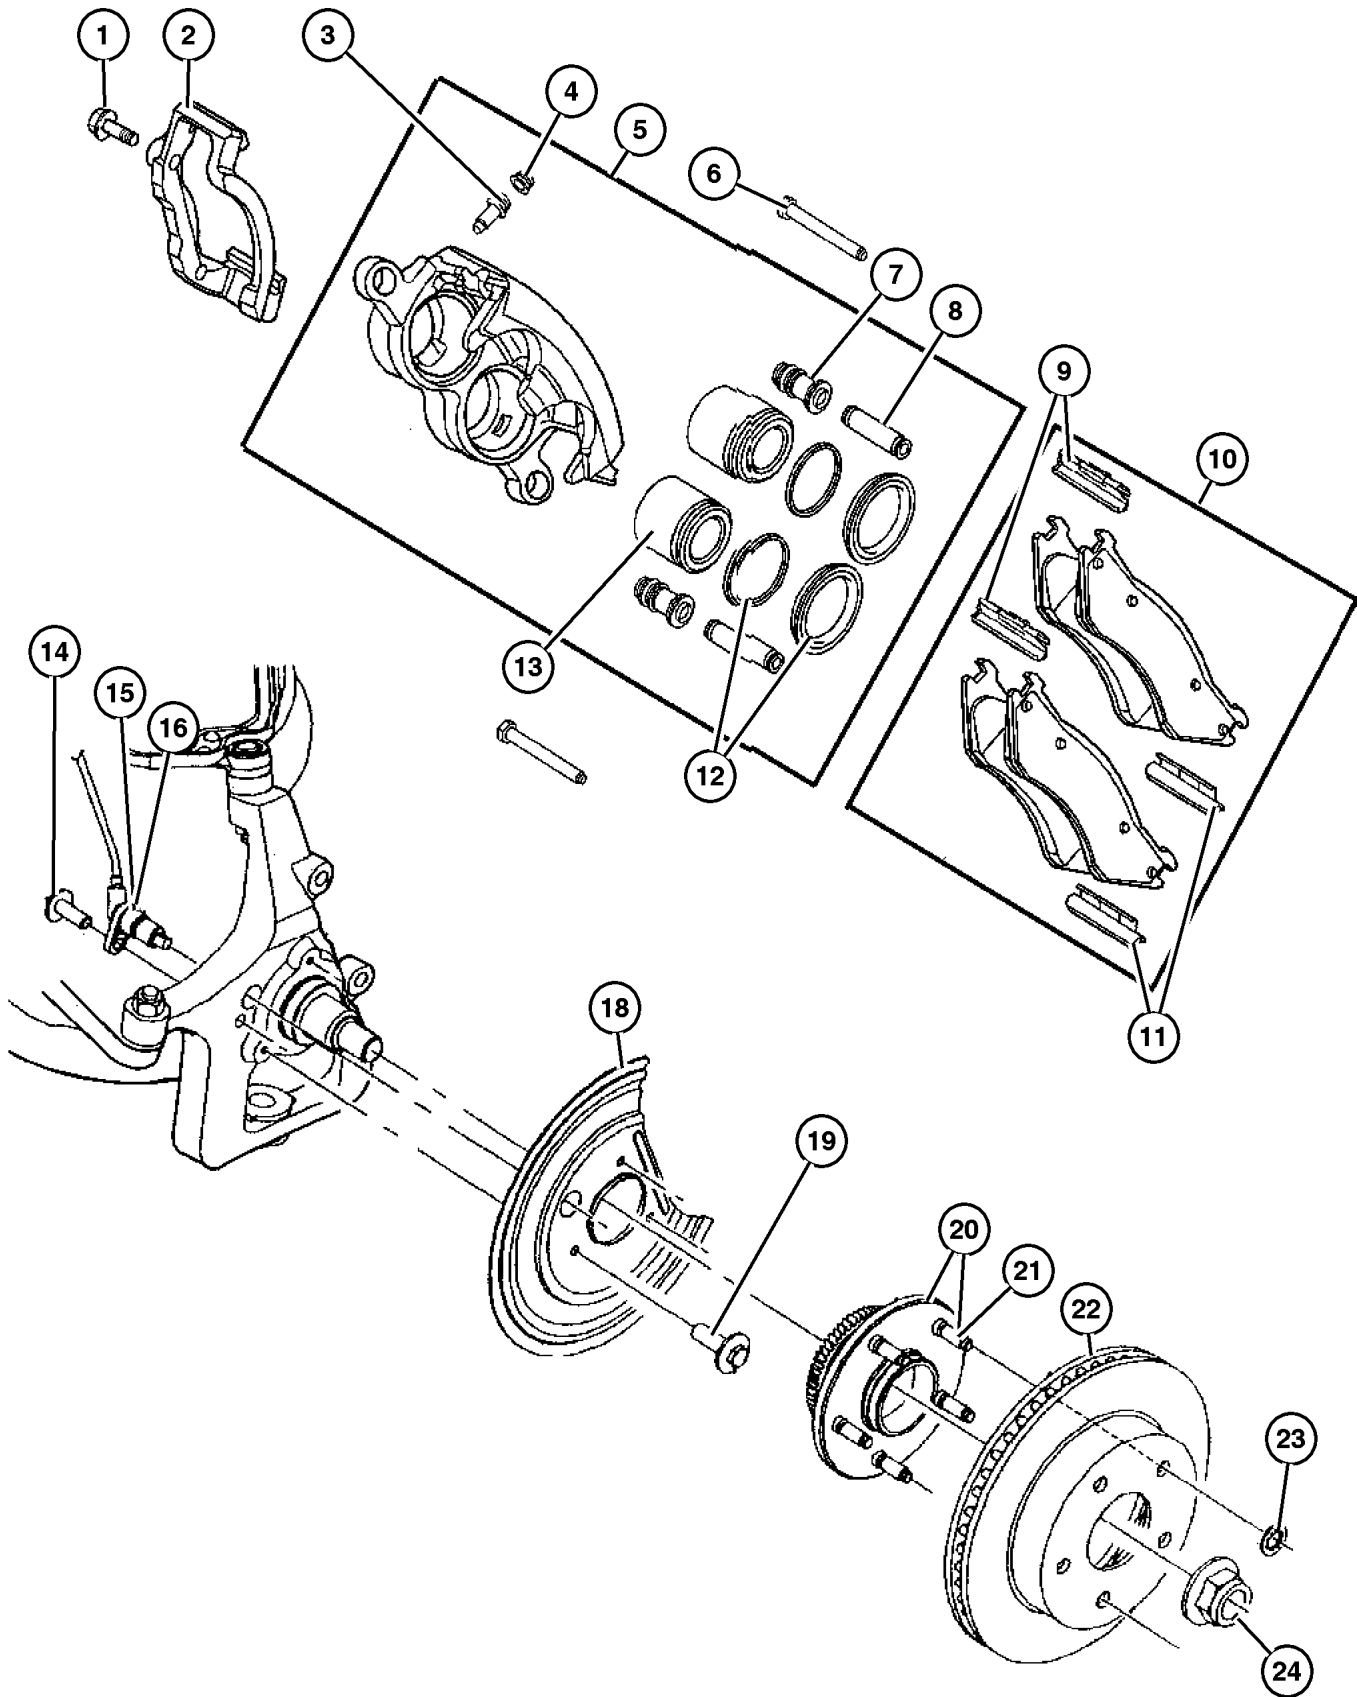Brakes,Front,BE 1,6
Figure 005-110




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
11	5018 240AA	1	1						CLIP, Brake Anti-Rattle Trailing-Upto and Including 02-04-00
	5015 250AA	1	1						
12	5018 404AA	1	6						Trailing-Upto and Including 02-04-00 Trailing-02-05-00 and After SEAL PACKAGE, Brake Caliper
	4364 779	2	1						
13	5018 235AA	2	1						PISTON, Brake
	6502 905	6	1, 2, 3						
14	6502 905	6	1, 2, 3						SCREW, Hex Flange Head, M8x1.25x23, ABS, Mounting
15	56028 217AC	2	1						SENSOR, Anti-Lock Brake
16	5015 283AA	1	6						SENSOR KIT, Anti-Lock Brakes, With Sensor,Screw,and Instruction Sheet
-17									BRACKET, Brake Sensor
18	5015 140AB-	1	6						SHIELD, Brake Right Left
	5015 141AB-	1	6						
19	52009 792AA	1	1						[BGJ], Right or Left [BGK], Right or Left
	52009 793AA	1	1						
20	5015 167AA	2	6						SCREW, Hex Flange Head, M8x1.25x23, Splash Shield, Mounting
	5015 139AA	2	6						
21	6502 905	6	1, 2, 3						HUB AND BEARING, Brake [BGJ,BGK] [BGJ] [BGK]
	52009 867AA	2	1						
22	52009 863AA	2	6						STUD, Hub
	52009 864AA	2	6						
23	4773 408	5	1						ROTOR, Brake
	52009 865AA	2	1						
24	52009 801AA	2	6						NUT, Push

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

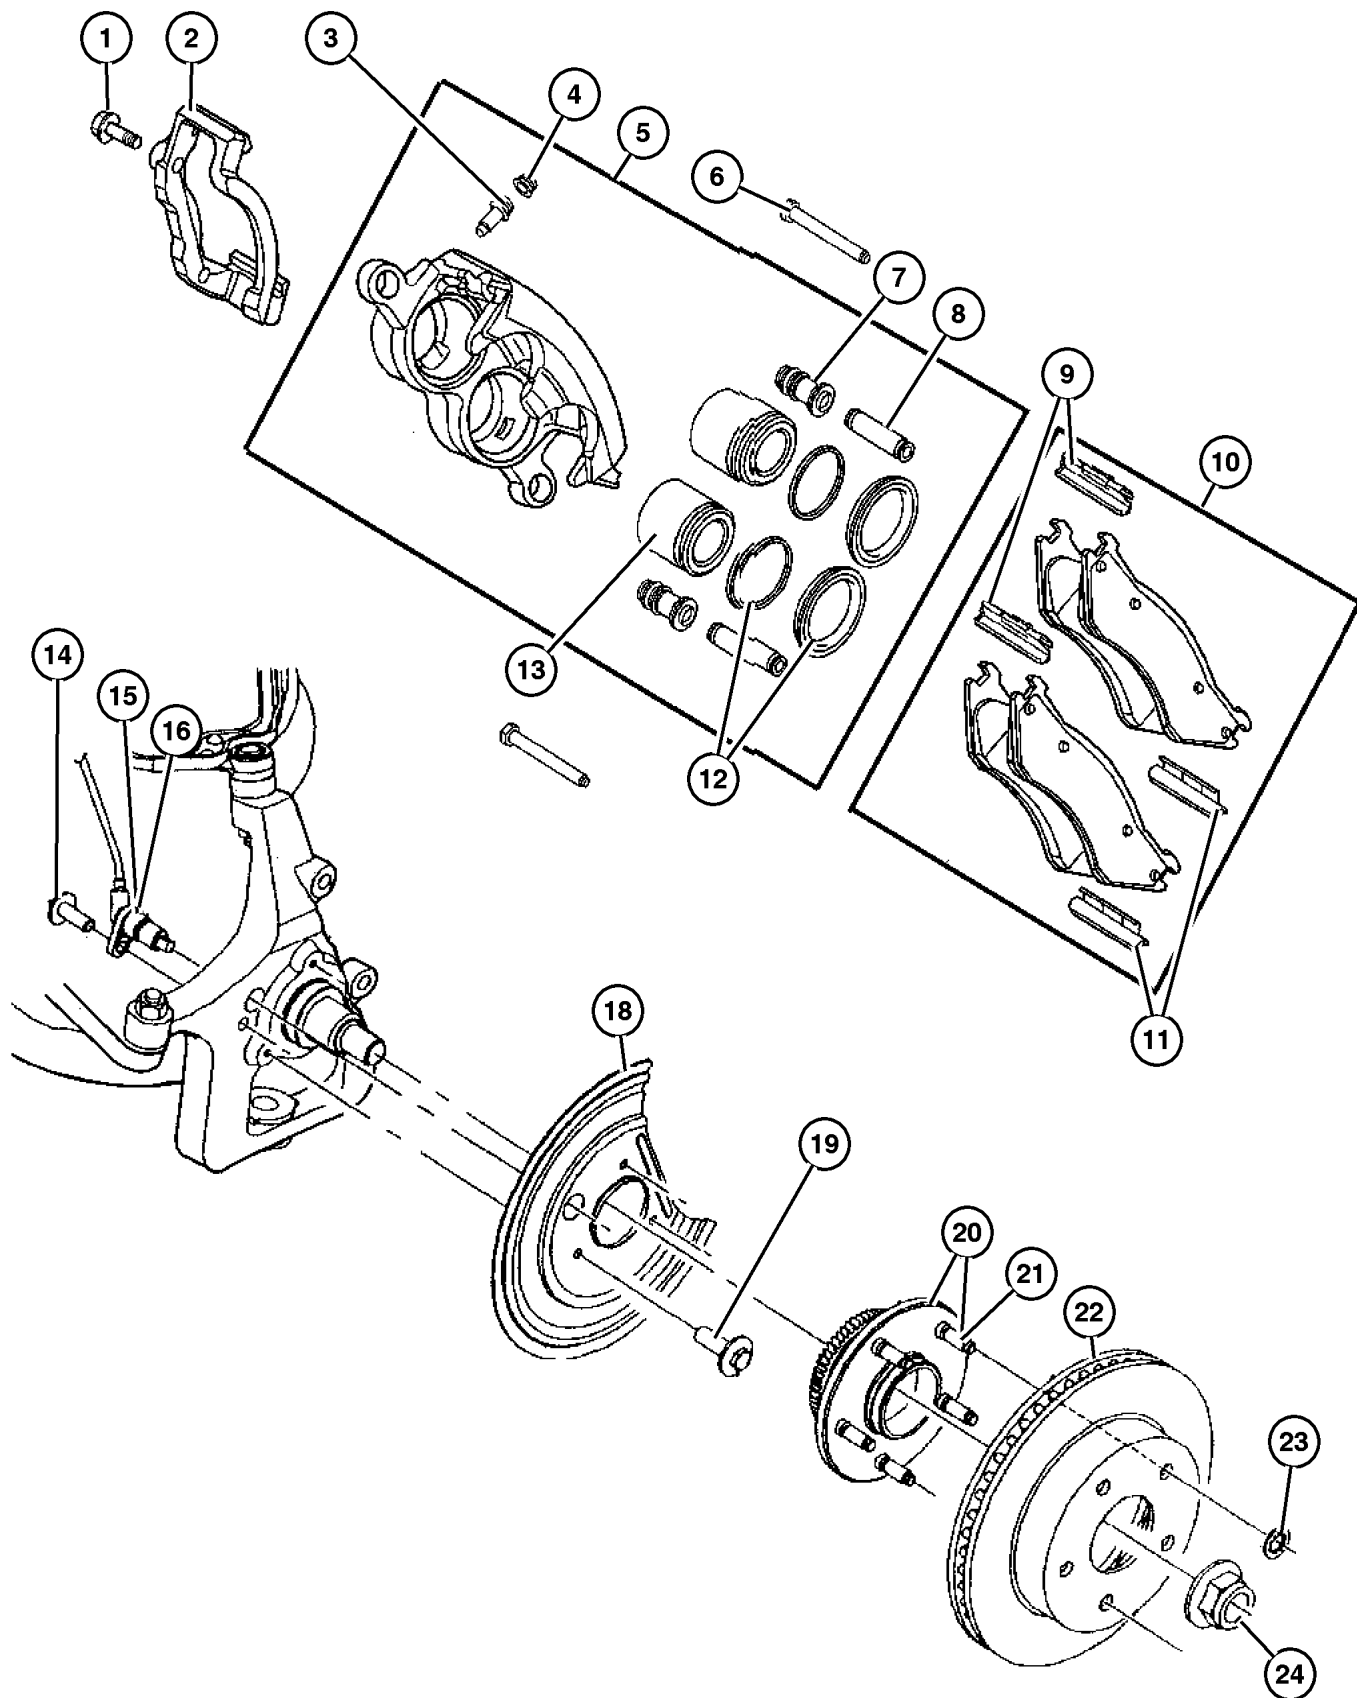Figure 005-110



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	6031 635	4	1						
		4	6		31, 33				
24									NUT, Axle Hub
	6504 007	2	1						
	4746 773	2	6						

DODGE RAM QUAD CAB/CLUB CAB (BE)

L = Ram Truck (All)

LINE

$$\begin{aligned} 1, 6 &= 1500 \\ 2, 7 &= 2500 \\ 3, 8 &= 3500 \end{aligned}$$

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

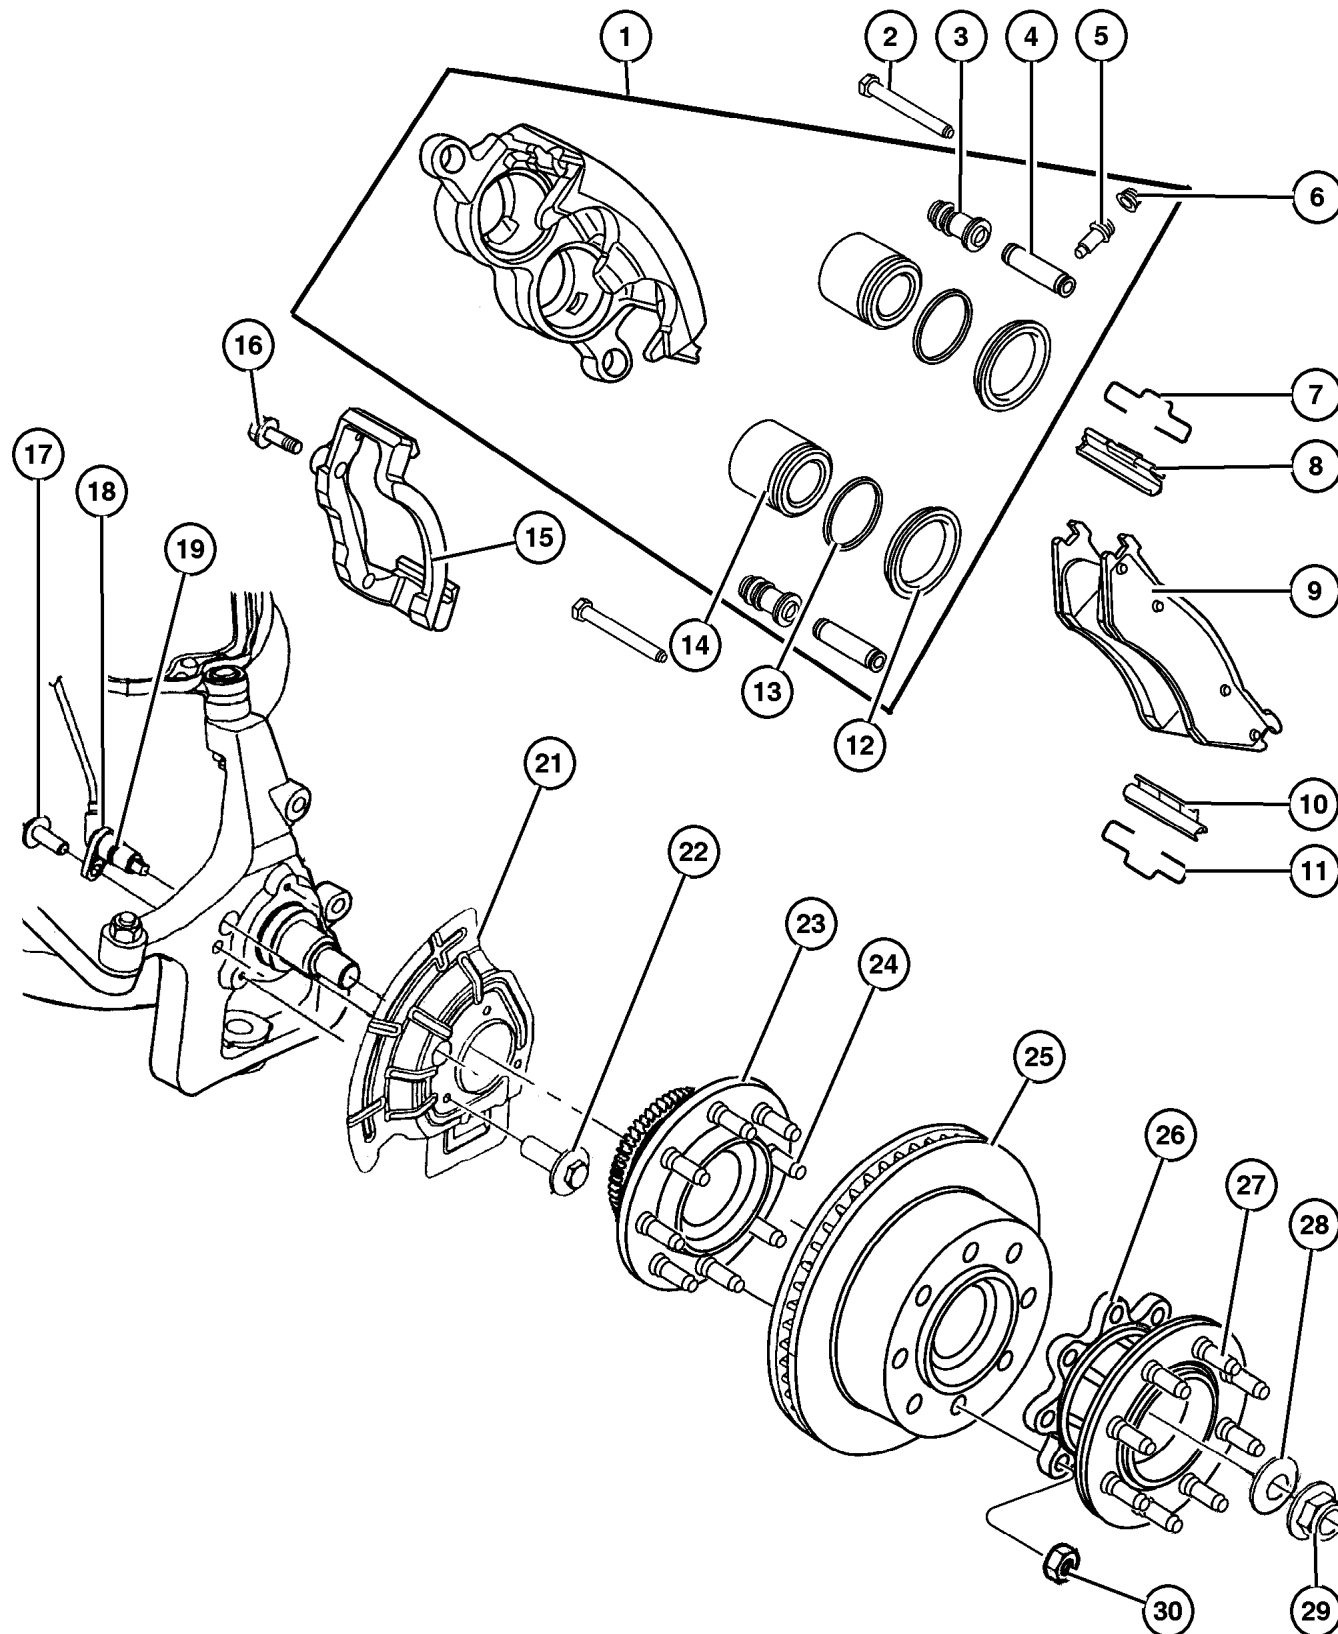
TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Brakes,Front,BE 2,3,7,8
Figure 005-120



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:The Up To Anti-Rattle Clip is without Center Tab and the After is with Center Tab									
1	5015 252AA	1	2, 3		33, 34				CALIPER, Disc Brake
	5015 253AA	1	2, 3		33, 34				Right
	5015 252AA	1	7		33, 34				Left
	5015 253AA	1	7		33, 34				Right
	5015 252AA	1	8		34				Left
	5015 253AA	1	8		34				Right
2	5003 898AA	2	2, 3		33, 34				PIN, Caliper
		2	7		33, 34				
		2	8		34				
3	5003 896AA	2	2, 3		33, 34				BUSHING, Disc Brake Caliper
		2	7		33, 34				
		2	8		34				
4	5003 897AA	2	2, 3		33, 34				SLEEVE, Disc Brake Caliper
		2	7		33, 34				
		2	8		34				
5	3780 788	1	2, 3		33, 34				BLEEDER SCREW, Brake
		1	7		33, 34				
		1	8		34				
6	4238 717	1	2, 3		33, 34				CAP, Bleeder
		1	7		33, 34				
		1	8		34				
7	5066 175AA	1	2, 3		33, 34				RETAINER
	5066 246AA	1	2, 3		33, 34				Leading-Upto and Including 06-18-00
	5066 175AA	1	7		33, 34				Leading-06-19-00 and After
	5066 246AA	1	7		33, 34				Leading-Upto and Including 06-18-00
	5066 175AA	1	8		34				Leading-06-19-00 and After
	5066 246AA	1	8		34				Leading-Upto and Including 06-18-00
8	5015 255AA	1	2, 3		33, 34				CLIP, Brake Anti-Rattle

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

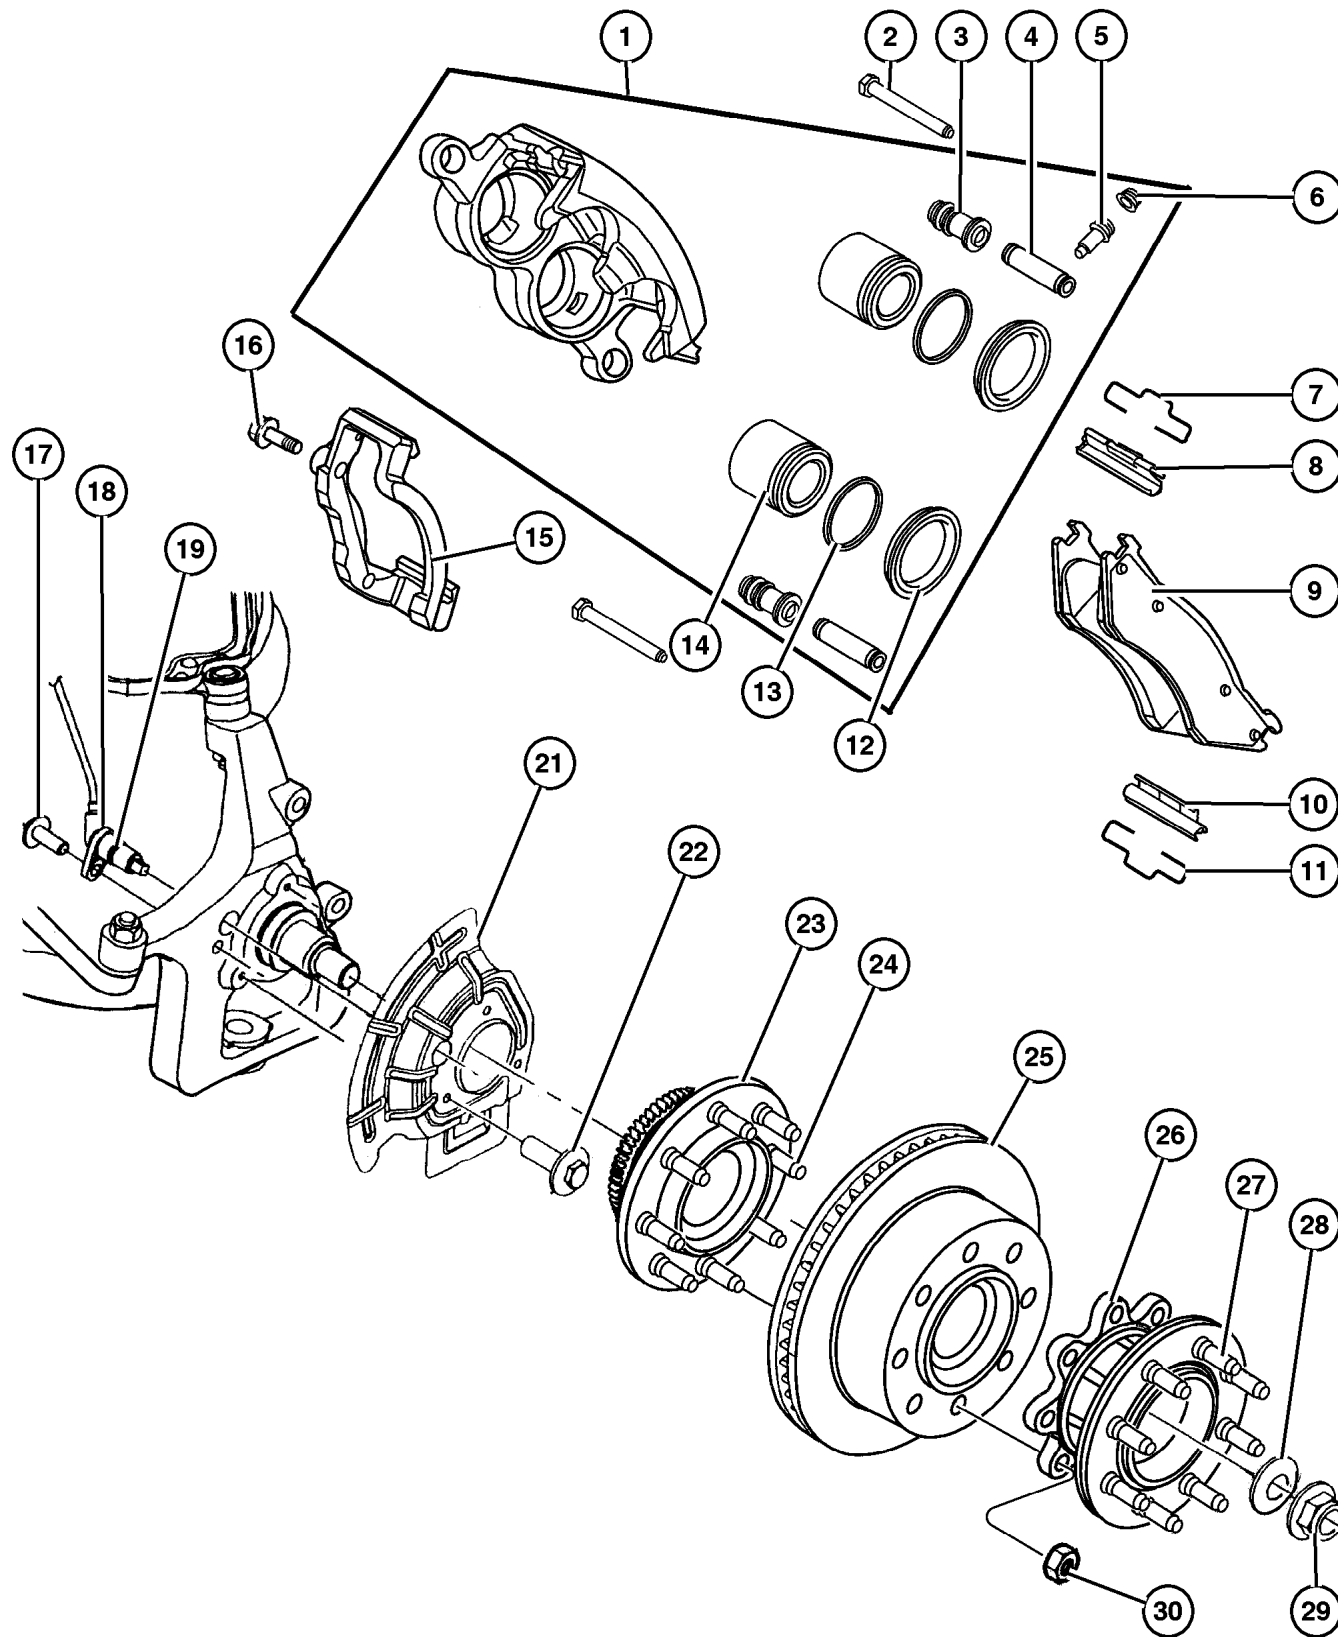
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Brakes,Front,BE 2,3,7,8
Figure 005-120



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	7		33, 34				
		1	8		34				
9	5015 254AA	1	2, 3		33, 34				PAD KIT, Front Disc Brake Contains 4 Pads
		1	7		33, 34				Contains 4 Pads
		1	8		34				Contains 4 Pads
10	5015 256AA	1	2, 3		33, 34				CLIP, Brake Anti-Rattle
		1	7		33, 34				
		1	8		34				
11	5066 176AA	1	2, 3		33, 34				RETAINER Trailing-Upto and Including 06-18-00
	5066 245AA	1	2, 3		33, 34				Trailing-06-19-00 and After
	5066 176AA	1	7		33, 34				Trailing-Upto and Including 06-18-00
	5066 245AA	1	7		33, 34				Trailing-06-19-00 and After
	5066 176AA	1	8		34				Trailing-Upto and Including 06-18-00
	5066 245AA	1	8		34				Trailing-06-19-00 and After
12									BOOT, Brake Piston
	5003 911AA	2	2, 3		33, 34				
		2	7		33, 34				
		2	8		34				
13									SEAL, Caliper Piston
	5003 910AA	2	2, 3		33, 34				
		2	7		33, 34				
		2	8		34				
14									PISTON, Brake
	5003 912AA	2	2, 3		33, 34				
		2	7		33, 34				
		2	8		34				
15									ADAPTER, Disc Brake Caliper
	5015 318AA	1	2, 3		33, 34				Right
	5015 319AA	1	2, 3		33, 34				Left
	5015 318AA	1	7		33, 34				Right
	5015 319AA	1	7		33, 34				Left
	5015 318AA	1	8		34				Right
	5015 319AA	1	8		34				Left
16									BOLT

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

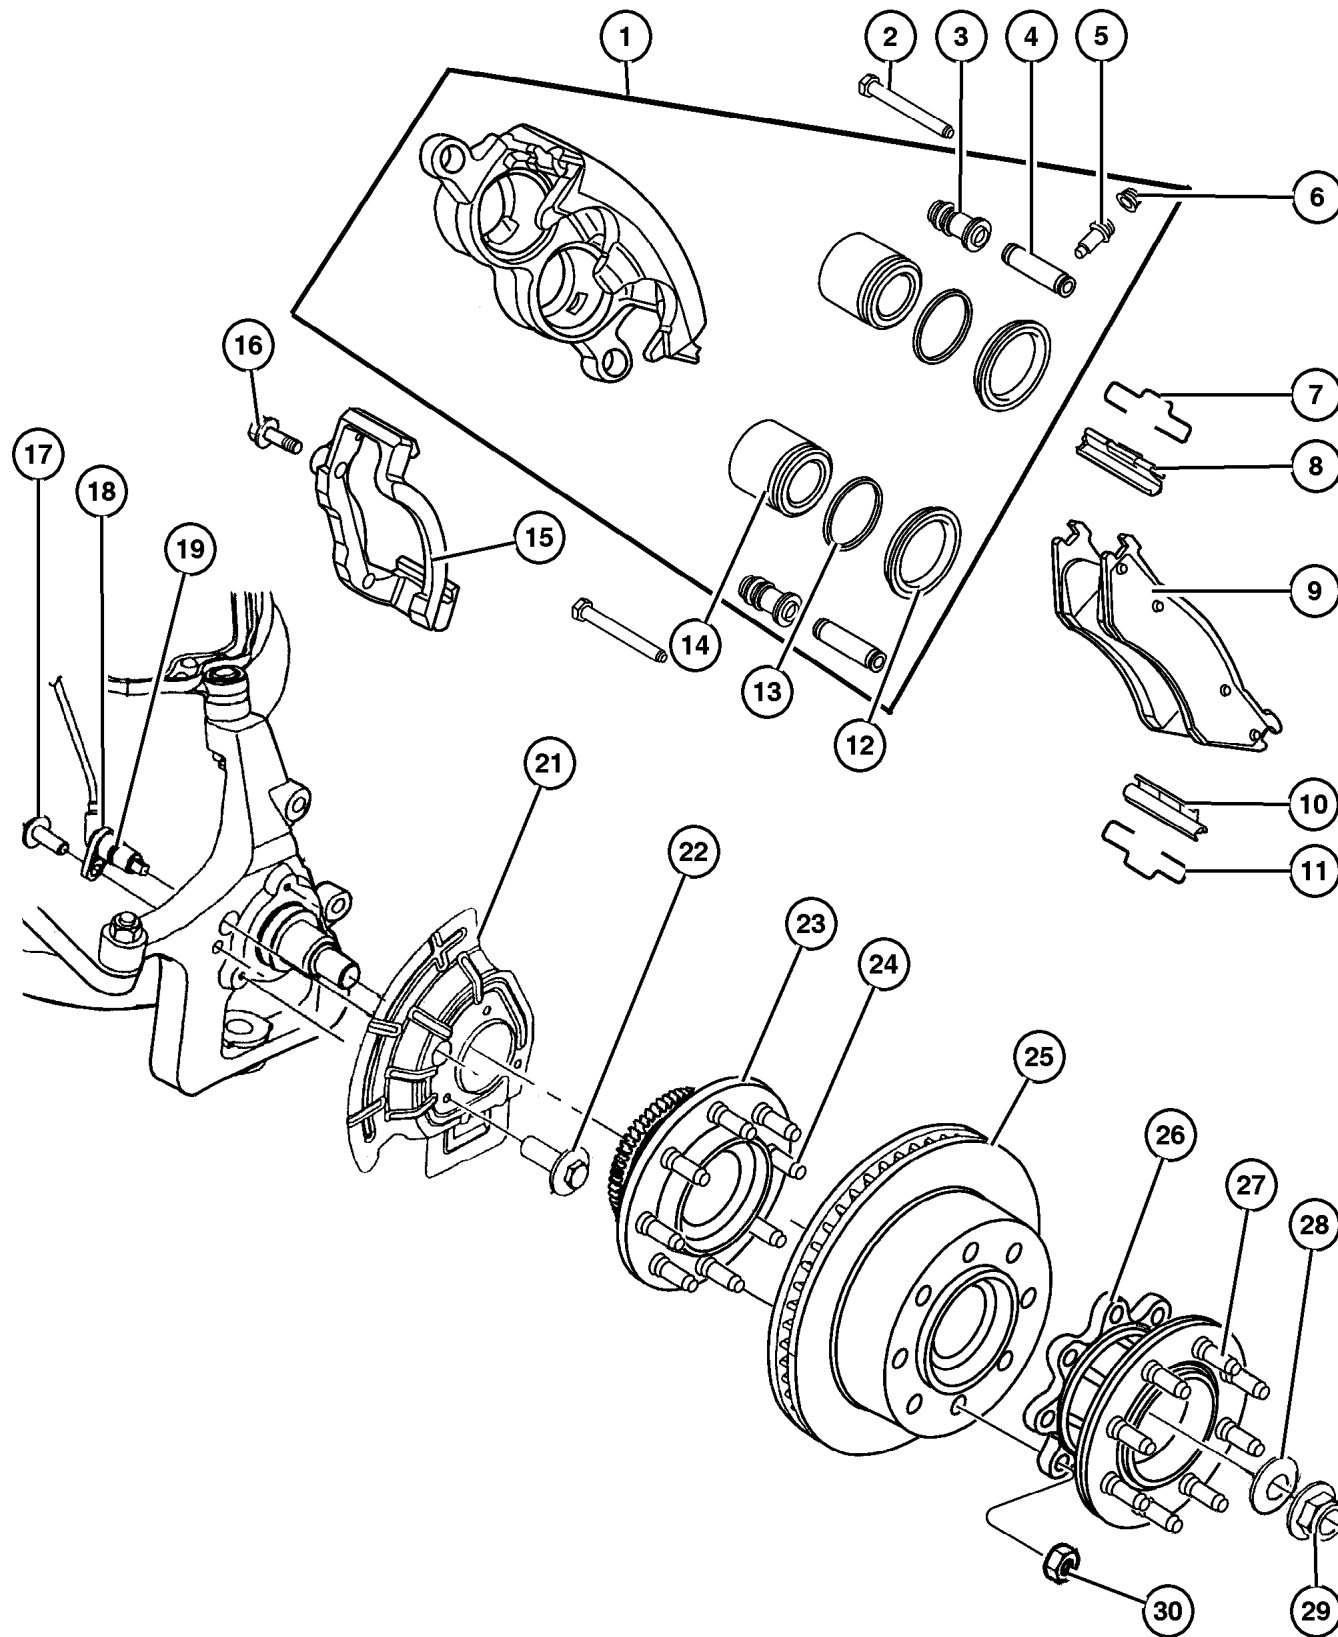
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Brakes,Front,BE 2,3,7,8
Figure 005-120



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	6505 830AA	4	2, 3		33, 34				Mounting
		4	7		33, 34				Mounting
		4	8		34				Mounting
17	6502 905	6	1, 2, 3						SCREW, Hex Flange Head, M8x1.25x23
18	56028 216AC	2	2, 3		33, 34				SENSOR, Anti-Lock Brake
19	5015 882AA	1	7		33, 34				SENSOR KIT, Anti-Lock Brakes
		1	8		34				
-20									BRACKET, Brake Sensor
	5015 126AA-	1	7		33, 34				Right
	5015 127AA-	1	7		33, 34				Left
	5015 126AA-	1	8		34				Right
	5015 127AA-	1	8		34				Left
21									SHIELD, Brake
	52009 676AA	1	2, 3		33, 34				Upto and Including 10-31-99, Right
	52009 676AB	1	2, 3		33, 34				11-01-99 and After, Right
	52009 677AA	2	2, 3		33, 34				Upto and Including 10-31-99, Left
	52009 677AB	1	2, 3		33, 34				11-01-99 and After, Left
	5015 128AA	1	7		33, 34				Right
	5015 129AA	1	7		33, 34				Left
	5015 128AA	1	8		34				Right
	5015 129AA	1	8		34				Left
22	6502 905	6	1, 2, 3						SCREW, Hex Flange Head, M8x1.25x23, Splash Shield, Mounting
23									HUB AND BEARING, Brake
	5015 228AA	1	2		33, 34				[BGJ,BGK]
		1	3		34				[BGJ,BGK]
	5015 456AA	1	7		33, 34				[BGJ]
	5015 282AA	1	7		33, 34				[BGK]
		1	8		34				[BGJ,BGK]
24									STUD, Hub
	5015 229AA	16	3		34				Hub to Wheelhouse Extension
		16	8		34				Hub to Wheelhouse Extension
25									ROTOR, Brake
	5015 230AA	1	2		33, 34				
		1	3		34				
		1	7		33, 34				
		1	8		34				
26									EXTENSION, Wheel House

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

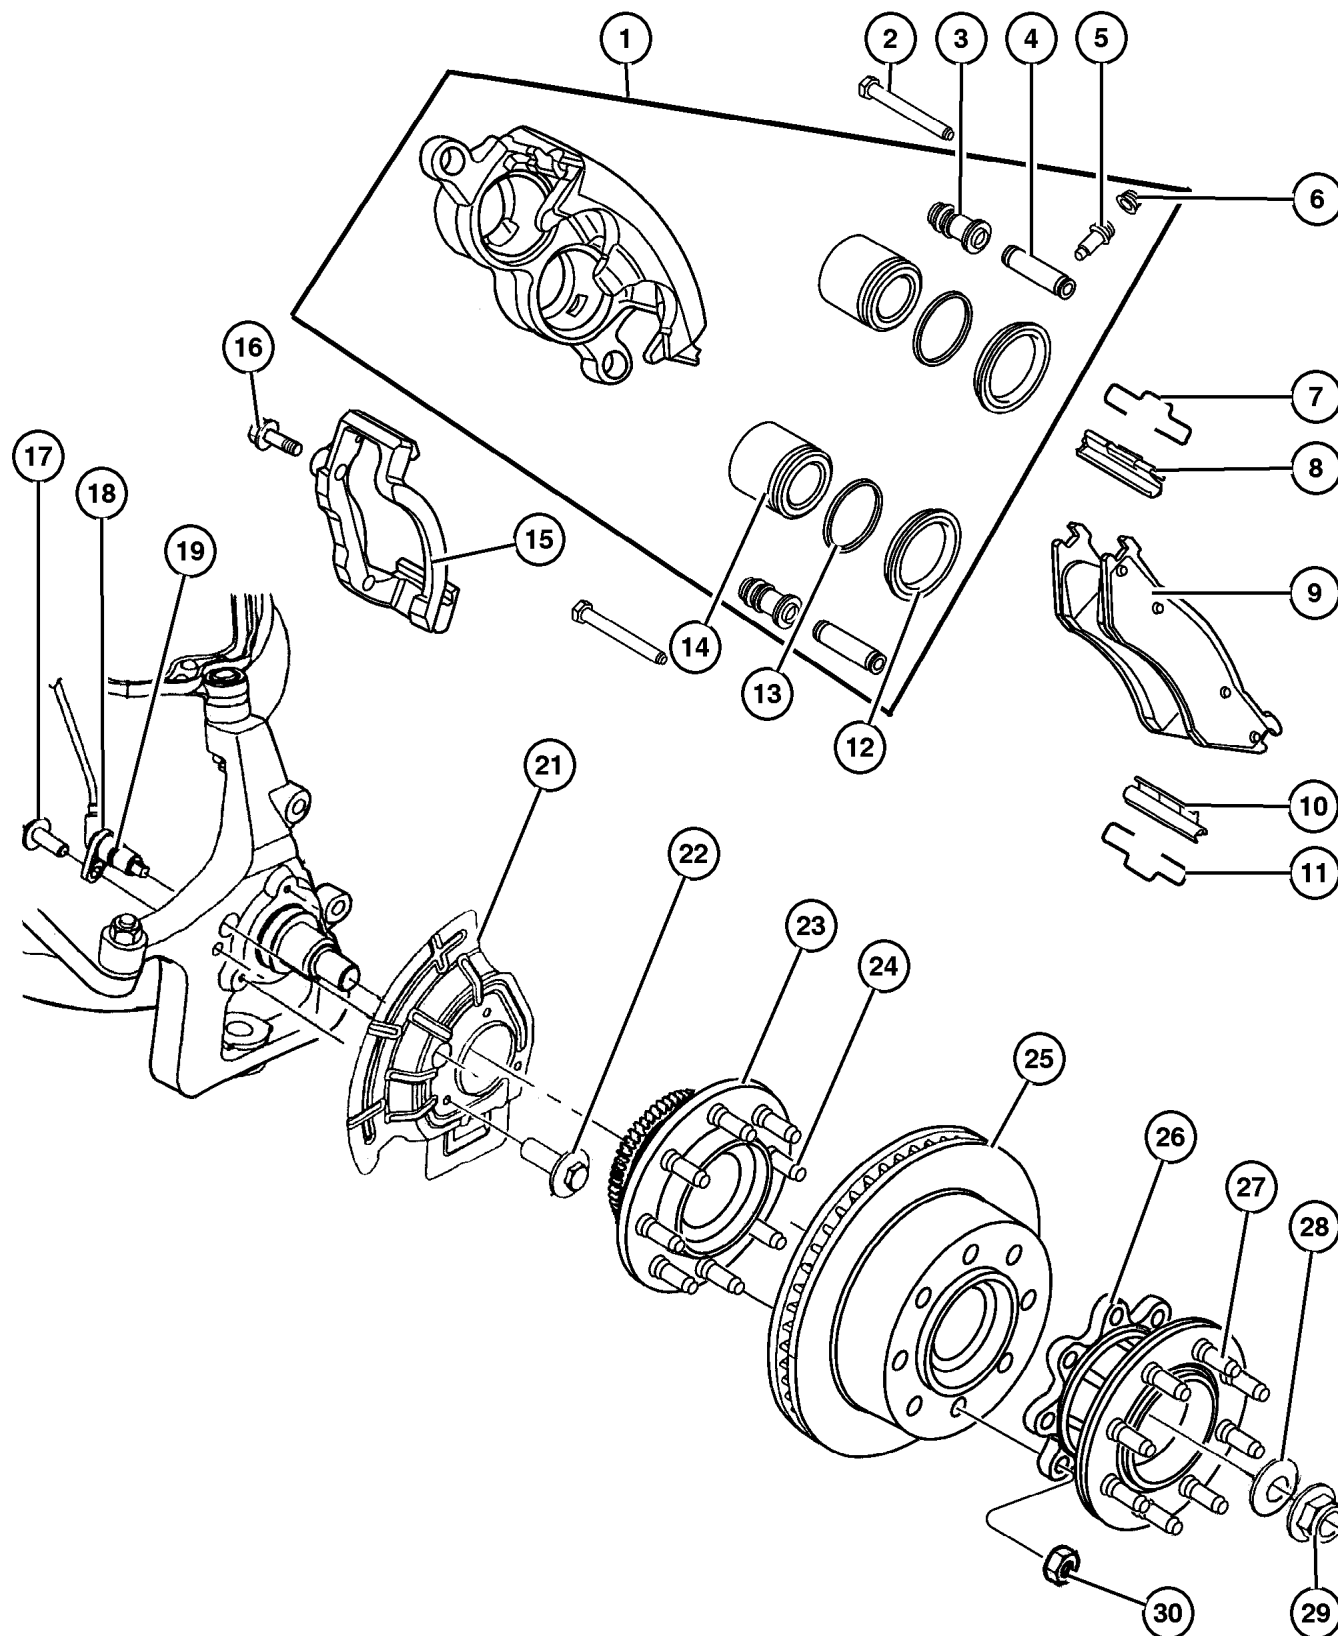
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Brakes,Front,BE 2,3,7,8
Figure 005-120



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5015 234AA	1	3		34				
27		1	8		34				STUD, Hub
	5015 229AA	8	2		33, 34				Wheel, Mounting
		16	3		34				Wheel, Mounting
28		8	7		33, 34				Wheel, Mounting
		16	8		34				
									WASHER, Flat
	4746 811	2	7		33, 34				
29		2	8		34				NUT, Axle Hub
	6505 007AA	2	2, 3		33, 34				
	4746 773	2	7		33, 34				
30		2	8		34				NUT
	4746 899	8	3		34				Wheel House Extension to Hub Stud
		8	8		34				Wheel House Extension to Hub Stud


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

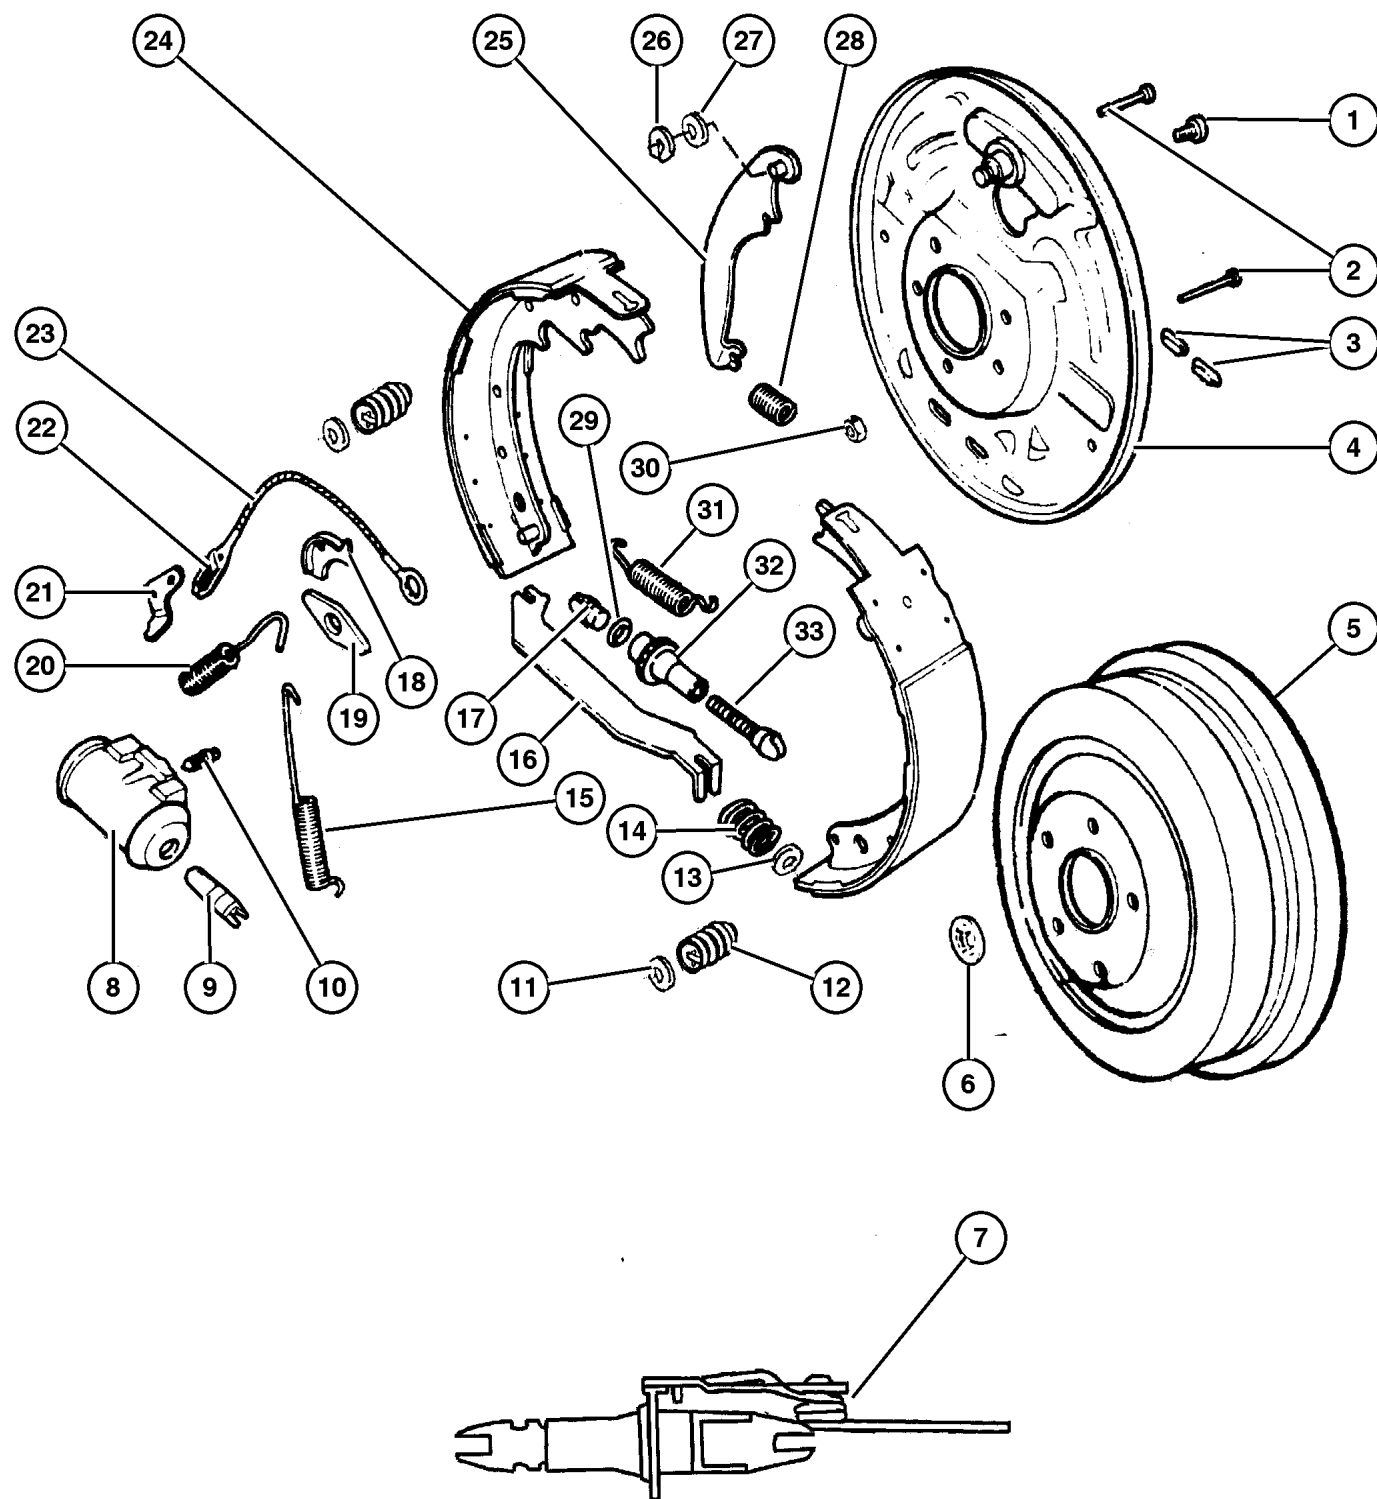Brakes, Rear,11 Inches X 2.25 Inches,BE 1,6
Figure 005-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	6028 921	2	1						BOLT, Hex Head
		2	6						Wheel Cylinder Mounting
2	5014 223AA	2	1						Wheel Cylinder Mounting
		2	6						PIN, Brake Shoe Hold Down
3	3200 0147	2	1						PLUG, Brake Adjusting Hole
		2	6						
4	5015 320AA	1	1						PLATE, Brake Backing
	5015 321AA	1	1						Right
	5015 320AA	1	6						Left
	5015 321AA	1	6						Right
5	52009 800AA	2	1						Left
		2	6						DRUM, Brake
6	6031 635	4	1						NUT, Push, .50-13
		4	6						Brake Drum Retainer
7	4746 582	1	1						Brake Drum Retainer
	4746 583	1	1						SPRING, Auto Adjusting
	4746 582	1	6						Lever, Right
	4746 583	1	6						Lever, Left
8	4088 898	1	1						Lever, Right
	4088 899	1	1						Lever, Left
	4088 898	1	6						Right
	4088 899	1	6						Left
9	3492 657	2	1						LINK, Brake
		2	6						Wheel Cylinder (Push Rod)
10	J320 3313	1	1						Wheel Cylinder (Push Rod)
		1	6						SCREW, Bleeder
11	5014 227AA	2	1						CUP, Brake Hold Down Spring
		2	6						
12									SPRING, Brake Shoe Hold Down


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

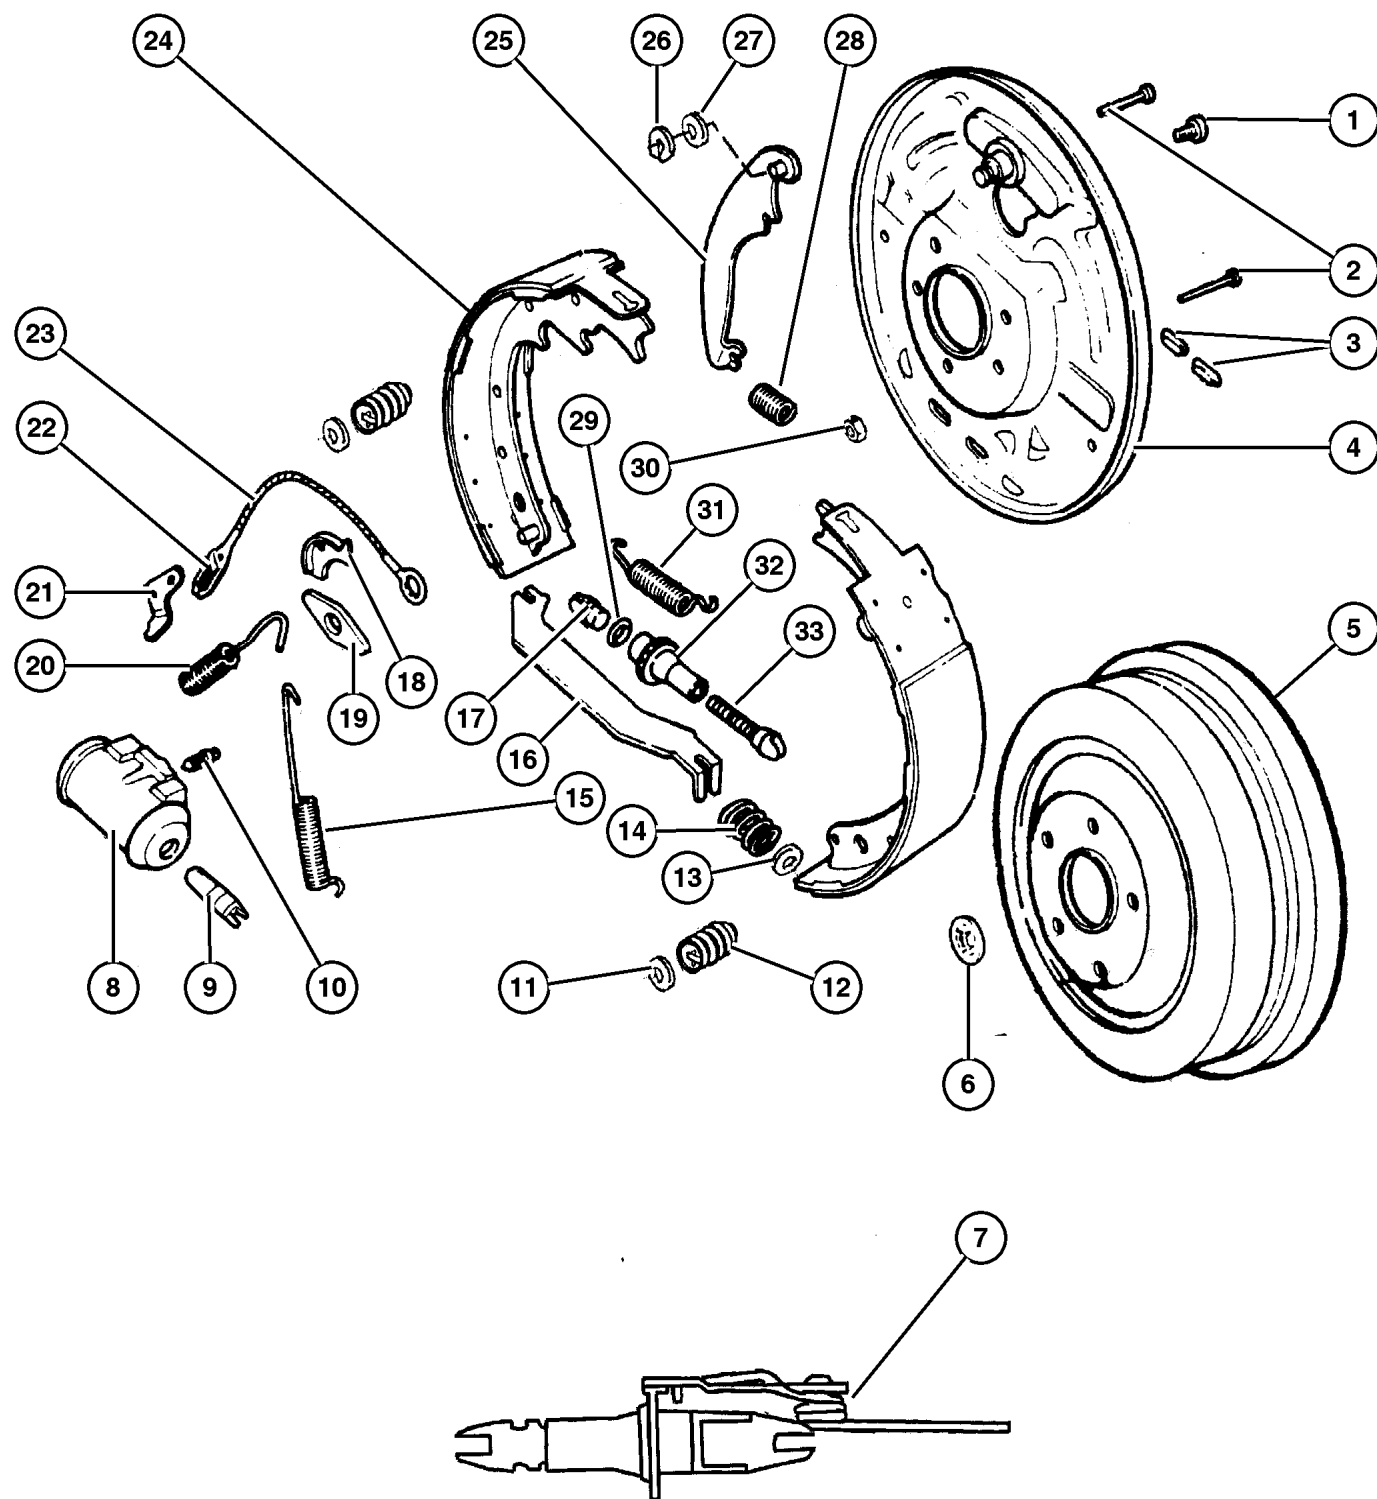Brakes, Rear,11 Inches X 2.25 Inches,BE 1,6
Figure 005-210




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
13	5014 224AA	2	1						CLIP, Park Brake Strut
		2	6						
14	4773 762	1	1						SPRING, Parking Brake Strut
		1	6						
15	4773 942	1	1						SPRING, Brake Shoe Return
		1	6						
16	5003 781AA	1	1						Primary Primary STRUT, Parking Brake
		1	6						
17	5003 791AA	1	1						SOCKET, Brake Adjusting
		1	6						
18	4746 586	1	1						GUIDE, Brake Adjusting Cable
		1	6						
19	J320 1947	1	1						PLATE, Brake Shoe Guide
		1	6						
20	5003 786AA	1	1						SPRING, Brake Shoe Return Secondary
		1	6						
21	2953 992	1	1						LEVER, Rear Wheel Brake Adjust Right Left
		1	6						
22	5003 788AA	1	1						Right Left SPRING, Adjuster Cable
		1	1						
23	5003 788AA	1	6						CABLE, Brake Automatic Adjuster
		1	6						
24	3461 660	1	1						SHOE AND LINING KIT, drum
		1	6						
25	3461 664	1	1						LEVER, Park Brake Adjusting
		1	6						
	5014 126AA	1	1						
		1	6						

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

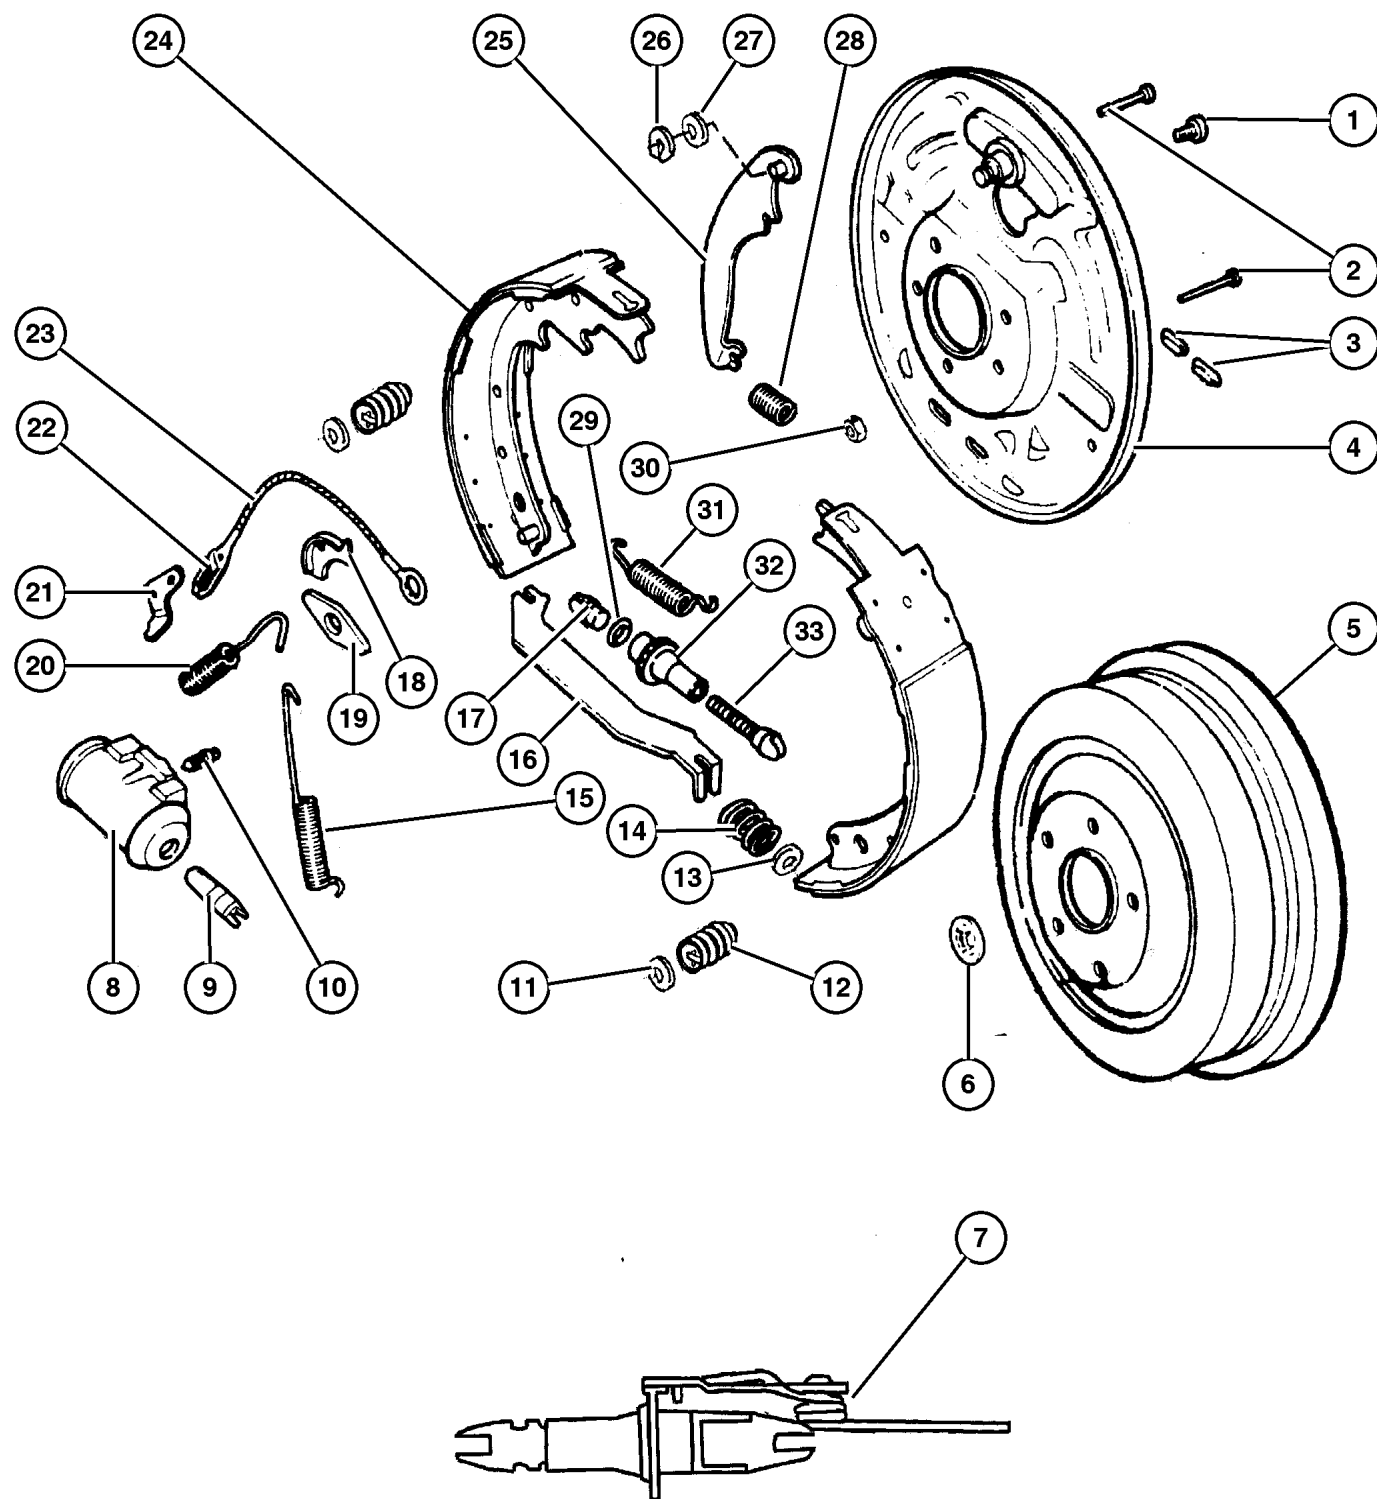Brakes, Rear,11 Inches X 2.25 Inches,BE 1,6
Figure 005-210




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5003 784AA	1	1						Right
	5003 785AA	1	1						Left
	5003 784AA	1	6						Right
	5003 785AA	1	6						Left
26									RETAINER, Parking Brake Lever
	J310 8202	1	1						
		1	6						
27									WASHER, Parking Brake Lever Mounting
	8350 2900	1	1						
		1	6						Mounting
28									SPRING, Brake Auto Adjuster Lever
	5003 790AA	1	1						
		1	6						
29									WASHER, Rear Brake Adjuster
	4746 585	1	1						
		1	6						
30									NUT, Hex Flange Lock
	0152 345	8	1						Backing Plate Attaching
		8	6						Backing Plate Attaching
31									SPRING, Brake Shoe to Shoe
	5003 787AA	1	1						
		1	6						
32									NUT, Rear Brake Auto Adjust Pivot
	2944 692	1	1						Right
	2944 693	1	1						Left
	2944 692	1	6						Right
	2944 693	1	6						Left
33									SCREW, Brake Adjusting
	2881 686	1	1						Right
	2881 687	1	1						Left
	2881 686	1	6						Right
	2881 687	1	6						Left

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

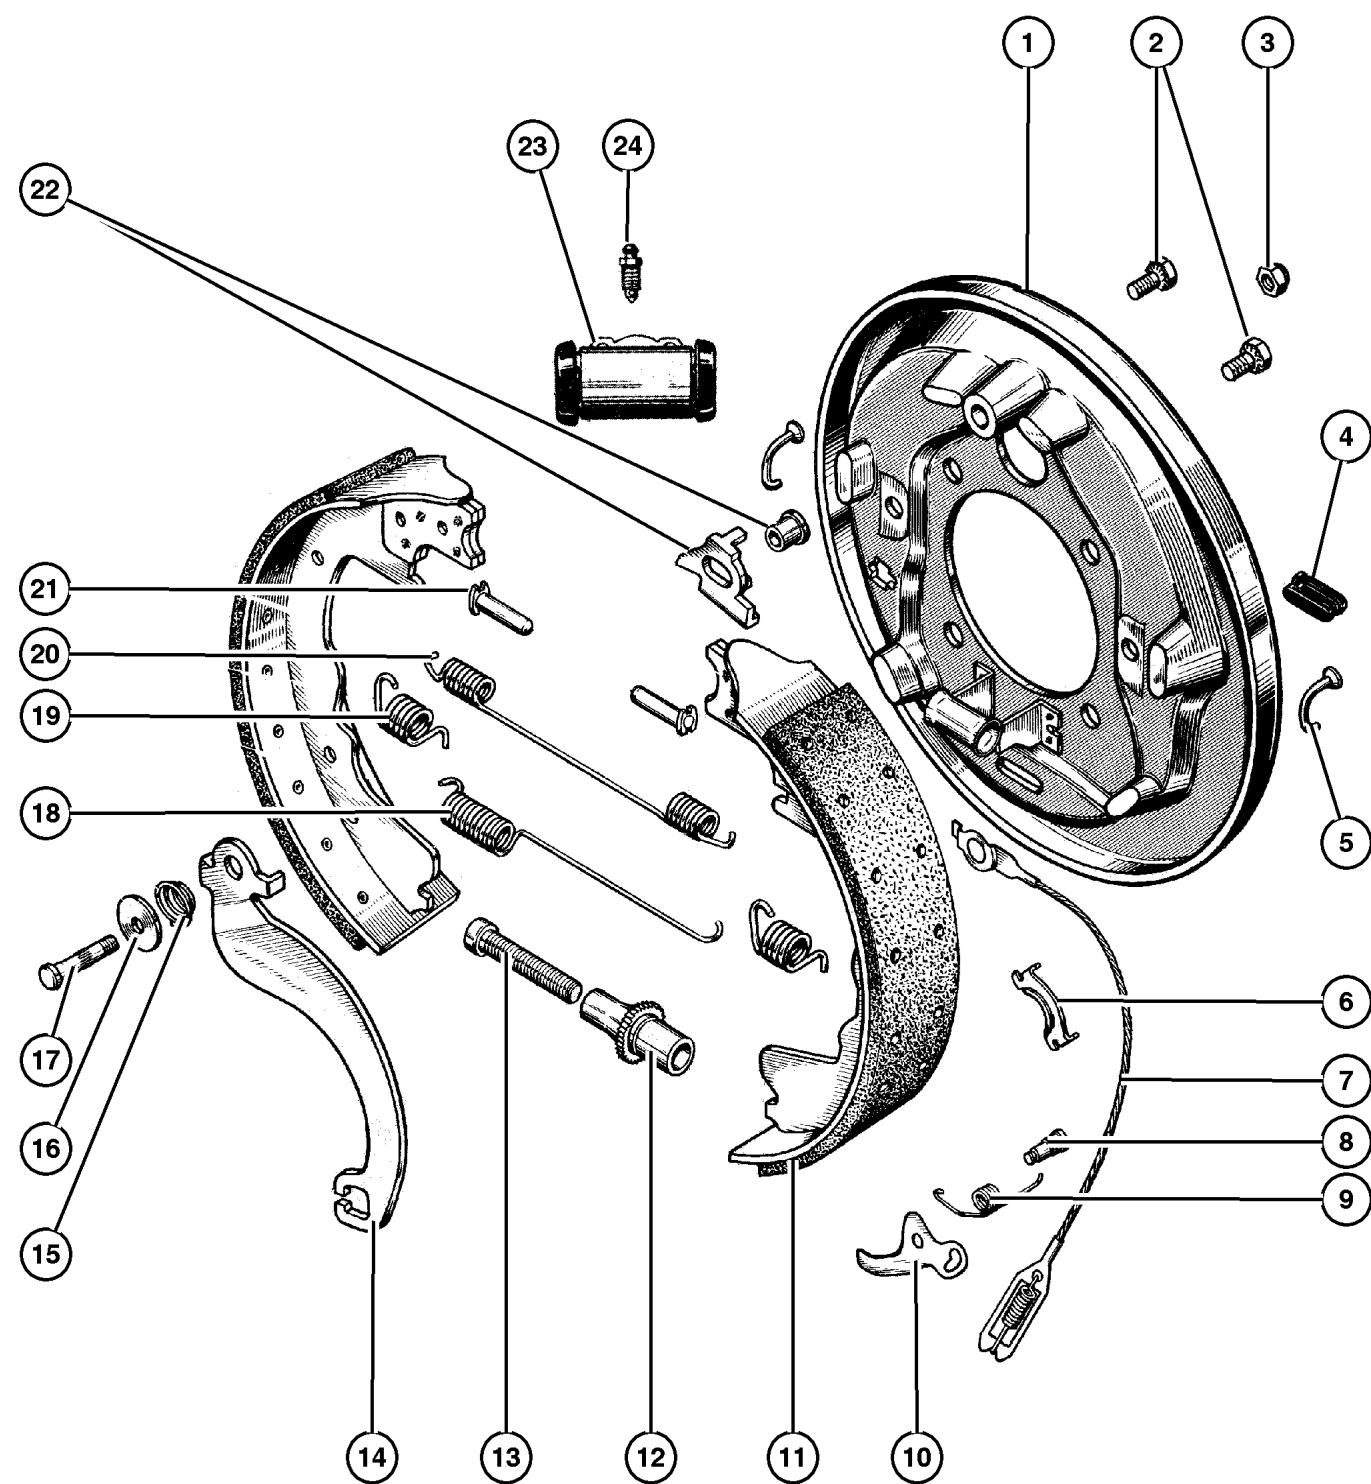Brakes, Rear, 12.125 Inches X 3.5 Inches, BE 2,3,7,8
Figure 005-220




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	PLATE, Brake Backing								
	5015 340AA	1	2		33, 34				Right
	5015 341AA	1	2		33, 34				Left
	5015 340AA	1	3		34				Right
	5015 341AA	1	3		34				Left
	5015 340AA	1	7		33, 34				Right
	5015 341AA	1	7		33, 34				Left
	5015 340AA	1	8		34				Right
	5015 341AA	1	8		34				Left
2	BOLT, Hex Head								
	6028 921	2	2		33, 34				
		2	3		34				
		2	7		33, 34				
3	NUT, Parking Brake								
	3492 655	1	2		33, 34				
		1	3		34				
		1	7		33, 34				
4	PLUG, Brake Adjusting Hole								
	3200 0147	2	2		33, 34				
		1	3		34				
		1	7		33, 34				
5	PIN, Brake Shoe Hold Down								
	3492 662	2	2		33, 34				
		2	3		34				
		2	7		33, 34				
6	GUIDE, Brake Adjusting Cable								
	3492 664	1	2		33, 34				
		1	3		34				
		1	7		33, 34				
7	CABLE, Brake Automatic Adjuster								
	4383 267	1	2		33, 34				
		1	3		34				
		1	7		33, 34				
8	PIN, Brake Adjusting Lever								
		1	8		34				

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

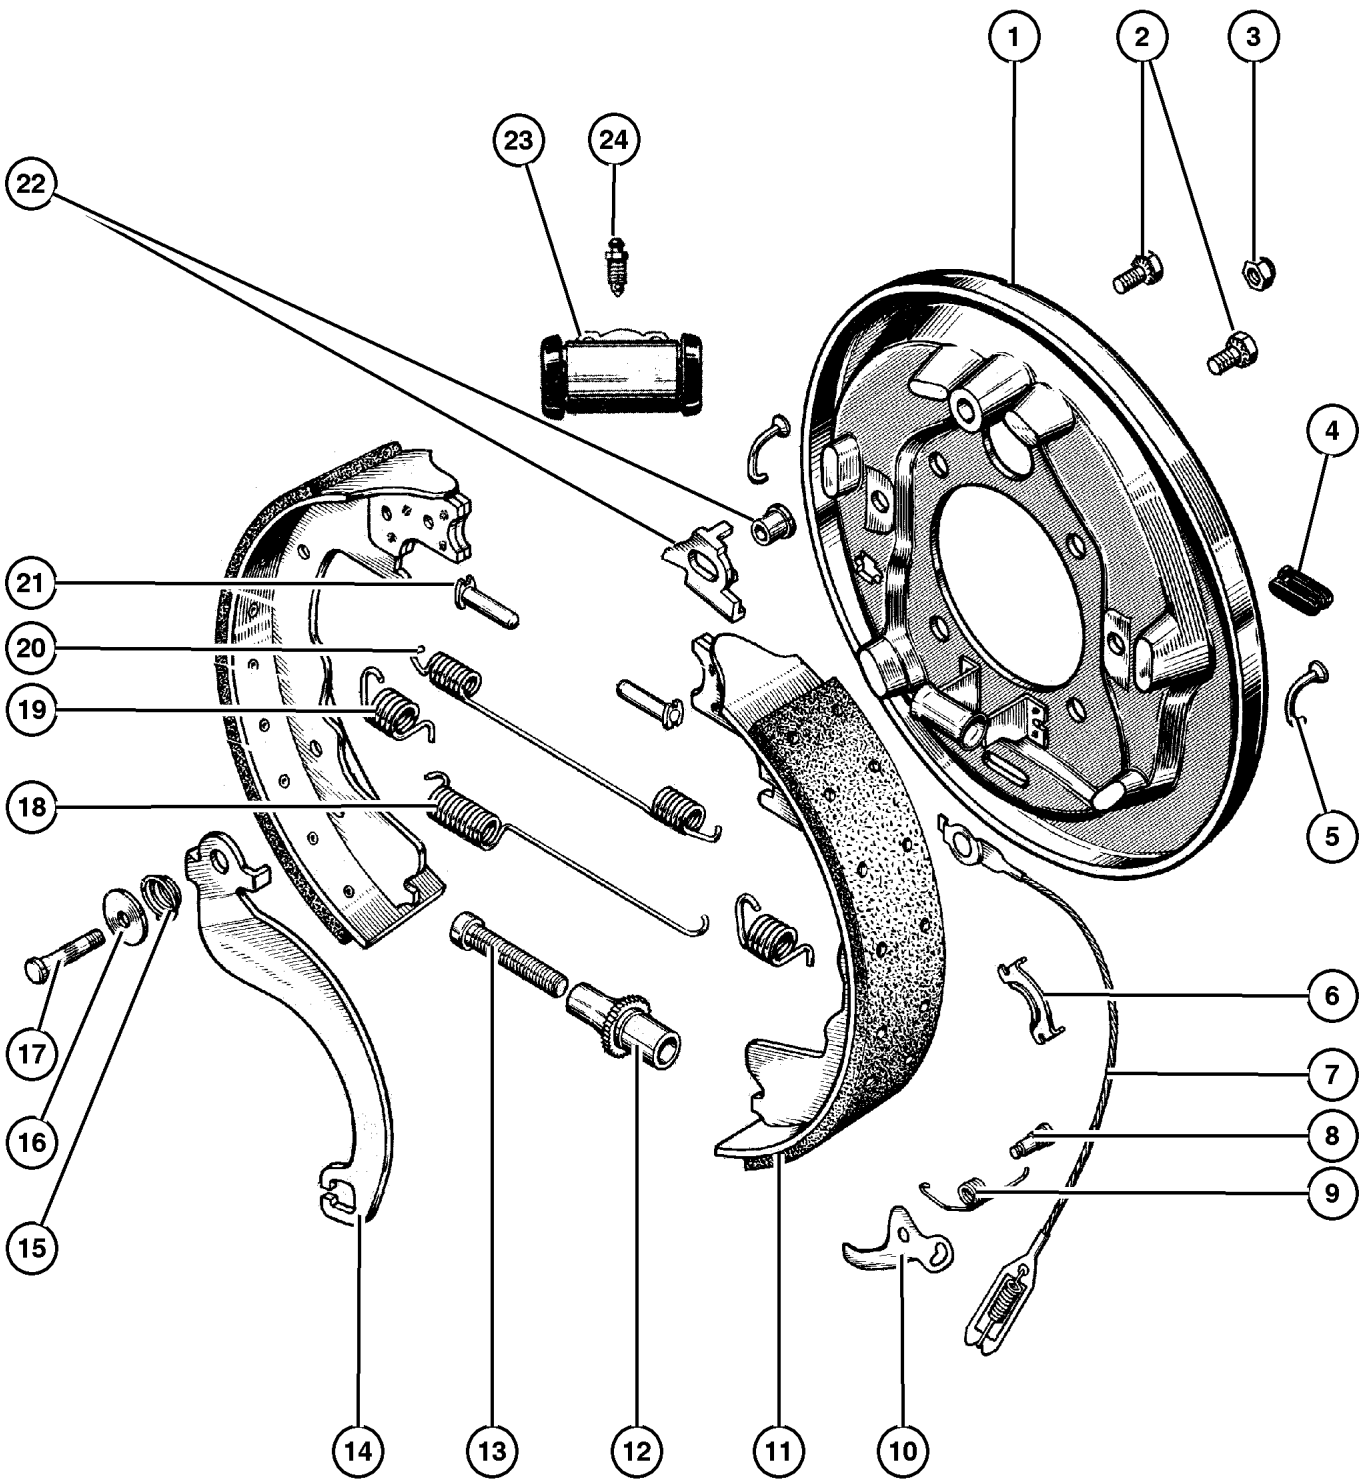Brakes, Rear, 12.125 Inches X 3.5 Inches, BE 2,3,7,8
Figure 005-220




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	3492 671	1	2		33, 34				
		1	3		34				
		1	7		33, 34				
		1	8		34				
9									SPRING, Auto Adjusting
	4383 274	1	2		33, 34				Right
	4383 275	1	2		33, 34				Left
	4383 274	1	3		34				Right
	4383 275	1	3		34				Left
	4383 274	1	7		33, 34				Right
	4383 275	1	7		33, 34				Left
	4383 274	1	8		34				Right
	4383 275	1	8		34				Left
10									LEVER, Park Brake Adjusting
	4383 276	1	2		33, 34				Right
	4383 277	1	2		33, 34				Left
	4383 276	1	3		34				Right
	4383 277	1	3		34				Left
	4383 276	1	7		33, 34				Right
	4383 277	1	7		33, 34				Left
	4383 276	1	8		34				Right
	4383 277	1	8		34				Left
11									SHOE AND LINING KIT, drum
	5015 337AA	1	2		33, 34				
		1	3		34				
		1	7		33, 34				
		1	8		34				
12									NUT, Brake Adjusting
	4383 270	1	2		33, 34				Right
	4383 271	1	2		33, 34				Left
	4383 270	1	3		34				Right
	4383 271	1	3		34				Left
	4383 270	1	7		33, 34				Right
	4383 271	1	7		33, 34				Left
	4383 270	1	8		34				Right
	4383 271	1	8		34				Left
13									SCREW, Brake Adjusting
	4383 262	1	2		33, 34				Right
	4383 263	1	2		33, 34				Left
	4383 262	1	3		34				Right

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

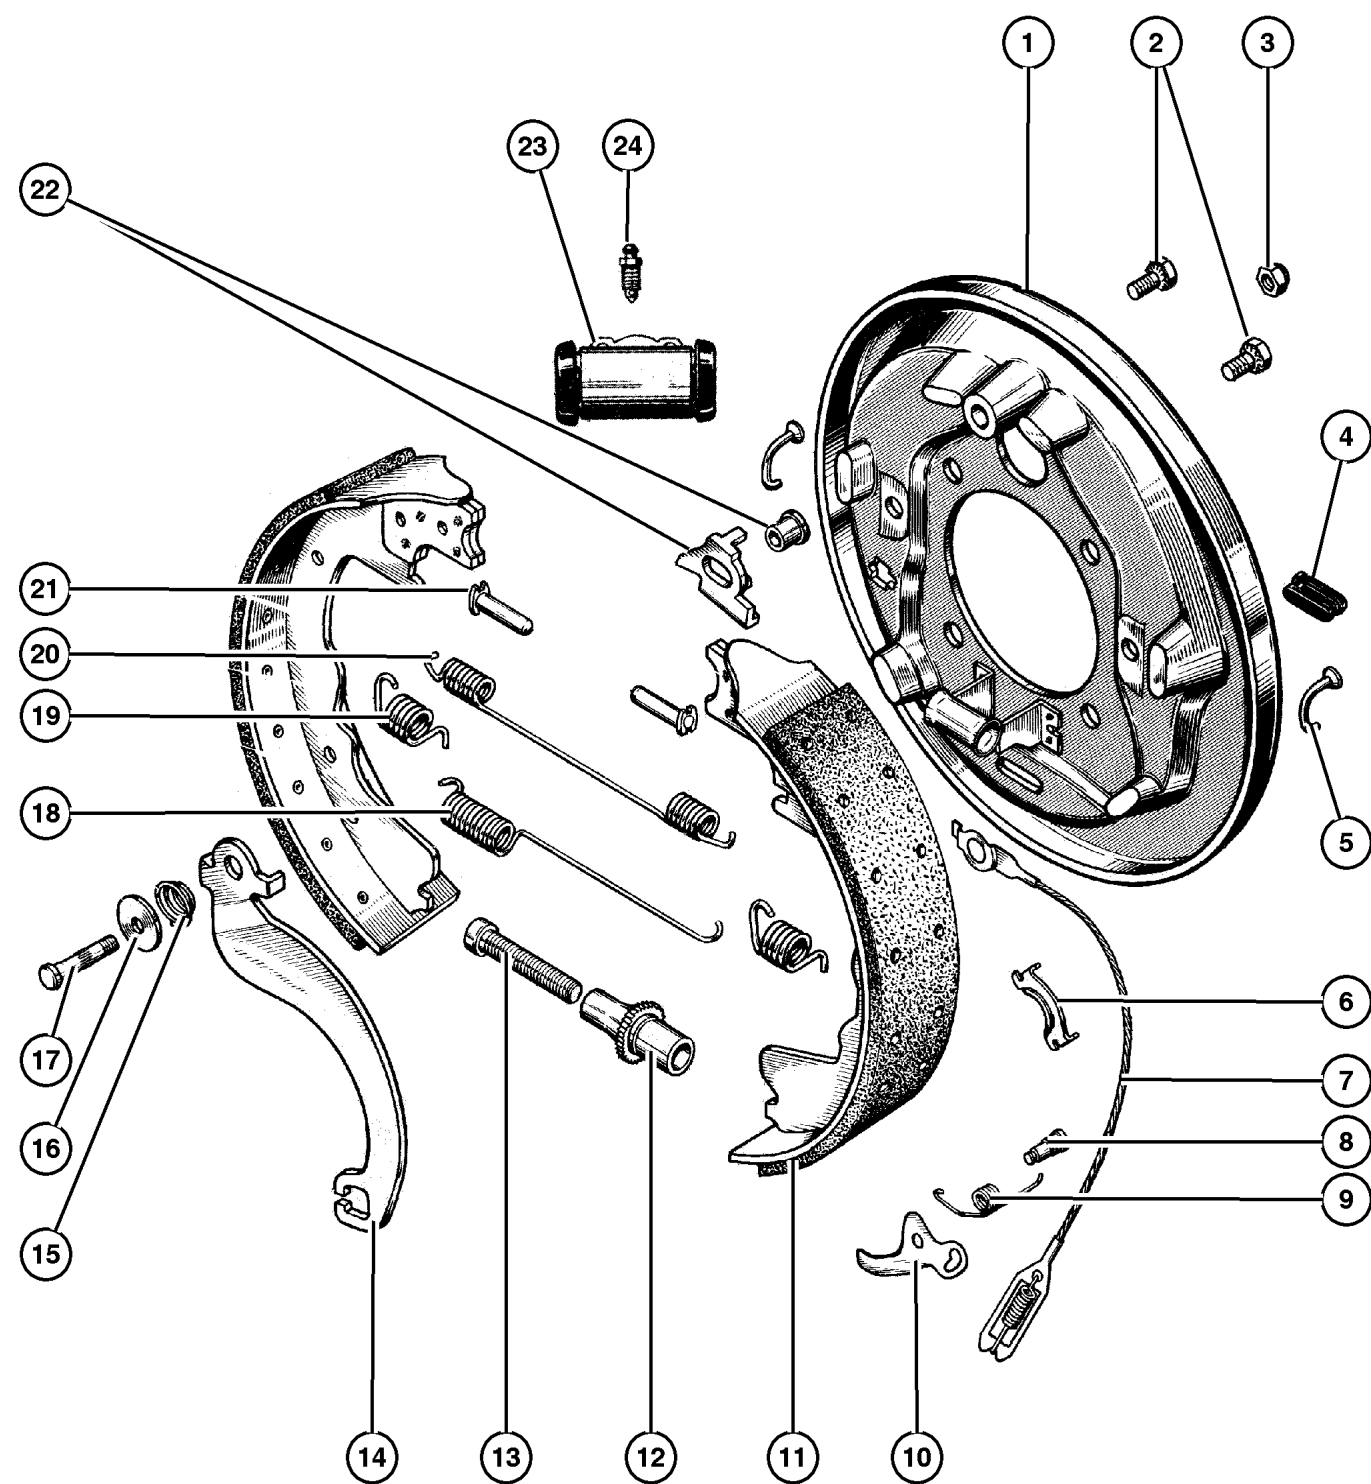Brakes, Rear, 12.125 Inches X 3.5 Inches, BE 2,3,7,8
Figure 005-220




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4383 263	1	3		34				Left
	4383 262	1	7		33, 34				Right
	4383 263	1	7		33, 34				Left
	4383 262	1	8		34				Right
	4383 263	1	8		34				Left
14	5010 007AA	1	2		33, 34				LEVER, Park Brake Adjusting
	5010 006AA	1	2		33, 34				Left
	5010 007AA	1	3		34				Right
	5010 006AA	1	3		34				Left
	5010 007AA	1	7		33, 34				Right
	5010 006AA	1	7		33, 34				Left
	5010 007AA	1	7		33, 34				Right
	5010 006AA	1	8		34				Left
	5010 006AA	1	8		34				Right
15	3492 656	1	2		33, 34				SPRING, Parking Brake Lever
		1	3		34				
		1	7		33, 34				
		1	8		34				
16	3492 670	1	2		33, 34				WASHER, Parking Brake Lever
		1	3		34				
		1	7		33, 34				
		1	8		34				
17	4419 698	1	2		33, 34				BOLT, Park Brake Lever, .25-28
		1	3		34				
		1	7		33, 34				
		1	8		34				
18	3492 668	1	2		33, 34				SPRING, Brake Shoe Return
		1	3		34				Lower
		1	7		33, 34				Lower
		1	8		34				Lower
19	3492 663	1	2		33, 34				SPRING, Brake Shoe Hold Down
		1	3		34				
		1	7		33, 34				
		1	8		34				
20									SPRING, Brake Shoe Return

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

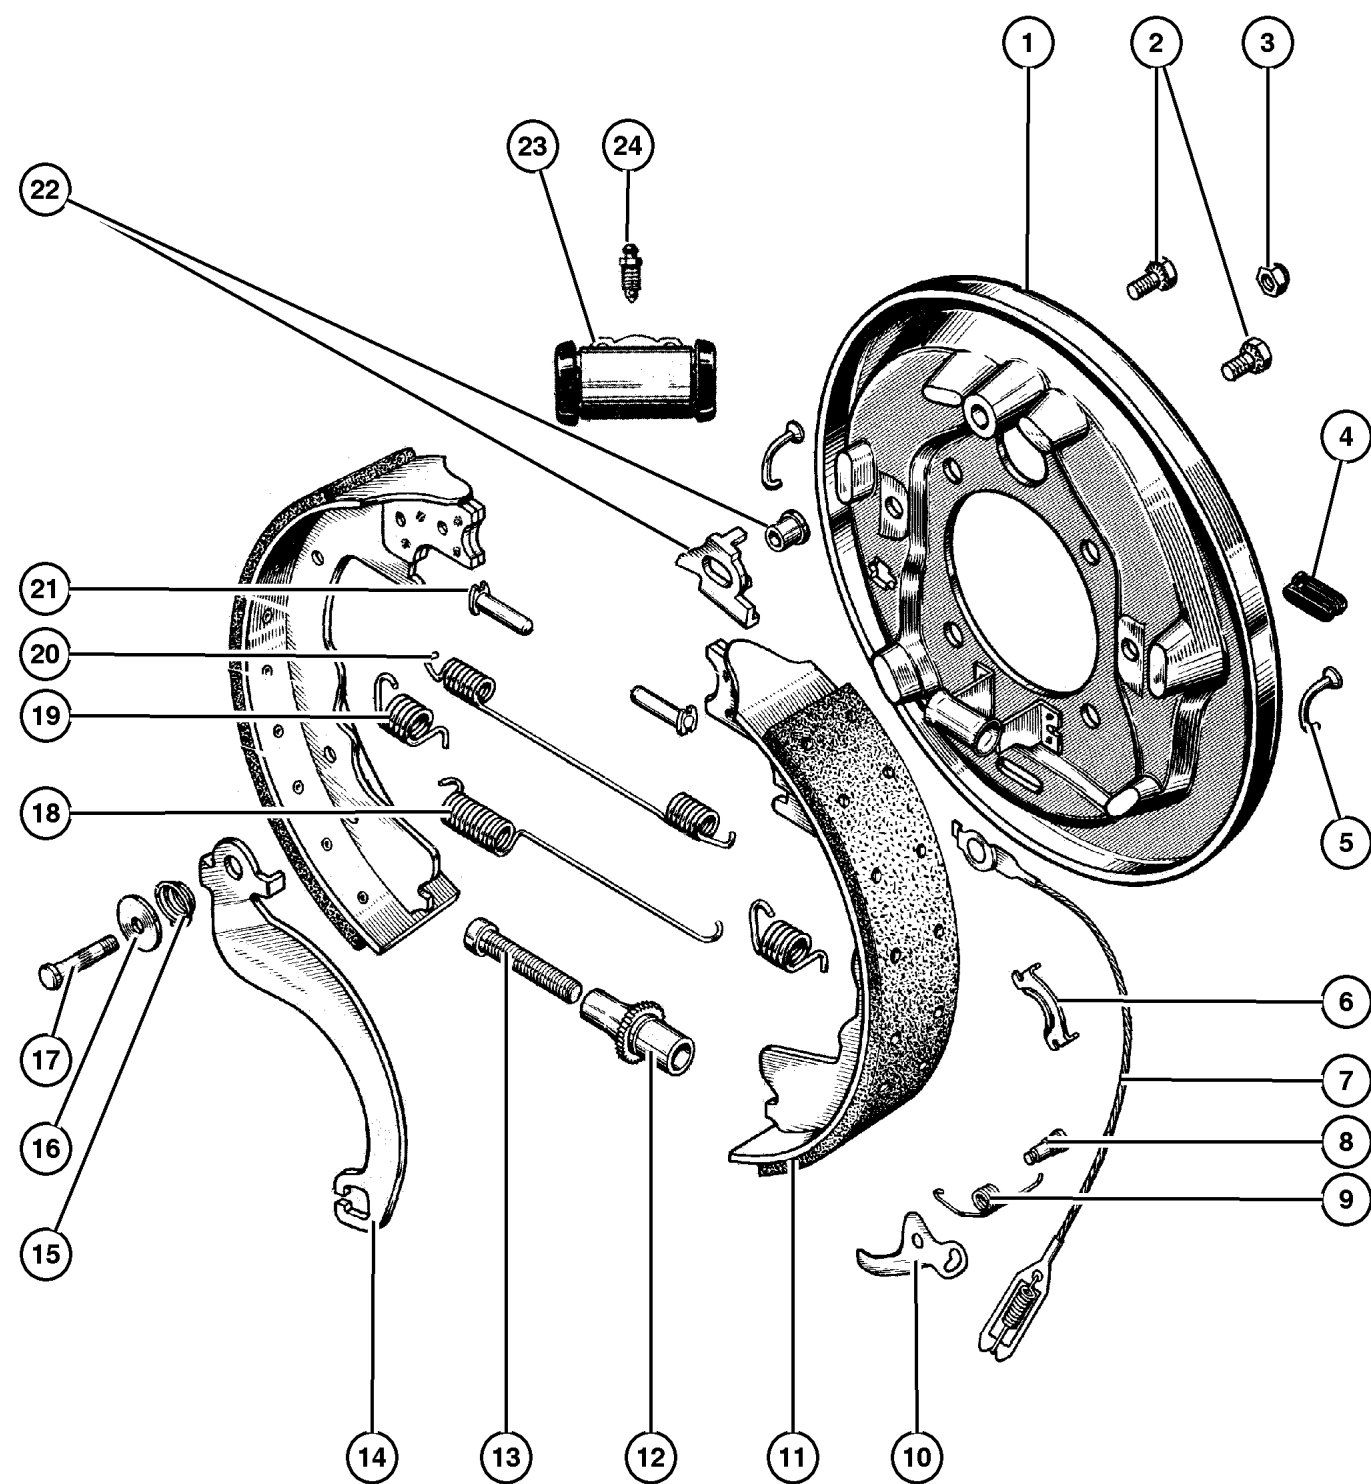Brakes, Rear, 12.125 Inches X 3.5 Inches, BE 2,3,7,8
Figure 005-220




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	3496 235	1	2		33, 34				Upper
		1	3		34				Upper
		1	7		33, 34				Upper
		1	8		34				Upper
21									LINK, Brake
	3492 657	2	2		33, 34				
		2	3		34				
		2	7		33, 34				
		2	8		34				
22									CAM, Parking Brake Lever
	5010 010AA	1	2		33, 34				Right
	5010 011AA	1	2		33, 34				Left
	5010 010AA	1	3		34				Right
	5010 011AA	1	3		34				Left
	5010 010AA	1	7		33, 34				Right
	5010 011AA	1	7		33, 34				Left
	5010 010AA	1	8		34				Right
	5010 011AA	1	8		34				Left
23									CYLINDER, Wheel
	4088 898	1	2		33, 34				Right
	4088 899	1	2		33, 34				Left
	4088 898	1	3		34				Right
	4088 899	1	3		34				Left
	4088 898	1	7		33, 34				Right
	4088 899	1	7		33, 34				Left
	4088 898	1	8		34				Right
	4088 899	1	8		34				Left
24									SCREW, Bleeder
	J320 3313	1	2		33, 34				
		1	3		34				
		1	7		33, 34				
		1	8		34				
-25									SPRING, Parking Brake Cable
	5010 008AA-	1	2		33, 34				Guide
		1	3		34				Guide
		1	7		33, 34				Guide
		1	8		34				Guide

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

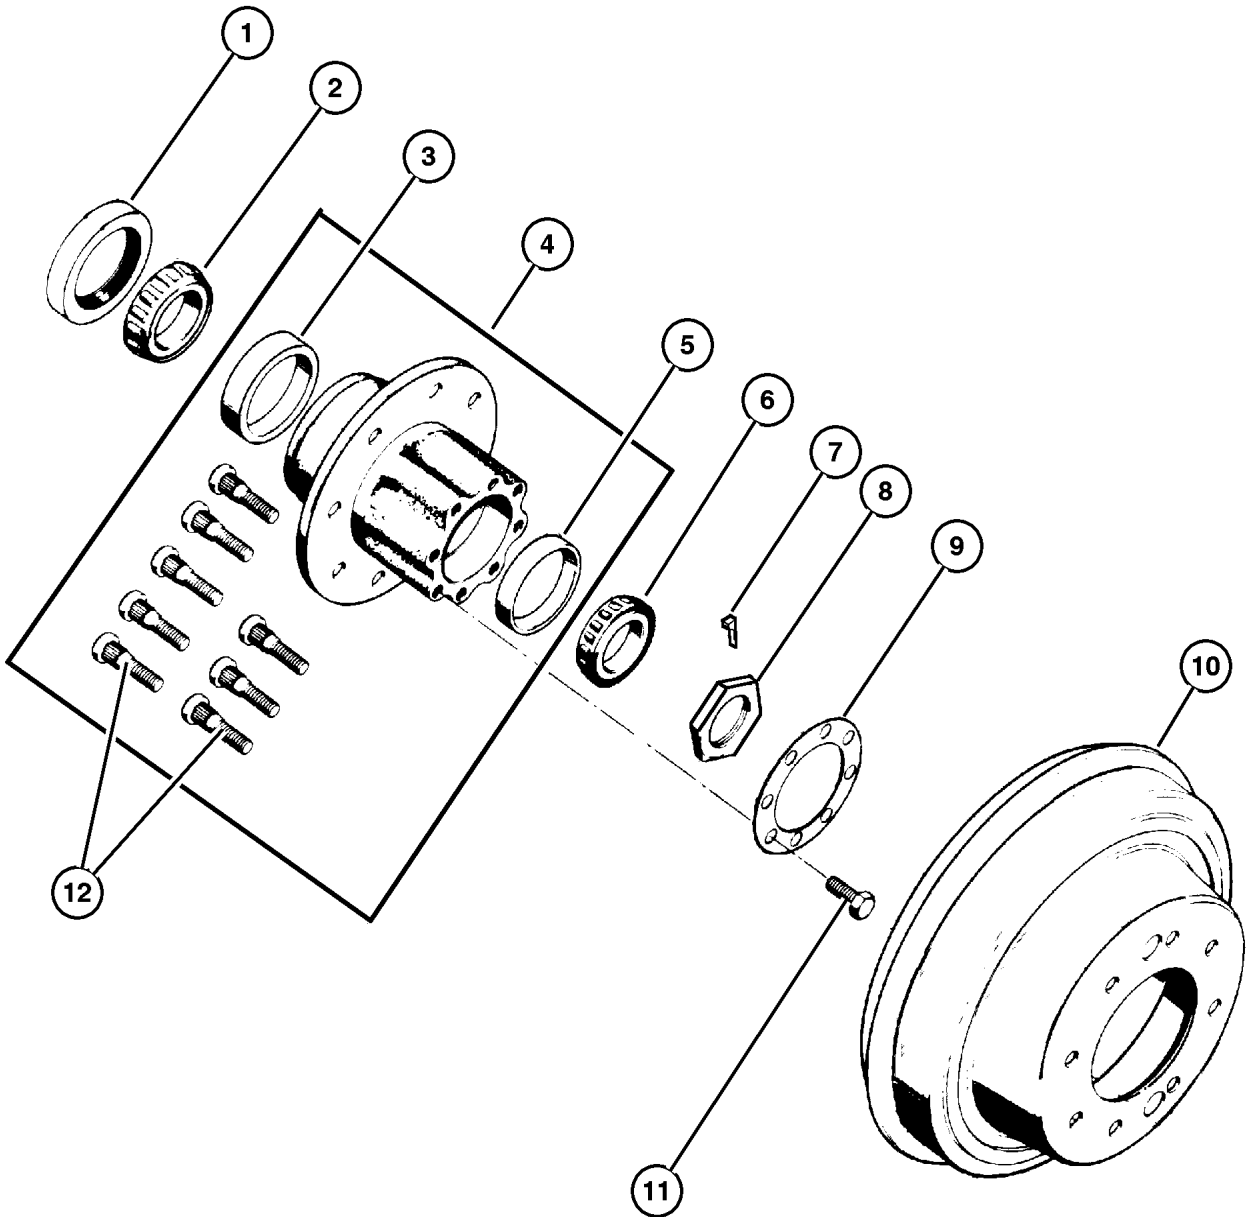Drums And Bearing, Rear Brake,12.125 X 3.5 Inches,BE 2,3,7,8
Figure 005-230




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									SEAL, Wheel Bearing
	3496 557	2	2		33, 34				Without Flange
	5003 464AA	2	2		33, 34				With Flange
	2954 738	2	3		34				
	3496 557	2	7		33, 34				Without Flange
	5003 464AA	2	7		33, 34				With Flange
2	2954 738	2	8		34				
									BEARING, Wheel
	0927 017	2	2		33, 34				Inner
	2959 942	2	3		34				Inner
3	0927 017	2	7		33, 34				Inner
	2959 942	2	8		34				Inner
									CUP, Wheel Bearing
	4746 918	1	2		33, 34				
4	4746 919	1	3		34				
	4746 918	1	7		33, 34				
	4746 919	1	8		34				
									HUB, Wheel
5	52009 735AA	2	2		33, 34				
	52009 839AA	2	3		34				
	52009 735AA	2	7		33, 34				
	52009 839AA	2	8		34				
6									CUP, Wheel Bearing
	2955 374	1	2		33, 34				Outer
		1	3		34				Outer
		1	7		33, 34				Outer
7		1	8		34				Outer
									BEARING, Wheel
	2852 729	2	2		33, 34				Outer
		2	3		34				Outer
8		2	7		33, 34				Outer
		2	8		34				Outer
									LOCK, Wheel Bearing Adj Nut
	4797 126	2	2		33, 34				
9		2	3		34				
		2	7		33, 34				
		2	8		34				
									NUT, Bearing Adjusting
10	5206 9306	2	2		33, 34				
		2	3		34				

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

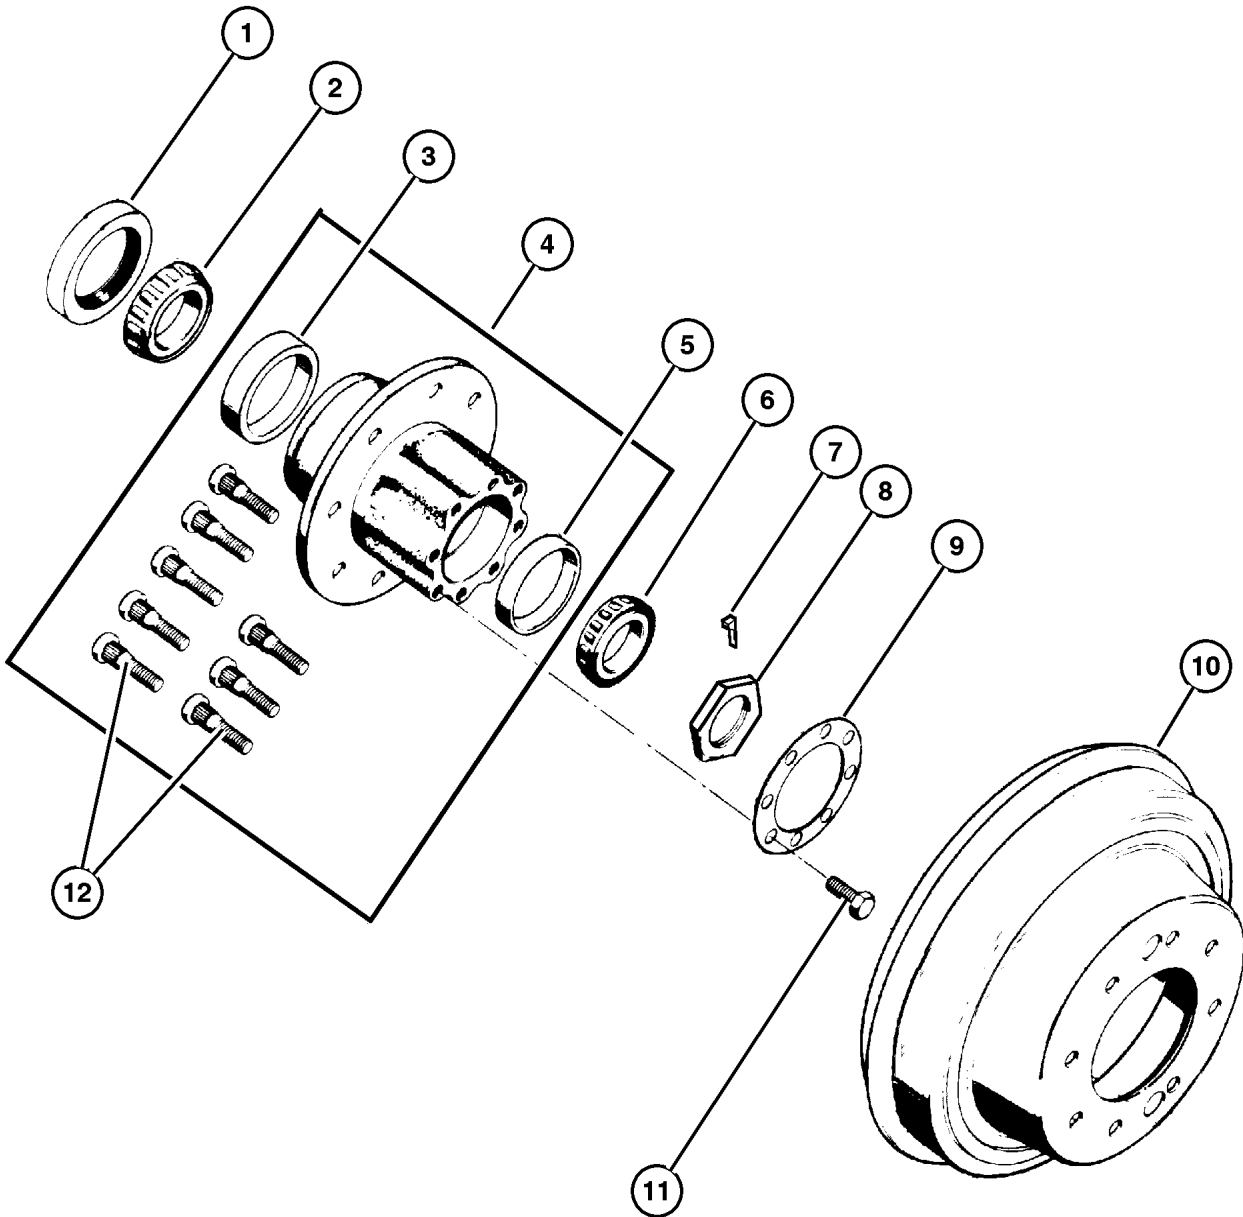Drums And Bearing, Rear Brake,12.125 X 3.5 Inches,BE 2,3,7,8
Figure 005-230





ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
9	4384 186	2	7		33, 34				
		2	8		34				
		2	2		33, 34				GASKET, Axle Shaft
		2	3		34				Axle Shaft to Hub Mounting
10	52009 736AA	2	7		33, 34				Axle Shaft to Hub Mounting
		2	8		34				Axle Shaft to Hub Mounting
		2	2		33, 34				DRUM, Brake
		2	3		34				
11	5003 466AA	1	7		33, 34				
		2	8		34				
		16	2		33, 34				BOLT
		16	3		34				Axle Shaft to Hub Mounting
12	4746 915	8	2		33, 34				STUD, Hub
		8	3		34				Wheel
		8	7		33, 34				Wheel
		8	8		34				Wheel

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

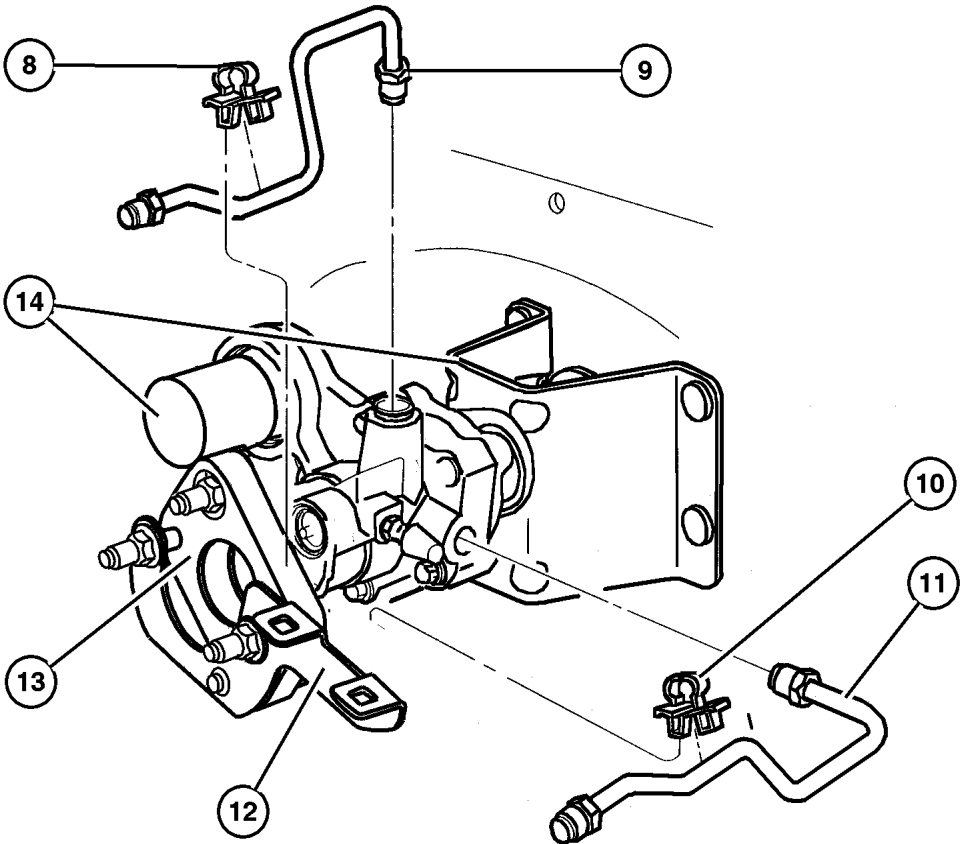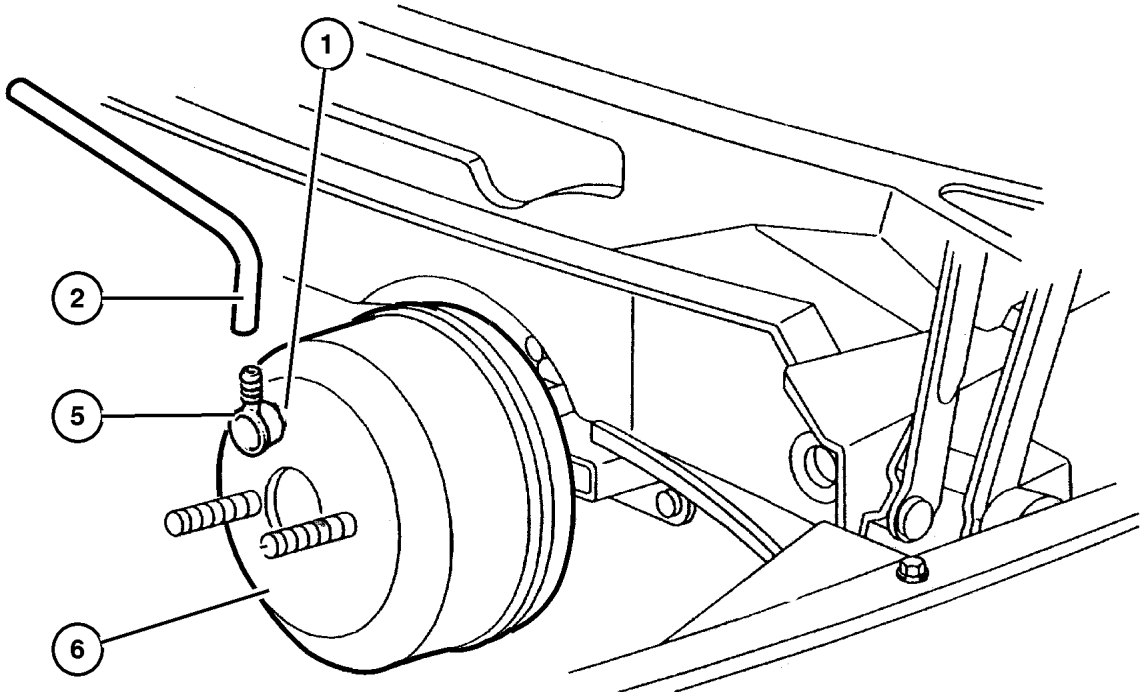Booster--Power Brake and Hydro
 Figure 005-310





ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:EH0=3.9L V-6 Gas Engine---EL0=5.2L V-8 Gas Engine---EM0=5.9L Gas Engine---EW0=8.0L Gas Engine---TXN= LT275/70R17 OWL ON/OFF Road Tires----TXW=P265/75R16 OWL ON/OFF Road Tires									
1									GROMMET, Brake Booster Check Valve
	4883 813AA	1	1, 6						
		1	2, 7		33, 34				
2	52008 111AE	1	1, 2, 6, 7						HOSE, Brake Booster [EL0,EM0]
	52008 212AD	1	1, 2, 6, 7						[EW0]
-3	2448 761	2							CLAMP, Hose
-4	6016 020	1							STRAP, Tie, Booster Hose to Breather Hose
5									VALVE, Brake Booster Check
	4723 391	1	1, 6						
		1	2, 7		33, 34				
6	5015 102AA	1	1, 6						BOOSTER, Power Brake [+TXN,+TXW]
	5015 103AA	1	1, 6						[-TXN,-TXW]
		1	2, 7		33, 34				
-7	6503 269	4							NUT, Hex, M10-1.5, Booster to Dash Mounting
8	52009 651AA	2	2, 7		33, 34				CLIP, Brake Tube
		2	3, 8		34				
9	52009 645AB	1	2, 7		33, 34				TUBE, Brake
		1	3, 8		34				
10	52009 651AA	2	2, 7		33, 34				CLIP, Brake Tube
		2	3, 8		34				
11	52009 650AC	1	2, 7		33, 34				TUBE, Brake
		1	3, 8		34				
12	52009 652AA	1	2, 7		33, 34				BRACKET, Brake Booster
		1	3, 8		34				
13	5134 380AA	1	2, 7		33, 34				SPACER, Brake Booster
		1	3, 8		34				
14									HYDRO-BOOSTER, Power Brake

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

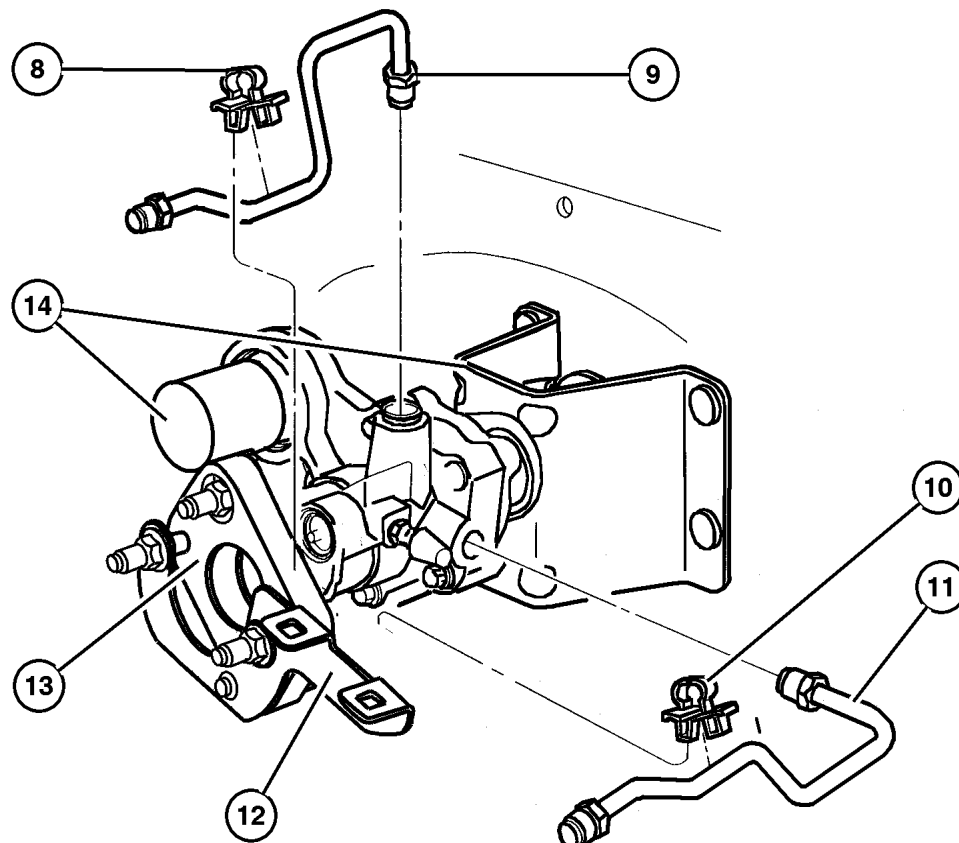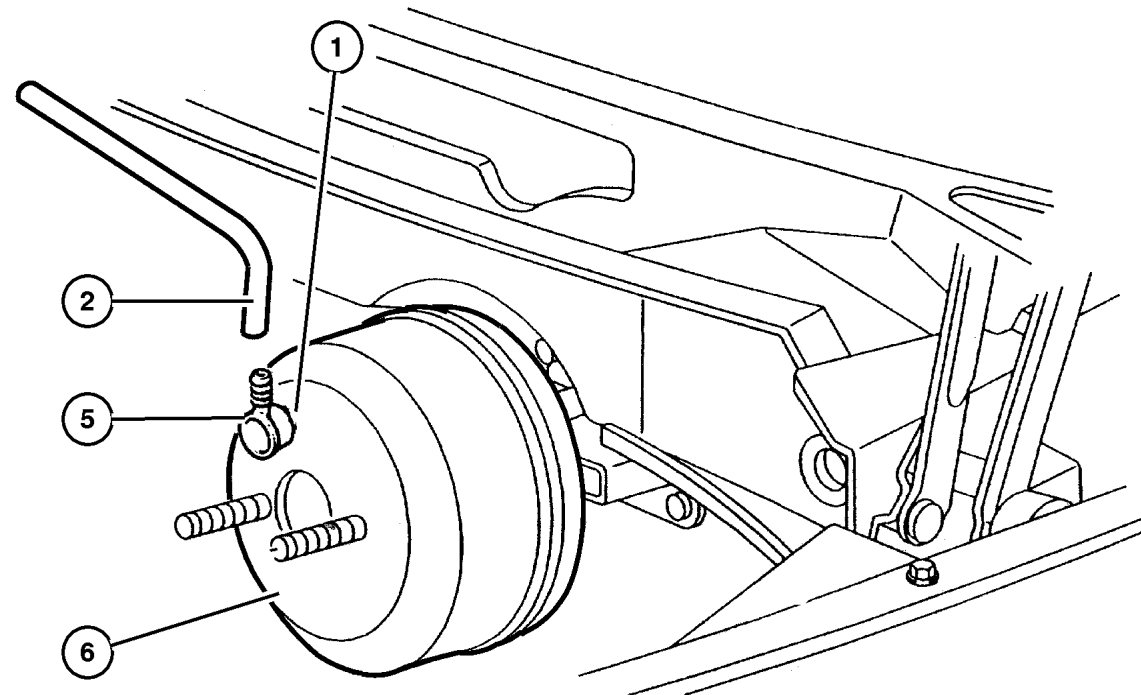Booster--Power Brake and Hydro Figure 005-310




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5003 330AB	1	2, 7		33, 34				
		1	3, 8		34				

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

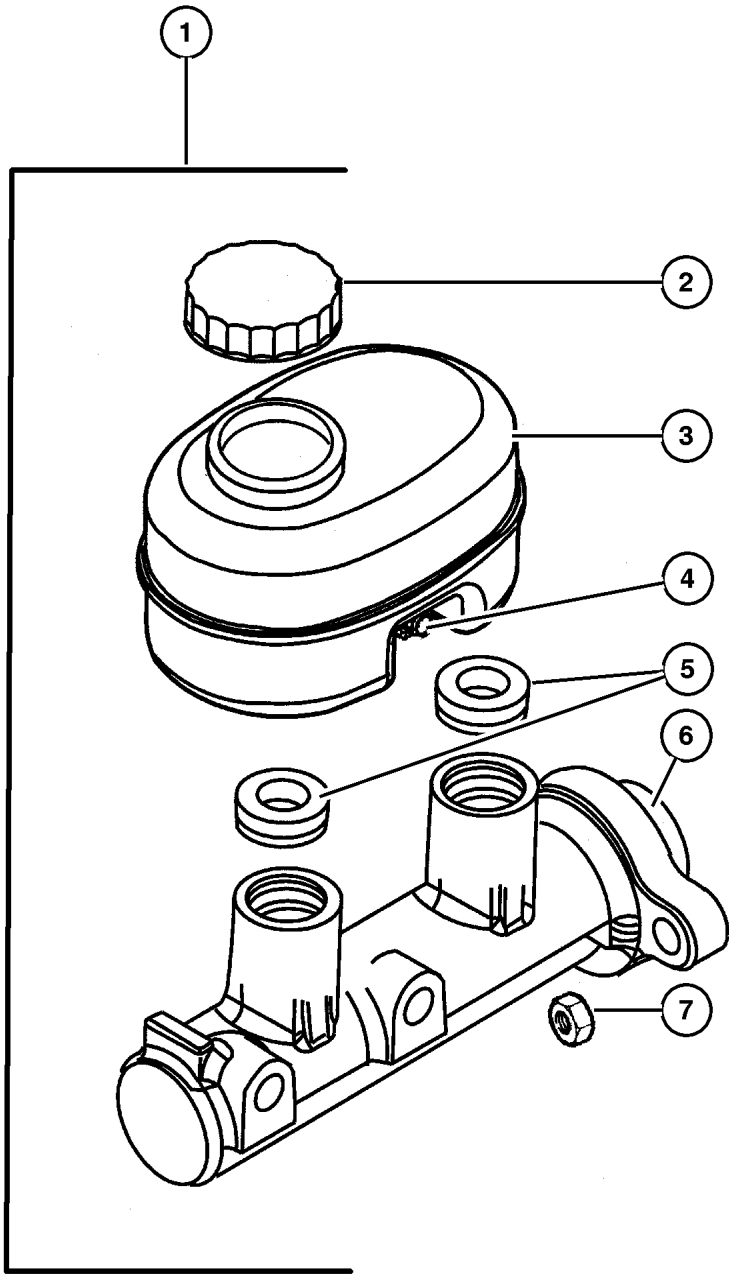Master Cylinder--Brake,All Bodies
Figure 005-410




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	5011 256AB	1	1, 6						MASTER CYLINDER, Brake
		1	2, 7		33, 34				
		1	3, 8		34				
2	4683 656	1	1, 6						CAP, Master Cylinder Reservoir
		1	2, 7		33, 34				
		1	3, 8		34				
3	4882 865	1	1, 6						RESERVOIR, Brake Master Cylinder
		1	2, 7		33, 34				Includes 2,4,5,6
		1	3, 8		34				Includes 2,4,5,6
4	4723 394	2	1, 6						PIN, Master Cylinder Reservoir
		2	2, 7		33, 34				Mounting
		2	3, 8		34				Mounting
5	4723 389	2	1, 6						GROMMET, Master Cylinder
		2	2, 7		33, 34				Reservoir
		2	3, 8		34				Mounting
6	4723 395	1	1, 6						SEAL, Master Cylinder To Booster
		1	2, 7		33, 34				Mounting
		1	3, 8		34				Mounting
7	4897 209AA	2	1, 6						NUT
		2	2, 7		33, 34				Master Cylinder to Booster,
		2	3, 8		34				Mounting
									Master Cylinder to Booster,
									Mounting
									Master Cylinder to Booster,
									Mounting

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

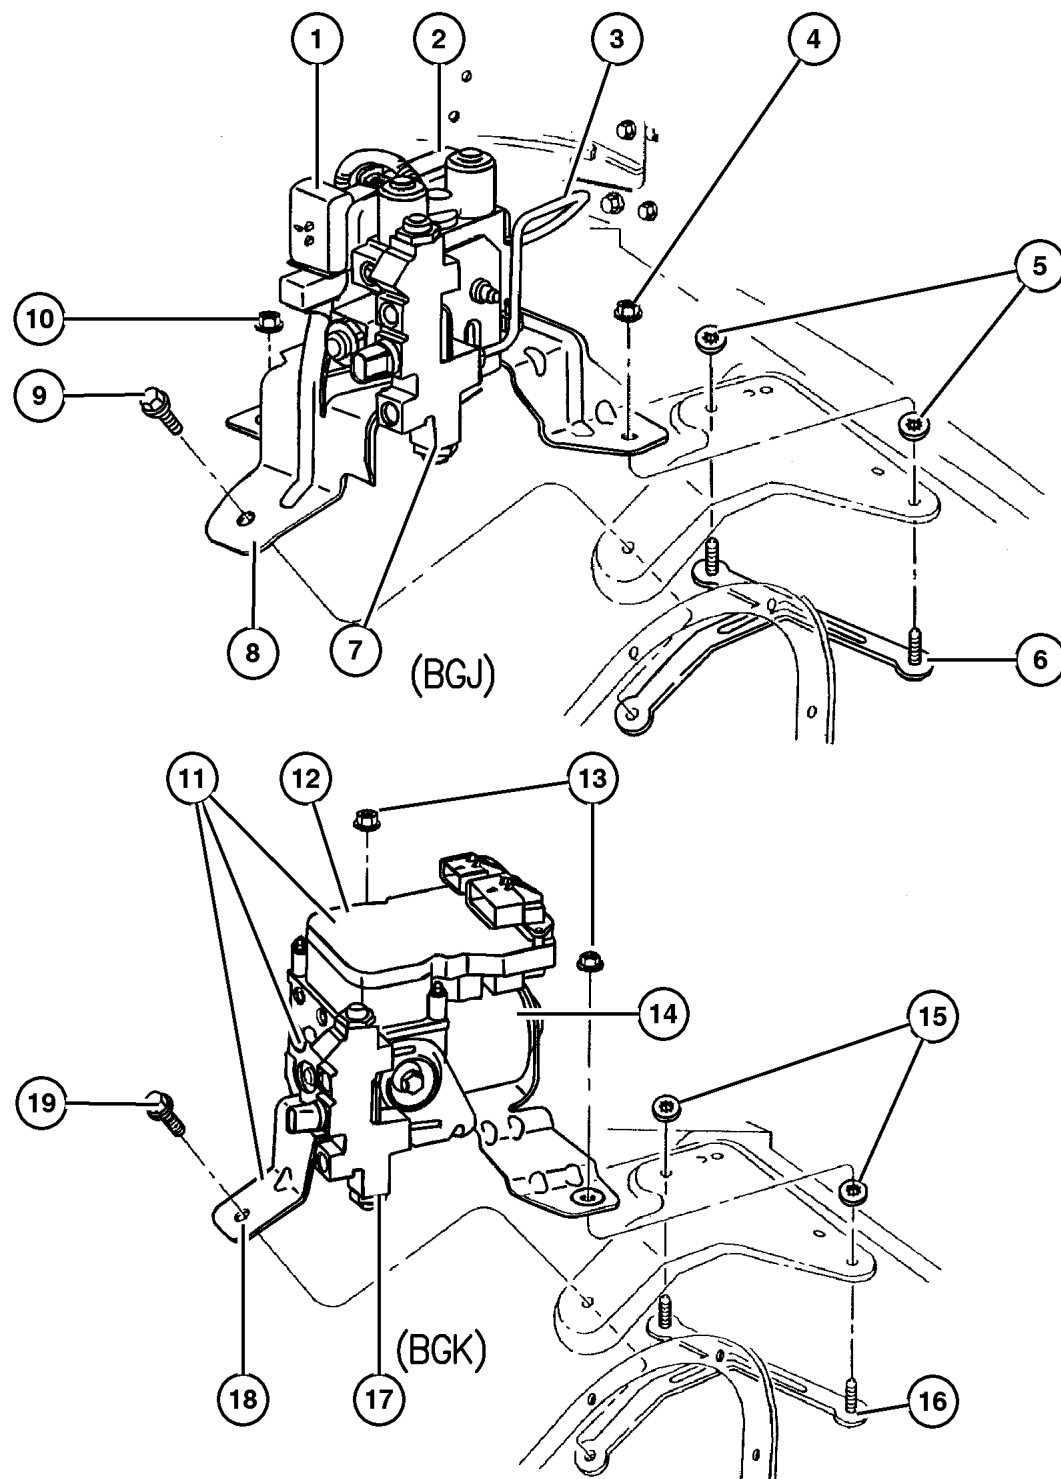Hydraulic Control Unit,Brake,R.W.A.L and A.W.A.L Figure 005-420



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:--BGJ=Rear Wheel Antilock Brakes----BGK=All Wheel Antilock Brakes									
1	5015 525AA	1	1, 6						MODULE, Anti-lock Brakes
	5015 526AB	1	2, 7		33, 34				
2	5003 312AA	1	1, 6						VALVE, Brake Pressure Limit
		1	2, 7		33, 34				
3	5003 310AA	1	1, 6						TUBE, Brake Jumper Tube
		1	2, 7		33, 34				Jumper Tube
4	3420 1711	2							NUT, Hex Flange, M8x1.25, Hydraulic Control Unit to Stud Plate, Mounting
5	6100 841	2							PUSH NUT, M8, Stud Plate to Fender, Mounting
6	52008 038AB	1							STUD PLATE, Hydraulic Control Unit, Mounting
7	5015 419AA	1	1, 6						VALVE, Proportioning
	5015 429AA	1	2, 7		33, 34				
8	5003 311AA	1	1, 6						BRACKET, Anti-Lock Brake Module Mounting
		1	2, 7		33, 34				Mounting
9									SCREW AND WASHER, Hex Head, M8x1.25x33, (NOT SERVICED)
									(Not Serviced)
10	3420 1711	2							NUT, Hex Flange, M8x1.25, Hydraulic Control Unit to Stud Plate, Mounting
11	52010 073AE	1	1, 6						CONTROL UNIT, Anti-Lock Brake Includes Items 12,14,17,18,20,21
	52010 072AF	1	2, 7		33, 34				Includes Items 12,14,17,18,20,21
	52010 074AF	1	3, 8		34				Includes Items 12,14,17,18,20,21
12	5015 527AB	1	1, 6						MODULE, Anti-lock Brakes
	5015 528AD	1	2, 7		33, 34				
	5015 529AC	1	3, 8		34				
13	3420 1711	2							NUT, Hex Flange, M8x1.25, Hydraulic Control Unit to Stud Plate, Mounting

DODGE RAM QUAD CAB/CLUB CAB (BE)


SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Hydraulic Control Unit, Brake, R.W.A.L and A.W.A.L
Figure 005-420

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
14	HYDRAULIC CONTROL UNIT, Anti-Lock Brake System								
	5096 264AA	1	1, 6						
		1	2, 7		33, 34				
		1	3, 8		34				
15	6100 841	2							PUSH NUT, M8, Hydraulic Control Unit to Stud Plate, Mounting
16	52008 038AB	1							STUD PLATE, Hydraulic Control Unit, Mounting
17	VALVE, Proportioning								
	5015 419AA	1	1, 6						
	5015 429AA	1	2, 7		33, 34				
		1	3, 8		34				
18	BRACKET, Anti-Lock Brake Module Mounting								
	5003 305AA	1	1, 6						
		1	2, 7		33, 34				
		1	3, 8		34				
19	SCREW AND WASHER, Hex Head, M8x1.25x33, (NOT SERVICED) (Not Serviced)								
-20	TUBE, Brake								
	5003 307AA-	1	1, 6						Module Jumper, Front
		1	2, 7		33, 34				Module Jumper, Front
		1	3, 8		34				Module Jumper, Front
-21	TUBE, Brake								
	5003 308AA-	1	1, 6						Module Jumper, Rear
		1	2, 7		33, 34				Module Jumper, Rear
		1	3, 8		34				Module Jumper, Rear

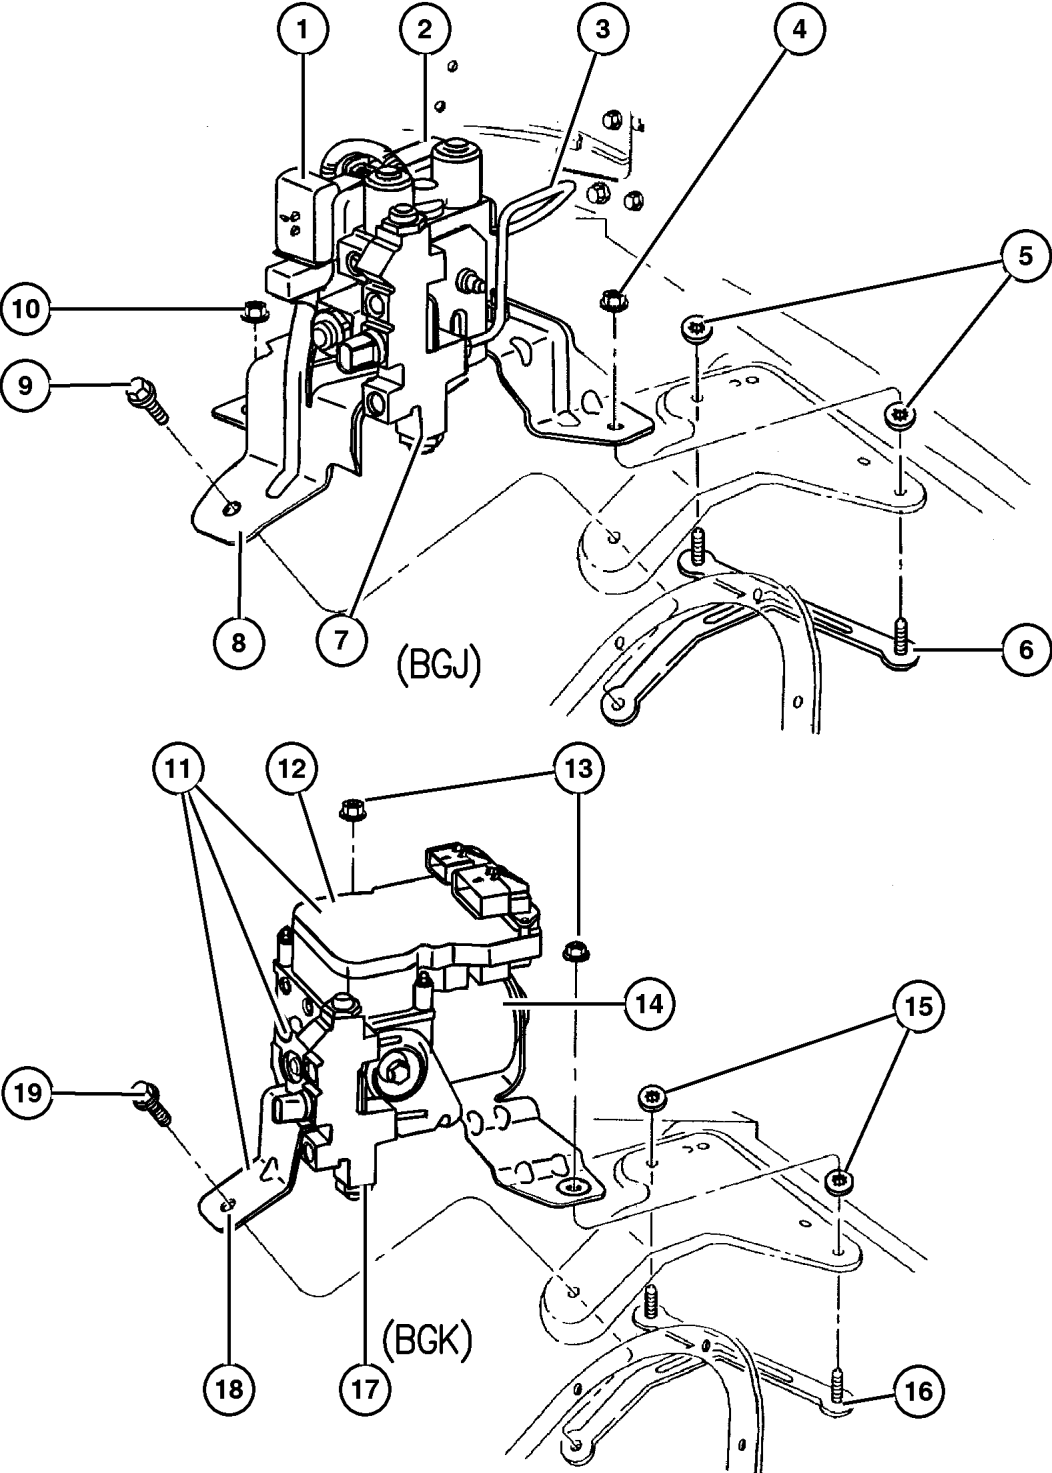


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM, EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Rear Height Sensing System

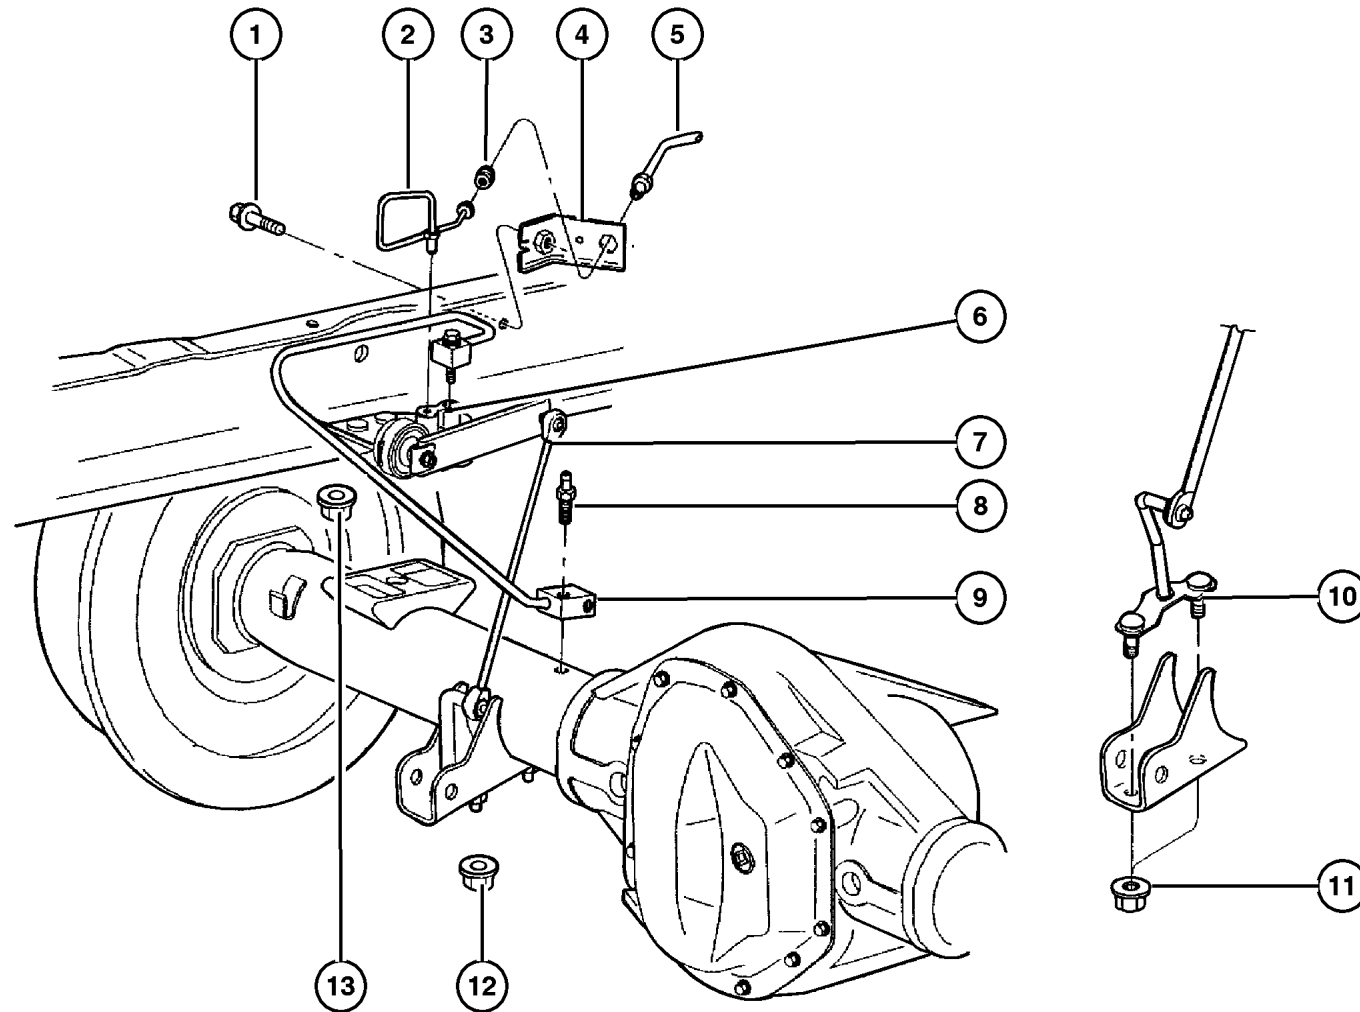Figure 005-510

[illegible]

DODGE RAM QUAD CAB/CLUB CAB (BE)

L = Ram Truck (All)

LINE

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

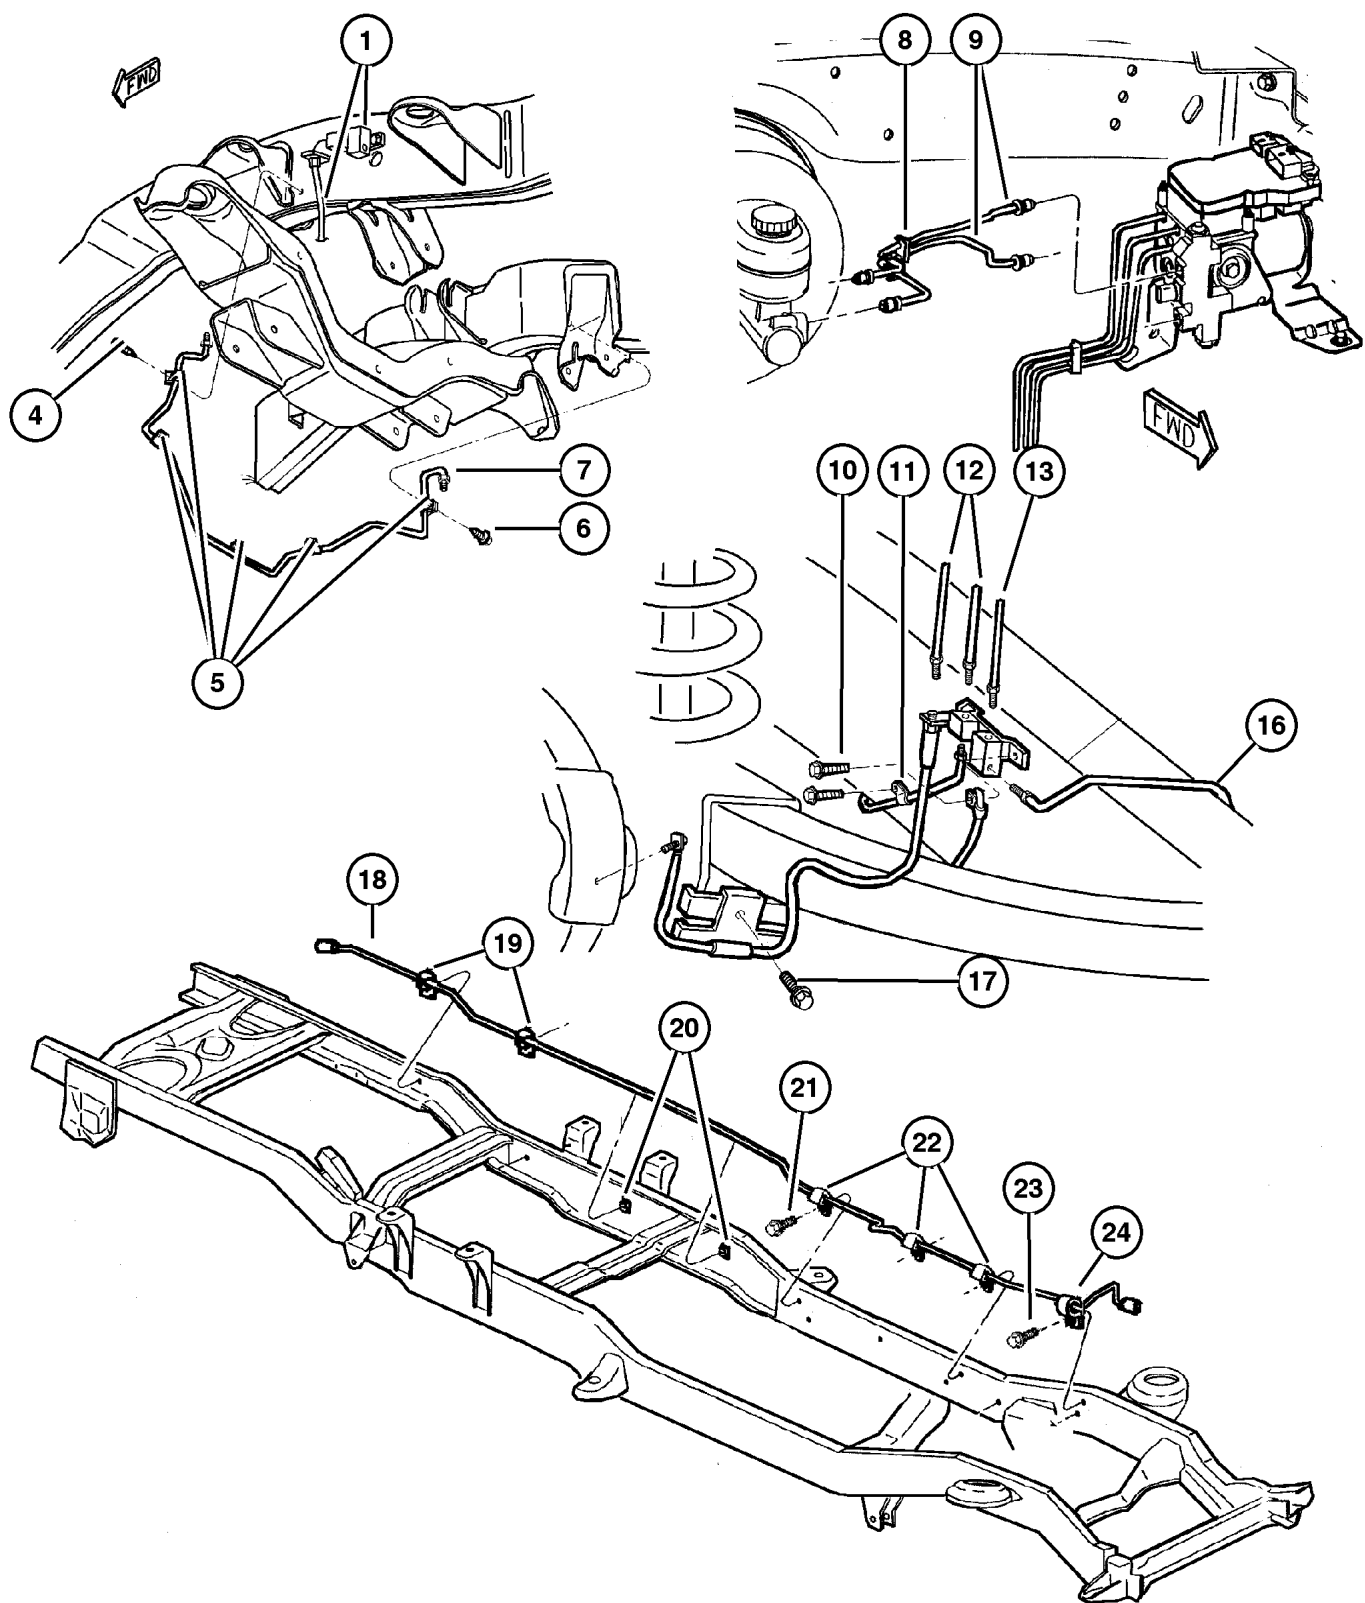
TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DGO = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Lines And Hoses,Brake,Front and Chassis
Figure 005-520




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
BGJ=R.W.A.L.-Rear Wheel Anti-Lock Brakes									
BGK= A.W.A.L.-All Wheel Anti-Lock Brakes									
DBB = All Manual Transmissions									
EL0 = All 5.2L 8 Cyl Gas Engines									
EM0 = All 5.9L 8 Cyl Gas Engines									
ET0 = All 5.9L Turbo Diesel Engines									
EW0 = All 8.0L Gas Engines									
HCU= Hydraulic Control Unit									
1	52009 682AB	1	1, 2, 3						HOSE, Brake [BGJ], Right
	52009 687AB	1	1, 2, 3						[BGJ], Left
	52009 688AB	1	6, 7, 8						[BGJ] Upto and Including 02-14-00, Right
	52009 688AC	1	6, 7, 8						[BGJ] 02-15-00 and After, Right
	52009 685AB	1	6, 7, 8						[BGJ] Upto and Including 02-14-00, Left
	52009 685AC	1	6, 7, 8						[BGJ] 02-15-00 and After, Left
	52009 845AB	1	1, 2, 3						[BGK], Right
	52009 683AB	1	1, 2, 3						[BGK], Left
	52009 945AB	1	6, 7, 8						[BGK], Right
	52009 689AB	1	6, 7, 8						[BGK], Left
-2	J400 6700	1	1, 2, 3						BOLT, Banjo Brake Hose to Caliper Mounting
		1	6, 7, 8						Brake Hose to Caliper Mounting
-3	J323 7672	2	1, 2, 3						GASKET, Brake Hose To Caliper
		2	6, 7, 8						
4	3420 1888	3							SCREW, Hex Head D Clip to Crossmember Mounting
		2							D Clip to Frame Mounting
5	5200 9165	4	6, 7, 8						CLIP, Brake Line to Frame and Crossmember
		5	1, 2, 3						to Frame and Crossmember
6	3420 1888	2							SCREW, Hex Head, Clip to Frame Mounting
7	5200 9194	1	1, 2, 3						TUBE, Brake BGJ-Junction to Right Front Hose
	5200 9195	1	6, 7, 8						BGJ-Junction to Right Front Hose
	5200 9176	1	1, 2, 3						[BGK]-Junction to Right Front Hose

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

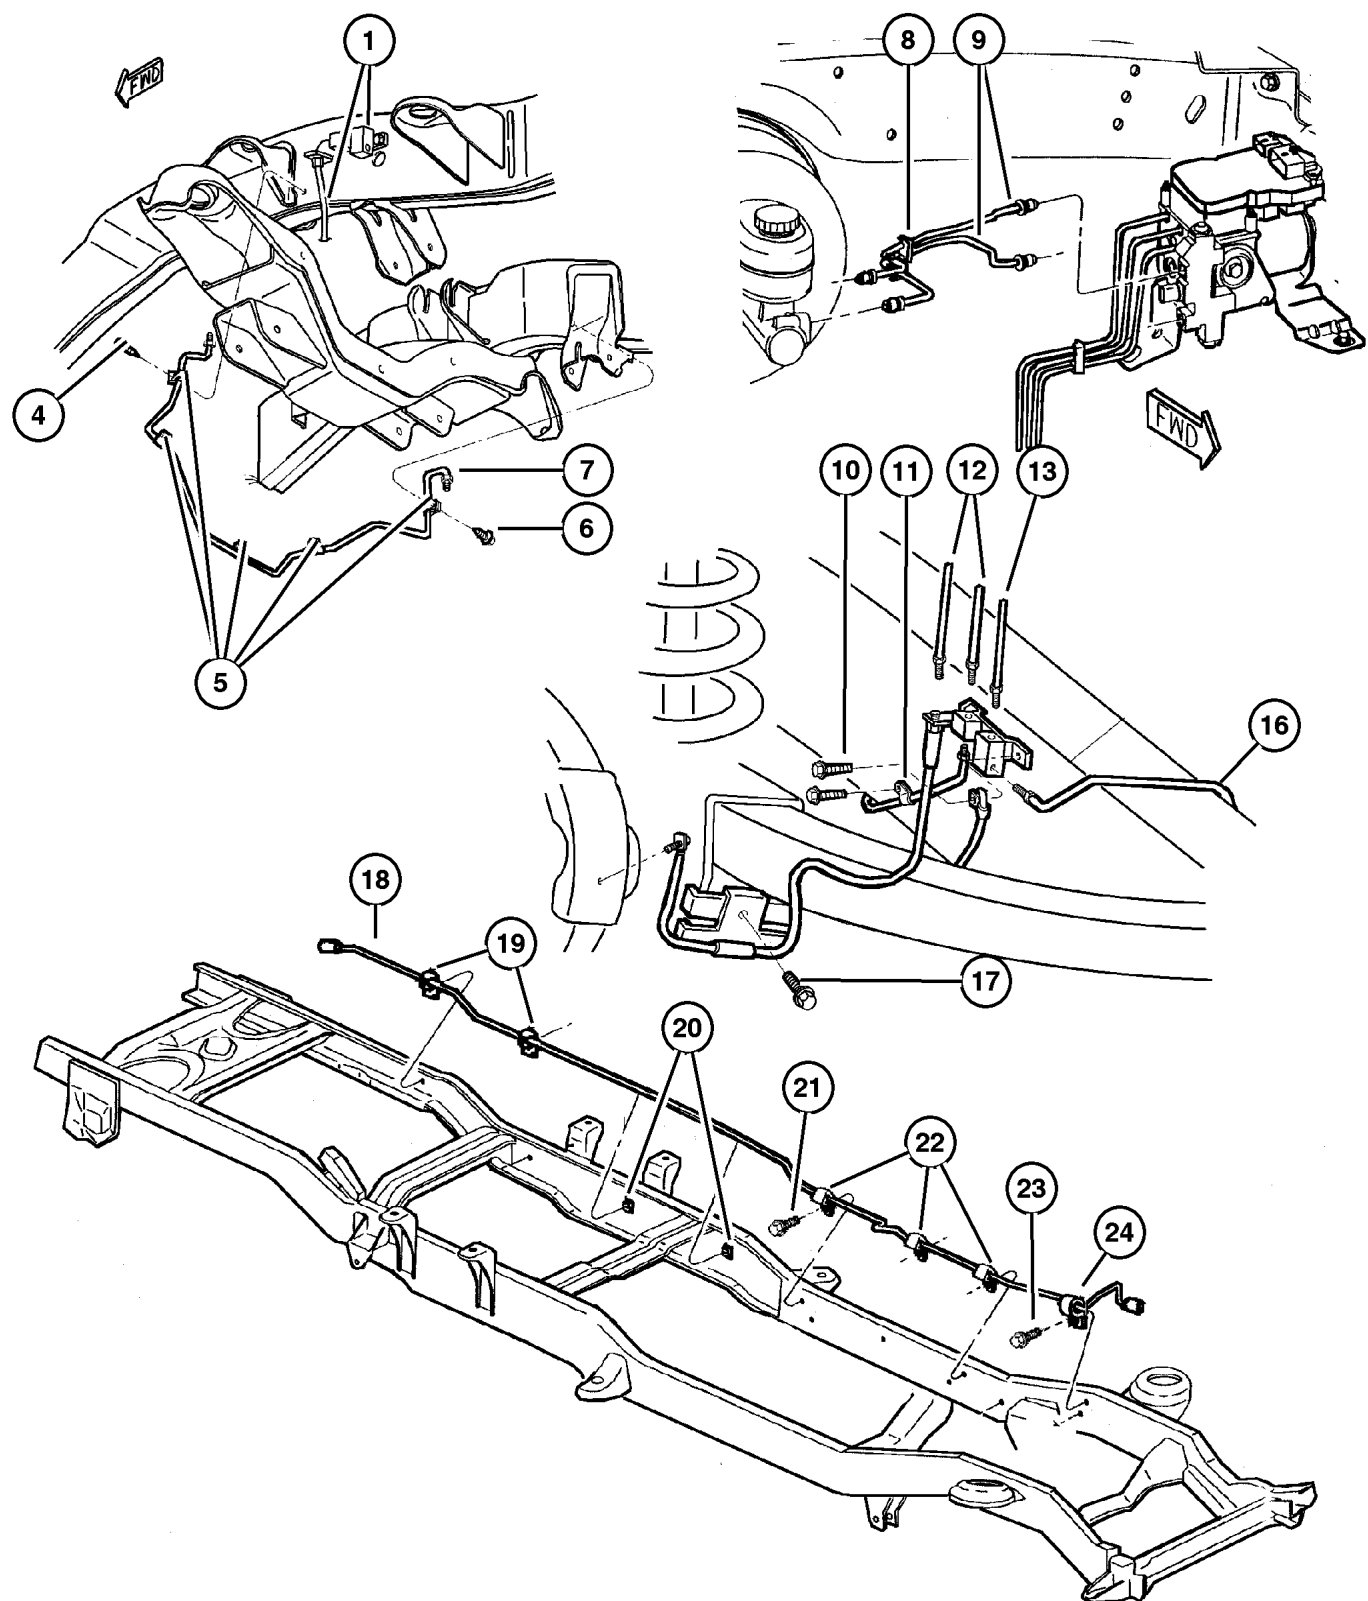Lines And Hoses,Brake,Front and Chassis
Figure 005-520



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5200 9177	1	6, 7, 8						[BGK]-Junction to Right Front Hose
8	5200 8940	2							CLIP, Brake Line, 2 Way
9	52009 917AD	1	1, 2, 6, 7						TUBE, Brake [EL0,EM0,EW0]-Primary-Master Cylinder to Combination Valve
	52009 918AD	1	1, 2, 6, 7						[EL0,EM0,EW0]-Secondary-Master Cylinder to Combination Valve
	52009 763AB	1	3, 8		34				[EM0,EW0]-Primary-Master Cylinder to Combination Valve
	52009 764AB	1	3, 8		34				[EM0,EW0]-Secondary-Master Cylinder to Combination Valve
	52009 763AB	1							[ET0]-Primary-Master Cylinder to Combination Valve
	52009 764AB	1							[ET0]-Secondary-Master Cylinder to Combination Valve
10	3420 1888	2							SCREW, Hex Head, Junction Strip to Frame Mounting
11	5200 9165	5	1, 2, 3						CLIP, Brake Line to Frame and Crossmember
		4	6, 7, 8						to Frame and Crossmember
12									TUBE, Brake
	52009 380AB	1							BGJ-Combination Valve to Junction Front
	52009 390AB	1							BGK-HCU to Junction Hose Left
	52009 399AB	1							BGK-HCU to Junction Hose Right
13									TUBE, Brake
	52009 706AB	1							BGJ-HCU to Junction Rear
		1							BGK-HCU to Junction Rear
-14									CLIP, Brake Line
	5200 8940	2							2 Way
	5200 9163	1							2 Way
-15	5200 9437	1							CLIP, 3 Way
16									TUBE, Brake
	52009 913AB	1	1, 2, 6, 7		31, 33				Junction to Rear Brake Hose
	52009 914AB	1			34				Junction to Rear Brake Hose
17	6101 452	2	6, 7, 8						SCREW AND WASHER, Hex Head, M8x1.25x20, Front Brake Hose to Axle Mounting
18									TUBE, Brake
	52009 913AB	1	1, 2, 6, 7		31, 33				Junction to Rear Brake Hose


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

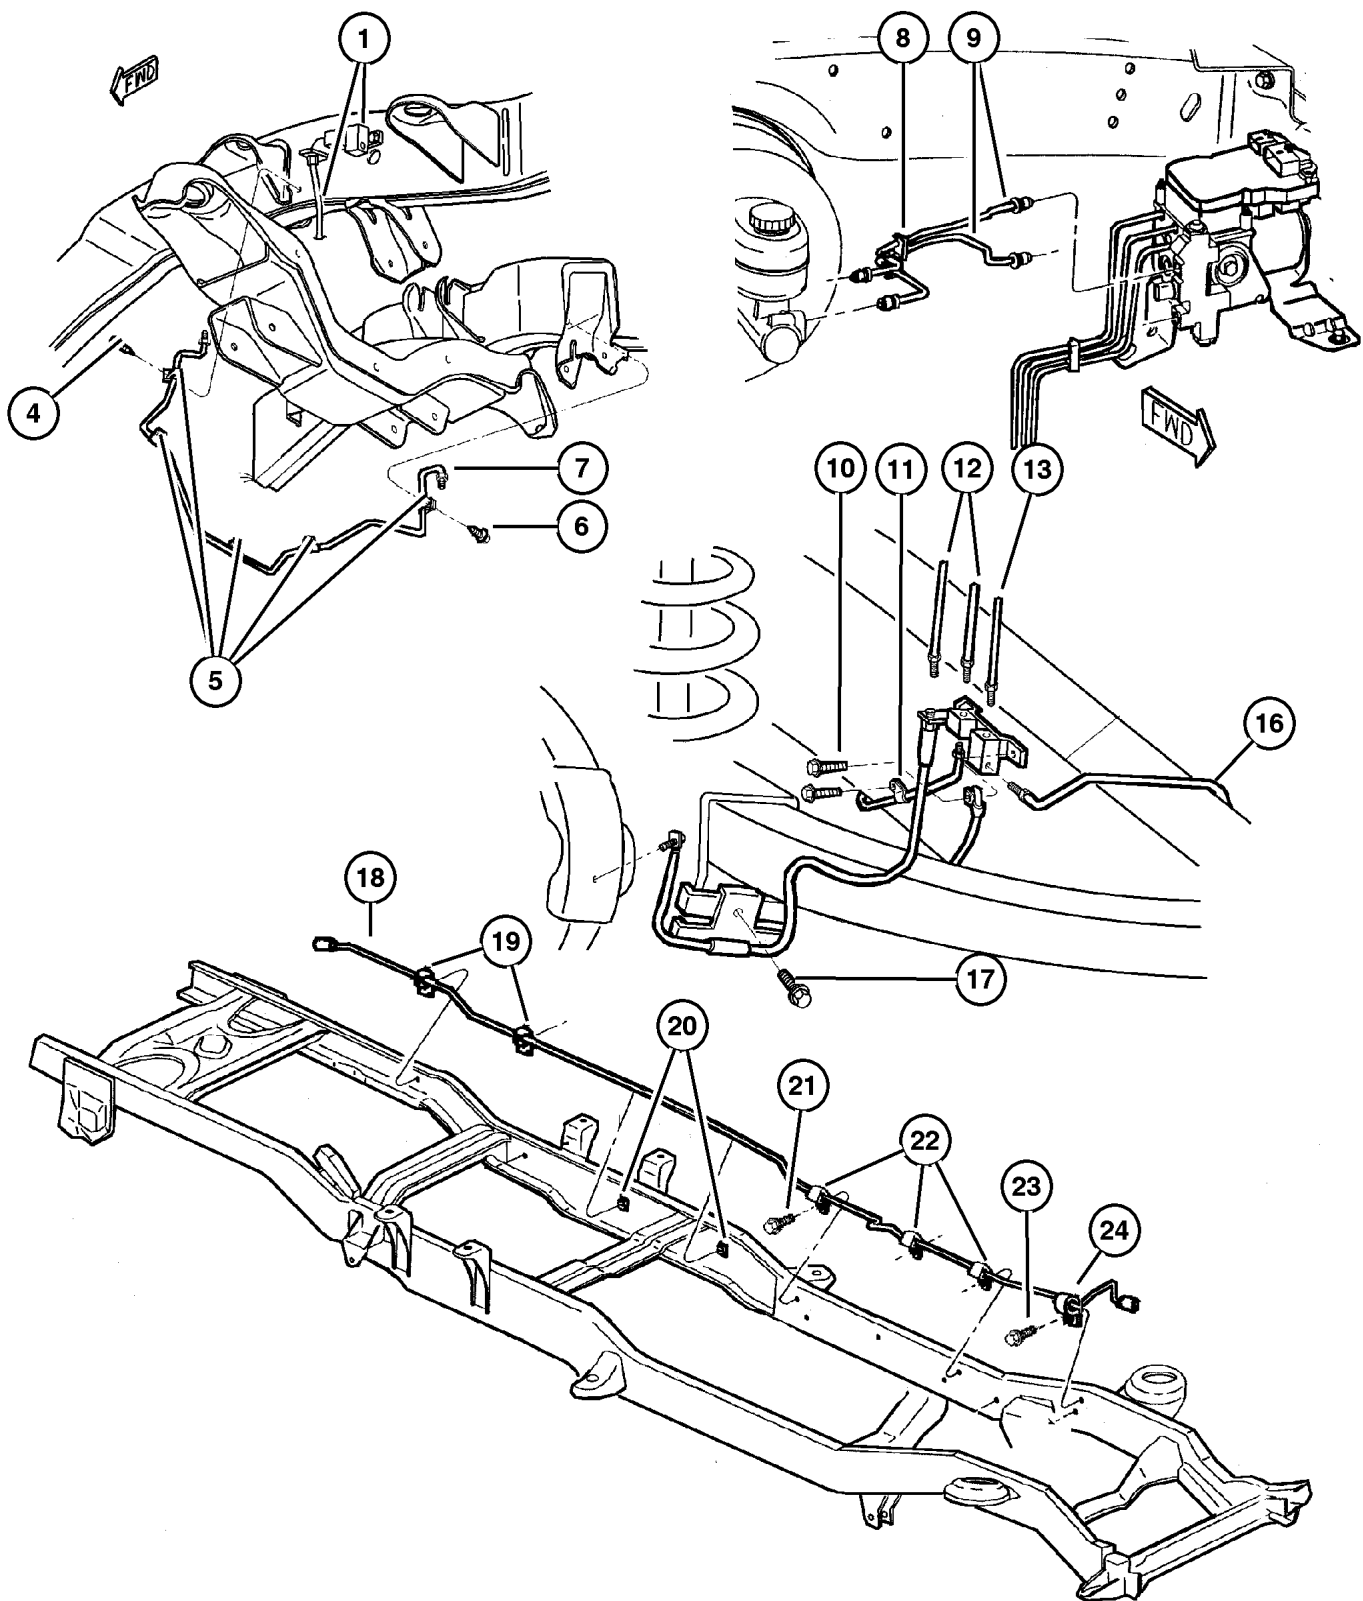Lines And Hoses,Brake,Front and Chassis
 Figure 005-520




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	52009 914AB	1			34				Junction to Rear Brake Hose
19	5200 7914	2							CLIP, Brake Line, Tube to Rear of Frame
20	52102 371AB	3	1, 6		31, 33				CLIP, Fuel Line [EL0.EM0.EW0]
		2	1, 6		32, 34				[EL0.EM0.EW0]
		3	2, 3, 7, 8						[EL0.EM0.EW0]
	52102 373AC	3	2, 3, 7, 8						[ET0]
21	3420 1888	4							SCREW, Hex Head
22	52102 371AB	3	1, 6		31, 33				CLIP, Fuel Line [EL0.EM0.EW0]
		3	2, 3, 7, 8						[EL0.EM0.EW0]
		2	1, 6		32, 34				[EL0.EM0.EW0]
	52102 373AC	3	2, 3, 7, 8						[ET0]
23	3420 1888	1							SCREW, Hex Head, D Tube Clip to Frame
24	5200 8053	1							CLIP, Brake Line, Brake Tube Line Mounting

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

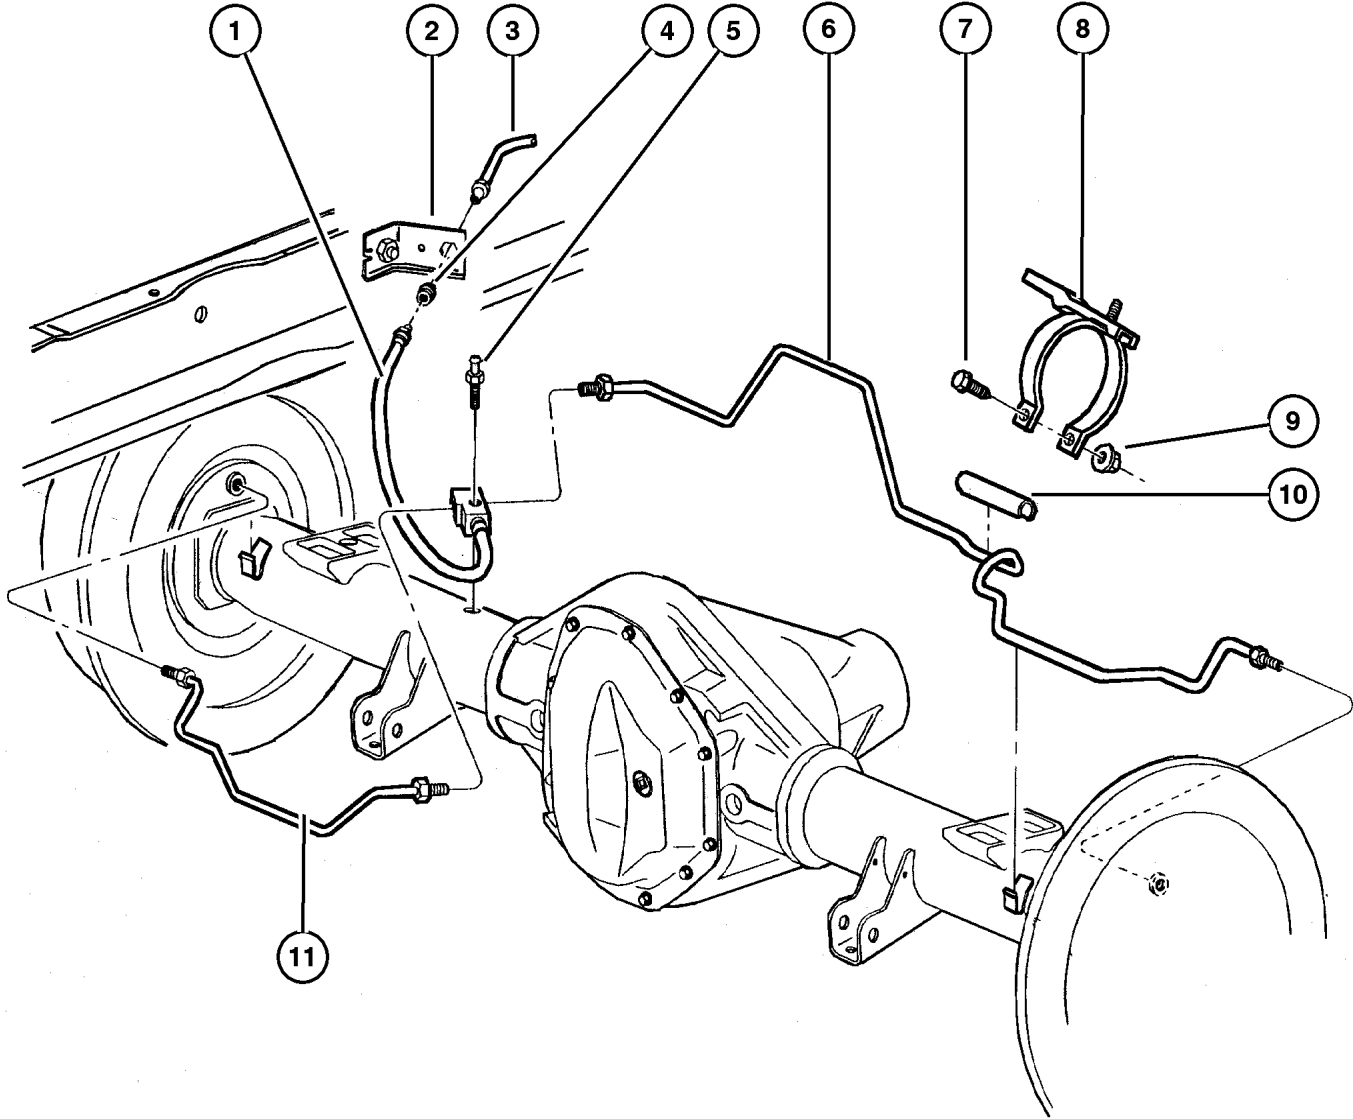Lines And Hoses,Brake,Rear
Figure 005-530



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

DRB = Rear Axle - Corporate 9.25 LD
DRD = Rear Axle - Dana M60/248MM RBI
DRE = Rear Axle - Dana M70/267MM RBI
DRL = Rear Axle - Dana 80 (Hybrid)

1	52009 575AB	1	1, 3, 6, 8						HOSE, Brake with Tee
		1	2, 7		33, 34				with Tee
2	5200 8966	1							BRACKET, Brake Hose, Rear
3	52009 913AA	1	1, 2, 6, 7		31, 33				TUBE, Brake Junction to Rear Brake Hose
	52009 914AA	1			34				Junction to Rear Brake Hose
4	52009 641AA	1	2, 7		33, 34				ADAPTER, Brake Hose
5	4137 696AB	1							BOLT, Axle Vent
6	52007 920AB	1	1, 6						TUBE, Brake [DRB] Up to and Including 02-06-00, Right
	52007 921AD	1	1, 6						[DRB] 02-07-00 and After, Right
	52007 984AB	1	2, 7		33, 34				[DRL], Right
	52009 042AB	1	2, 7		33, 34				[DRD,DRE], Right
	52007 986AB	1	3, 8		34				[DRL], Right
7	6101 715	1							SCREW
8	5200 8668	1	1, 2, 6, 7						SHIELD, Brake Line [+DRL]
	5200 8670	1	2, 3, 7, 8		33, 34				[-DRL]
9	6500 274	1							LOCK NUT, M6x1.0x6
10	5200 8755	1							SLEEVE, Brake Line
11	52007 921AC	1	1, 6						TUBE, Brake [DRB], Left
	52007 985AC	1	2, 7		33, 34				[DRL], Left
	52009 043AC	1	2, 7		33, 34				[DRD,DRE], Left
	52007 987AC	1	3, 8		34				[DRL], Left


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

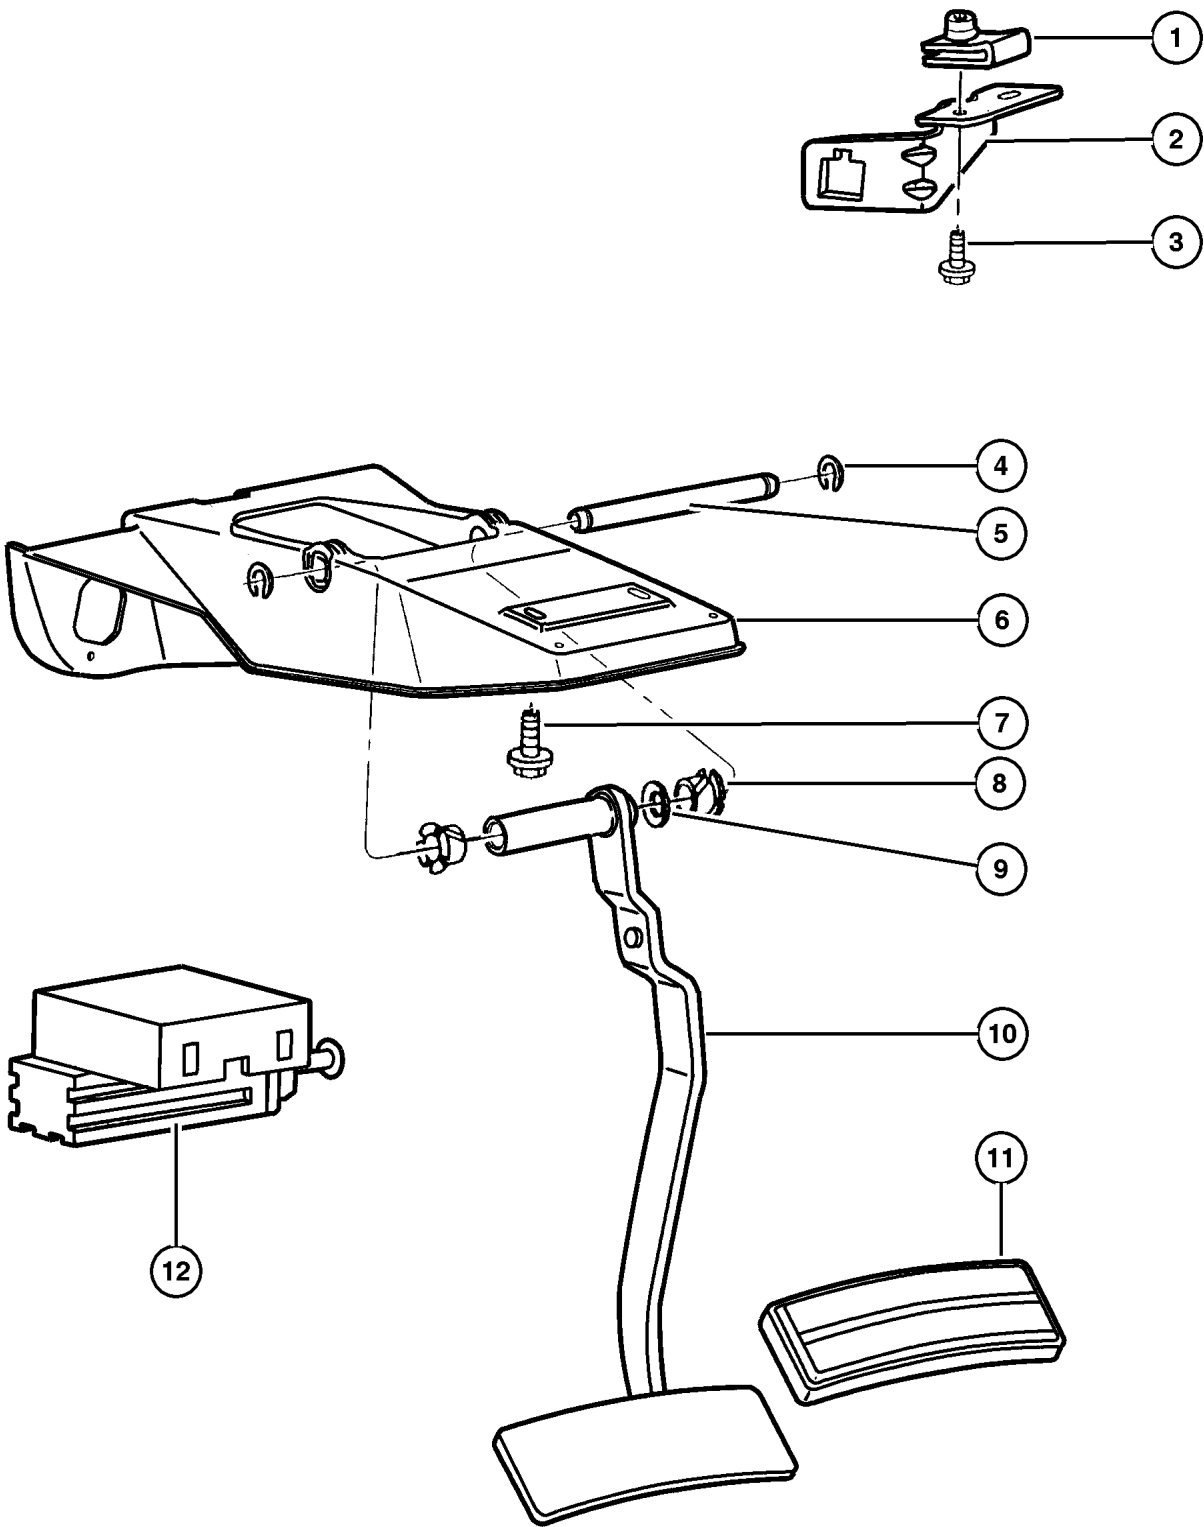Pedal.Brake
Figure 005-610




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:DBB= All Manual Transmissions---DG0=All Automatic Transmissions									
1	6101 712	1							NUT, U, M6x1, Brake Switch Mounting
2	56045 044AC	1							BRACKET, Brake Lamp Switch
3	6101 718	2							SCREW AND WASHER, Oval Head, M6x1x25, Brake Switch Bracket Mounting
4	4103 262	2							RETAINER, Shaft, Pivot
5	5207 7902	1							SHAFT, Pedal
6	55351 014AE	1							BRACKET, Steering Column, Clutch and Brake Pedal
7									SCREW AND WASHER, Hex Head, M10x1.5x30, Brake Pedal Bracket to Support Mounting, (NOT SERVICED) (Not Serviced)
8	4294 639	4							BUSHING, Clutch and Brake Pedal
9	5200 9582	1							WASHER, Brake Pedal Spring
10									PEDAL AND PAD, Brake
	52009 423AB	1							[DG0]
	52009 570AC	1							[DBB]
11									PAD, Pedal
	5207 9345	1							[DG0]
	5200 9562	1							[DBB]
12	5016 294AB	1							SWITCH PACKAGE, Stop Lamp
-13	4294 036	1							CLIP, Master Cylinder Push Rod to Brake Pedal Pin Mounting

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

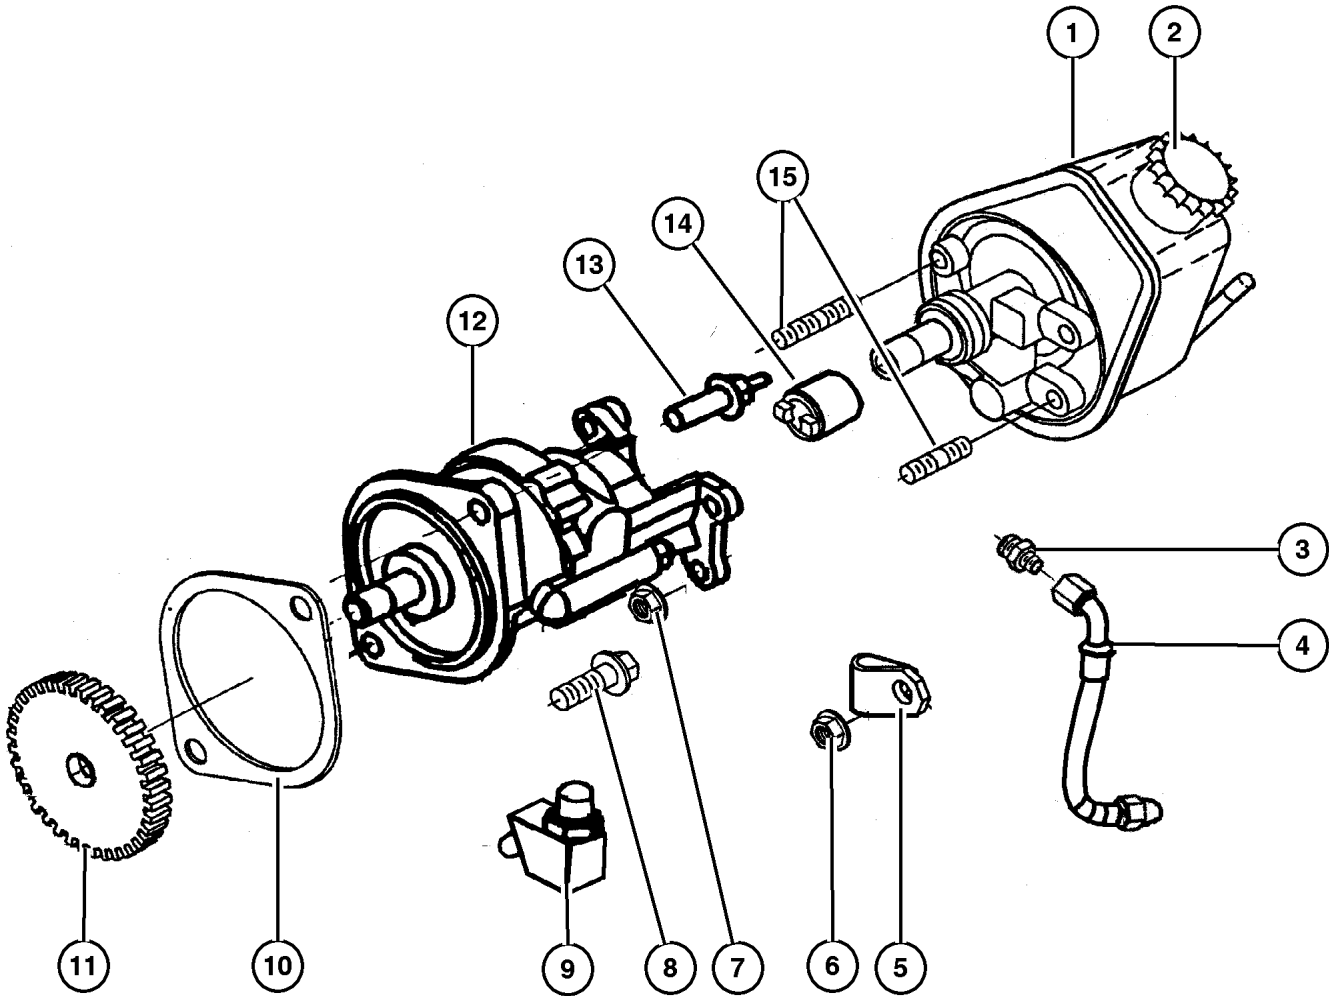Vacuum Pump, Brake, BE 2,3,7,8
Figure 005-710



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note: ETB=5.9L Inline 6 Cylinder Cummins Turbo Diesel---ETC=5.9L 24 Valve Cummins Diesel Engine

1	4883 960AA	1							PUMP, Power Steering
2	5018 358AA	1							CAP, Power Steering Pump
3	5003 637AA	1							NIPPLE, Pump
4	5015 841AA	1							HOSE, Vacuum Pump
5	5011 799AA	1							BRACKET, Vacuum Pump
6	4429 862	1							NUT, Hex Flange, M10x1.5
7	4429 862	4							NUT, Hex Flange, M10x1.5
8	4429 637	1							SCREW, Hex Head, m12X1.75X.35
9	5011 617AA	1							CHECK VALVE, Vacuum Pump
10	4638 531	1							GASKET, Hydraulic Pump
11	5011 797AA	1							GEAR, Accessory Drive
12	5011 796AA	1							PUMP, Vacuum
13	5011 421AA	1							SCREW
14	4728 162	1							HUB, Hydraulic Brake Pump
15	4761 972	4							STUD

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005


Group – 006





Clutch

GROUP 6 - Clutch


Illustration Title Group-Fig. No.

Clutch	
Clutch	Fig. 006-110
Clutch Housing	
Housing and Pan, Clutch	Fig. 006-210
Clutch Controls	
Controls, Hydraulic Clutch	Fig. 006-310
Clutch Pedals	
Pedal, Clutch	Fig. 006-410

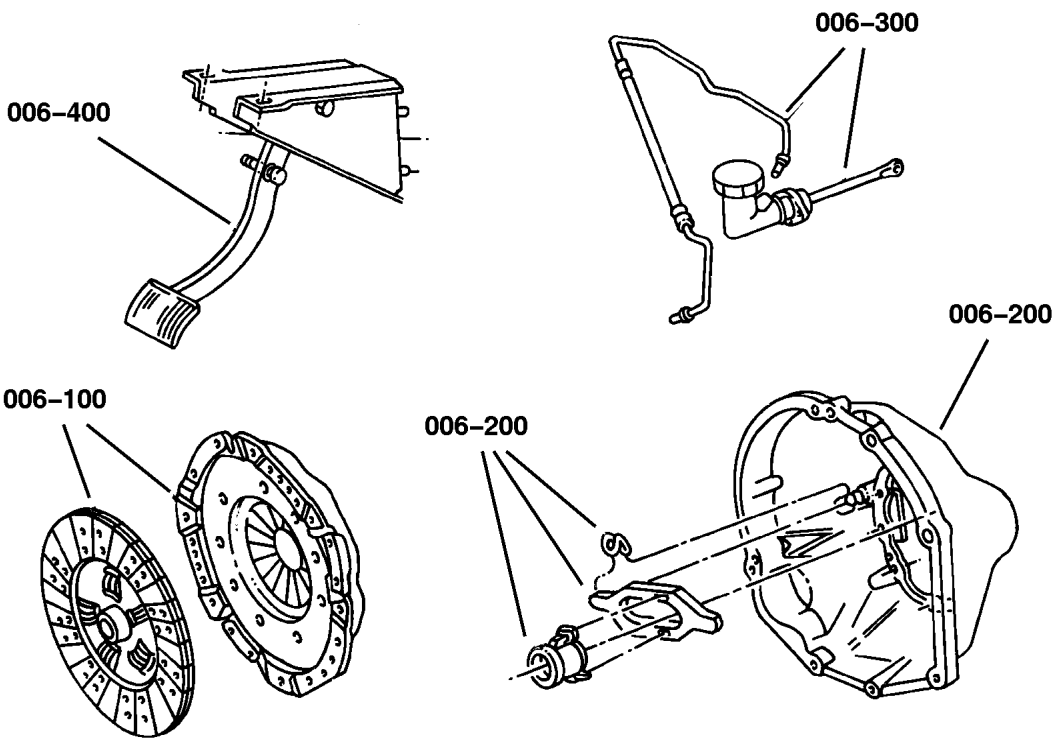

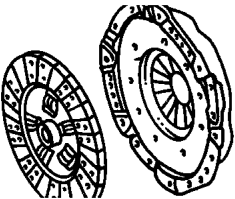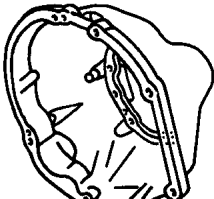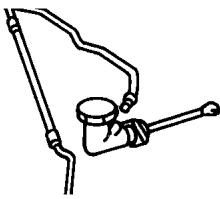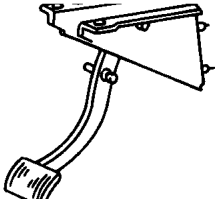006-100 Clutch	006-200 Clutch Housing	006-300 Clutch Controls	006-400 Clutch Pedals
			

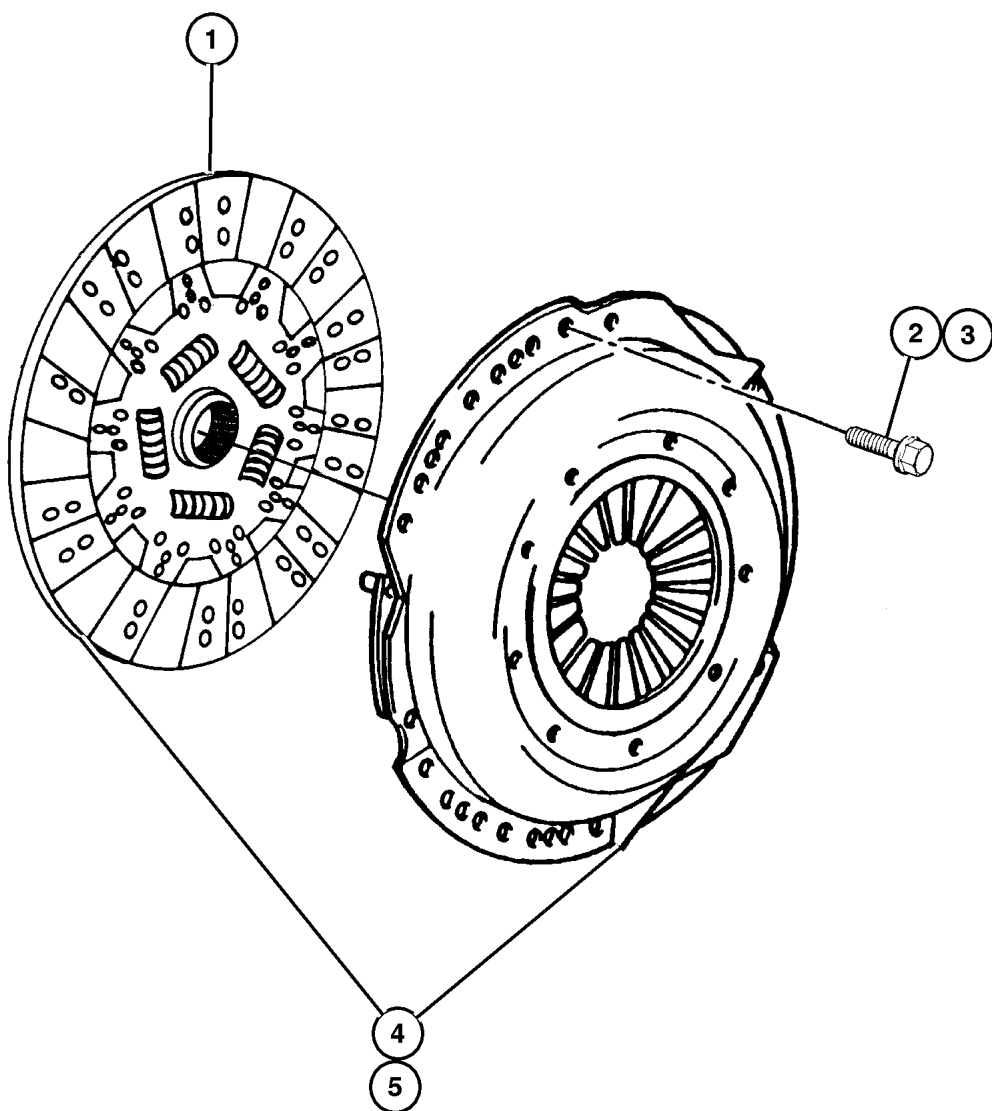Clutch
Figure 006-110



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: Sales Codes
[DBB] = All Manual Transmissions
[DEE] = 5 Speed Manual Transmission
[DDX] = 6 Speed Heavy Duty Manual Transmission
[ELO] = All 5.2L 8 Cylinder Gas Engines
[EM0] = All 5.9L 8 Cylinder Gas Engines
[ET0] = All 5.9L Turbo Diesels
[ETC] = 5.9L Cummins 24V Diesel
[ETH] = 5.9L cummins Turbo Diesel
[EW0] = All 8.0L Gas Engines


1	5210 7587	1				ELO, EM0	DBB		DISC, Clutch
	52107 611AB	1				EW0	DBB		
		1				ETC	DBB		
	52107 775AA	1	2, 3, 7, 8			ETH	DEE		
2	6035 626	6				ELO, EM0	DBB		BOLT, Hex Head, .375-16x.84
3	6036 096AA	8				EW0	DBB		BOLT, Hex Flange Head
		8				ET0	DBB		
4	4762 857	1				ELO, EM0	DBB		CLUTCH KIT, Manual Transmission
5	4897 532AB	1				EW0	DBB		CLUTCH PACKAGE
		1				ETC	DBB		
	5014 767AA	1	2, 3, 7, 8			ETH	DEE		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, ELO = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

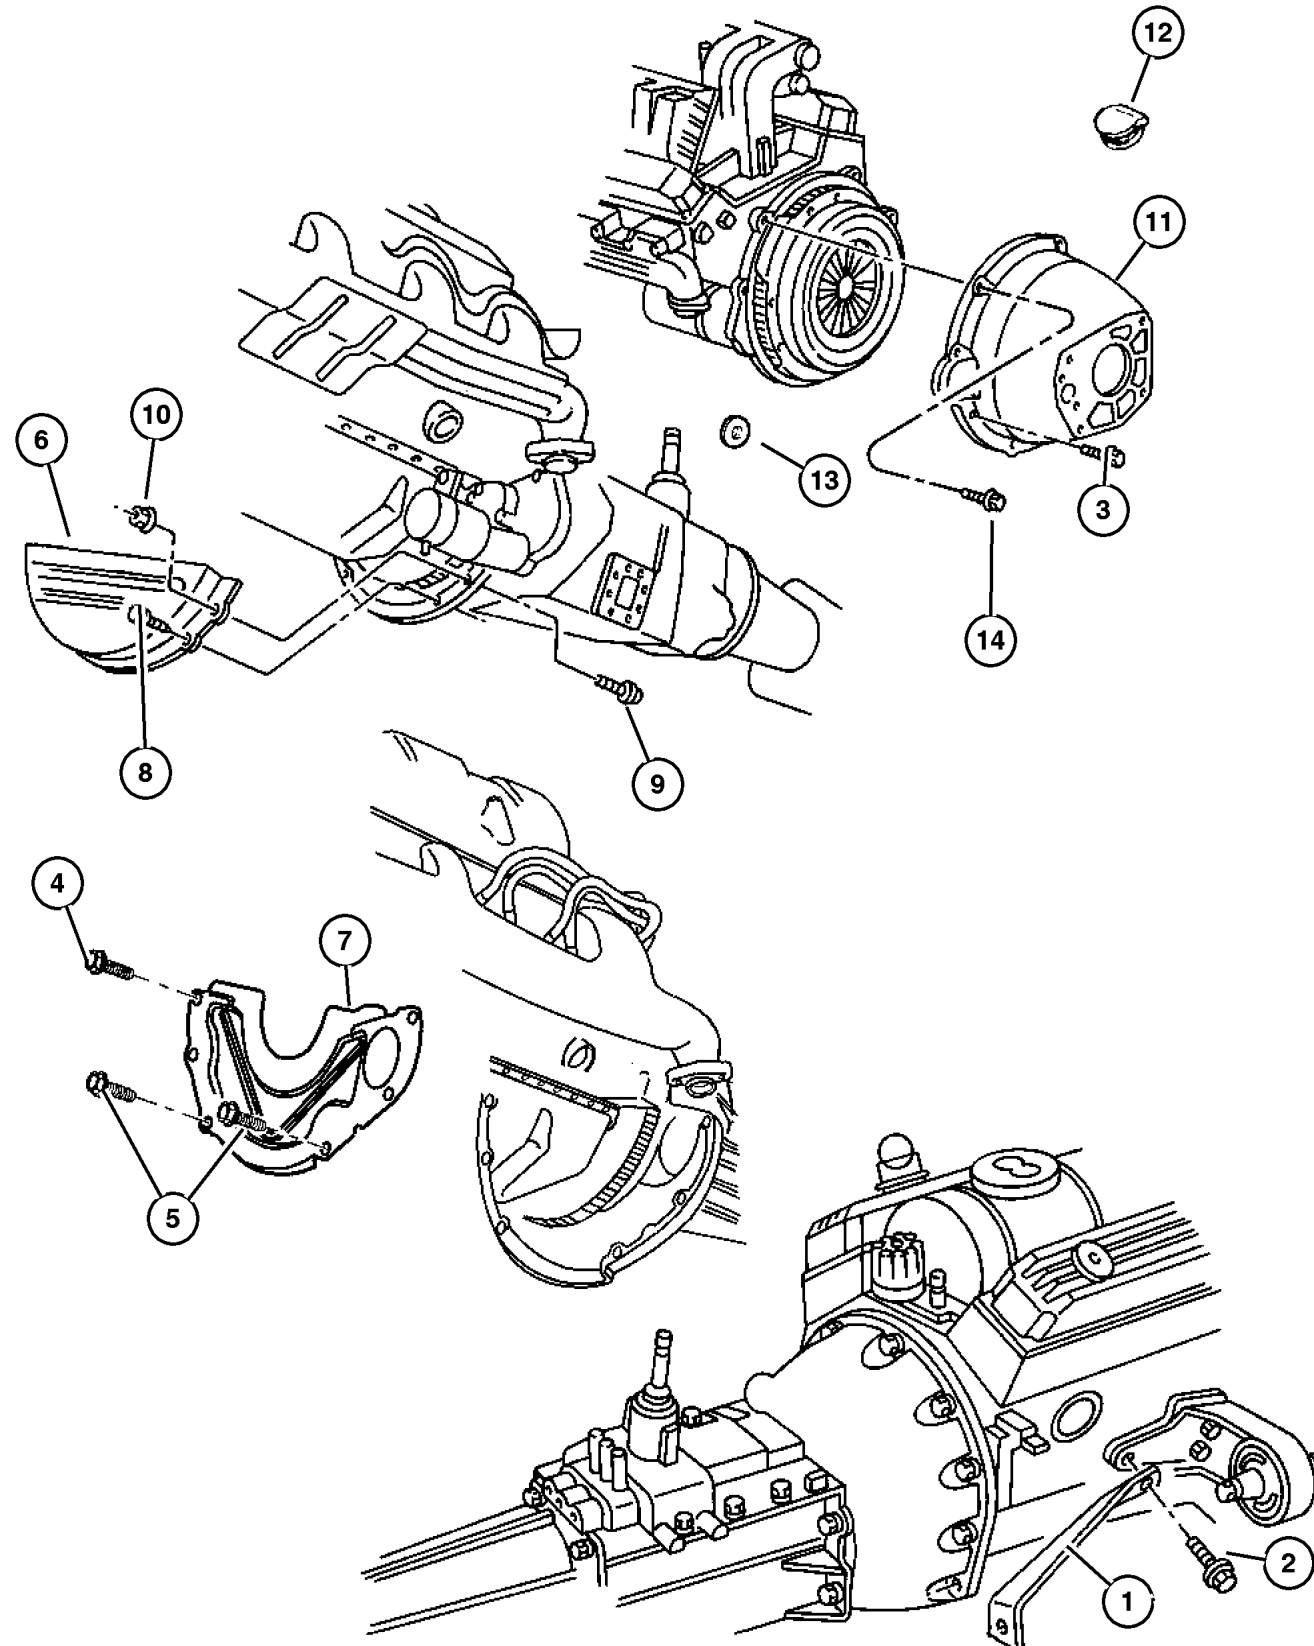Housing and Pan, Clutch Figure 006-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes									
[DBB] = All Manual Transmissions									
[DDP] = 5 Speed Manual Transmission									
[DDX] = 5 Speed Heavy Duty Manual Transmission									
[EL0] = All 5.2L 8 Cylinder Gas Engines									
[EM0] = All 5.9L 8 Cylinder Gas Engines									
[ET0] = All 5.9L Turbo Diesels									
[EW0] = All 8.0L Gas Engines									
1	5211 7772	1				EL0,	DDP		STRUT, Transmission to Block
2	6035 212	6				EM0 EL0, EM0, EW0			SCREW, Hex Flange Head, .375-16x1.125
3	6024 473	2				EW0	DBB		SCREW AND WASHER, Hex Head, .437-14x2.00
4	6023 092	1				EL0, EM0, EW0	DBB		SCREW AND WASHER, Hex Head, .25-20x.50
5									SCREW AND WASHER, M10x1.50x45.00
	6101 985	2				EL0	DDC		
		2				EL0, EM0	DDP		
6	5211 7614	1				EW0	DBB		COVER, Transmission Case
7	52107 753AB	1				EL0,	DBB		COVER, Transmission Case
8	6023 092	1				EM0 EL0, EM0, EW0	DBB		SCREW AND WASHER, Hex Head, .25-20x.50
9	6022 266	1				EL0, EM0	DBB		SCREW, Hex Head, .375-16x1.5
10	0152 474	4							NUT, Hex Flange Lock, .375-16
11									HOUSING, Clutch
	52107 540AB	1				EL0, EM0	DDP		
	5300 6513	1	2, 3, 7, 8			ETC, EW0	DDX		
12	5211 7709	1				EL0, EM0			GROMMET, Timing Probe
13	0152 474	2				EW0	DBB		NUT, Hex Flange Lock, .375-16


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

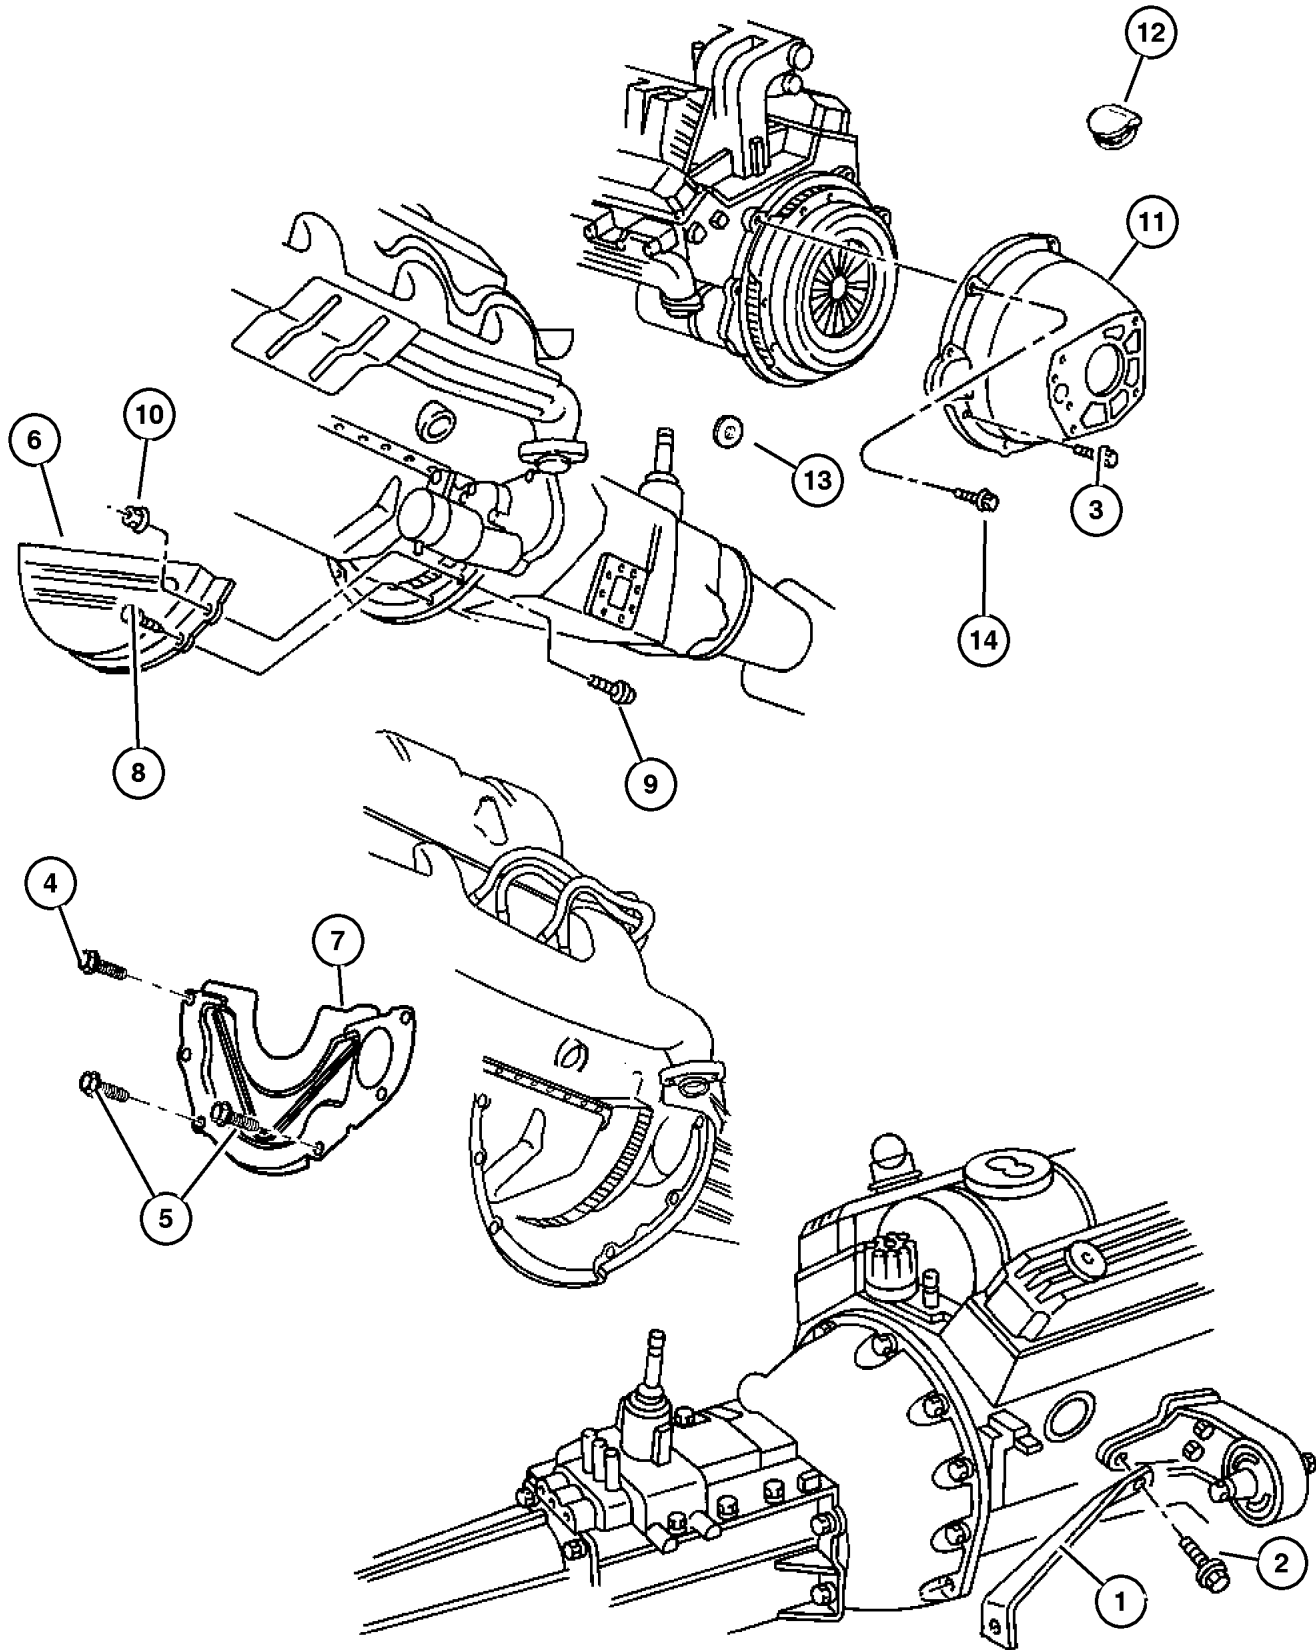Housing and Pan, Clutch
Figure 006-210




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
14	6024 055	4					DDP, DDX		SCREW AND WASHER

DODGE RAM QUAD CAB/CLUB CAB (BE)									
SERIES	LINE	BODY	ENGINE	TRANSMISSION					
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.					
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.					
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual					
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual					
			EAA = All Engines	DEE = 6 Speed HD Manual					
			EAG = All Gas Engines						

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

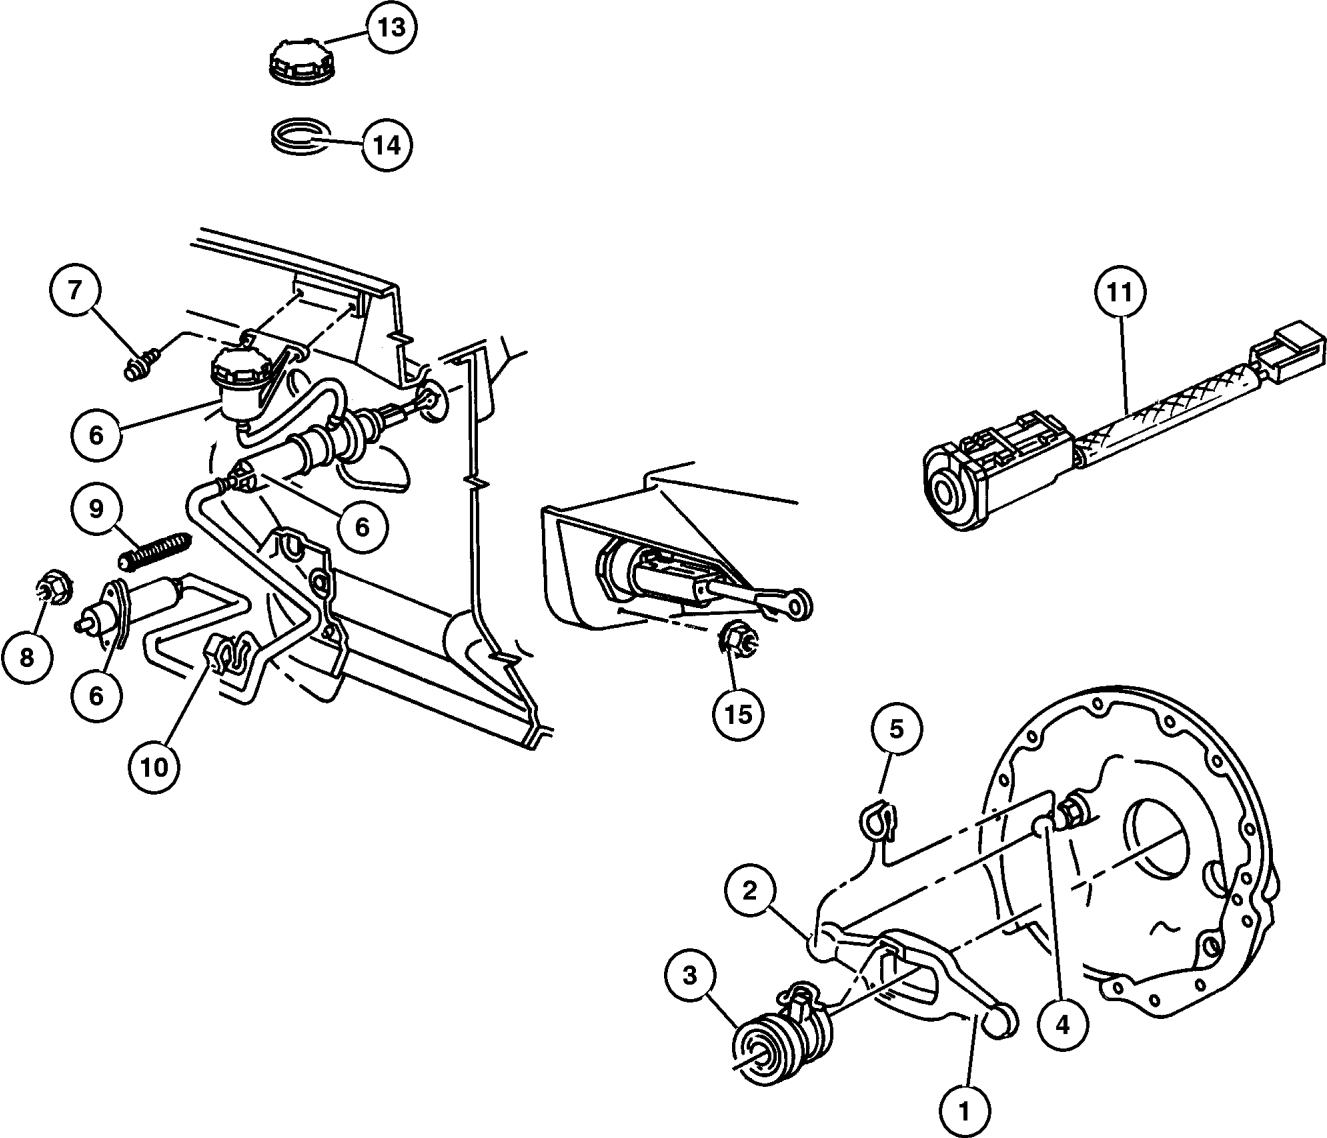Controls, Hydraulic Clutch
Figure 006-310



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: Sales Codes
[DBB] = All Manual Transmissions
[DDP] = 5 Speed Manual Transmission
[DDX] = 5 Speed Heavy Duty Manual Transmission
[EL0] = All 5.2L 8 Cylinder Gas Engines
[EM0] = All 5.9L 8 Cylinder Gas Engines
[ET0] = All 5.9L Turbo Diesels
[EW0] = All 8.0L Gas Engines


1	5210 7555	1				EL0,	DBB		FORK, Clutch Release
2	5208 7515	1				EM0 ET0, EW0	DBB		LEVER, Clutch Release
3									BEARING, Clutch Release
	5208 7514	1				ET0, EW0	DDX, DEE		
	5300 8342	1				EL0, EM0	DBB		
4	5208 7542	1				ET0, EW0	DBB		PIVOT, Clutch Release
		1				EL0, EM0	DDP		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
		1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			EL0	DDC		
		1	6, 7, 8			EL0	DDC		
5	4338 855	1					DBB		SPRING, Clutch Release
6									LINKAGE, Hydraulic Clutch
	52107 790AA	1					DBB		
	52108 580AA	1	7, 8			EW0	DBB		
7	6032 988	2					DBB		SCREW
8	0152 472	2					DBB		NUT, Hex Flange Lock, .312-18
9	6032 878	2					DBB		STUD, .312-18x2.00
10	6026 125	1							CLIP, Retainer
11	53007 944AB	1					DBB		SWITCH, Clutch Starter Interlock
-12	5015 960AA-	1					DBB		COVER, Switch
13	4720 156	1					DBB		CAP, Clutch Reservoir
14	4720 157	1					DBB		DIAPHRAGM, Clutch Reservoir
15	6503 269	4							NUT, Hex, M10-1.5

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

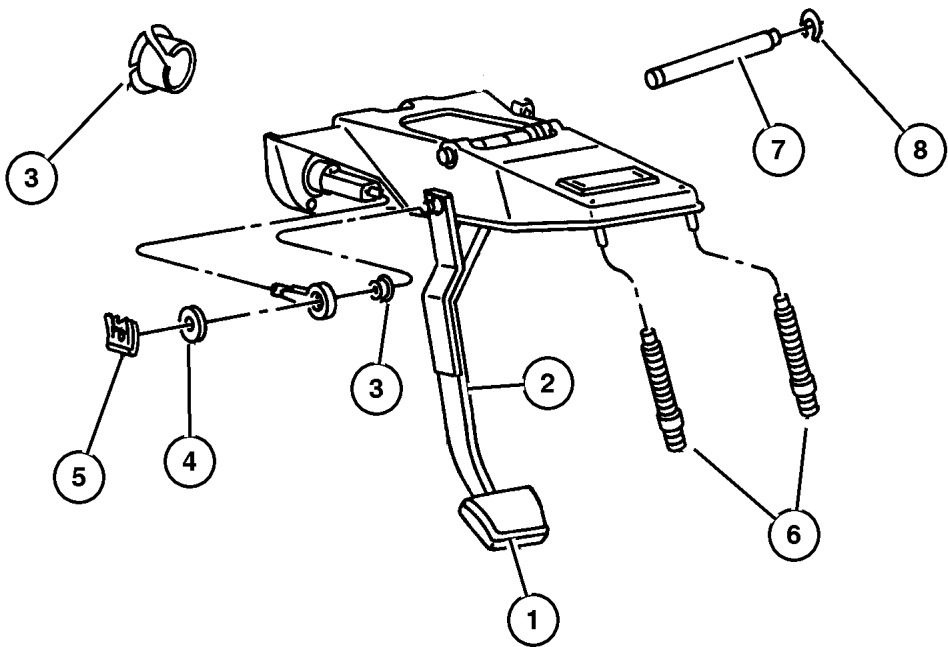Pedal, Clutch
Figure 006-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: Sales Codes

[DBB] = All Manual Transmissions

1	5200 9562	1					DBB		PAD, Pedal
2	52009 557AB	1					DBB		PEDAL, Clutch
3	4294 639	4							BUSHING, Clutch and Brake Pedal
4	0120 395	1							WASHER, Flat
5	4294 036	1							CLIP
6	6503 761	2							STUD, M6x1.00mmx48.80mm
7	5207 7902	1							SHAFT, Pedal
8	4103 262	2							RETAINER, Shaft


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	








AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Group – 007

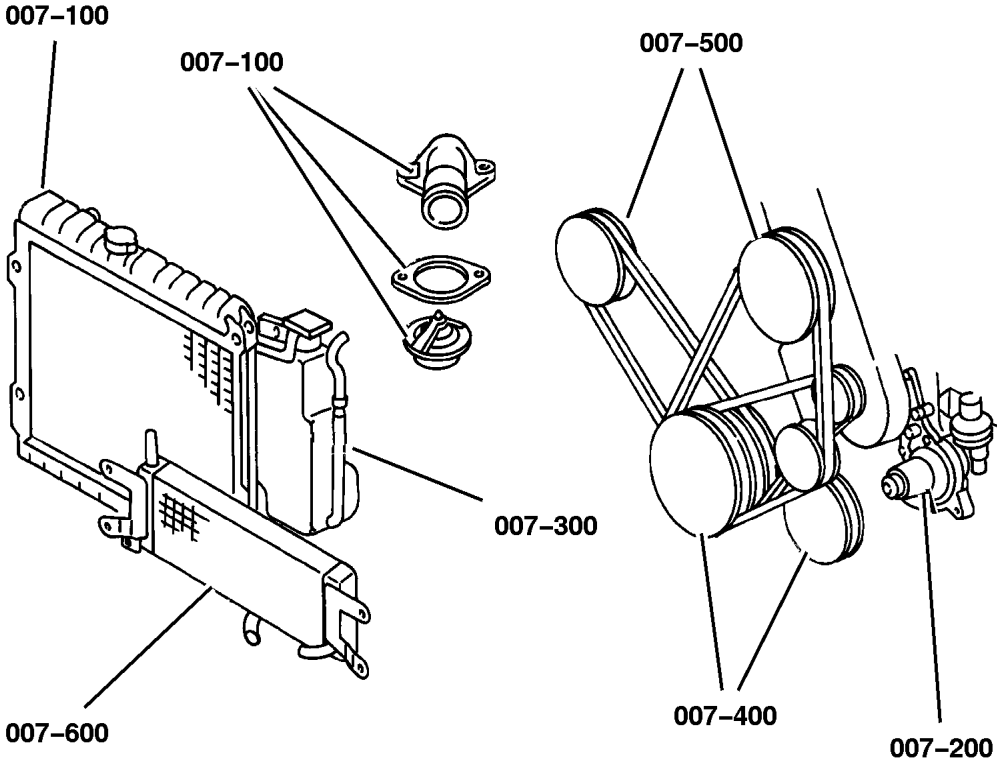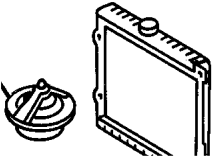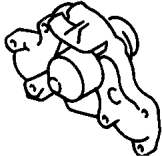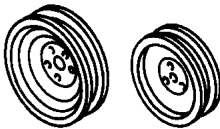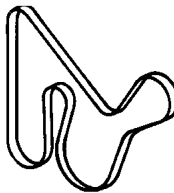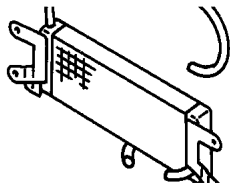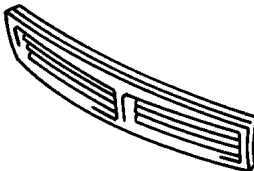Cooling




007-100 Radiator and Related Parts 	007-200 Water Pump and Related Parts 	007-300 Tank, Coolant Engine 	007-400 Pulleys and Related Parts 
007-500 Drive Belts 	007-600 Lines, Transmission Oil Cooler 	007-700 Grilles 	

GROUP 7 - Cooling

Illustration Title	Group-Fig. No.
Radiator and Related Parts	
Radiator And Related Parts Gas Engines	Fig. 007-125
Radiator And Related Parts Diesel Engine	Fig. 007-130
Water Pump and Related Parts	
Water Pump 5.2 And 5.9 Engine	Fig. 007-210
Water Pump Diesel Engine	Fig. 007-225
Water Pump 8.0 Engine	Fig. 007-230
Tank, Coolant Engine	
Coolant Tank	Fig. 007-320
Pulleys and Related Parts	
Drive Pulleys 5.2, 5.9 LD And 8.0 Engine	Fig. 007-410
Drive Pulleys 5.9 Hd Engine	Fig. 007-420
Drive Pulleys Diesel Engine	Fig. 007-440
Drive Belts	
Drive Belts 5.2L And 5.9Ld Engine	Fig. 007-520
Drive Belts Diesel Engine	Fig. 007-530
Drive Belts 5.9 Hd Engine	Fig. 007-540
Drive Belts 8.0 Engine	Fig. 007-550
Lines, Transmission Oil Cooler	
Oil Cooler And Lines Except Diesel Engine	Fig. 007-615
Oil Cooler And Lines Diesel Engine	Fig. 007-620
Auxiliary Oil Cooler 5.2, 5.9 And 8.0 Engine	Fig. 007-650
Auxiliary Oil Cooler Diesel Engine	Fig. 007-660
Grilles	
Grille And Related Parts	Fig. 007-720

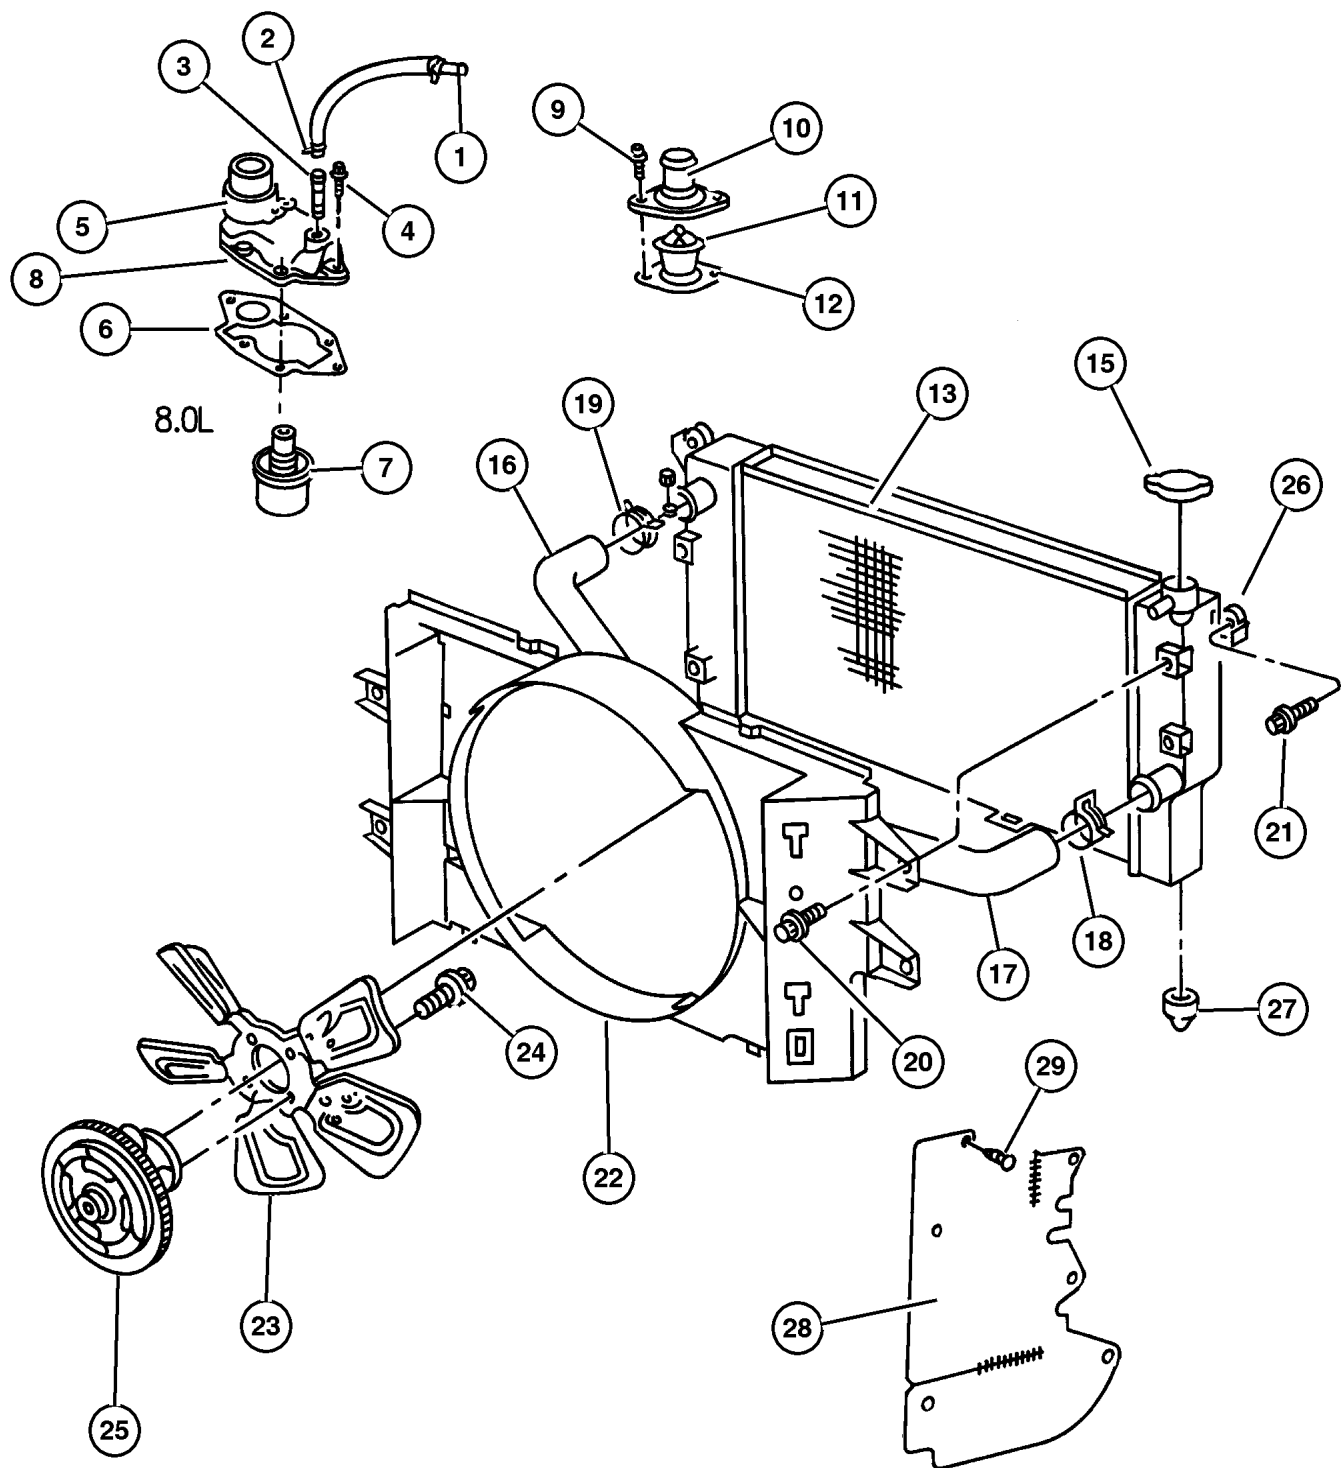Radiator And Related Parts Gas Engines
Figure 007-125




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
DBB = All Manual Transmissions									
DG0 = All Automatic Transmissions									
ELF = Magnum 5.9L SMPI V8 Engine									
ELO = All 5.2L 8 Cyl Gas Engines									
EML = Magnum 5.9L SMPI V8 Engine									
EMM = Magnum 5.9L SMPI V8 Engine									
EM0 = All 5.9L 8 Cyl Gas Engines									
EW0 = All 8.0L Gas Engines									
1	5503 6415	1				EW0			HOSE AND TUBE, Thermostat
2	6502 017	6				ELF, EM0			CLAMP, Heater Hose
		8				EW0			
3	5503 5944	1				ELO, EM0			NIPPLE, Heater Inlet Heater Supply
		1				EW0			Heater Supply
4	6034 506	6				EW0			BOLT AND CONED WASHER, Hex Head, .312-18x1.56
5	53006 047AB	1				EW0			HOUSING, Thermostat
6	53005 868AB	1				EW0			GASKET, Thermostat
7	5304 1078	1				EW0			THERMOSTAT, 195 Degrees
8	5301 0047	1				EW0			SEAL, Thermostat
9	6034 549	18				ELO, EM0			SCREW, Hex Head, .312-18x.94
10	5302 0115	1				ELO, EM0			HOUSING, Thermostat
11	5202 8185	1				ELO, EM0			THERMOSTAT, 195 Degrees
12	5302 1051	1				ELO, EM0			GASKET, Thermostat
13									RADIATOR, Engine Cooling
	52029 189AB	1				ELO, EM0	DG0		[AWL]
	52006 491AE	1				ELO, EM0	DG0		[-AWL]
	52006 491AC	1				ELO, EM0	DBB		
	52029 176AA	1				EW0	DG0		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, ELO = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

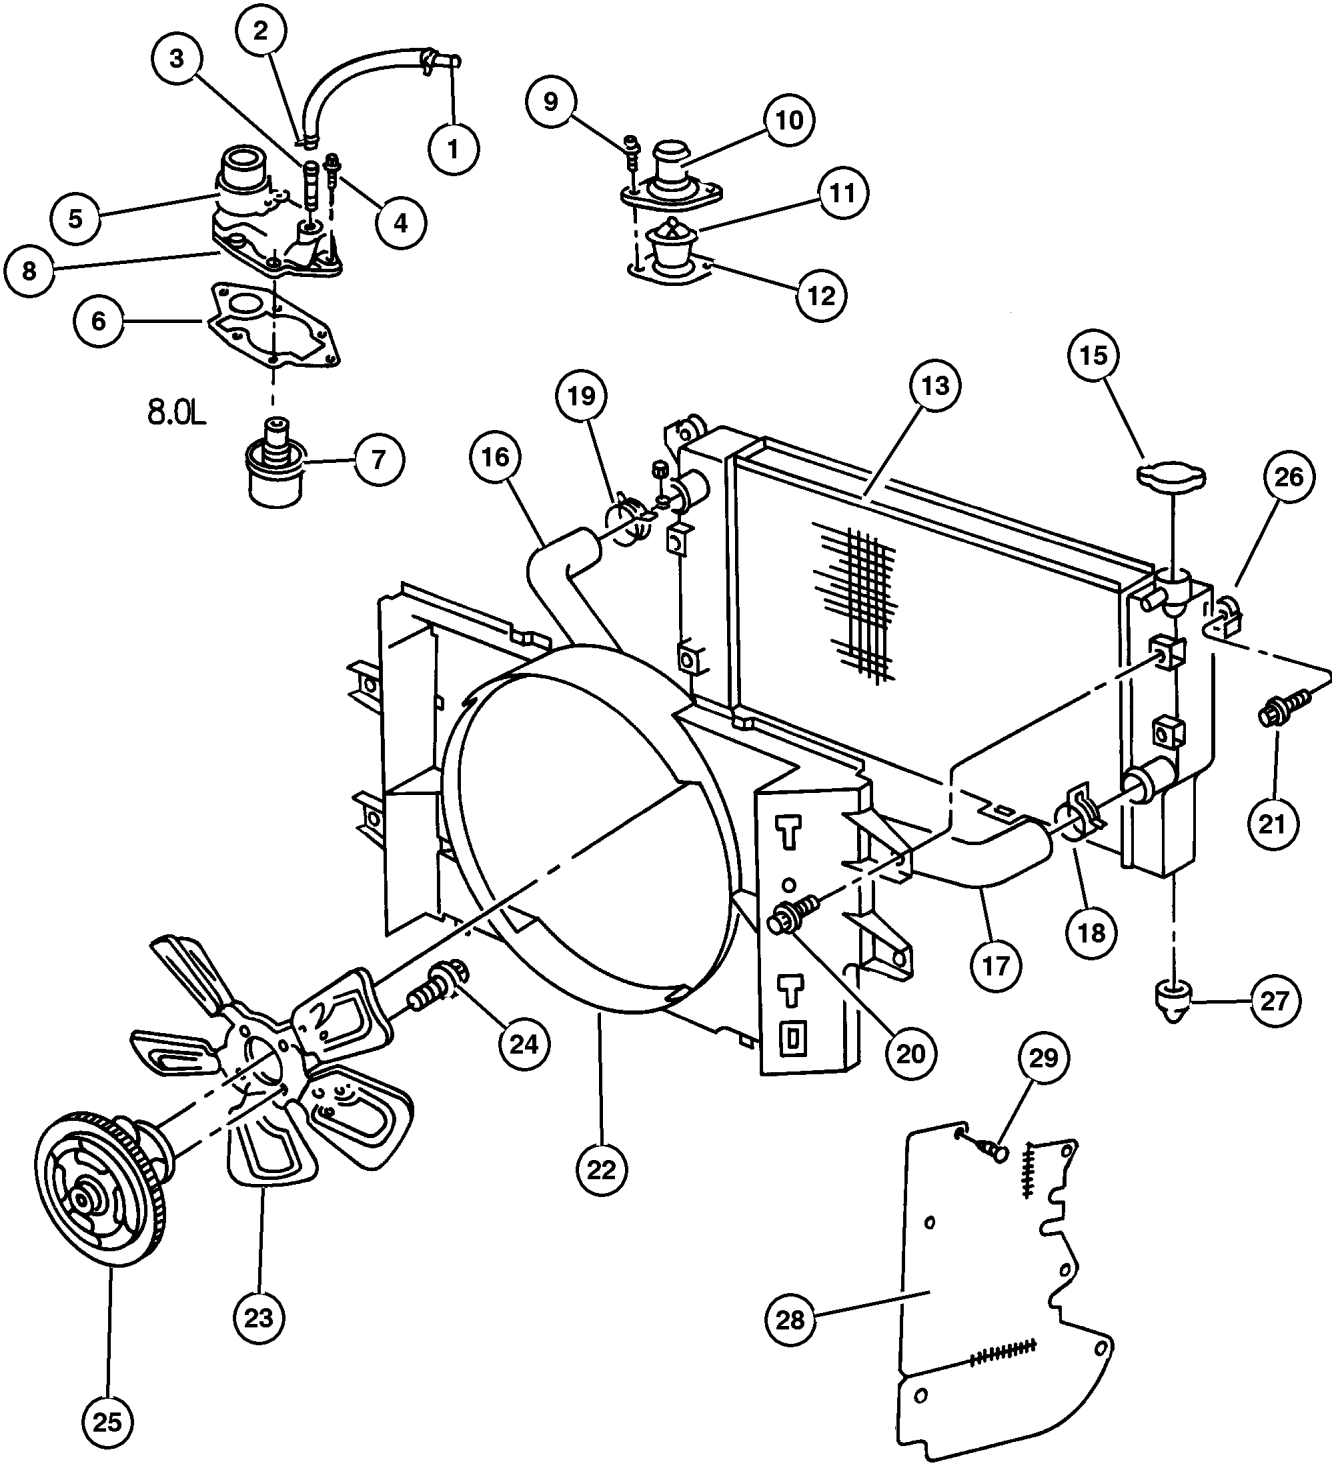Radiator And Related Parts Gas Engines
Figure 007-125




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	52029 177AB	1				EW0	DBB		
-14	5202 8466	1				EL0, EM0			DRAINCOCK, Radiator
15									CAP, Radiator
	5200 6926	1				EW0	DG0		
	4592 098	1				EW0 EL0, EM0	DBB		
16									HOSE, Radiator
	52028 643AB	1				EL0, EM0			Upper
	52028 641AB	1				EW0			Upper
17									HOSE, Radiator
	52006 484AB	1				EW0			Lower
	52028 896AA	1				EL0, EML			Lower
18									CLAMP, Radiator
	6032 277	1				EL0, EM0			
	5200 6750	1				EW0			
19									CLAMP, Radiator
	6032 277	1				EL0, EM0			
	5200 6750	1				EW0			
20									BOLT, (NOT SERVICED) (Not Serviced)
21	6101 718	4							SCREW AND WASHER, Oval Head, M6x1x25
22									SHROUD, Fan
	5202 8002	1				EL0, EM0			
	5200 6486	1				EW0			
23									FAN, Cooling
	5202 7846	1				EL0			
		1				EM0			Without [NMC]
	5202 7999	1				EM0			With [NMC]
	5202 7709	1				EW0			
24	6034 256	6				EL0, EM0			SCREW AND WASHER, Hex Head, .312-18x.75
25									DRIVE, Fan

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

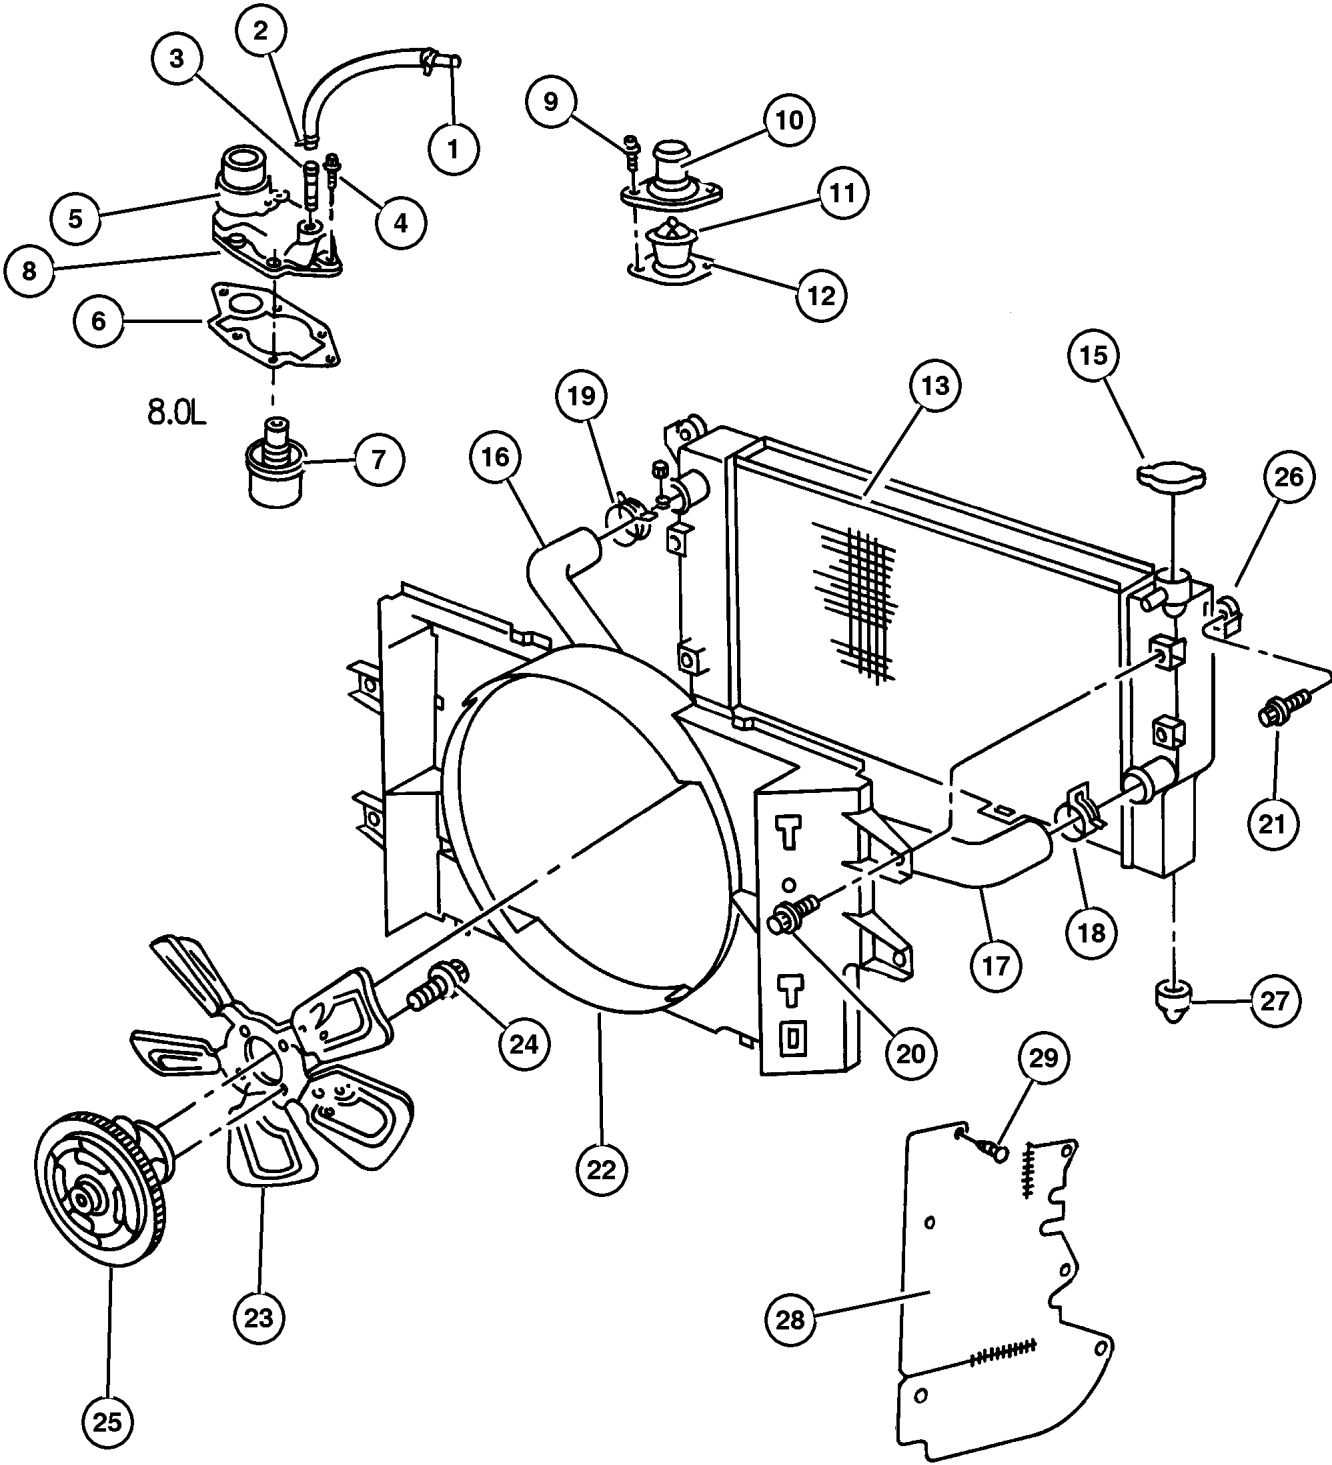Radiator And Related Parts Gas Engines
Figure 007-125



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5202 7883	1				EL0			
	52027 710AB	1				EM0			Up To 5-1-00
	52029 400AA	1				EM0			After 5-1-00
	5202 7885	1				EW0			
	5202 7883	1				EM0			without NMC
26									ISOLATOR, Radiator
	4401 950	2				EL0, EM0			
	5202 7828	2				EW0	DBB		
		2				EW0	DG0		
27									ISOLATOR, Radiator
	4401 950	2				EL0, EM0			
	5202 7828	2				EW0	DBB		
		2				EW0	DG0		
28									SEAL, Radiator Right
	5202 7560	1				EL0, EM0			
	5202 7561	1				EL0, EM0			Left
29	6030 441	2							PIN, Retainer


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Radiator And Related Parts Diesel Engine

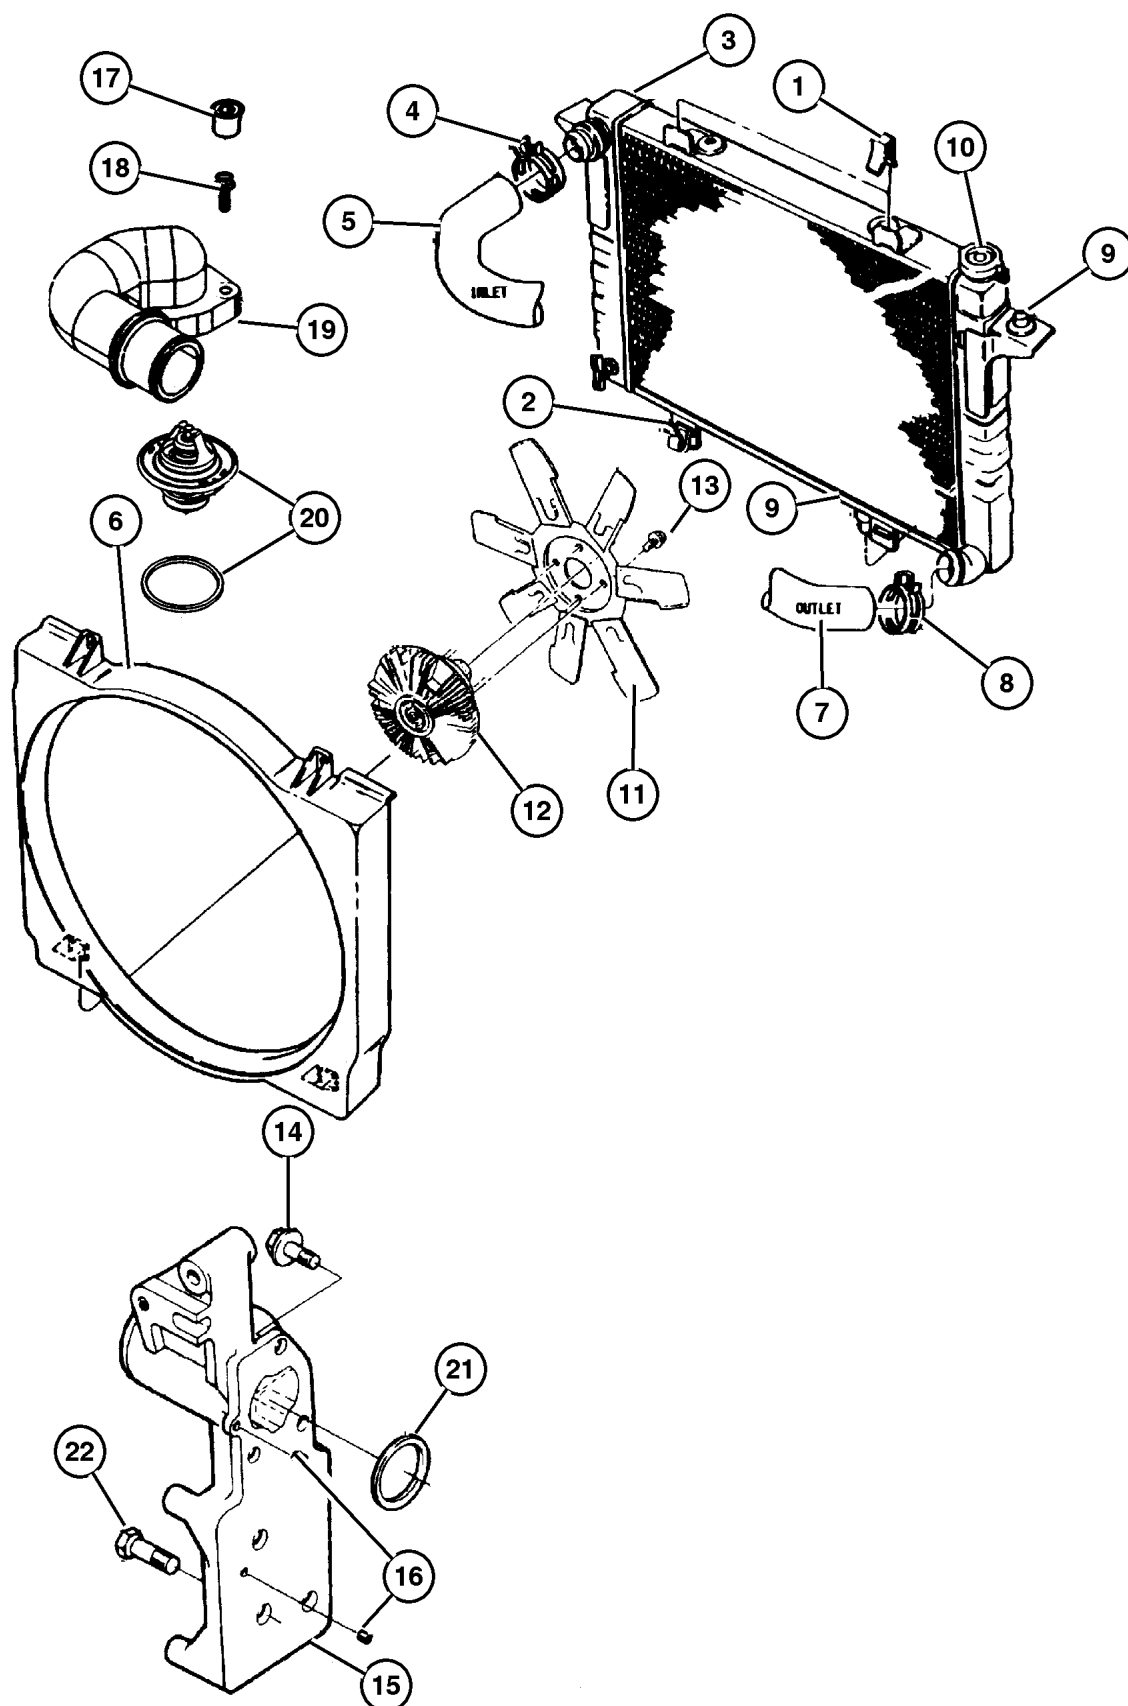Figure 007-130



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
DBB = All Manual Transmissions									
DG0 = All Automatic Transmissions									
ETC = 5.9L Cummins 24V Diesel Engine									
ETH = 5.9L HO Cummins Turbo Diesel									
ET0 = All 5.9L Turbo Diesel Engines									
1	4546 145	2				ET0			CLIP, Radiator Fan Shroud
2	4546 145	2				ET0			CLIP, Radiator Fan Shroud
3	52030 191AA	1				ET0			RADIATOR, Engine Cooling
4	6032 277	1				ET0			CLAMP, Radiator
5	5202 8715	1				ET0			HOSE, Radiator, Inlet,Upper
6	5202 8003	1				ET0			SHROUD, Fan
7	52006 482AB	1				ET0			HOSE, Radiator, Outlet,Lower
8	6032 277	1				ET0			CLAMP, Radiator
9									ISOLATOR, Radiator
	5202 7827	1				ET0			Upper
	5202 7828	2				ET0			Lower
10	5200 6926	2				ET0			CAP, Radiator
11	52028 893AA	1				ET0			FAN, Cooling
12	52028 894AA	1				ET0			DRIVE, Fan
13	6022 225	4							SCREW AND WASHER, Hex Head, .312-18x.75
14	4429 460	2				ETC			SCREW, Water Inlet, M10x1.5x25
15									CONNECTOR, Water Inlet
	5011 928AA	1				ETC			
	4638 933	1				ETH	DBB		PIN, Roll
16									
	4429 484	2				ETC			
		2				ETH	DBB		
17									PLUG, Pipe
	5011 903AA	1				ETC			
		1				ETH	DBB		
18									SCREW, Hex Flange Head
	4761 269	6				ETC			
	5016 651AA	3				ETH	DBB		
19									HOUSING, Thermostat
	5015 713AA	1				ETC	DBB		
		1				ETC	DG0		
		1				ETH	DBB		
20									THERMOSTAT

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

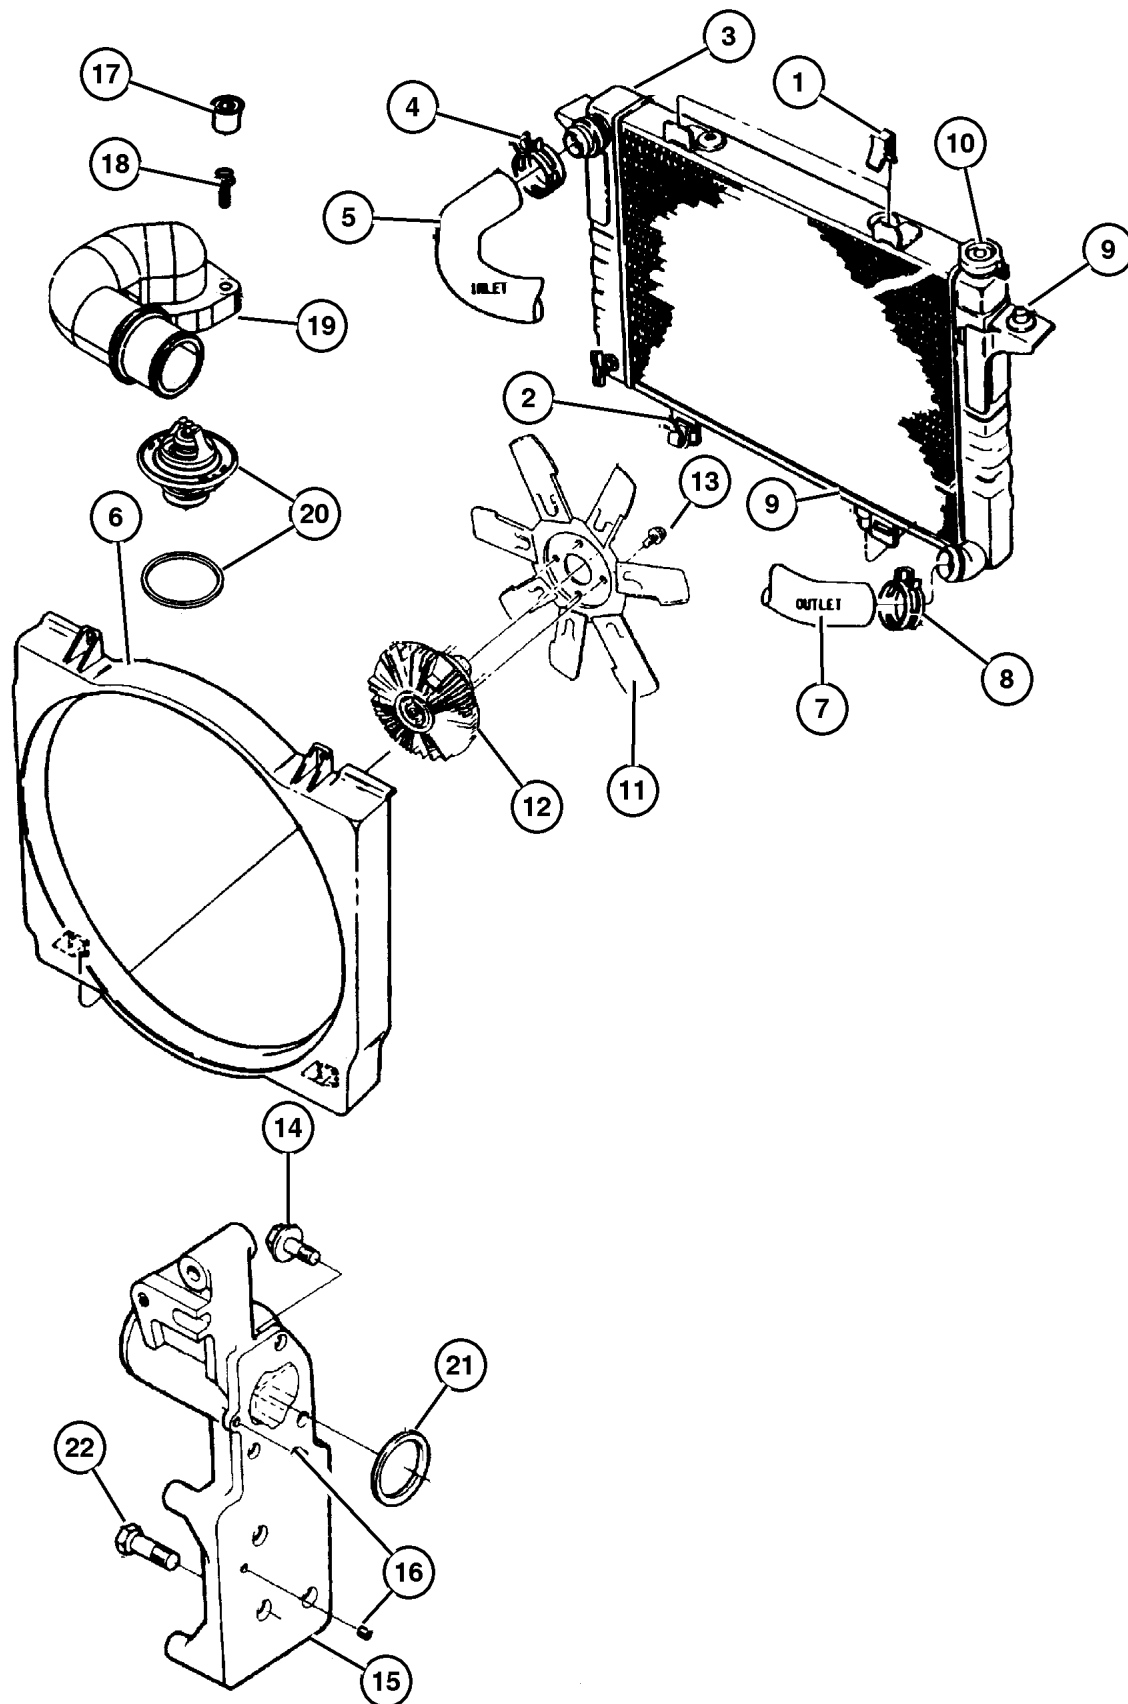
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Radiator And Related Parts Diesel Engine Figure 007-130



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5015 708AA	1				ETC	DBB		
		1				ETC	DG0		
21		1				ETH	DBB		SEAL, Water Outlet
	4429 697	1				ETH	DBB		
		1				ETC	DBB		
		1				ETC	DG0		
22									BOLT, Hex Head, M12x1.75x25
	4429 495	3				ETH	DBB		
		3				ETC	DBB		
		3				ETC	DG0		
-23	52028 466AB-	1				ET0			DRAINCOCK, Radiator

DODGE RAM QUAD CAB/CLUB CAB (BE)

L = Ram Truck (All)

LINE

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

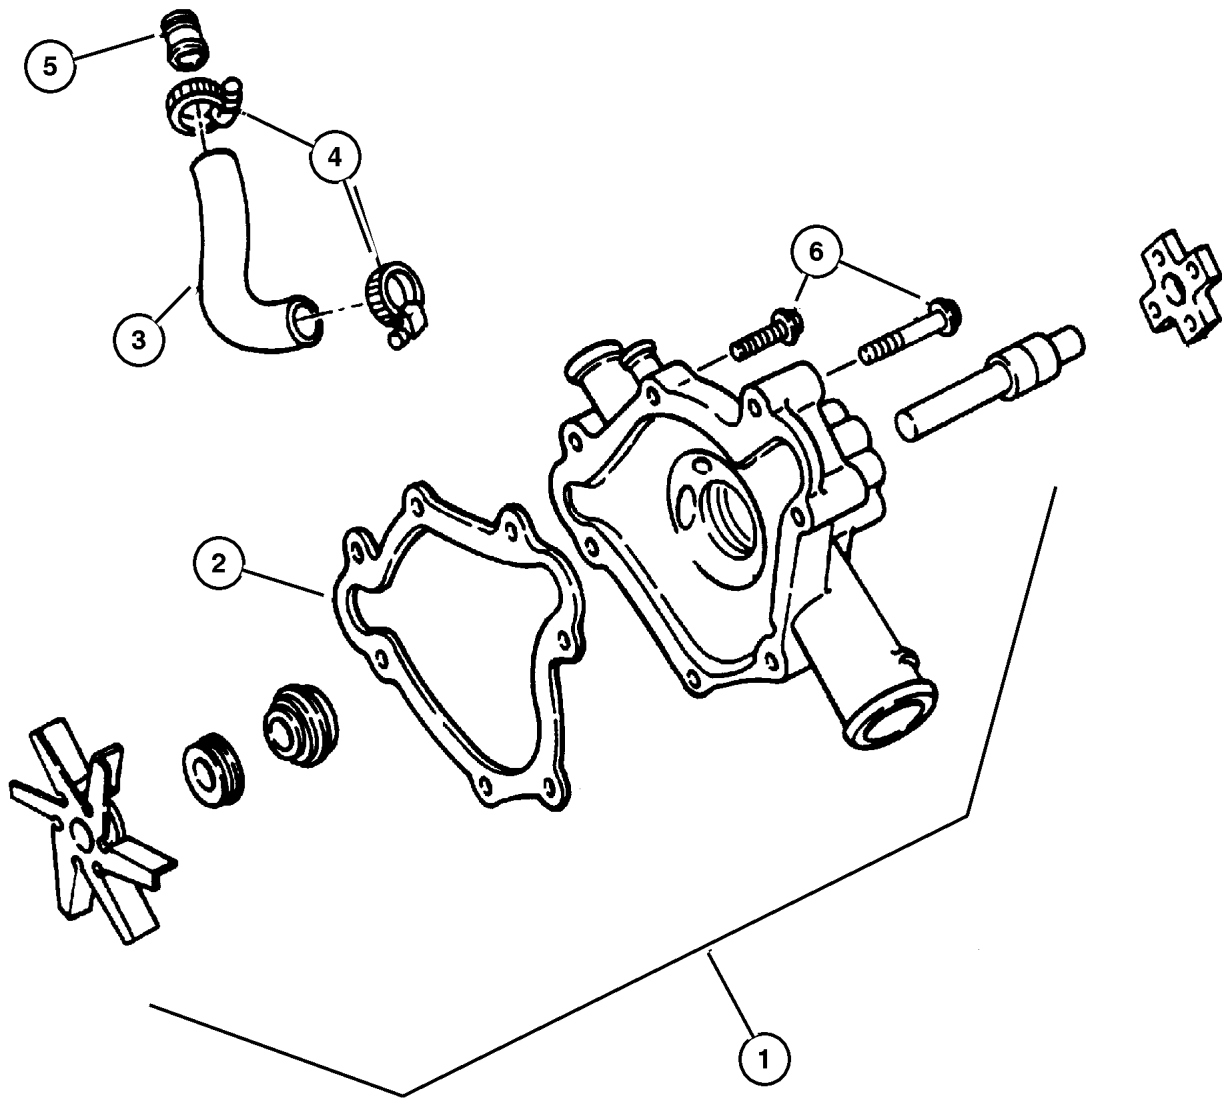
TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DGO = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Water Pump 5.2 And 5.9 Engine
Figure 007-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:
ELO = All 5.2L 8 Cyl Gas Engines
EM0 = All 5.9L 8 Cyl Gas Engines


1	53021 018AB	1				ELO			PUMP, Water, with Pulley
2	4483 757	1				EM0			GASKET, Water Pump
3	5300 8654	1				ELO,			HOSE, Water Pump Bypass
4	4401 436	2				EM0			CLAMP, Radiator
5	5302 0185	1				ELO,			NIPPLE, By-Pass
6	6034 279	2				EM0			SCREW AND WASHER, Hex Head Lock, .375-16x1.75

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, ELO = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

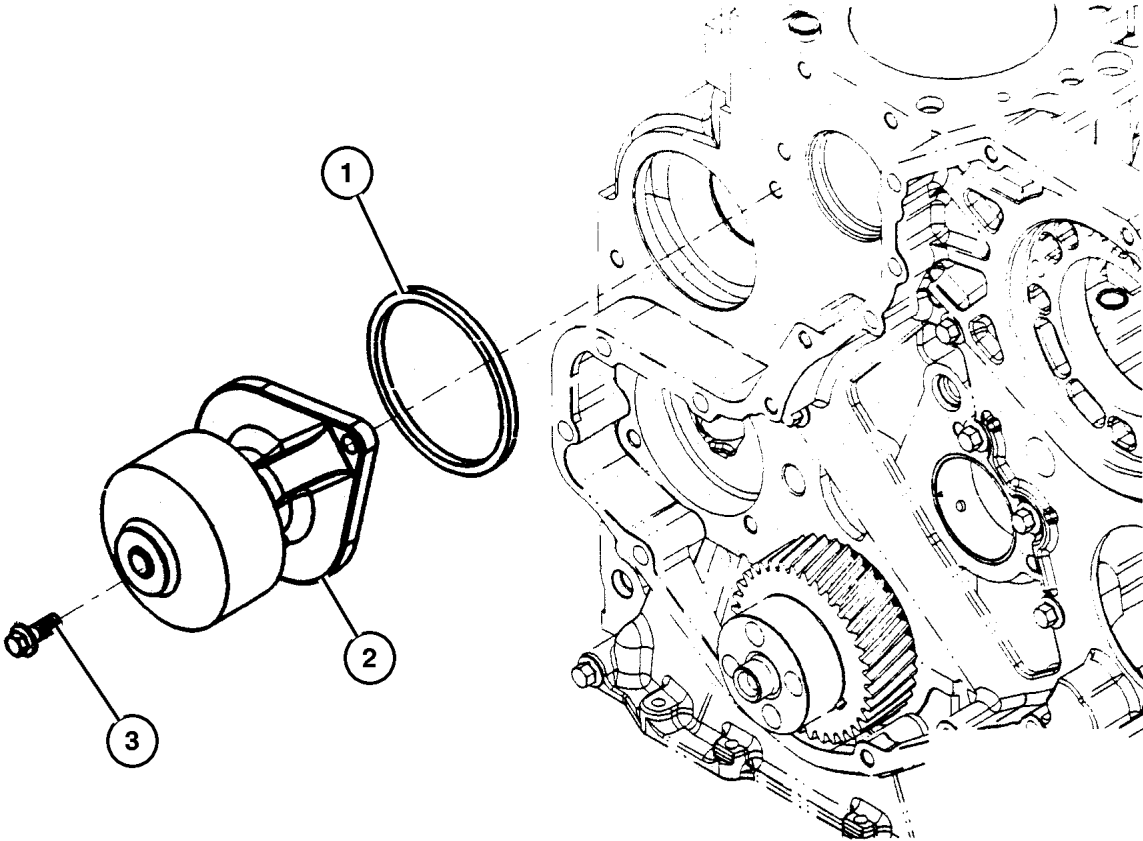Water Pump Diesel Engine
Figure 007-225



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:
DBB = All Manual Transmissions
ETC = 5.9L Cummins 24V Diesel Engine
ETH = 5.9L HO Cummins Turbo Diesel
ET0 = All 5.9L Turbo Diesel Engines


1	4429 698	1				ETC			SEAL, Water Pump To Front Cover
		1				ETH	DBB		
2	5010 964AA	1				ETC			PUMP, Water
		1				ETH	DBB		
3	5003 666AA	2				ETC			SCREW, Cap
		2				ETH	DBB		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

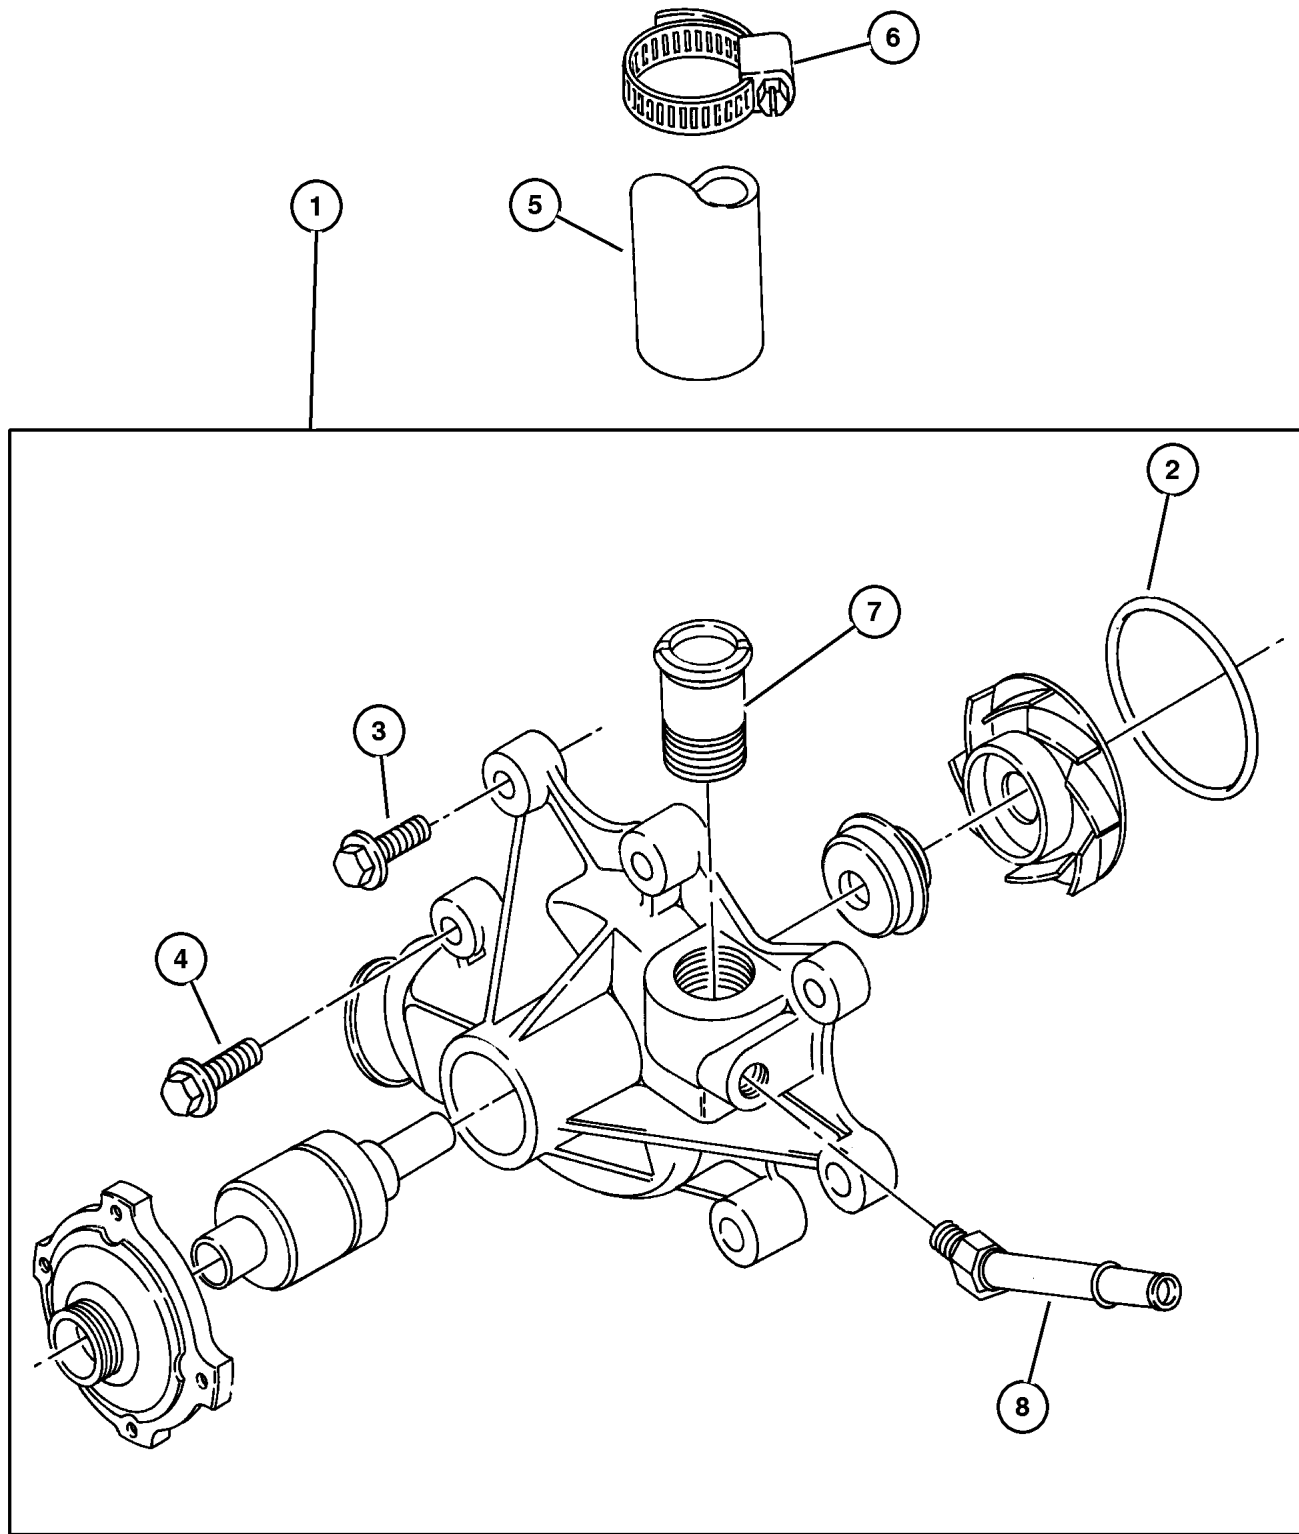Water Pump 8.0 Engine Figure 007-230



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
EW0 = All 8.0L Gas Engines									
1	53021 074AC	1				EW0			PUMP, Water
2	5302 1072	1				EW0			O RING, Water Pump
3	6034 279	2				EW0			SCREW AND WASHER, Hex Head
									Lock, .375-16x1.75
4	6034 076	4				EW0			SCREW AND WASHER, Hex Head
									Lock, .375-16x4.45
5	5300 5879	1				EW0			HOSE, Water Pump Bypass
6	4401 438	2				EW0			CLAMP, Radiator
7	5300 6046	1				EW0			NIPPLE, By-Pass
8	5304 1101	1				EW0			ELBOW, .375-18 Straight

SERIES L = Ram Truck (All)
LINE 1, 6 = 1500

SERIES
L = Ram Truck (All)

1, 6 = 1500

$$31 = C$$

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ELF, ELO

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

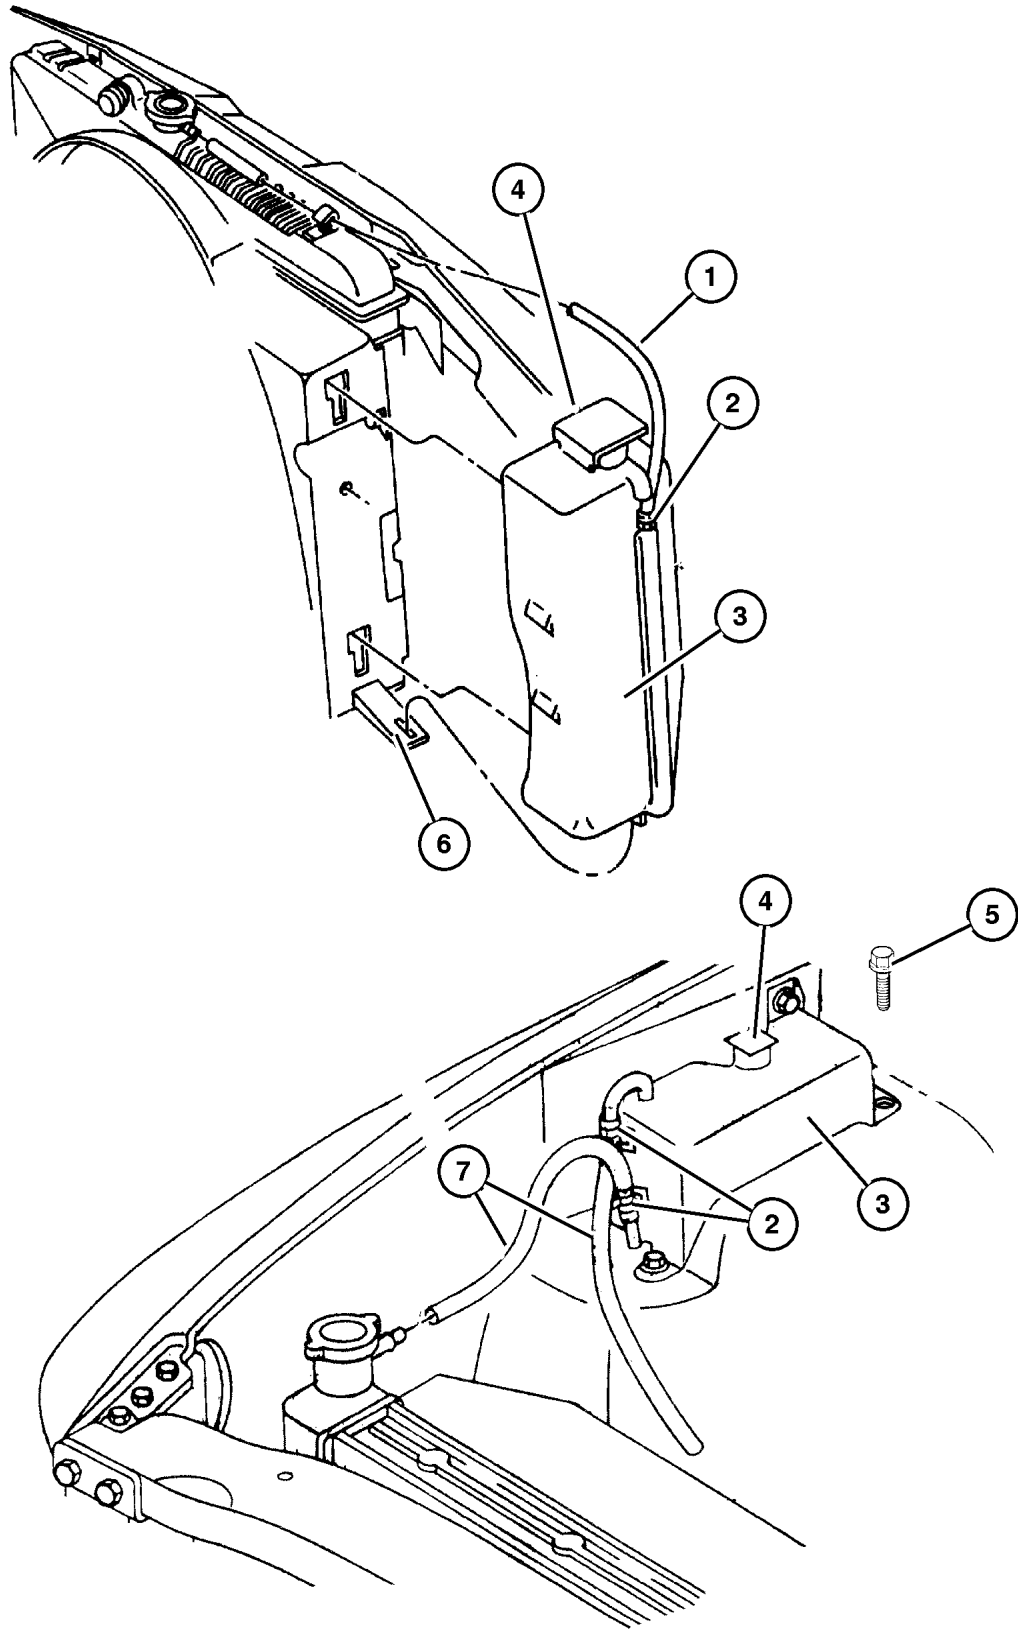
DGP = 47RE 4 Spe

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Coolant Tank
Figure 007-320



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Sales Code ELF,EL0 = 5.2L Gas Engine
Sales Code EML,EMM,EM0 = 5.9L Gas Engine
Sales Code EWA,EW0 = 8.0L Gas Engine
Sales Code ETC,ET0 = 5.9L Diesel Engine


1									HOSE, Coolant Reserve Tank
	4026 148	1				EW0			
	5202 8147	1				EL0, EM0, ET0			
2									CLAMP, Hose
	2448 761	1				EW0			
		1				EL0, EM0, ET0			
3									TANK, Coolant Reserve
	5202 7778	1				EL0, EM0, ET0			
	5202 8624	1				EW0			
4									CAP, Coolant Reserve Tank
	5202 8612	1				EW0			
		1				EL0, EM0, ET0			
5									SCREW, (NOT SERVICED) (Not Serviced)
6									BRACKET, Serviced in Radiator Shroud, (NOT SERVICED) (Not Serviced)
7									HOSE, Coolant Reserve Tank
	4026 148	1				EW0			Rolled Stock
	5202 8147	1				EL0, EM0, ET0			Rolled Stock

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

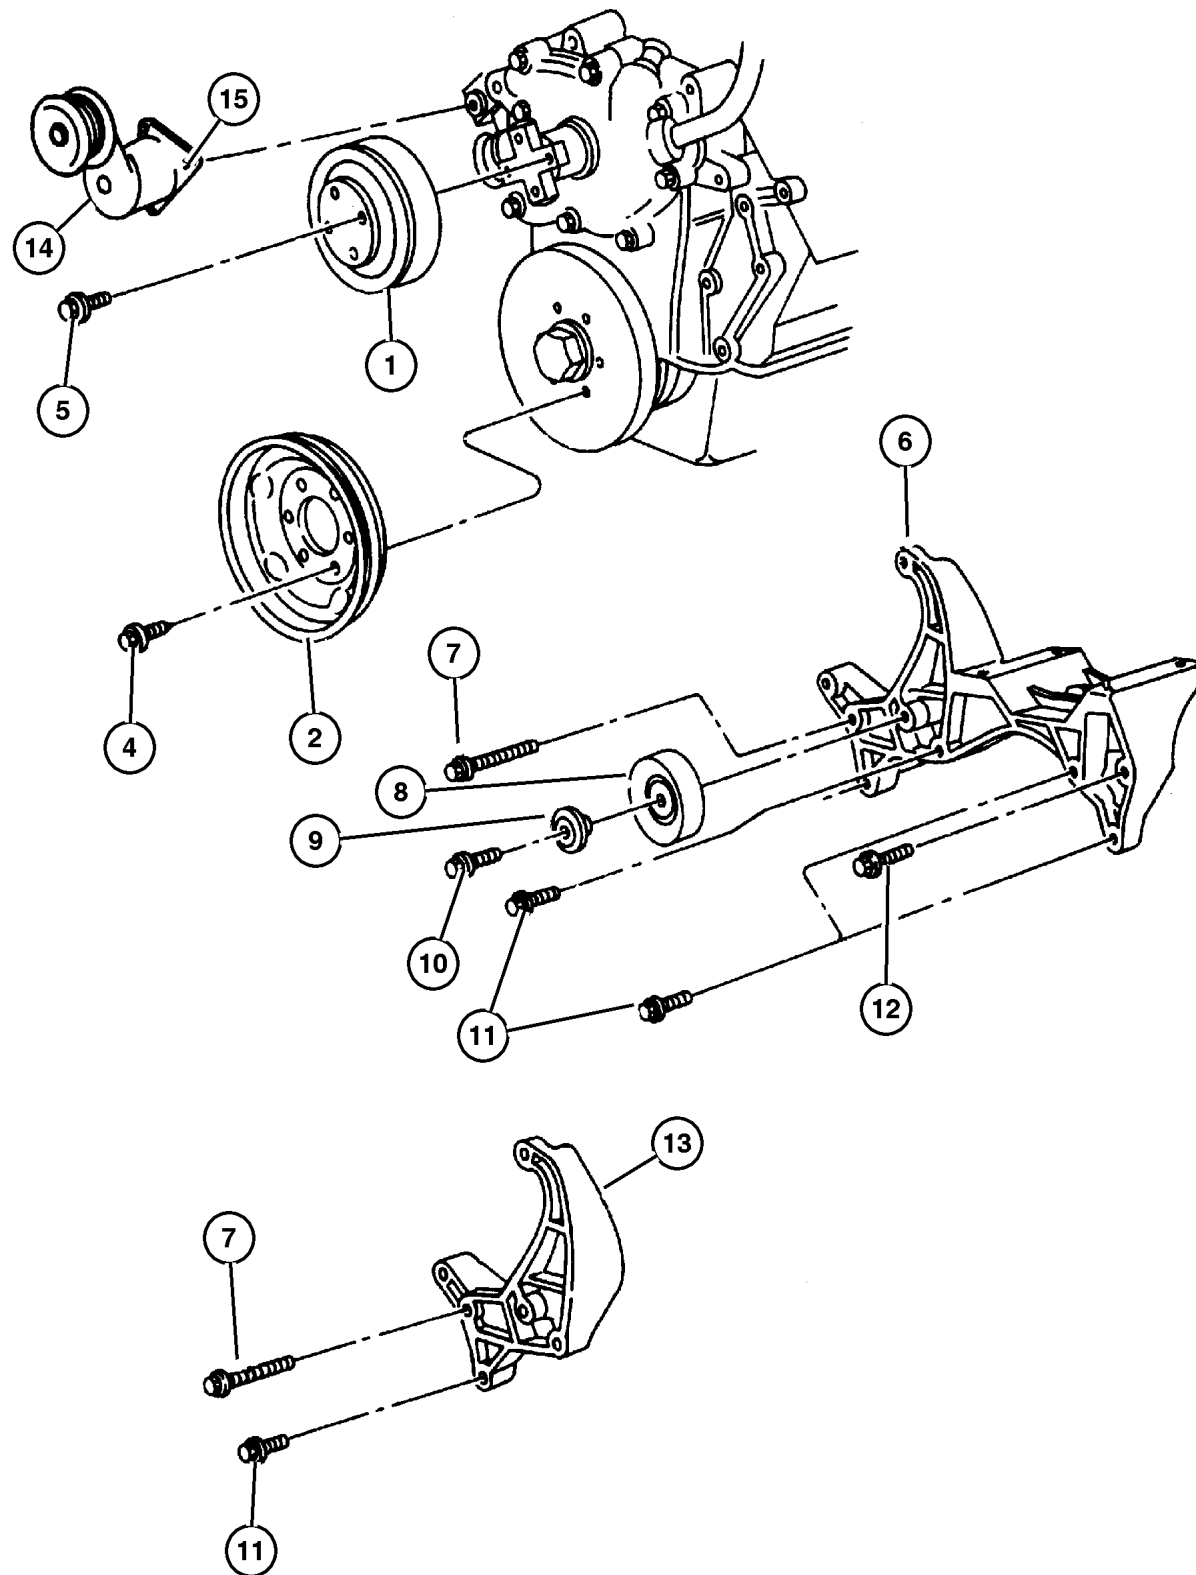Drive Pulleys 5.2, 5.9 LD And 8.0 Engine Figure 007-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: DDP = 5 Speed Manual Transmission DDX = 5 Speed Heavy Duty Manual Transmission EL0 = All 5.2L 8 Cyl Gas Engines EML = Magnum 5.9L SMPI V8 Engine EMM = Magnum 5.9L SMPI V8 Engine EM0 = All 5.9L 8 Cyl Gas Engines ET0 = All 5.9L Turbo Diesel Engines EW0 = All 8.0L Gas Engines									
1									PULLEY, Water Pump, Serviced with Pump, (NOT SERVICED) (Not Serviced)
2	5301 0222	1				EL0,			PULLEY, Crankshaft
-3	53021 284AA-	1				EM0			DAMPER, Crankshaft
4						EM0			SCREW, (NOT SERVICED) (Not Serviced)
5	0181 088	10	1, 2, 3			EL0,	DDP		BOLT, Hex Head, .312-18x1.00
		10	6, 7, 8			EM0,	DDP		
		10	1, 2, 3			EL0,	DDX		
6	5300 8614	1				EM0			BRACKET, Alternator And Compressor
7	6034 247	1				EL0,			BOLT, Hex Head, .375-16x.25
		1				EM0			
8	5300 9508	1				EW0			PULLEY, Idler
		1				EL0,			
9	3300 2201	1				EM0			BUSHING, Idler Pulley
		1				EW0			
10						EL0,			BOLT, (NOT SERVICED) (Not Serviced)
						EM0			


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM, EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

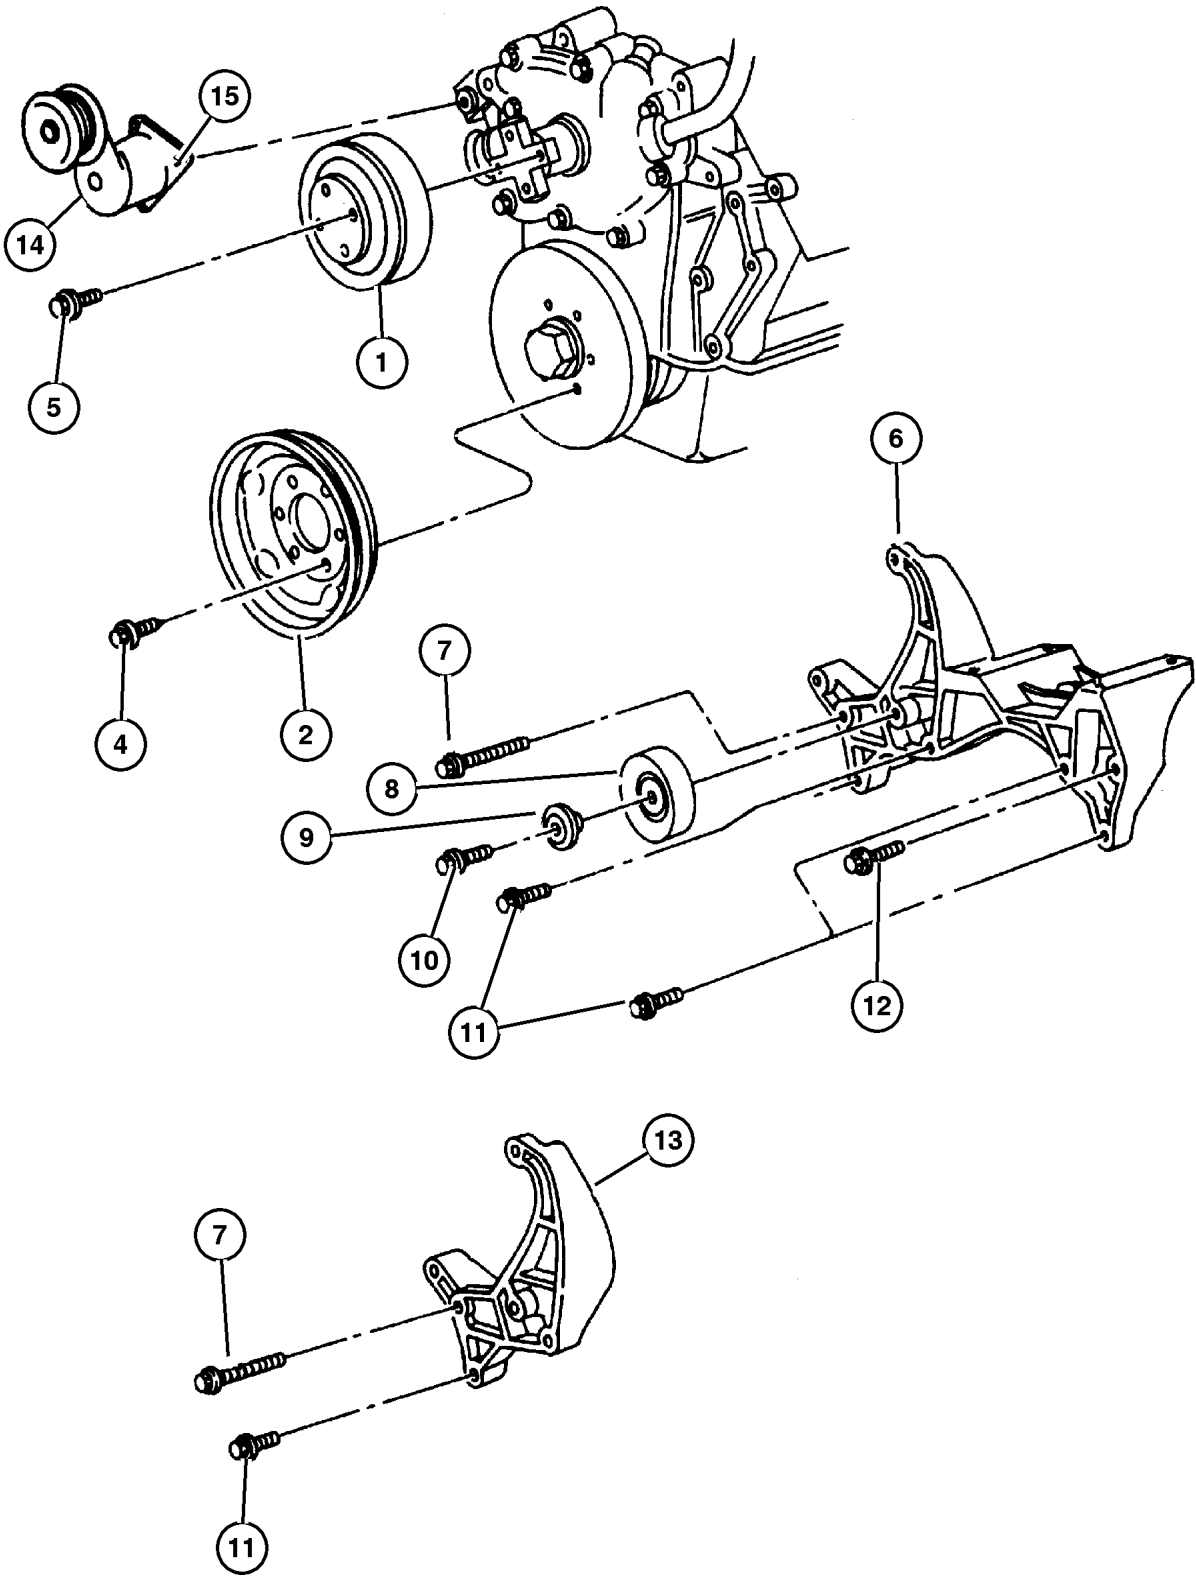Drive Pulleys 5.2, 5.9 LD And 8.0 Engine
 Figure 007-410




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
11									BOLT, (NOT SERVICED) (Not Serviced)
12	6034 246	1				EL0, EM0			BOLT, Hex Head, .375-16x.75
13	5300 8618	1				EL0, EM0			BRACKET, Alternator
14									TENSIONER, Belt
	5301 0158	1				EL0, EML EMM			
	5301 0240	1				EW0			[NAA]
	5301 0255	1				EW0			[NAE]
15									SCREW, Torx Socket Head Cap, .375-16x2.75
	6035 198	1				EMM			
		1				EW0			

DODGE RAM QUAD CAB/CLUB CAB (BE)									
SERIES	LINE	BODY	ENGINE	TRANSMISSION					
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.					
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.					
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual					
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual					
			EAA = All Engines	DEE = 6 Speed HD Manual					
			EAG = All Gas Engines						

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

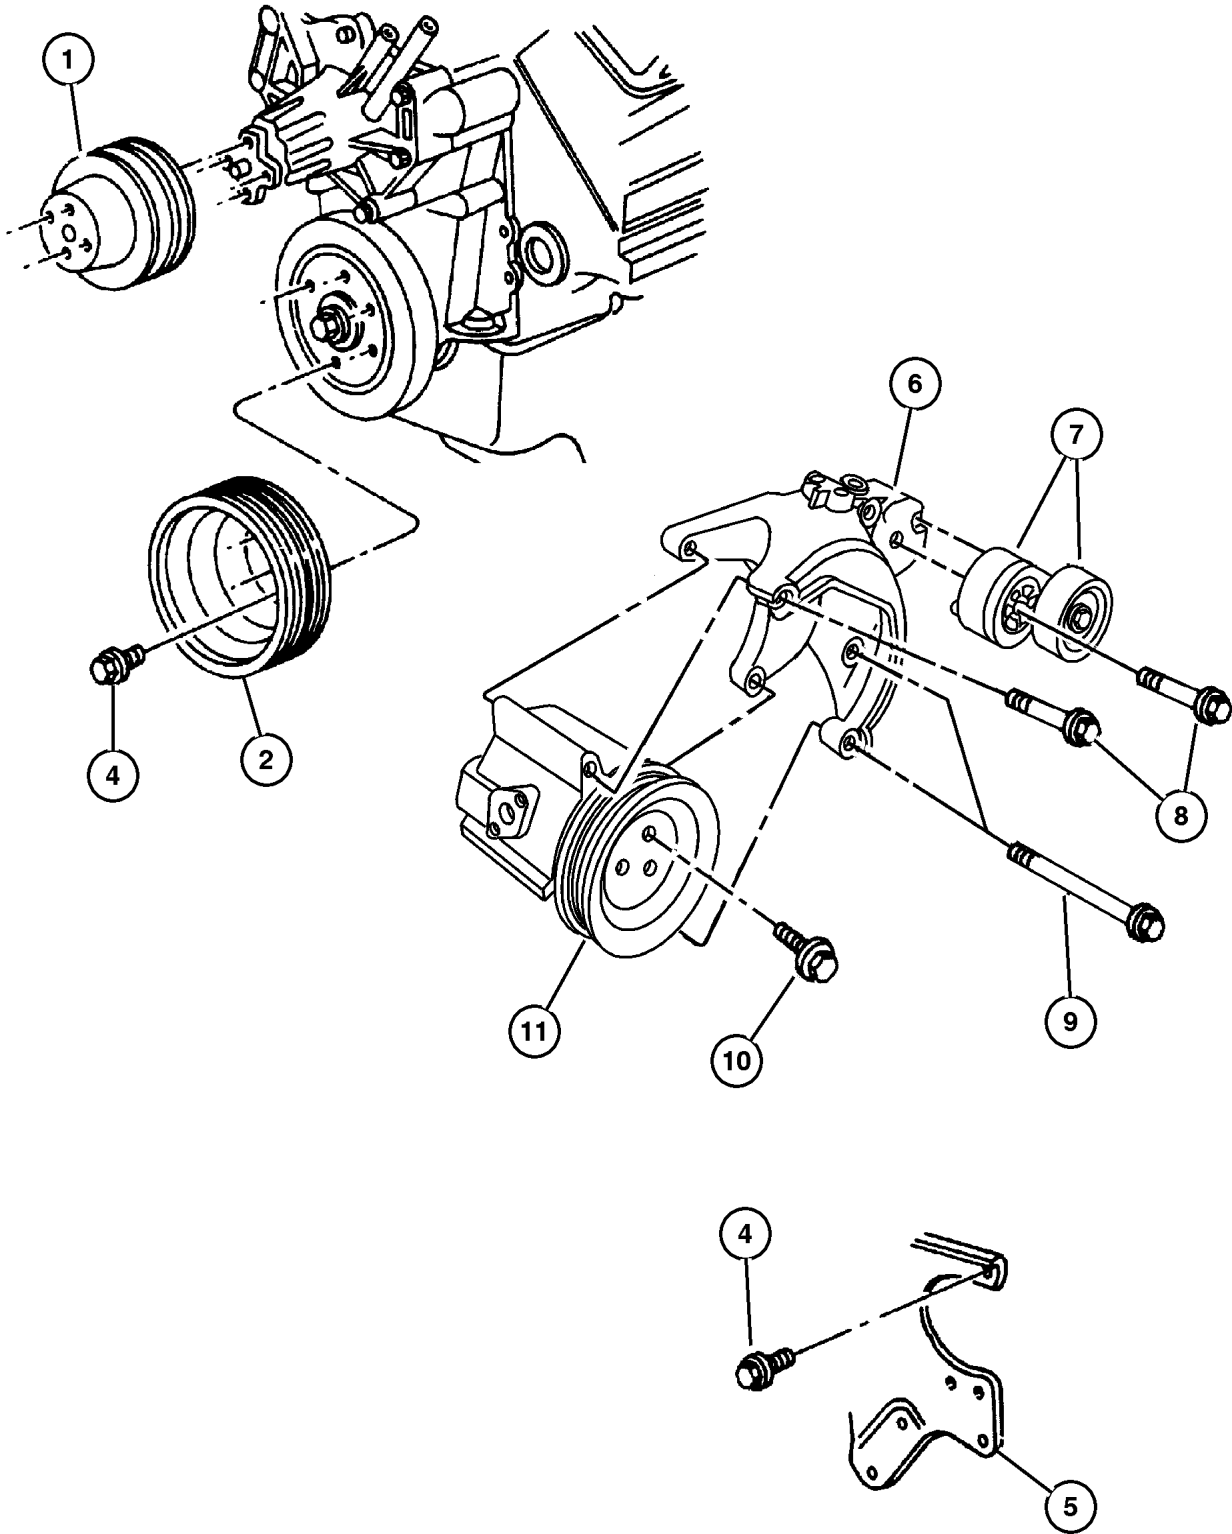Drive Pulleys 5.9 Hd Engine
Figure 007-420



W/O A/C

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

EL0 = All 5.2L 8 Cyl Gas Engines

EM0 = All 5.9L 8 Cyl Gas Engines

EML,EMM,EM0 = 5.9L Gas Engine

1									PULLEY, Water Pump, (NOT SERVICED) (Not Serviced)
2	5301 0222	1				EL0, EM0			PULLEY, Crankshaft
-3	53021 284AA-	1				EM0			DAMPER, Crankshaft
4	0181 112	1					DG0		SCREW AND WASHER, .375-16x1.00
5	5300 8614	1				EL0, EM0			BRACKET, Alternator And Compressor
6	5300 8344	1				EMM			BRACKET, Air Pump And Tensioner
7	5301 0240	1				EMM			TENSIONER, Belt
8	6034 246	3				EMM			BOLT, Hex Head, .375-16x.75
9									SCREW, (NOT SERVICED) (Not Serviced)
10	6501 714	3				EMM			SCREW AND WASHER, Hex Head, M6x1x18
11	5300 8638	1				EMM			PULLEY, Air Pump

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Drive Pulleys Diesel Engine
Figure 007-440

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:
DBB = All Manual Transmissions
ETC = 5.9L Cummins 24V Diesel Engine
ETH = 5.9L HO Cummins Turbo Diesel
ET0 = All 5.9L Turbo Diesel Engines


1	4429 445	1				ETC			BOLT, Hex Head, M8
		1				ETH	DBB		
2	4429 114	3				ETC			SCREW, Hex Flange Head
		3				ETH	DBB		
3	4429 639	1				ETC			BEARING, Idler Pulley
		1				ETH	DBB		
4	4429 660	1				ETC			SUPPORT, Fan
		1				ETH	DBB		
5	4429 661	1				ETC			HUB, Fan
		1				ETH	DBB		
6	4882 043	1				ETC			RETAINER, Fan Hub
		1				ETH	DBB		
7	4429 668	6				ETC			SCREW, Cap
		6				ETH	DBB		
8	4429 946	1				ETC			PULLEY, Fan
		1				ETH	DBB		
9	4429 779	1				ETC			BOLT, Hex Head
		1				ETH	DBB		
10	4429 254	1				ETC			TENSIONER, Belt
	5017 789AA	1				ETH	DBB		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

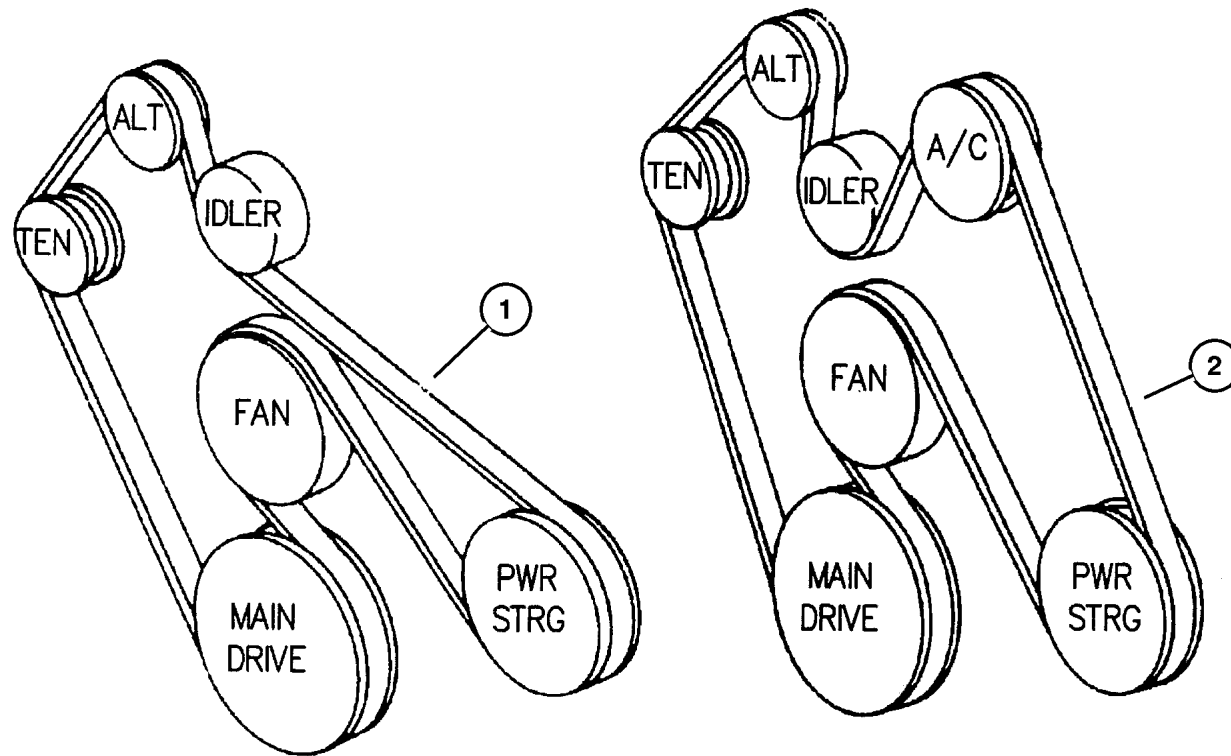Drive Belts 5.2L And 5.9Ld Engine Figure 007-520



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

EML = Magnum 5.9L SMPI V8 Engine

EL0 = All 5.2L 8 Cyl Gas Engines

1	5301 0304	1	EL0, EML	BELT, Accessory Drive, Without Air Conditioning
2	5301 0303	1	EL0, EML	BELT, Accessory Drive, With Air Conditioning
-3	5300 8745	1	EL0, EML	LABEL, Belt Routing



DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

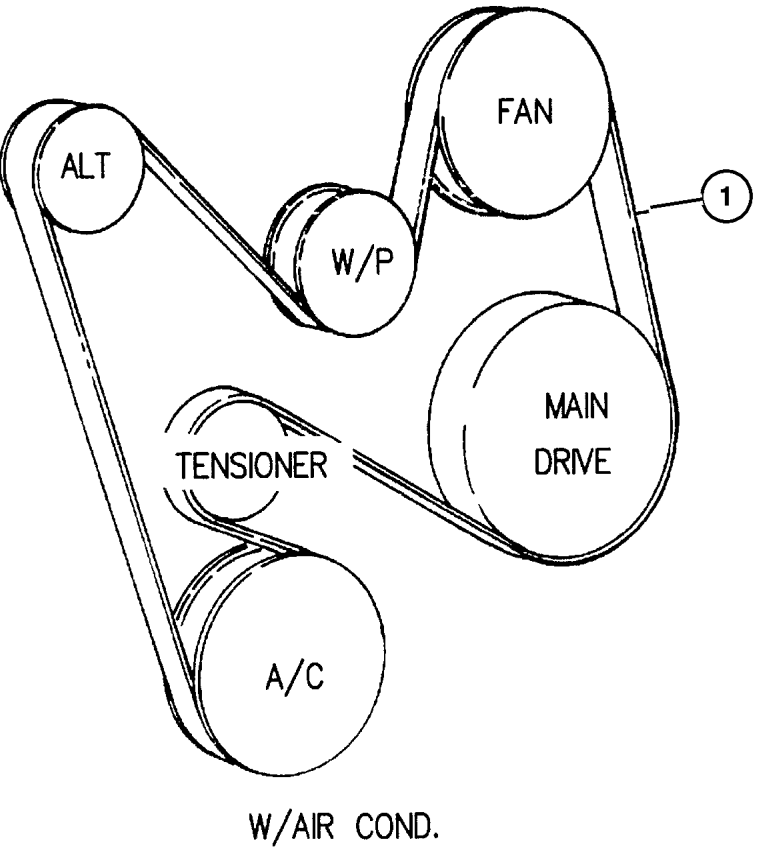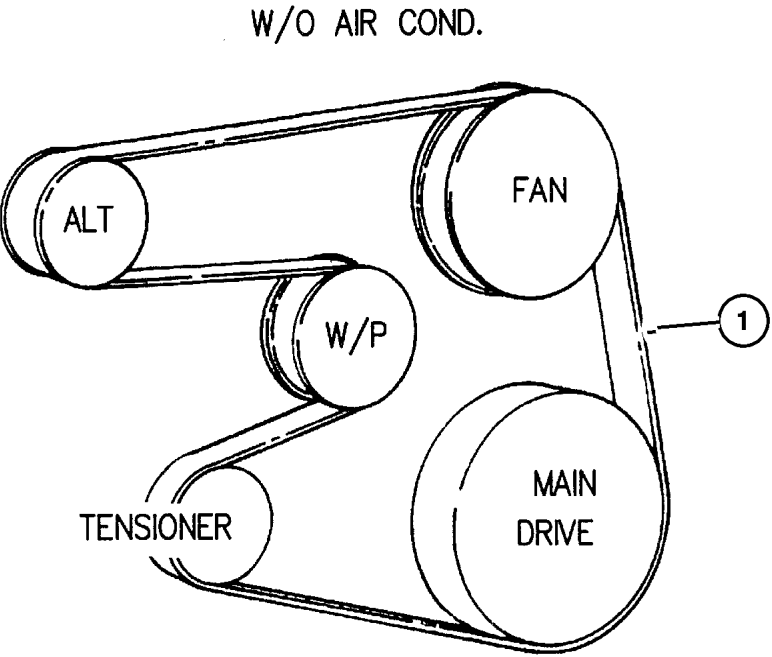Drive Belts Diesel Engine
Figure 007-530



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note: Sales Code EH0 = 3.9L Gas Engine
Note: Sales Code EL0 = 5.2L Gas Engine
Note: Sales Code EM0 = 5.9L Gas Engine
Note: Sales Code EW0 = 8.0L Gas Engine
Note: Sales Code ET0 = 5.9L Diesel Engine



1									BELT, Accessory Drive
	5304 0171	1				ET0			with Air
	5304 0172	1				ET0			without Air
-2	5301 0177	1				ET0			LABEL, Belt Routing
-3	5304 0076	2				ET0			LABEL, Battery Jump Start

DODGE RAM QUAD CAB/CLUB CAB (BE)									
SERIES	LINE	BODY	ENGINE	TRANSMISSION					
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.					
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.					
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual					
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual					
			EAA = All Engines	DEE = 6 Speed HD Manual					
			EAG = All Gas Engines						

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

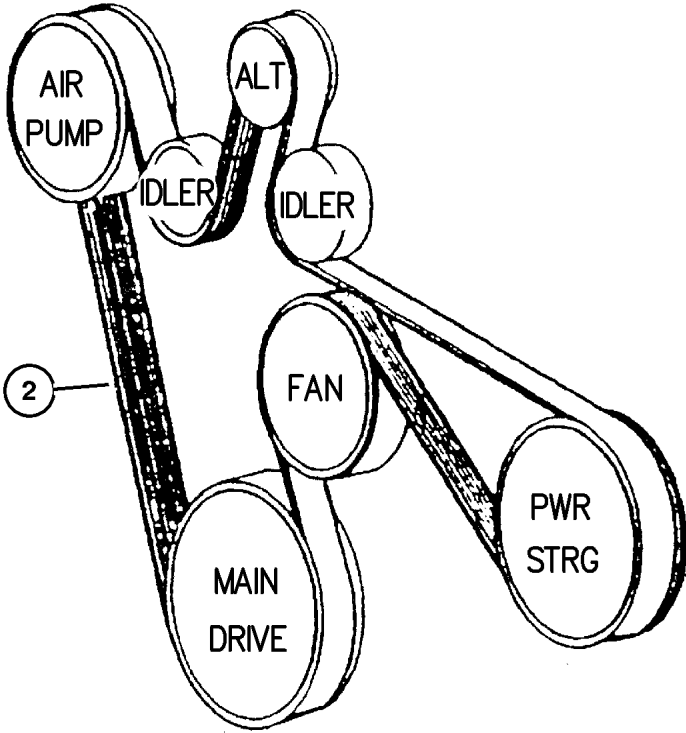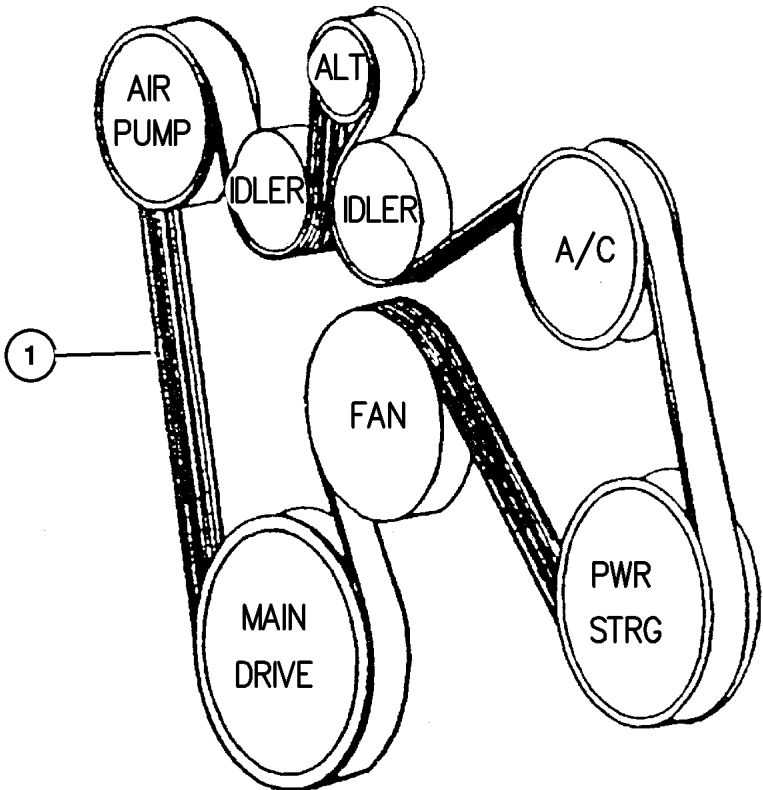Drive Belts 5.9 Hd Engine
Figure 007-540





ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note: Sales Code									
EMM = Magnum 5.9L SMPI V8 Engine									
EM0 = 5.9L Gas Engine									
1	5304 1115	1				EMM			BELT, Accessory Drive, w/Air Conditioning
2	5301 0308	1				EMM			BELT, Accessory Drive, w/o Air Conditioning
-3	5300 8747	1				EMM			LABEL, Belt Routing

DODGE RAM QUAD CAB/CLUB CAB (BE)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.	
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.	
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual	
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual	
			EAA = All Engines	DEE = 6 Speed HD Manual	
			EAG = All Gas Engines		

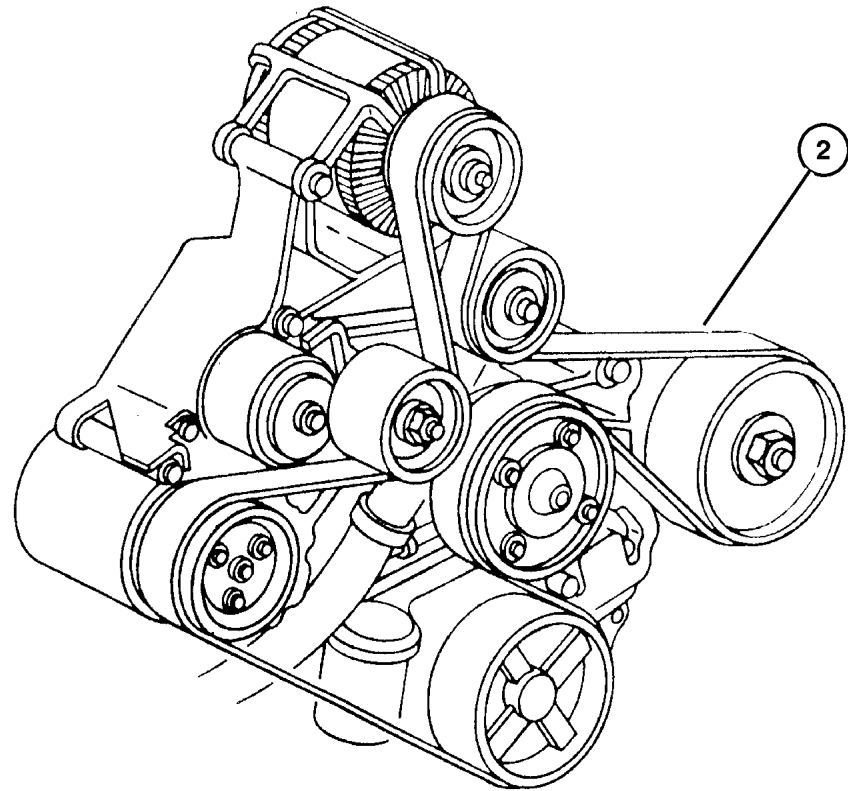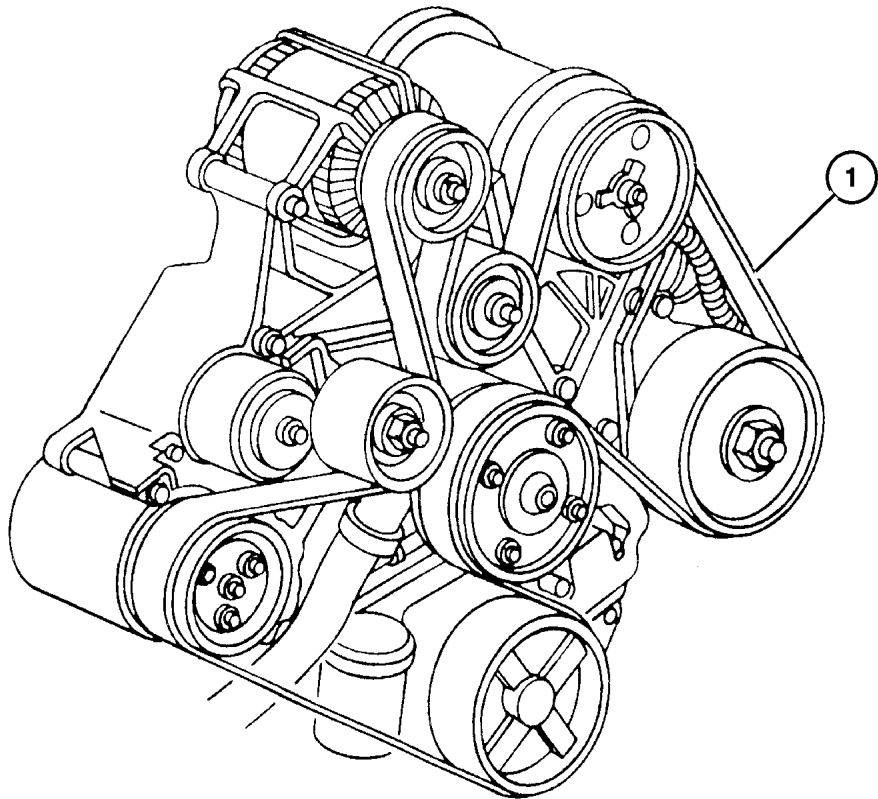Drive Belts 8.0 Engine
Figure 007-550



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note: Sales Code EW0 = 8.0L Gas Engine


1	5304 1115	1				EW0			BELT, Accessory Drive, with Air Conditioning
2	5304 1116	1				EW0			BELT, Accessory Drive Federal, Hi Altitude, Without Air
	5304 1118	1				EW0			California Without Air
-3	5300 8747	1				EW0			LABEL, Belt Routing

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

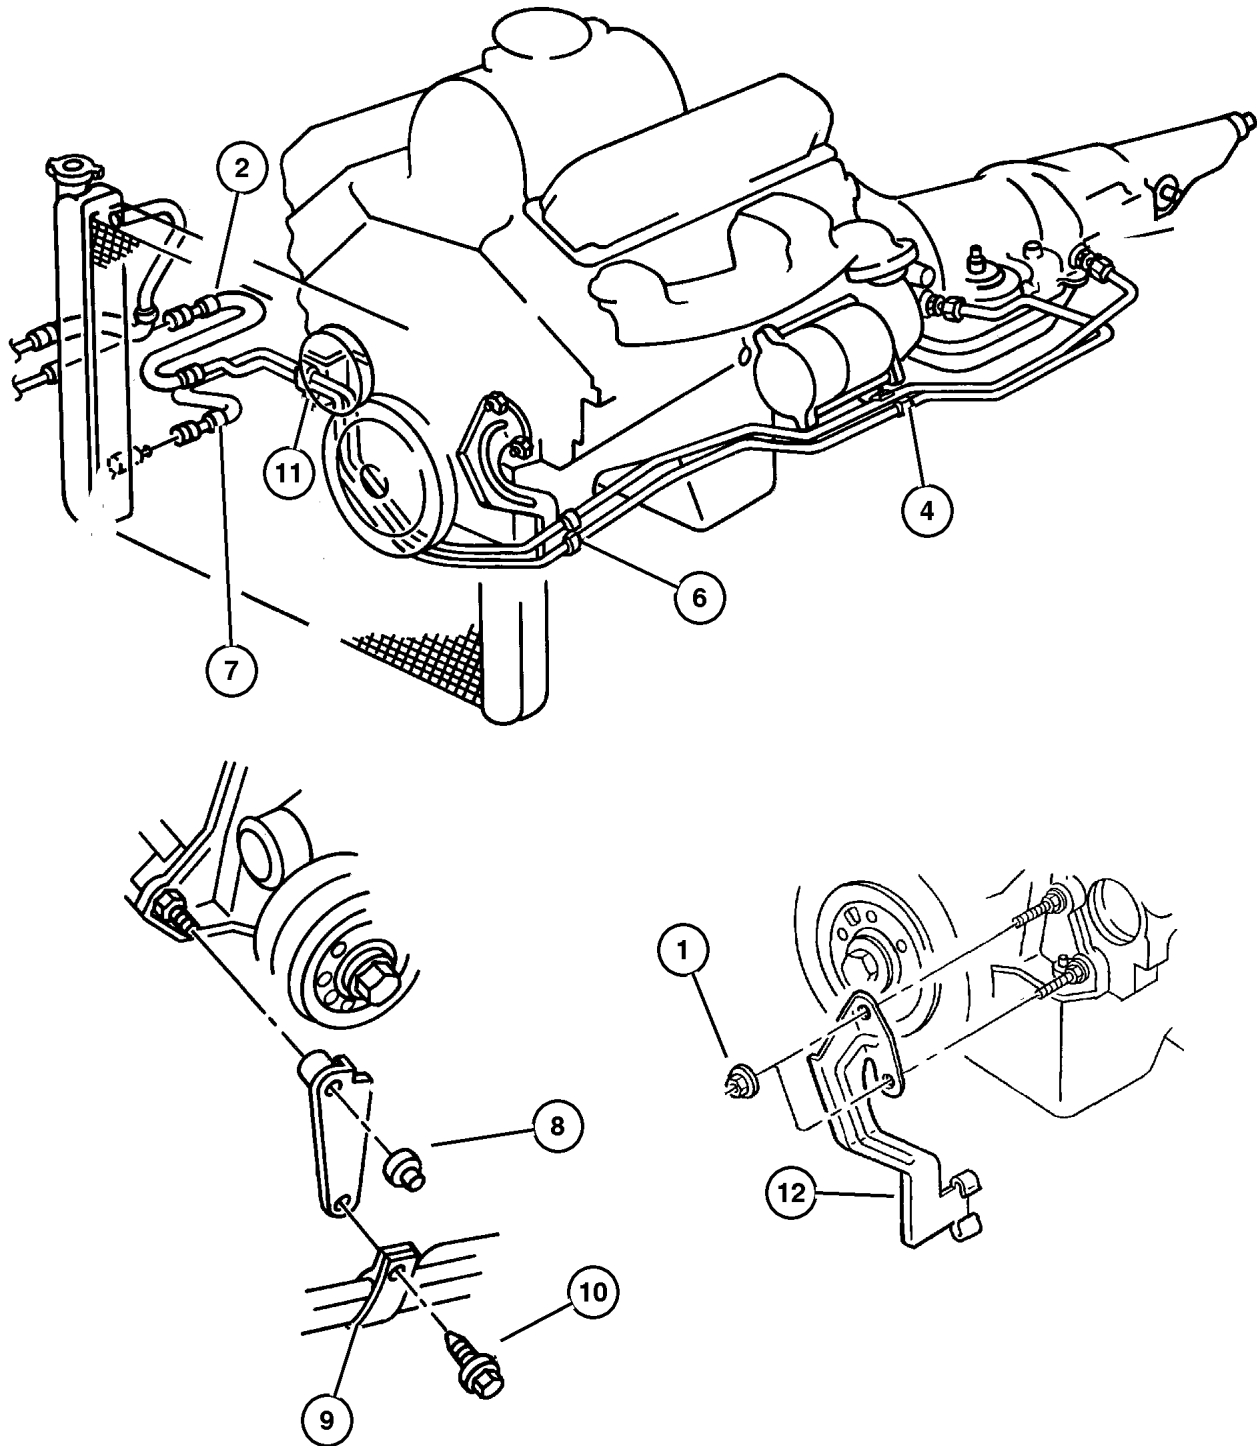Oil Cooler And Lines Except Diesel Engine
Figure 007-615



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

DGP = 4 Speed Automatic Transmission 47RE

DGT = 4 Speed Automatic Transmission 46RE

DG0 = All Automatic Transmissions

EL0 = All 5.2L 8 Cyl Gas Engines

EM0 = All 5.9L 8 Cyl Gas Engines

EW0 = All 8.0L Gas Engines

1	J400 6001	2				EL0, EM0	DG0		NUT, Hex Flange, .375-16
2	52028 672AD	1				EW0	DGP		TUBE AND HOSE, Oil Cooler Return
	52028 671AD	1				EW0	DGP		Pressure
	52029 303AC	1				EL0, EM0	DGT		Pressure [NAE]
	52028 670AG	1				EL0, EML	DGT		Pressure [NAA,NAB]
	52028 839AA	1				EL0, EM0	DGT		Return
	4883 317AB	1				EL0, EM0	DG0		Pressure with Aux. Cooler
-3	52027 525AB-	1				EL0, EM0	DG0		COOLER, Transmission Oil [NHB+AWL]
	52028 901AB-	1				EL0, EM0	DG0		[NHB-AWL]
		1				EL0, EM0	DG0		[DMD]
	52028 804AB-	1				EL0, EM0	DG0		[DMH+DMF]
	4863 834AB-	1				EW0	DG0		BRACKET, Cooler Line
4	5211 8483	1				EL0, EM0	DGT		
	5211 8484	2				EW0	DGP		
-5	0180 077	1							BOLT, Hex Head, 5/16x18x3/4
6	5300 6015	1					DGT		BRACKET, Oil Cooler Tube
7	52028 625AC	1				EL0, EM0	DGT		CONNECTOR, Oil Cooler Line, .375
8	J400 6001	1				EL0, EM0			NUT, Hex Flange, .375-16


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

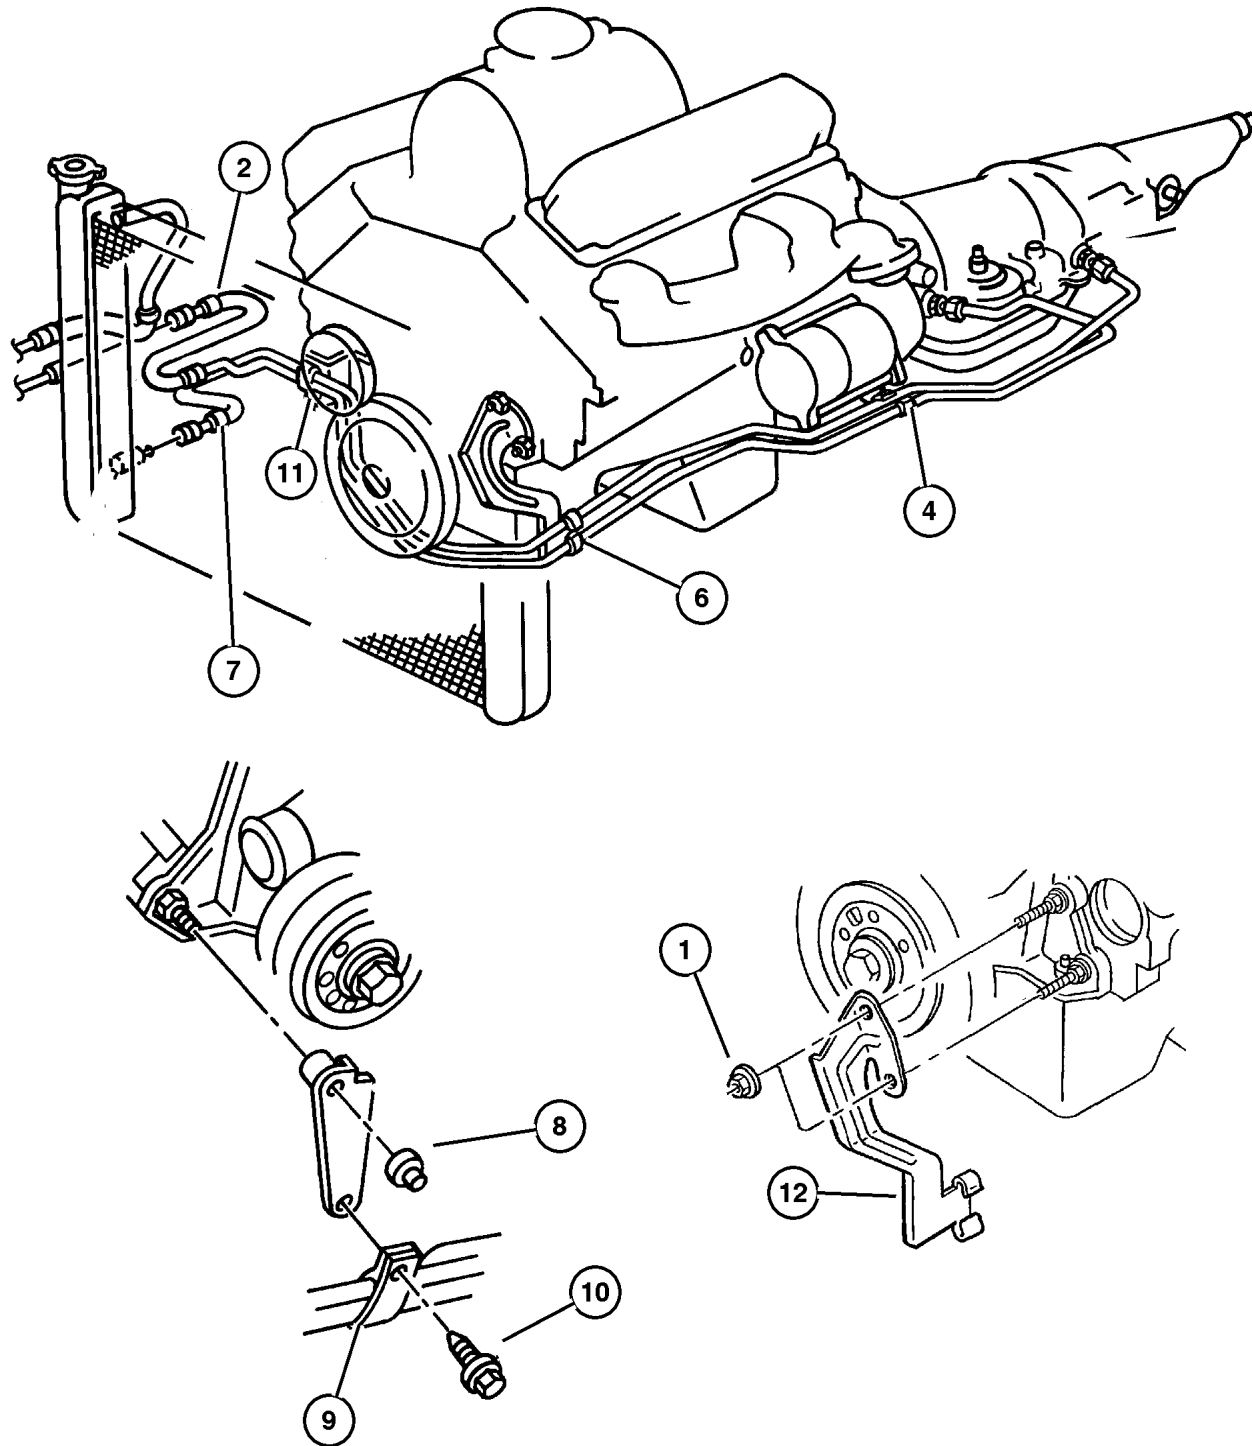Oil Cooler And Lines Except Diesel Engine Figure 007-615




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
9									CLIP, (NOT SERVICED) (Not Serviced)
10									SCREW, (NOT SERVICED) (Not Serviced)
11	52117 663AB	1					DGT		BRACKET, Oil Cooler Tube
12	5300 6015	1					DGT		BRACKET, Oil Cooler Tube
-13	4810 001AB-	1				EL0, EM0	DGT		VALVE, Oil Cooler Pressure

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

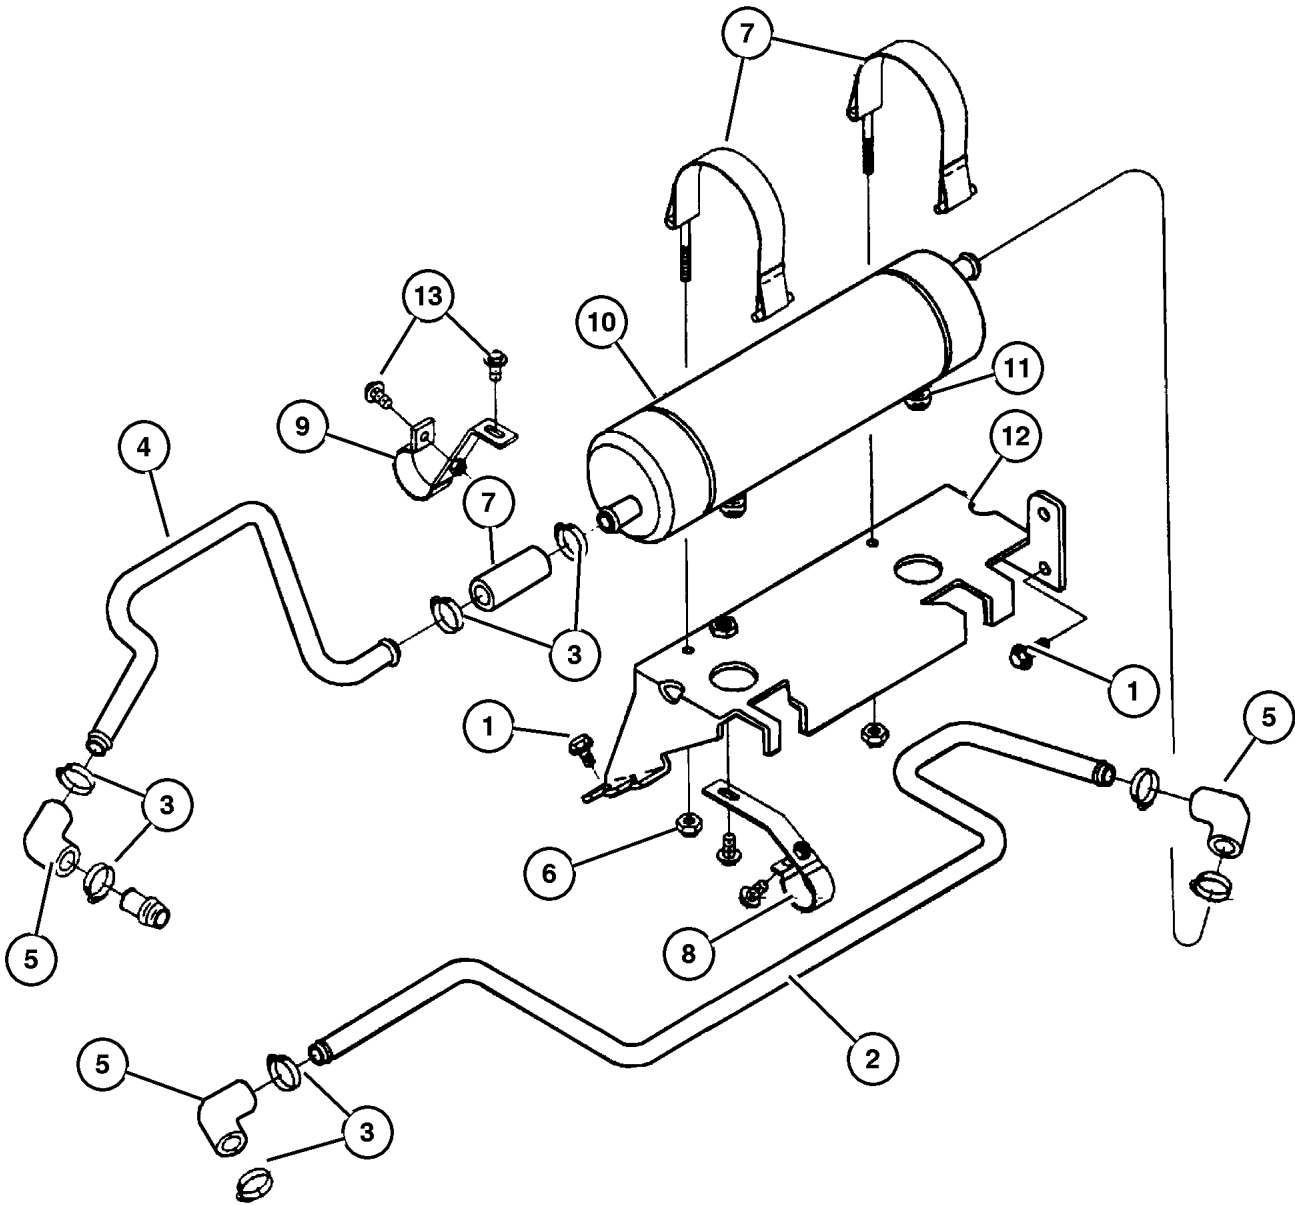Oil Cooler And Lines Diesel Engine
Figure 007-620



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:
DBB = All Manual Transmissions
DG0 = All Automatic Transmissions
EL0 = All 5.2L 8 Cyl Gas Engines
EM0 = All 5.9L 8 Cyl Gas Engines
ETC = 5.9L Cummins 24V Diesel Engine
ETH = 5.9L HO Cummins Turbo Diesel
ET0 = All 5.9L Turbo Diesel Engines


1									BOLT, Hex Head
	4429 630	2				ETC			
		2				ETH	DBB		
2	5011 918AA	1				ETC	DG0		TUBE, Oil Cooler
3	6504 180	2				ET0	DG0		CLAMP, Hose
4	5014 171AA	1				ETC	DG0		TUBE, Oil Cooler
5	4429 812	1				ETC	DG0		ELBOW, Oil Cooler Hose
6									NUT, Lock
	4882 114	1				ETC			
		1				ETH	DBB		
7	4883 885AA	1				ETC	DG0		COUPLING, Hose
8	5202 7991	2				EL0, EM0	DG0		BRACKET, Oil Cooler
9	4882 110	1				ETC			SCREW, Hex Head, M8x1.25x16
10	5014 861AA	1				ETC	DG0		COOLER, Torque Converter
11	52028 723AA	1				ETC	DG0		CONNECTOR, Oil Cooler
12	5202 7991	2				EL0, EM0	DG0		BRACKET, Oil Cooler
13	4882 110	1				ETC			SCREW, Hex Head, M8x1.25x16

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

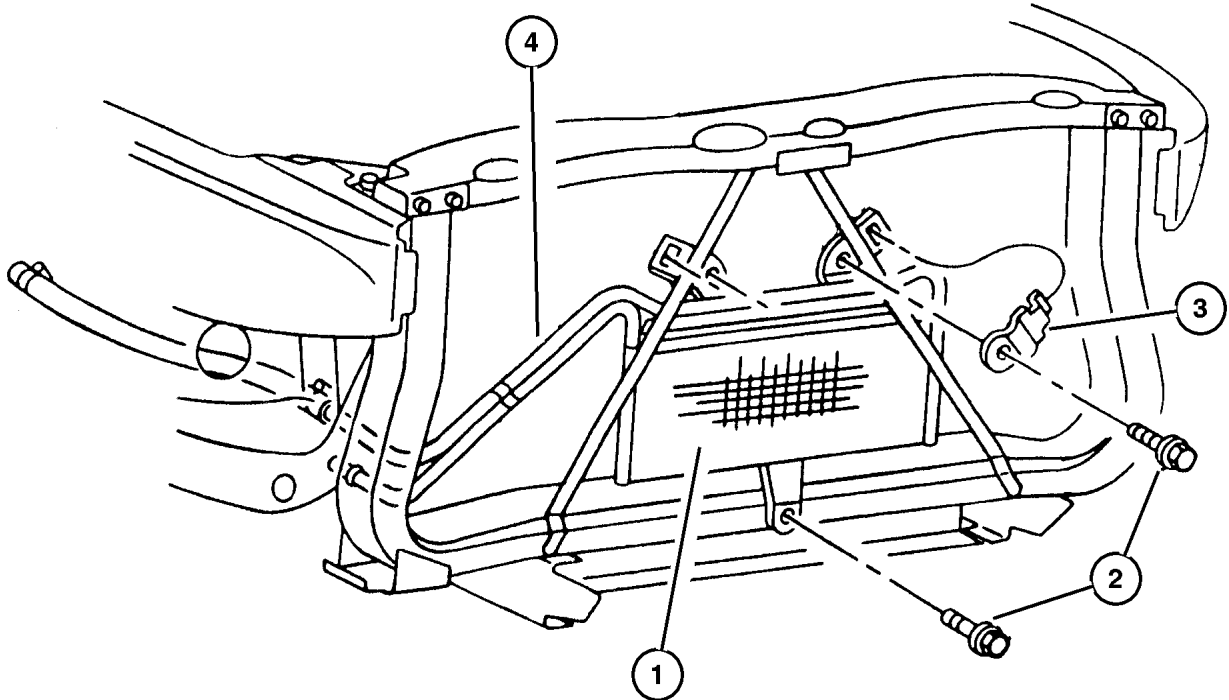Auxiliary Oil Cooler 5.2, 5.9 And 8.0 Engine
Figure 007-650



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

DGP = 4 Speed Automatic Transmission 47RE

DGT = 4 Speed Automatic Transmission 46RE

DG0 = All Automatic Transmissions

EL0 = All 5.2L 8 Cyl Gas Engines

EM0 = All 5.9L 8 Cyl Gas Engines

EW0 = All 8.0L Gas Engines

1									COOLER, Transmission Oil
	4863 834	1				EW0	DG0		
	52028 901AA	1				EL0, EM0	DG0		With [AWL]
	52028 901AB	1				EL0, EM0	DG0		Without [AWL]
2									SCREW, Tapping, M6x1x20
	6502 064	2				EW0 EL0, EM0	DG0		
3	5202 7991	2				EL0, EM0	DG0		BRACKET, Oil Cooler
4									TUBE AND HOSE, Oil Cooler [NHB] Pressure
	4883 317AB	1				EL0, EM0	DG0		
	52029 303AC	1				EL0, EM0	DGT		[NAE] Pressure
	52028 839AA	1				EL0, EM0	DGT		Return
	52028 671AD	1				EW0	DGP		Pressure
	52028 672AD	1				EW0	DGP		Return


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

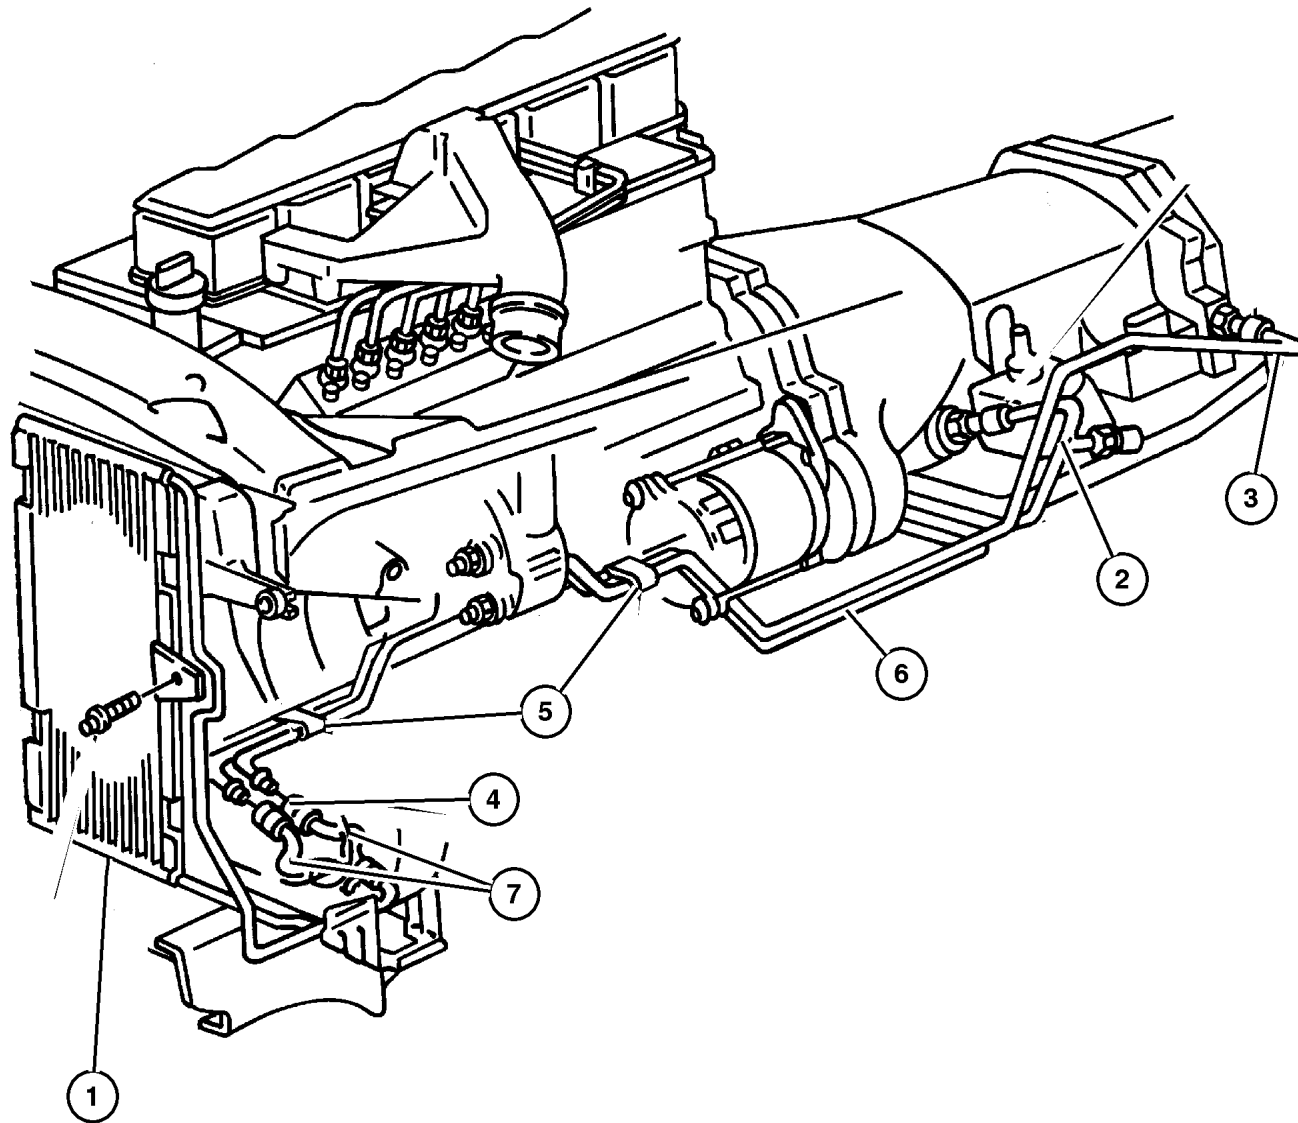Auxiliary Oil Cooler Diesel Engine Figure 007-660



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
DGP = 4 Speed Automatic Transmission 47RE									
DG0 = All Automatic Transmissions									
ET0 = All 5.9L Turbo Diesel Engines									
1	52028 574AB	1				ET0	DG0		COOLER, Transmission Oil
2	52028 732AC	1				ET0	DGP		TUBE, Oil Cooler
3	5202 8673	1				ET0	DGP		TUBE AND HOSE, Oil Cooler
4	52028 467AB	2				ET0	DG0		CONNECTOR, Oil Cooler Tube, .50 Toc
5	52028 680AB	2				ET0	DG0		CLIP
6	5202 8633	1				ET0	DGP		TUBE, Oil Cooler
7									HOSE AND CONNECTOR, Oil Cooler
	4798 875AB	1				ET0	DG0		Return
	4798 876AB	1				ET0	DG0		Pressure

DODGE RAM QUAD CAB/CLUB CAB (BE)

L = Ram Truck (All)

LINE

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

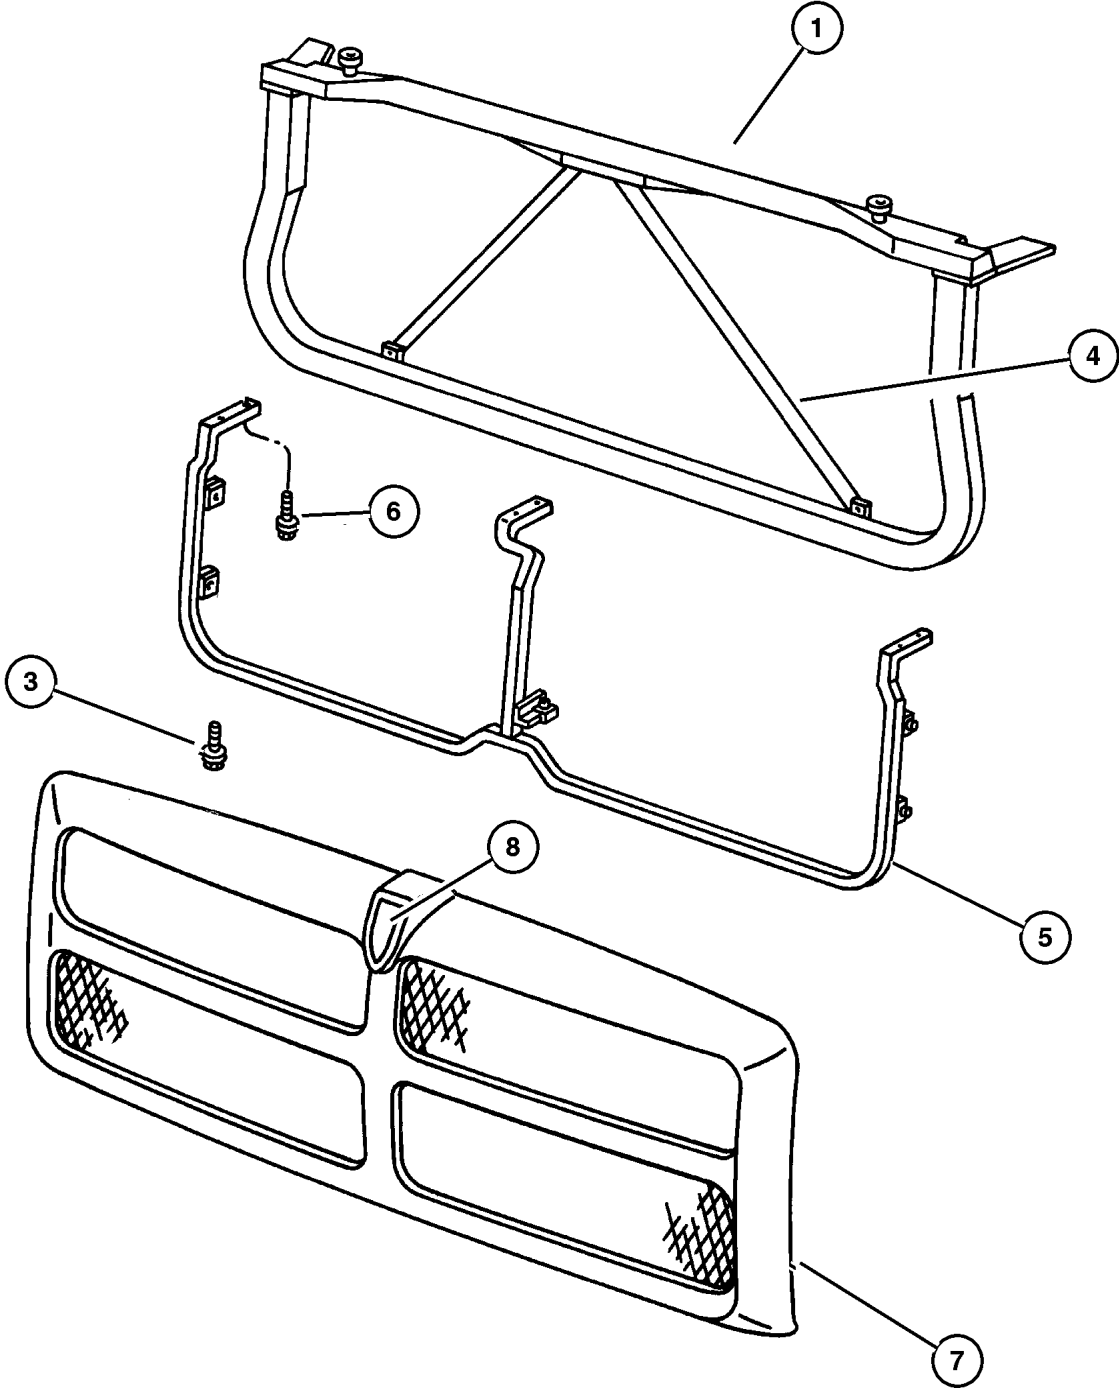
TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DGO = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Grille And Related Parts
Figure 007-720




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									CLOSURE, Radiator
	55275 412AB	1							Upper
	55275 413AB	1							Lower
-2	5523 5112	1							TAPPING PLATE, Hood Latch
3									SCREW, (NOT SERVICED) (Not Serviced)
4	5523 4644	1							CROSS BRACE, Radiator
5									BRACKET, Radiator Grille
	55076 476AB	1							with Chrome Grille
	55076 867AB	1							with Body Color Grille
6									SCREW AND WASHER, Hex Head, (NOT SERVICED) (Not Serviced)
7									GRILLE, Radiator
	QR33 DX8AD	1							Black
	QR33 GW7AD	1							White
	QR33 PR4AD	1							Red
	QR33 SG8AD	1							Green
	QR33 VB3AD	1							Blue
	QR33 VYHAD	1							Yellow
	55076 550AB	1							Chrome
8	5529 5240	1							MEDALLION, Hood, Rams Head

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

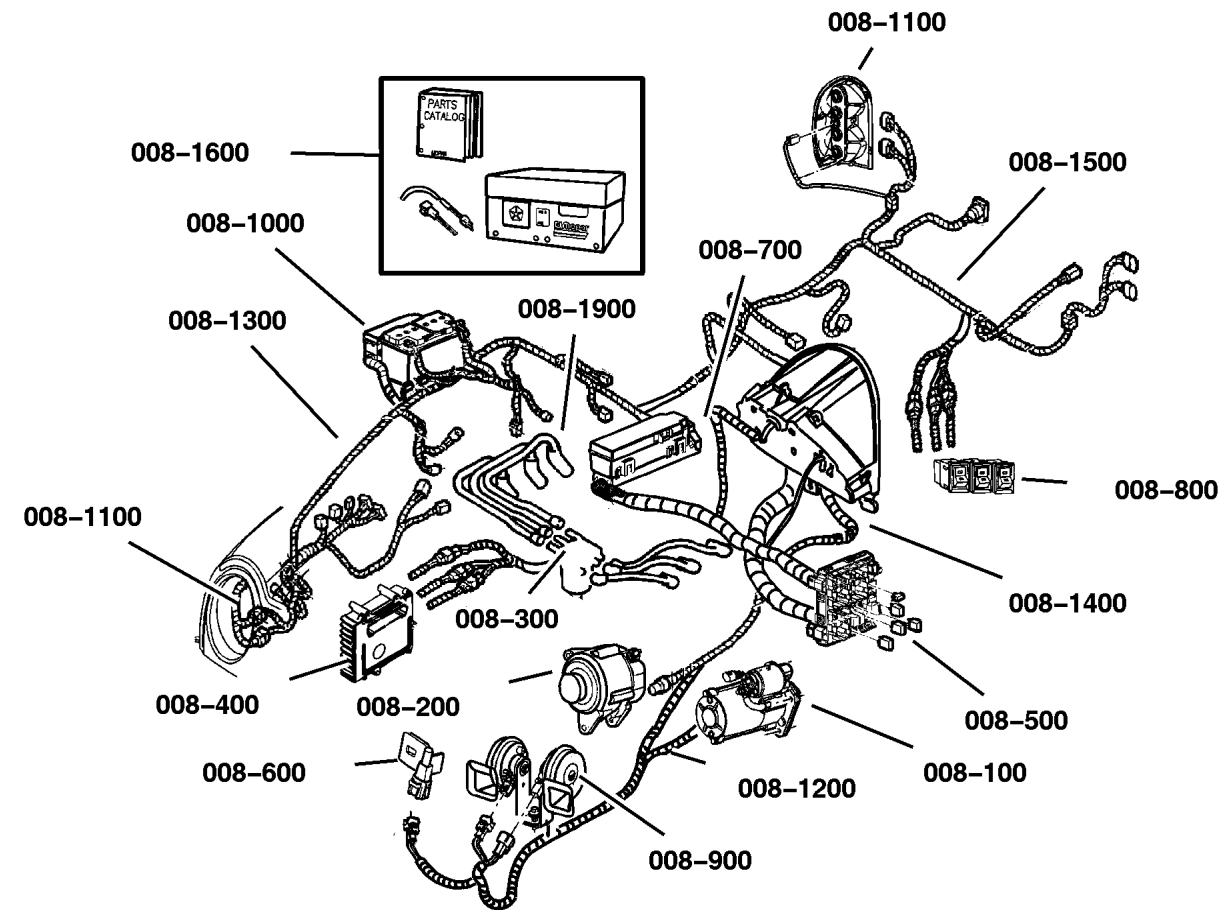Group – 008
Electrical




008-100 Starters	008-200 Alternators	008-300 Distributor	008-400 Modules
008-500 Relays	008-600 Sensors	008-700 Single Board Engine Controllers	008-800 Switches

Group – 008
Electrical

008-900 Horns	008-1000 Battery Tray and Cables	008-1100 Lamps – Front, Rear and Courtesy	008-1200 Wiring-Engine & Related Parts
008-1300 Wiring-Headlamp to Dash	008-1400 Wiring-Instrument Panel	008-1500 Wiring-Body & Accessories	008-1600 Wiring Repair
008-1900 Spark Plugs-Cables-Coils			

GROUP 8 - Electrical		GROUP 8 - Electrical	
Illustration Title	Group-Fig. No.	Illustration Title	Group-Fig. No.
Starters		Wiring-Instrument Panel	
Starter & Mounting Gas Engines	Fig. 008-105	Wiring, Instrument Panel	Fig. 008-1420
Starter & Mountings Diesel Engines	Fig. 008-110	Wiring-Body & Accessories	
Alternators		Wiring, Body & Accessories	Fig. 008-1520
Alternator & Mounting 5.2L & 5.9L Engines	Fig. 008-205	Wiring Repair	
Alternator & Mounting 8.0L Engine	Fig. 008-215	Wiring Repair Package	Fig. 008-1605
Alternator & Mounting 5.9L Diesel Engines	Fig. 008-220	Spark Plugs-Cables-Coils	
Distributor		Spark Plugs--Cables--Coils	Fig. 008-1905
Distributors	Fig. 008-305		
Modules			
Modules	Fig. 008-420		
Relays			
Junction Block Relays and Fuses	Fig. 008-520		
Sensors			
Sensors Engine [5.2 EL0, 5.9L EM0] Gas Engine]	Fig. 008-605		
Sensors Engine [5.9L Diesel]	Fig. 008-610		
Sensors Engine [8.0L Engine]	Fig. 008-615		
Sensors Drive Train	Fig. 008-620		
Sensors Body	Fig. 008-625		
Single Board Engine Controllers			
Single Board Engine Controllers	Fig. 008-720		
Switches			
Switches	Fig. 008-820		
Horns			
Horns	Fig. 008-905		
Battery Tray and Cables			
Battery Tray & Cables	Fig. 008-1020		
Lamps - Front, Rear and Courtesy			
Lamps Front	Fig. 008-1160		
Lamps Rear	Fig. 008-1170		
Lamps, Dome Courtesy and Reading	Fig. 008-1180		
Wiring-Engine & Related Parts			
Wiring, Engine	Fig. 008-1220		
Wiring-Headlamp to Dash			
Wiring, Headlamp / Dash	Fig. 008-1320		

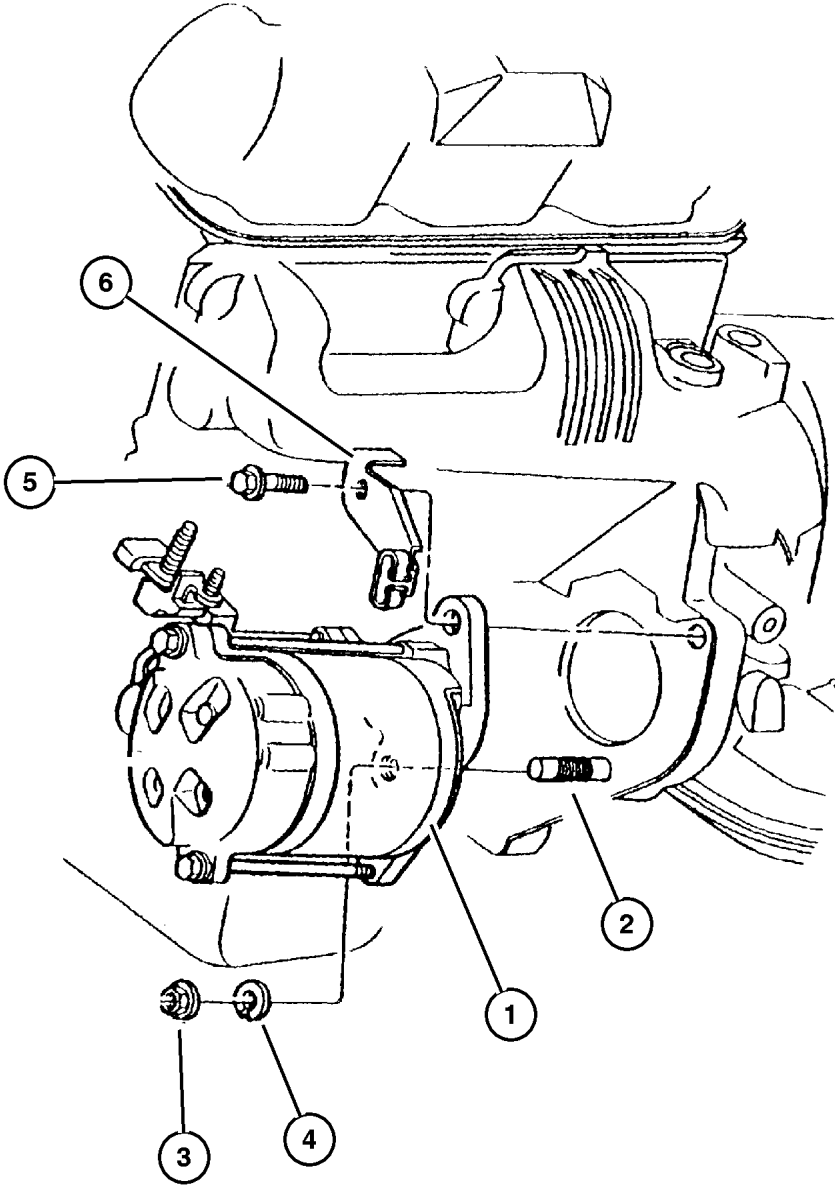Starter & Mounting Gas Engines
 Figure 008-105



V6-V8-V10

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

DGT = 4 Speed Automatic Transmission 46RE

EL0 = All 5.2L 8 Cyl Gas Engines

ELF = Magnum 5.9L SMPI V8 Engine

EM0 = All 5.9L 8 Cyl Gas Engines

EW0 = All 8.0L Gas Engines

1	56027 702AC	1				ELF, EM0			STARTER
	56027 703AC	1				EW0			
2	6035 606	1				ELF, EM0			STUD, .437-14/.437-20x2.00
3									NUT, Hex, .42-20
	0271 506	1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1				ELF, EM0			
		1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
4									WASHER, (NOT SERVICED) (Not Serviced)
5									SCREW AND WASHER, Hex Head, .437-14x1.50
	6035 604	1				ELF, EM0			
		2				EW0			
6									BRACKET, Oil Cooler Lines (See Cooling Section), (NOT SERVICED) (Not Serviced)

DODGE RAM QUAD CAB/CLUB CAB (BE)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.	
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.	
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual	
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual	
			EAA = All Engines	DEE = 6 Speed HD Manual	
			EAG = All Gas Engines		


AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Starter & Mountings Diesel Engines
 Figure 008-110


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:									
ETC = 5.9L Cummins 24V Diesel Engine									
1	R474 1012	1				ETC			STARTER
2	4429 834	3				ETC			SCREW, Starter Motor

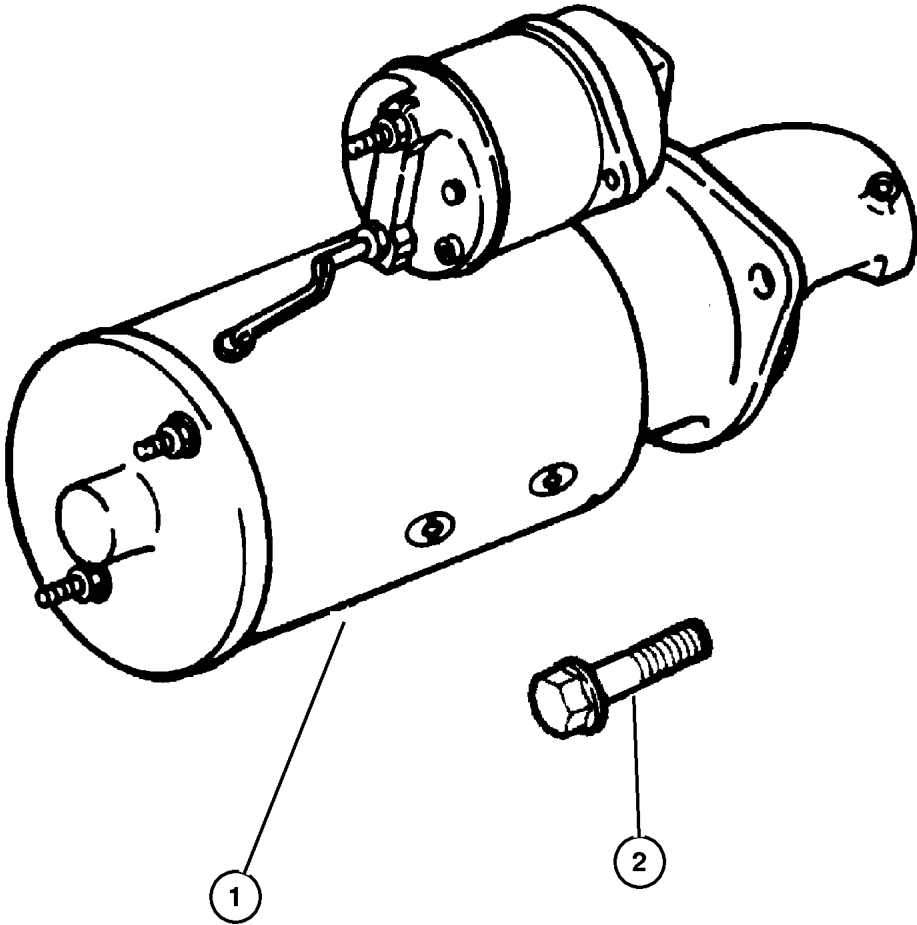

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

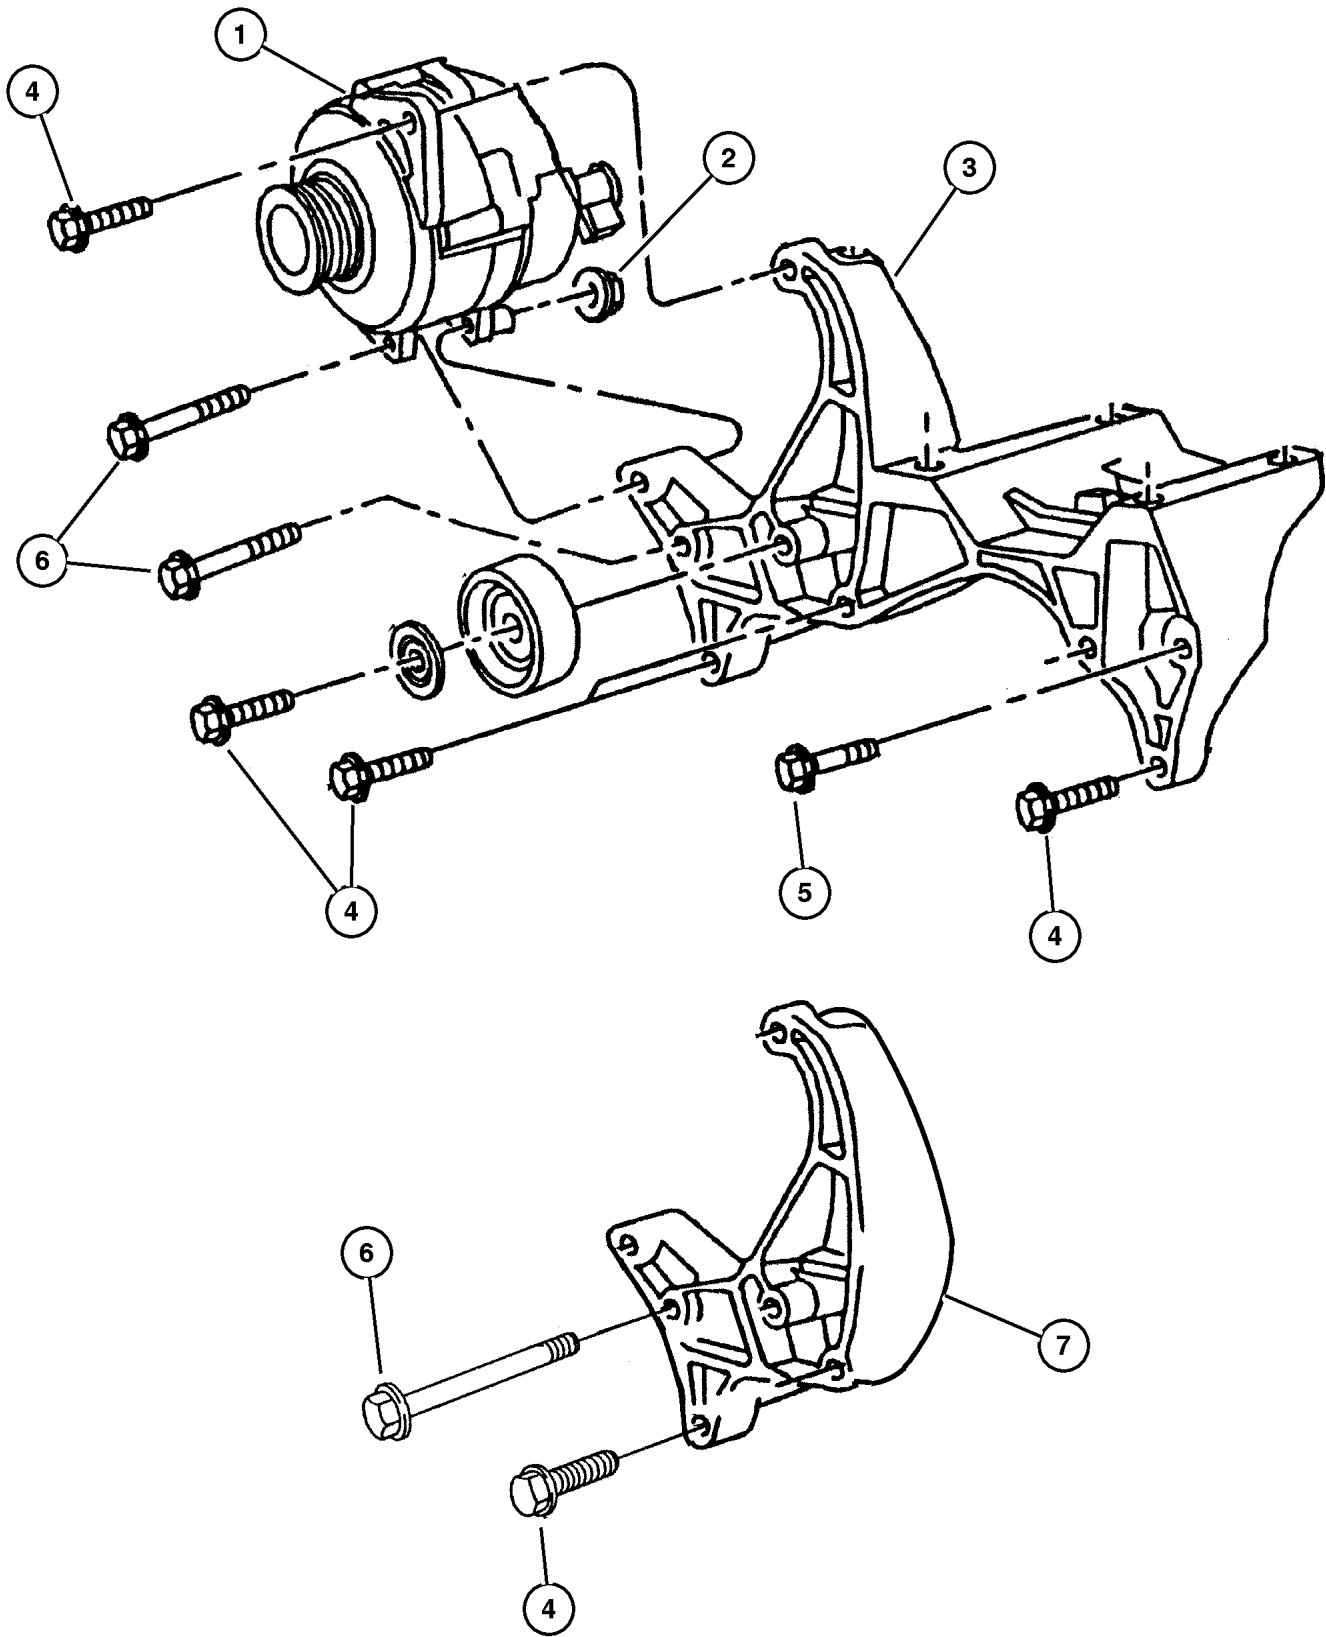Alternator & Mounting 5.2L & 5.9L Engines
Figure 008-205



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

EL0 = All 5.2L 8 Cyl Gas Engines

EM0 = All 5.9L 8 Cyl Gas Engines

EW0 = All 8.0L Gas Engines

1									ALTERNATOR
	56027 912AB	1				EL0, EM0, EW0			117 AMP
	56028 920AA	1				EL0, EM0, EW0			136 AMP
2									NUT, 3/8-16, (NOT SERVICED) (Not Serviced)
3	5300 8614	1				EL0, EM0			BRACKET, Alternator And Compressor
4									SCREW AND WASHER, Hex Head, 3/8-16x2.0, (NOT SERVICED) (Not Serviced)
5	6034 246	1				EL0, EM0			BOLT, Hex Head, .375-16x.75
6	6034 247	1				EL0, EM0			BOLT, Hex Head, .375-16x.25
7	5300 8618	1				EL0, EM0			BRACKET, Alternator, w/o Air

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual


AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Alternator & Mounting 8.0L Engine
Figure 008-215

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:									
EL0 = All 5.2L 8 Cyl Gas Engines									
EM0 = All 5.9L 8 Cyl Gas Engines									
EW0 = All 8.0L Gas Engines									
1						ALTERNATOR			
	56028 920AA	1				EL0, EM0, EW0			136 Amp (Bosch)
	56027 912AB	1				EL0, EM0, EW0			117 Amp (Bosch)
	5602 8238	1				EL0, EM0, EW0			
2						NUT, .375-16, (NOT SERVICED) (Not Serviced)			
3	53005 621AB	1				EW0			BRACKET, Air Pump And Tensioner
4	6034 247	4				EW0			BOLT, Hex Head, .375-16x.25
5						BOLT, .375-16x5.0, (NOT SERVICED) (Not Serviced)			
6						BOLT, .375-16x2.0, (NOT SERVICED) (Not Serviced)			
7						SCREW AND WASHER, .312-18x. 75, (NOT SERVICED) (Not Serviced)			
8	53010 013AB	1				EW0			BRACE, Alternator
-9	53041 112AB-	1				EW0			BRACKET, Tensioner

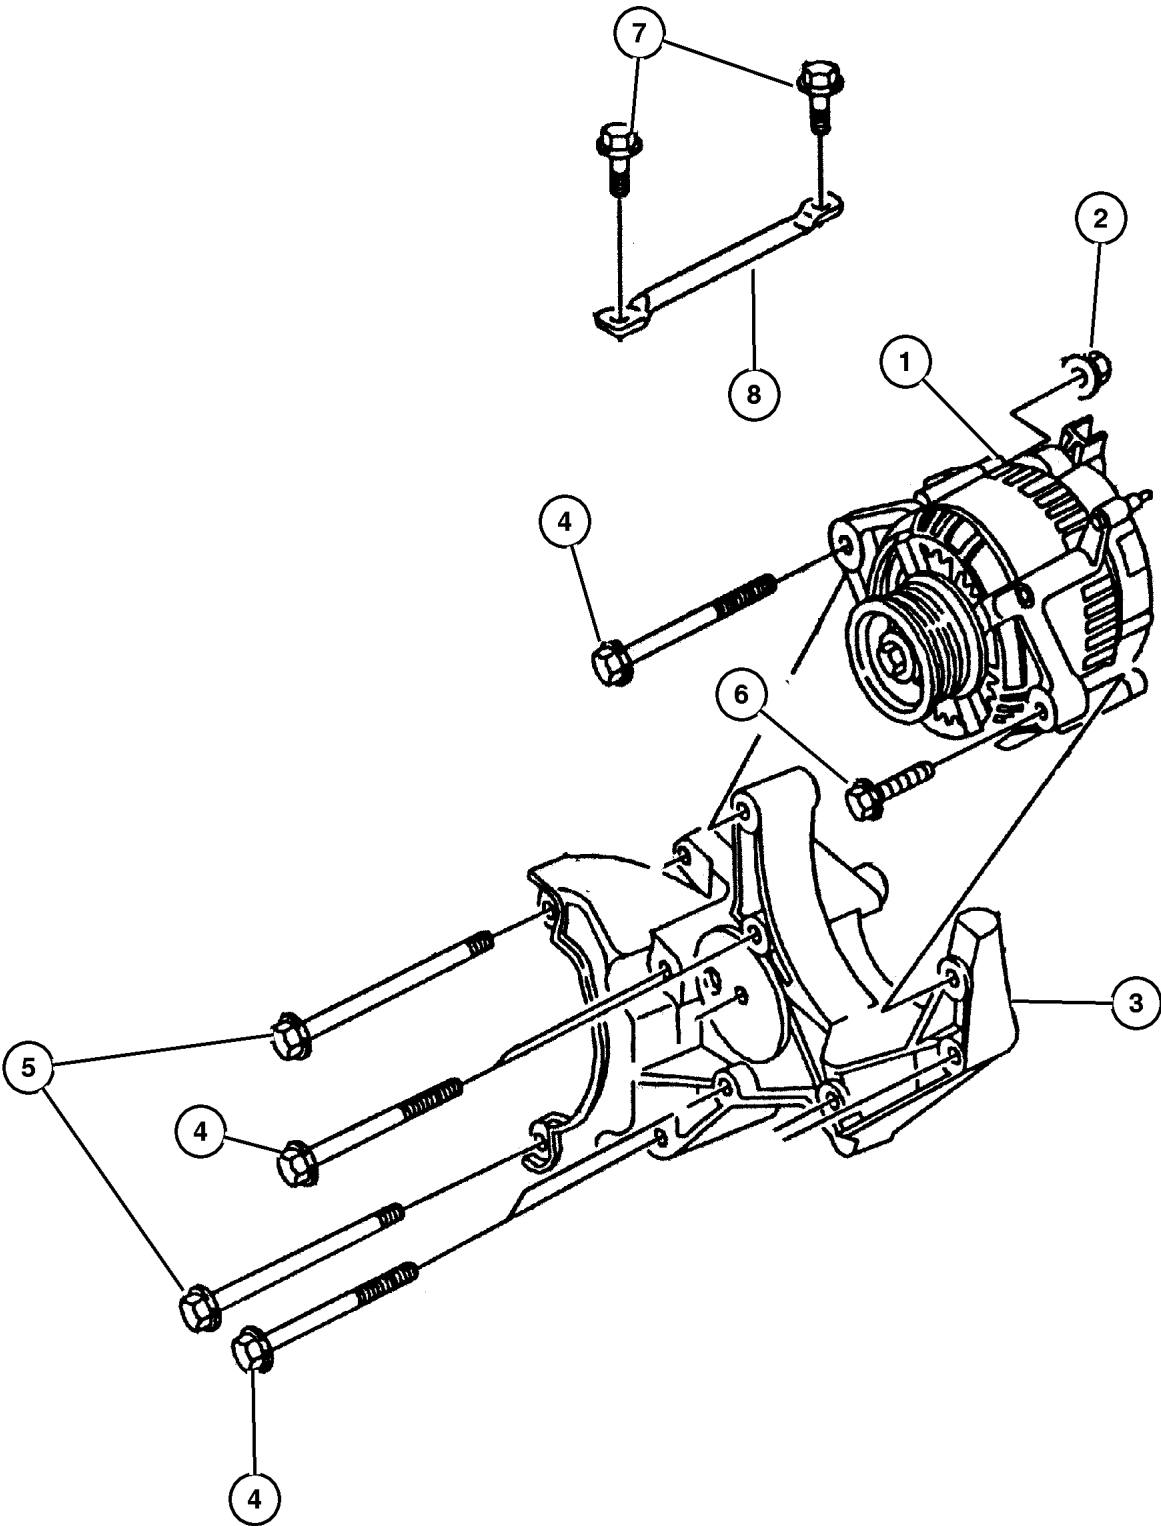


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

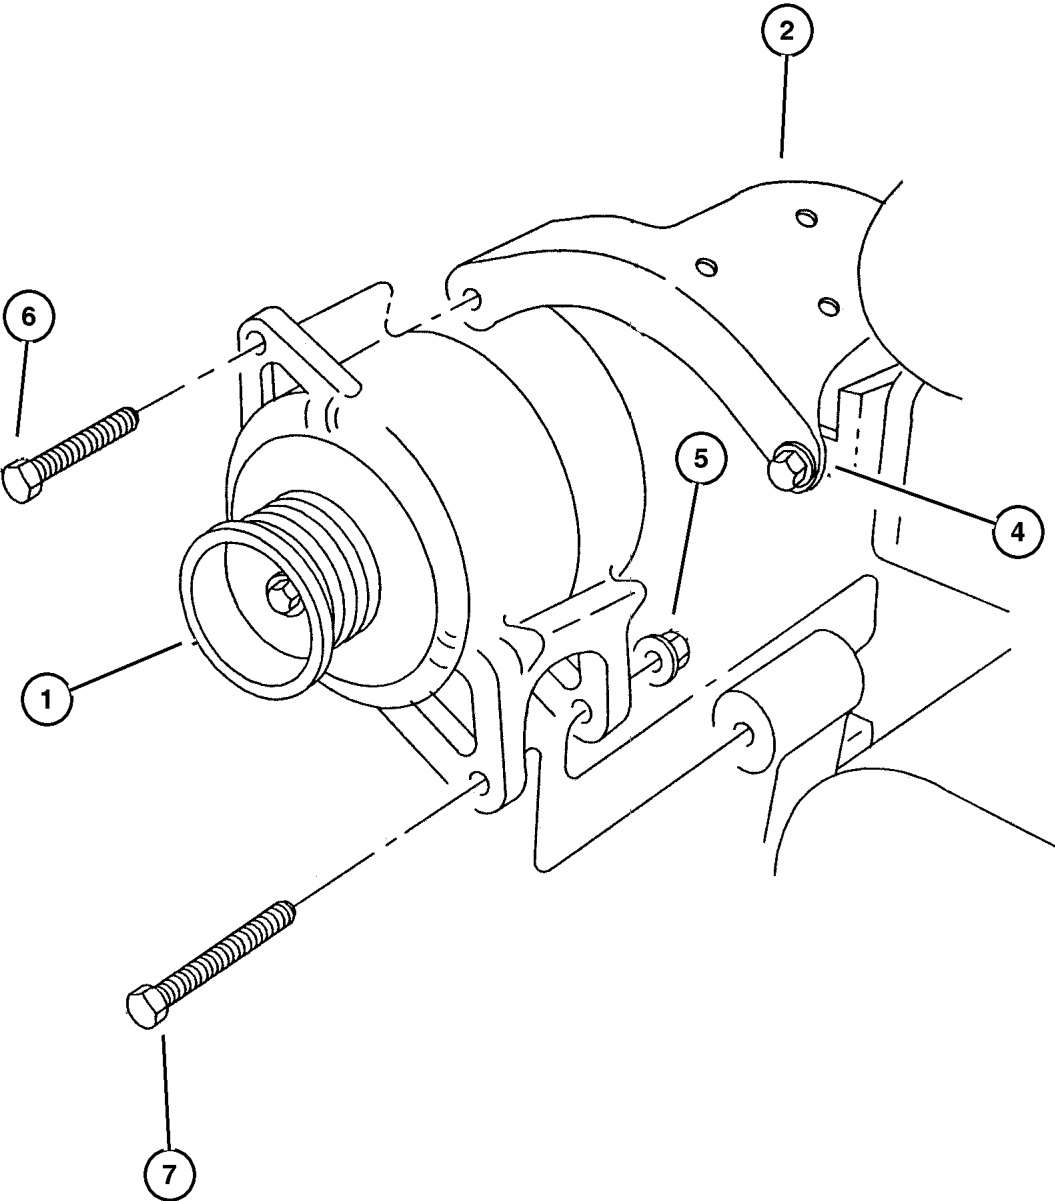Alternator & Mounting 5.9L Diesel Engines
Figure 008-220



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

ETC = 5.9L Cummins 24V Diesel Engine

ET0 = All 5.9L Turbo Diesel Engines

1	56027 221AB	1				ET0			ALTERNATOR, 136 Amp (Denso)
2	5011 801AA	1				ETC			BRACKET, Alternator
-3	5011 802AA-	1				ETC			BRACKET, Alternator
4	6100 949	1				ET0			SCREW, Hex Head
5	6502 337	1				ET0			NUT, M10x1.5
6	4638 696	1				ET0			BOLT, Hex Flange Head, M10x1.50x45
7	4429 363	1				ETC			SCREW, Hex Head
-8	4429 114	3				ETC			SCREW, Hex Flange Head
-9	5011 803AA-	1				ETC			SCREW, Hex Head


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

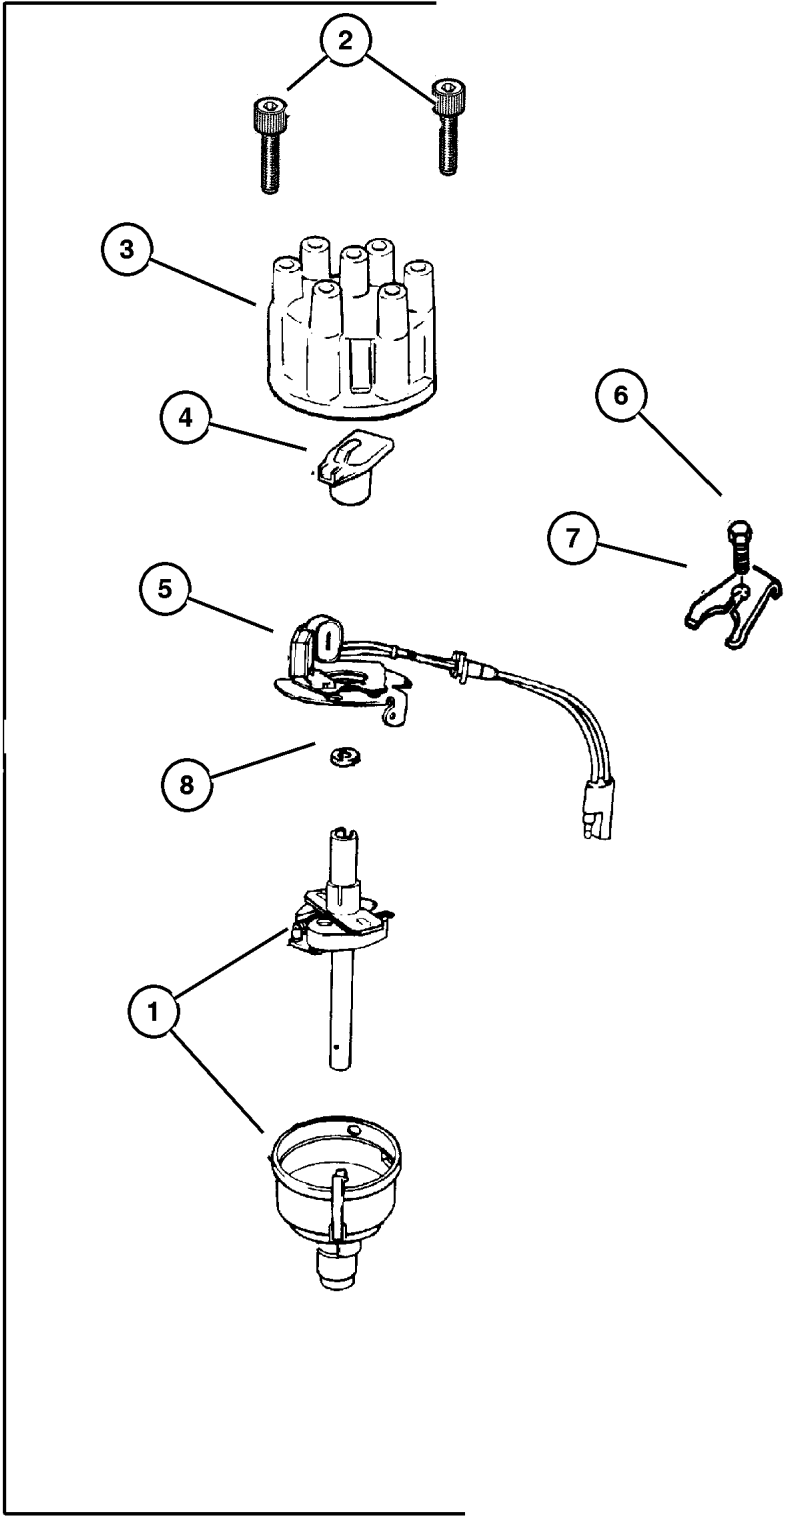Distributors
Figure 008-305



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

EL0 = All 5.2L 8 Cyl Gas Engines

EM0 = All 5.9L 8 Cyl Gas Engines

1	4740 339AB	1				EL0, EM0			DISTRIBUTOR, Engine
2	5602 6706	2				EL0, EM0			SCREW, Hex Head, M5x0.8x27
3	5300 8767	1				EL0, EM0			CAP, Distributor
4	5300 8778	1				EL0, EM0			ROTOR, Distributor
5	5602 8143	1				EL0, EM0			SWITCH, Distributor Pick-Up
6	6028 606	1				EL0, EM0			SCREW AND WASHER, Hex Head Lock, .312-18x1.00
7	4343 950	1				EL0, EM0			CLAMP, Distributor
8	2875 923	1				EL0, EM0			O RING, Distributor


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

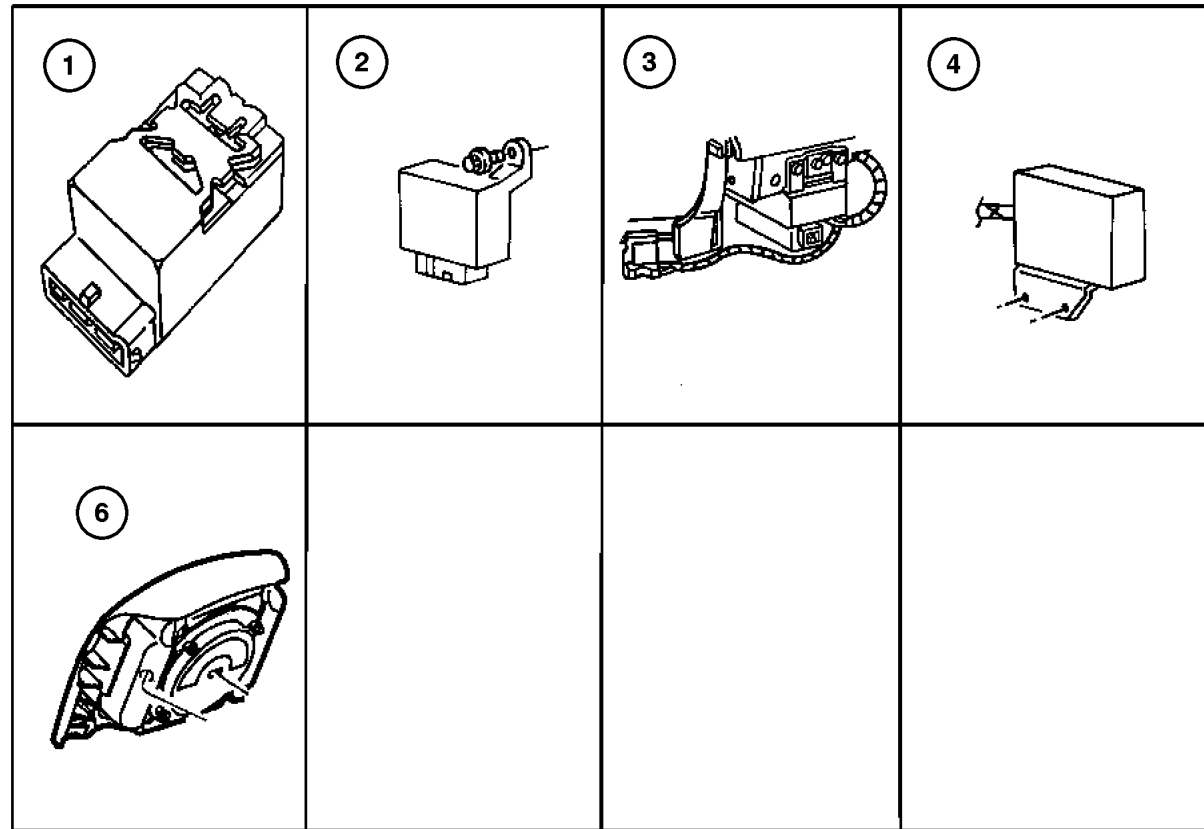Modules Figure 008-420



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	55076 549AF	1							MODULE, Wiper
2	56021 561AC	1							MODULE, Daytime Running Lamp
3	56043 128AF	1							MODULE, Air Bag Control
4									MODULE, Anti-lock Brakes
	5015 525AA	1	1, 6						[BGJ]
	5015 526AB	1	2, 7		33, 34				[BGJ]
	5015 527AB	1	1, 6						[BGK]
	5015 529AC	1	3, 8		34				With Four Wheel Drive
-5	5003 311AA-	1	1, 6						BRACKET, Anti-Lock Brake Module, R.W.A.L.
6									AIR BAG, Passenger
	5GE24 LAZAA	1							Agate
	5GE24 RC8AA	1							Cirrus
	5GE24 VK9AA	1							Suede
-7									MODULE, Timing and Control
	56020 157AC-	1							Without Keyless Entry (Integrated)
	56045 448AB-	1							Up to 10/07/99, with Keyless Entry (Midlevel)
	56045 999AD-	1							With Heated Seats
	56045 448AC-	1							10/07/99 & After, with Keyless Entry (Midlevel)
-8	56045 105AB-	1			33, 34				MODULE, Heated Front Seats
-9									MODULE, Engine Controller
	3533 39302J	1				ETC	DG0		w/Federal Emissions
	3534 30302J	1				ETC	DG0		w/California Emissions
	3534 31302J	1				ETC	DBB		w/Federal Emissions
	3534 32302J	1				ETC	DBB		w/California Emissions

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year


September 16, 2005

Junction Block Relays and Fuses
Figure 008-520

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	56045 391AB	1							JUNCTION BLOCK, Relay
2	5600 6846	1							RELAY, Electrical
3	5600 7348	1							FLASHER
4	4604 235	2							BREAKER, Circuit
5	00AT C10	1							FUSE, Standard, 10 AMP, Red
6	00AT C15	1							FUSE, Standard, 15 AMP, Light Blue
7	000A TM5	1							FUSE, Mini, 5 Amp, Tan
8	00AT M10	1							FUSE, Mini, 10 AMP, Red
9	00AT M20	1							FUSE, Mini, 20 AMP, Yellow
10	00AT M25	1							FUSE, Mini, 25 Amp, Natural
-11	4897 895AA-	1							HOLDER, Fuse, I.O.D. Fuse
-12	4897 906AA-	2							HOLDER, Fuse, Airbag Fuse
-13									RELAY, Mini
	4671 168	1							Foglamp
		1							Heated Seat
-14	5602 6842	1				ET0			RELAY, Electrical, Air Intake Heater

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

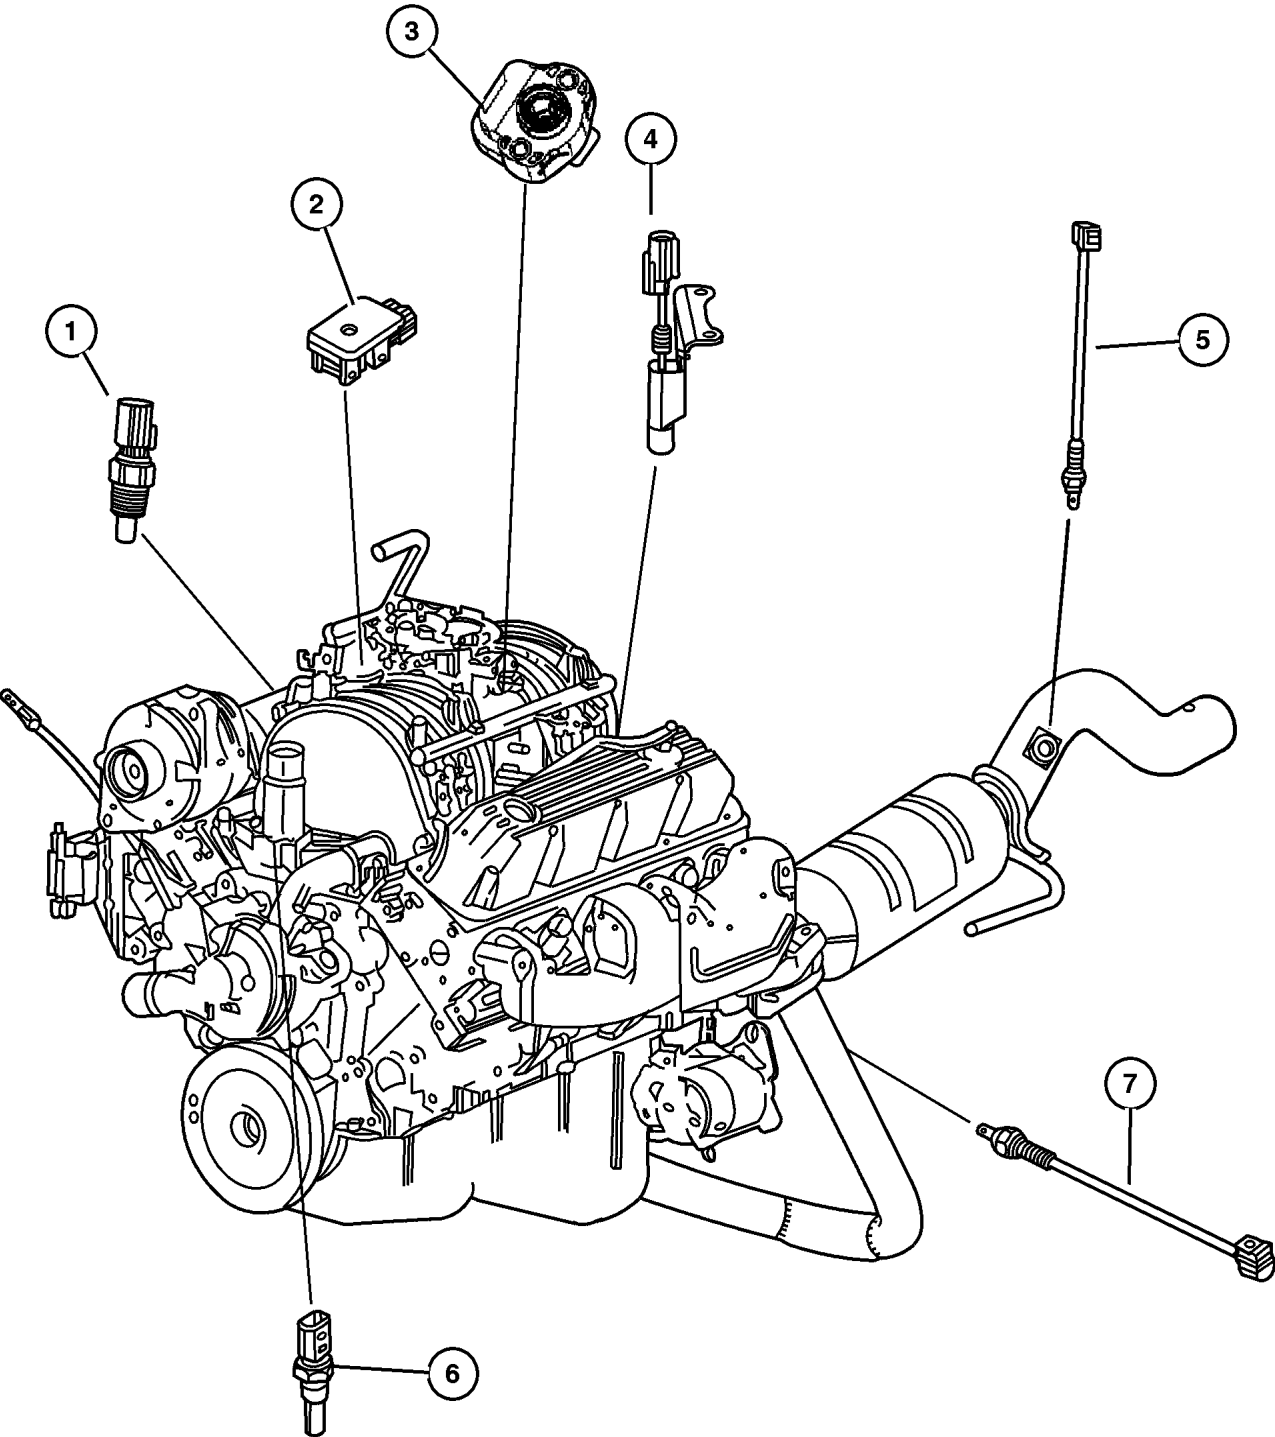Sensors Engine [5.2 EL0, 5.9L EM0] Gas Engine]
Figure 008-605



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

DG0 = All Automatic Transmissions
EM0 = All 5.9L 8 Cylinder Gas Engines
EV0 = All 4.7L Gas Engines

1	5602 7872	1				EL0,			SENSOR, Air Temperature
2	5602 9405	1				EM0			SENSOR, Map
3						EL0,			SENSOR, Throttle Position
	4882 219	1				EM0			
4	5602 7870	1				EL0,	DG0		SENSOR, Crankshaft Position
	5602 7871	1				EM0	DBB		
5	56041 212AF	1				EL0,			SENSOR, Oxygen, After Catalyst
6	5600 4815	1				EML			SENSOR, Coolant Temperature
7						EL0,			SENSOR, Oxygen
	56041 212AE	1				EML	DG0		Before Catalyst
		1				EMM	DG0		Before Catalyst,Right Side
		2	6, 7, 8			EMM	DDP		Before Catalyst
	56041 213AF	1				EML	DDP		Before Catalyst
		1				EMM	DG0		Before Catalyst,Left Side
		2	1, 2, 3			EMM	DDP		Before Catalyst
		2				EL0,	DG0		Before Catalyst
						EML			
-8									SENSOR, Camshaft, Serviced in Distributor Pickup Switch, (NOT SERVICED) (Not Serviced)

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Sensors Engine [5.9L Diesel]
Figure 008-610


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	5012 801AA	1				ETC			SENSOR, Turbo Boost Pressure
2	5011 851AA	1				ETC			O RING
3	5014 197AA	1				ETC			SENSOR, Air Temperature
4	5003 602AA	1				ETC			O RING
5									BELLCRANK, Accelerator and Cruise
	5303 1575	1				ETC	DG0		
	5303 1576	1				ETC	DBB		
6	5014 994AA	1				ETC			SENSOR, Camshaft
7	5003 602AA	1				ETC			O RING
8	4638 672	1				ETC			SCREW
9	5011 852AA	1				ETC			SENSOR, Temperature Sending Unit
10	5003 602AA	1				ETC			O RING
11	5015 582AA	1				ETC			SENSOR, Fuel/Water
-12	5015 488AA-	1				ETC			SENSOR, Crankshaft
-13									SENSOR, Oil Pressure
	5012 991AA-	1				ETC			
		1				ETH	DBB		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

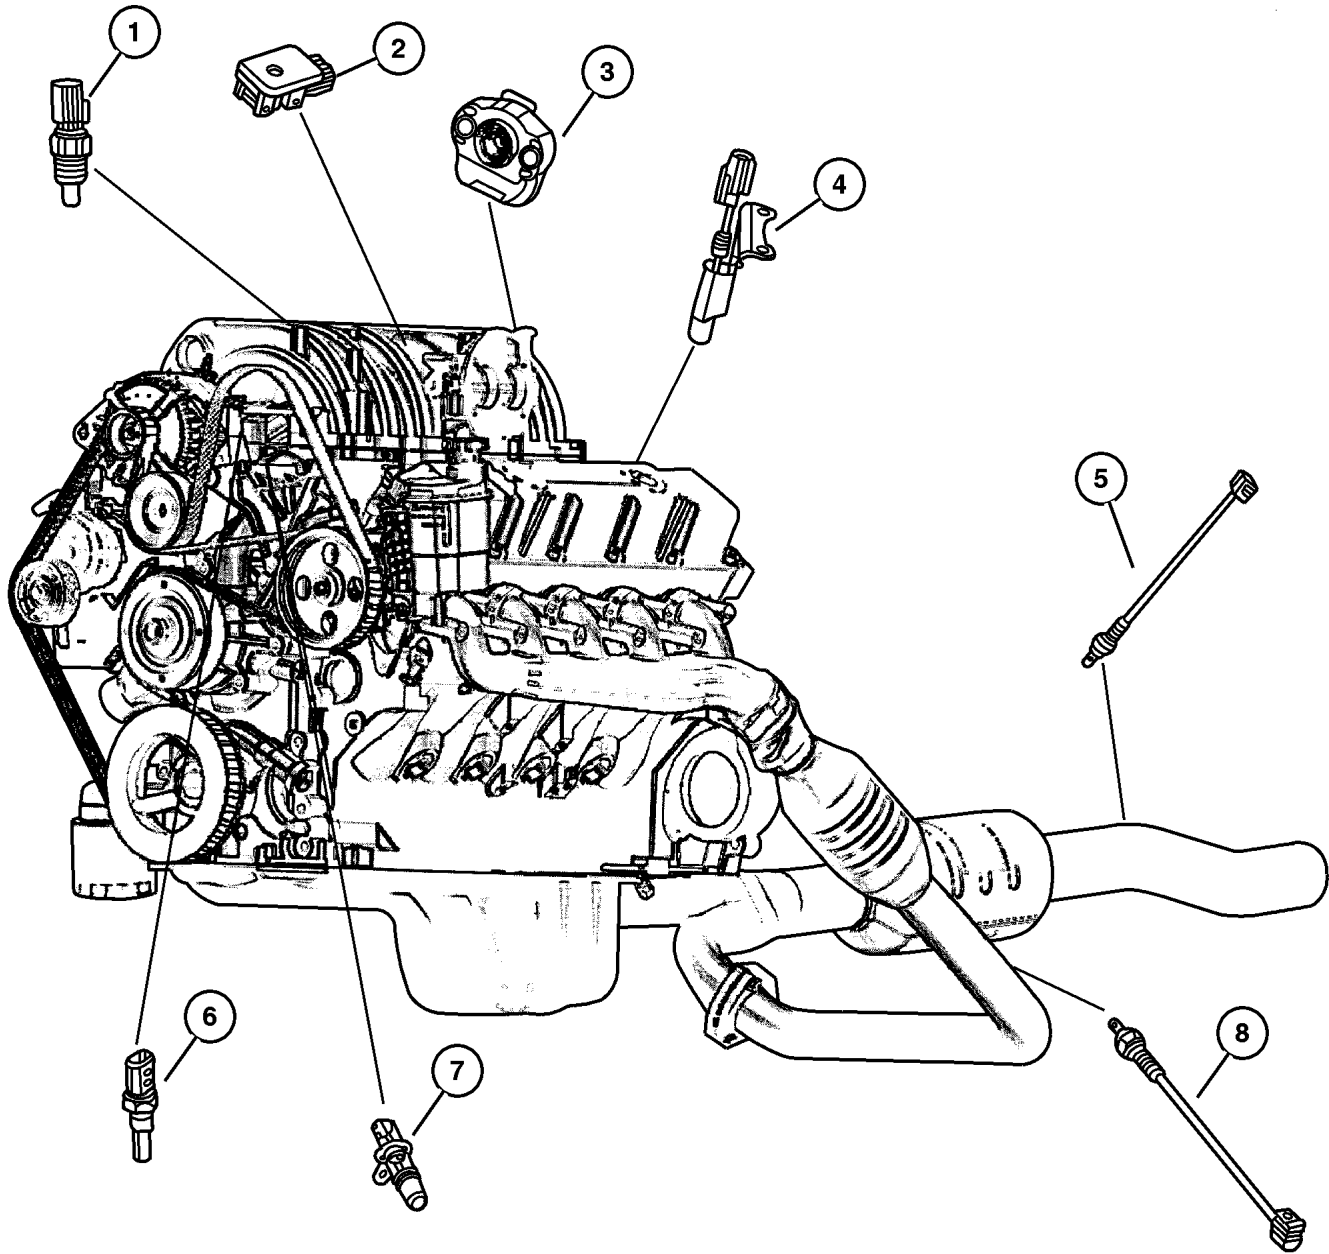Sensors Engine [8.0L Engine]
Figure 008-615




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	5602 7872	1				EW0			SENSOR, Air Temperature
2	4896 131AA	1				EW0			SENSOR, Map
3	4882 219	1				EW0			SENSOR, Throttle Position
4	5602 7864	1				EW0			SENSOR, Crankshaft Position
5	56041 212AF	1				EW0			SENSOR, Oxygen, After Catalyst
6	5600 4815	1				EW0			SENSOR, Coolant Temperature
7	5602 7860	1				EW0			SENSOR, D.I.S. Camshaft Reference
8	56041 212AE	2				EW0			SENSOR, Oxygen, Before Catalyst

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

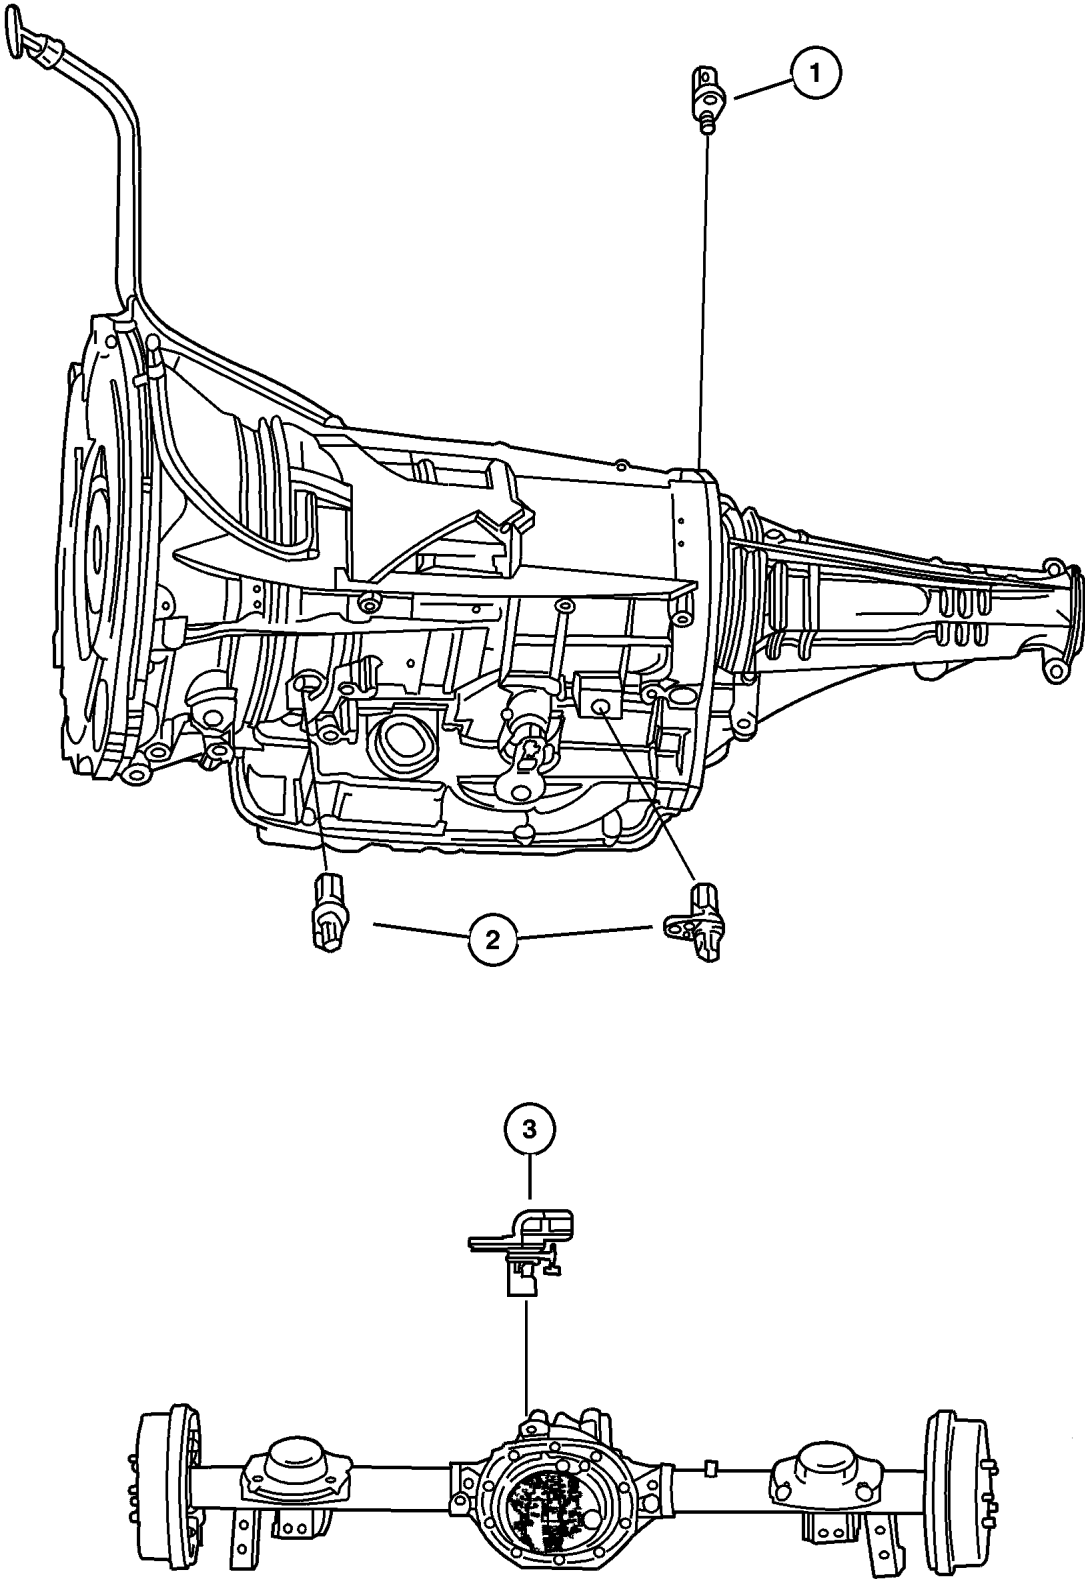Sensors Drive Train
Figure 008-620




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
[DG4]=Multi-Speed Automatic Transmission									
1	56028 196AA	AR	1, 2, 3			EL0	DGT		TRANSDUCER, Pressure Sensor
		AR	6, 7, 8			EL0			
		AR	1, 2, 3			EM0	DGT		
		AR	1, 2, 3				DGP		
		AR	6, 7, 8						
		1	1, 2, 3			ET0	DGP		
		1	1, 2, 3			EW0	DGP		
		1	6, 7, 8			ET0	DGP		
		1	6, 7, 8			EW0	DGP		
2									SENSOR, Transmission Output Speed
	4412 879	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			ET0	DGP		
		1	1, 2, 3			EW0	DGP		
3									SENSOR, Wheel Speed
	56028 187AD	1							
	56028 229AB	1	6, 7, 8				DBB		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

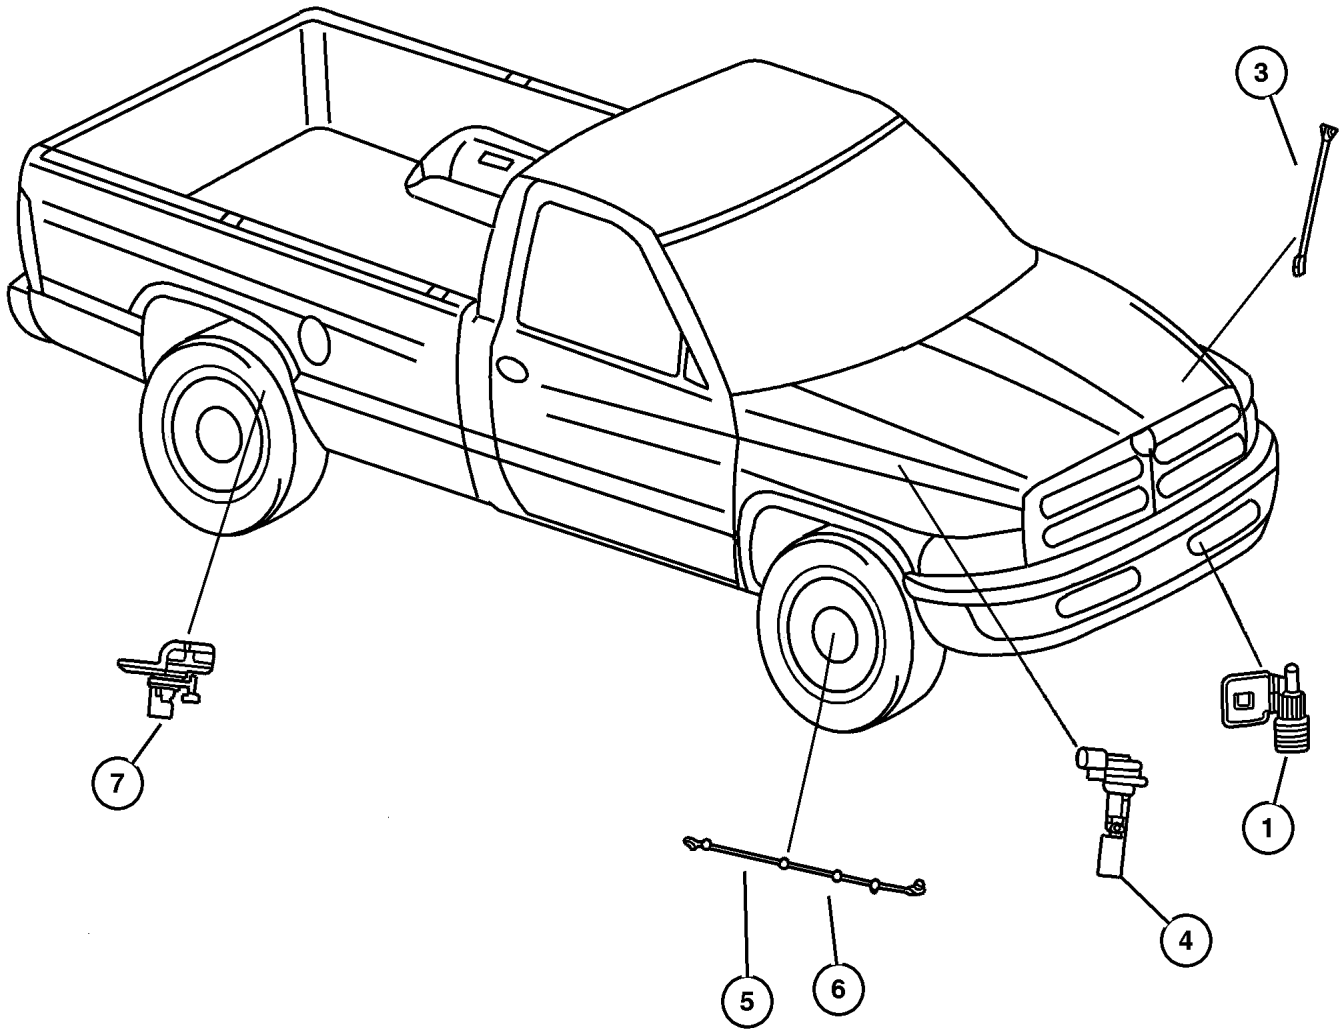Sensors Body
Figure 008-625



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

DG0 = All Automatic Transmissions

EM0 = All 5.9L 8 Cylinder Gas Engines

EV0 = All 4.7L Gas Engines

1	4688 204	1							SENSOR, Ambient Temperature
-2	56021 433AC-	1							BRACKET, Ambient Temperature Sensor
3	5602 7332	1							SENSOR, Battery Temperature
4	5515 5039	1							SENSOR, Washer Fluid Level
5									SENSOR KIT, Anti-Lock Brakes
	5015 283AA	1	6						
	5015 882AA	1	7		33, 34				
		1	8		34				
6									SENSOR, Anti-Lock Brake
	56028 216AA	2	2, 3		33, 34				
	56028 217AA	2	1						
7									SENSOR, Wheel Speed
	56028 187AD	1							
	56028 229AB	1	6, 7, 8				DBB		

DODGE RAM QUAD CAB/CLUB CAB (BE)


SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Single Board Engine Controllers

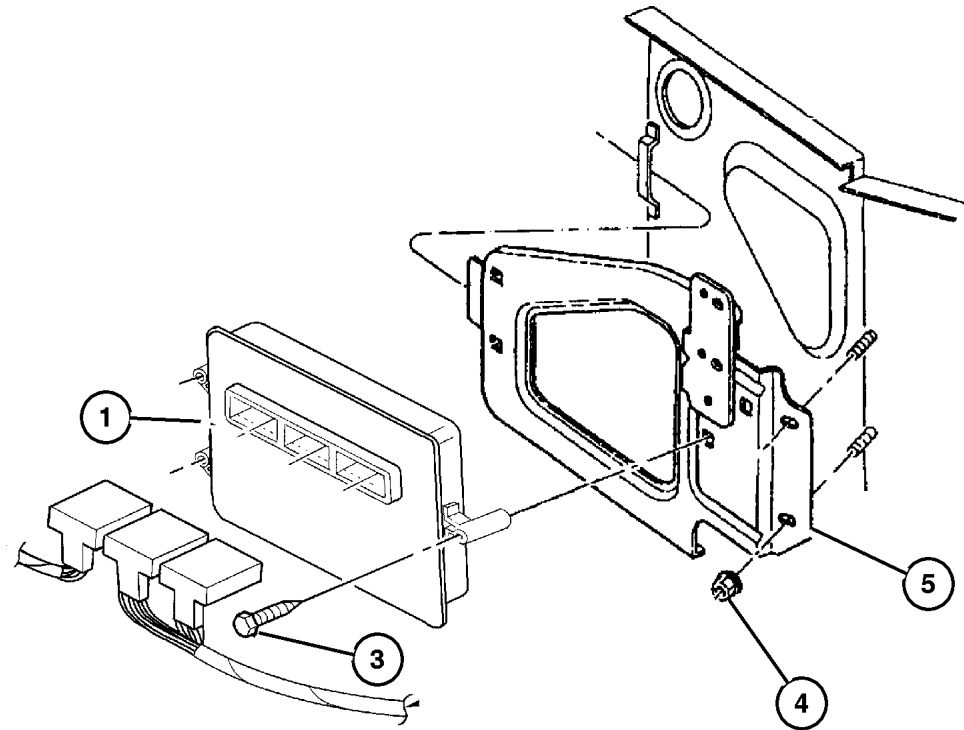Figure 008-720



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
EH0=3.9L Engine									
EM0=5.9L Engine									
EML=5.9L Engine MPI (Light Duty)									
EMM=5.9L Engine MPI (Heavy Duty)									
EW0=8.0L Engine									
ET0=5.9L Turbo Diesel Engine									
ETC=5.9L Cummins 24V Diesel Engine									
ETH=5.9L High Output Turbo Diesel Engine									
DG0=Automatic Transmission									
DBB=Manual Transmission									
1									MODULE, Powertrain Control
	56040 401AD	1				EMM	DBB		w/Federal Emissions
	56040 412AD	1				EMM	DG0		w/Federal Emissions
	56040 402AC	1				EM0	DBB		w/Leaded Fuel Emissions
	56040 413AC	1				EM0	DG0		w/Leaded Fuel Emissions
	56040 421AD	1				EW0	DG0		w/California Emissions
	56040 418AF	1				EW0	DBB		w/Federal Emissions
	56040 366AE	1				EL0	DBB		w/Federal Emissions
	56040 367AE	1				EL0	DBB		w/California Emissions
	56040 368AF	1				EL0	DG0		w/Federal Emissions
	56040 369AD	1				EL0	DG0		w/California Emissions
	56040 399AE	1				EML	DBB		w/Federal Emissions
	56040 400AE	1				EML	DBB		w/California Emissions
	56040 410AE	1				EML	DG0		w/Federal Emissions
	56040 411AD	1				EML	DG0		w/California Emissions
	56040 414AC	1				ETC	DBB		w/Federal Emissions
	56040 415AC	1				ETC	DBB		w/California Emissions
	56040 416AC	1				ETC	DG0		w/Federal Emissions
	56040 417AC	1				ETC	DG0		w/California Emissions
	56040 419AA	1				EW0	DBB		w/California Emissions
	56040 420AE	1				EW0	DG0		w/Federal Emissions
-2									MODULE, Engine Controller
	3533 39302J	1				ETC	DG0		w/Federal Emissions
	3534 30302J	1				ETC	DG0		w/California Emissions
	3534 31302J	1				ETC	DBB		w/Federal Emissions
	3534 32302J	1				ETC	DBB		w/California Emissions
3									SCREW, Tapping, M4x8, SCREW,
									Mounting M4.8x1.59x45.00, (NOT
									SERVICED) (Not Serviced)

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM, EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	


AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Single Board Engine Controllers

Figure 008-720

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
4									NUT, NUT (M6x1.00) Not Serviced ***, (NOT SERVICED) (Not Serviced)
5	56028 207AA	1							BRACKET, Module, JTEC Module

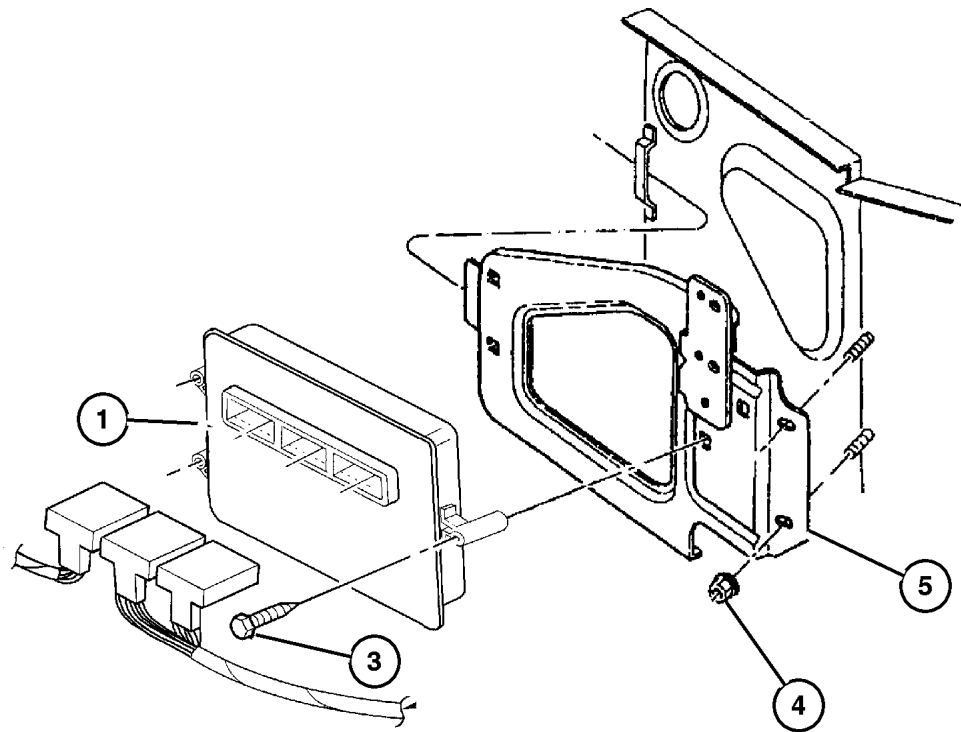


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

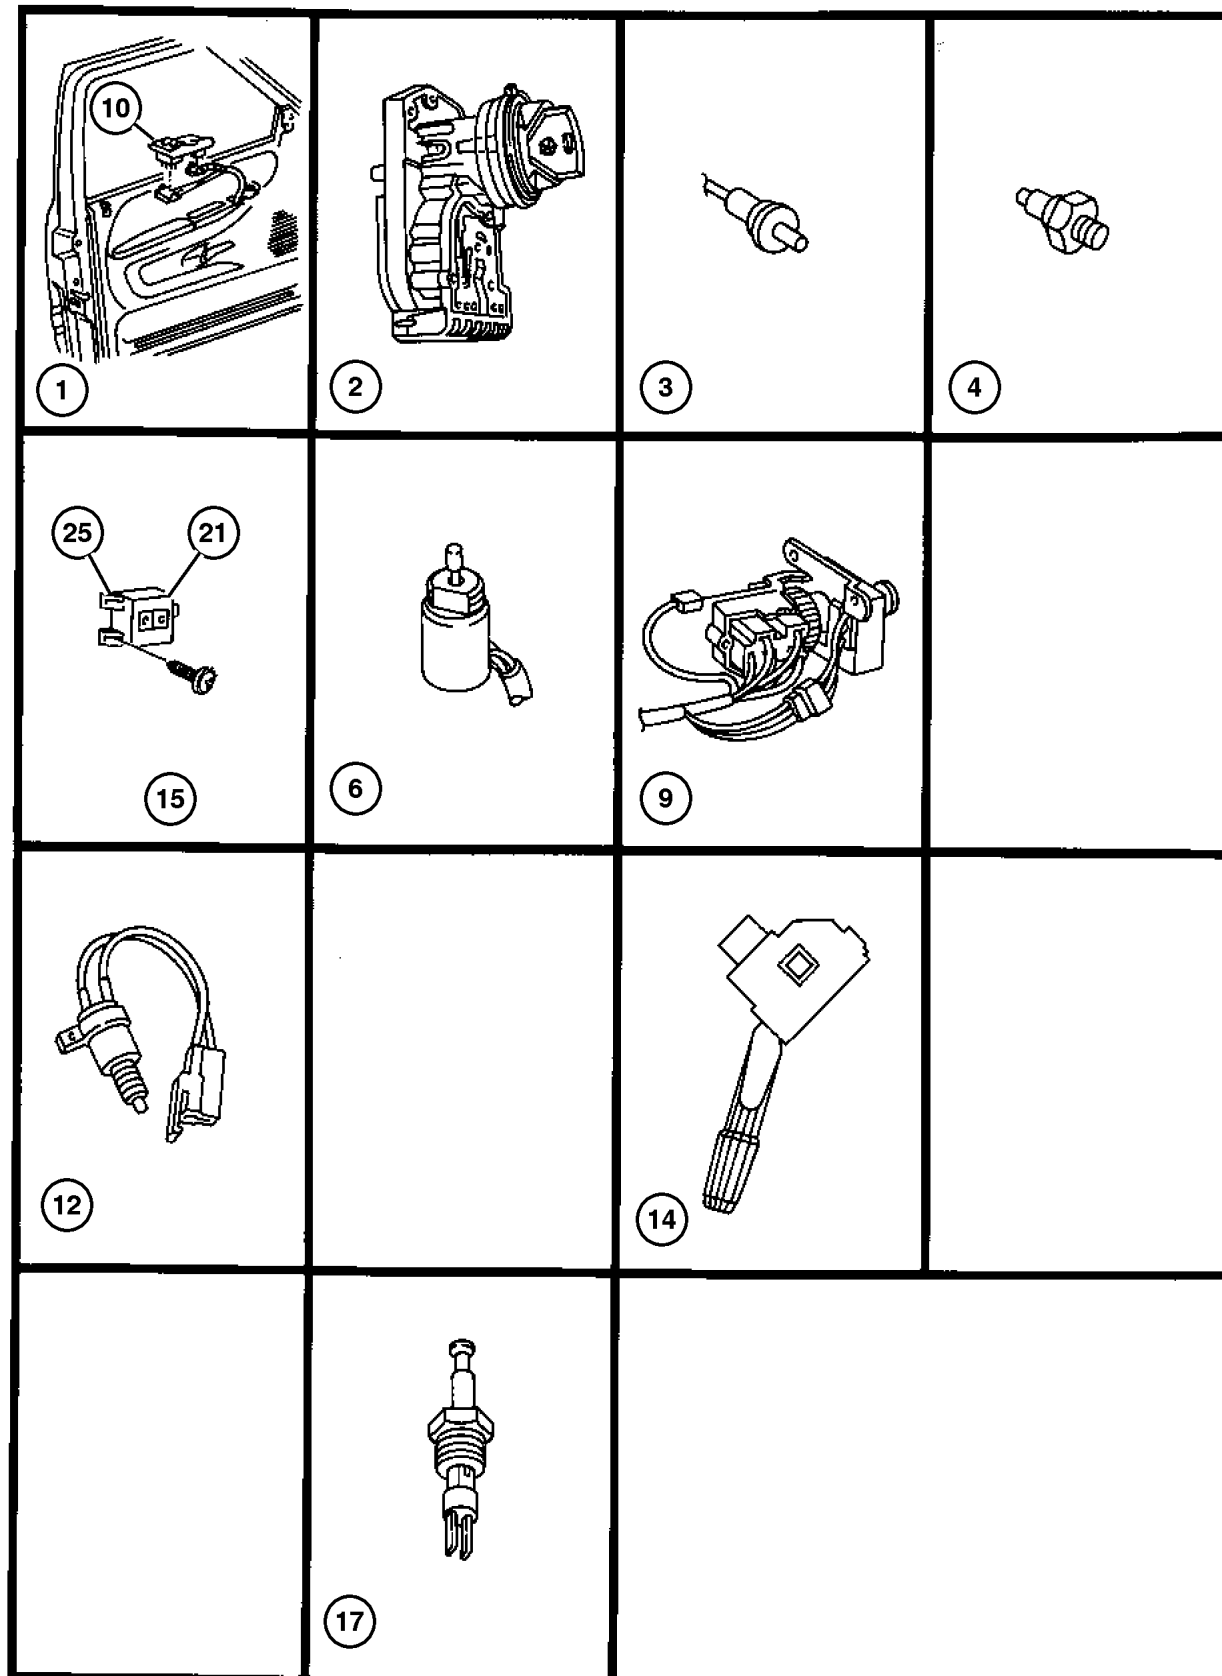Switches Figure 008-820



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
DBB = All Manual Transmissions									
DGO = All Automatic Transmissions									
ELO = All 5.2L 8 Cyl Gas Engines									
EMO = All 5.9L 8 Cyl Gas Engines									
EW0 = All 8.0L Gas Engines									
1	5602 0394	1							SWITCH, 2 Gang
2	5602 1346	1					DGO		SWITCH, Ignition Automatic Transmission w/Buzzer & Halo
		1					DBB		Manual Transmission w/Buzzer & Halo
3	4565 022	1							SWITCH AND LAMP, Glove Box
4	56028 181AB	1	1, 2, 3				DGP		SWITCH, Neutral, Safety, Back Up
-5	56021 912AA-	1							SWITCH, Window and Door Lock Up to 4/10/00 (3 Gang)
	56021 912AB-	1							4/10/00 & After (3 Gang)
6	5602 1311	1							SWITCH, Mirror
-7	6503 107	1	1, 6		31				NUT, Plastic, Mirror Mounting
-8	5600 7040	1							KNOB, Power Mirror Switch
9									SWITCH, Headlamp
	56021 673AD	1							w/Cargo Lamp
	56021 674AD	1							w/o Cargo Lamp
	56021 675AE	1							w/Cargo Lamp & Foglamp
10									BEZEL, Power Window/Door Lock
	56020 390AB	1							Switch
	56045 302AA	1							2 Gang
-11	4796 652	1							3 Gang
12	5016 294AB	1							CLIP, Bezel
-13	5602 1048	1					DGO		SWITCH PACKAGE, Stop Lamp
14	5269 377	1					DBB		SWITCH, Overdrive Lockout
15									SWITCH, Multifunction
	5013 874AA	1							BEZEL, Instrument Panel Switch
	5013 875AA	1							Canada
-16	4289 880	1	6						SWITCH, Hub Lock Indicator
17	4687 558	2							SWITCH, Door Ajar
-18									SWITCH, Disarm
	56045 449AB-	1							Door (Left)
	56045 450AB-	1							Door (Right)
-19									SWITCH, Seat


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, ELO = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DGO = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM, EMO = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DDO = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

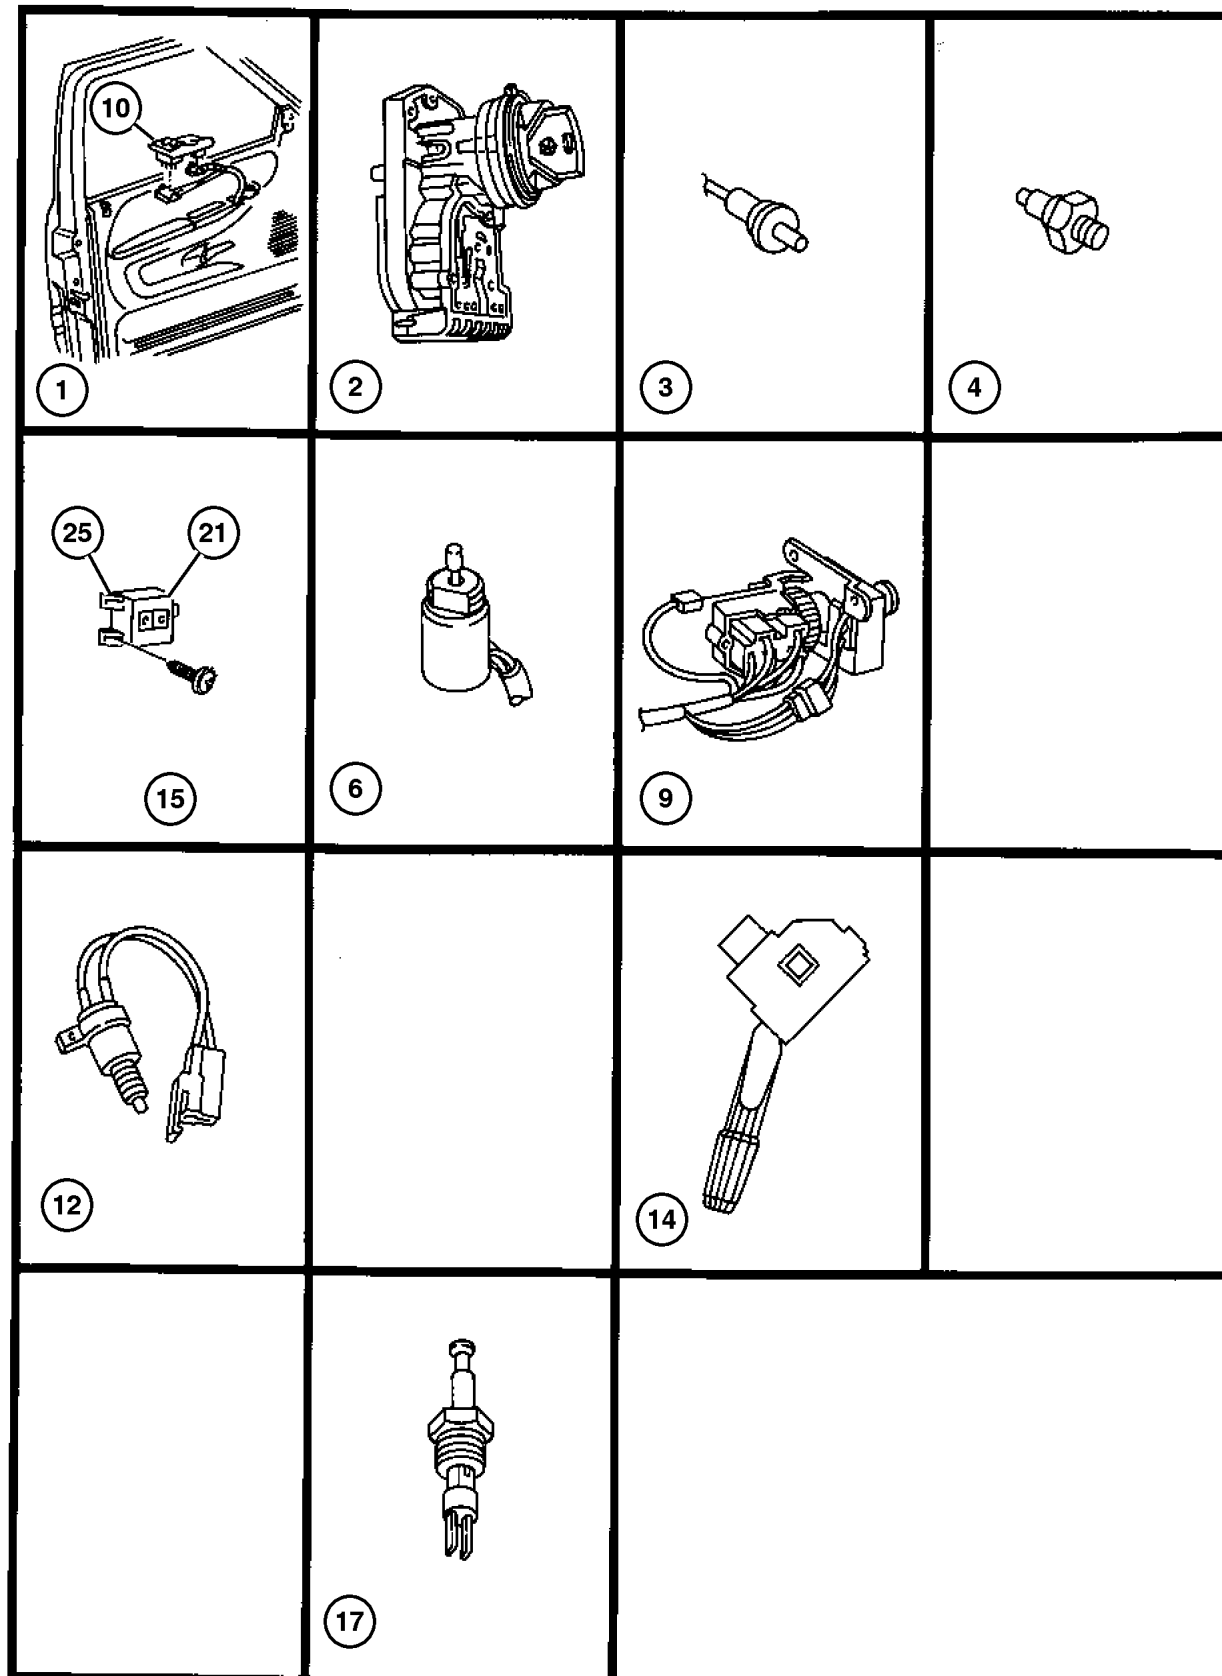Switches Figure 008-820



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	56045 106AA-	1			33, 34				Pasenger Side (8-Way)
	56045 025AA-	1			33, 34				Diver Side (8-Way)
-20	56045 177AC-	1							SWITCH, Passenger Airbag Disarm
21									BEZEL, Instrument Panel Switch
	5013 874AA	1							English
	5013 875AA	1							French/English
-22	53007 944AB-	1					DBB		SWITCH, Clutch Starter Interlock
-23									SENDING UNIT, Oil Pressure
	5603 1005	1				EW0			
		1				EL0, EM0			
-24									SWITCH, Heated Seat
	56045 098AB-	1							Right
	56045 099AB-	1							Left
25	56045 274AB	1							BEZEL, Switch, Heated Seats
-26									SWITCH, Remote Radio
	4685 619AB-	1							Right
	4685 632AB-	1							Left

DODGE RAM QUAD CAB/CLUB CAB (BE)


SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Horns
Figure 008-905

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	5602 0086	1							HORN AND BRACKET, High Note
-2	56020 085AB-	1							HORN, Low Note
-3	6101 718	4							SCREW AND WASHER, Oval Head, M6x1x25

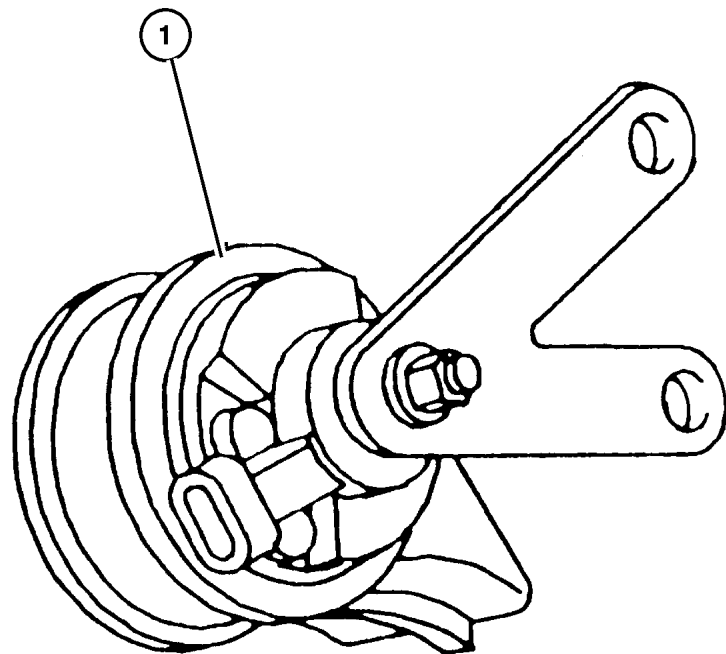

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM, EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Battery Tray & Cables
Figure 008-1020


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
DBB = All Manual Transmissions									
DG0 = All Automatic Transmissions									
EL0 = All 5.2L 8 Cyl Gas Engines									
EM0 = All 5.9L 8 Cyl Gas Engines									
ETC = 5.9L Cummins 24V Diesel Engine									
ETH = 5.9L HO Cummins Turbo Diesel									
ET0 = All 5.9L Turbo Diesel Engines									
EW0 = All 8.0L Gas Engines									
1	55275 126AE	1				ET0			TRAY, Battery Right
	55275 127AE	1							Left
-2	5523 5050	1							STUD PLATE, Battery Tray
3	6101 712	2							NUT, U, M6x1
4	5527 5220	1							STRAP, Battery
5	5523 5142	2							STUD, Battery Hold Down
6	5523 5051	1							PLATE, Battery Tray
-7									NUT AND WASHER, Hex Nut-Coned Washer, .25-20
	6033 560	4				EW0			
		1				EL0,			
						EM0			
8	56020 664AB	1				ETC	DG0		WIRING, Battery Positive Left
	56021 878AC	1				EL0,			
						EM0,			
						EW0			
	56017 788AB	1				ET0			Right
	56020 664AB	1				ETC	DBB		Left
	5602 0664	1				ETH	DBB		Left
9	56020 663AB	1				EL0,			WIRING, Battery Negative Battery/Alternator
						EM0,			
						EW0			
	56020 665AD	1				ET0			(Right)
	56020 688AC	1				ET0			(Left)
-10	5602 7332	1							SENSOR, Battery Temperature
-11	6500 284	2				ET0	DG0		NUT, Hex, M6x1.00
-12									NUT, Hex, .312-18, (NOT SERVICED) (Not Serviced)

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

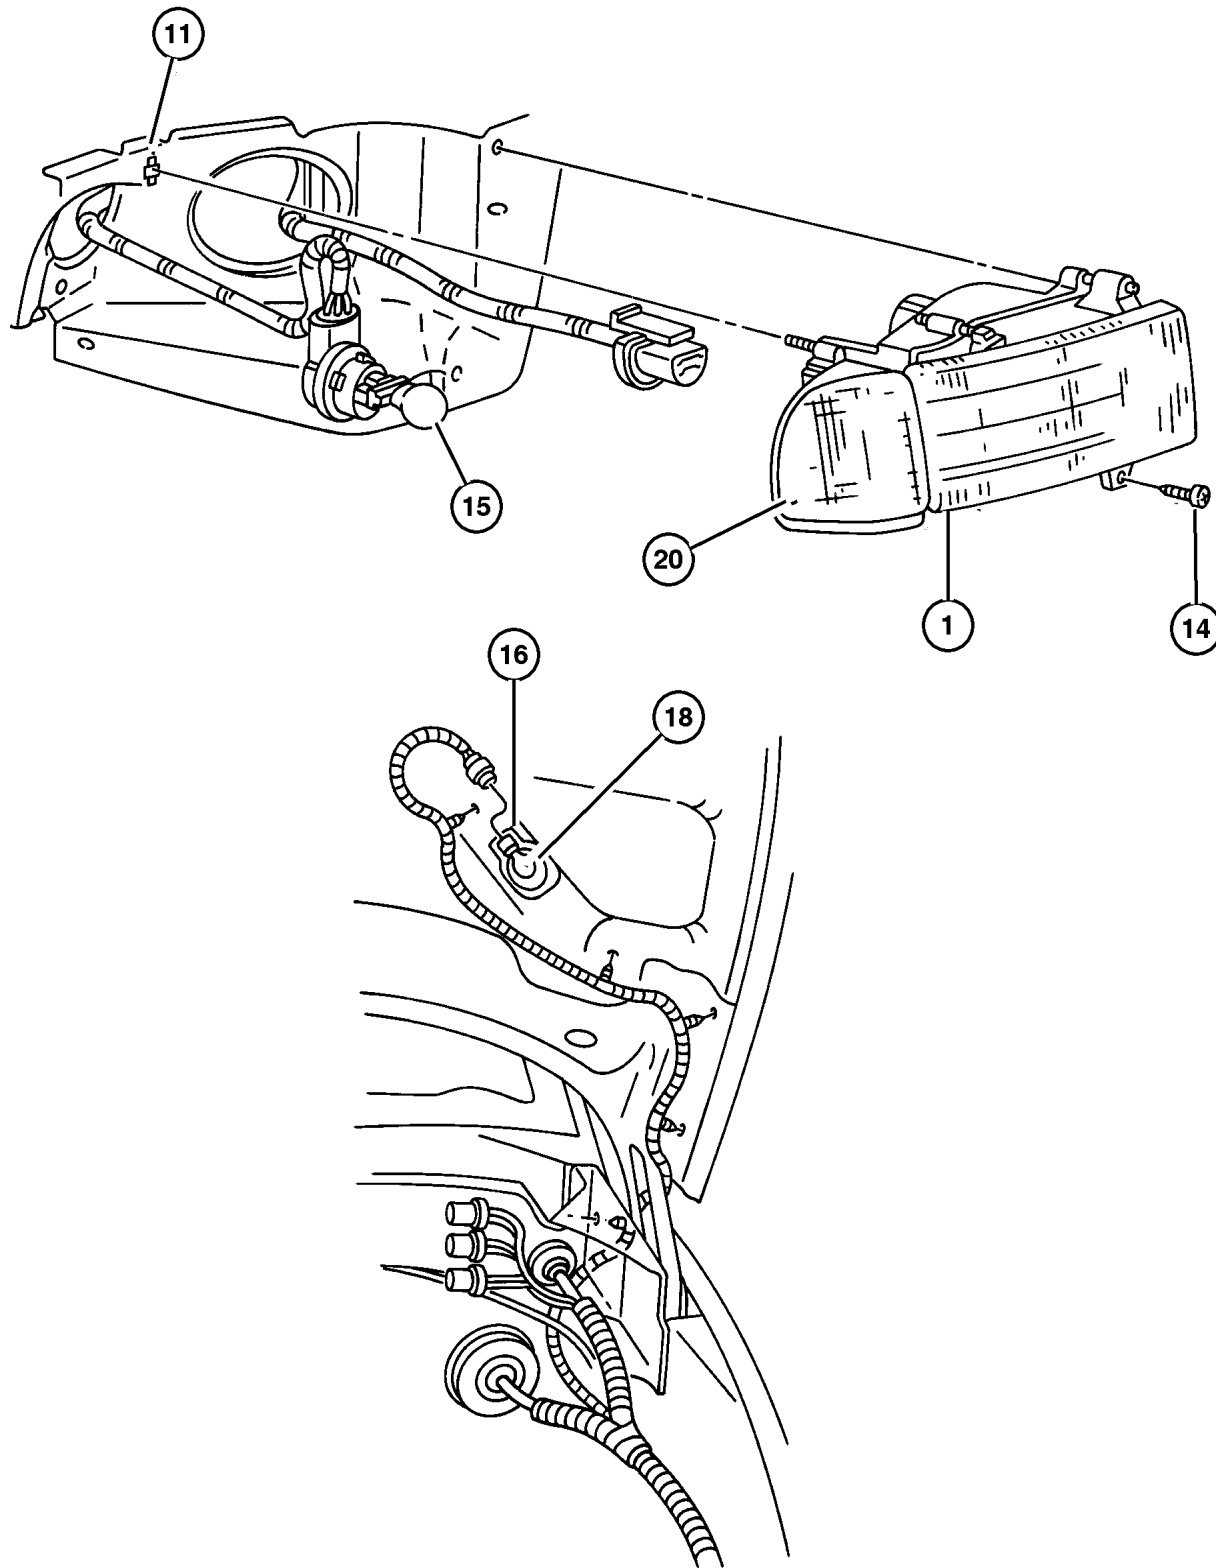Lamps Front Figure 008-1160



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
EL0 = All 5.2L 8 Cyl Gas Engines									
EM0 = All 5.9L 8 Cyl Gas Engines									
EW0 = All 8.0L Gas Engines									
1									LAMP, Headlamp Park And Turn
	55076 748AI	1							Right
	55076 749AI	1							Left
	55077 024AC	1							[LME], Right
	55077 025AC	1							[LME], Left
-2									BULB, Headlamp
	0154 824	1							9004LL
	0154 882AA-	1							Quad Headlamps
	L0009 007QL-	1							Quad Headlamps With Sport
-3									Option HEADLAMP
	55054 780AF-	1							Right
	55054 781AD-	1							Left
	55077 042AC-	1							Sport w/Quad H/Lamp, Right
	55077 043AC-	1							Sport w/Quad H/Lamp, Left
-4									LAMP, Park, Turn, Side Marker w/Quad H/Lamp, Right
	55077 032AB-	1							w/Quad H/Lamp, Left
	55077 033AB-	1							Right
	5505 4772	1							Left
	5505 4773	1							
-5									CARRIER, Headlamp
	55076 674AC-	1							H/Lamp/Park & Turn Signal w/o Quad H/Lamp, Right
	55076 675AC-	1							H/Lamp/Park & Turn Signal w/o Quad H/Lamp, Left
	55077 034AC-	1							H/Lamp/Park/Turn Signal w/Quad H/Lamp, Right
	55077 035AC-	1							H/Lamp/Park/Turn Signal w/Quad H/Lamp, Left
-6	6033 375AB-	1							SCREW, Special Head, .218-28x2.44
-7	55054 856AB-	1							SCREW, Aero Headlamp
-8									WELT, Headlamp To Grille
	5507 6746	1							Right
	5507 6747	1							Left
-9	4805 147	1							VENT, Headlamp
-10	J400 4262	3							PIN, Push, .15x.41
11	6502 776AB	2							CLIP, Lamp, Headlamp Mounting


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM, EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

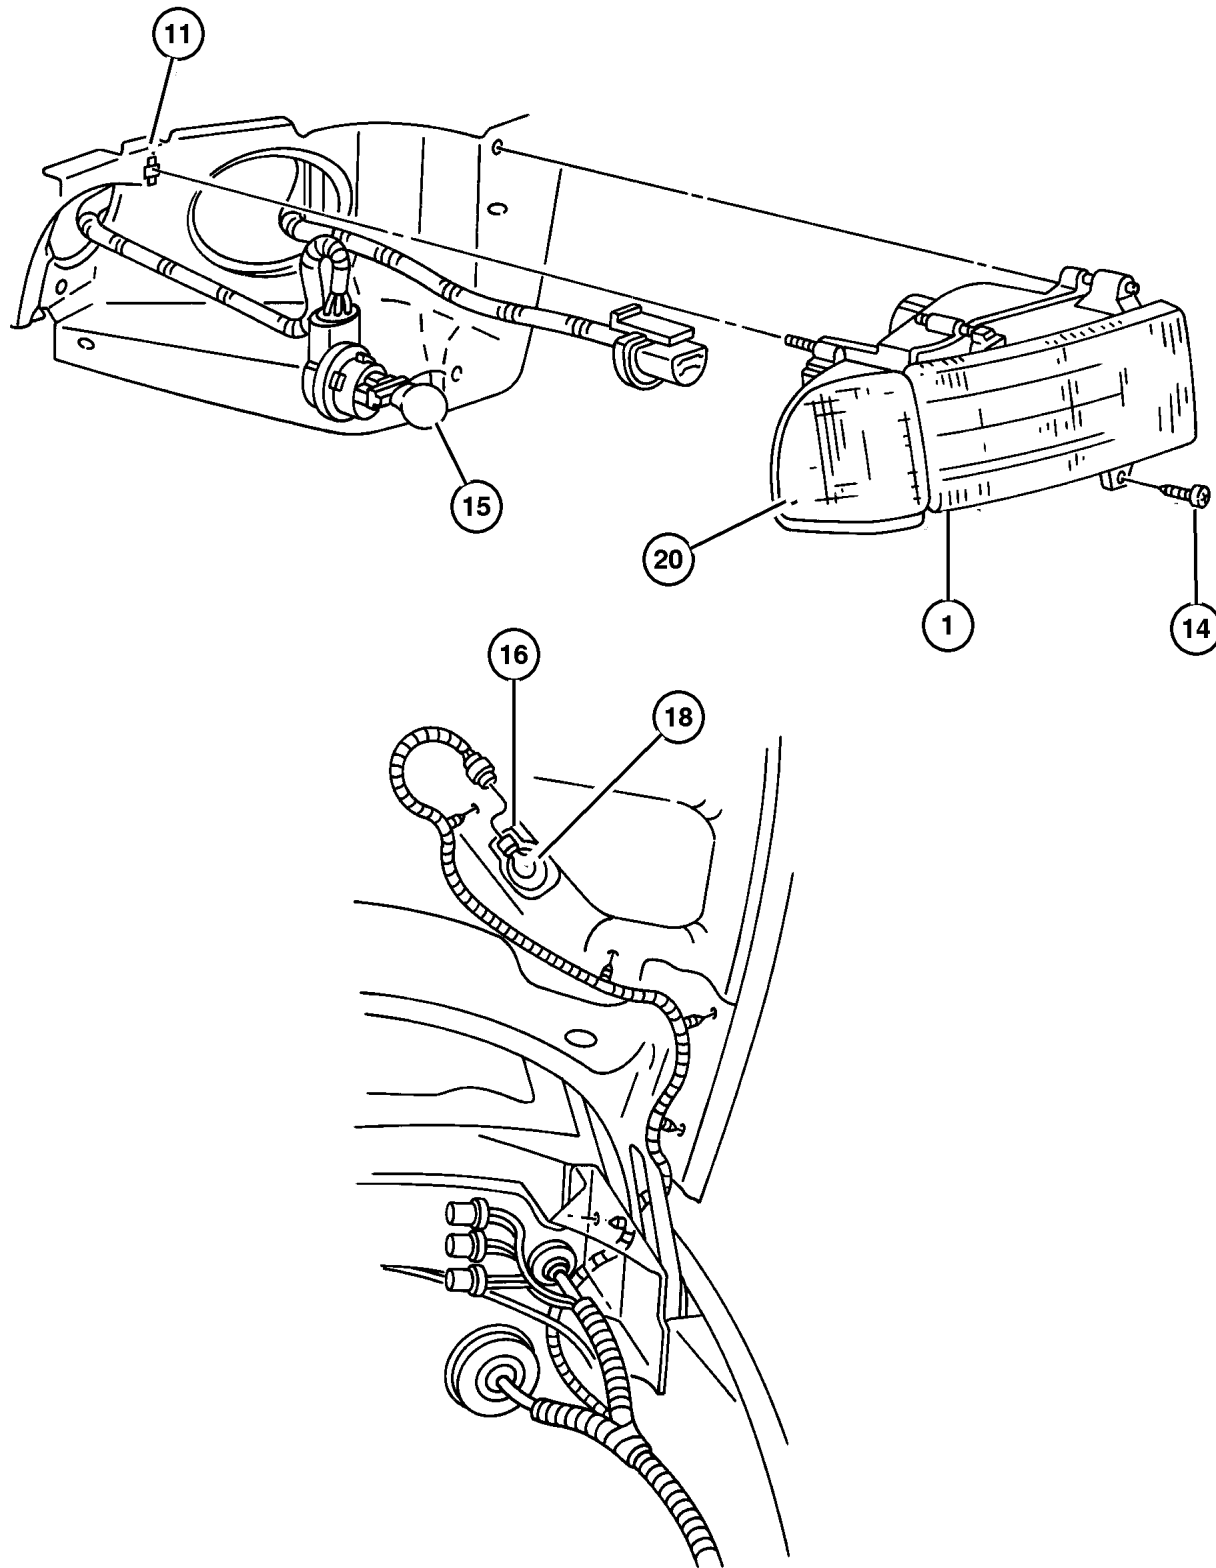Lamps Front
Figure 008-1160



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-12	6033 376	3							CLIP, Lamp, Aero Headlamp
-13	55077 046AA-	2							Adjusting Screw
14	6504 289	6							RETAINER, Headlamp Bulb
15	0154 525	2							SCREW, Hex Head
16	5602 1441	1							BULB, 3157A, Park & Turn Signal
-17	4897 446AA-	1							LAMP, Underhood
18	L000 0561	1							LENS, Lamp Module
-19	0154 554	1	2, 3, 7, 8			EL0, EM0, EW0			BULB, 561
									SCREW, Self Piercing, .25-14x.625
20									LAMP, Park, Turn, Side Marker
	5505 4772	1							Right
	5505 4773	1							Left
-21	4773 905	1							SOCKET AND WIRING, Turn Signal
-22									Lamp
									LAMP, Fog
	55076 940AB-	1							Right
	55076 941AB-	1							Left
	55076 942AB-	2							Sport
-23	4418 098	2							CLIP, Tube, Fog Lamp Wiring
-24	5013 490AA-	1							BULB, 896
-25	6035 422	4							BOLT, Square Head, .312-18x.875
-26	6035 423	4							NUT AND WASHER, Hex Coned, .312-18

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Lamps Rear
Figure 008-1170

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									LAMP, Tail Stop Turn
	55055 264AC	1							w/o Sport Package (Black), Right
	55055 265AC	1							w/o Sport Package (Black), Left
	5EK44 DX8AC	1							w/Sport Package (Black), Right
	5EK44 GW7AC	1							w/Sport Package (White), Right
	5EK44 PR4AC	1							w/Sport Package (Red), Right
	5EK44 SG8AC	1							w/Sport Package (Green), Right
	5EK44 VB3AC	1							w/Sport Package (Blue), Right
	5EK44 VYHAC	1							w/Sport Package (Yellow), Right
	5EK45 DX8AC	1							w/Sport Package (Black), Left
	5EK45 GW7AC	1							w/Sport Package (White), Left
	5EK45 PR4AC	1							w/Sport Package (Red), Left
	5EK45 SG8AC	1							w/Sport Package (Green), Left
	5EK45 VB3AC	1							w/Sport Package (Blue), Left
	5EK45 VYHAC	1							w/Sport Package (Yellow), Left
2	6035 455	4							SCREW, Tapping, .19-16x.625
3	6502 831	4							CLIP, Lamp
-4	L000 3157	4							BULB, 3157, Tail Lamp
-5	5602 1369	2							WIRING, Turn Signal and Back Up, Tail Lamp
6	5507 6850	AR							PANEL, License Plate
-7									LENS, License Lamp
	4357 065	1							w/o Rear Bright Step Bumper or w/o Body Color Bumper
	5505 4891	2							w/Rear Bright Step Bumper or w/ Body Color Bumper
8	4362 133	AR							SOCKET AND CABLE, License Lamp
9	5601 8807	2							WIRING, Liscense Lamp, [MBF, MBQ] With Socket
10									SCREW, (NOT SERVICED) (Not Serviced)
11	5505 4823	1							LAMP BAR, Tailgate, Without Lenses
12									LAMP
	5505 4819	3							Lens Tailgate (Red)
		2	3, 8				34		Rear Fenders Dually Red
13	5505 4820	2	3, 8				34		LENS, Clearance Lamp, Yellow, Dual
									Wheel Fender
14	5505 4821	2	3, 8				34		HOUSING, Clearance Lamp, Dual Wheel Fender

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Lamps Rear

Figure 008-1170

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
15	5505 4960	2	3, 8		34				WIRING, Clearance Lamp Jumper, (Dual Wheels)
-16									SCREW, Mounting, (NOT SERVICED) (Not Serviced)
-17	6504 118	5							U-NUT, M6 x 1.00, M6x1.00
18	5505 4824	1							WIRING, Tailgate
19									SCREW, (NOT SERVICED) (Not Serviced)
20									LAMP, High Mounted Stop
	5507 6688	1							w/Cargo Lamp
	5507 6689	1							w/o Cargo Lamp
-21	5505 4852	1							SEAL, High Mounted Stop Lamp
22									HOUSING, Lamp, Serv. Assy., (NOT SERVICED) (Not Serviced)
23									LENS, Taillamp, Serv. Assy., (NOT SERVICED) (Not Serviced)
24									LENS, High Mounted Stop Lamp, Serv. Assy., (NOT SERVICED) (Not Serviced)
25									WIRING, High Mounted Stop Lamp w/Cargo Lamp
	5017 192AA	1							w/o Cargo Lamp
	5017 193AA	1							
26	L000 0921	2							BULB, 921
27									LAMP, Fender Marker
	5505 4956	2	3, 8		34				Red (Dual Wheels)
	5505 4958	2	3, 8		34				Yellow (Dual Wheels)
28									BRACKET, Fender Lamp [Serviced w/Housing Assembly], (NOT SERVICED) (Not Serviced)

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Lamps, Dome Courtesy and Reading
Figure 008-1180


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	55077 067AA	5							LAMP, Cab
2	9421 330	2							BULB, PC194
3									SCREW, (NOT SERVICED) (Not Serviced)
-4	J400 0141	10							NUT, Square, .286x.355
5	JV76 TL2	1							LAMP, Dome, Beige
6	0154 762	1							BULB, 579
7									BEZEL, Dome Lamp, Serviced w/ Dome Lamp, (NOT SERVICED) (Not Serviced)
8									SCREW, Dome Lamp Mtg., (NOT SERVICED) (Not Serviced)
9									LAMP, High Mounted Stop
	5507 6688	1							Hi-mounted & Cargo w/Cargo Lamp
	5507 6689	1							Hi-mounted & Cargo w/o Cargo Lamp
10	5505 4852	1							SEAL, High Mounted Stop Lamp
11	5505 4892	1							WIRING, High Mounted Stop Lamp Hi-mounted & Cargo w/o Cargo Lamp
	5505 4893	1							Hi-mounted & Cargo w/Cargo Lamp

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

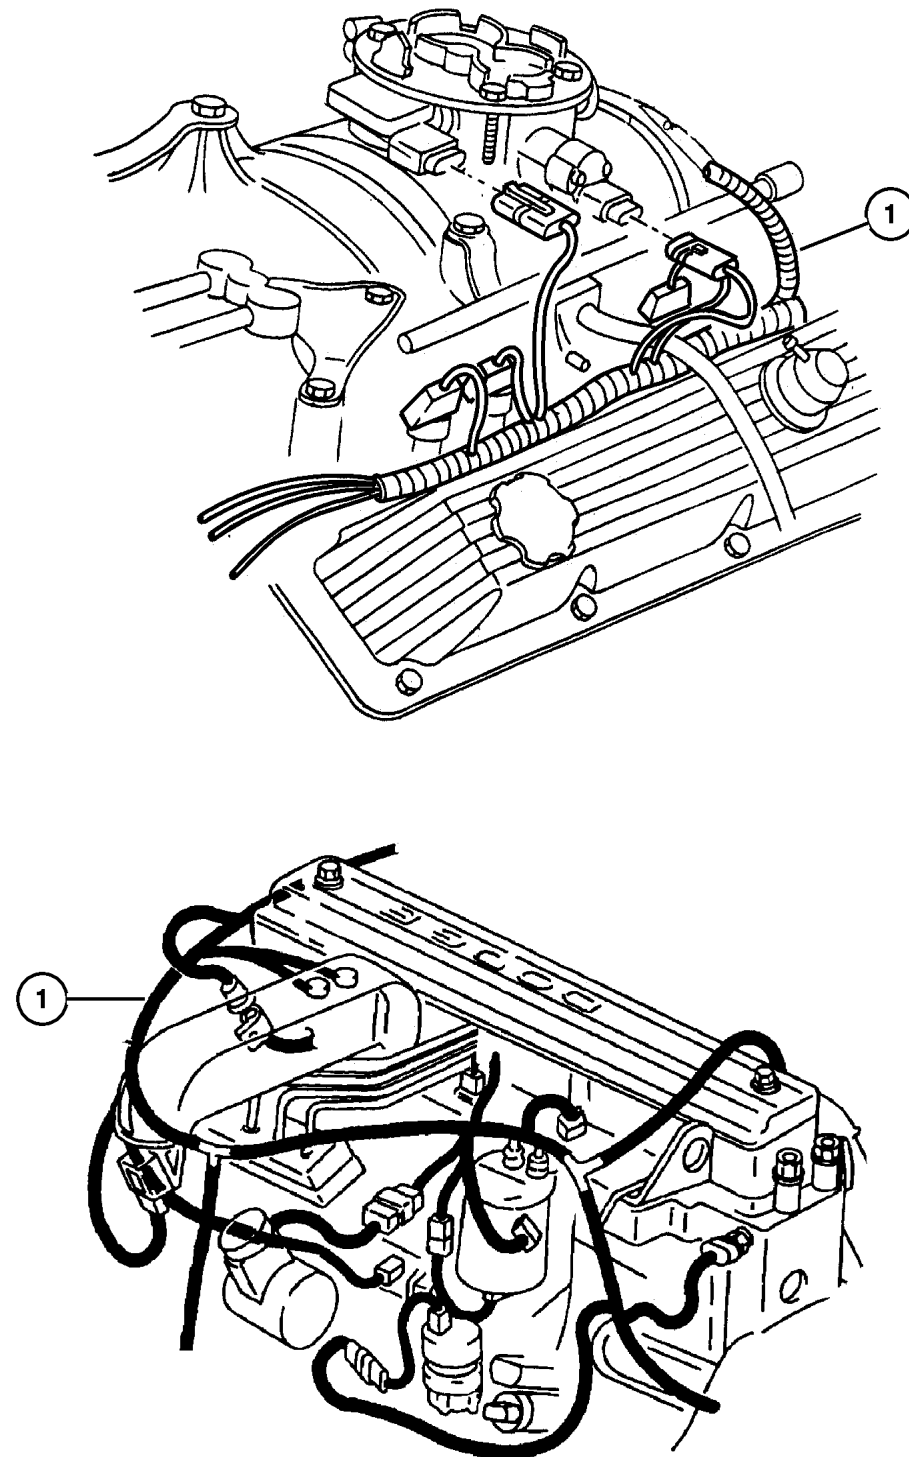Wiring, Engine Figure 008-1220



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
EL0=5.2L Engine EML / EMM=5.9L MAGNUM SMPI Engine EW0=8.0L Engine ETC=5.9L Cummins 24V Engine ET0=5.9L Turbo Diesel Engine DG0=Automatic Transmission DBB-Manual Transmission DDC=5 Speed HD Manual Transmission DDP=5 Speed Manual Transmission									
1	5015 722AA	1				ETC	DBB		WIRING, Engine
		1				ETC	DG0		Federal Emission [tagged 3935879]
		1				ETC	DBB		California Emission [tagged 3935879]
		1				ETC	DG0		California Emission [tagged 3935879]
	56045 319AD	1				ET0	DBB		Up to 12/23/99
	56045 320AD	1				ET0	DG0		Up to 12/23/99
	56045 610AC	1				EW0	DG0		
	56045 611AD	1				EW0	DBB		
	56045 726AF	1				EL0	DDC		
	56045 727AF	1				EL0, EML	DDP		
	56045 728AE	1				EL0, EML	DG0		Federal Emission
	56045 729AF	1				EMM	DBB		
	56045 730AE	1				EMM	DG0		Federal Emission
	56045 950AE	1				EL0, EML	DG0		California Emission
	56045 952AE	1				EMM	DG0		California Emission
	5017 790AA	1				ETH	DBB		Federal Emission
		1				ETH	DBB		California Emission
	56045 319AE	1				ET0	DBB		12/23/99 & After
	56045 320AE	1				ET0	DG0		12/23/99 & After
	5015 722AB	1				ETC	DBB		Federal Emission [tagged 3946665]
		1				ETC	DG0		Federal Emission [tagged 3946665]
		1				ETC	DBB		California Emission [tagged 3946665]
		1				ETC	DG0		California Emission [tagged 3946665]



DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

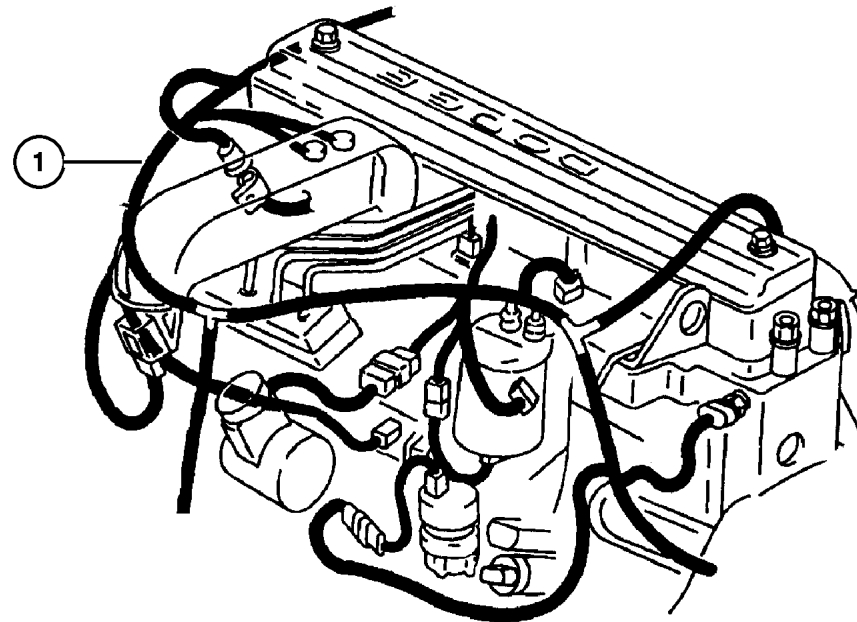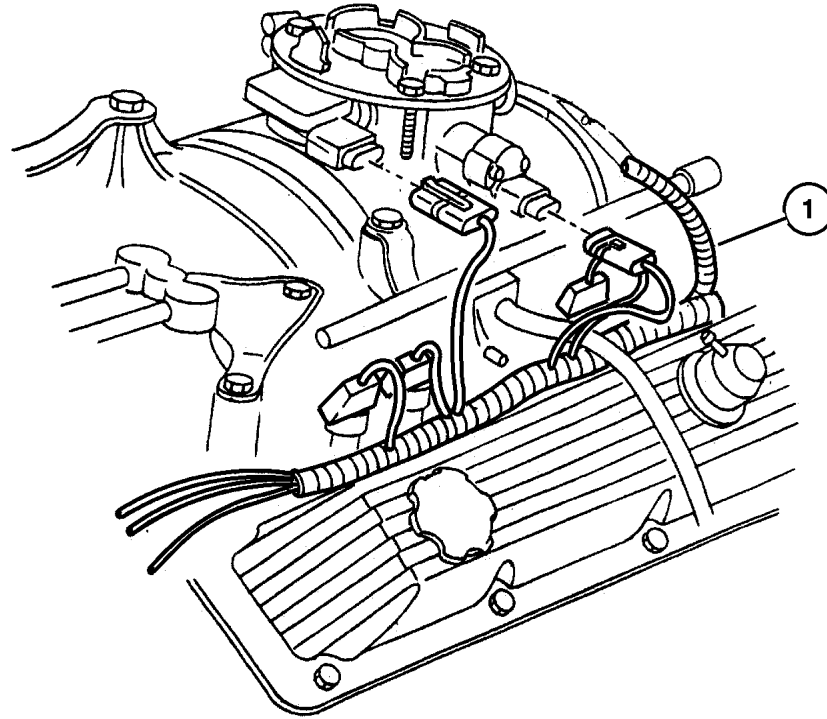Wiring, Engine Figure 008-1220




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-2	5601 9829	1	6, 7, 8						WIRING, Indicator Lamp, 4x4
-3									Indicator Lamp
	4856 792	1							STRAP, Ground
	4430 302	1				ELO,			Radio
									Engine to I/Panel
		2				EM0			
	4372 040	1				EW0			Engine to I/Panel
-4	5011 852AA-	1							Radio Noise Suppression Ground
						ETC			SENSOR, Temperature Sending
-5	56021 908AC-	1							Unit, Diesel Engine
						ET0			WIRING, Jumper, Diesel Engine

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DGO = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM, EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

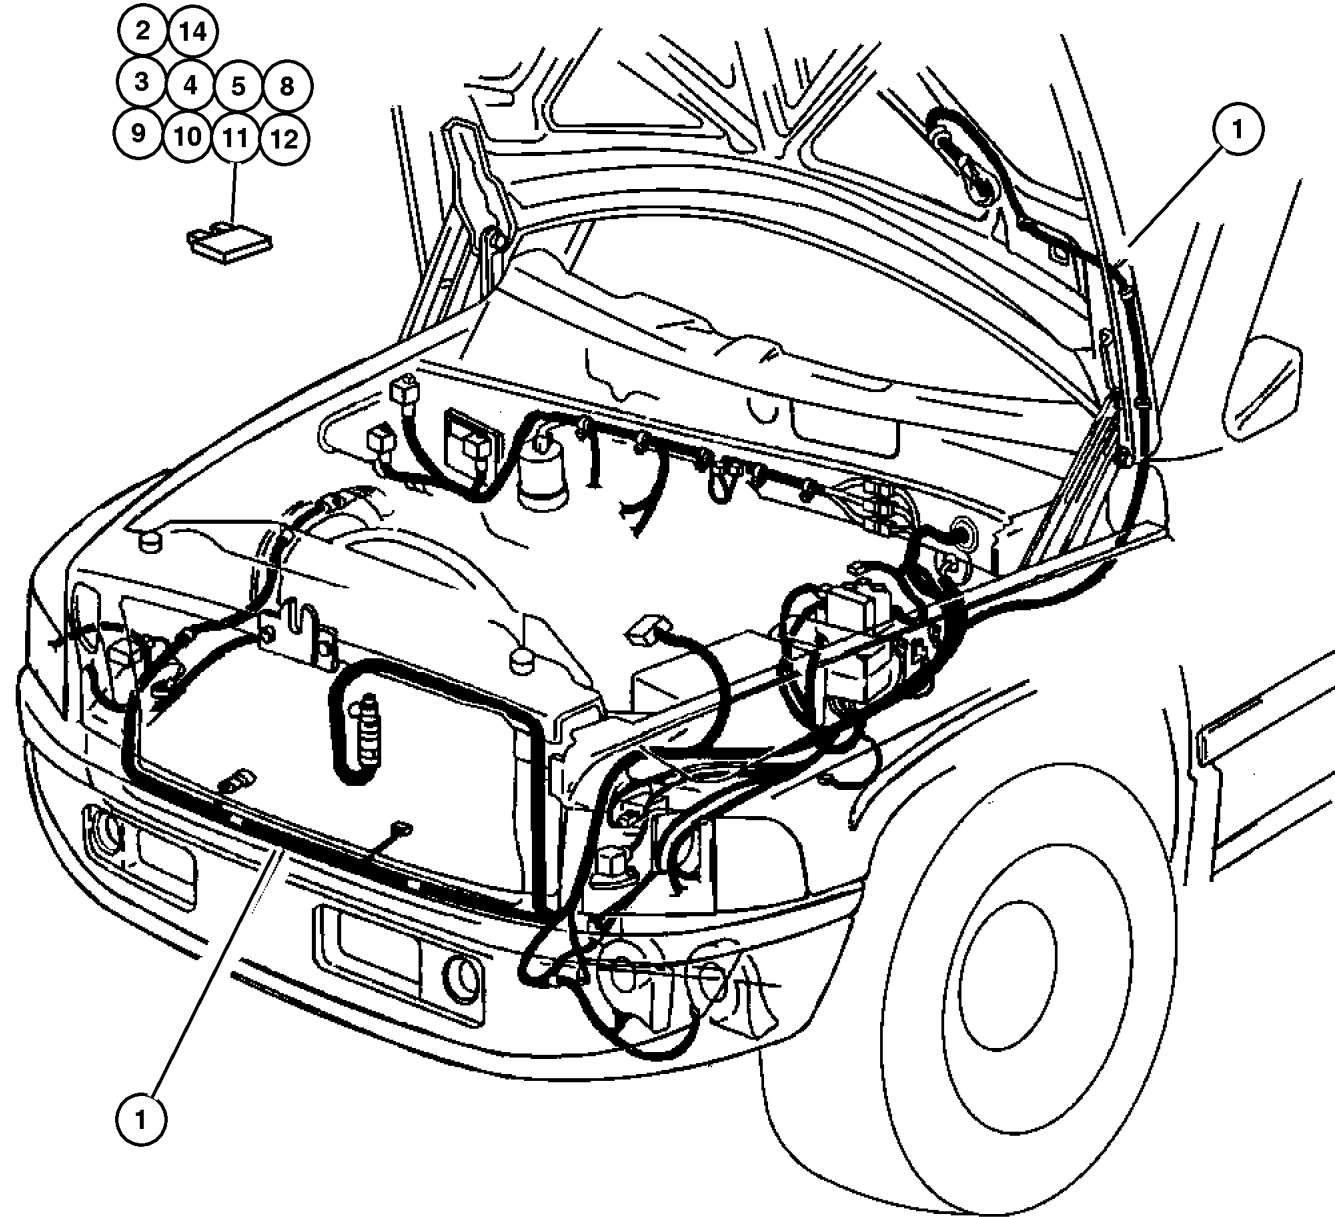Wiring, Headlamp / Dash Figure 008-1320



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: DG0 = All Automatic Transmissions EL0 = All 5.2L 8 Cyl Gas Engines EM0 = All 5.9L 8 Cyl Gas Engines ET0 = All 5.9L Turbo Diesel Engines EW0 = All 8.0L Gas Engines									
1	56045 424AD	1				EL0, EM0, EW0			WIRING, Headlamp to Dash W/o Quad Headlamp Canada
	56045 425AD	1				ET0			w/o Quad Headlamp
	56045 428AD	1				ET0			w/Quad Headlamp
	56045 429AD	1				EL0, EM0, EW0			w/Quad Headlamp (CANADA)
	56045 430AD	1				ET0			w/Quad Headlamp (CANADA)
	56045 554AD	1				EL0, EM0	DG0		California Emission w/Quad Headlamp
	56045 420AD	1				EL0, EM0, EW0			Federal & Leaded Fuel Emission w/Power Disc/Rear Drum
	56045 421AD	1				EL0, EM0, EW0			Federal & Leaded Fuel Emission w/Power Disc/Rear Drum, Foglamp/Overhead Console w/ Trip & Compass & Keyless Entry Remote
	56045 422AD	1				EL0, EM0, EW0			Federal & Leaded Fuel Emission w/Power Disc/Rear Drum, Trailer Tow & Foglamp
	56045 423AD	1				EL0, EM0, EW0			Federal & Leaded Fuel Emission w/ABS, Foglamp/Overhead Console w/Trip & Compass & Keyless Entry Remote
	56045 427AD	1				EL0, EM0, EW0			Federal & Leaded Fuel Emission w/Quad Headlamp
	56045 552AD	1				EL0, EM0	DG0		California Emission w/o Quad Headlamp
	56045 426AE	1				ET0			w/o Quad Headlamp (CANADA)
2	6102 075AA	3							FUSE CARTRIDGE, 20 Amp
3	6102 076AA	2							FUSE CARTRIDGE, 30 Amp


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM, EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

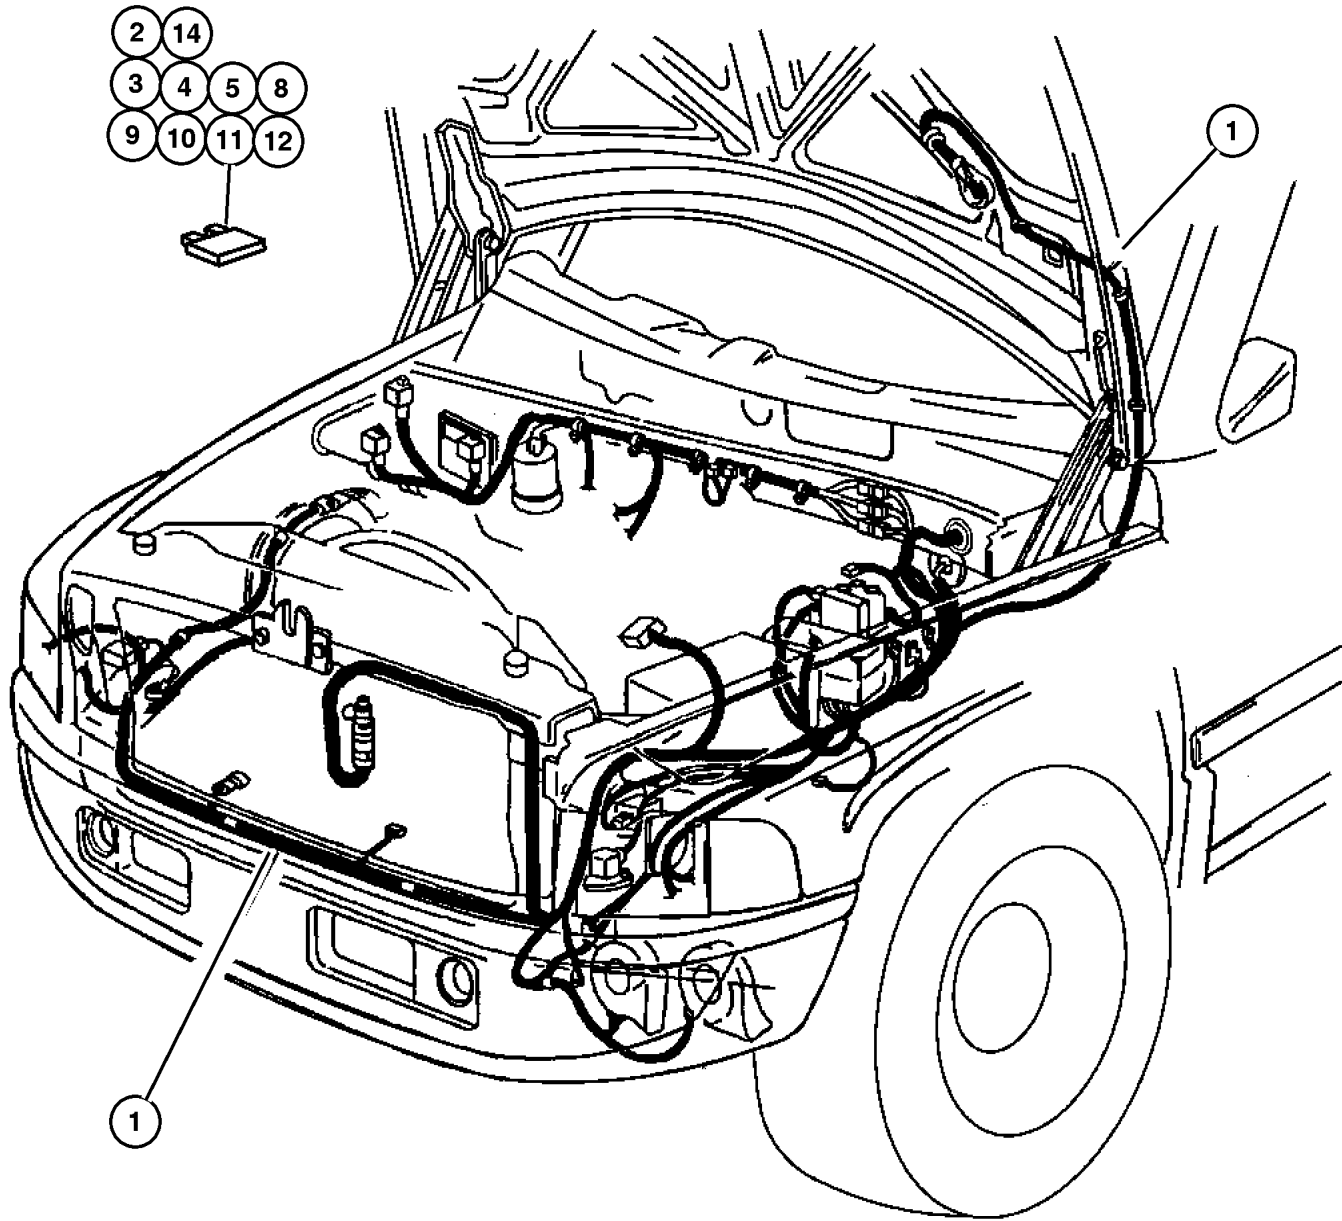Wiring, Headlamp / Dash
Figure 008-1320




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
4	6102 077AA	4							FUSE CARTRIDGE, 40 Amp
5	6102 078AA	2							FUSE CARTRIDGE, 50 Amp
-6	5601 7713	1							PULLER, Fuse
-7	5602 1167	1							COVER, Power Distribution Center Lower
	56045 543AC-	AR							Up to 01/31/00, Upper
	56045 543AD-	AR							01/31/00 & After, Upper
8	00AT C20	1							FUSE, Standard, 20 Amp, Yellow
9	00AT M20	1							FUSE, Mini, 20 AMP, Yellow
10	00AT M15	1							FUSE, Mini, 15 AMP, Light Blue
11	00AT M10	1							FUSE, Mini, 10 AMP, Red
12	4687 835	1							FUSE, Mini, 25 Amp, Natural
-13	4638 094	5							RELAY PACKAGE, Electrical
14	4671 168	1							RELAY, Mini
-15	6101 757	1							FUSIBLE LINK, 140 AMP
-16	4773 905	1							SOCKET AND WIRING, Turn Signal Lamp

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

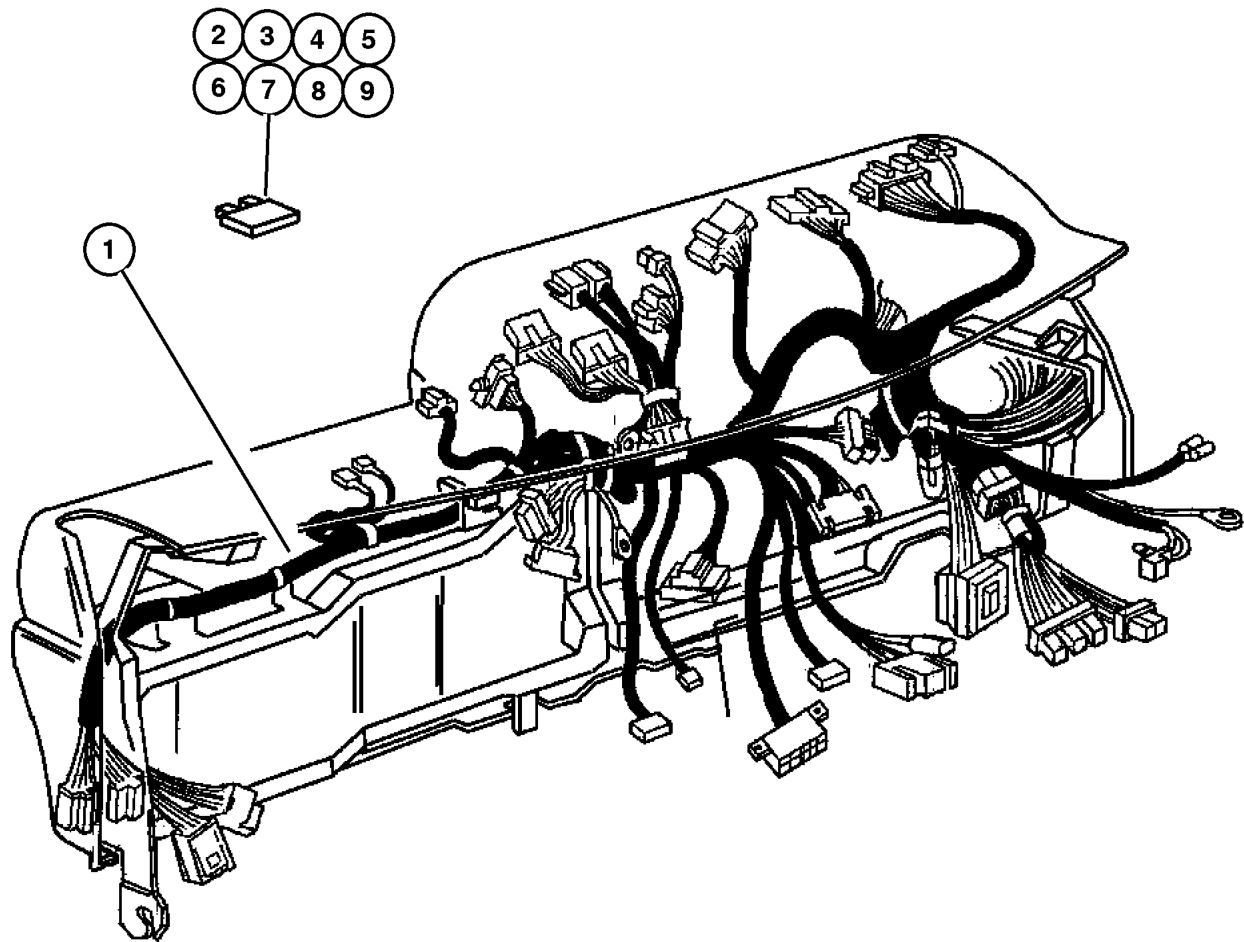Wiring, Instrument Panel
Figure 008-1420




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									WIRING, Instrument Panel
	56045 361AD	1							w/Heated Seats
	56045 362AD	1							w/Infinity Stereo, Keyless Entry, Power Seats & w/o Heated Seats
	56045 363AD	1							w/o Infinity Stereo, w/o Power
	56045 364AD	1							Seats, Heated Seats & w/Keyless Entry
	56045 365AD	1							w/Infinity Stereo, Power Seats, Power Mirrors & Foglamp
	56045 768AC	1							w/o Infinity Stereo,Keyless Entry, Power Seats, Power Mirrors, Foglamp & w/o Heated Seats (Base Model)
2	00AT M10	1							FUSE, Mini, 10 AMP, Red
3									FUSE, Mini, 15 AMP, Light Blue
	00AT M15	1							
	6101 487	6							
4	00AT M20	1							FUSE, Mini, 20 AMP, Yellow
5	00AT C20	1							FUSE, Standard, 20 Amp, Yellow
6	6102 078AA	2							FUSE CARTRIDGE, 50 Amp
7	6102 077AA	4							FUSE CARTRIDGE, 40 Amp
8	6102 076AA	2							FUSE CARTRIDGE, 30 Amp
9	6102 075AA	3							FUSE CARTRIDGE, 20 Amp
-10	5601 7713	1							PULLER, Fuse
-11	4604 235	2							BREAKER, Circuit
-12	5600 7348	1							FLASHER
-13	4671 168	1							RELAY, Mini
-14	4638 094	5							RELAY PACKAGE, Electrical
-15	56045 178AA-	1							WIRING, Instrument Panel Jumper, Ash Receiver Lamp
-16	56045 391AB-	1							JUNCTION BLOCK, Relay

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

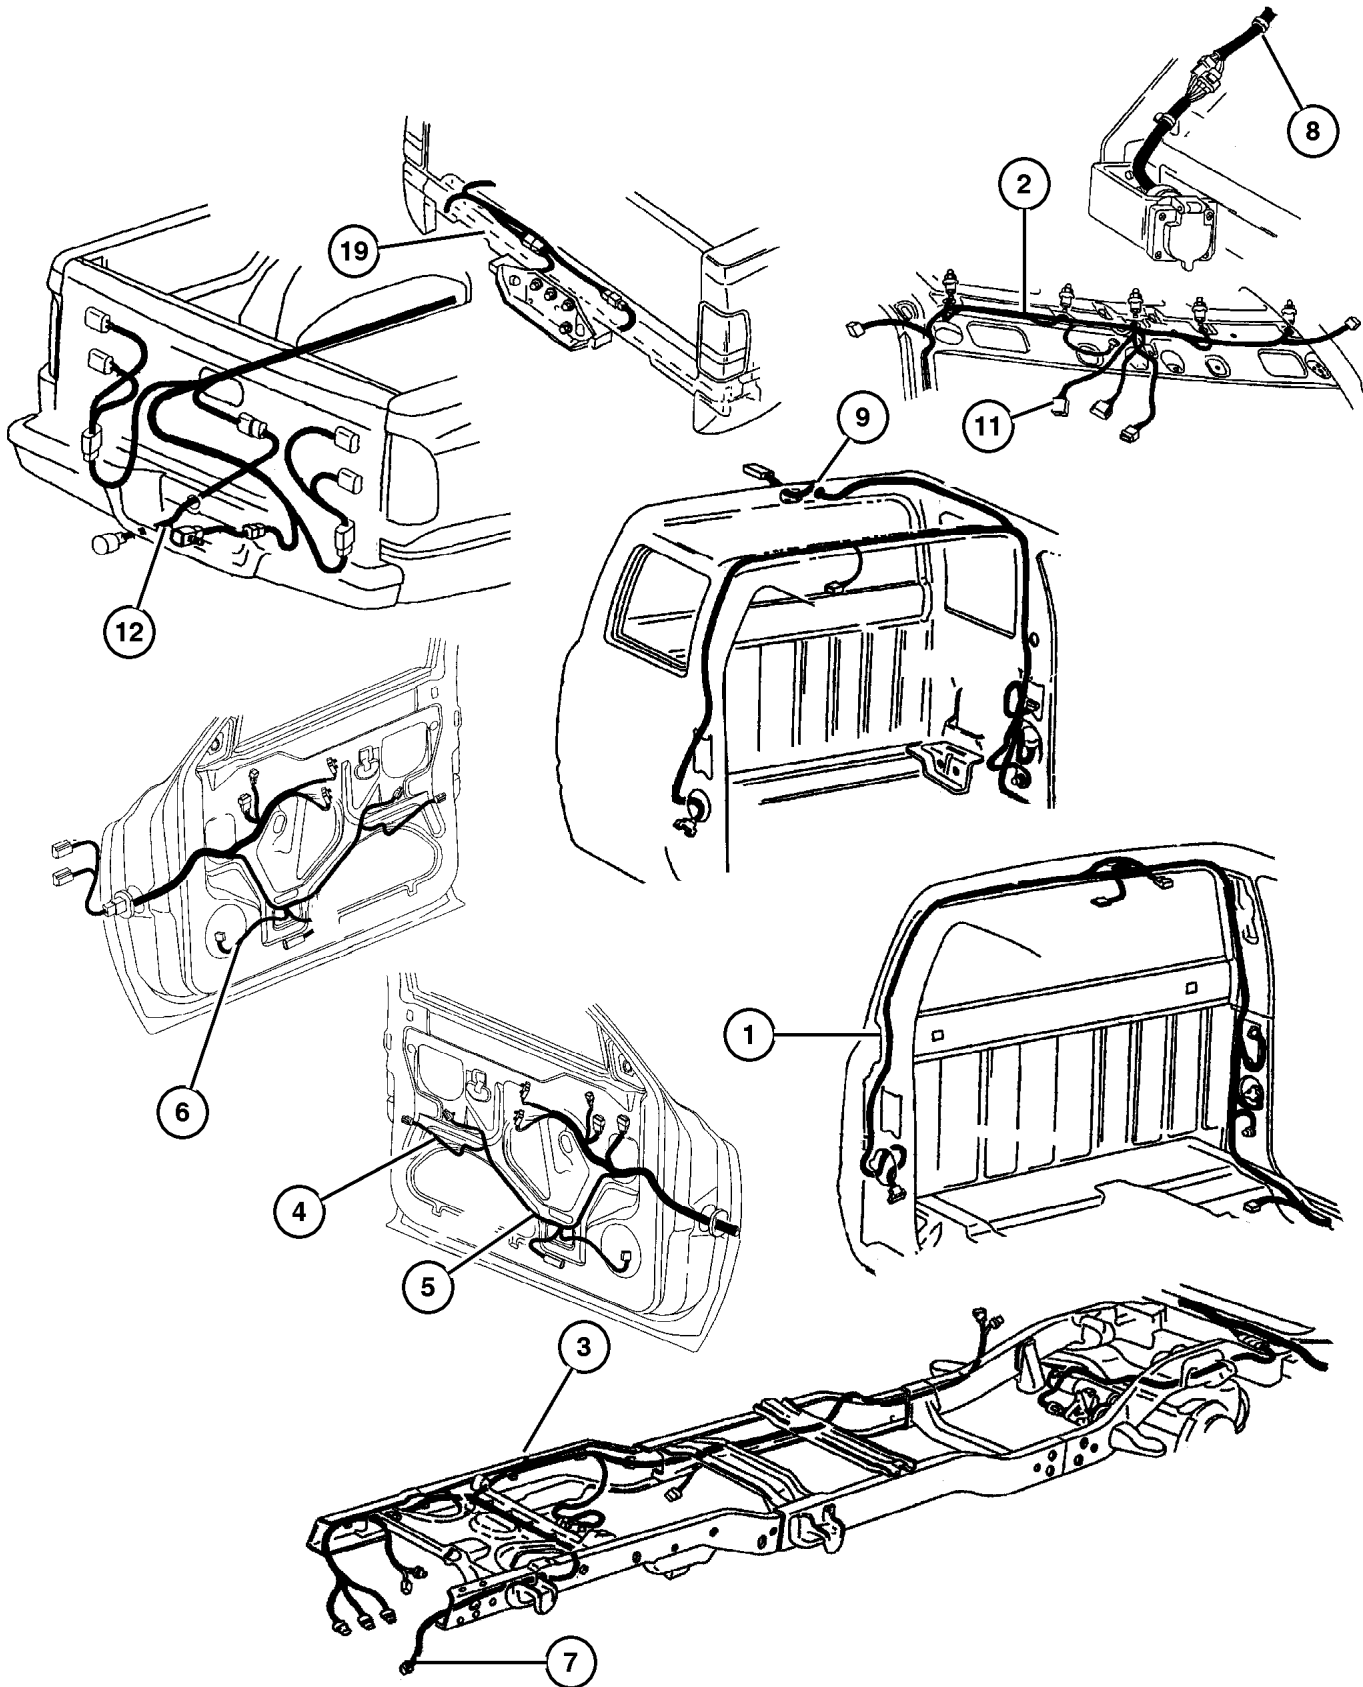Wiring, Body & Accessories
Figure 008-1520




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	WIRING, Body								
	56045 350AB	1	1, 6		31				w/o Infinity Stereo, Keyless Entry, Power Seats, Power Window & w/o Power Locks
	56045 351AB	1	1, 6		31				w/o Infinity Stereo, w/Power Seats, Power Windows, Power Locks & w/ or w/o Keyless Entry
	56045 352AB	1	1, 6		31				w/o Infinity Stereo & w/Keyless Entry
	56045 353AB	1	1, 6		31				w/Infinity Stereo & w/o Keyless Entry
	56045 354AB	1	1, 6		31				w/Infinity Stereo & Keyless Entry
	56045 355AB	1			33, 34				w/o Infinity Stereo, Keyless Entry, Power Seats, Power Window, Power Locks & w/o Heated Seat
	56045 357AB	1			33, 34				w/o Infinity Stereo, w/o Heated Seats & w/Keyless Entry
	56045 358AB	1			33, 34				w/Infinity Stereo, w/o Keyless Entry & w/o Heated Seats
	56045 359AB	1			33, 34				w/Infinity Stereo, Keyless Entry & w/o Heated Seats
2	56045 360AB	1			33, 34				w/Heated Seats
	WIRING, Overhead Console								
	5013 607AA	1							w/Overhead Console w/Trip/ Compass & w/o Security Alarm (w/o L.E.D.)
	5013 608AA	1							w/Overhead Console w/Trip/ Compass & w/Security Alarm (w/ L.E.D.)
	5013 609AA	1							w/Mini Overhead Console
	56045 921AA	1							w/Overhead Console w/Trip/ Compass & w/o Clearance Lamp
	56045 922AB	1							w/Overhead Console w/Trip/ Compass & w/ Clearance Lamp
	56045 923AA	1							w/Mini Overhead Console & w/o Clearance Lamp
	56045 924AB	1							w/Mini Overhead Console & w/ Clearance Lamp
		1							w/ Clearance Lamp & w/o Overhaed Console
3	WIRING, Chassis								

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

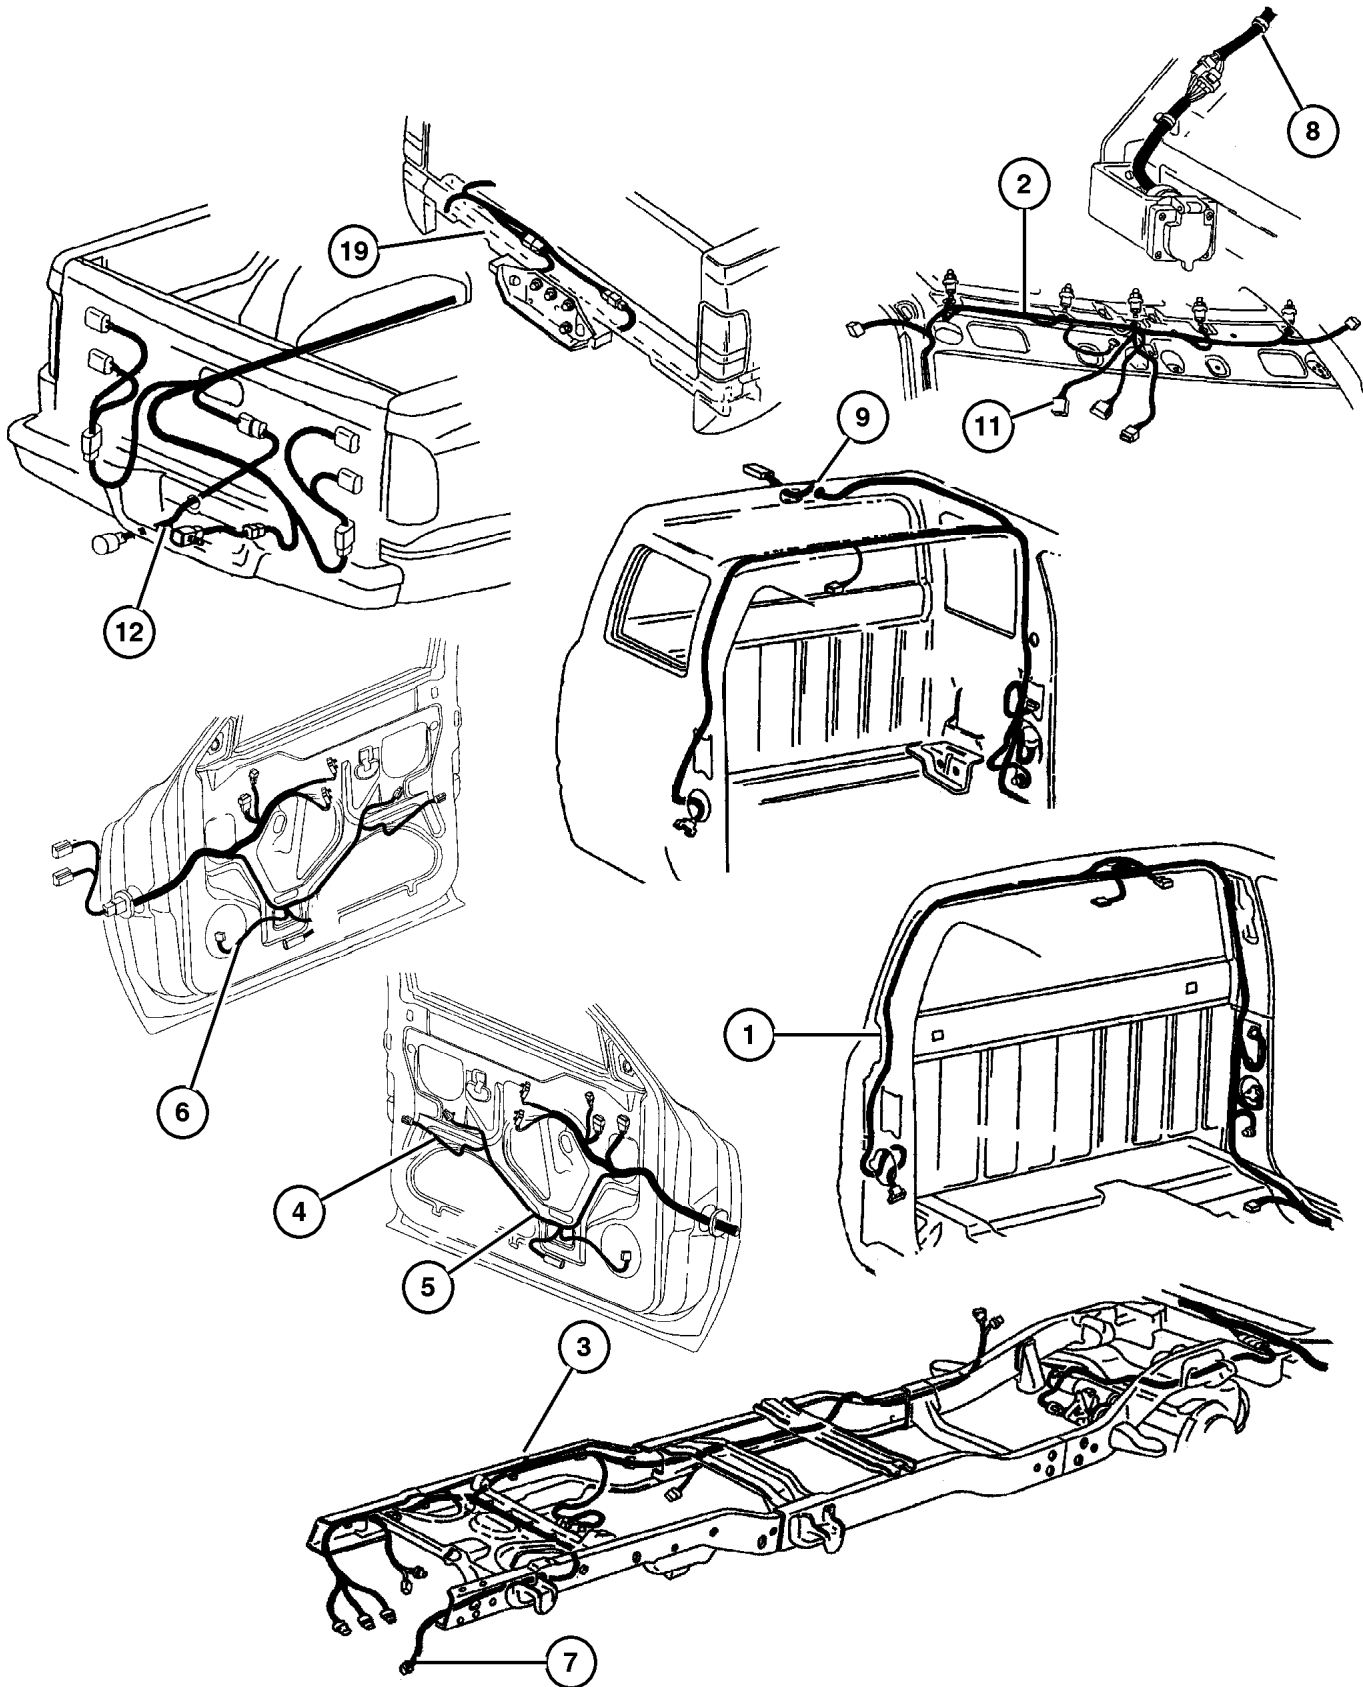Wiring, Body & Accessories
Figure 008-1520




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
4	56045 517AC	1							w/o Trailer Tow
	56045 518AC	1							w/Trailer Tow
	56045 242AB	1							WIRING, Door w/Power Mirror, w/o Infinity Stereo, Power Locks & Windows, Right
									Door
	56045 244AB	1							w/o Infinity Stereo, w/Power Locks & Windows, Right Door
	56045 245AB	1							w/Infinity Stereo, Power Locks & Windows, Right Door
	56045 137AB	2							w/o Power Mirror, Infinity Stereo, Power Locks & Windows (Base Model), Right Door
5	56045 238AB	1							WIRING, Door w/Power Mirror, w/o Infinity Stereo, Power Locks & Windows, Left Door
	56045 240AB	1							w/o Infinity Stereo, w/Power Locks & Windows, Left Door
	56045 241AB	1							w/Infinity Stereo, Power Locks & Windows, Left Door
	56045 137AB	2							w/o Power Mirror, Infinity Stereo, Power Locks & Windows (Base Model), Left Door
6	56020 697AB	2			33, 34				WIRING, Door w/o Infinity, Rear Door
	56020 698AB	2			33, 34				w/Infinity, Rear Door
7	5602 1369	2							WIRING, Turn Signal and Back Up
8	56020 143AD	1							WIRING, Trailer Tow
9	5017 192AA	1							WIRING, High Mounted Stop Lamp w/Cargo Lamp
	5017 193AA	1							w/o Cargo Lamp
-10	56038 366AB-	1							CONNECTOR, 7 Way
11	5602 0190	2							WIRING, Mirror Jumper
12	5505 4824	1							WIRING, Tailgate, w/Dual Rear Wheel
-13	5601 6895	1							WIRING, Fender Lamp, w/Dual Rear Wheel
-14	56021 863AB-	1							WIRING, Fog Lamp Jumper w/o Sport Package
	56045 212AC-	1							w/Sport Package

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

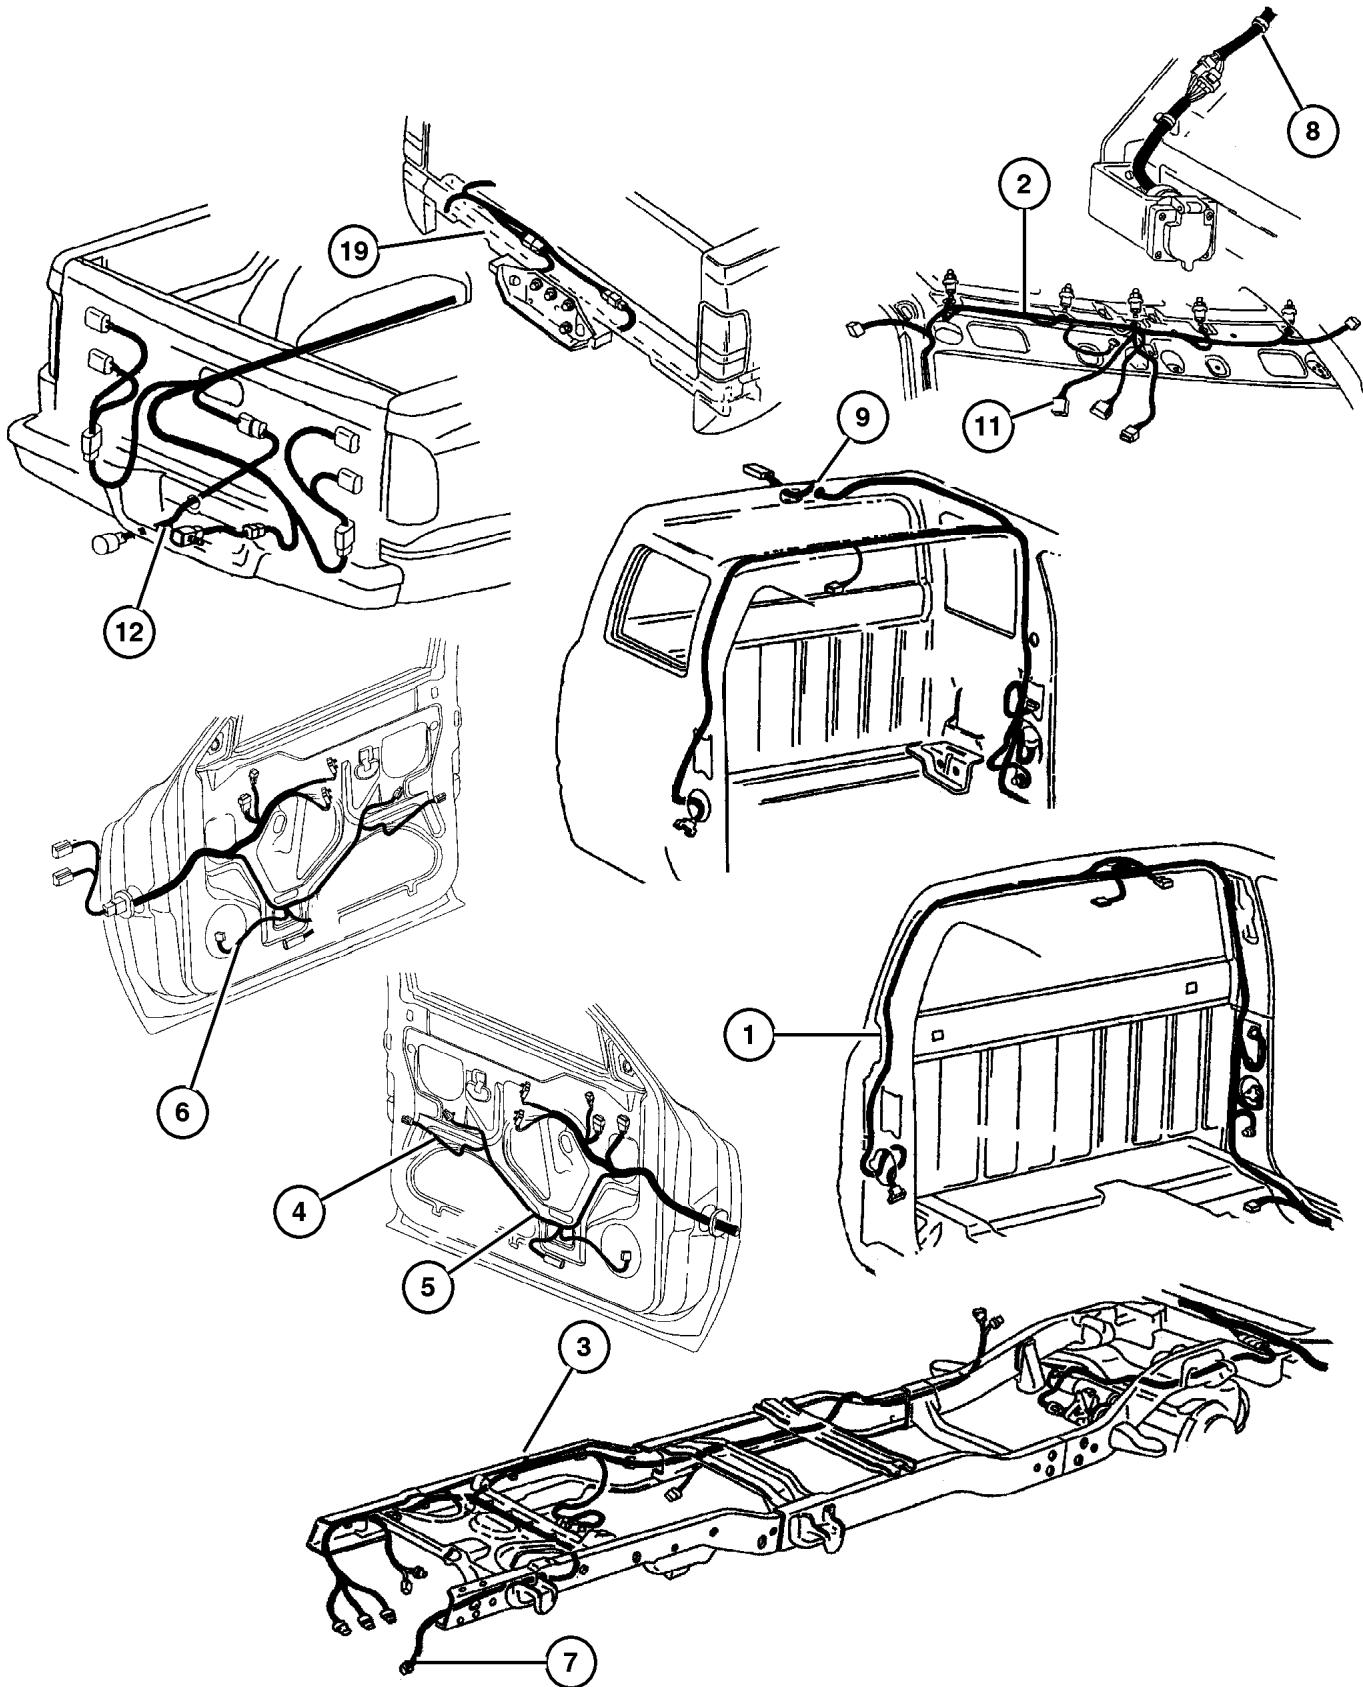Wiring, Body & Accessories
Figure 008-1520



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-15	5601 9405	1				ET0			WIRING, Air Intake Heater
-16									WIRING, Power Seat
	56045 195AB-	1			33, 34				w/Heated Seats
	56045 523AA-	1	1, 2, 6, 7		31, 32				w/o Heated Seats
-17	56045 178AA-	1							WIRING, Instrument Panel Jumper,
									Ash Receiver Lamp
-18	56021 994AB-	1							WIRING, Temperature Sensor
									Jumper
19	56042 545AD	2							WIRING, License Lamp

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Wiring Repair Package
Figure 008-1605

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:									
EW0 = All 8.0L Gas Engines									
-1	5013 930AA-	1							WIRING PACKAGE, Underhood Connector Repair, For Electrical Connector Repair Information visit the World Wide Web at http://dto.vftis.com/mopar/disclaimer.asp
-2	4641 780	1				EW0			STRAP, Tie
-3	5072 951AA-	1							WIRING REPAIR PACKAGE, Fuel Pump
-4	4773 905	1							SOCKET AND WIRING, Turn Signal Lamp

For Electrical Connector Repair Information visit
the World Wide Web at

<http://dto.vftis.com/mopar/disclaimer.asp>

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Spark Plugs--Cables--Coils
Figure 008-1905

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


Note:
EL0 = All 5.2L 8 Cyl Gas Engines
EML = "Magnum" 5.9L SMPI V8 Engine
EMM = 'Magnum' 5.9L SMPI V8 Engine
EM0 = All 5.9L 8 Cyl Gas Engines
ET0 = All 5.9L Turbo Diesel Engines
EW0 = All 8.0L Gas Engines

1	4728 038AE	1				EL0,			CABLE PACKAGE, Ignition
		1				EML			
	4728 039AD	1				EMM			[NAB]
		1				EMM			[NAA,NAE]
2	4796 500	1				EW0			CABLE PACKAGE, Ignition
3	SP00Q C9MC4 10					EW0			SPARK PLUG
	SP0RC 12LC4	8				EL0,			
						EM0			
4	5602 6850	3				EW0			SEPERATOR, Ignition Cable
	5602 8186	1				EL0,			2-Wire
						EML			1-Wire
	56041 333AA	2				EL0,			5-Wire
						EM0			
-5	5602 6852	1				EW0			TRAY, Ignition Cable
	5602 6853	1				EW0			Lower
									Upper
6	5602 7056	1				EMM			CABLE, Ignition Coil
	56028 398AA	1				EL0,			w/Federal or California Emission
						EML			
		1				EMM			w/Leaded Fuel Emission
7	56028 256AA	3				EL0,			CABLE, Ignition
						EM0			[#1,2,4]
	56028 279AA	1				EL0,			[#3]
	56028 280AA	2				EL0,			[#5,7]
						EM0			
	56028 404AA	1				EL0,			[#8]
						EM0			

DODGE RAM QUAD CAB/CLUB CAB (BE)									
SERIES	LINE	BODY	ENGINE	TRANSMISSION					
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.					
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.					
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual					
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual					
			EAA = All Engines	DEE = 6 Speed HD Manual					
			EAG = All Gas Engines						

AR = Use as required - = Non illustrated part # = New this model year

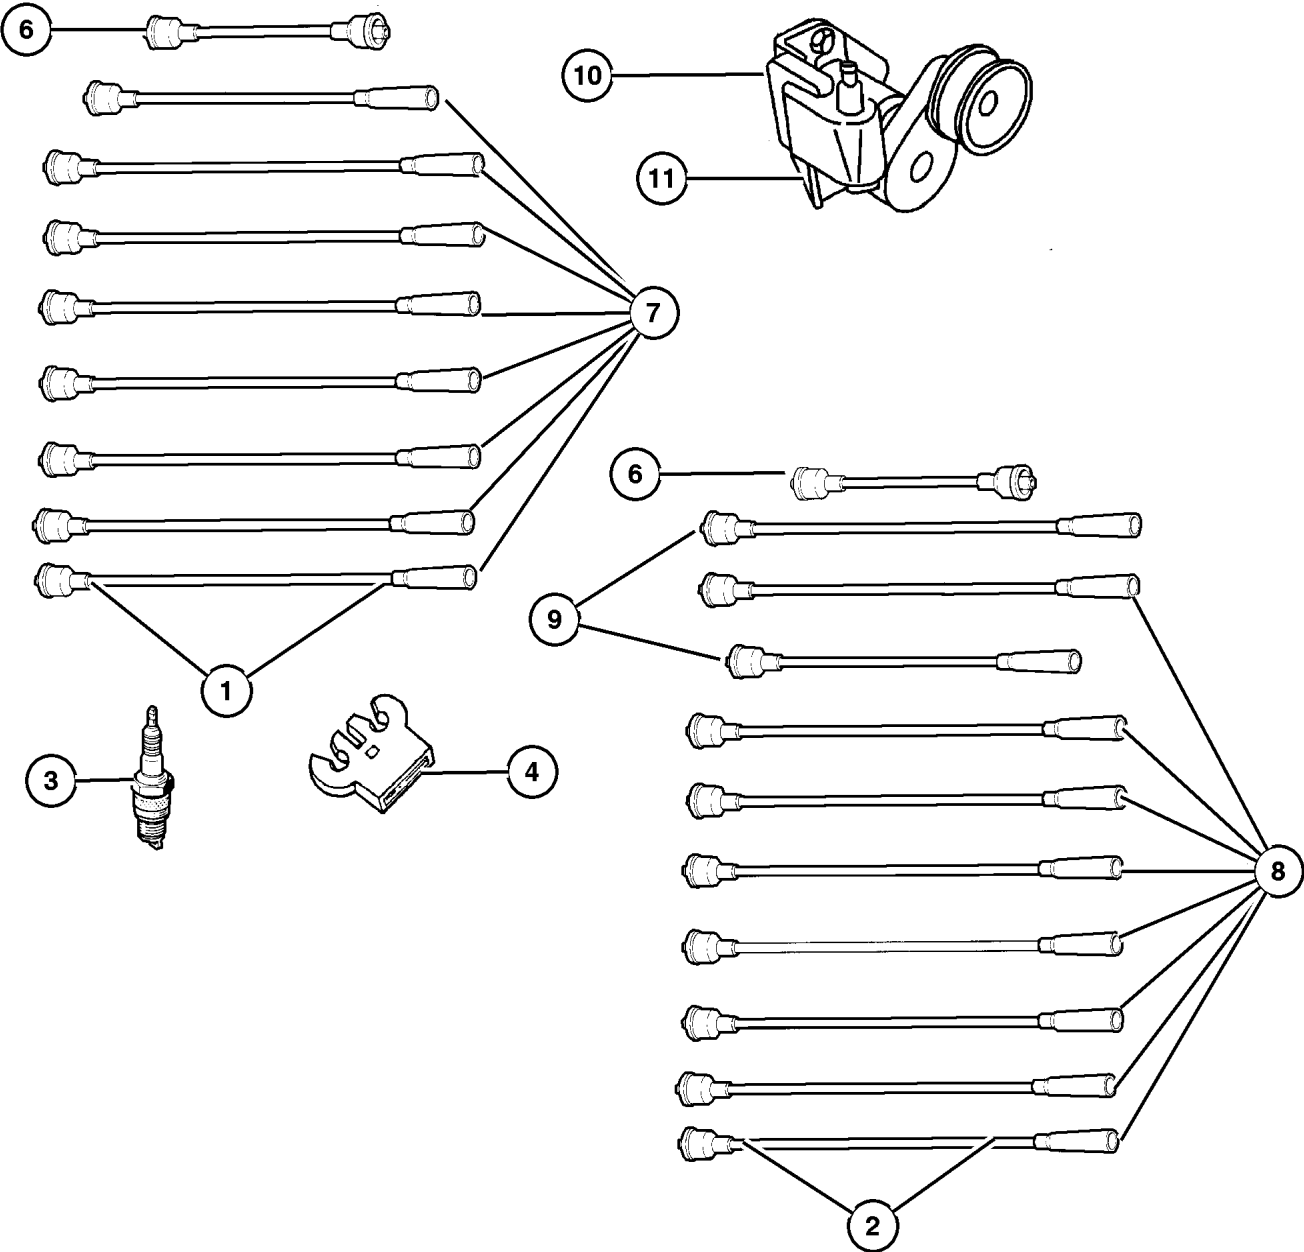
September 16, 2005



Spark Plugs--Cables--Coils
Figure 008-1905

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	56028 255AA	1				EL0, EM0			#6
8	5300 6568	1				EW0			CABLE, Ignition [#2]
	5300 6571	1				EW0			[#5]
	5602 6844	1				EW0			[#6]
	5602 6845	1				EW0			[#7]
	5602 6847	1				EW0			[#9]
	5602 6848	1				EW0			[#10]
	5602 7823	2				EW0			[#4,8]
9	4773 914	1				EW0			CABLE PACKAGE, Ignition [#1]
	4773 915	1				EW0			[#3]
10	5602 8172	1				EL0, EML EMM			COIL, Ignition w/Leaded Fuel Emission
	5603 2520	1				EW0			W/6 Tower
	5603 2521	1				EW0			W/4 Tower
11	5300 8980	1				EMM			BRACKET, Ignition Coil w/Federal or California Emission
	5602 6891	1				EL0, EML EMM			w/Leaded Fuel Emission
-12	5304 0054	1				EW0			BRACKET, Coil Mount and Plenum
-13	5503 6055	2	1, 6		31	EL0, EM0			CLIP, Heater Hose, Includes Spark plug cable seperator


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

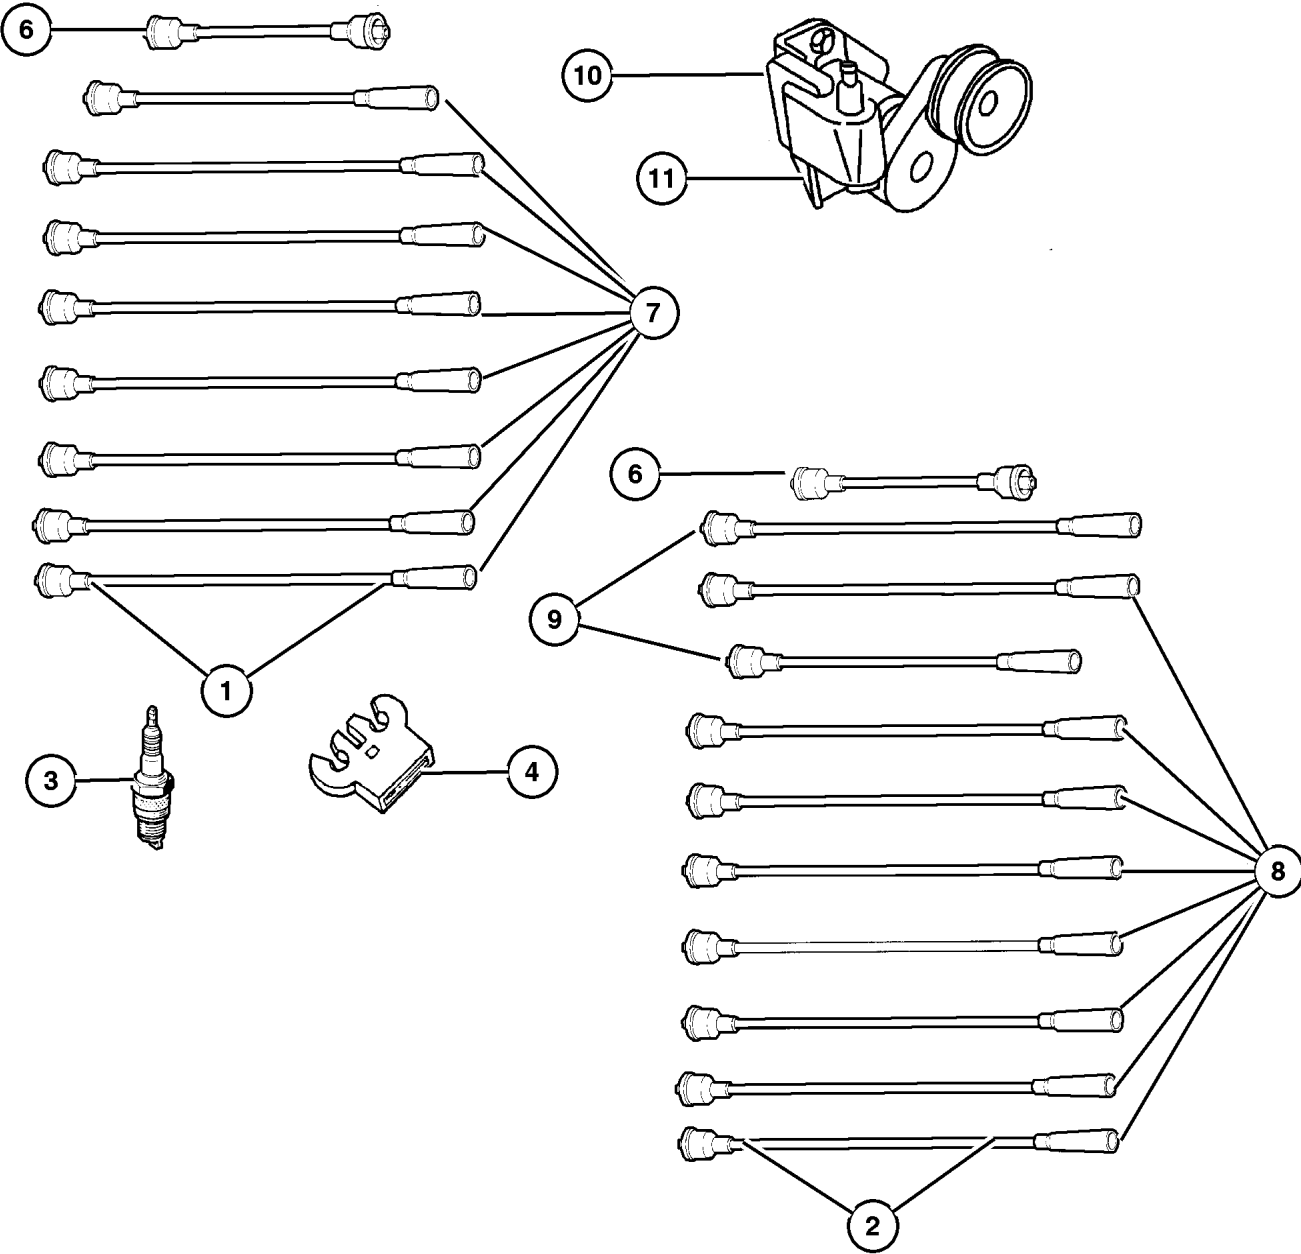

Group – 08A


Instrument Panel and Radios and Consoles

Illustration Title	Group-Fig. No.
Instrument Panel	
Instrument Panel	Fig. 08A-135
Instrument Panel Cluster	
Instrument Cluster	Fig. 08A-235
Radio, Antenna, and Speakers	
Radio	Fig. 08A-333
Speakers	Fig. 08A-334
Antenna	Fig. 08A-335
Consoles	
Overhead Console	Fig. 08A-430
Floor Console	Fig. 08A-435

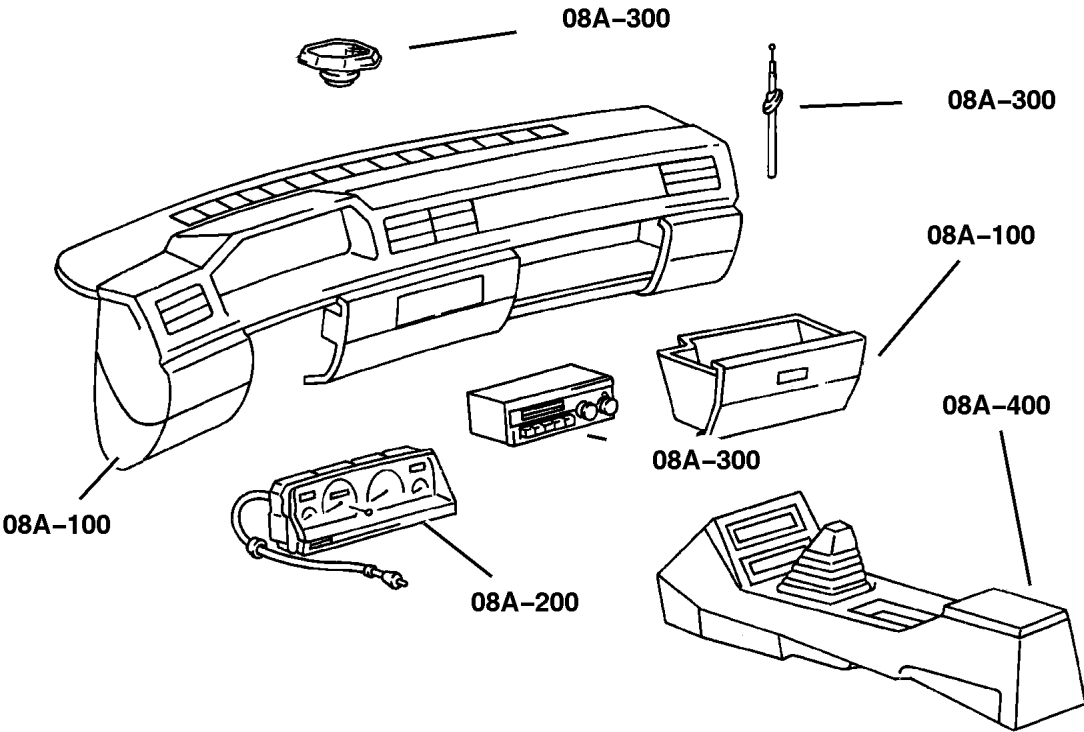

08A-100 Instrument Panel	08A-200 Instrument Panel Cluster	08A-300 Radio, Antenna, and Speakers	08A-400 Consoles

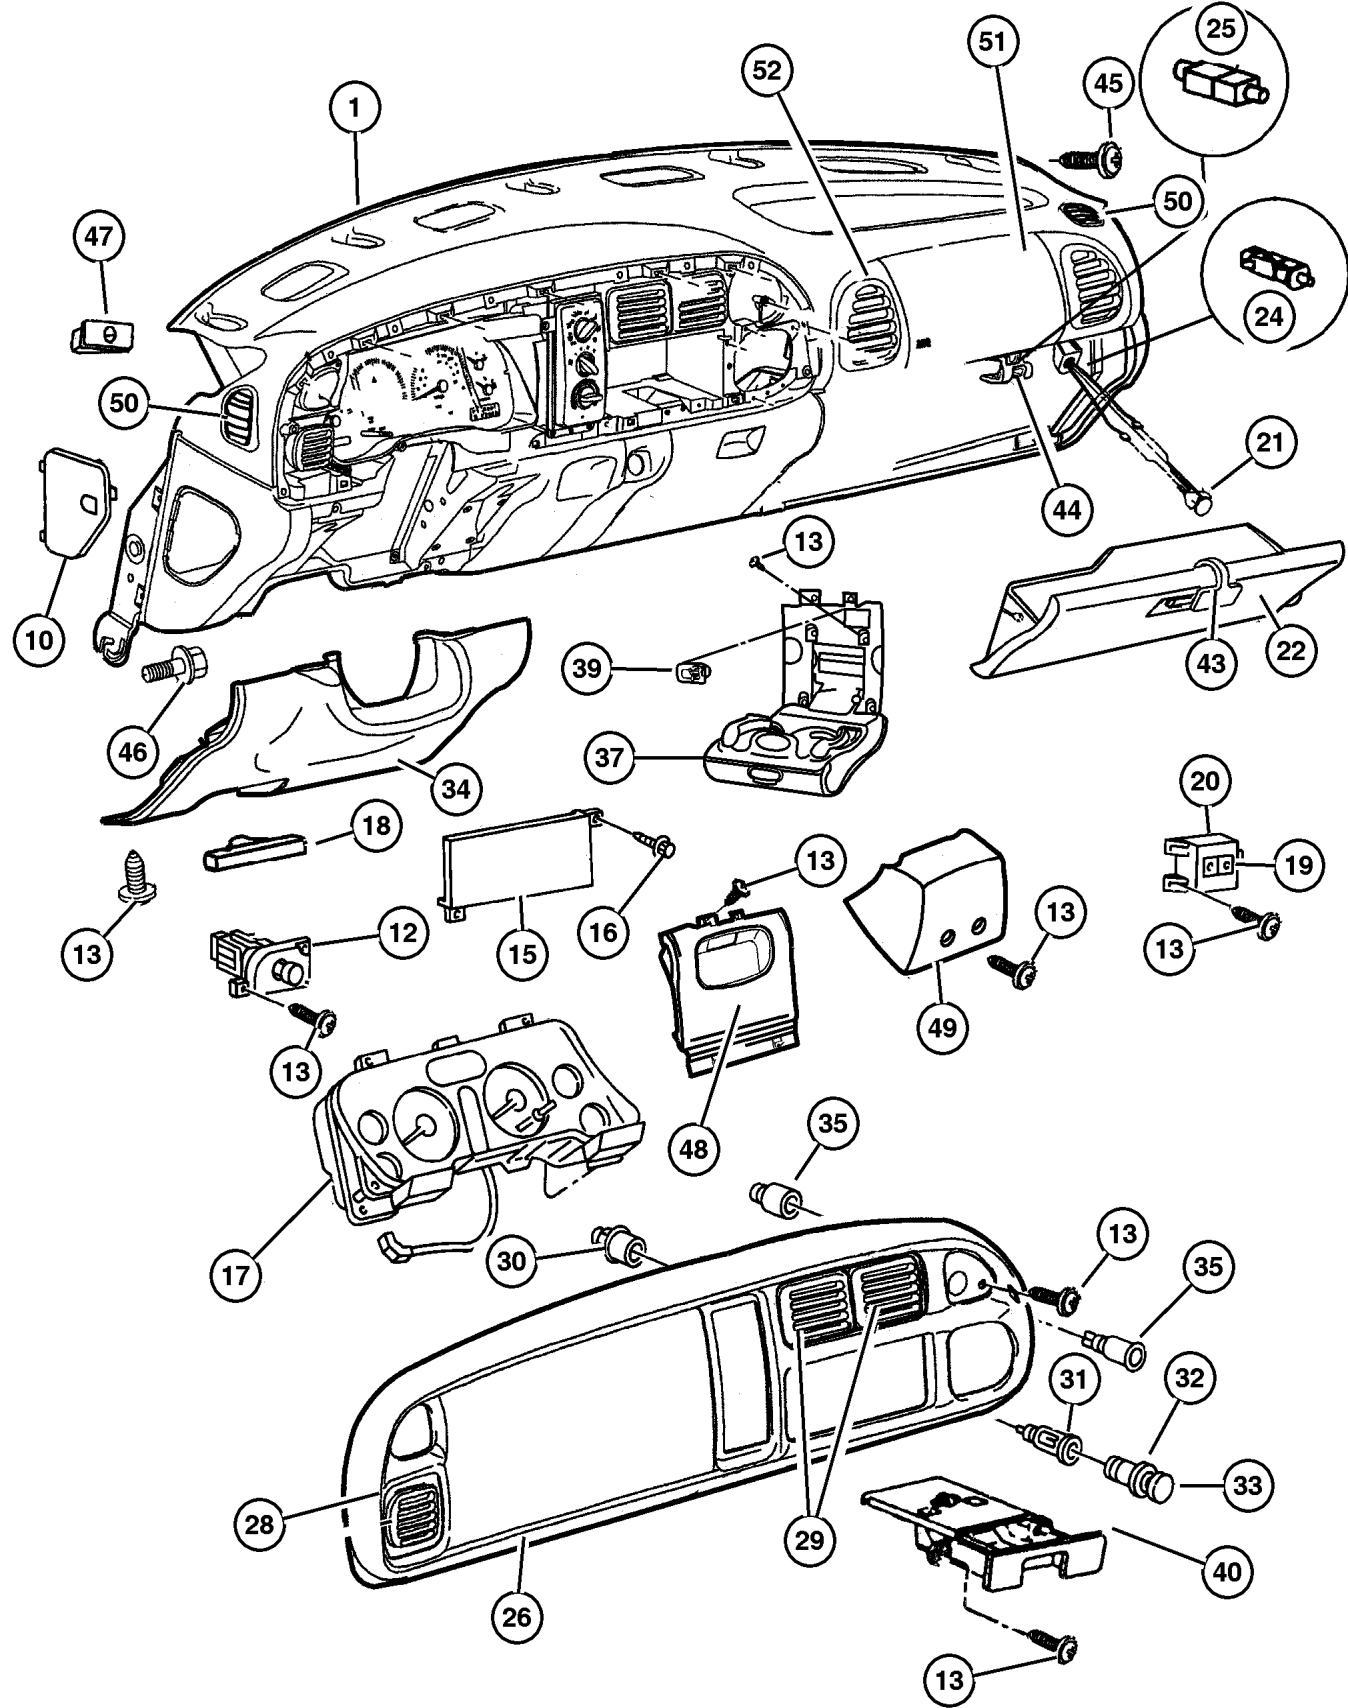Instrument Panel
Figure 08A-135




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									INSTRUMENT PANEL KIT, With
									Lower I/Panel & without Passenger
									Airbag
									Agate
									Cirrus
									Suede
-2									COVER, Instrument Panel Opening
									Suede
									Cirrus
-3									DUCT, Defroster, w/Grille Cover
-4									BRACKET, Instrument Panel to
									Cowl, Reinforcement Support (Mid
									Left to Cowl Top)
-5	6101 786	4							SCREW, Self Tapping, M6x1x15,
									Bracket Reinforcement Support
									Mounting
-6									PANEL, Instrument Upper
									Suede
									Agate
									Cirrus
-7									BRACKET, Instrument Panel Wiring
-8									NUT, Plastic Snap-In, For .190-16
									Screw, (NOT SERVICED) (Not
									Serviced)
-9	5FZ72 DX9AB-	1							BIN, Instrument Panel, Access Bin w/
									Lamp (Black)
10									DOOR, Fuse Access
									Agate
									Cirrus
									Suede
-11									PULLER, Fuse
12									SWITCH, Headlamp
									w/Cargo Lamp & Foglamp
									w/Cargo Lamp
									w/o Cargo Lamp
13	6101 946	6	1, 2, 3						SCREW, Tapping
-14									NUT, Plastic Snap-In, For .190-16
									Screw, (NOT SERVICED) (Not
									Serviced)
15									COVER, Radio Opening, (NOT
									REQUIRED)

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

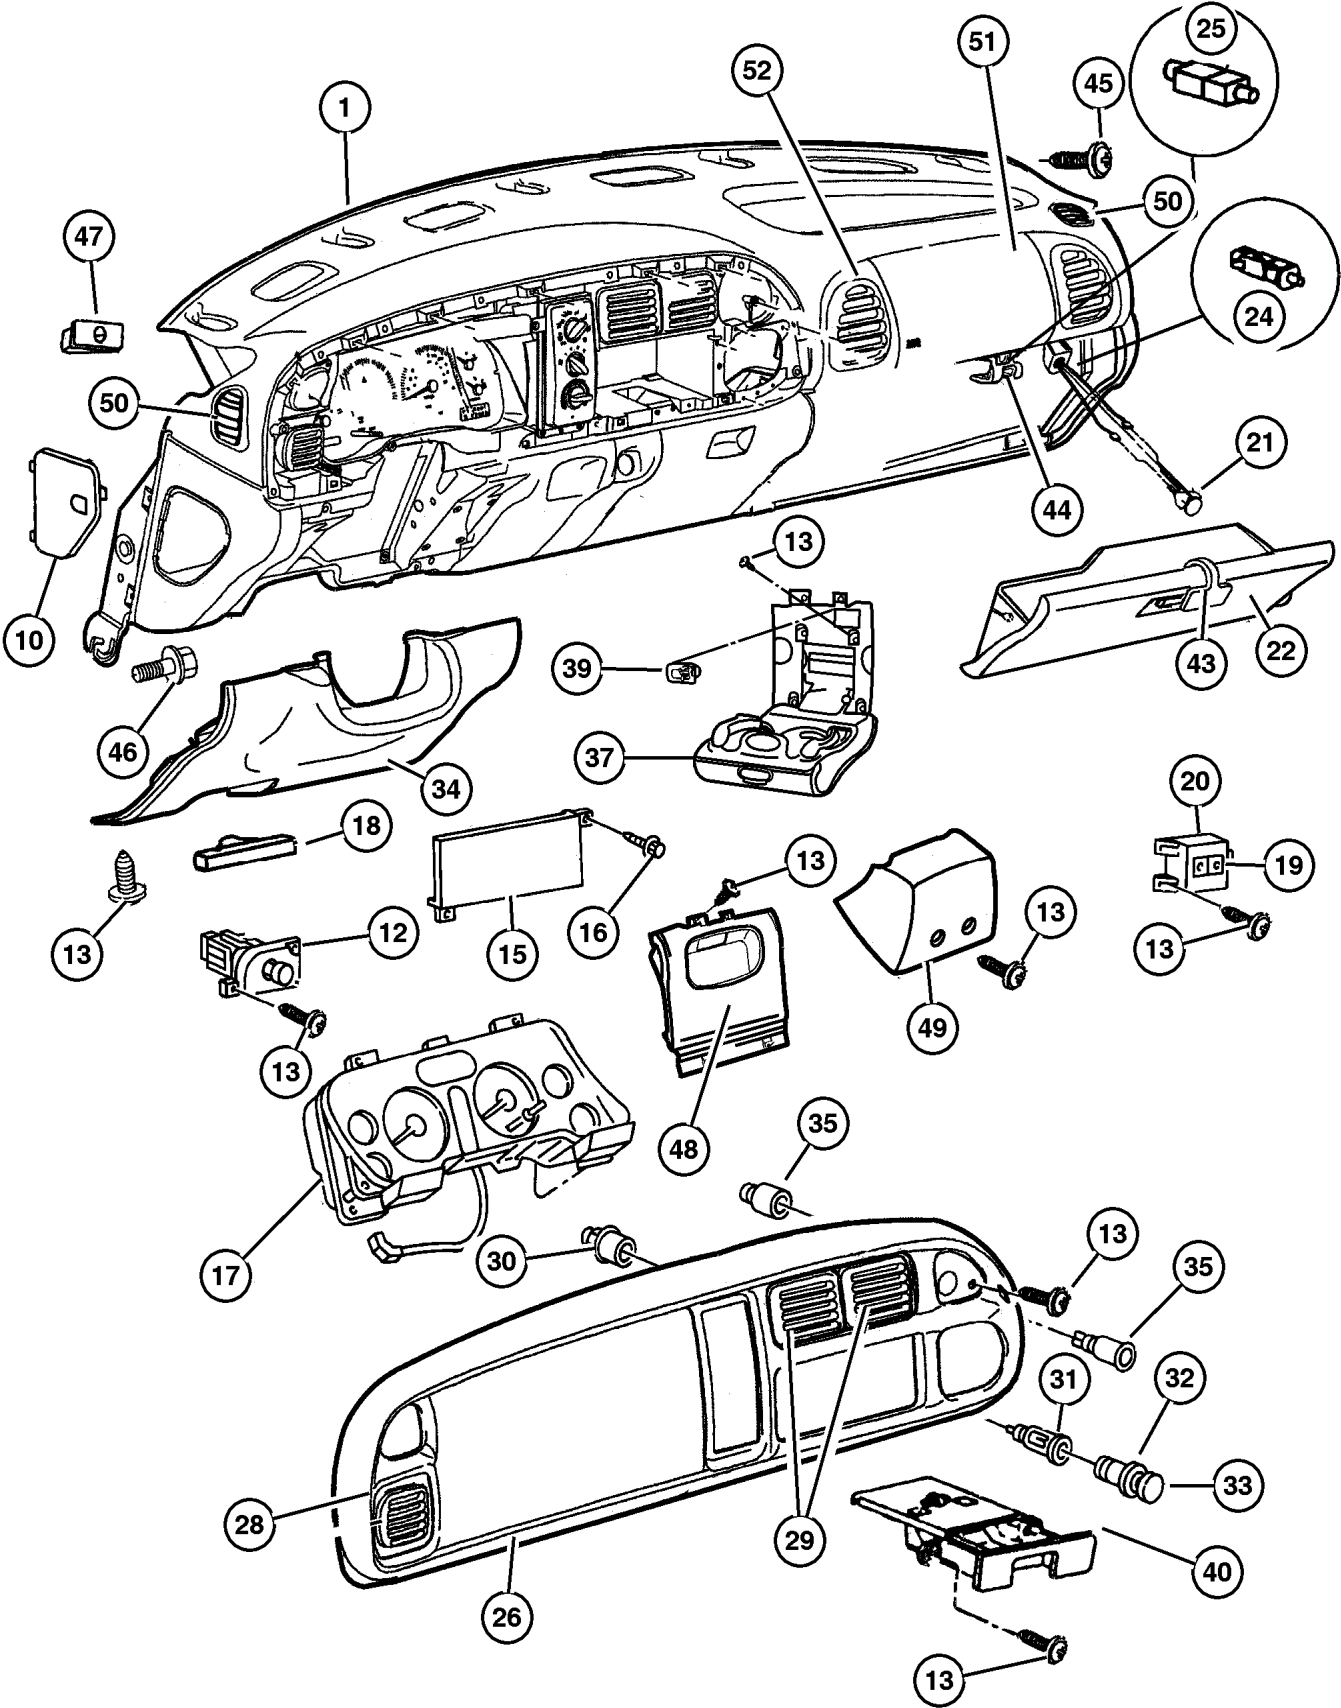
Instrument Panel
Figure 08A-135



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
16	0154 629	2							SCREW, Hex Flange Head, .25-14x.75
17									CLUSTER PACKAGE, CLUSTER (See 8A-230), (NOT SERVICED) (Not Serviced)
18	RU38 VK9AA	1							RELEASE, Parking Brake Suede (Handle w/Pivot Bracket & Retainer)
	RU38 LAZAA	1							Agate (Handle w/Pivot Bracket & Retainer)
	RU38 RC8AA	1							Cirrus (Handle w/Pivot Bracket & Retainer)
19	56045 177AC	1							SWITCH, Passenger Airbag Disarm
20	5013 875AA	1							BEZEL, Instrument Panel Switch Passenger Airbag (French/English)
	5013 874AA	1							Passenger Airbag (English)
21	4685 164	1							COVER, Glove Box Lamp Hole
22	5FR47 1K9AB	1							GLOVE BOX, Instrument Panel Suede
	5FR47 1AZAB	1							Agate
	5FR47 1C8AB	1							Cirrus
-23	5010 362AA-	1							BIN, Glove box
24	4565 022	1							SWITCH AND LAMP, Glove Box LATCH, Glovebox, LATCH ASSEMBLY, Glove Box (Serviced in Glove Box Assembly), (NOT SERVICED) (Not Serviced)
26	5GK51 DX9AA	1							BEZEL, Instrument Cluster Black
	5GK52 AAAAA	1							Woodgrain (Argent)
-27	6504 067	13							CLIP, Hood, Bezel to I/Panel
28	5014 842AA	1							OUTLET, Air Conditioning & Heater, Driver Side Left
29									OUTLET, Air Conditioning & Heater, OUTLET, Air Conditioning & Heater (Center)
	5014 840AA	1							Right
	5014 841AA	1							Left
30	4793 555	1							RING, Cigar Lighter Mounting
31	4685 590	1							BASE, Cigar Lighter
32	4685 536	1							KNOB AND ELEMENT, Cigar Lighter

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

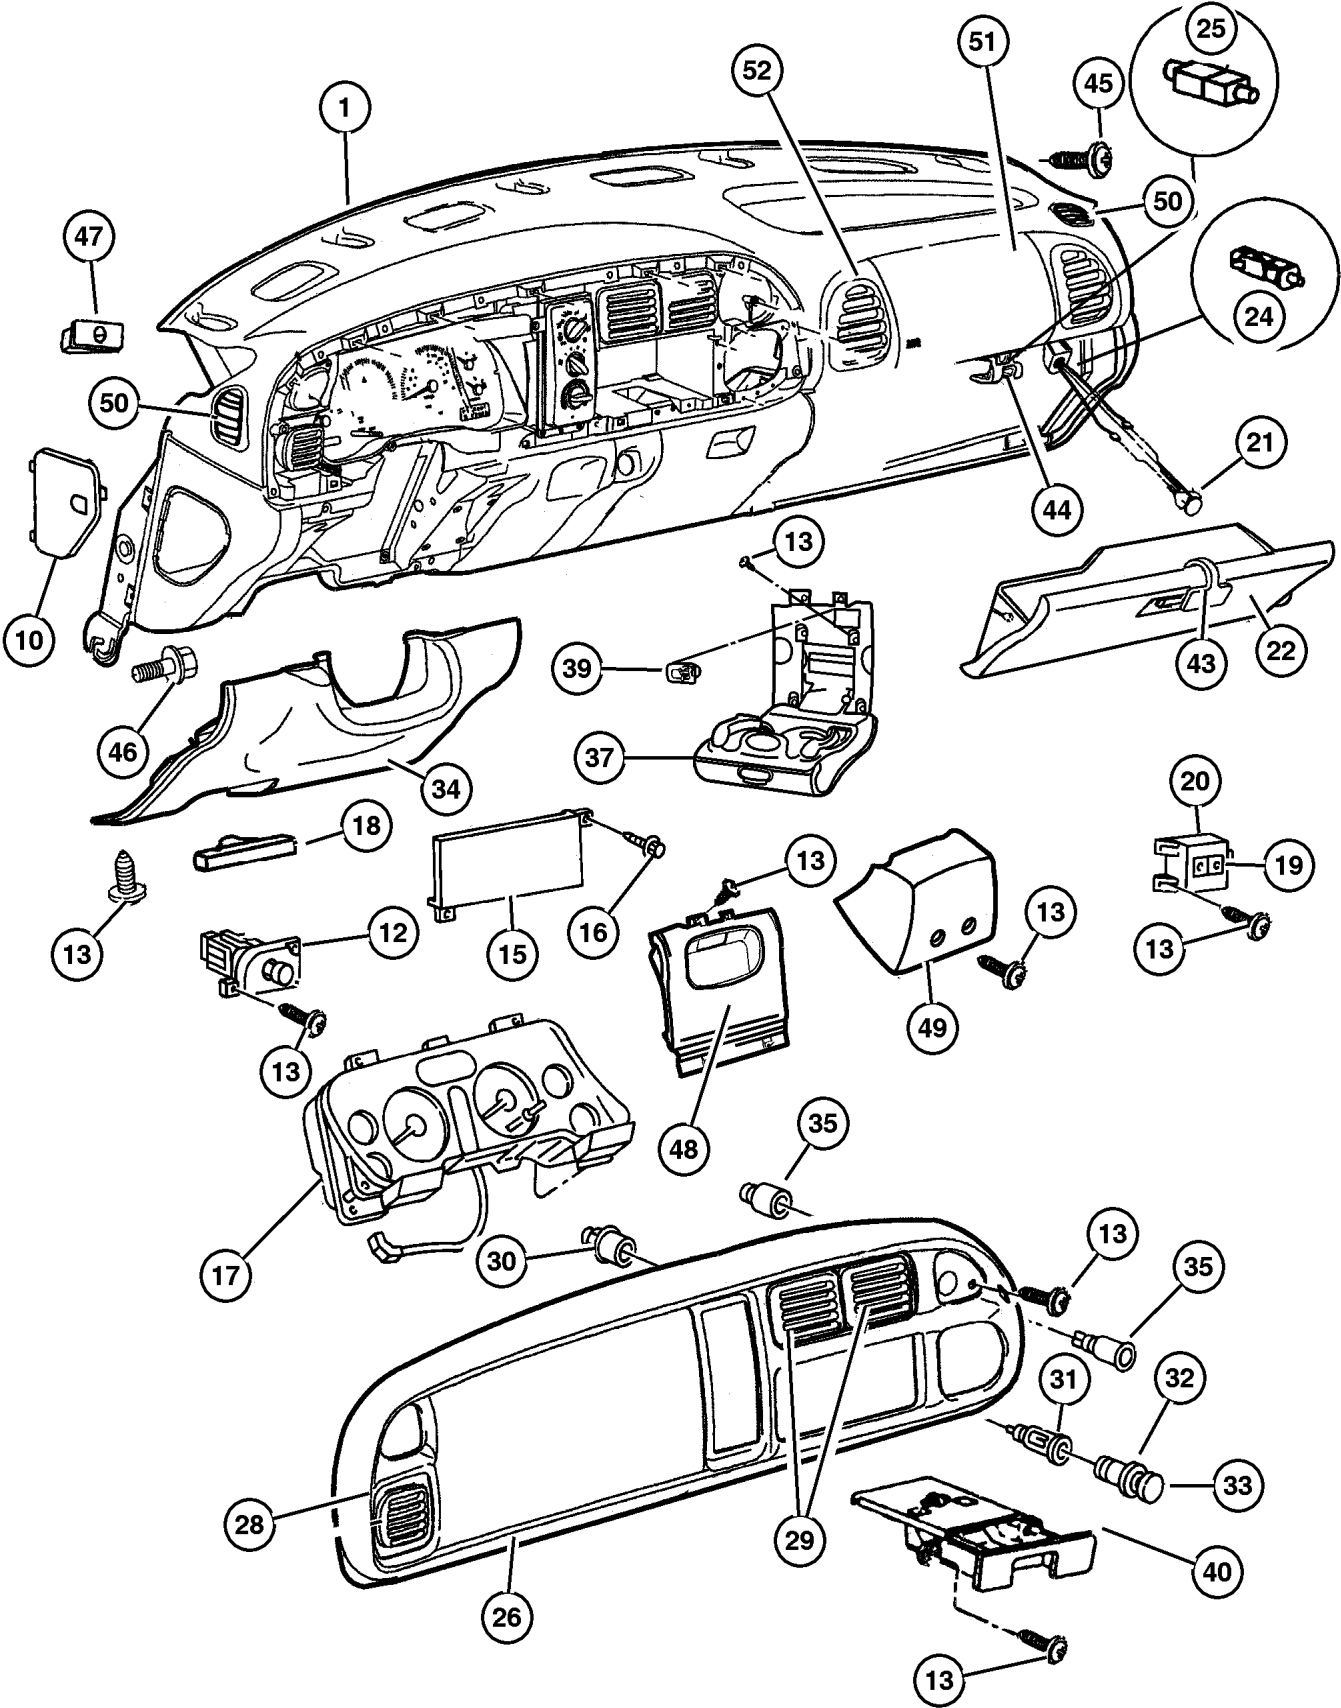Instrument Panel
Figure 08A-135




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
33									KNOB, KNOB, Cigar Lighter (Serviced w/Item # 34), (NOT SERVICED) (Not Serviced)
34	5EU13 1AZAB	1							COVER, Steering Column Opening Agate
	5EU13 1C8AB	1							Cirrus
	5EU13 1K9AB	1							Suede
35	4793 554	1							POWER OUTLET, Cigar Lighter
-36	4793 555	1							RING, Cigar Lighter Mounting
37	5FR42 1K9AC	1							CUPHOLDER, Instrument Panel Suede
	5FR42 1AZAC	1							Agate
	5FR42 1C8AC	1							Cirrus
-38	L000 0161	1							BULB, 161, Cupholder Light
39	5GD95 DX9AA	1							COVER, Instrument Panel Opening w/Manual Transmission
	5GD98 DX9AA	1							W/Automatic Transmission includes lens and bulb holder for cup holder
40	5FR4 51K9	1							ASH RECEIVER, Instrument Panel Suede
	5FR4 51AZ	1							Agate
	5FR4 51C8	1							Cirrus
-41	55055 853AD-	1							SHIELD, Ash Tray
-42	6032 723	2							SCREW, Self Tapping, M4.2x1. 69x19.05
43	4595 748AA	1							LABEL, Air Bag Warning English
	4595 749AA	1							Bilingual
	55350 848AA	2							Sun Visor (English/French)
44	5010 358AA	1							STRIKER, Glove Box Door Latch
45									SCREW, Console, SCREW, I/Panel to Cowl Bar (M4x8x1.59x32.00) Not Serviced, (NOT SERVICED) (Not Serviced)
46									SCREW AND WASHER, SCREW & WASHER ASSEMBLY, I/Panel End Support to Body (M8x1.25x30.00) ***, (NOT SERVICED) (Not Serviced)
47	6504 485AB	4							NUT, Plastic Snap-in

DODGE RAM QUAD CAB/CLUB CAB (BE)								
SERIES	LINE	BODY	ENGINE	TRANSMISSION				
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.				
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.				
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual				
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual				
			EAA = All Engines	DEE = 6 Speed HD Manual				
			EAG = All Gas Engines					

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

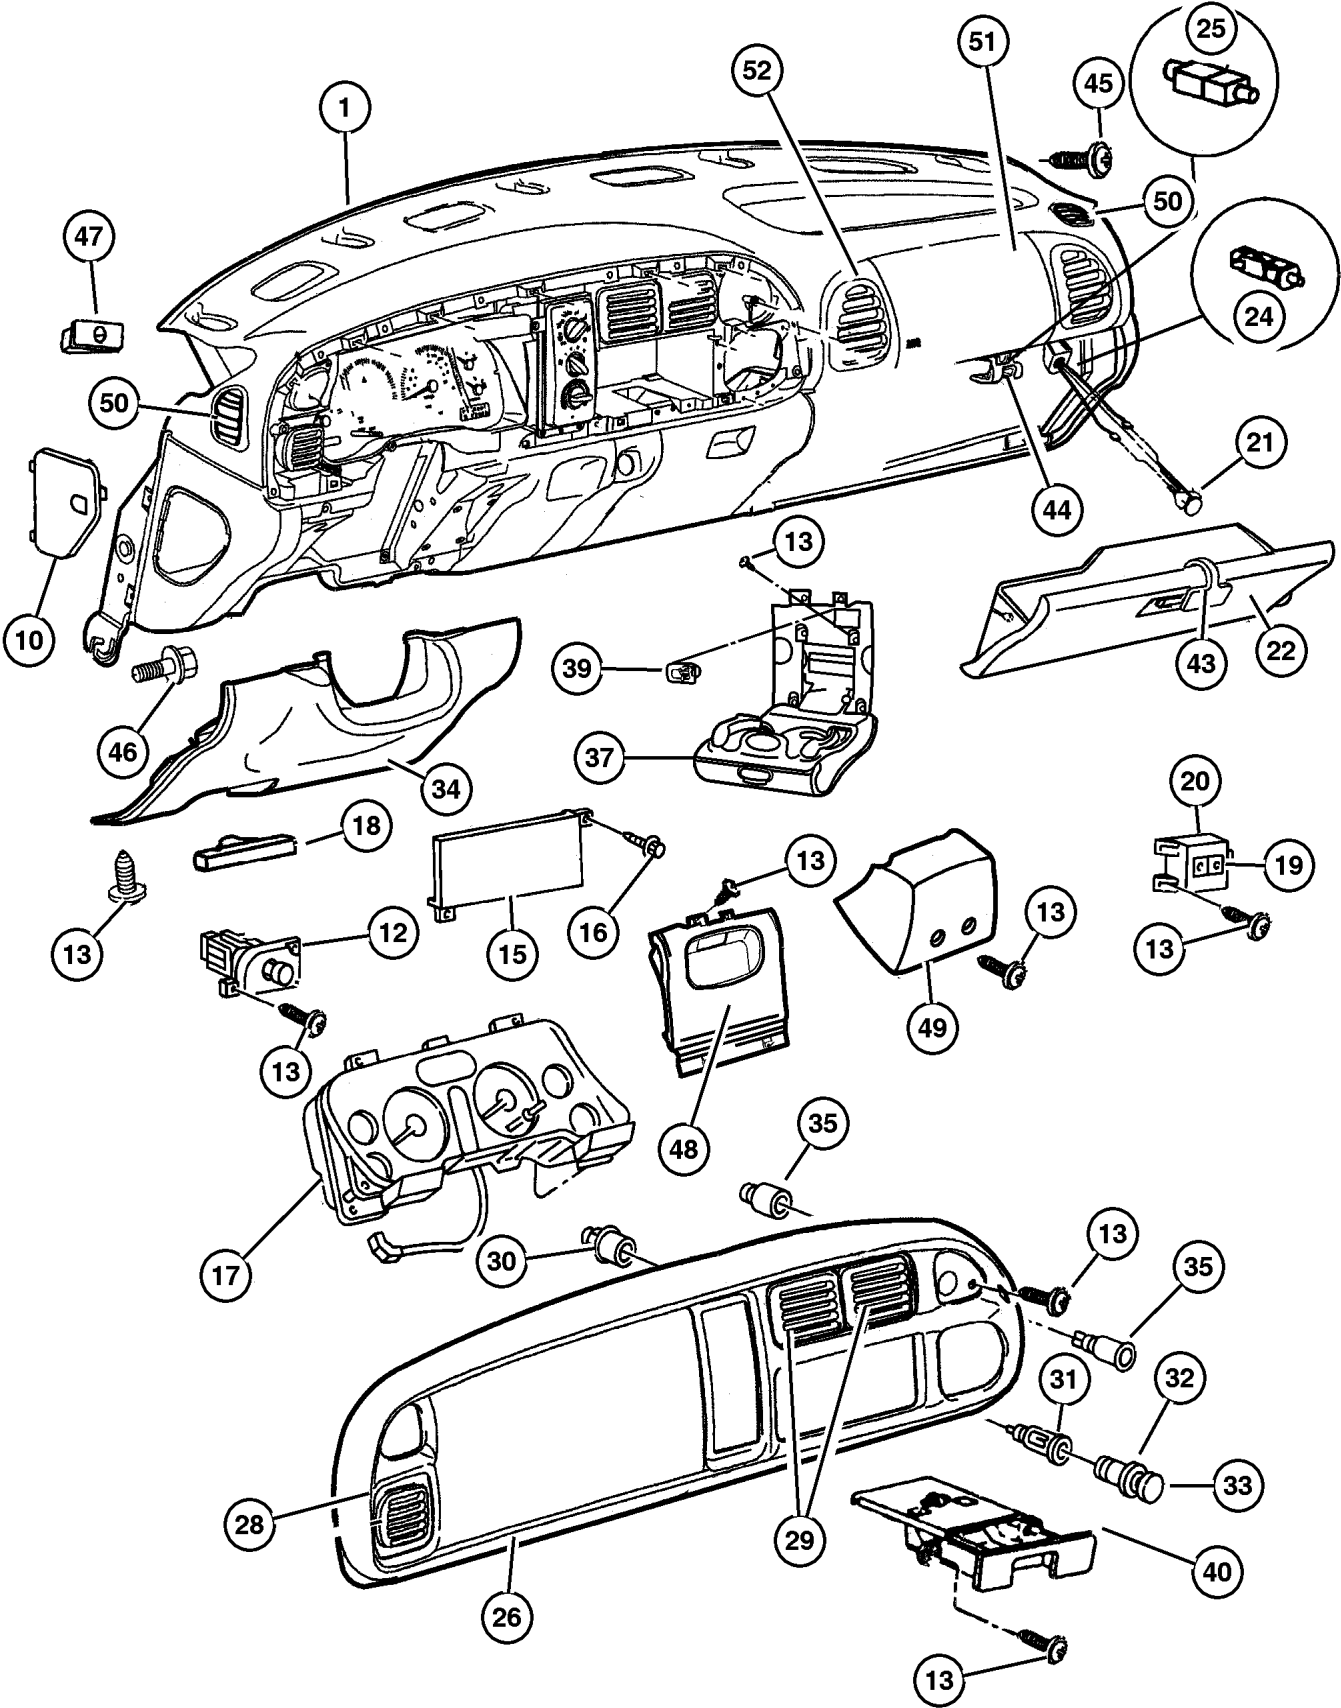Instrument Panel
Figure 08A-135




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
48									BIN, Instrument Panel
	5FM16 1AZAB	1							Agate
	5FM16 1C8AB	1							Cirrus
	5FM16 1K9AB	1							Suede
	5FZ72 DX9AB	1							Black (Acces Bin w/Lamp) Covered
									Hole in Bin (Mat Serviced In Assembly Only)
49									COVER, Control Unit
	5GJ24 VK9AA	1							Suede
	5GJ24 LAZAA	1							Agate
	5GJ24 RC8AA	1							Cirrus
50									GRILLE, Instrument Panel Demister
	RU34 RC8AA	1							Cirrus, Right
	RU34 LAZAA	1							Agate, Right
	RU34 VK9AA	1							Suede, Right
	RU35 LAZAA	1							Agate, Left
	RU35 RC8AA	1							Cirrus, Left
	RU35 VK9AA	1							Suede, Left
51									AIR BAG, Passenger, Cover & Air/Heat Outlet Included
	5GE24 VK9AA	1							Suede
	5GE24 LAZAA	1							Agate
	5GE24 RC8AA	1							Cirrus
52									OUTLET, Air Conditioning & Heater
	RU48 RC8AA	1							Cirrus, Right
	RU48 LAZAA	1							Agate, Right
	RU48 VK9AA	1							Suede, Right
	RU49 LAZAA	1							Agate, Left
	RU49 RC8AA	1							Cirrus, Left
	RU49 VK9AA	1							Suede, Left
-53	5012 954AA-	4							RETAINER, Air Outlet
-54	4685 591	1							CAP, Cigar Lighter

DODGE RAM QUAD CAB/CLUB CAB (BE)								
SERIES	LINE	BODY	ENGINE	TRANSMISSION				
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.				
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.				
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual				
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual				
			EAA = All Engines	DEE = 6 Speed HD Manual				
			EAG = All Gas Engines					

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

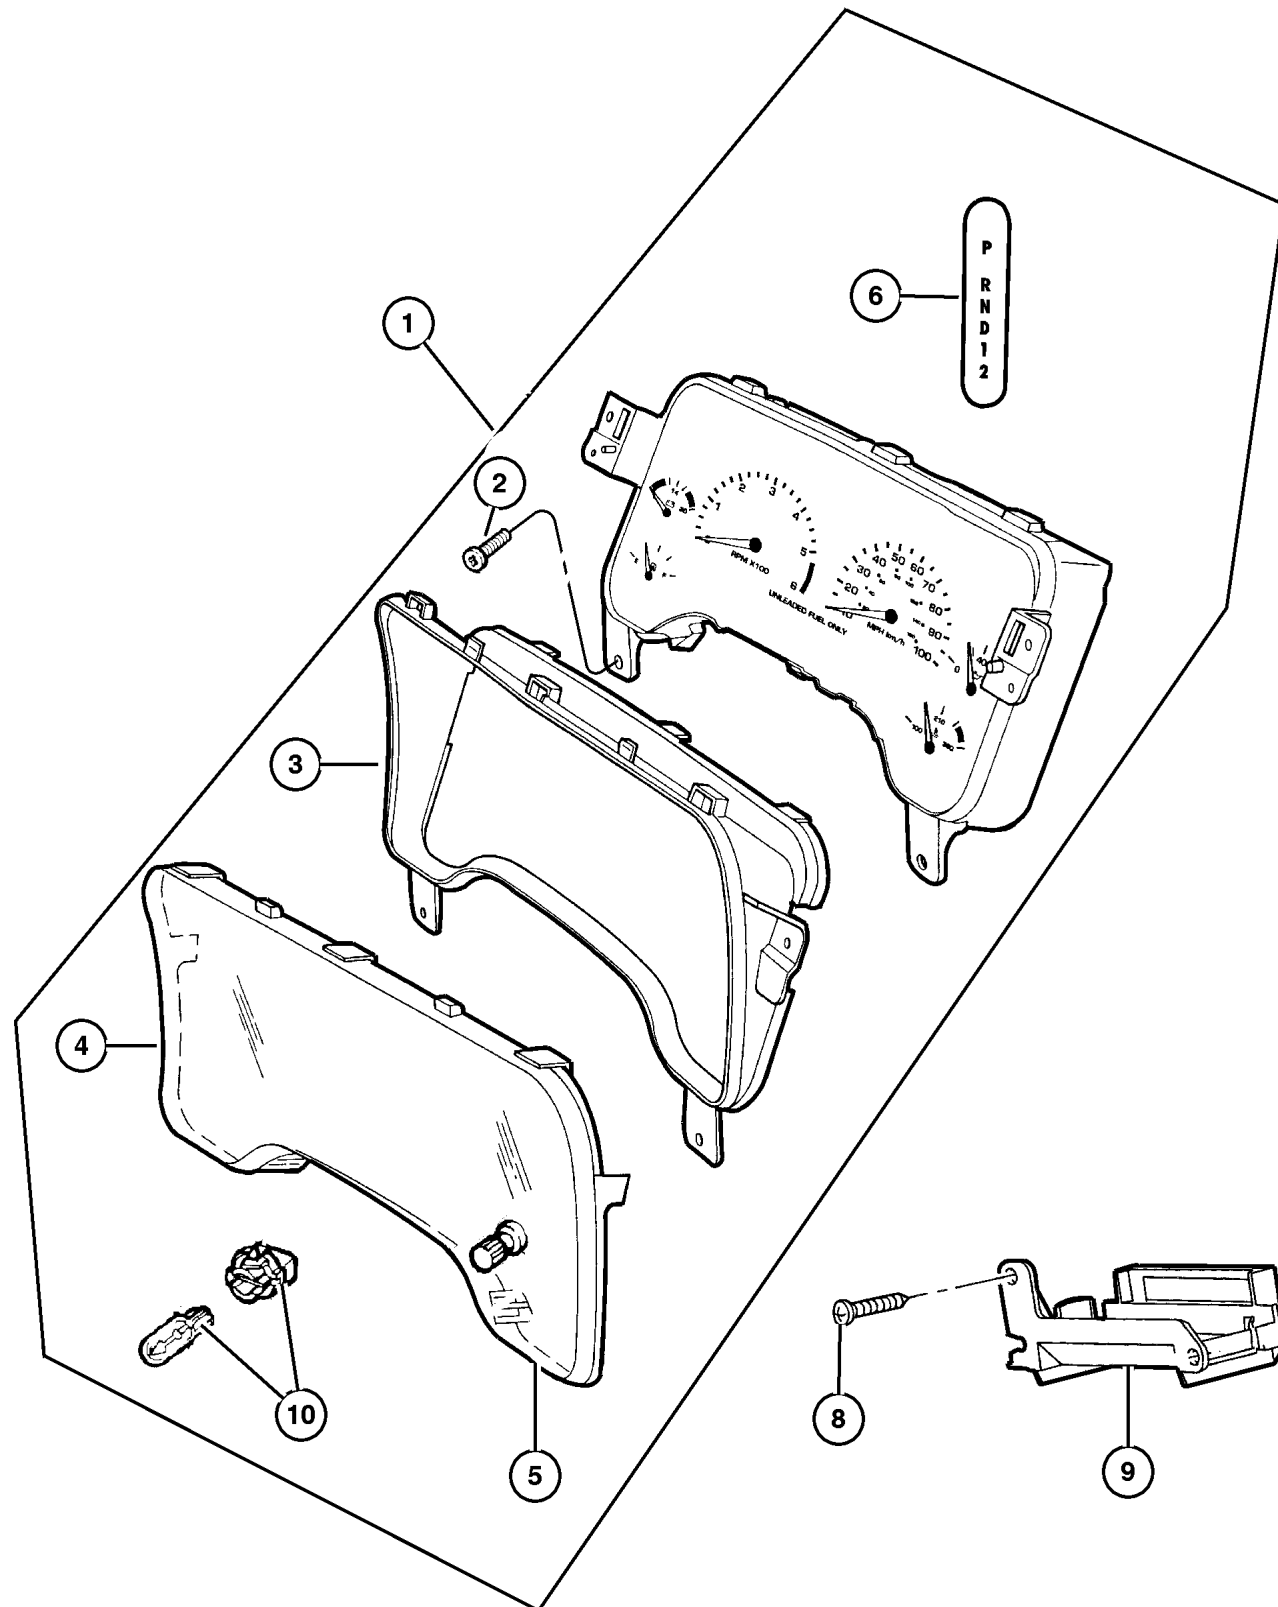Instrument Cluster
Figure 08A-235

[illegible]

DODGE RAM QUAD CAB/CLUB CAB (BE)

L = Ram Truck (All)

LINE

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DGO = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Radio
Figure 08A-333

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

RAS=AM/FM Cassette									
RAZ=AM/FM w/CD & Cassette									
RBR=AM/FM w/CD & Equalizer									
RBN=AM/FM Cassette w/Control									
RBA=AM/FM w/CD									
1	56038 933AB	1							RADIO, AM/FM Cassette, RAS
2	4704 383AH	1							RADIO, AM/FM with CD and Cassette, RAZ
3	4704 392AD	1							RADIO, AM/FM with CD, RBA
4	4704 386AD	1							RADIO, AM/FM Cassette with CD Control, RBN
5	4704 373AD	1				31, 33, 34			RADIO, AM/FM with CD and Equalizer, RBR
6									SCREW, (NOT SERVICED) (Not Serviced)
7	5604 3033	1							STRAP, Ground

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Speakers
Figure 08A-334

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
RCD = Four Speakers									
RCE = Infinity Speaker System									
1									SPEAKER, Door, Lower Door
	5602 0370	2							Standard 6x9 (RCD)
	56043 123AD	2							Infinity (RCE) Up to 01/10/00
	56043 123AE	2							Infinity (RCE) After 01/10/00
2									SPEAKER, Front Tweeter, A Pillar
	5FV66 LAZAB	1							Agate
	5FV66 RC3AB	1							Gray
	5FV66 RK5AB	1							Tan
3									SPEAKER, 5.25", Rear
	5602 0372	2							Standard 5.25 (RCD)
	5604 3856	2							Infinity (RCE)
4	56009 941AA	1							CHOKE, Speaker
5	6032 723	6							SCREW, Self Tapping, M4.2x1. 69x19.05
6	6034 715	8							CLIP, Speaker
7									SCREW, Hex Flange Head Tapping, .190x16x.750, (NOT SERVICED) (Not Serviced)

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Antenna
Figure 08A-335

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	56043 039AB	1							CABLE, Antenna
2	5600 6990	1							PLUG, Sealing
3	5600 6828	1							CAP NUT, Antenna
4	4685 574	1							MAST, Antenna, Black
5	5604 3018	1							ADAPTER, Antenna
6	56043 019AC	1							CABLE, Antenna
7	2860 332	1							PLUG, Anti-Rattle
8	4274 258	1							TAPE, Radio Connector, Foam
9	5269 593	1							CAP, Antenna Body

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Overhead Console
Figure 08A-430

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	SN94 TL2AA	1							HOUSING, Overhead Console, Beige
2	5013 618AA	1							LENS, Maplamp Right
	5013 619AA	1							Left
3	L002 1202	2							BULB, 212-2
4	55350 003AF	1							MODULE, Compass Temperature w/Security
	55350 660AF	1							w/o Security
5	5013 606AB	1							HOUSING, Bulb, (Bulb Reflectors & Storage Door Detent Spring Included)
6	5013 608AA	1							WIRING, Overhead Console w/Temperature Compass
	5013 609AA	1							w/o Temperature Compass
7	5013 612AA	1							LENS, Message Center w/o Security L.E.D.
	5013 613AA	1							w/Security L.E.D.
8	SN93 TL2AA	1							COVER, Module, w/o Compass & Temperature Module (Beige)
9	SN96 TL2AA	1							DOOR, Sunglass Bin, w/Liner (Beige)
10	SN97 TL2AA	1							BUTTON, Door Lock, Beige
11	SN98 TL2AA	1							DOOR, Garage Door Opener, w/ Snap Off Spacers/Adapters (Beige)


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Floor Console
Figure 08A-435

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									CONSOLE, Floor
	5EZ5 4LAZ	1							Agate, Manual Transmission
	5EZ5 4RC8	1							Gray, Manual Transmission
	5EZ5 4VK9	1							Tan, Manual Transmission
2	5GA43 DX9AA	1							MAT, Console Cup Holder, Manual Transmission
3	55055 630AB	1							BRACKET, Console
4									SCREW, Hex Flange Head Tapping, .190-16x.750, (NOT SERVICED)
									(Not Serviced)
5									CUPHOLDER, Console
	5EZ5 3LAZ	1	1, 2, 3						Agate, Manual Transmission
	5EZ5 3RC8	1	1, 2, 3						Gray, Manual Transmission
	5EZ5 3VK9	1	1, 2, 3						Tan, Manual Transmission
6	5GA44 DX9AA	1							PAD, Console Storage Bin
7									BEZEL, Transfer Case
	5FB39 LAZAB	1	6, 7, 8						Agate, Automatic Transmission
	5FB39 RC8AB	1	6, 7, 8						Gray, Automatic Transmission
	5FB39 VK9AB	1	6, 7, 8						Tan, Automatic Transmission

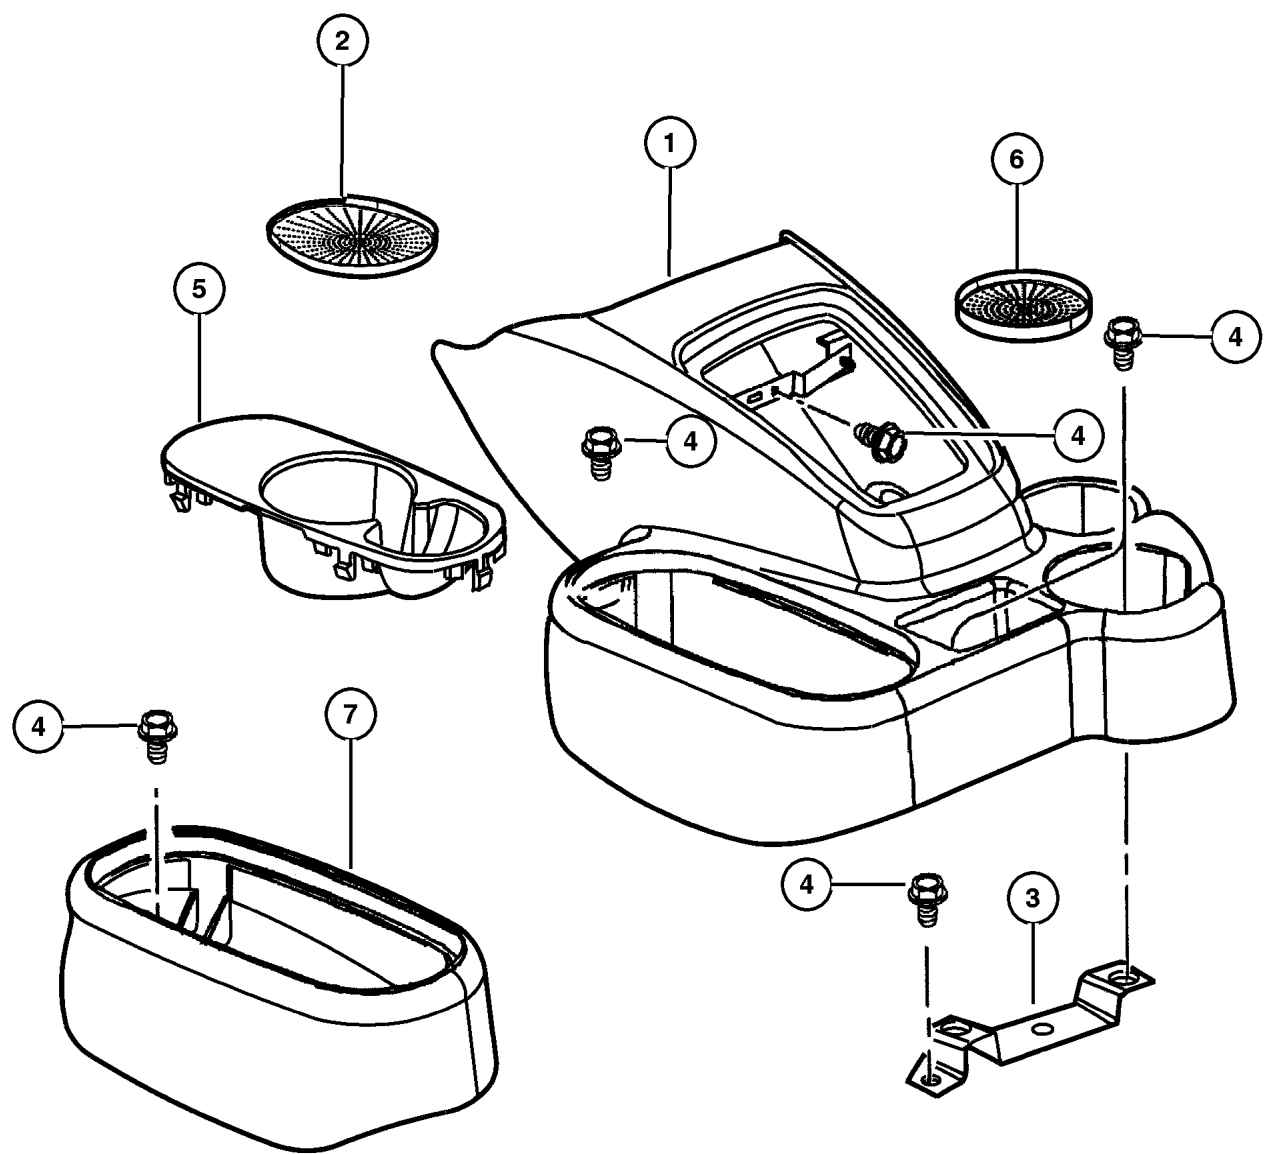

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year


September 16, 2005


Group – 009

Engine Mounting

GROUP 9 - Engine Mounting

Illustration Title	Group-Fig. No.
Engine Mounting	
Engine Mounting, Front 5.2L (ELF), 5.9L (EML), 5.9 (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine . .	Fig. 009-110
Engine Mounting, Rear, 2WD 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine	Fig. 009-120
Engine Mounting, Rear, 4WD 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine	Fig. 009-130

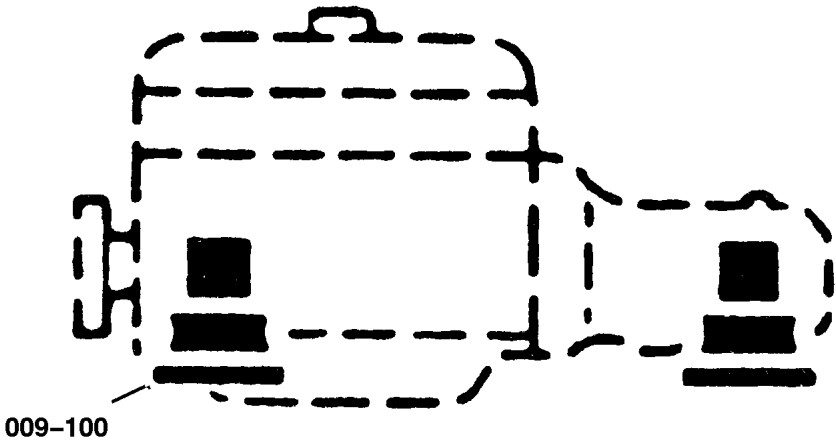
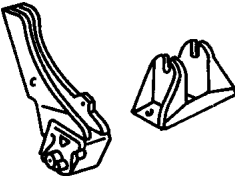
<div>009-100</div> <div>Engine Mounting</div> <div></div>			
--	--	--	--

Engine Mounting, Front 5.2L (ELF), 5.9L (EML), 5.9 (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine
Figure 009-110

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note: Sales Code

DBB = All Manual Transmissions

DG0 = All Automatic Transmissions

EL0 = All 5.2L 8 Cyl Gas Engines

EM0 = All 5.9L 8 Cyl Gas Engines

ETC = 5.9L Cummins 24V Diesel Engine

ETH = 5.9L HO Cummins Turbo Diesel Engine

ET0 = All 5.9L Turbo Diesel Engines

EW0 = All 8.0L Gas Engines

1	5205 8238	1				EL0, EM0, EW0			SHIELD, Exhaust Manifold
-2	5700 8125	1				EL0, EM0, EW0			SHIELD, Engine Mount, Left
3									SCREW AND WASHER, Hex Head, M12x1.75x155
	6502 960	2				EL0, EM0, EW0			
		1				ET0			
4	52018 235AB	1	2, 3, 7, 8			EM0, EW0			INSULATOR, Engine Mount Left
	52020 228AB	1	6			EL0,			Right
	52020 229AB	1	6			EM0 EL0, EM0			Left
	52020 326AB	1	1			EL0,			Right
	52020 327AB	1	1			EM0 EL0, EM0			Left
	52021 490AC	1				ETC	DBB		Right
	52021 491AC	1				ETC	DG0		Right
		1				ETC	DBB		Left
		1				ETC	DG0		Left
	52058 804AB	1	2, 3, 7, 8			EM0,			Right
						EW0			
	52021 490AA	1				ETH	DBB		Right
	52021 491AA	1				ETH	DBB		Left
5									RESTRICTOR, Engine Mount


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

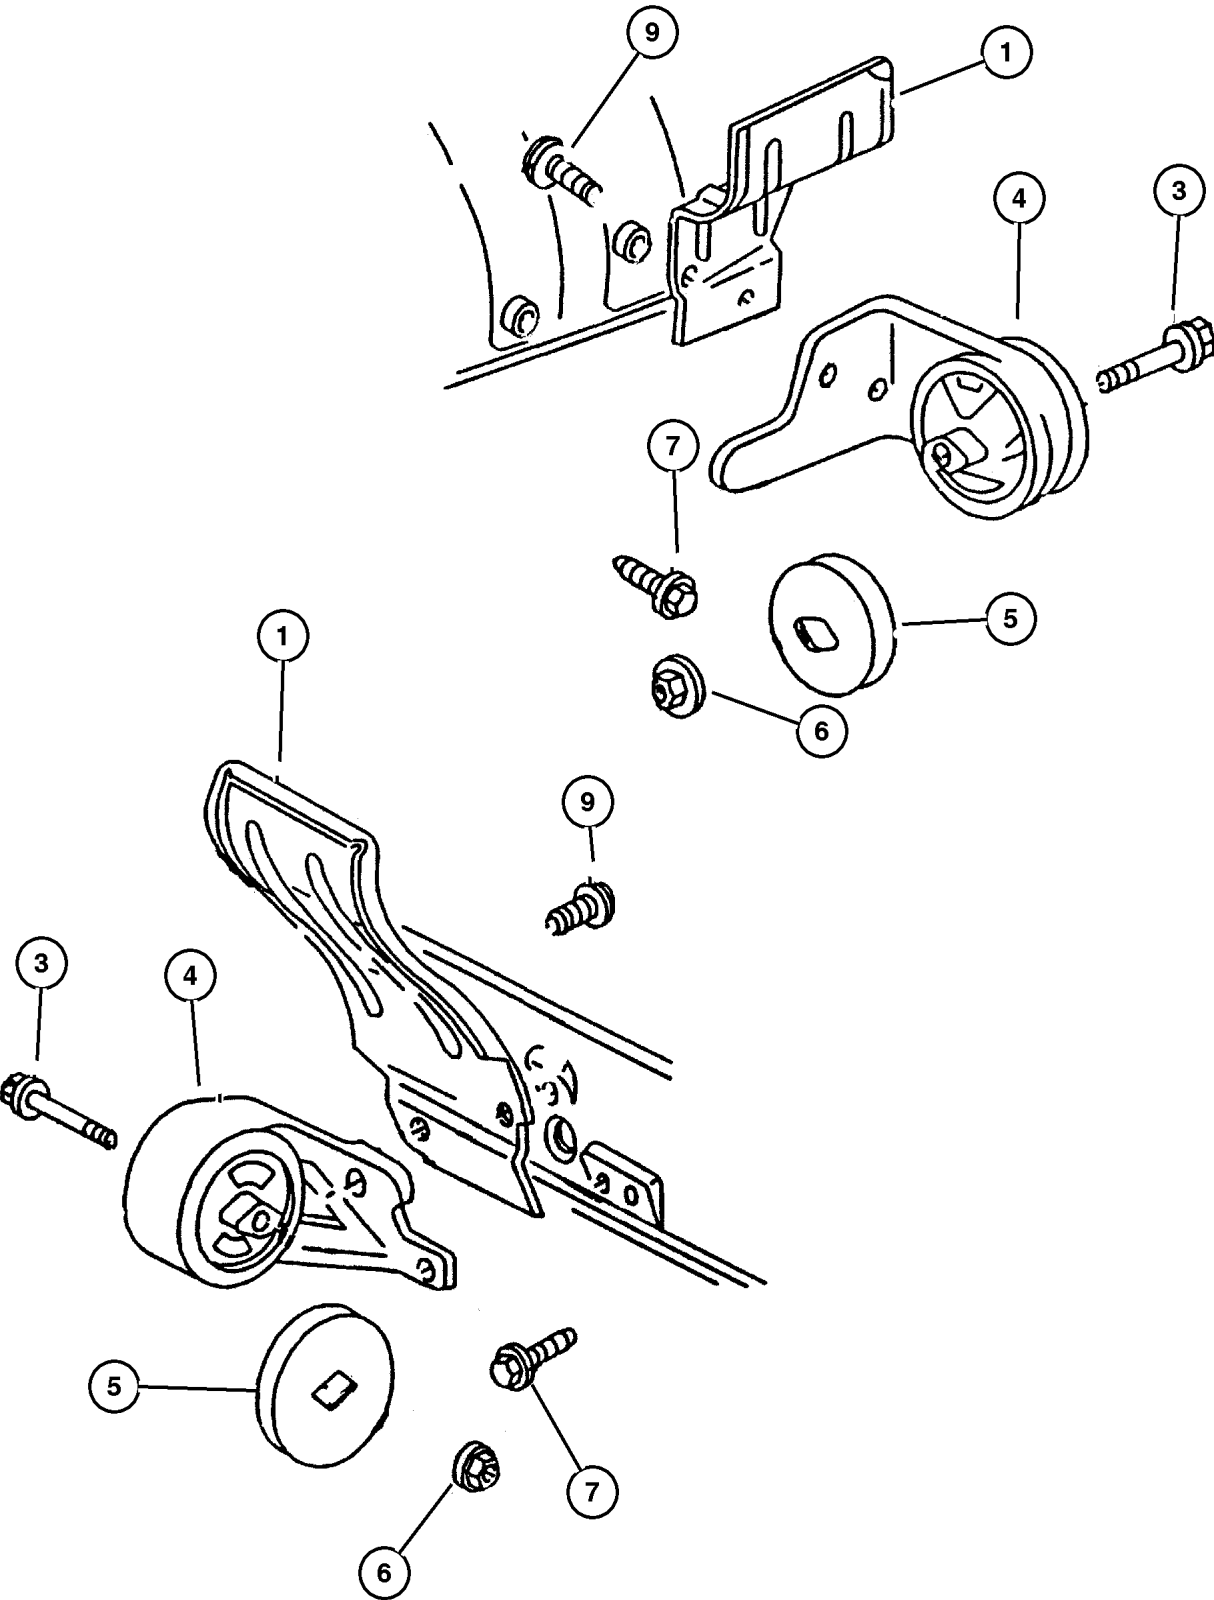Engine Mounting, Front 5.2L (ELF), 5.9L (EML), 5.9 (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine
Figure 009-110




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5201 9982	1	6			EL0,			Small
		1	1			EM0			Small
	5205 8447	2	2, 3, 7, 8			EL0,			Large
						EM0			
6									NUT, M12x1.75, (NOT SERVICED) (Not Serviced)
7	6035 212	6				EL0,			SCREW, Hex Flange Head, .375- 16x1.125
						EM0,			
						EW0			
-8	4864 516	8				ETC			BOLT, Hex Flange Head
		8				ETH	DBB		
9									SCREW, .190x.625, (NOT SERVICED) (Not Serviced)

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

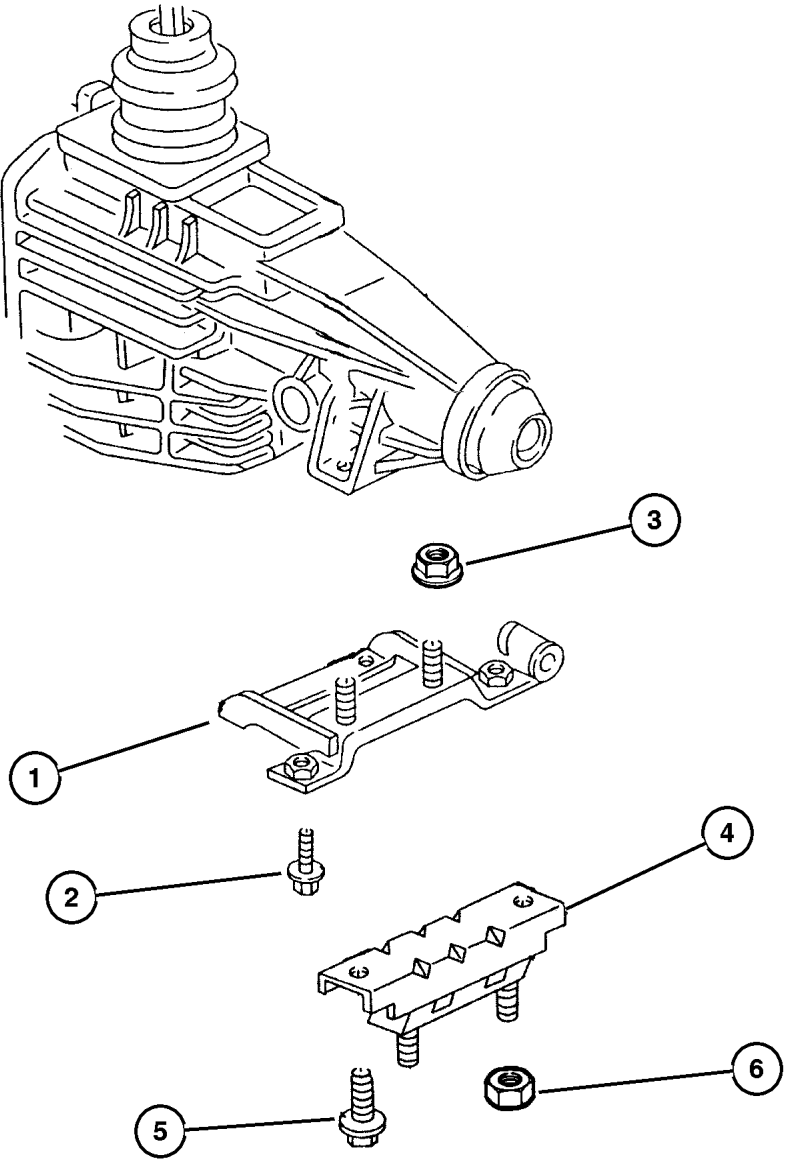Engine Mounting, Rear, 2WD 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine
Figure 009-120



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note: Sales Code
DDC = 5 Speed Heavy Duty Manual Transmission
DDP = 5 Speed Manual Transmission
DDX = 5 Speed Heavy Duty Manual Transmission
DEE = 6 Speed Heavy Duty Manual Transmission
DG0 = All Automatic Transmissions
EL0 = All 5.2L 8 Cyl Gas Engines
EM0 = All 5.9L 8 Cyl Gas Engines
ET0 = All 5.9L Turbo Diesel Engines
EW0 = All 8.0L Gas Engines


1	5201 9637	1	1, 2, 3			EL0, EM0	DG0		BRACKET, Transmission Mount
	5201 9639	1	1			EL0, EM0	DDC		
	5201 9641	1	6			EL0, EM0	DDC		
		1					DDP, DDX DG0		
	5205 8695	1	1, 2, 3			ET0, EW0			
	52019 603AB	1				ET0	DEE		
2									SCREW AND WASHER, Hex Head Locking, .437-14x1.25
	6033 358	4	6, 7, 8						
		2					DDP, DDX DG0 DEE		
		3	1, 2, 3						
		4							
3									NUT, M10x1.50, (NOT SERVICED) (Not Serviced)
4									INSULATOR, Engine Mount
	5205 8218	1	1, 2, 3			EL0, EM0, EW0 ET0			
	52021 367AA	1	2, 3, 7, 8						
5									SCREW, M10x1.50x30.00, (NOT SERVICED) (Not Serviced)
6	6101 761	2							NUT, Coned Washer, M10 x 1.50

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

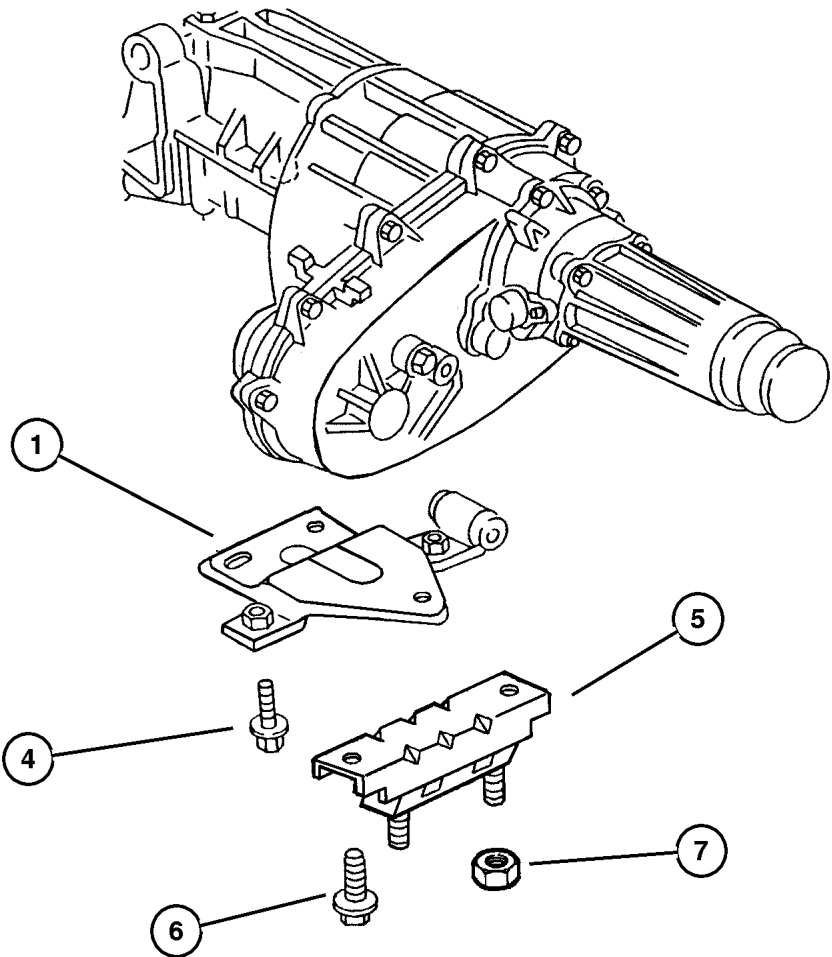Engine Mounting, Rear, 4WD 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine
Figure 009-130



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note: Sales Code

DDC = 5 Speed Heavy Duty Manual Transmission

DDP = 5 Speed Manual Transmission

DDX = 5 Speed Heavy Duty Manual Transmission

DEE = 6 Speed Heavy Duty Manual Transmission

DG0 = All Automatic Transmissions

EL0 = All 5.2L 8 Cyl Gas Engines

EM0 = All 5.9L 8 Cyl Gas Engines

ET0 = All 5.9L Turbo Diesel Engines

EW0 = All 8.0L Gas Engines

1	5201 9641	1	6			EL0, EM0	DDC		BRACKET, Transmission Mount
		1					DDP, DDX DEE		
-2	52019 603AB	1				ET0	DG0		BRACKET, Transmission Case
	52058 593AB-	1	6, 7, 8			EL0, EM0			Mounting
-3	52058 693AB-	1	6, 7, 8			ET0, EW0	DG0		BRACKET, Transfer Case Shaft
4									SCREW AND WASHER, Hex Head
	6033 358	4	6, 7, 8						Locking, .437-14x1.25
		2					DDP, DDX		
		3	1, 2, 3				DG0		
		2	1, 6				DDC		
		4					DEE		
5									INSULATOR, Engine Mount
	52020 251AA	1	6			EL0, EM0			
	52021 367AA	1	2, 3, 7, 8			ET0			
6									SCREW, M10x1.50x30.00, (NOT
									SERVICED) (Not Serviced)
7	6101 761	2							NUT, Coned Washer, M10 x 1.50

DODGE RAM QUAD CAB/CLUB CAB (BE)


SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year


September 16, 2005

Group – 5.2L

Engine 5.2L Eight Cylinder



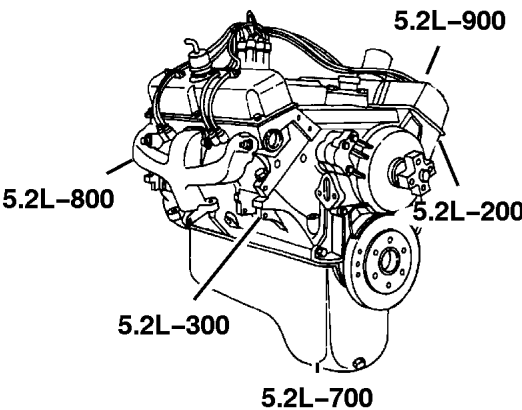5.2L-100




GROUP 5.2L - Engine 5.2L Eight Cylinder

Illustration Title	Group-Fig. No.
Cylinder Head Cylinder Head 5.2L (ELF) Engine	Fig. 5.2L-210
Cylinder Block Cylinder Block 5.2L (ELF) Engine	Fig. 5.2L-310
Crankshaft, Piston and Torque Converter Crankshaft, Piston and Torque Converter 5.2L (ELF) Engine	Fig. 5.2L-410
Camshafts & Valves Camshaft and Valves 5.2L (ELF) Engine	Fig. 5.2L-510
Timing Belt and Cover Timing Gear and Cover 5.2L (ELF) Engine	Fig. 5.2L-610
Engine Oiling Engine Oiling 5.2L (ELF) Engine	Fig. 5.2L-710
Manifolds Manifold, Intake and Exhaust 5.2L (ELF) Engine	Fig. 5.2L-810
Crankcase Ventilation Crankcase Ventilation 5.2L (ELF) Engine	Fig. 5.2L-910

5.2L-200 Cylinder Head	5.2L-300 Cylinder Block	5.2L-400 Crankshaft, Piston and Torque Converter	5.2L-500 Camshafts & Valves
5.2L-600 Timing Belt and Cover	5.2L-700 Engine Oiling	5.2L-800 Manifolds	5.2L-900 Crankcase Ventilation

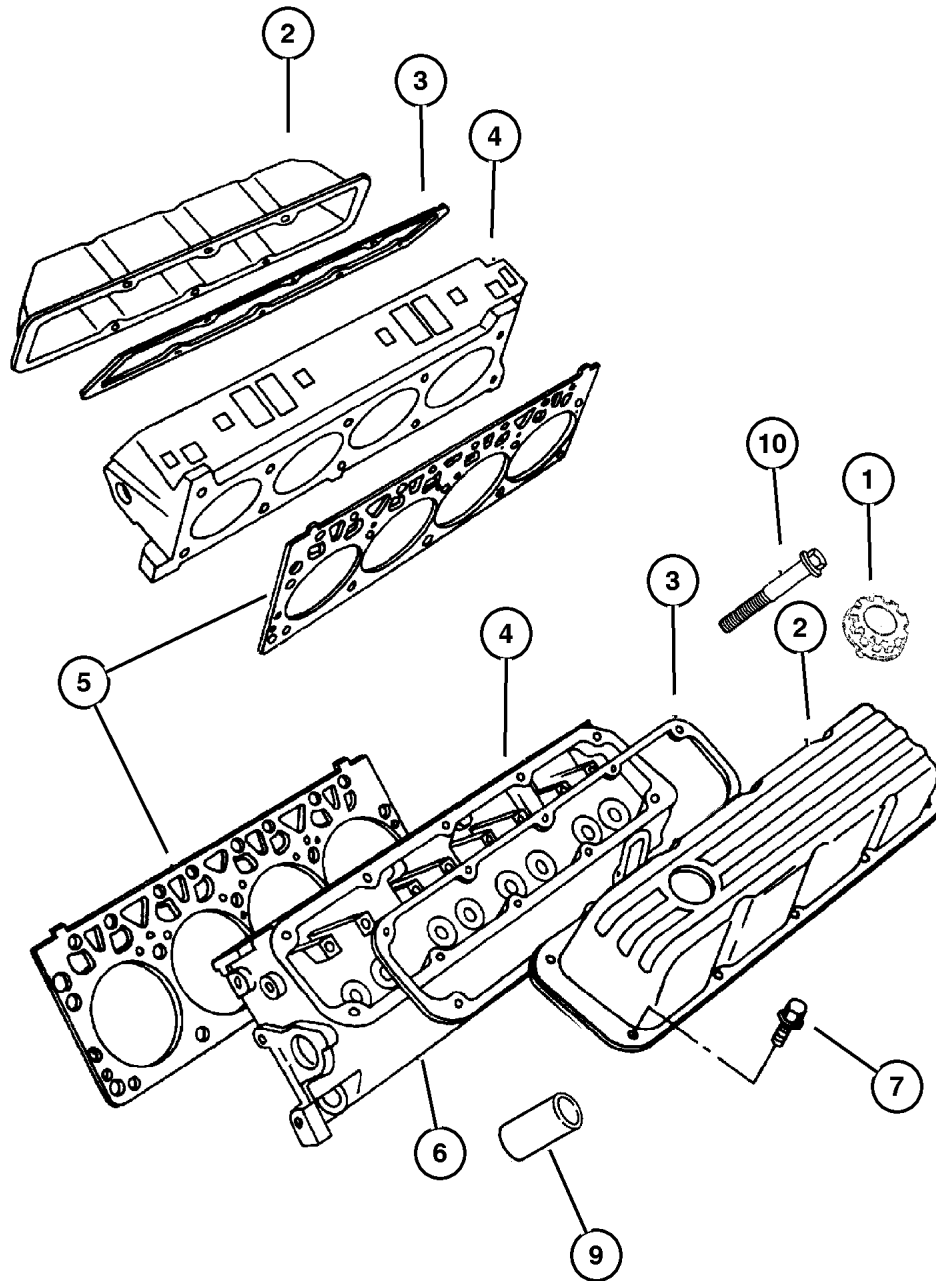Cylinder Head 5.2L (ELF) Engine Figure 5.2L-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE:									
Packages Do Not Contain Gaskets For All Required Sealing. R.T.V. Sealer And Gasket Eliminator Must Also Be Used.									
ELF = Magnum 5.2L SMPI V8 Engine									
EL0 = All 5.2L 8 Cyl Gas Engines									
EM0 = All 5.9L 8 Cyl Gas Engines									
1	4777 536	1				EL0, EM0			CAP, Oil Filler
2	53020 340AC	1				EL0, EM0			COVER, Cylinder Head With Oil Fill Hole
	53020 612AC	1				EL0, EM0			W/O Oil Fill Hole
3	5300 6695	2				EL0, EM0			GASKET, Valve Cover
4	5302 1137	2				ELF			HEAD, Cylinder
5	5302 0490	2				EL0			GASKET, Cylinder Head
6	4556 020	4				ELF			PLUG, Core, 1.25 Diameter
7	6035 878AA	12				EL0, EM0			STUD
-8	6035 877AA-	7				EL0, EM0			SCREW AND WASHER, Hex Head, .25-20x.875
9	5302 0419	8				EL0, EM0			SHIELD, Heat
10	6034 690	10				EL0, EM0			BOLT, Cylinder Head .50-13x2.00
	6034 691	10				EL0, EM0			.50x4.625
-11	4897 385AB-	1				EL0			GASKET PACKAGE, Engine


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

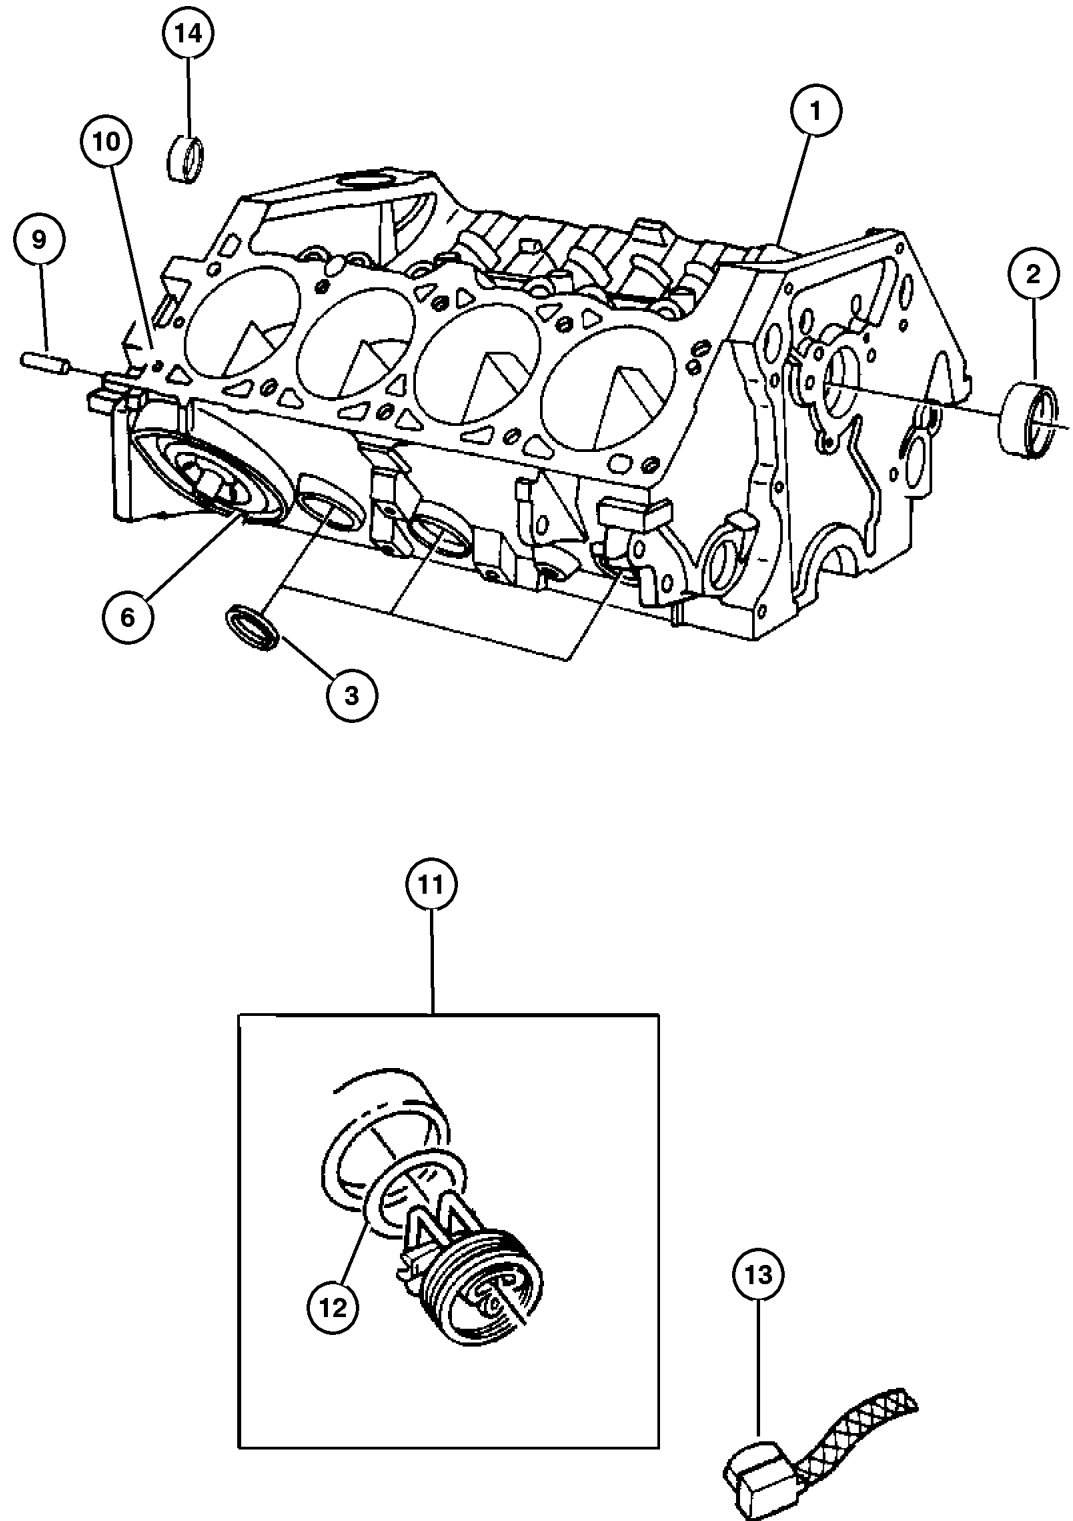Cylinder Block 5.2L (ELF) Engine Figure 5.2L-310



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE:									
Packages Do Not Contain Gaskets For All Required Sealing. R.T.V. Sealer And Gasket Eliminator Must Also Be Used.									
GASKET PACKAGE, Engine Lower - 04720740									
EL0 = All 5.2L 8 Cyl Gas Engines									
EM0 = All 5.9L 8 Cyl Gas Engines									
EW0 = All 8.0L Gas Engines									
1	4713 602	1				EL0			BLOCK, Short, Contains: Crank, Rods, Pistons, Rings, Cam Bearings
2	3830 603	1				EL0			BEARING, Camshaft, #1
3	4556 020	1				EL0			PLUG, Core, 1.25 Diameter
-4	4556 022	9				EL0			PLUG, Core, 1.625 Diameter
-5	4556 023	AR				EL0,			PLUG, Core, 1.695 Diameter
6	3751 818	2				EM0			PLUG, Pipe
-7	5300 9518	1				EL0			PLUG, Cylinder Block Oil Hole
-8									PLUG, Cylinder Block Oil Hole, (NOT SERVICED) (Not Serviced)
9	1122 532	2				EL0			DOWEL, Block To Clutch Housing
10	0141 215	4				EL0			DOWEL, .312 x .500
11	4798 276	1				EL0,			HEATER PACKAGE, Engine Block
12						EM0			O RING, Engine Block Heater
	6501 445	AR							1-11/32 Diameter 11/64 Width
	6501 446	1				EL0,			1-11/32 Diameter 09/64 Width
13	5602 0061	1				EM0			CORD, Engine Block Heater
						EL0,			
						EM0,			
						EW0			
14	5302 0465	1				EL0			PLUG, Cylinder Block


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

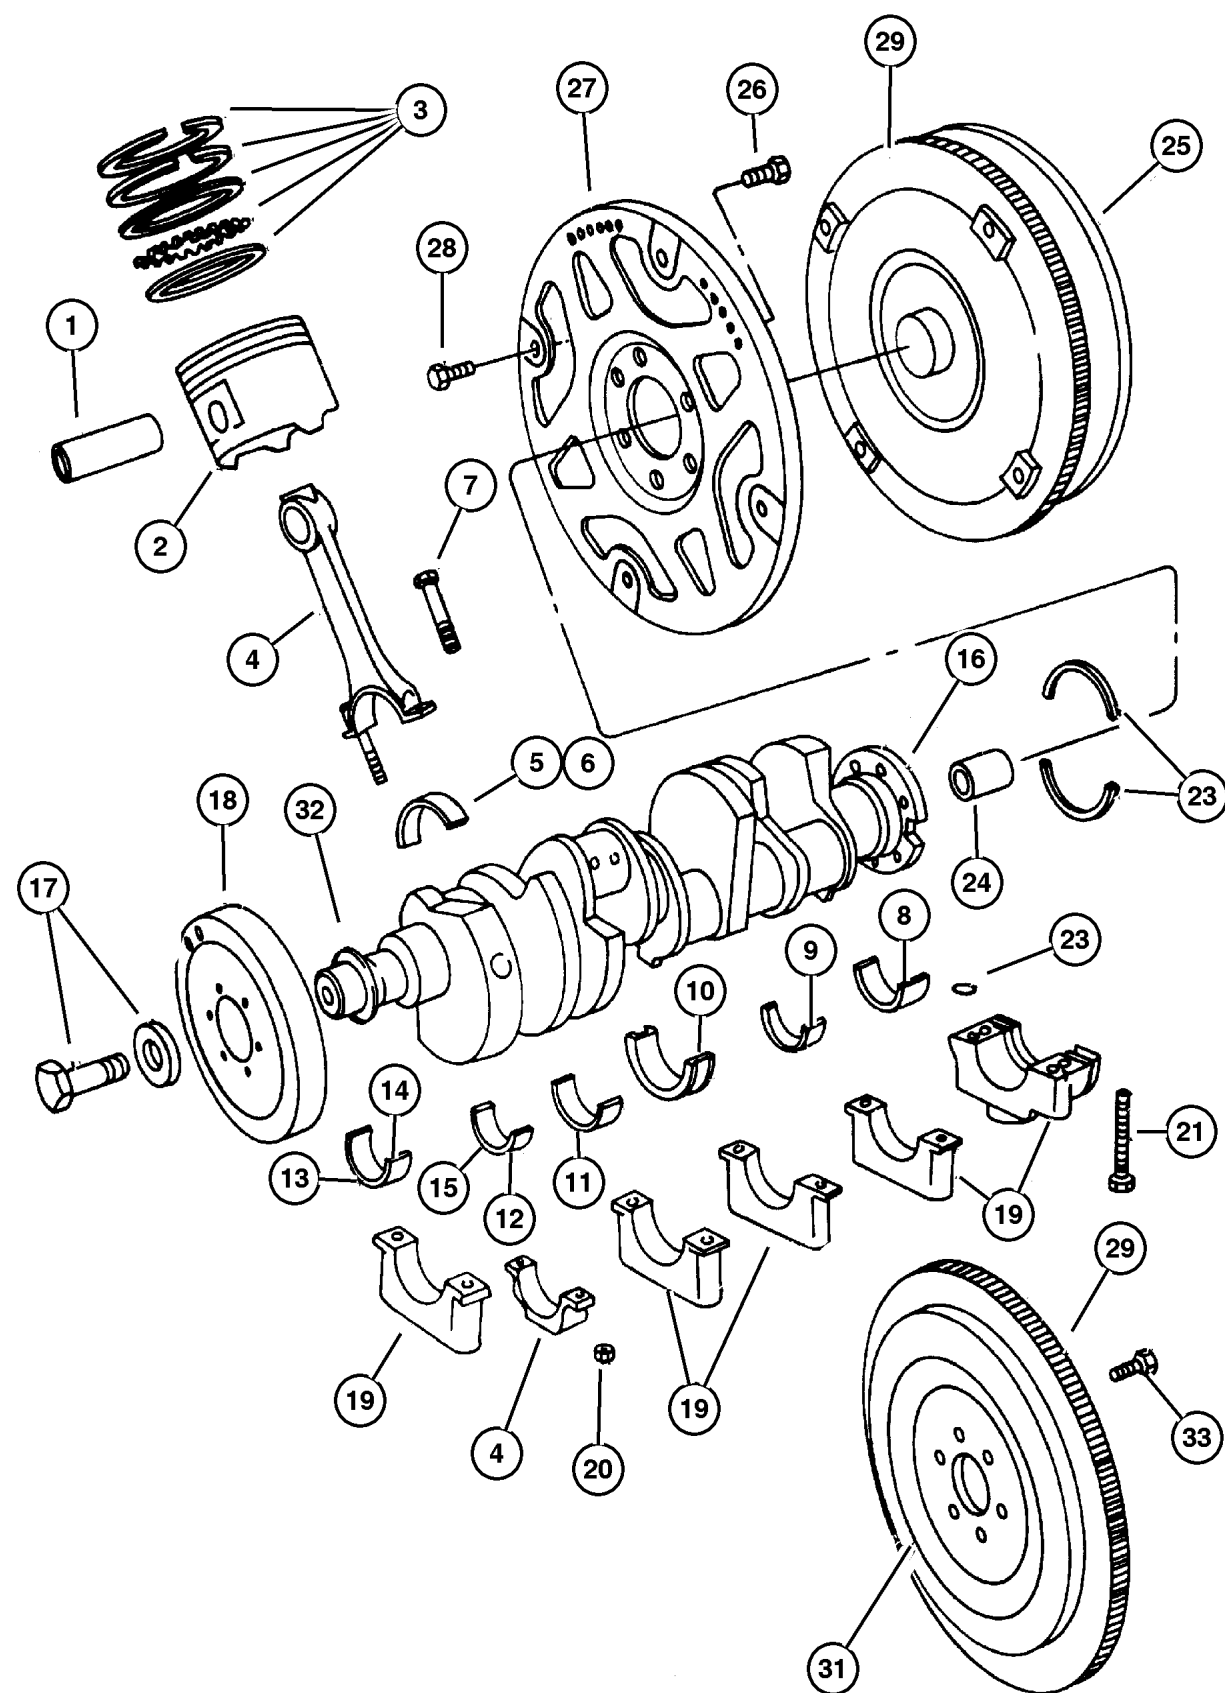Crankshaft, Piston and Torque Converter 5.2L (ELF) Engine
Figure 5.2L-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
DBB = All Manual Transmissions									
DGO = All Automatic Transmissions									
ELO = All 5.2L 8 Cyl Gas Engines									
EMO = All 5.9L 8 Cyl Gas Engines									
1									PIN, Piston, Serviced in Piston, (NOT SERVICED) (Not Serviced)
2									PISTON PIN AND ROD
	4778 855	4				ELO			#1,3,5,7 A,B Size, 3.90875, 3.90925
	4778 856	4				ELO			#2,4,6,8 A,B Size, 3.90875, 3.90925
	4778 858	4				ELO			#2,4,6,8 C Size, 3.90975
	4778 860	4				ELO			#2,4,6,8 D Size, 3.91025
3	4720 727	1				ELO			RING PACKAGE, Piston
4									ROD, Connecting, Serviced in Piston, (NOT SERVICED) (Not Serviced)
5	2421 305	4				ELO			BEARING, Connecting Rod, STD., Quantity listed is per cylinder bank
6	2421 306	AR				ELO			BEARING, Connecting Rod, .001" U/S
7	6033 441	8				ELO			BOLT, Connecting Rod
8	4397 778	4				ELO			BEARING PACKAGE, Crankshaft, Standard Size
9	4397 780	AR				ELO			BEARING PACKAGE, Crankshaft, .001 Undersize
10	4397 777	2				ELO			BEARING PACKAGE, Crankshaft, Standard Size
11	4397 781	AR				ELO			BEARING PACKAGE, Crankshaft, .001 Undersize
12	4720 595	2				ELO			BEARING, Crankshaft, STD.
13	4720 596	AR				ELO			BEARING PACKAGE, Crankshaft, .001 Undersize
14	4397 701	1				ELO			BEARING PACKAGE, Crankshaft, Standard Size
15	4397 702	AR				ELO			BEARING PACKAGE, Crankshaft, .001 Undersize
16	5302 0603	1				ELO			CRANKSHAFT


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, ELO = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EMO = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DGO = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

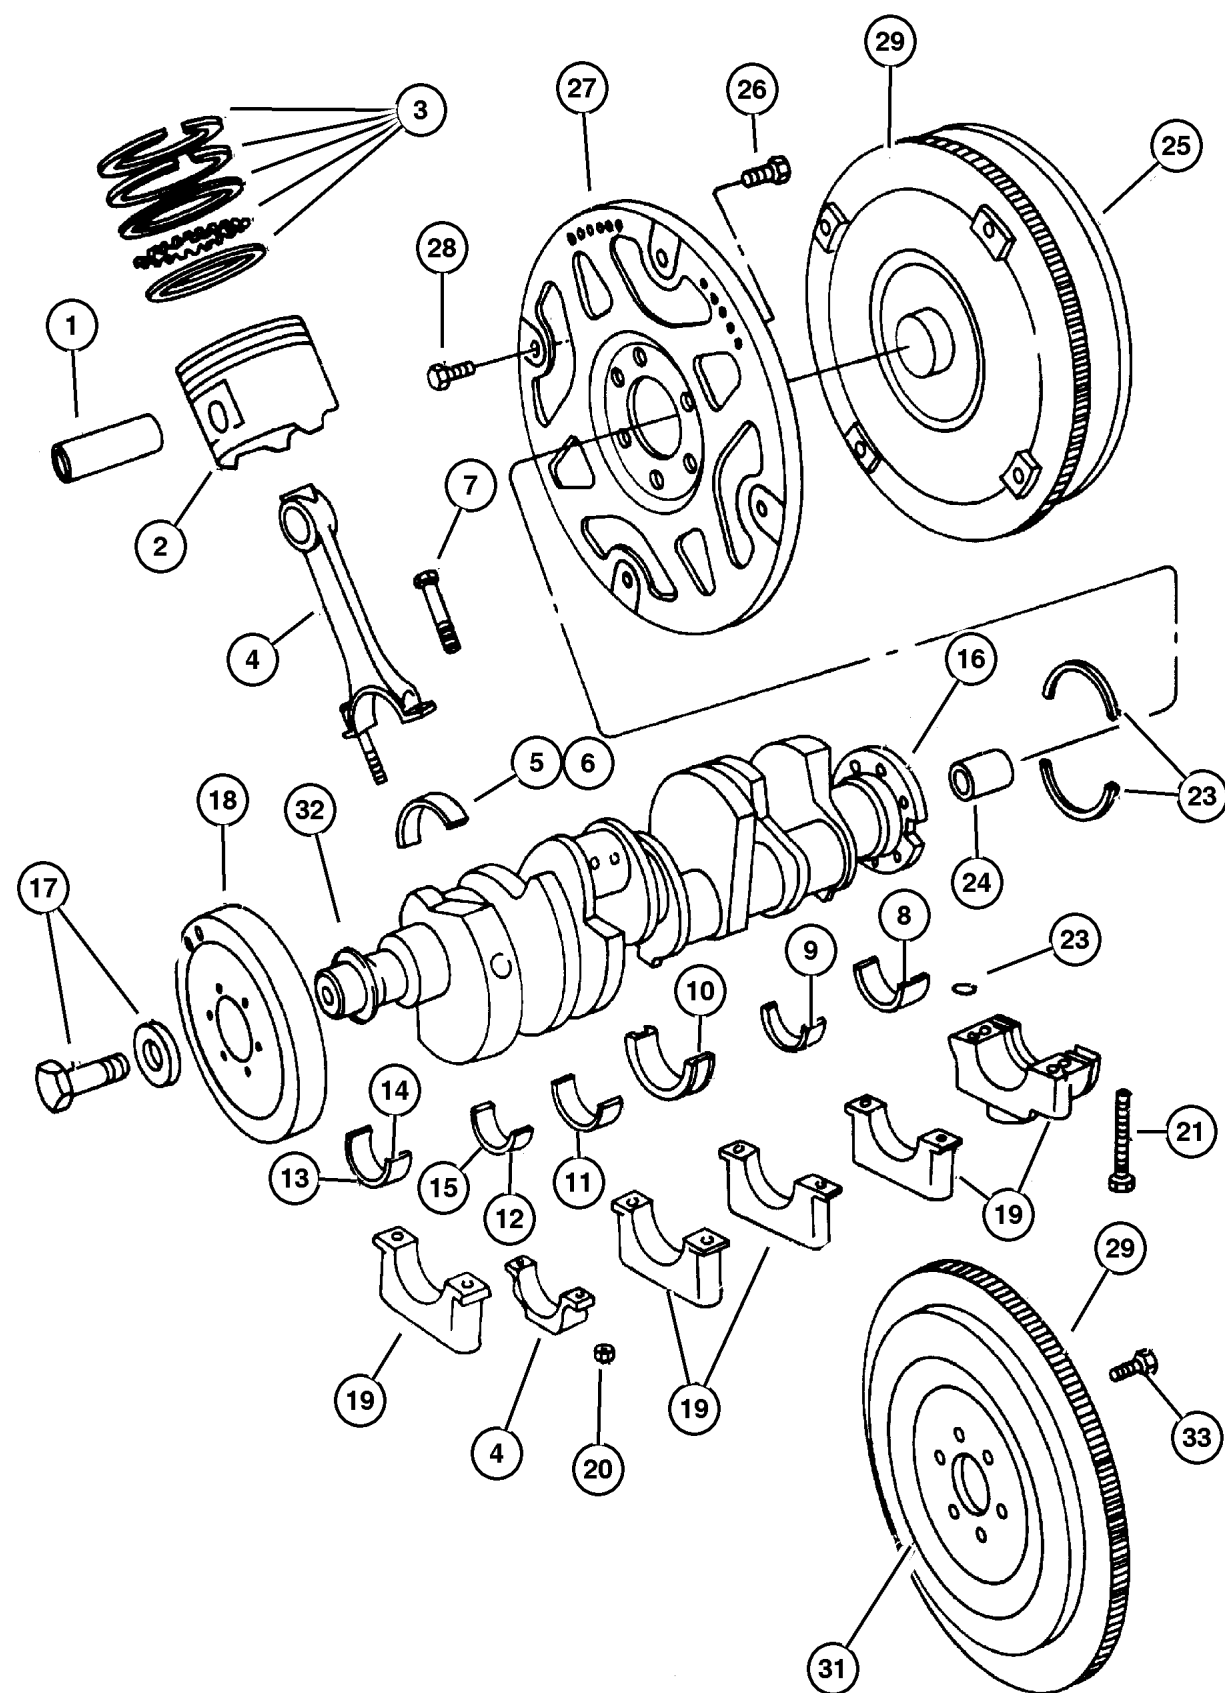Crankshaft, Piston and Torque Converter 5.2L (ELF) Engine
Figure 5.2L-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
17	6036 207AA	1				EL0, EM0			SCREW AND WASHER
18	5302 0229	1				EL0			DAMPER, Crankshaft
19									CAP, Serviced in Block, (NOT SERVICED) (Not Serviced)
20	6032 296	8				EL0			NUT, Hex, .375-24
21	6027 264	8				EL0			SCREW, Socket Hex Head, .50- 13x3.25, #1,2,3
-22	6033 300	2				EL0			SCREW, Cap, .50-13x2.80, #4
23	4778 228	2				EL0			SEAL PACKAGE, Crankshaft
24	53009 180AB	1				EL0	DBB		BEARING, Pilot
25	4736 595	1				EL0	DG0		TORQUE CONVERTER
26	1949 424	6				EL0, EM0	DG0		SCREW, Hex Head Header Point, .75-16x2.25
27	5211 8255	1				EL0	DG0		PLATE, Torque Converter Drive
28	1949 765	4				EL0, EM0	DG0		SCREW, Hex Head Header Point, .312-24x.44
29	2843 214	1				EL0	DBB		GEAR, Flywheel Ring
-30	3515 203	1				EL0	DG0		GEAR, Ring
31	5302 0521	1				EL0	DBB		FLYWHEEL
32	6035 948AA	1				EL0, EM0			WASHER, Sealing
33	6036 143AA	6				EL0, EM0	DBB		SCREW


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

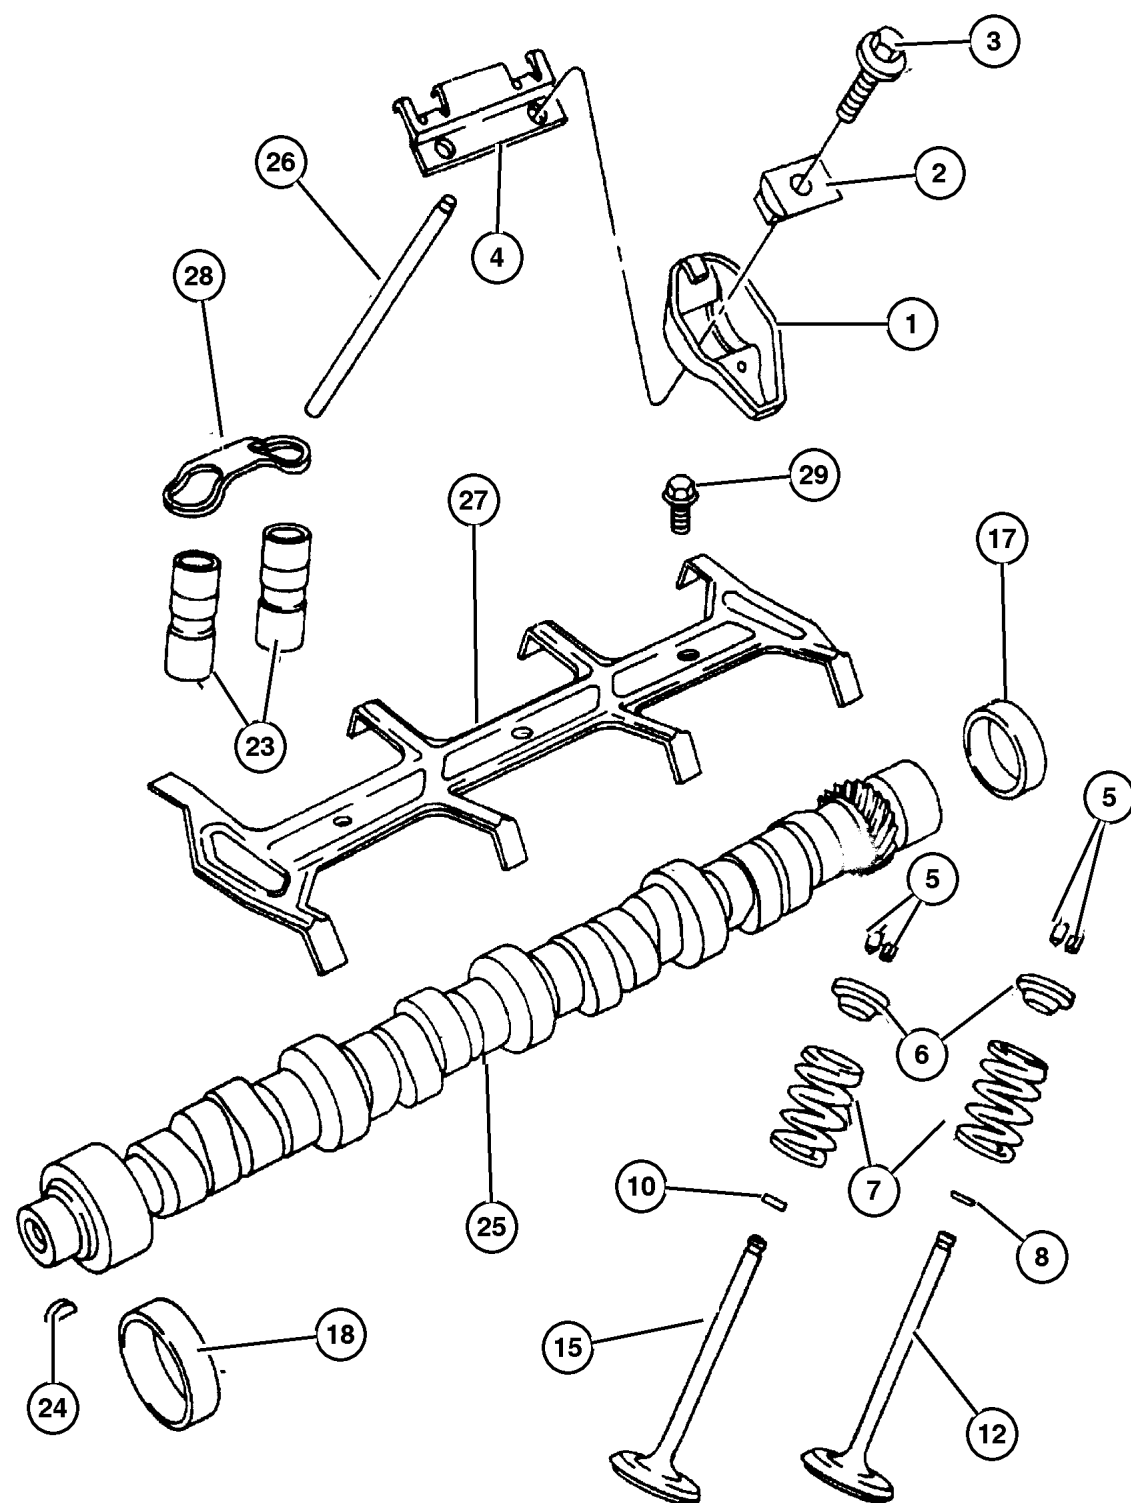Camshaft and Valves 5.2L (ELF) Engine Figure 5.2L-510



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
ELF = Magnum 5.2L SMPI V8 Engine									
EL0 = All 5.2L 8 Cyl Gas Engines									
EM0 = All 5.9L 8 Cyl Gas Engines									
1	5300 8282	16				EL0,			ROCKER ARM, Valve
2	5300 8283	16				EM0			PIVOT, Rocker Arm
3	6036 154AA	16				EL0,			BOLT, Hex Flange Head, .312-18x1.
4	5300 8633	8				EM0			RETAINER, Rocker Arm Pivot
5	3300 3521	32				EL0,			LOCK, Valve Spring Retainer
6	3300 4626	16				EM0			RETAINER, Valve Spring
7	5302 1056	16				EL0,			SPRING, Valve
8	5300 9886	8				EM0			SEAL, Valve Guide, Standard, .003
-9	3300 3016	AR				ELF,			O/S
10	5300 9887	8				EM0			SEAL, Valve Guide, .015" Oversize
-11	3300 2733	AR				EL0			O/S
12	5300 6723	8				ELF,			VALVE, Intake, Standard
-13	5300 9287	AR				EM0			VALVE, Intake, .003" O/S
-14	5300 9285	AR				EL0			VALVE, Intake, .015" O/S
15	5300 6724	8				EL0,			VALVE, Exhaust, Standard
-16	5300 9291	AR				EM0			VALVE, Exhaust, .003" O/S
17	2863 071	1				EL0			PLUG, Camshaft
18	3830 603	1				EL0			BEARING, Camshaft, #1
-19	4179 776	1				EL0			BEARING, Camshaft, #2
-20	4179 777	1				EL0			BEARING, Camshaft, #3
-21	4179 778	1				EL0			BEARING, Camshaft, #3 or #4
-22	1632 526	1				EL0			BEARING, Camshaft, #4 or #5
23	4713 439	16				EL0			TAPPET PACKAGE, Valve
24	0431 787	1				EL0,			KEY, Camshaft Sprocket
						EM0			

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

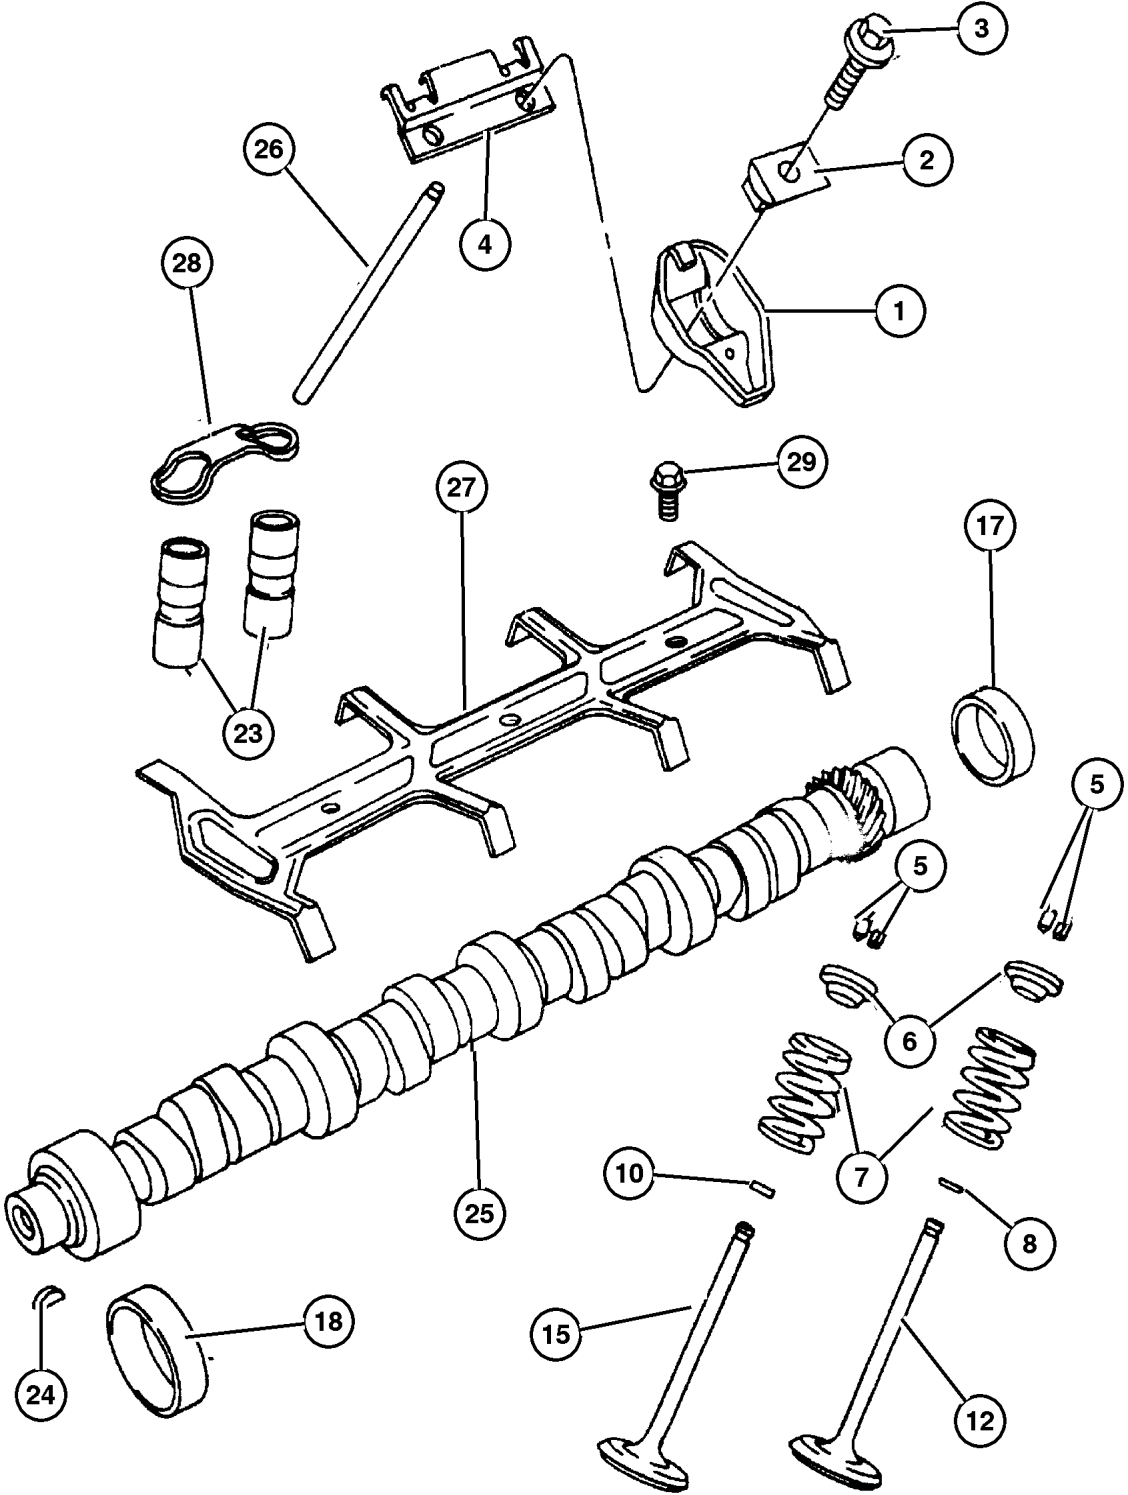
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Camshaft and Valves 5.2L (ELF) Engine
Figure 5.2L-510



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
25	5302 0283	1				EL0			CAMSHAFT, Engine
26	5300 6722	16				EL0, EM0			PUSH ROD, Valve
27	4323 207	1				EL0, EM0			RETAINER, Tappet Yoke Aligning
28	4483 045	8				EL0, EM0			YOKE, Tappet Aligning
29	6034 549	4				EL0, EM0			SCREW, Hex Head, .312-18x.94

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Timing Gear and Cover 5.2L (ELF) Engine Figure 5.2L-610

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

EL0 = All 5.2L 8 Cyl Gas Engines

EM0 = All 5.9L 8 Cyl Gas Engines

1	4897 297AA	1				EL0			SEAL PACKAGE, Timing Case Cover
2	5302 1057	1				EL0, EM0			GASKET, Chain Case Cover
3	4897 723AA	1				EL0			COVER PACKAGE, Engine Timing
4	3671 649	1				EL0, EM0			TAB, Timing Chain Oil
5	4315 764	1				EL0, EM0			PLATE, Camshaft Thrust
6	1947 953	3				EL0, EM0			SCREW AND WASHER, Hex Head
7	6029 411	1				EL0			KEY, Crankshaft Sprocket
8	6029 411	1				EL0			KEY, Crankshaft Sprocket
9	8350 7095	1				EL0			CHAIN PACKAGE, Timing
10	6034 321	1				EL0, EM0			SCREW AND WASHER, Hex Head, Coned, Header, .437-14x1.375
11	6034 479	1				EL0, EM0			BOLT, Hex Head, .375-16x2.25
12	6034 452	1				EL0, EM0			STUD, .375-16x.375-16x2.38
13	6034 453	2				EL0, EM0			STUD, .375-16x.375-16x1.63

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Engine Oiling 5.2L (ELF) Engine
Figure 5.2L-710


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
EL0 = All 5.2L 8 Cyl Gas Engines									
EML = Magnum 5.9L SMPI V8 Engine									
EM0 = All 5.9L 8 Cyl Gas Engines									
1	4071 043	1				EL0			COVER, Engine Oil Pump
2	3837 648	1				EL0			SHAFT AND ROTOR PACKAGE, Oil Pump
3	5302 0462	1				EL0			PICKUP, Engine Oil
4	5300 9295	1				EL0			PUMP, Engine Oil
5	0179 842	2				EL0, EM0			SCREW, Hex Head Header Point, .375-16x1.375
6	1737 725	1				EL0			BUSHING, Oil Pump and Distributor
7	5302 0546	1				EL0, EM0			SHAFT, Oil Pump
8	0108 636	1				EL0			PIN, Cotter
9	2843 208	1				EL0			PLUNGER, Oil Pressure Relief Valve
10	2402 473	1				EL0			SPRING, Oil Pressure Relief Valve
11	2806 273	1				EL0			CAP, Oil Pressure Relief Valve
12	0220 480	5				EL0			SCREW, Hex Head Header Point, .25-20x.75
13	5300 5650	1				EL0			GASKET, Oil Pan
14	6034 549	18				EL0, EM0			SCREW, Hex Head, .312-18x.94
15	5302 0913	1				EL0			PAN, Engine Oil
16	6035 417	1				EL0			PLUG, Oil Drain, w/Gasket
17	5302 0928	1				EL0, EML			INDICATOR, Engine Oil Level
18	5302 0926	1				EL0, EML			TUBE, Oil Gauge
19	5281 090	1				EL0, EM0			FILTER, Engine Oil
20	5300 7563	1				EL0, EM0			CONNECTOR, Oil Filter
21	5302 1053	1				EL0, EM0			PLATE, Oil Filter Adapter
22	5302 0461	1				EL0, EM0			GASKET, Oil Filter Adapter

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

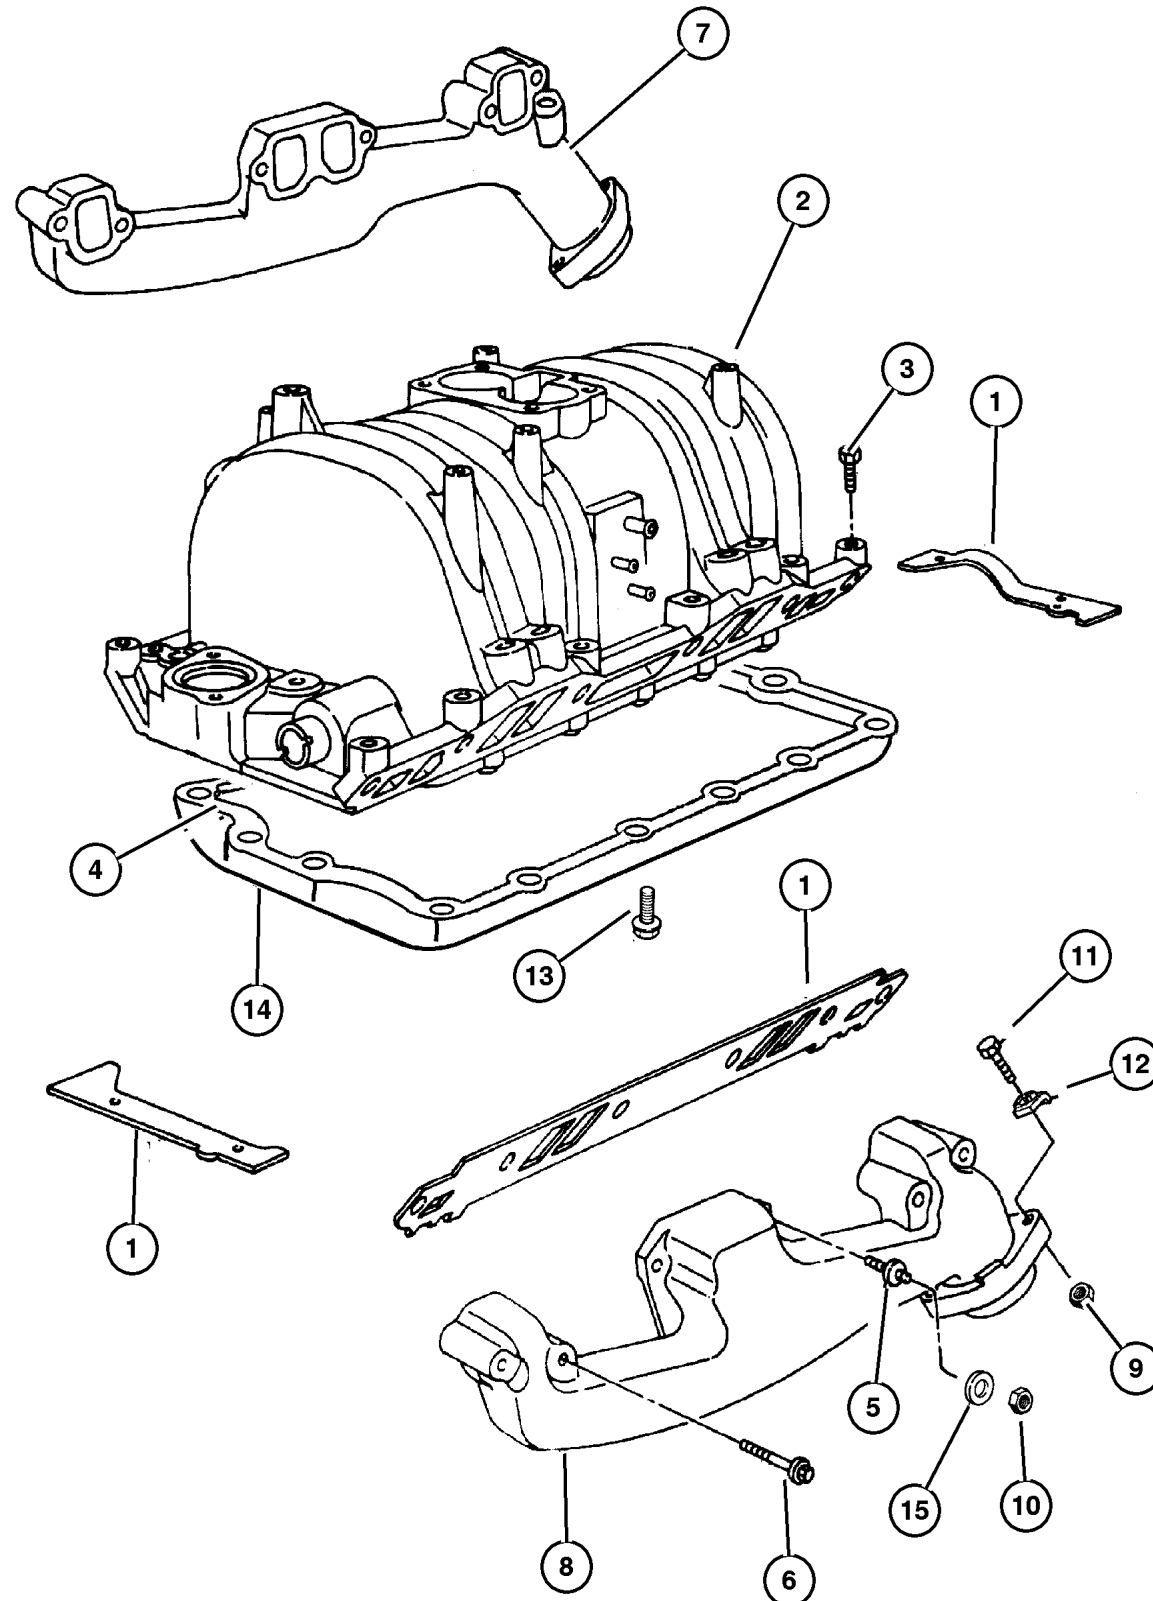Manifold, Intake and Exhaust 5.2L (ELF) Engine Figure 5.2L-810



NOTE:

Packages Do Not Contain Gaskets For All Required Sealing. R.T.V. Sealer And Gasket Eliminator Must Also Be Used.

EL0 = All 5.2L 8 Cyl Gas Engines

EM0 = All 5.9L 8 Cyl Gas Engines

EW0 = All 8.0L Gas Engines

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	4897 383AC	1				EL0, EM0			GASKET PACKAGE, Intake Manifold
2	4897 490AC	1				EL0, EM0			MANIFOLD, Intake
3	6035 967AA	12				EL0, EM0			SCREW AND WASHER, Hex Head
4	5300 6623	1				EL0, EM0			GASKET, Intake Manifold Pan
5	6034 643	4				EL0, EM0			STUD, .312-18/.312-24x2.25
6	6034 806	8				EL0, EM0			SCREW AND WASHER, Hex Head, .312-18x3.125
7	5303 0873	1				EL0			MANIFOLD, Exhaust, Right
8	5301 0189	1				EL0			MANIFOLD, Exhaust, Left
9	0118 615	4				EL0, EM0,			NUT, Hex, .375-16
10	0115 729	4				EW0 EL0, EM0			NUT, Hex, .312 x 24
11	6035 375	4				EL0,			BOLT, Hex Head, .375-16x2.50
12	4004 001	4				EM0 EL0, EM0, EW0			RETAINER, Exhaust Pipe to Manifold
13	6034 583	15				EL0, EM0			SCREW AND WASHER, Hex Head, .25-20x.892
14	5300 6617	1				EL0, EM0			PAN, Intake Manifold
15	5301 0091	4				EL0, EM0			CLAMP, Exhaust Manifold

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

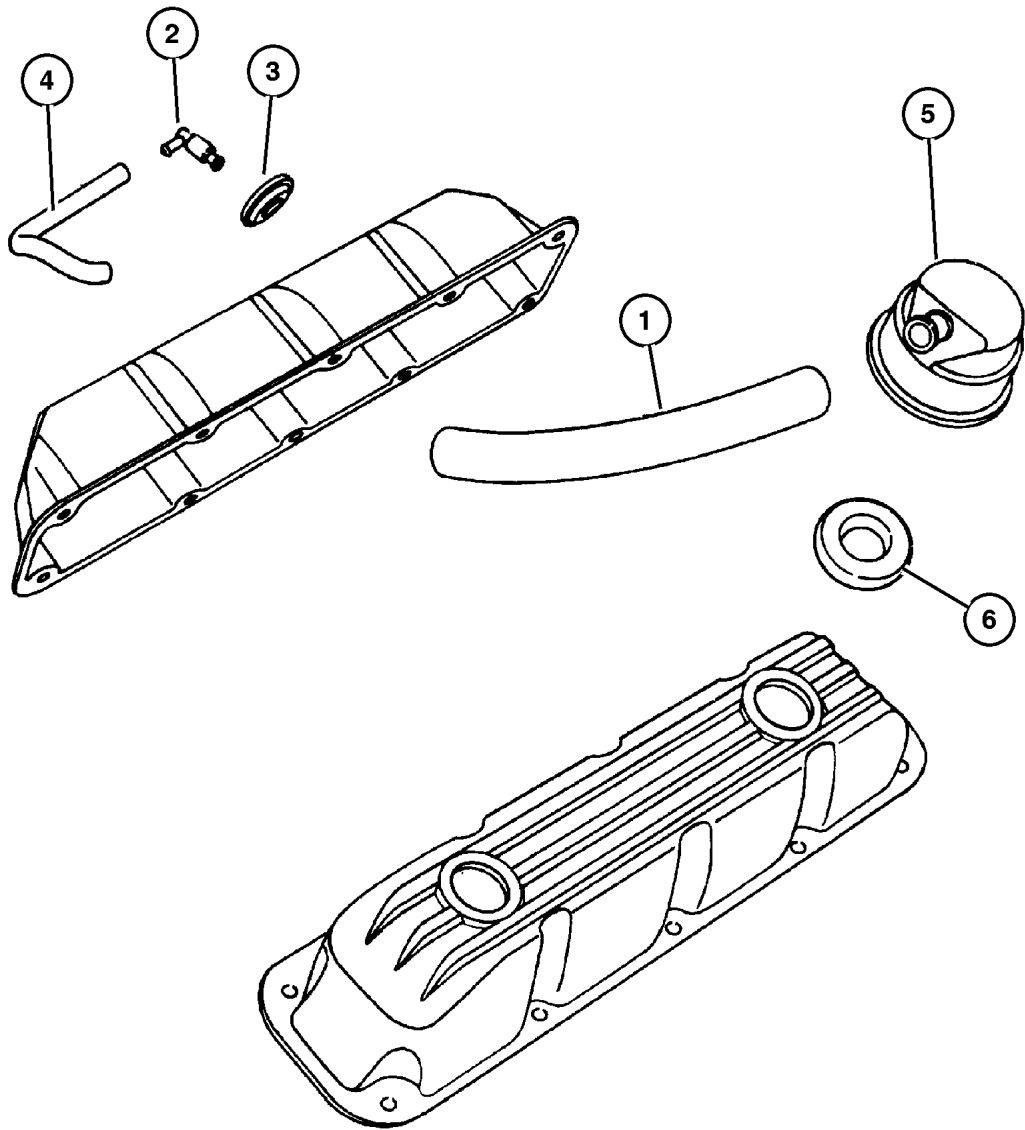
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Crankcase Ventilation 5.2L (ELF) Engine
Figure 5.2L-910



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:
EL0 = All 5.2L 8 Cyl Gas Engines
EM0 = All 5.9L 8 Cyl Gas Engines
EW0 = All 8.0L Gas Engines

1									HOSE, Crankcase Vent
	5300 6342	1				EW0			
	53030 817AD	1				EL0, EM0			
2	5303 1135	1				EL0,			VALVE, Crankcase Vent
						EM0			
3	5303 0017	1				EL0, EM0			GROMMET, Crankcase Vent
4									TUBE, PCV Valve
	5304 1044	1				EW0			
	53008 675AD	1				EL0, EM0			
5	5303 0497	1				EL0,			FITTING, Crankcase Vent Tube
						EM0			
6	2946 079	1				EL0, EM0			GROMMET, Crankcase Vent


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005









Group – 5.9L

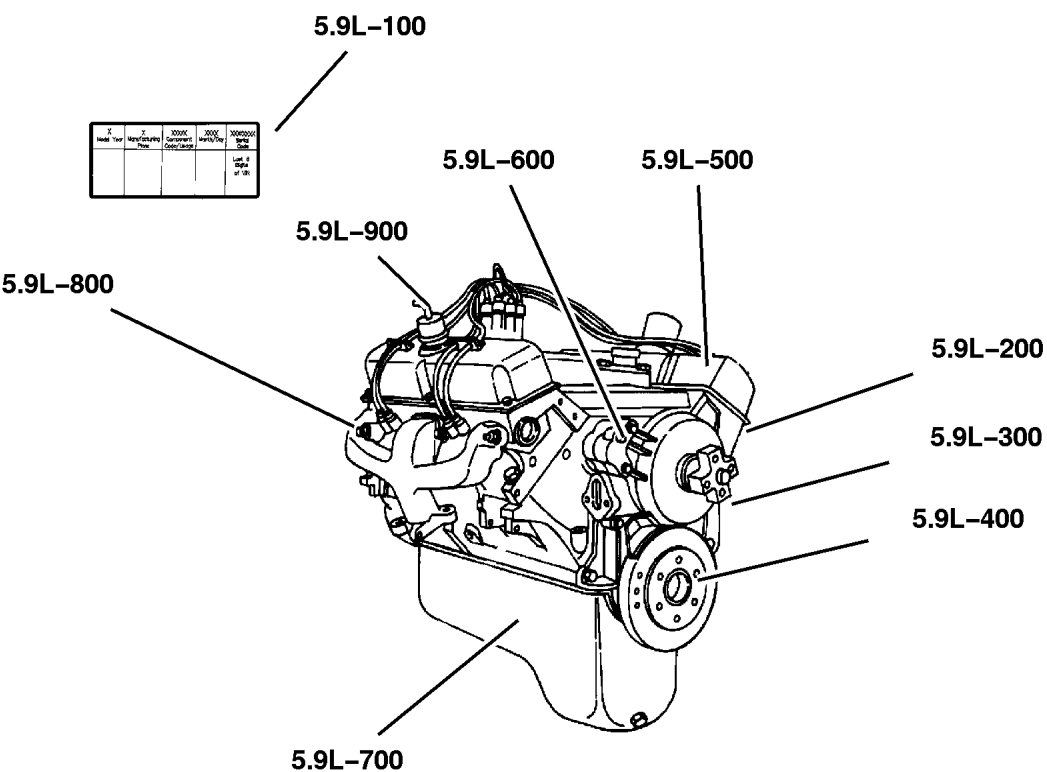Engine 5.9L Eight Cylinder




GROUP 5.9L - Engine 5.9L Eight Cylinder

Illustration Title	Group-Fig. No.
Cylinder Head Cylinder Head 5.9L (EML), 5.9L (EMM) Engine	Fig. 5.9L-210
Cylinder Block Cylinder Block 5.9L (EML), 5.9L (EMM) Engine	Fig. 5.9L-310
Crankshaft, Piston and Torque Converter Crankshaft, Piston and Torque Converter 5.9L (EML), 5.9L (EMM) Engine	Fig. 5.9L-410
Camshafts & Valves Camshaft and Valves 5.9L (EML), 5.9L (EMM) Engine	Fig. 5.9L-510
Timing Belt and Cover Timing Gear and Cover 5.9L (EML), 5.9L (EMM) Engine	Fig. 5.9L-610
Engine Oiling Engine Oiling 5.9L (EML), 5.9L (EMM) Engine	Fig. 5.9L-710
Manifolds Manifold, Intake and Exhaust 5.9L (EML), 5.9L (EMM) Engine	Fig. 5.9L-810
Crankcase Ventilation Crankcase Ventilation 5.9L (EML), 5.9L(EMM) Engine	Fig. 5.9L-910

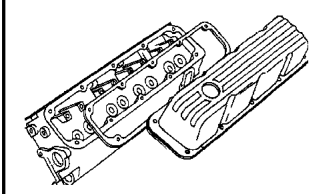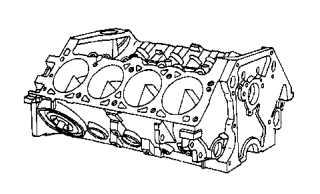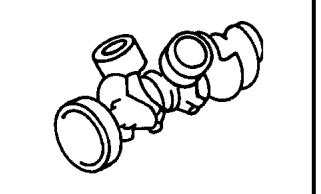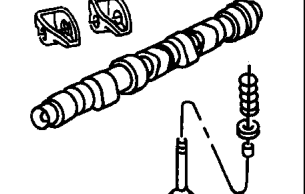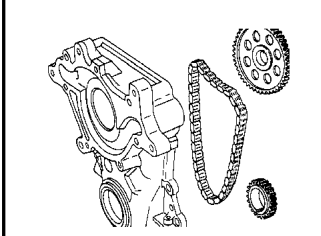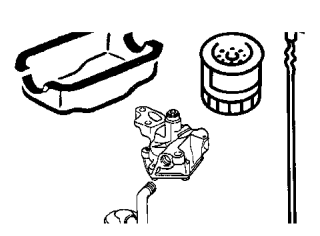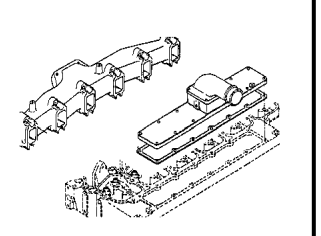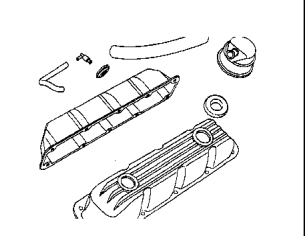5.9L-200 Cylinder Head 	5.9L-300 Cylinder Block 	5.9L-400 Crankshaft, Piston and Torque Converter 	5.9L-500 Camshafts & Valves 
5.9L-600 Timing Belt and Cover 	5.9L-700 Engine Oiling 	5.9L-800 Manifolds 	5.9L-900 Crankcase Ventilation 

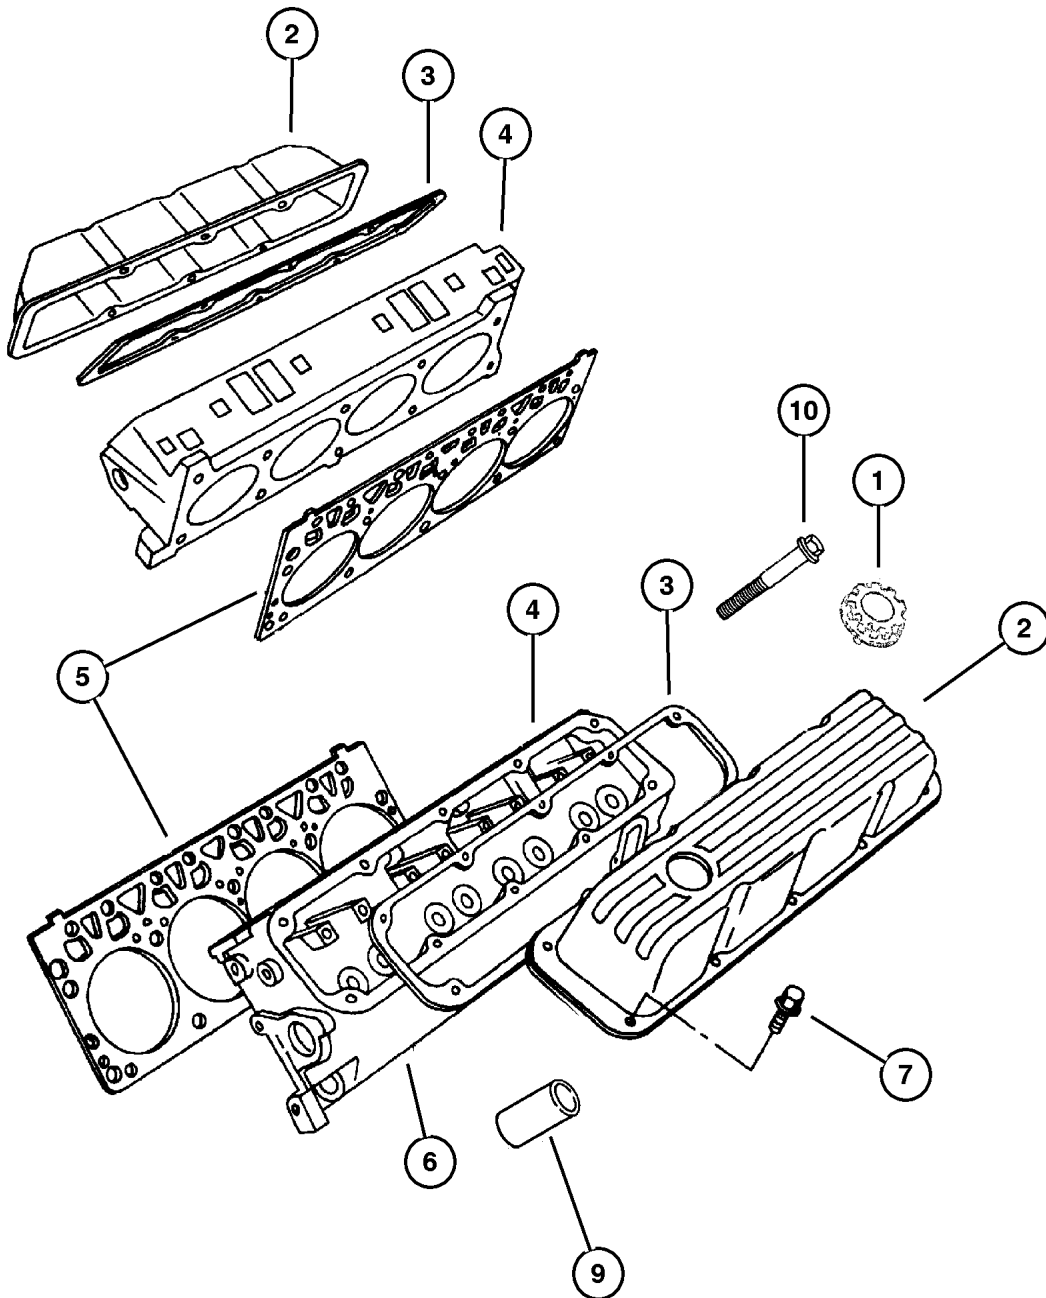Cylinder Head 5.9L (EML), 5.9L (EMM) Engine
Figure 5.9L-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:

Packages Do Not Contain Gaskets For All Required Sealing. R.T.V. Sealer And Gasket Eliminator Must Also Be Used.

EL0 = All 5.2L 8 Cyl Gas Engines

EM0 = All 5.9L 8 Cyl Gas Engines

1	4777 536	1				EL0, EM0			CAP, Oil Filler
2	53020 340AC	1				EL0, EM0			COVER, Cylinder Head With Oil Fill Hole
	53020 612AC	1				EL0, EM0			W/O Oil Fill Hole
3	5300 6695	2				EL0, EM0			GASKET, Valve Cover
4	5302 1137	2				EM0			HEAD, Cylinder
5	5302 1098	2				EM0			GASKET, Cylinder Head
6	4556 020	4				EM0			PLUG, Core, 1.25 Diameter
7	6035 878AA	12				EL0, EM0			STUD
-8	6035 877AA-	7				EL0, EM0			SCREW AND WASHER, Hex Head, .25-20x.875
9	5302 0419	8				EL0, EM0			SHIELD, Heat
10	6034 690	10				EL0, EM0			BOLT, Cylinder Head .50-13x2.00
	6034 691	10				EL0, EM0			.50x4.625
-11	4897 386AC-	1				EM0			GASKET PACKAGE, Engine Upper



DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

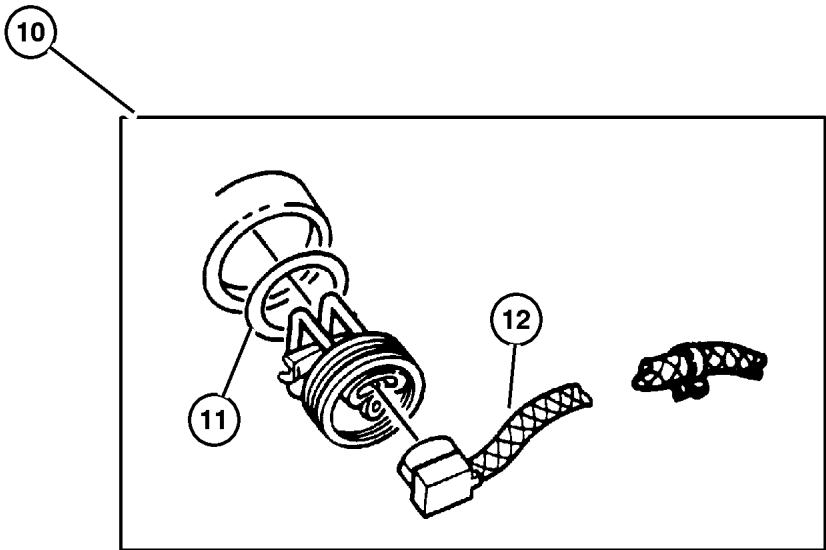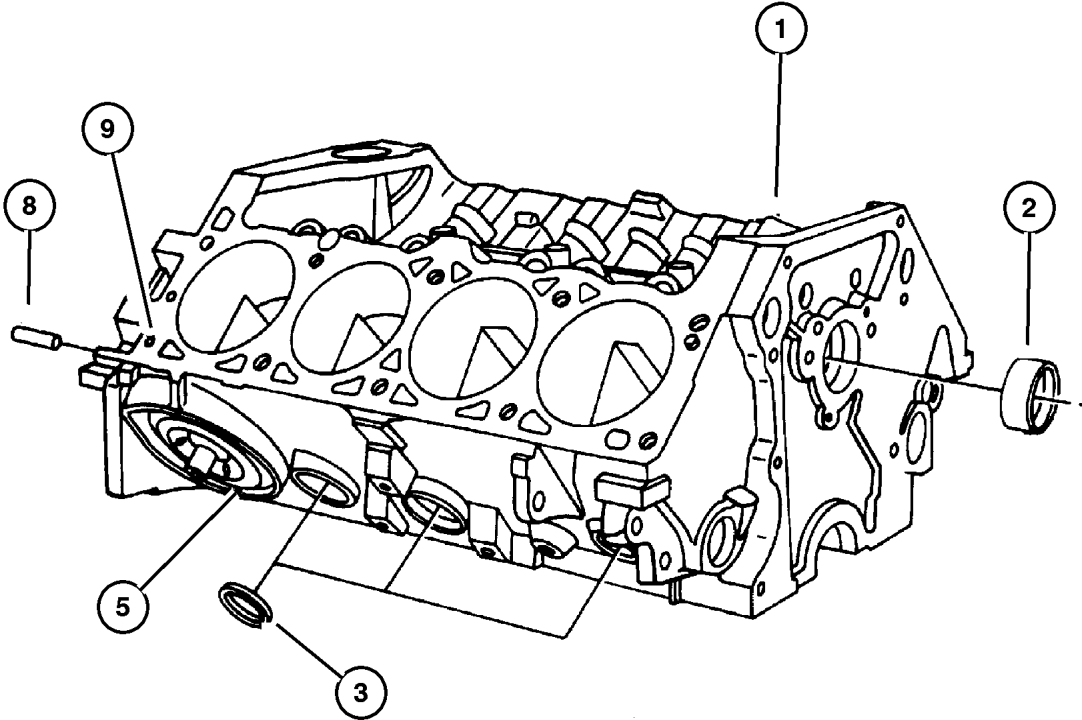Cylinder Block 5.9L (EML), 5.9L (EMM) Engine
Figure 5.9L-310




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE: Packages Do Not Contain Gaskets For All Required Sealing. R.T.V. Sealer And Gasket Eliminator Must Also Be Used. GASKET PACKAGE, Engine Lower - 04746001 ELO = All 5.2L 8 Cyl Gas Engines EM0 = All 5.9L 8 Cyl Gas Engines EW0 = All 8.0L Gas Engines									
1	4741 528AB	1				EM0			BLOCK, Short, Contains: Crank, Rods, Pistons, Rings, Cam Bearings
2	3830 603	1				EM0			BEARING, Camshaft, #1
3	4556 020	2				EM0			PLUG, Core, 1.25 Diameter
-4	4556 022	8				EM0			PLUG, Core, 1.625 Diameter
5	3751 818	2				EM0			PLUG, Pipe
-6	5300 9518	1				EM0			PLUG, Cylinder Block Oil Hole
-7									PLUG, Cylinder Block, 3/8NPT, (NOT SERVICED) (Not Serviced)
8	1122 532	2				EM0			DOWEL, Block To Clutch Housing
9	0141 215	4				EM0			DOWEL, .312 x .500
10	4798 276	1				ELO, EM0			HEATER PACKAGE, Engine Block
11									O RING, Engine Block Heater
	6501 445	AR							1-11/32 Diameter 11/64 Width
	6501 446	1				ELO, EM0			1-11/32 Diameter 9/64 Width
12	5602 0061	1				ELO, EM0, EW0			CORD, Engine Block Heater

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, ELO = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

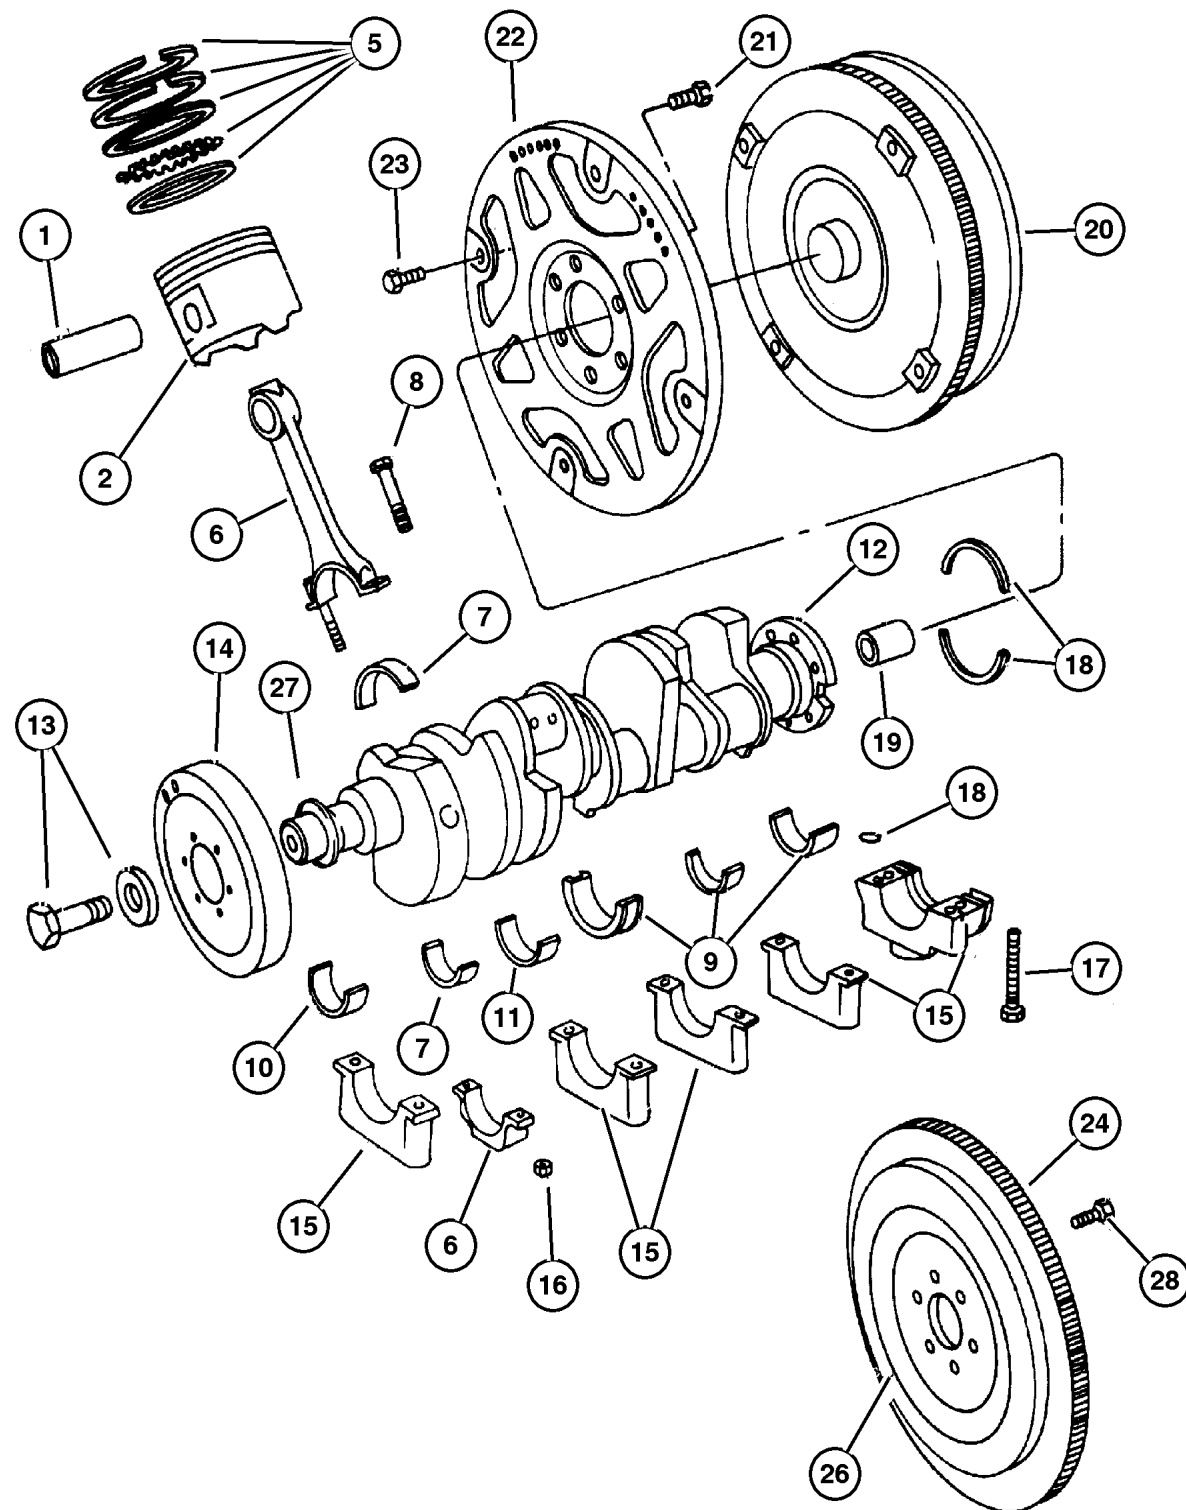Crankshaft, Piston and Torque Converter 5.9L (EML), 5.9L (EMM) Engine Figure 5.9L-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; EMO= All 5.9 Engines									
DBB= All STD. Duty Manual Trans									
DGO= All Auto Trans									
1									PIN, Piston, Serviced in Piston, (NOT SERVICED) (Not Serviced)
2	4778 871AC	4				EMO			PISTON PIN AND ROD, B-Size #1,3,5,7 Size, 3.99975 #2,4,6,8 Size, 3.99975
	4778 872AC	4				EMO			
-3	4778 873AC-	4				EMO			PISTON PIN AND ROD, C-Size #1,3,5,7 Size, 4.00025 #2,4,6,8 Size, 4.00025
	4778 874AC-	4				EMO			
-4	4778 875AC-	4				EMO			PISTON PIN AND ROD, D-Size #1,3,5,7 Size, 4.00075 #2,4,6,8 Size, 4.00075
	4778 876AC-	4				EMO			
5	4740 259	4				EMO			RING, Piston
6									ROD, Connecting, Serviced in Piston, (NOT SERVICED) (Not Serviced)
7	2421 305	4				EMO			BEARING, Connecting Rod, STD.
8	6033 441	8				EMO			BOLT, Connecting Rod
9	4026 487	3				EMO			BEARING PACKAGE, Crankshaft, Standard Size, #1,2,4
10	4713 030	1				EMO			BEARING PACKAGE, Crankshaft, Standard Size, #3
11	3780 100	1				EMO			BEARING PACKAGE, Crankshaft, Standard Size, #5
12	4790 759AB	1				EMO	DGO		CRANKSHAFT AND KEY SCREW AND WASHER
13	6036 207AA	1				EL0, EMO			
14	5302 0182	1				EMO			DAMPER, Crankshaft
15									CAP, Serviced in Block, (NOT SERVICED) (Not Serviced)
16	6032 296	8				EMO			NUT, Hex, .375-24
17	6027 264	10				EMO			SCREW, Socket Hex Head, .50-13x3.25
18	4798 216AB	1				EMO			SEAL PACKAGE, Crankshaft
19	53009 180AB	1				EMO	DBB		BEARING, Pilot, Sleeve and Bearing
20	4736 591	1				EMO	DGO		TORQUE CONVERTER
21	1949 424	6				EL0, EMO	DGO		SCREW, Hex Head Header Point, .75-16x2.25


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM, EMO = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DGO = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

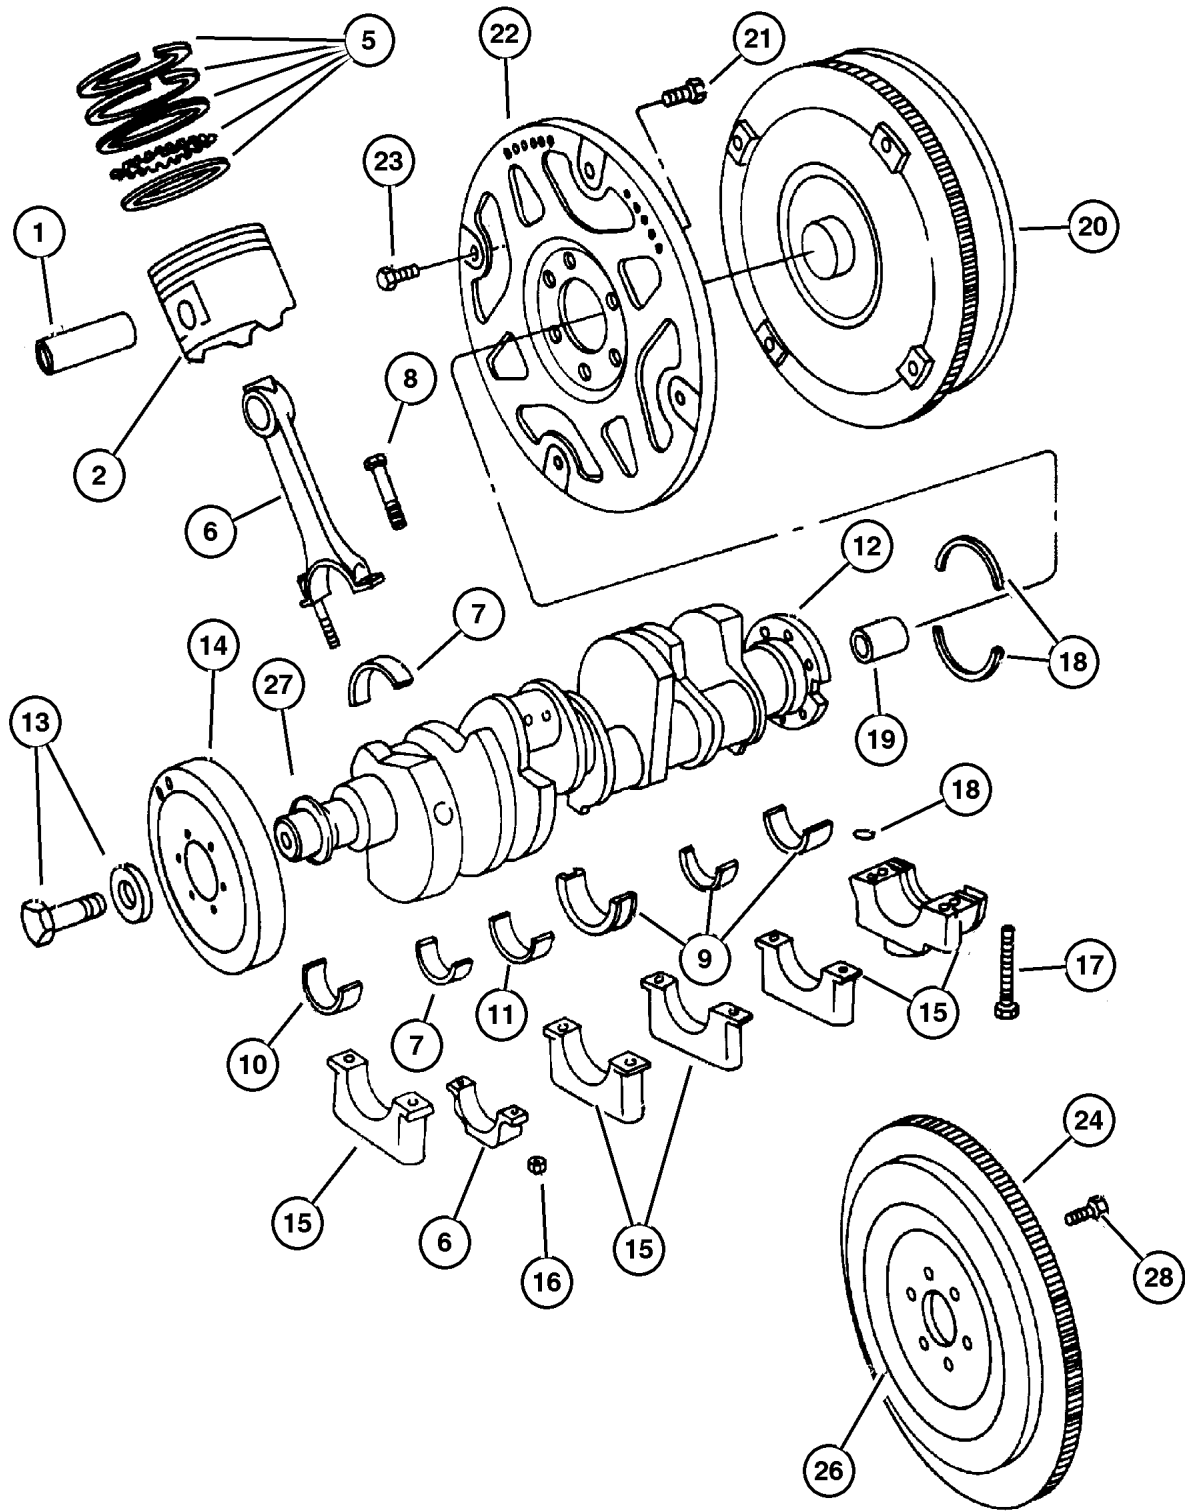Crankshaft, Piston and Torque Converter 5.9L (EML), 5.9L (EMM) Engine
Figure 5.9L-410




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
22	4863 841	1				EM0	DG0		PLATE, Torque Converter Drive
23	1949 765	4				EL0, EM0	DG0		SCREW, Hex Head Header Point, .312-24x.44
24	2843 214	1				EM0	DBB		GEAR, Flywheel Ring
-25	3515 203	1				EM0	DG0		GEAR, Ring
26	5302 0585	1				EM0	DBB		FLYWHEEL
27	6035 948AA	1				EL0, EM0			WASHER, Sealing
28	6036 143AA	6				EL0, EM0	DBB		SCREW

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

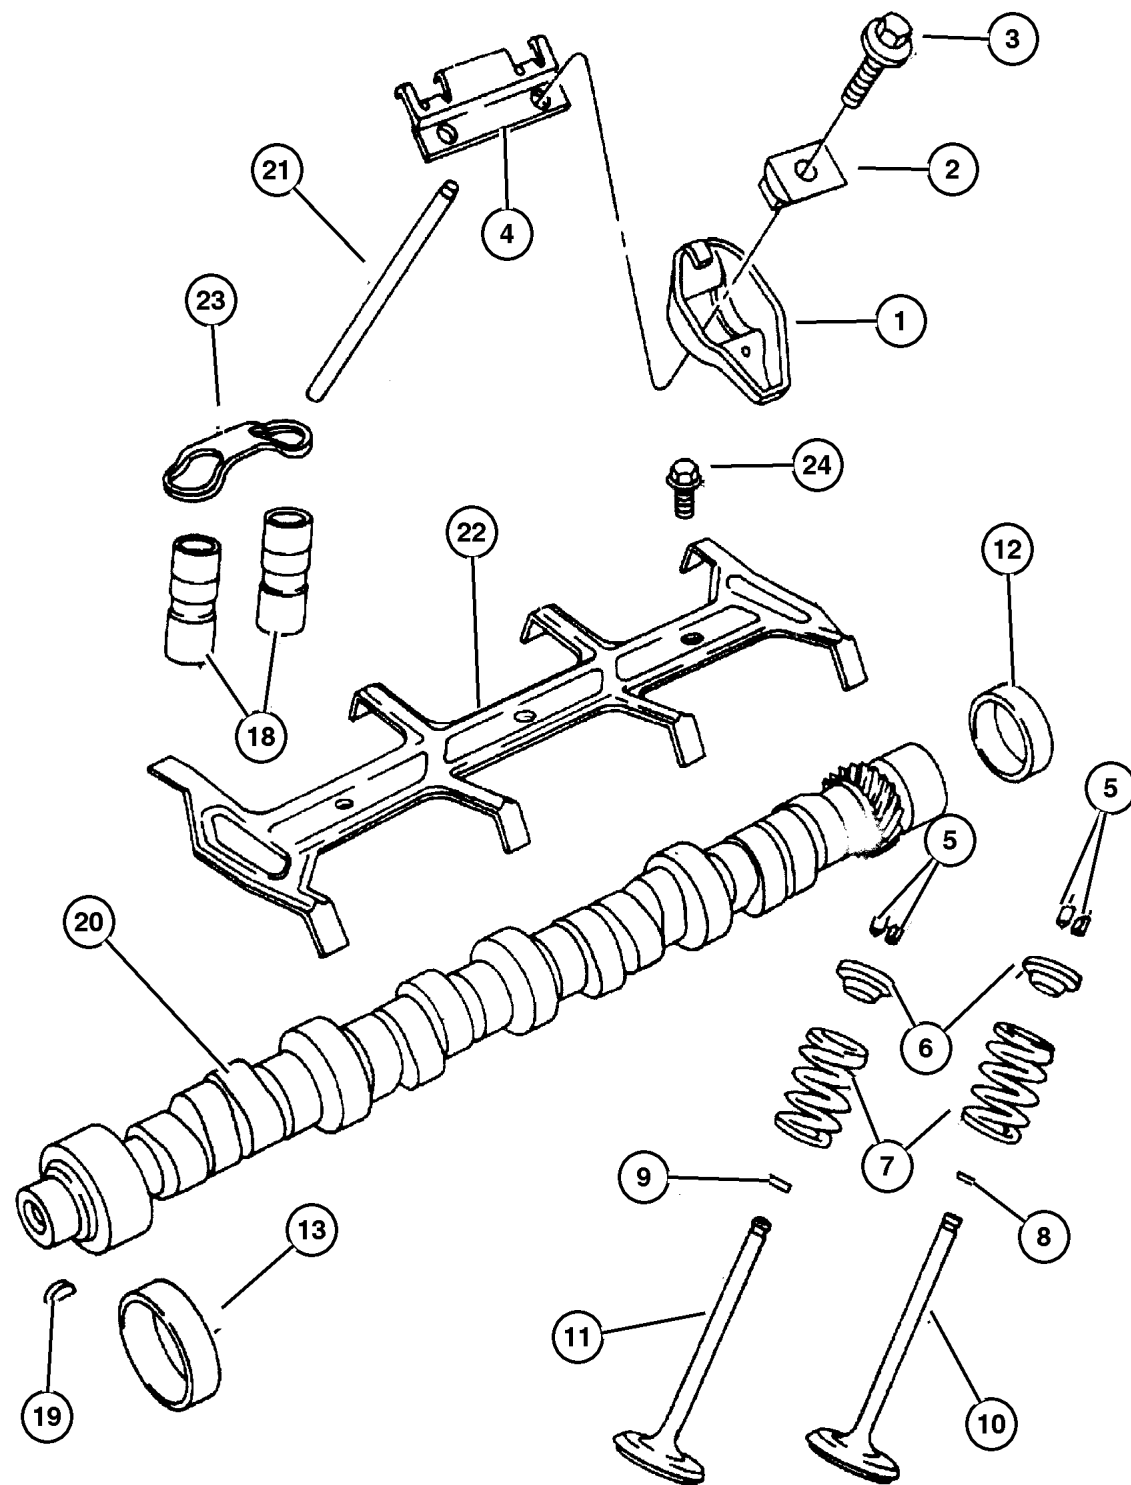Camshaft and Valves 5.9L (EML), 5.9L (EMM) Engine Figure 5.9L-510



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
ELO = All 5.2L 8 Cyl Gas Engines									
EML = Magnum 5.9L SMPI V8 Engine									
EMO = All 5.9L 8 Cyl Gas Engines									
1	5300 8282	16				ELO, EMO			ROCKER ARM, Valve
2	5300 8283	16				ELO, EMO			PIVOT, Rocker Arm
3	6036 154AA	16				ELO, EMO			BOLT, Hex Flange Head, .312-18x1.72
4	5300 8633	8				ELO, EMO			RETAINER, Rocker Arm Pivot
5	3300 3521	32				ELO, EMO			LOCK, Valve Spring Retainer
6	3300 4626	16				ELO, EMO			RETAINER, Valve Spring
7	5302 1056	16				ELO, EMO			SPRING, Valve
8	5300 9886	8				ELF, EMO			SEAL, Valve Guide, Standard, .003 O/S
9	5300 9887	8				ELF, EMO			SEAL, Valve Guide, Standard, .003 O/S
10	5300 6723	8				ELF, EMO			VALVE, Intake, Standard
11	5300 6724	8				ELO, EMO			VALVE, Exhaust, Standard
12	2863 071	1				EMO			PLUG, Camshaft
13	3830 603	1				EMO			BEARING, Camshaft, #1
-14	4179 776	1				EMO			BEARING, Camshaft, #2
-15	4179 777	1				EMO			BEARING, Camshaft, #3
-16	4179 778	1				EMO			BEARING, Camshaft, #3 or #4
-17	1632 526	1				EMO			BEARING, Camshaft, #4 or #5
18	4713 439	16				EMO			TAPPET PACKAGE, Valve
19	0431 787	1				ELO, EMO			KEY, Camshaft Sprocket
20	5302 1101	1				EMO			CAMSHAFT, Engine
21	5300 6722	16				ELO, EMO			PUSH ROD, Valve
22	4323 207	1				ELO, EMO			RETAINER, Tappet Yoke Aligning


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, ELO = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EMO = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

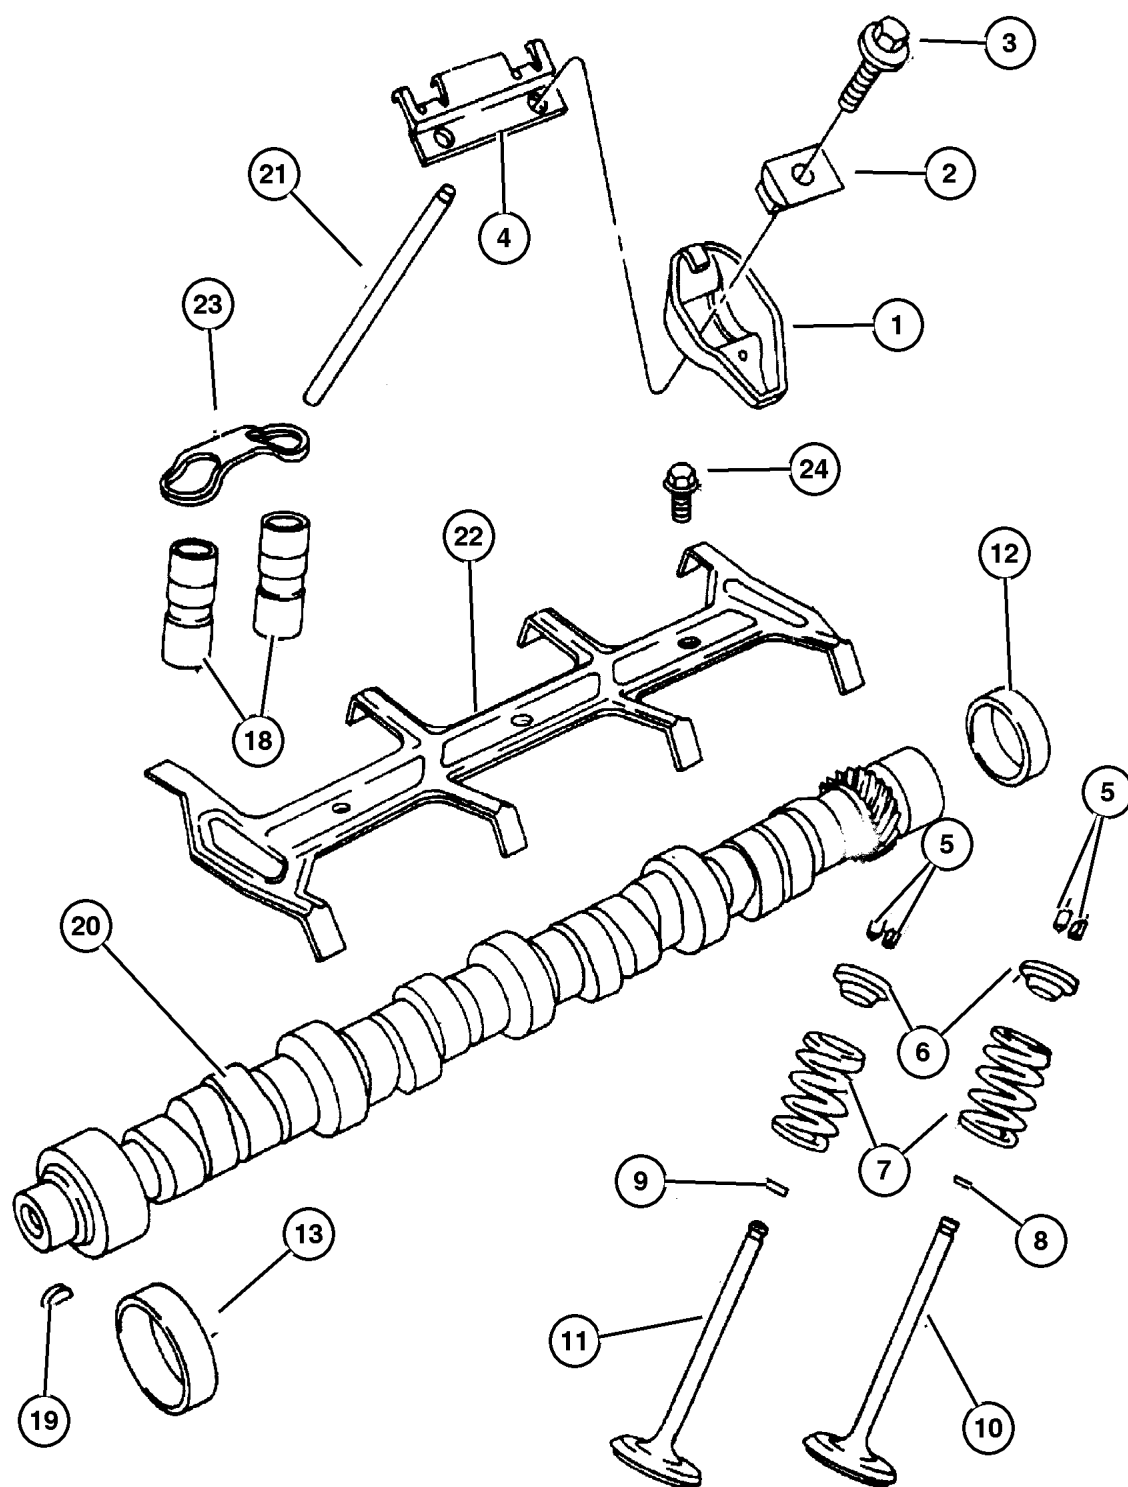Camshaft and Valves 5.9L (EML), 5.9L (EMM) Engine Figure 5.9L-510




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
23	4483 045	8				EL0,			YOKE, Tappet Aligning
						EM0			
24	6034 549	4				EL0,			SCREW, Hex Head, .312-18x.94
						EM0			

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

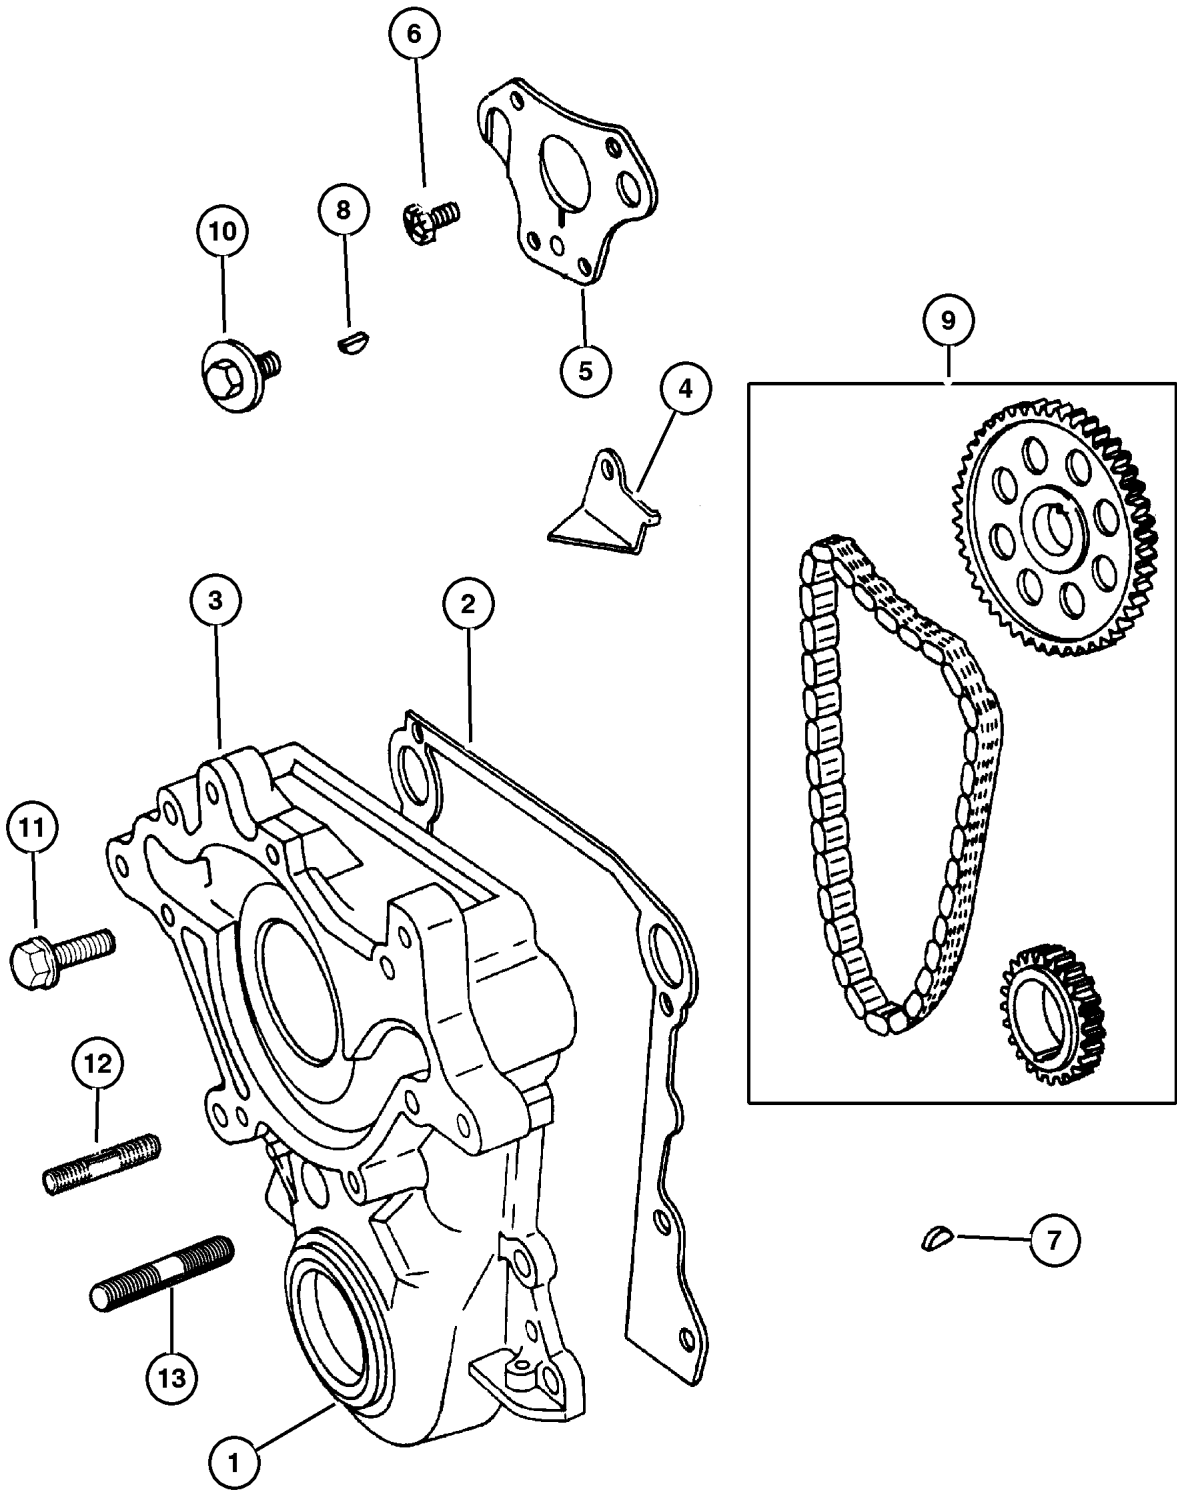Timing Gear and Cover 5.9L (EML), 5.9L (EMM) Engine
Figure 5.9L-610



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:
DBB = All Manual Transmissions
ELO = All 5.2L 8 Cyl Gas Engines
EM0 = All 5.9L 8 Cyl Gas Engines


1	4897 297AA	1				EM0			SEAL PACKAGE, Timing Case Cover
2	5302 1057	1				ELO, EM0			GASKET, Chain Case Cover
3	4897 723AA	1				EM0			COVER PACKAGE, Engine Timing
4	3671 649	1				ELO, EM0			TAB, Timing Chain Oil
5	4315 764	1				ELO, EM0			PLATE, Camshaft Thrust
6	6034 549	4				ELO, EM0			SCREW, Hex Head, .312-18x.94
7	6029 411	1				EM0	DBB		KEY, Crankshaft Sprocket
8	6029 411	1				EM0	DBB		KEY, Crankshaft Sprocket
9	8350 7095	1				ELO, EM0			CHAIN PACKAGE, Timing
10	6034 321	1				ELO, EM0			SCREW AND WASHER, Hex Head, Coned, Header, .437-14x1.375
11	6034 479	1				ELO, EM0			BOLT, Hex Head, .375-16x2.25
12	6034 452	1				ELO, EM0			STUD, .375-16x.375-16x2.38
13	6034 453	2				ELO, EM0			STUD, .375-16x.375-16x1.63

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, ELO = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

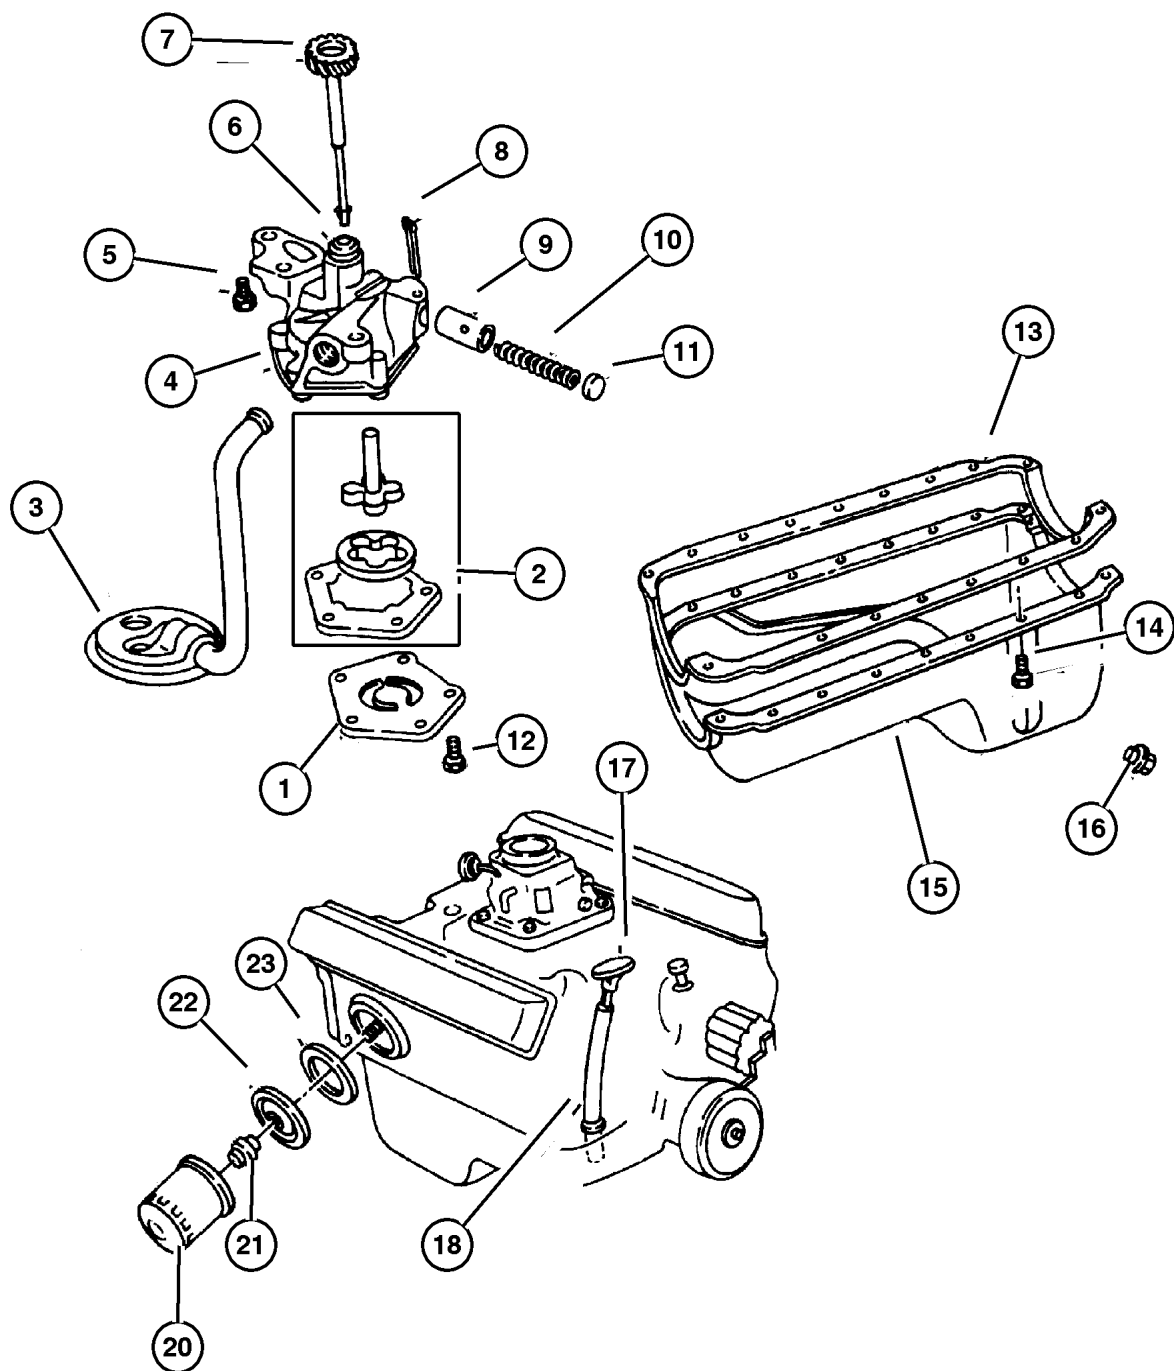Engine Oiling 5.9L (EML), 5.9L (EMM) Engine Figure 5.9L-710



Note:

EL0 = All 5.2L 8 Cyl Gas Engines
EML = Magnum 5.9L SMPI V8 Engine
EMM = Magnum 5.9L SMPI V8 Engine
EM0 = All 5.9L 8 Cyl Gas Engines

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	4071 043	1				EM0			COVER, Engine Oil Pump
2	3837 648	1				EM0			SHAFT AND ROTOR PACKAGE, Oil Pump
3	5302 0462	1				EM0			PICKUP, Engine Oil
4	5300 9295	1				EM0			PUMP, Engine Oil
5	0179 842	2				EL0, EM0			SCREW, Hex Head Header Point, .375-16x1.375
6	1737 725	1				EM0			BUSHING, Oil Pump and Distributor
7	5302 0546	1				EL0, EM0			SHAFT, Oil Pump
8	0108 636	1				EM0			PIN, Cotter
9	2843 208	1				EM0			PLUNGER, Oil Pressure Relief Valve
10	2402 473	1				EM0			SPRING, Oil Pressure Relief Valve
11	2806 273	1				EM0			CAP, Oil Pressure Relief Valve
12	0220 480	5				EM0			SCREW, Hex Head Header Point, .25-20x.75
13	5300 8610	1				EM0			GASKET, Oil Pan
14	6034 549	18				EL0, EM0			SCREW, Hex Head, .312-18x.94
15	5302 0918	1				EM0			PAN, Engine Oil
16	6035 417	1				EM0			PLUG, Oil Drain, w/Gasket
17	5302 0928	1				EL0, EML			INDICATOR, Engine Oil Level
18	5302 0934	1				EMM			TUBE, Oil Gauge
19	5302 0926	1				EL0, EML			TUBE, Engine Oil Indicator
20	5302 0062	1				EMM			FILTER, Engine Oil
21	5281 090	1				EL0, EM0			CONNECTOR, Oil Filter
22	5300 7563	1				EL0, EM0			PLATE, Oil Filter Adapter
23	5302 1053	1				EL0, EM0			

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM, EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual


AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Engine Oiling 5.9L (EML), 5.9L (EMM) Engine
Figure 5.9L-710

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

23	53020 461AB	1				EL0, EMO			GASKET, Oil Filter Adapter
----	-------------	---	--	--	--	-------------	--	--	----------------------------

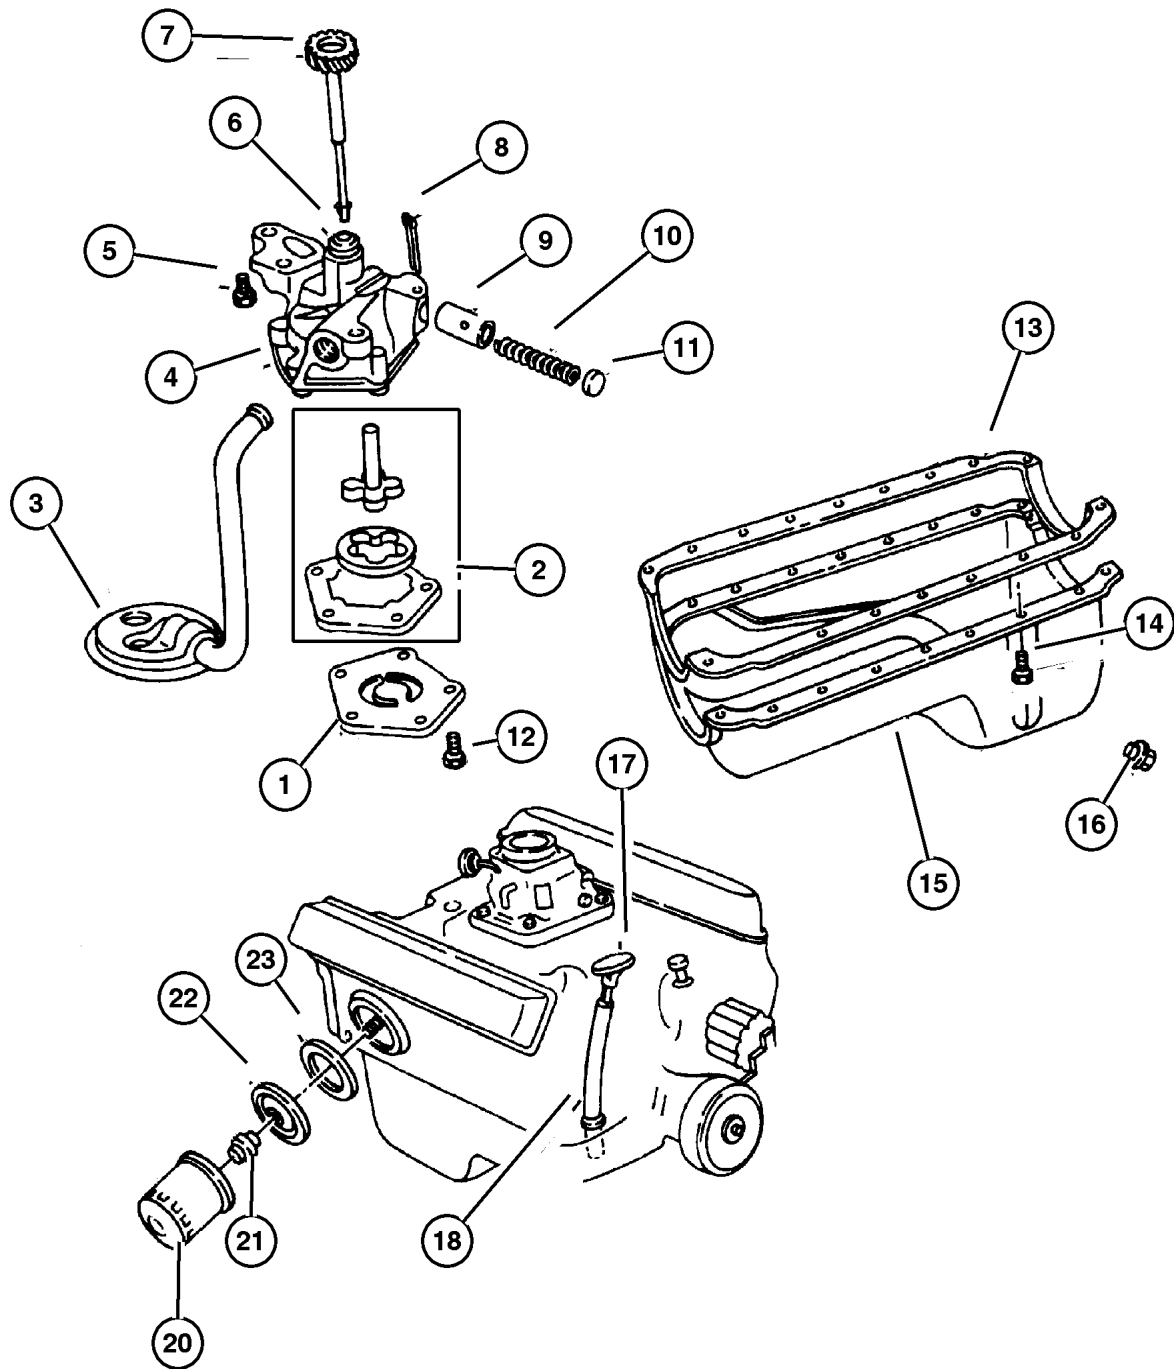


DODGE RAM QUAD CAB/CLUB CAB (BE)									
SERIES	LINE	BODY	ENGINE	TRANSMISSION					
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.					
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.					
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual					
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual					
			EAA = All Engines	DEE = 6 Speed HD Manual					
			EAG = All Gas Engines						

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

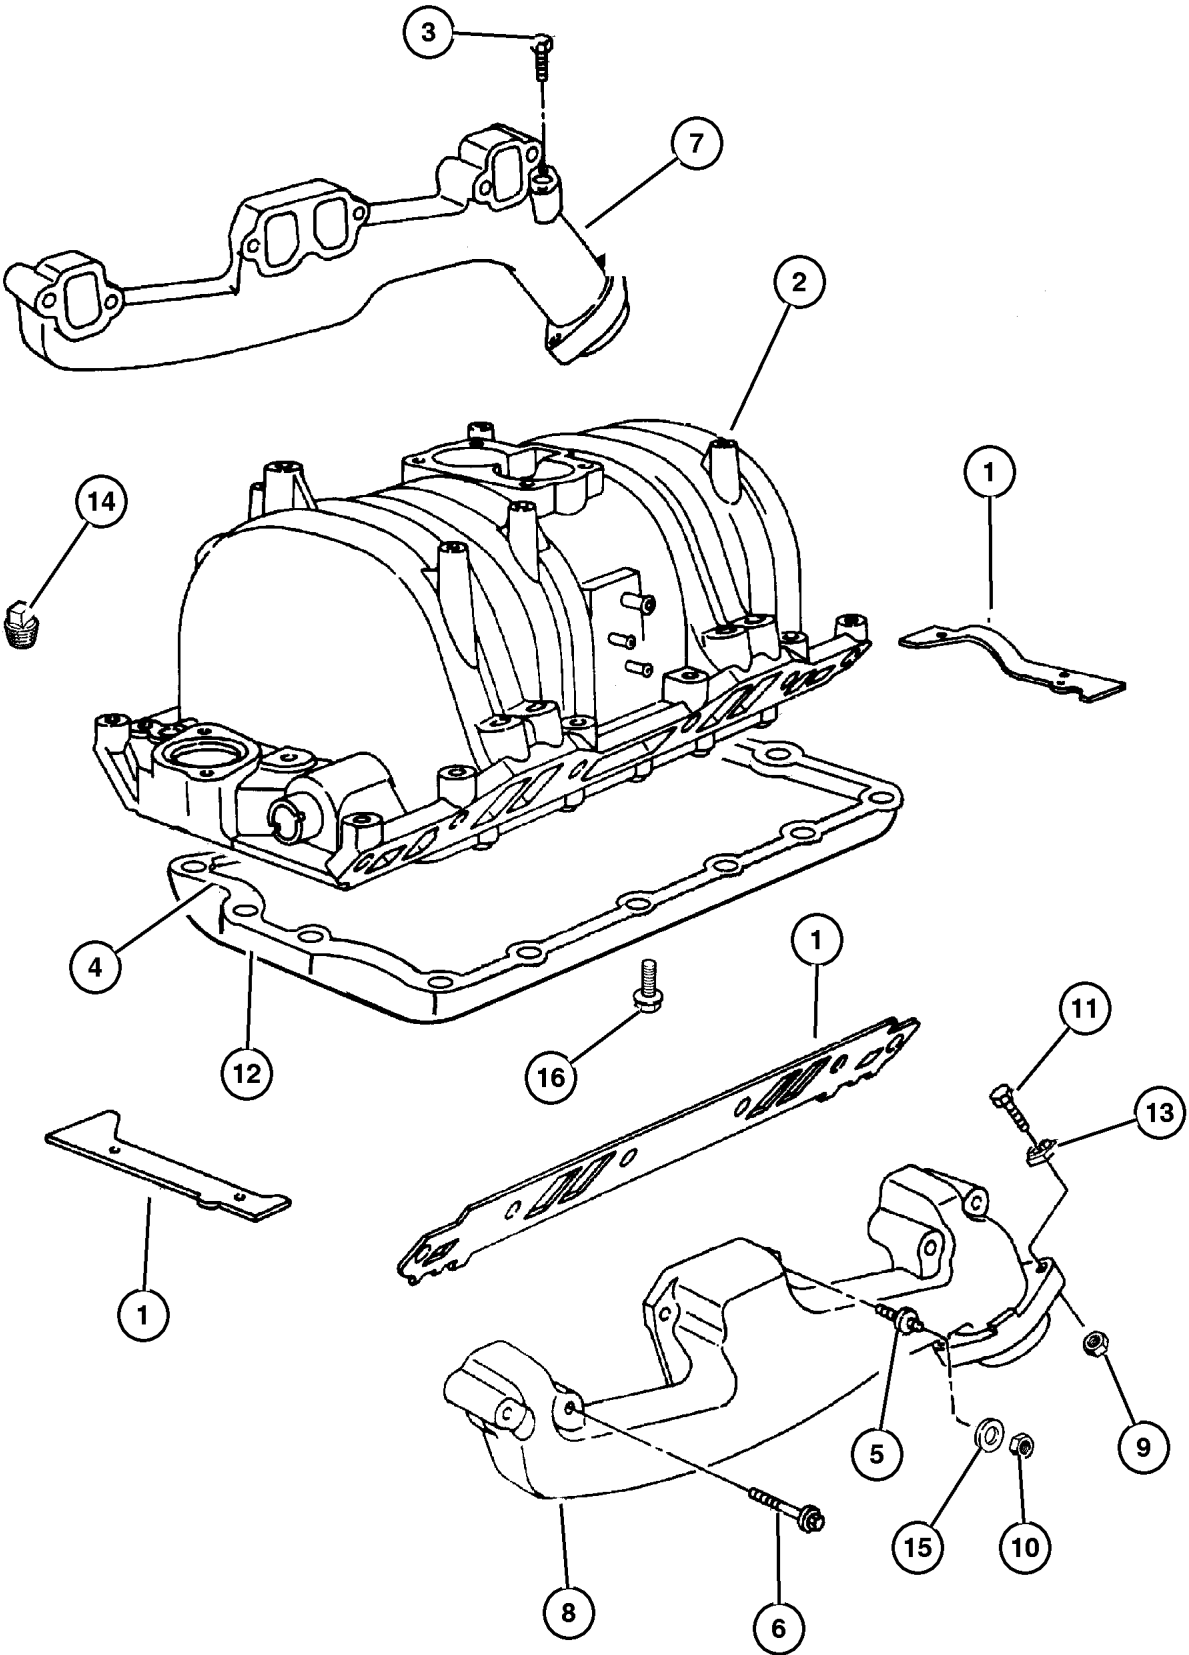Manifold, Intake and Exhaust 5.9L (EML), 5.9L (EMM) Engine
Figure 5.9L-810




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE: Packages Do Not Contain Gaskets For All Required Sealing. R.T.V. Sealer And Gasket Eliminator Must Also Be Used. EL0 = All 5.2L 8 Cyl Gas Engines EM0 = All 5.9L 8 Cyl Gas Engines EW0 = All 8.0L Gas Engines									
1	4897 383AC	1				EL0, EM0			GASKET PACKAGE, Intake Manifold
2	4897 490AC	1				EL0, EM0			MANIFOLD, Intake
3	6035 967AA	12				EL0, EM0			SCREW AND WASHER, Hex Head
4	5300 6623	1				EL0, EM0			GASKET, Intake Manifold Pan
5	6034 643	4				EL0, EM0			STUD, .312-18/.312-24x2.25
6	6034 806	8				EL0, EM0			SCREW AND WASHER, Hex Head, .312-18x3.125
7	5303 0873	1				EM0			MANIFOLD, Exhaust, Right
8	5301 0189	1				EM0			MANIFOLD, Exhaust, Left
9	0118 615	4				EL0, EM0,			NUT, Hex, .375-16
10	0115 729	4				EW0 EL0, EM0			NUT, Hex, .312 x 24
11	6035 375	4				EL0, EM0			BOLT, Hex Head, .375-16x2.50
12	5300 6617	1				EL0, EM0			PAN, Intake Manifold
13	4004 001	4				EL0, EM0, EW0			RETAINER, Exhaust Pipe to Manifold
14									PLUG, 3/8-18, (NOT SERVICED) (Not Serviced)
15	5301 0091	4				EL0, EM0			CLAMP, Exhaust Manifold
16	6034 583	15				EL0, EM0			SCREW AND WASHER, Hex Head, .25-20x.892

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

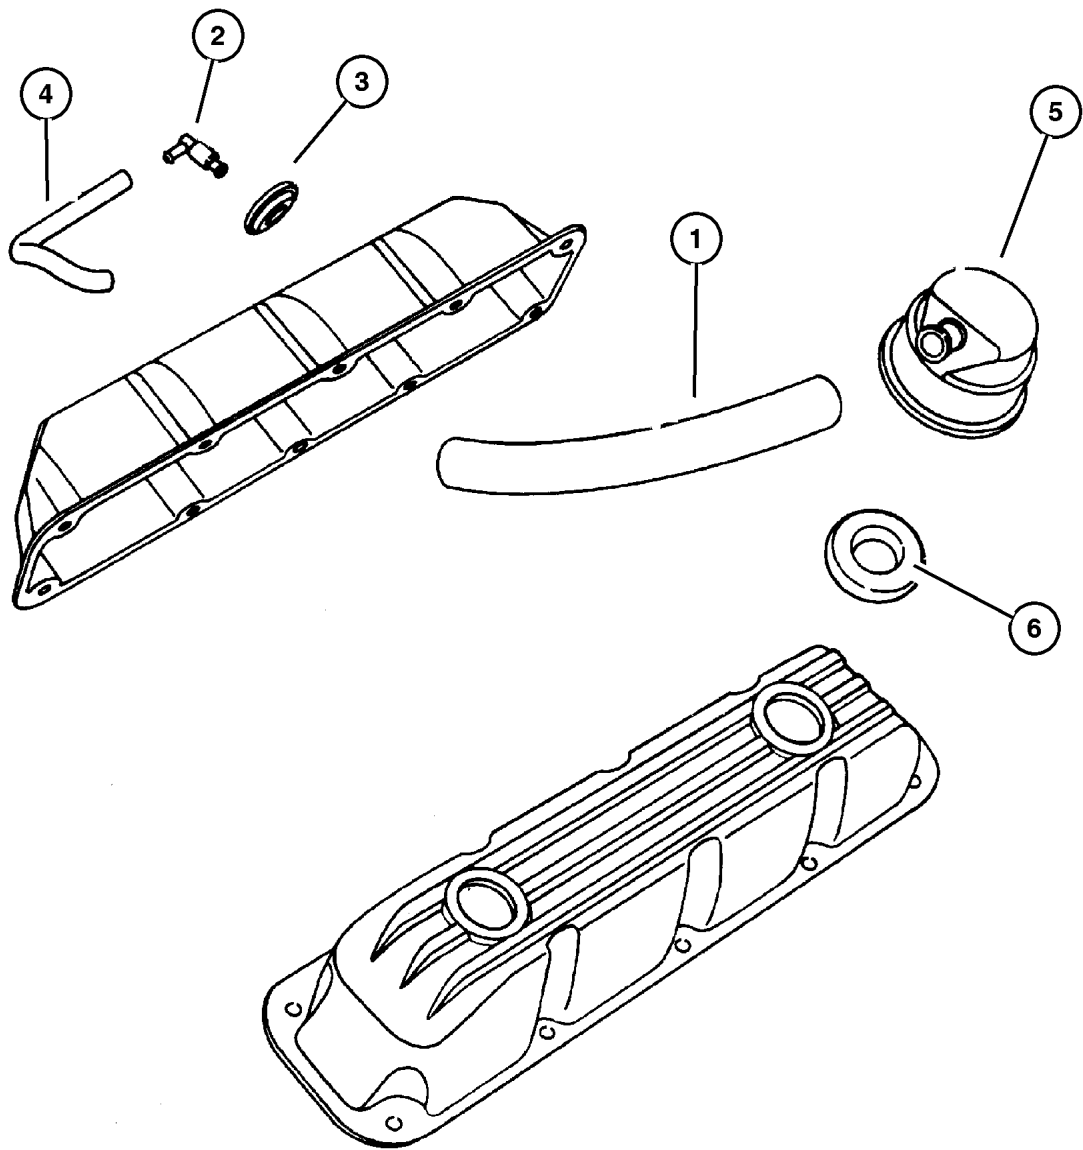Crankcase Ventilation 5.9L (EML), 5.9L(EMM) Engine
Figure 5.9L-910



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

EL0 = All 5.2L 8 Cyl Gas Engines

EM0 = All 5.9L 8 Cyl Gas Engines

EW0 = All 8.0L Gas Engines

1	5300 6342	1				EW0			HOSE, Crankcase Vent
2	5303 1135	1				EL0, EM0			VALVE, Crankcase Vent
3	5303 0017	1				EL0, EM0			GROMMET, Crankcase Vent
4	5304 1044	1				EW0			TUBE, PCV Valve
5	5303 0497	1				EL0, EM0			FITTING, Crankcase Vent Tube
6	2946 079	1				EL0, EM0			GROMMET, Crankcase Vent

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Group – 8.0L

Engine 8.0L Ten Cylinder (Truck)


8.0L10-100	8.0L10-200	8.0L10-300	8.0L10-400	8.0L10-500	8.0L10-600	8.0L10-700	8.0L10-800	8.0L10-900
------------	------------	------------	------------	------------	------------	------------	------------	------------

8.0L10-100

8.0L10-200









8.0L10-300

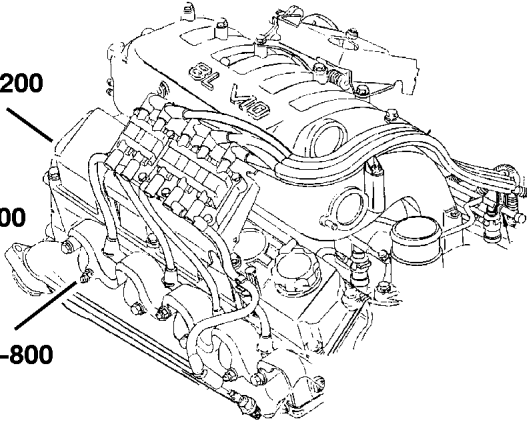8.0L10-800




GROUP 8.0L - Engine 8.0L Ten Cylinder (Truck)

Illustration Title	Group-Fig. No.
Cylinder Head Cylinder Head 8.0L (EWA) Engine	Fig. 8.0L-210
Cylinder Block Cylinder Block 8.0L (EWA) Engine	Fig. 8.0L-310
Crankshaft, Piston and Torque Converter Crankshaft, Piston and Torque Converter 8.0L (EWA) Engine	Fig. 8.0L-410
Camshafts & Valves Camshaft and Valves 8.0L (EWA) Engine	Fig. 8.0L-510
Timing Belt and Cover Timing Gear and Cover 8.0L (EWA) Engine	Fig. 8.0L-610
Engine Oiling Engine Oiling 8.0L (EWA) Engine	Fig. 8.0L-710
Manifolds Manifold, Intake 8.0L (EWA) Engine Manifold, Exhaust 8.0L (EWA) Engine	Fig. 8.0L-810 Fig. 8.0L-820
Crankcase Ventilation Crankcase Ventilation 8.0L (EWA) Engine	Fig. 8.0L-910

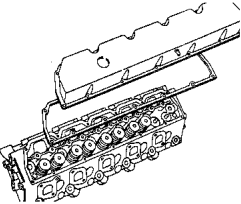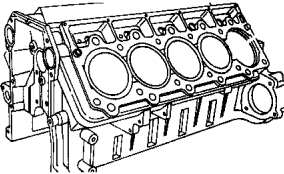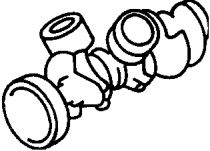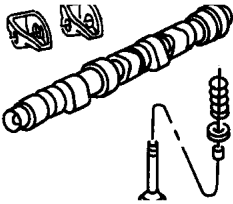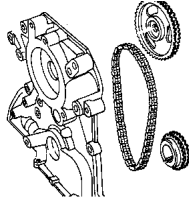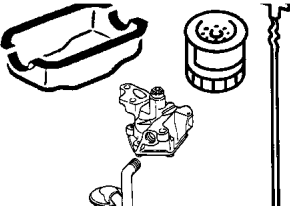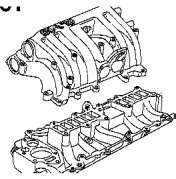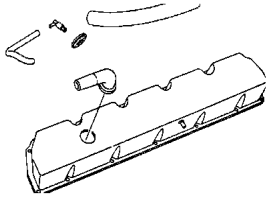8.0L-200 Cylinder Head 	8.0L-300 Cylinder Block 	8.0L-400 Crankshaft, Piston and Torque Converter 	8.0L-500 Camshafts & Valves 
8.0L-600 Timing Belt and Cover 	8.0L-700 Engine Oiling 	8.0L-800 Manifolds 	8.0L-900 Crankcase Ventilation 

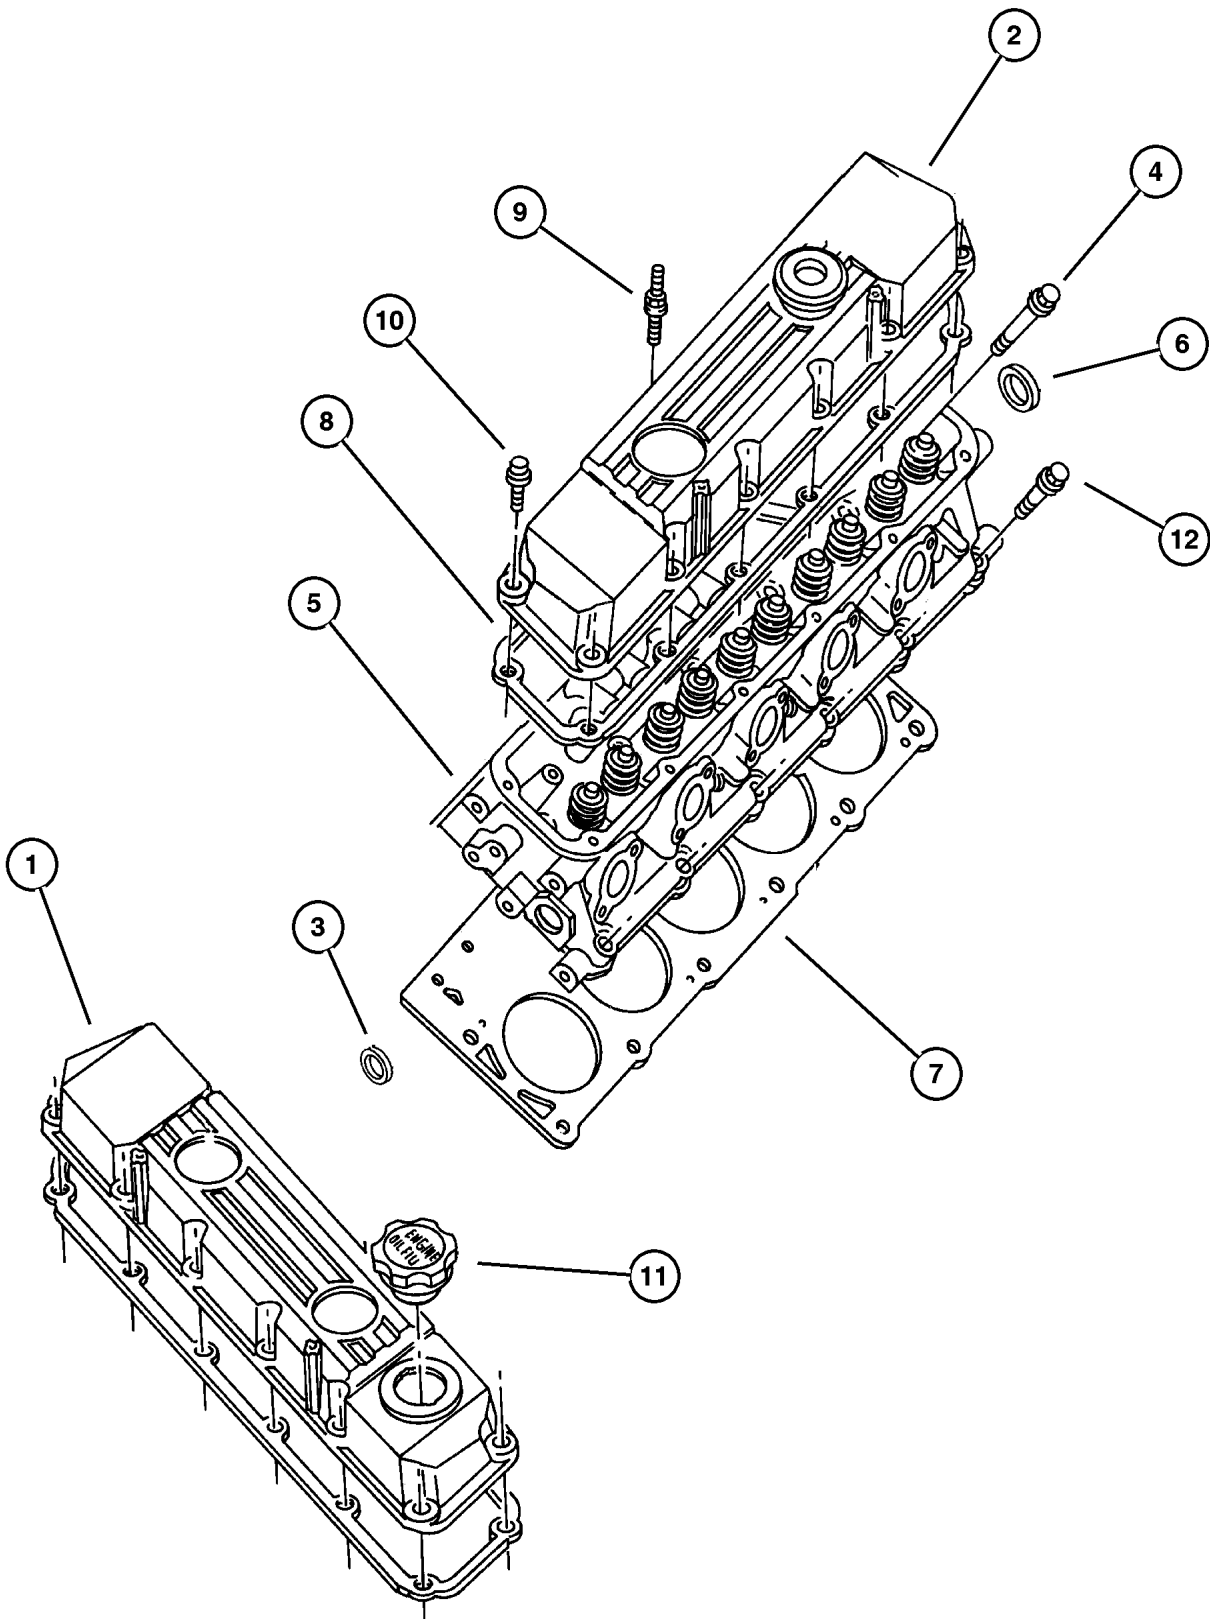Cylinder Head 8.0L (EWA) Engine
Figure 8.0L-210




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:									
EW0 = All 8.0L Gas Engines									
1	5304 1054	1				EW0			COVER, Cylinder Head, Right
2	5304 1055	1				EW0			COVER, Cylinder Head, Left
3	4556 020	1				EW0			PLUG, Core, 1.25 Diameter
4	J400 7307	12				EW0			BOLT, Hex Flange Head, .500-13x4.52
5	53020 066AB	2				EW0			HEAD, Cylinder
6	J317 8449	2				EW0			PLUG, Cylinder Block Oil Hole
7	5304 1049	2				EW0			GASKET, Cylinder Head
8	5302 0073	2				EW0			GASKET, Valve Cover
9	6034 444	7				EW0			STUD, .312-18/.250-20x2.685
10	6034 443	17				EW0			SCREW, Hex Head Coned, .312-18x1.375
11	4777 536	1				EW0			CAP, Oil Filler
12	5302 0067	12				EW0			BOLT, Cylinder Head
-13	4746 045AB-	1				EW0			GASKET PACKAGE, Engine

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

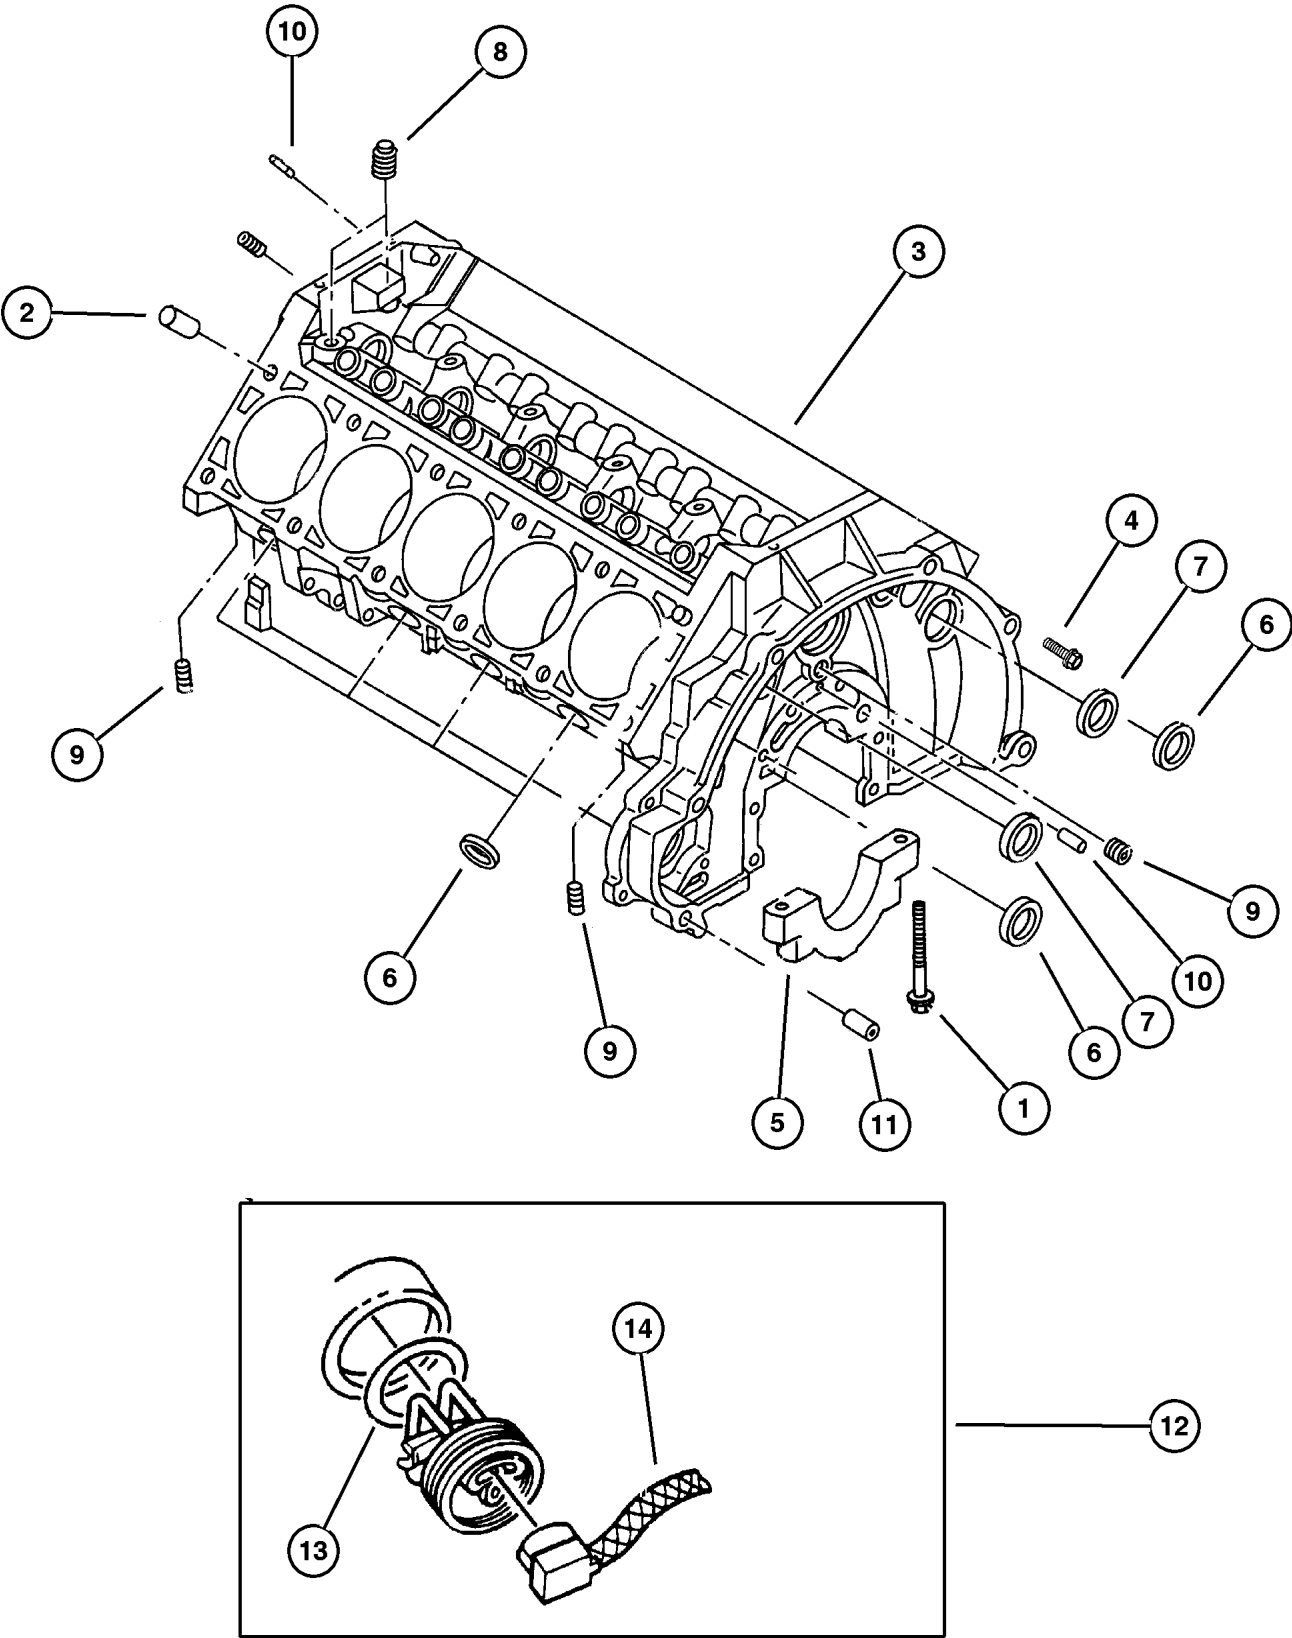Cylinder Block 8.0L (EWA) Engine
Figure 8.0L-310



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; EWO= All 8.0 Engines

DGO= All Auto Trans

1	6034 847	12				EWO			BOLT, Main Bearing Cap
2	J400 5149	4				EWO			DOWEL, Oil Pump
3	4796 663	1				EWO			BLOCK, Short, Contains: Crank, Rods, Pistons, Rings, Cam Bearings
4	6024 473	2					DGO		SCREW AND WASHER, Hex Head, .437-14x2.00
5									CAP, Serviced in Block, (NOT SERVICED) (Not Serviced)
6	4556 022	11				EWO			PLUG, Core, 1.625 Diameter
7	J317 8449	2				EWO			PLUG, Cylinder Block Oil Hole
8	J010 3877	2				EWO			PLUG, Square Head, 1/8-27NPTx.32
9									PLUG, (NOT SERVICED) (Not Serviced)
10									DOWEL, [.187x.500], (NOT SERVICED) (Not Serviced)
11	5304 0018	2				EWO			DOWEL, Clutch Housing
12	4798 276	1				EWO			HEATER PACKAGE, Engine Block
13	6501 445	AR							O RING, Engine Block Heater
14	5602 7117	AR							CORD, Engine Block Heater

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EWO = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DGO = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Crankshaft, Piston and Torque Converter 8.0L (EWA) Engine
Figure 8.0L-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

DBB = All Manual Transmissions

DG0 = All Automatic Transmissions

EL0 = All 5.2L 8 Cyl Gas Engines

EM0 = All 5.9L 8 Cyl Gas Engines

EW0 = All 8.0L Gas Engines


1	53006 216AC	1				EW0	DBB		FLYWHEEL
2	4428 037	1				EW0	DBB		GEAR, Ring
3	53005 843AB	1				EW0			RETAINER, Crankshaft Rear Oil Seal
4									Seal
	4856 120AB	5				EW0			PISTON PIN AND ROD
	4856 121AB	5				EW0			#1,3,5,7,9
5	4741 750	1				EW0			#2,4,6,8,10
6	52107 562AB	1				EW0	DBB		RING, Piston
7	5302 0776	1				EW0			BEARING, Pilot
8	5300 5840	1				EW0			DAMPER, Crankshaft
9	6032 296	10				EW0			CRANKSHAFT
10	6033 441	10				EW0			NUT, Hex, .375-24
11	5211 8506	1				EW0	DG0		BOLT, Connecting Rod
12	5300 5837	1				EW0			CONVERTER, Torque
13	5302 1075	1				EW0			GASKET, Rear Crankshaft Oil Seal
14	6035 811	8				EW0	DBB		GASKET, Rear Crankshaft Oil Seal
-15	6035 462	8				EW0	DG0		BOLT, Hex Head, .437-20x1.50
16	2421 305	5				EW0			BOLT, Flexplate
-17	2421 306	AR				EW0			BEARING, Connecting Rod, STD.
18	6034 749	1				EW0			BEARING, Connecting Rod, .001" U/S
19									KEY, Crankshaft Sprocket
20	5211 8473	1				EW0	DG0		ROD, Connecting, Serviced in
21	4741 492	2				EW0			Piston, (NOT SERVICED) (Not Serviced)
-22	4741 495	AR				EW0			PLATE, Torque Converter Drive
-23	4741 493	3				EW0			BEARING, Crankshaft, STD., #1,6
-24	4741 496	AR				EW0			BEARING, Crankshaft, .001" U/S, #1,6
-25	4798 449	1				EW0			BEARING, Crankshaft, STD., #2,4,5
-26	4798 450	AR				EW0			BEARING, Crankshaft, .001" U/S, #2,4,5

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

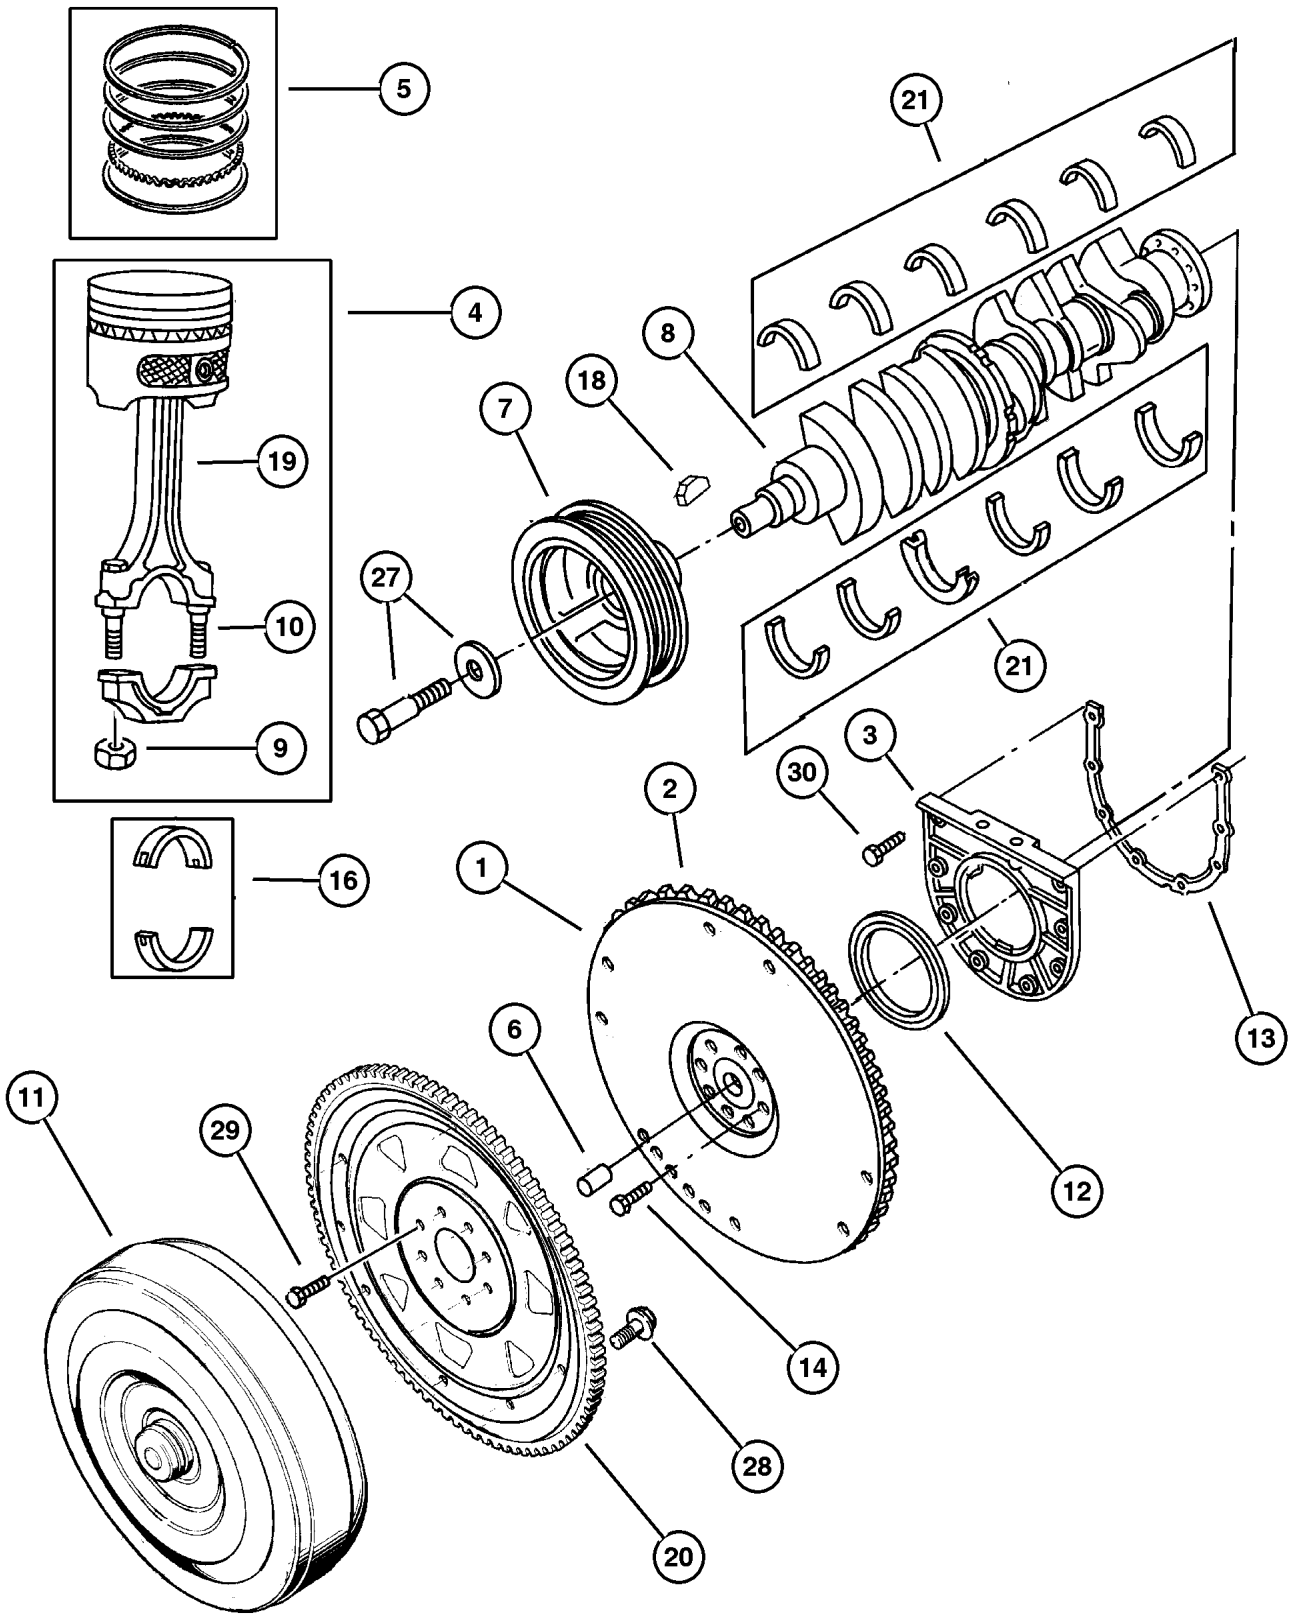September 16, 2005




Crankshaft, Piston and Torque Converter 8.0L (EWA) Engine
Figure 8.0L-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
27	6036 207AA	1				EL0, EM0			SCREW AND WASHER
28	6033 439	6				EW0	DG0		BOLT, Hex Head, .37-24x.55
29	6035 462	8				EW0	DG0		BOLT, Flexplate
30	6022 235	8				EW0			BOLT AND WASHER, Hex Head, .312-18x1.00

DODGE RAM QUAD CAB/CLUB CAB (BE)									
SERIES	LINE	BODY	ENGINE	TRANSMISSION					
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual					

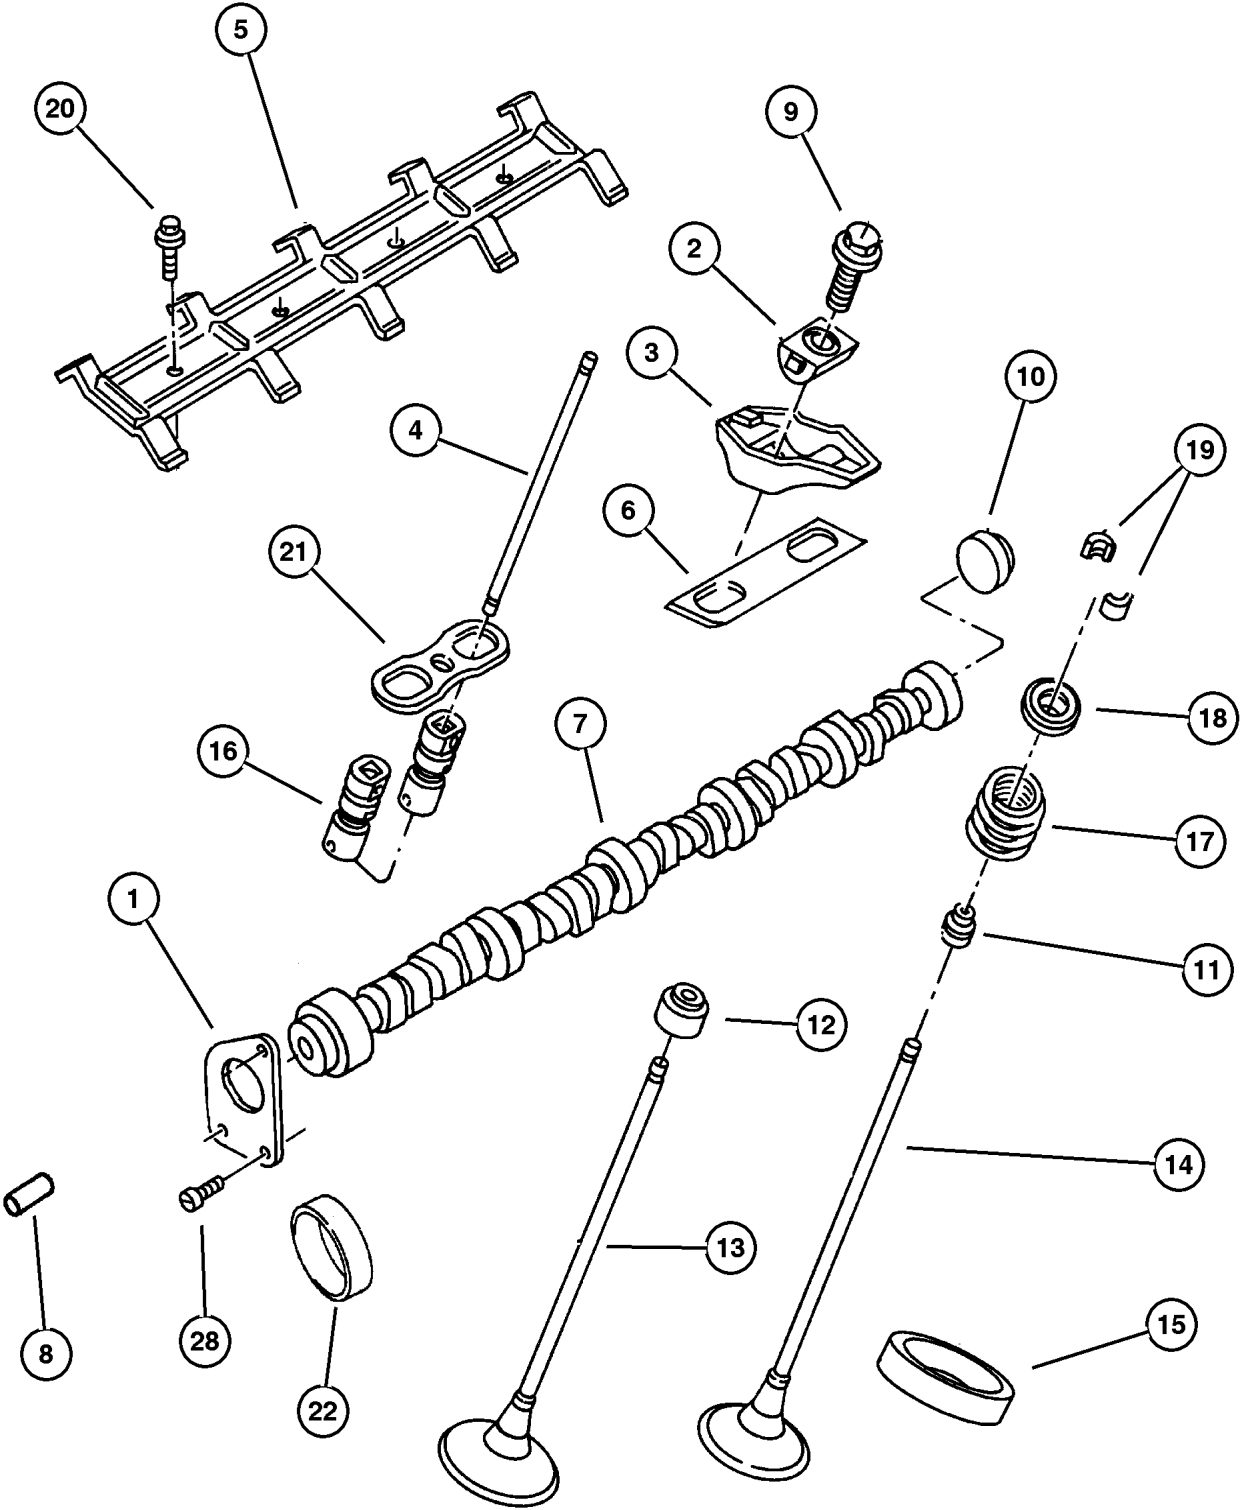Camshaft and Valves 8.0L (EWA) Engine
Figure 8.0L-510



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

EW0 = All 8.0L Gas Engines

1	53005 845AB	1				EW0			PLATE, Camshaft Thrust
2	5304 1105	20				EW0			PIVOT, Rocker Arm
3	5245 335	20				EW0			ROCKER ARM, Valve
4	5304 1123	20				EW0			PUSH ROD, Valve
5	5300 5866	1				EW0			RETAINER, Tappet Yoke Aligning
6	5300 8284	10				EW0			RETAINER, Rocker Arm Pivot
7	5302 0842	1				EW0			CAMSHAFT, Engine
8	0141 195	1				EW0			DOWEL, .25x.62
9	6034 721	20				EW0			SCREW, Hex Flange Head, .312-18x1.50
10	5300 5824	1				EW0			PLUG, Camshaft
11	5300 9887	10				EW0			SEAL, Valve Guide
12	5300 9886	10				EW0			SEAL, Valve Guide
13	5300 5863	10				EW0			VALVE, Intake, Standard
14	5300 5864	10				EW0			VALVE, Exhaust, Standard
15									INSERT, Exhaust Valve, Serviced in Cylinder Head, (NOT SERVICED) (Not Serviced)
16	4713 439	20				EW0			TAPPET PACKAGE, Valve
17	5302 1056	20				EW0			SPRING, Valve
18	3300 4626	20				EW0			RETAINER, Valve Spring
19	3300 3521	40				EW0			LOCK, Valve Spring Retainer
20	1947 953	4				EW0			SCREW AND WASHER, Hex Head
21	5245 169	10				EW0			YOKE, Tappet Aligning
22	4741 475	1				EW0			BEARING, Camshaft, #1
-23	4741 476	1				EW0			BEARING, Camshaft, #2
-24	4741 477	1				EW0			BEARING, Camshaft, #3
-25	4741 478	1				EW0			BEARING, Camshaft, #4
-26	4741 479	1				EW0			BEARING, Camshaft, #5
-27	4741 480	1				EW0			BEARING, Camshaft, #6
28	6034 757	3				EW0			SCREW


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

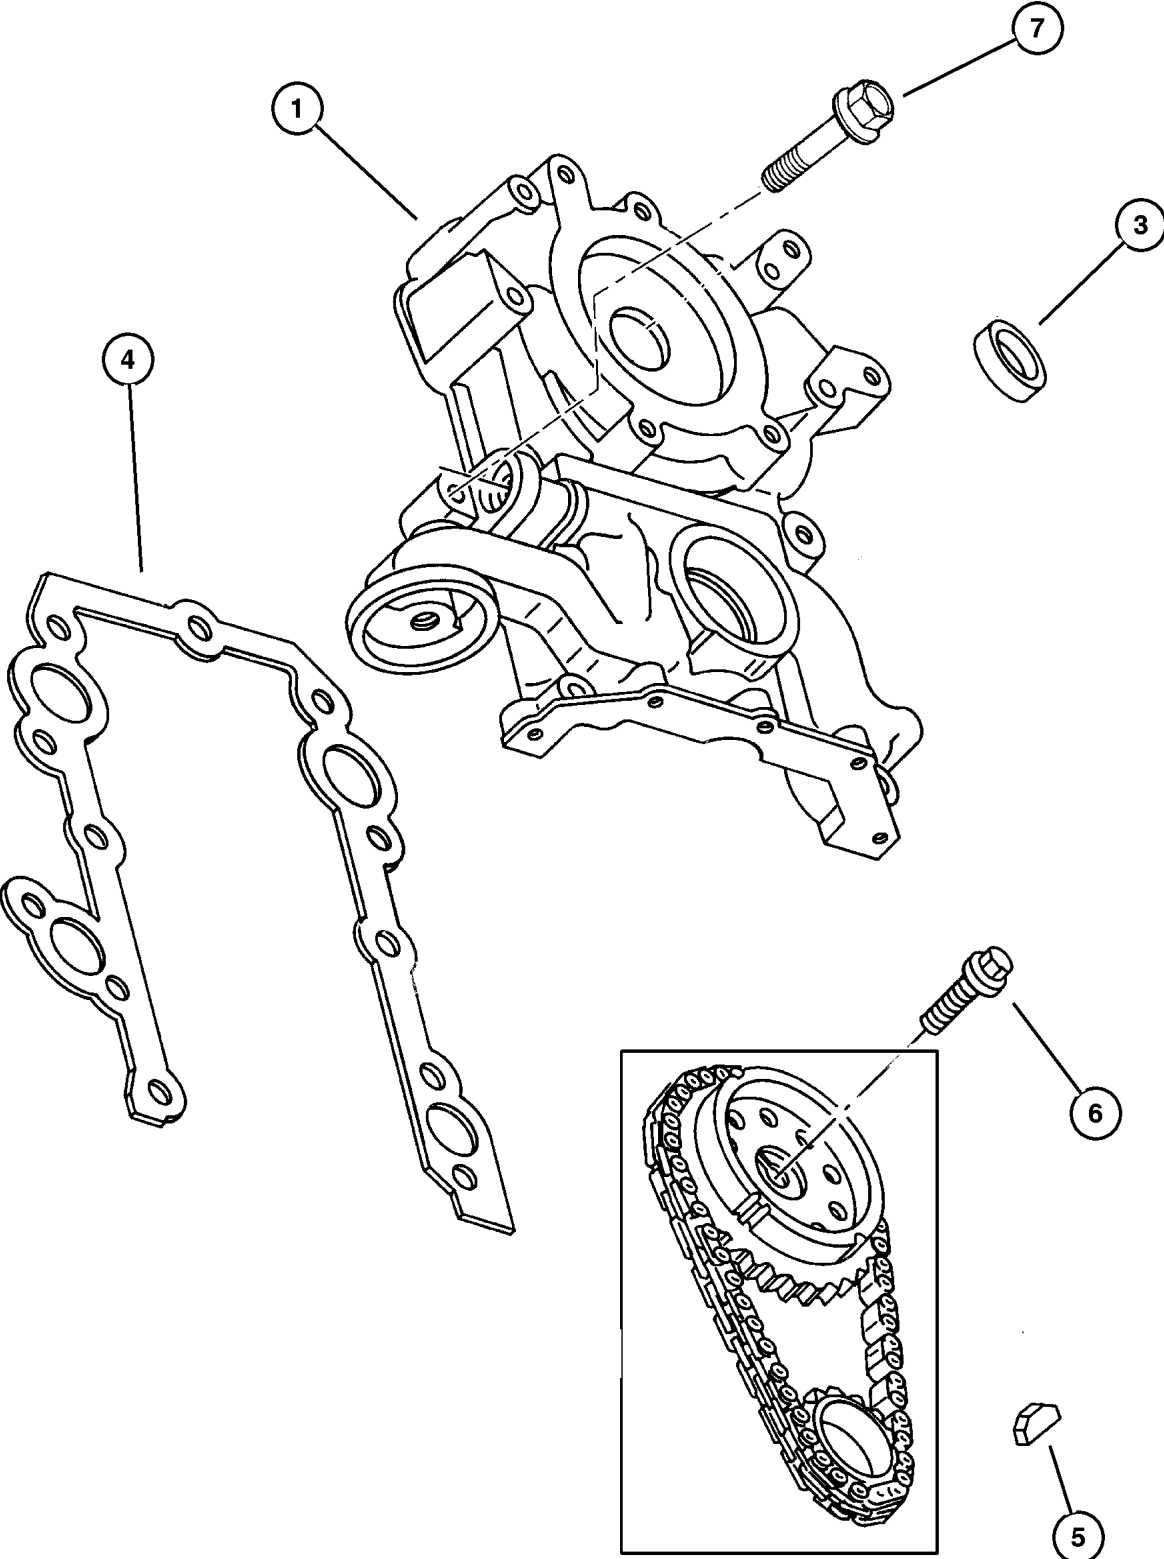Timing Gear and Cover 8.0L (EWA) Engine
Figure 8.0L-610



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
EL0 = All 5.2L 8 Cyl Gas Engines									
EM0 = All 5.9L 8 Cyl Gas Engines									
EW0 = All 8.0L Gas Engines									
1	53020 971AC	1				EW0			COVER, Timing Case
-2	4798 467	1				EW0			CHAIN PACKAGE, Timing
3	5302 1103	1				EW0			SEAL, Timing Case Cover
4	5302 0956	1				EW0			GASKET, Chain Case Cover
5	6034 749	1				EW0			KEY, Crankshaft Sprocket
6	6034 321	1				EL0,			SCREW AND WASHER, Hex Head,
						EM0			Coned, Header, .437-14x1.375
7	6033 958	7				EW0			SCREW, Hex Flange Head, .375-16x2.00

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Engine Oiling 8.0L (EWA) Engine
Figure 8.0L-710


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
EW0 = All 8.0L Gas Engines									
1	5300 6833	1				EW0			COVER, Engine Oil Pump
2	53020 922AB	1				EW0			PAN, Engine Oil
3	5302 0930	1				EW0			TUBE, Oil Gauge
4	5300 6834	1				EW0			PICKUP, Engine Oil
5	5302 0929	1				EW0			INDICATOR, Engine Oil Level
6	4746 610	1				EW0			ROTOR PACKAGE, Oil Pump
7	0154 557	7				EW0			SCREW, Hex Head Coned, .25-20x. 875
8	5300 5884	1				EW0			GASKET, Oil Pan
9	5302 0075	1				EW0			GASKET, Oil Pump Relief Valve
10	5304 0062	1				EW0			GASKET, Oil Pickup Tube
11	6035 417	1				EW0			PLUG, Oil Drain
12	2843 208	1				EW0			PLUNGER, Oil Pressure Relief Valve
13	6034 549	18				EW0			SCREW, Hex Head, .312-18x.94
14	6034 594	4				EW0			STUD, .312-18/.250-20x2.355
15	5302 0068	1				EW0			PLUG, Cylinder Block Oil Hole
16	2402 473	1				EW0			SPRING, Oil Pressure Relief Valve
17	5302 0311	1				EW0			FILTER, Engine Oil
18	5300 7563	1				EW0			CONNECTOR, Oil Filter
19									SEAL, (NOT SERVICED) (Not Serviced)
20	6034 549	2				EW0			SCREW, Hex Head, .312-18x.94
21	6034 475	5				EW0			SCREW, Torx Head, .25-20x.75

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

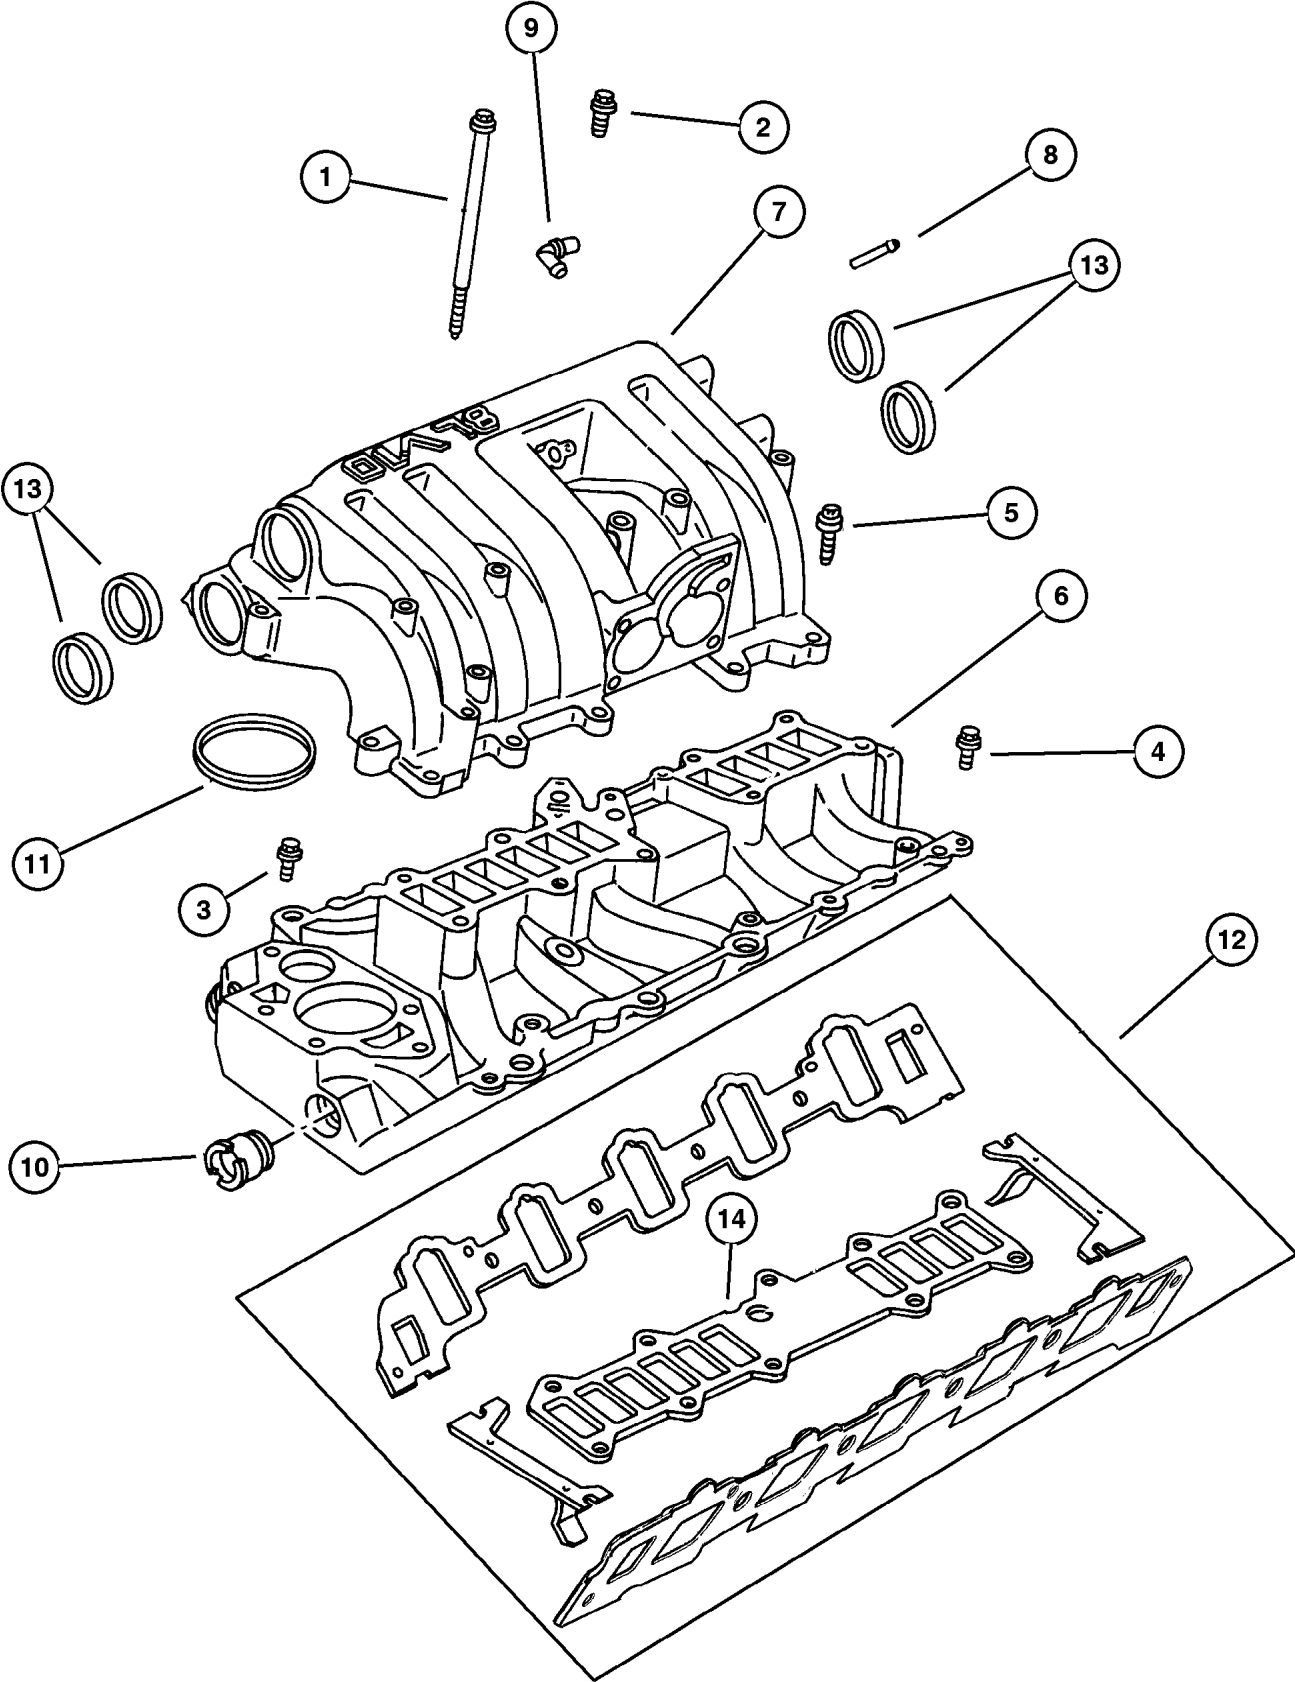Manifold, Intake 8.0L (EWA) Engine
Figure 8.0L-810




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
EW0 = All 8.0L Gas Engines									
1	6034 349	5				EW0			SCREW, Hex Head Pilot Point, .312-18 UNC 2A
2	6034 506	5				EW0			BOLT AND CONED WASHER, Hex Head, .312-18x1.56
3	6034 507	1				EW0			SCREW, Hex Head Coned, .375-16x2.25
4	6034 508	1				EW0			SCREW, Hex Head Coned, .375-16x3.00
5	6034 509	12				EW0			SCREW, Hex Head Coned, .375-16x1.75
6	5303 1583	1				EW0			MANIFOLD, Intake, Lower
7	5303 1580	1				EW0			MANIFOLD, Intake, Upper
8									CONNECTOR, Serviced in Manifold, (NOT SERVICED) (Not Serviced)
9	5304 0055	1				EW0			CONNECTOR, Manifold Vacuum, .375 90 Degree
10	5300 6046	1				EW0			NIPPLE, By-Pass
11	5301 0047	1				EW0			SEAL, Thermostat
12	4741 732	2				EW0			GASKET PACKAGE, Intake Manifold
13	5301 0044	4				EW0			PLUG, Core, 1.50 Diameter
14	5300 6836	1				EW0			GASKET, Intake Manifold

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

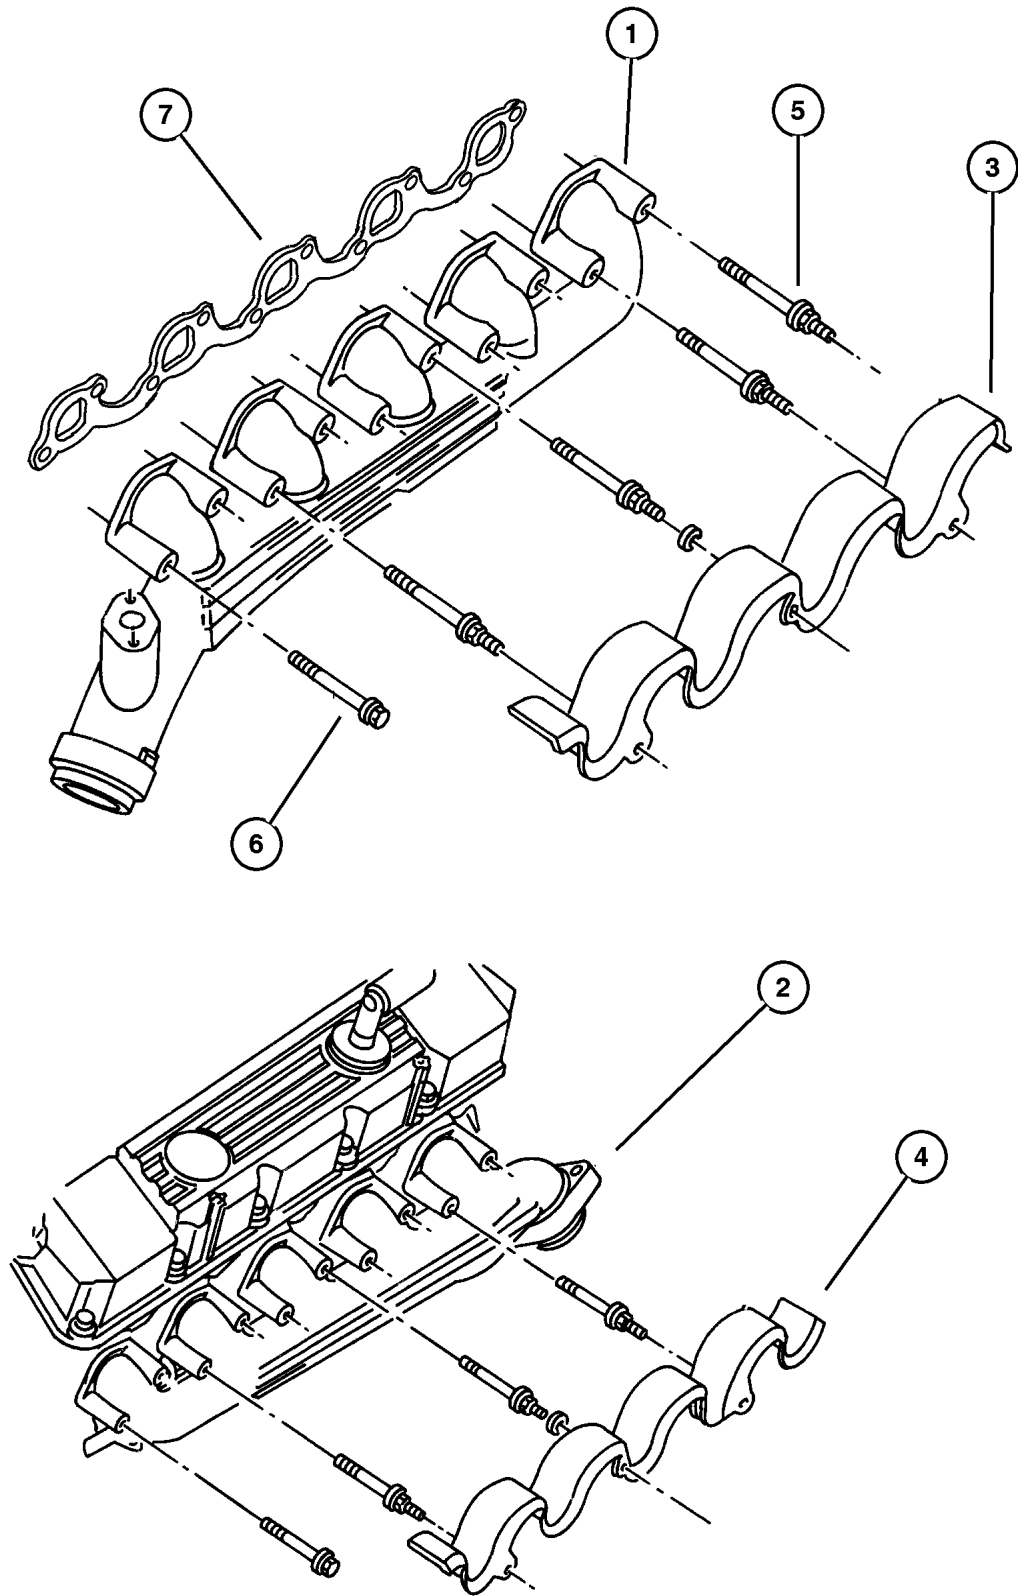Manifold, Exhaust 8.0L (EWA) Engine
Figure 8.0L-820



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

EW0 = All 8.0L Gas Engines

1	5303 1401	1				EW0			MANIFOLD, Exhaust, Right
2	5300 6733	1				EW0			MANIFOLD, Exhaust, Left
3	5303 1550	1				EW0			SHIELD, Heat, Right
4	5303 1551	1				EW0			SHIELD, Heat, Left
5	6034 808	10				EW0			STUD, .312-18/.312-24x4.00
6	6034 806	10				EW0			SCREW AND WASHER, Hex Head, .312-18x3.125
7	5300 6920	2				EW0			GASKET, Exhaust Manifold


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

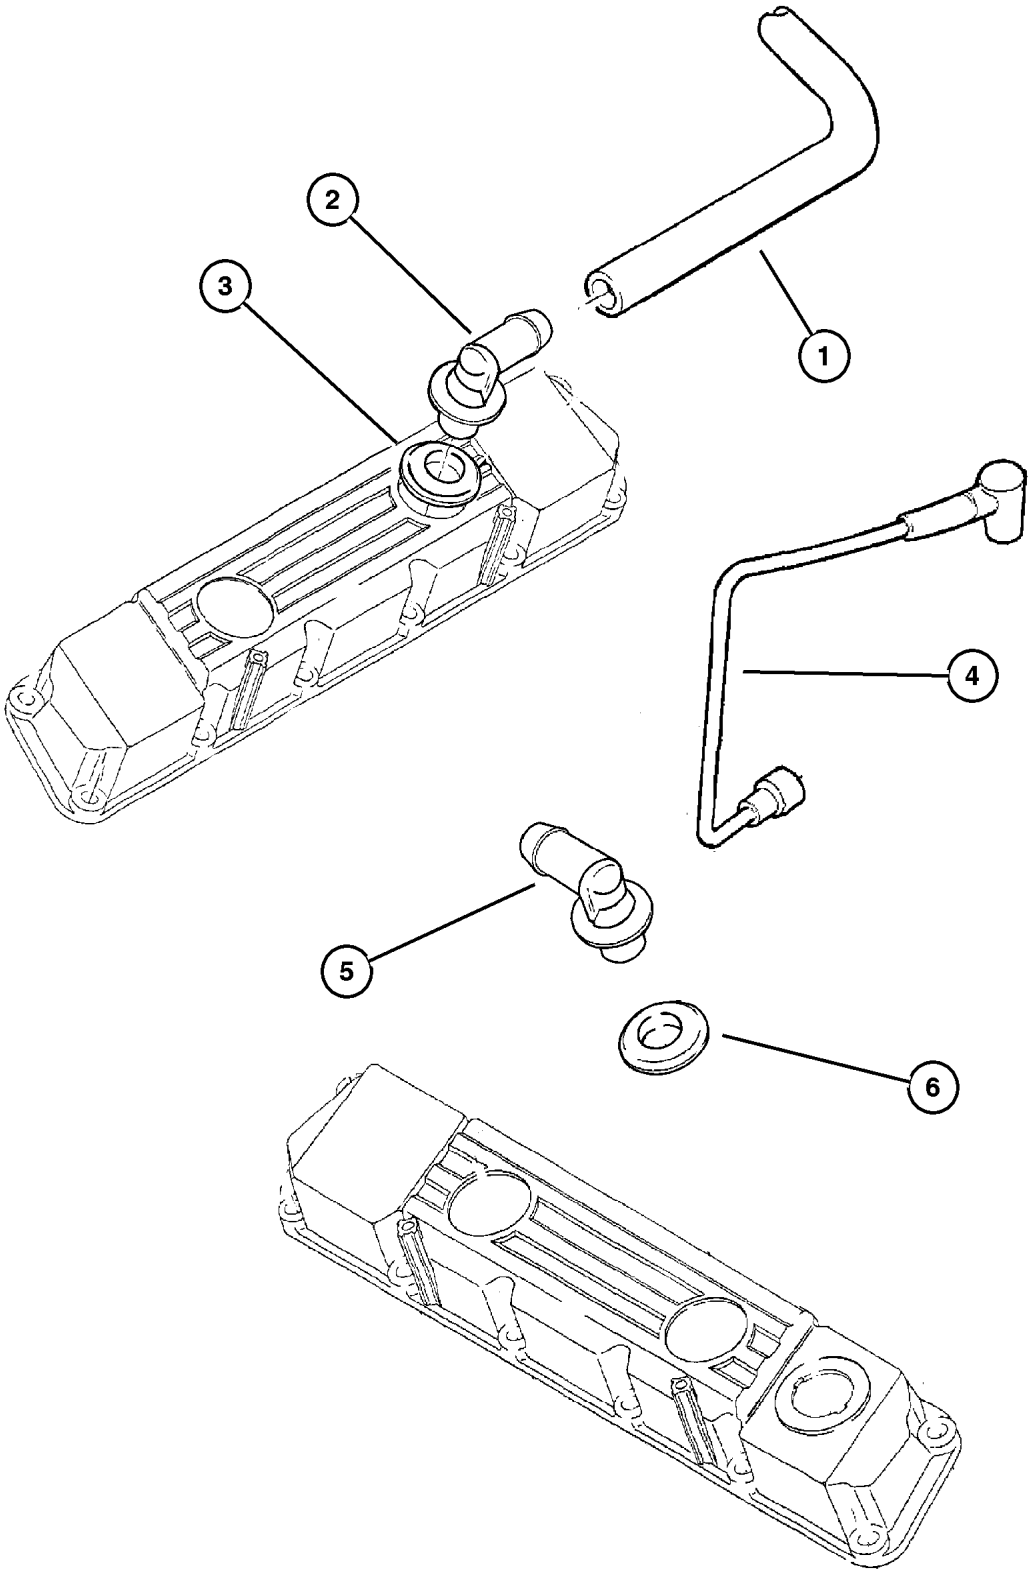Crankcase Ventilation 8.0L (EWA) Engine
Figure 8.0L-910



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

EW0 = All 8.0L Gas Engines

1	5300 6342	1				EW0			HOSE, Crankcase Vent
2	5303 0497	1				EW0			FITTING, Crankcase Vent Tube
3	2946 079	2				EW0			GROMMET, Crankcase Vent
4	5304 1044	1				EW0			TUBE, PCV Valve
5	5303 0495	1				EW0			TUBE, Crankcase Vent To Air Cleaner
6	2946 079	2				EW0			GROMMET, Crankcase Vent

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Group – 5.9LD

Engine 5.9L Six Cylinder (Diesel)

GROUP 5.9LD - Engine 5.9L Six Cylinder (Diesel)

Illustration Title Group-Fig. No.

Cylinder Head

Cylinder Head 5.9L (ETC, ETH) Diesel Engine Fig. 5.9LD-215

Cylinder Block

Cylinder Block 5.9L (ETC, ETH) Diesel Engine Fig. 5.9LD-315

Crankshaft, Piston and Torque Converter

Crankshaft and Piston 5.9L (ETC, ETH) Diesel Engine Fig. 5.9LD-415

Flywheel and Torque Converter 5.9L (ETC,ETH) Diesel Engine Fig. 5.9LD-425

Torque Converter Cooler 5.9L (ETC, ETC+XCK) Diesel Engine Fig. 5.9LD-435

Camshafts & Valves

Camshaft and Valves 5.9L (ETC,ETH) Diesel Engine Fig. 5.9LD-515

Timing Belt and Cover

Timing Gear and Cover 5.9L (ETC,ETH) Diesel Engine Fig. 5.9LD-615

Engine Oiling

Engine Oiling 5.9L (ETC,ETH) Diesel Engine Fig. 5.9LD-715

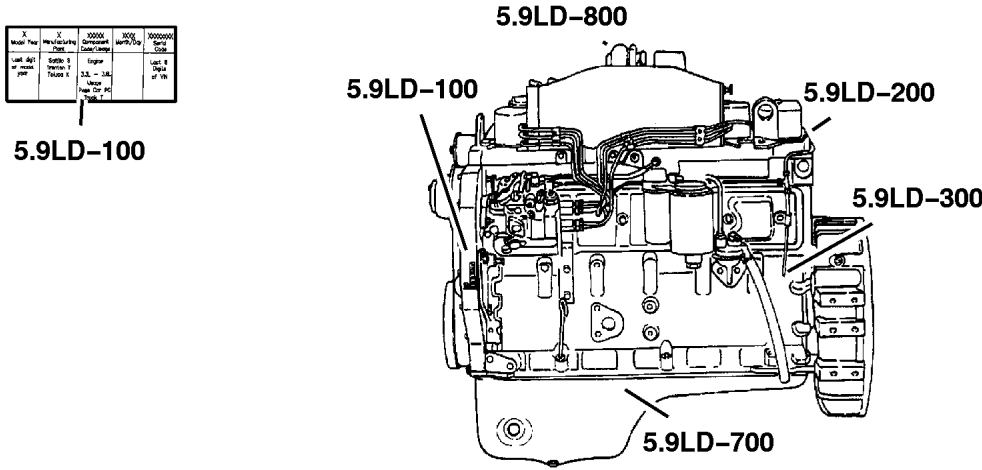
Manifolds

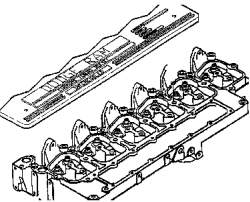
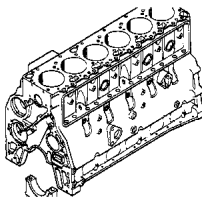
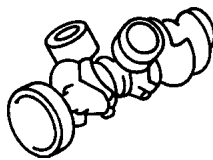
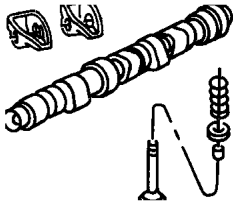
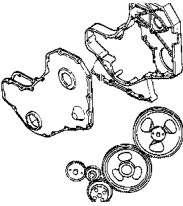
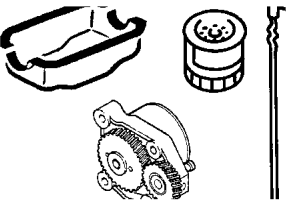
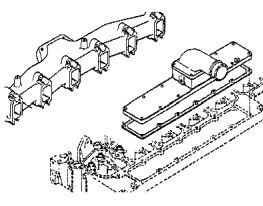
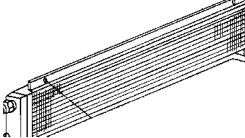
Manifold, Intake and Exhaust 5.9L (ETC,ETH) Diesel Engine Fig. 5.9LD-815

Oil Cooler


Engine Oil Cooler 5.9L (ETC,ETH) Diesel Engine Fig. 5.9LD-1115

Oil Lines 5.9L (ETC,ETH) Diesel Engine Fig. 5.9LD-1125



5.9LD-200 Cylinder Head	5.9LD-300 Cylinder Block	5.9LD-400 Crankshaft, Piston and Torque Converter	5.9LD-500 Camshafts & Valves
			
5.9LD-600 Timing Belt and Cover	5.9LD-700 Engine Oiling	5.9LD-800 Manifolds	5.9LD-1100 Oil Cooler
			

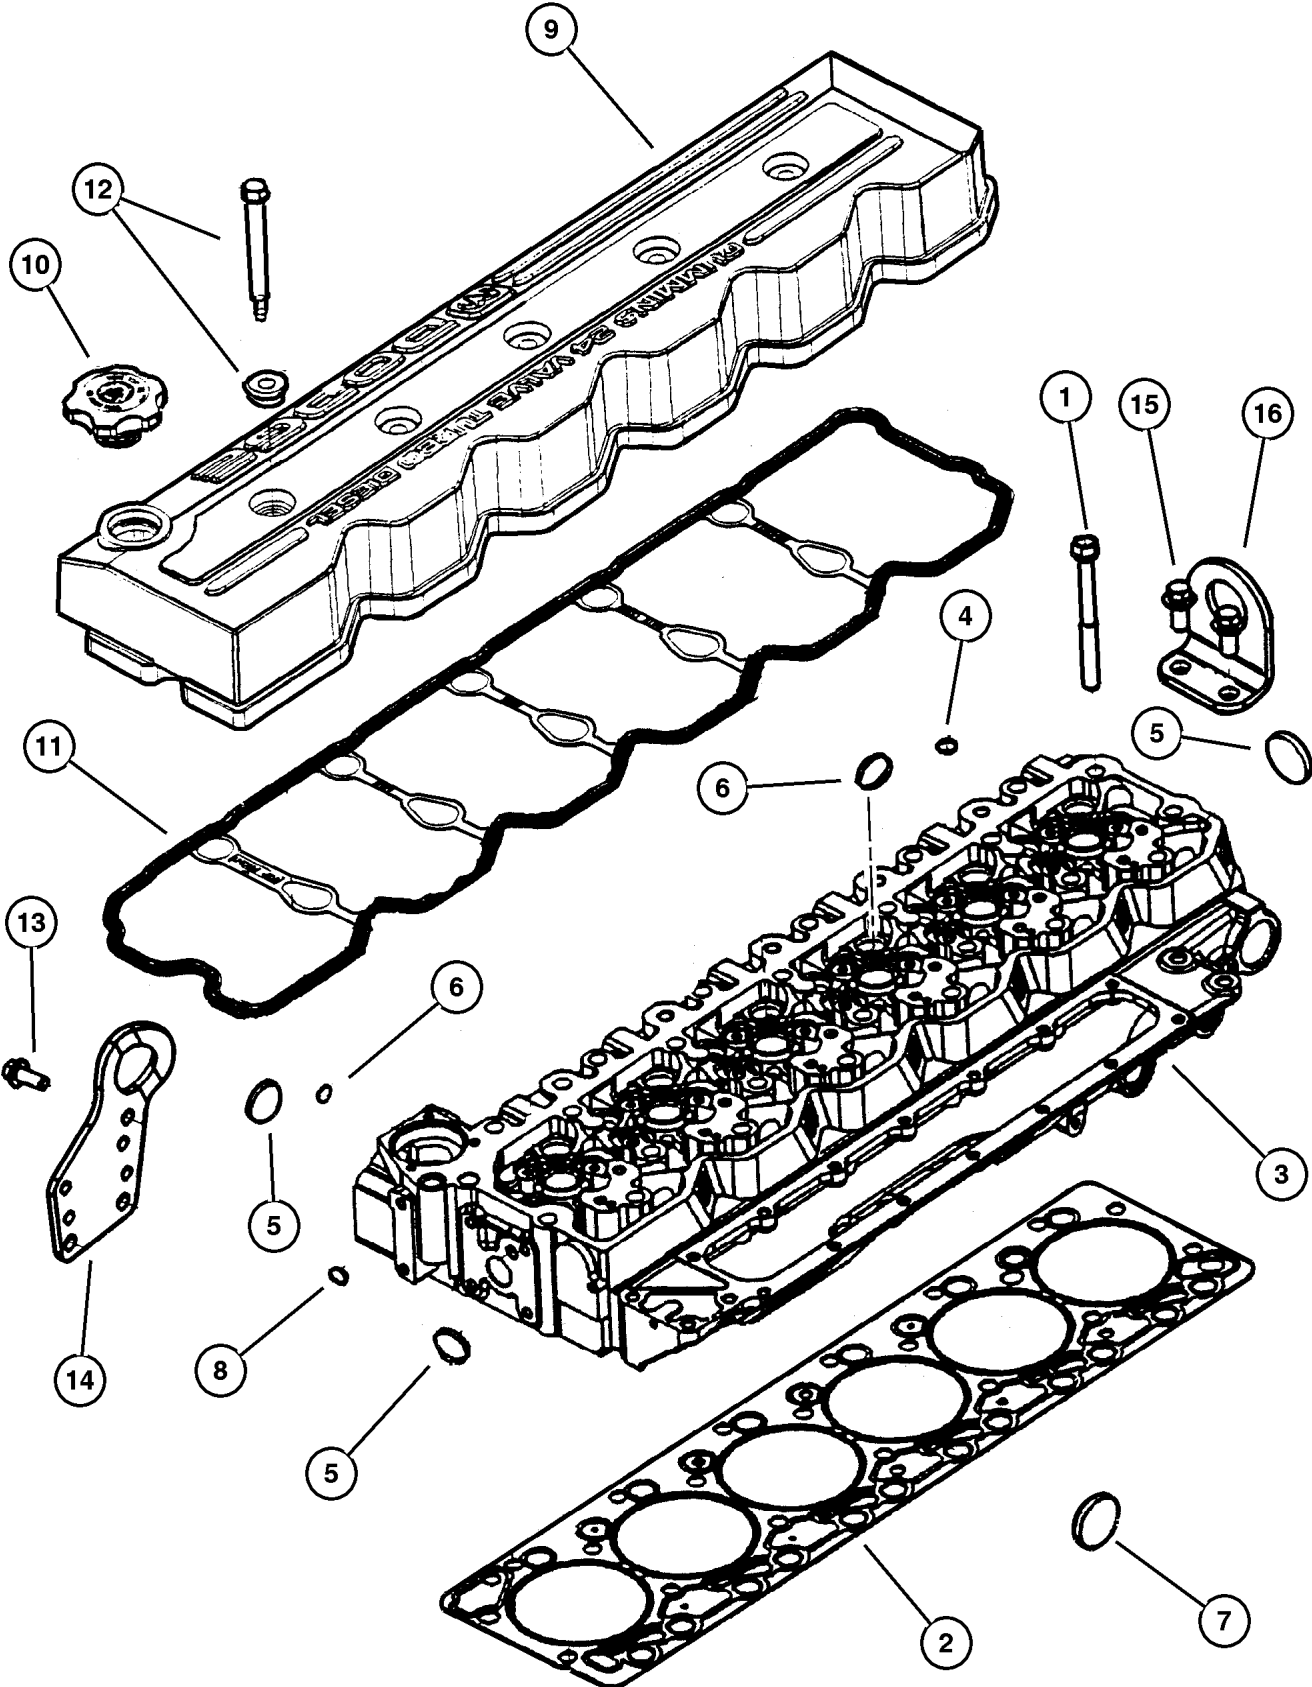Cylinder Head 5.9L (ETC, ETH) Diesel Engine
Figure 5.9LD-215



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

Gasket Package, Engine Upper - 05011933AA

DBB = All Manual Transmissions

DG0 = All Automatic Transmissions

ETC = 5.9L Cummins 24V Diesel Engine

ETH = 5.9L HO Cummins Turbo Diesel Engine

ET0 = All 5.9L Turbo Diesel Engines

XCK = 2001 Diesel Tracking

1									SCREW
	5011 403AA	26				ETC			
		26				ETH	DBB		
2	5011 876AA	1				ETC	DBB		GASKET, Cylinder Head ETC W/O XCK, Manual
		1				ETC	DG0		ETC W/O XCK, Auto
	5011 426AA	1				ETH	DBB		ETH, Manual
		1				ETC	DG0		ETC+XCK, Auto
		1				ETC	DBB		ETC+XCK, Manual
3	5014 202AA	1				ETC			HEAD, Cylinder ETC W/O XCK
	5018 181AA	1				ETH	DBB		ETH, Manual
	5015 842AA	1				ETC	DG0		ETC+XCK , Auto
		1				ETC	DBB		ETC+XCK, Manual
4	5011 883AA	2				ETC			PLUG, Expansion
	5016 559AA	7				ETH	DBB		
5	4429 955	7				ETC			PLUG, Expansion
	4883 329	14				ETH	DBB		
6									PLUG, Expansion
	4429 735	14				ETC			
	5003 605AA	11				ETC			
7	5003 605AA	1				ETC			PLUG, Expansion ETC
	5017 786AA	2				ETH	DBB		ETH, Manual
		2				ETC	DG0		ETC+XCK, Auto
		2				ETC	DBB		ETC+XCK, Manual
8	5011 884AA	2				ETC			PLUG, Expansion, ETC W/O XCK
9									COVER, Cylinder Head
	5015 718AA	1				ETC	DBB		ETC W/O XCK, Manual
		1				ETC	DG0		ETC W/O XCK, Auto


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

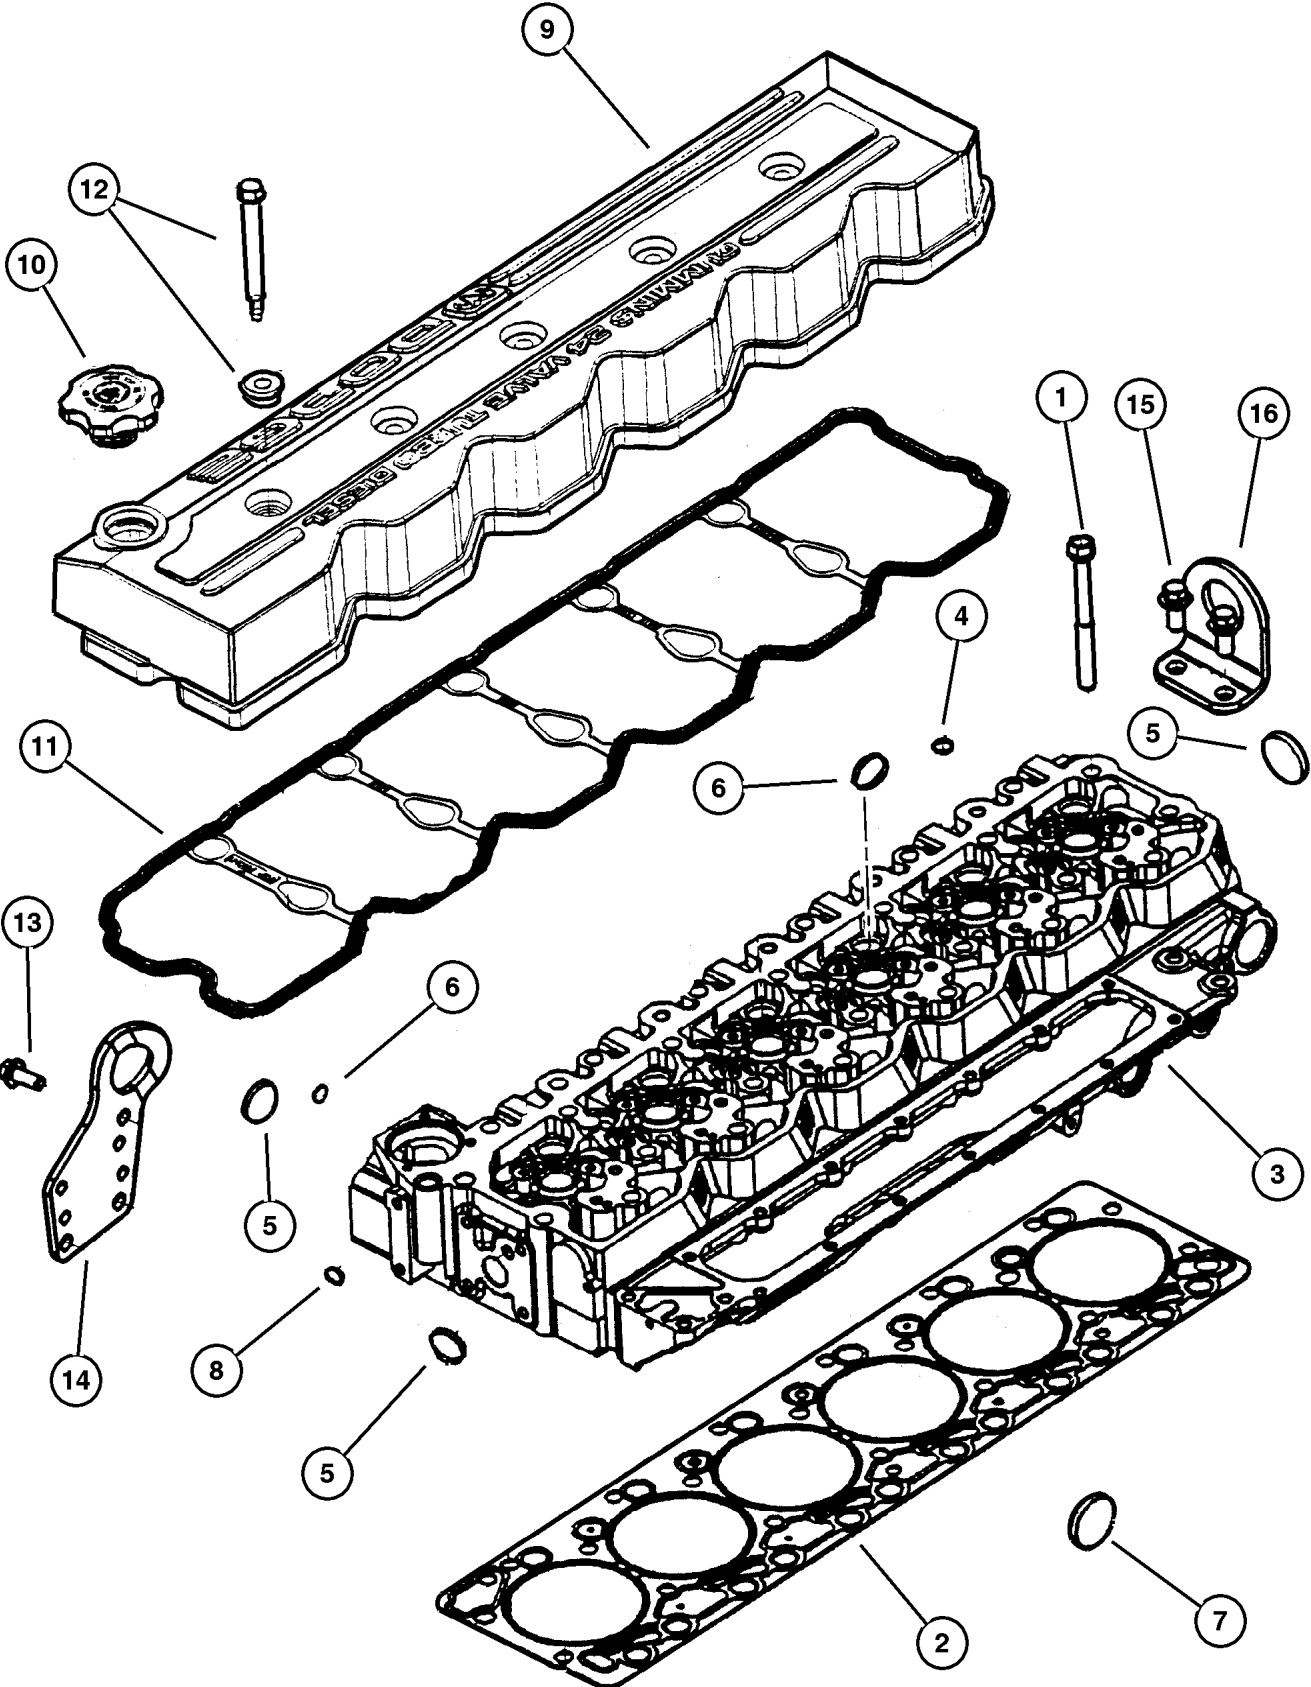
Cylinder Head 5.9L (ETC, ETH) Diesel Engine
Figure 5.9LD-215



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
10	5014 704AA	1				ETH	DBB		ETH, Manual
		1				ETC	DG0		ETC+XCK, Auto
		1				ETC	DBB		ETC+XCK, Manual
									CAP, Oil Filler
11	5016 356AA	1				ETC			
		1				ETH	DBB		GASKET, Valve Cover
		1				ETC			
12	5015 724AA	5				ETH	DBB		SCREW
		5				ETC	DG0		ETH, Manual
		5				ETC	DBB		ETC With or Without XCK, Auto
									ETC With or Without XCK, Manual
13	4429 460	3				ETC			SCREW, Water Inlet, M10x1.5x25
		3				ETH	DBB		
14	5011 842AA	1				ETC			BRACKET, Engine Lift
		1				ETH	DBB		
15	4638 666	2				ETC			SCREW, Hex Flange Head
		2				ETH	DBB		
16	5011 841AA	1				ETC			BRACKET, Engine Lift
		1				ETH	DBB		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

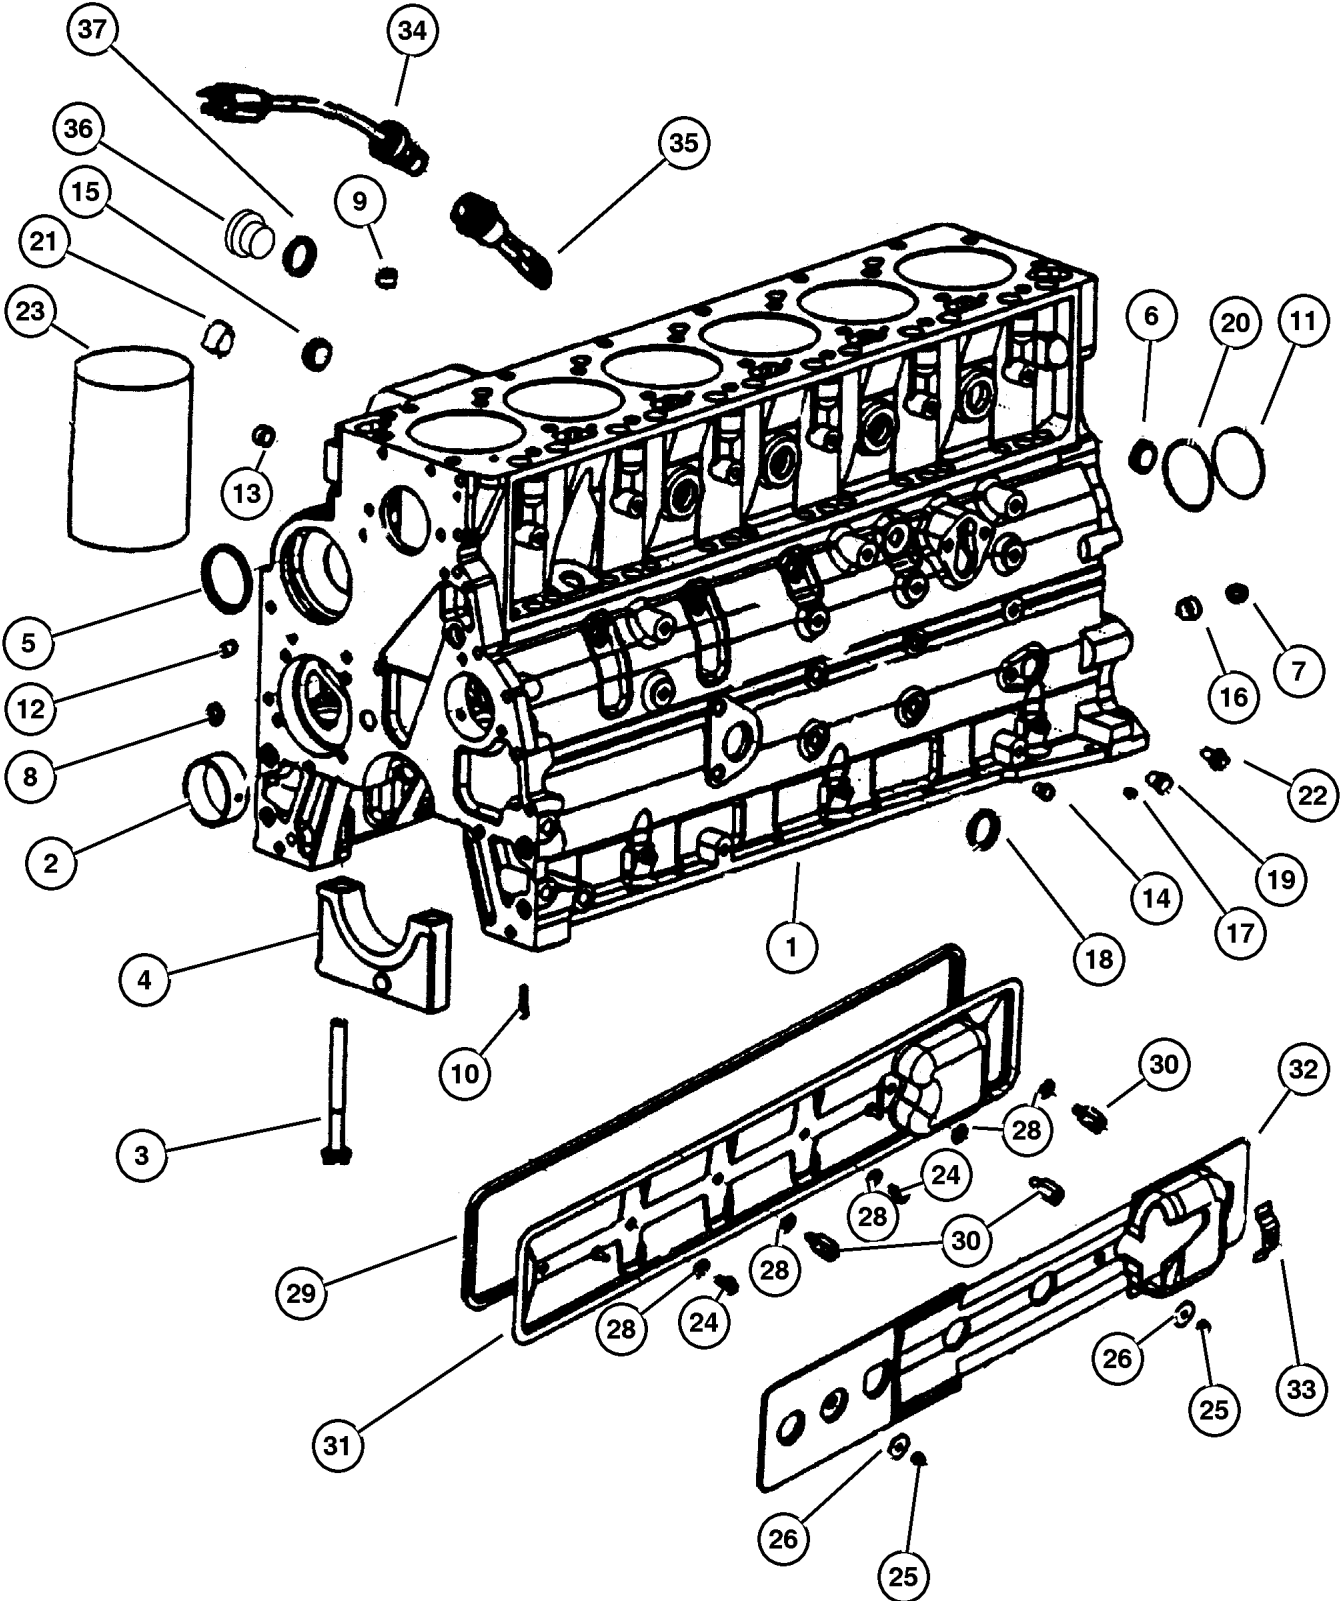Cylinder Block 5.9L (ETC, ETH) Diesel Engine
Figure 5.9LD-315



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note: SALES CODES

Block Kit, Hardware - 05011780AA
DBB = All Manual Transmissions
DG0 = All Automatic Transmissions
ETC = 5.9L Cummins 24V Diesel Engine
ETH = 5.9L HO Cummins Turbo Diesel Engine
ET0 = All 5.9L Turbo Diesel Engines

1	5014 594AA	1				ETC	DBB		BLOCK, Cylinder ETC W/O XCK, Manual
		1				ETC	DG0		ETC W/O XCK, Auto
	5011 043AA	1				ETH	DBB		ETH, Manual
		1				ETC	DG0		ETC+XCK, Auto
		1				ETC	DBB		ETC+XCK,Manual
2	5003 617AA	1				ETC	DBB		BUSHING, Camshaft
		1				ETC	DG0		
		1				ETH	DBB		
3	5003 615AA	14				ETC			BOLT, Hex Head
		14				ETH	DBB		
4									CAP, (NOT SERVICED) (Not Serviced)
5	4797 725	5				ETC			PLUG, Cylinder Block Oil Hole
6	4429 735	4				ETC			PLUG, Expansion, ETC,ETC+XCK & ETH
7	4429 956	3				ETC			PLUG, Expansion
		3				ETH	DBB		
8	4429 068	14				ETC			DOWEL, Block To Clutch Housing
		14				ETH	DBB		
9	4429 343	2				ETC			DOWEL, Ring
		2				ETH	DBB		
10	5003 606AA	6				ETC			JET, Piston Oil Cooler
	5003 606AB	6				ETH	DBB		
11	4429 687	1				ETC			PLUG, Expansion
		1				ETH	DBB		
12									DOWEL, Front Cover


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

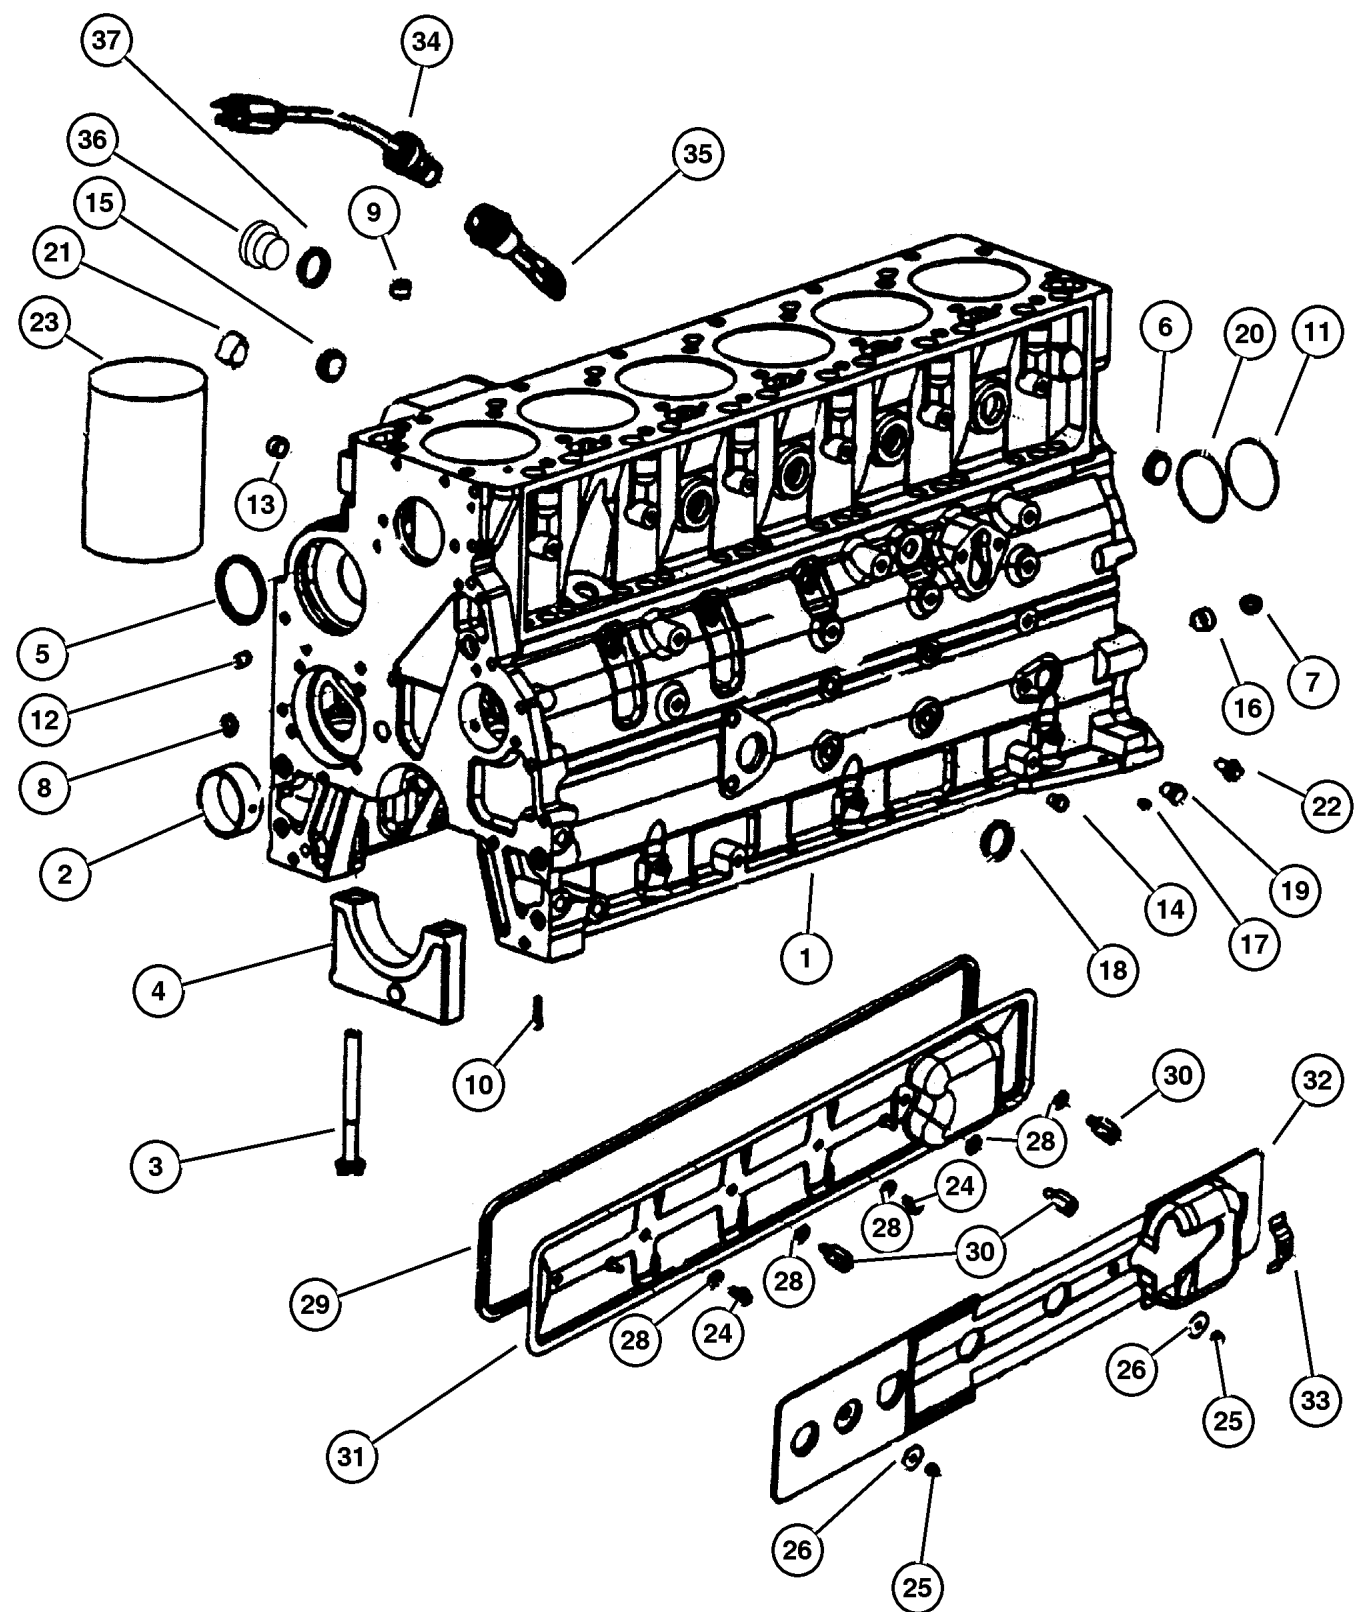
Cylinder Block 5.9L (ETC, ETH) Diesel Engine
Figure 5.9LD-315



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4429 257	2				ETC			
		2				ETH	DBB		
13	4429 568	2				ETC			PLUG, Pipe
		1				ETH	DBB		
		1				ETC	DG0		
		1				ETC	DBB		
14	5003 614AA	4				ETC			PLUG, Expansion
		2				ETH	DBB		
		2				ETC	DG0		
		2				ETC	DBB		
15	5003 605AA	1				ETC			PLUG, Expansion
		1				ETH	DBB		
		1				ETC	DG0		
		1				ETC	DBB		
16	4429 068	2				ETC			DOWEL, Block To Clutch Housing
		14				ETH	DBB		
17	4429 955	6				ETC			PLUG, Expansion
		3				ETH	DBB		
		3				ETC	DG0		
		3				ETC	DBB		
18	4429 958	2				ETC			PLUG, Expansion
		1				ETH	DBB		
		1				ETC	DG0		
		1				ETC	DBB		
19	5011 781AA	1				ETC			PLUG, Cylinder Block
		1				ETH	DBB		
20	4882 037	1				ETC			O RING
		1				ETH	DBB		
21	4429 369	1				ETC			PLUG, Pipe
		1				ETH	DBB		
		1				ETC	DG0		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

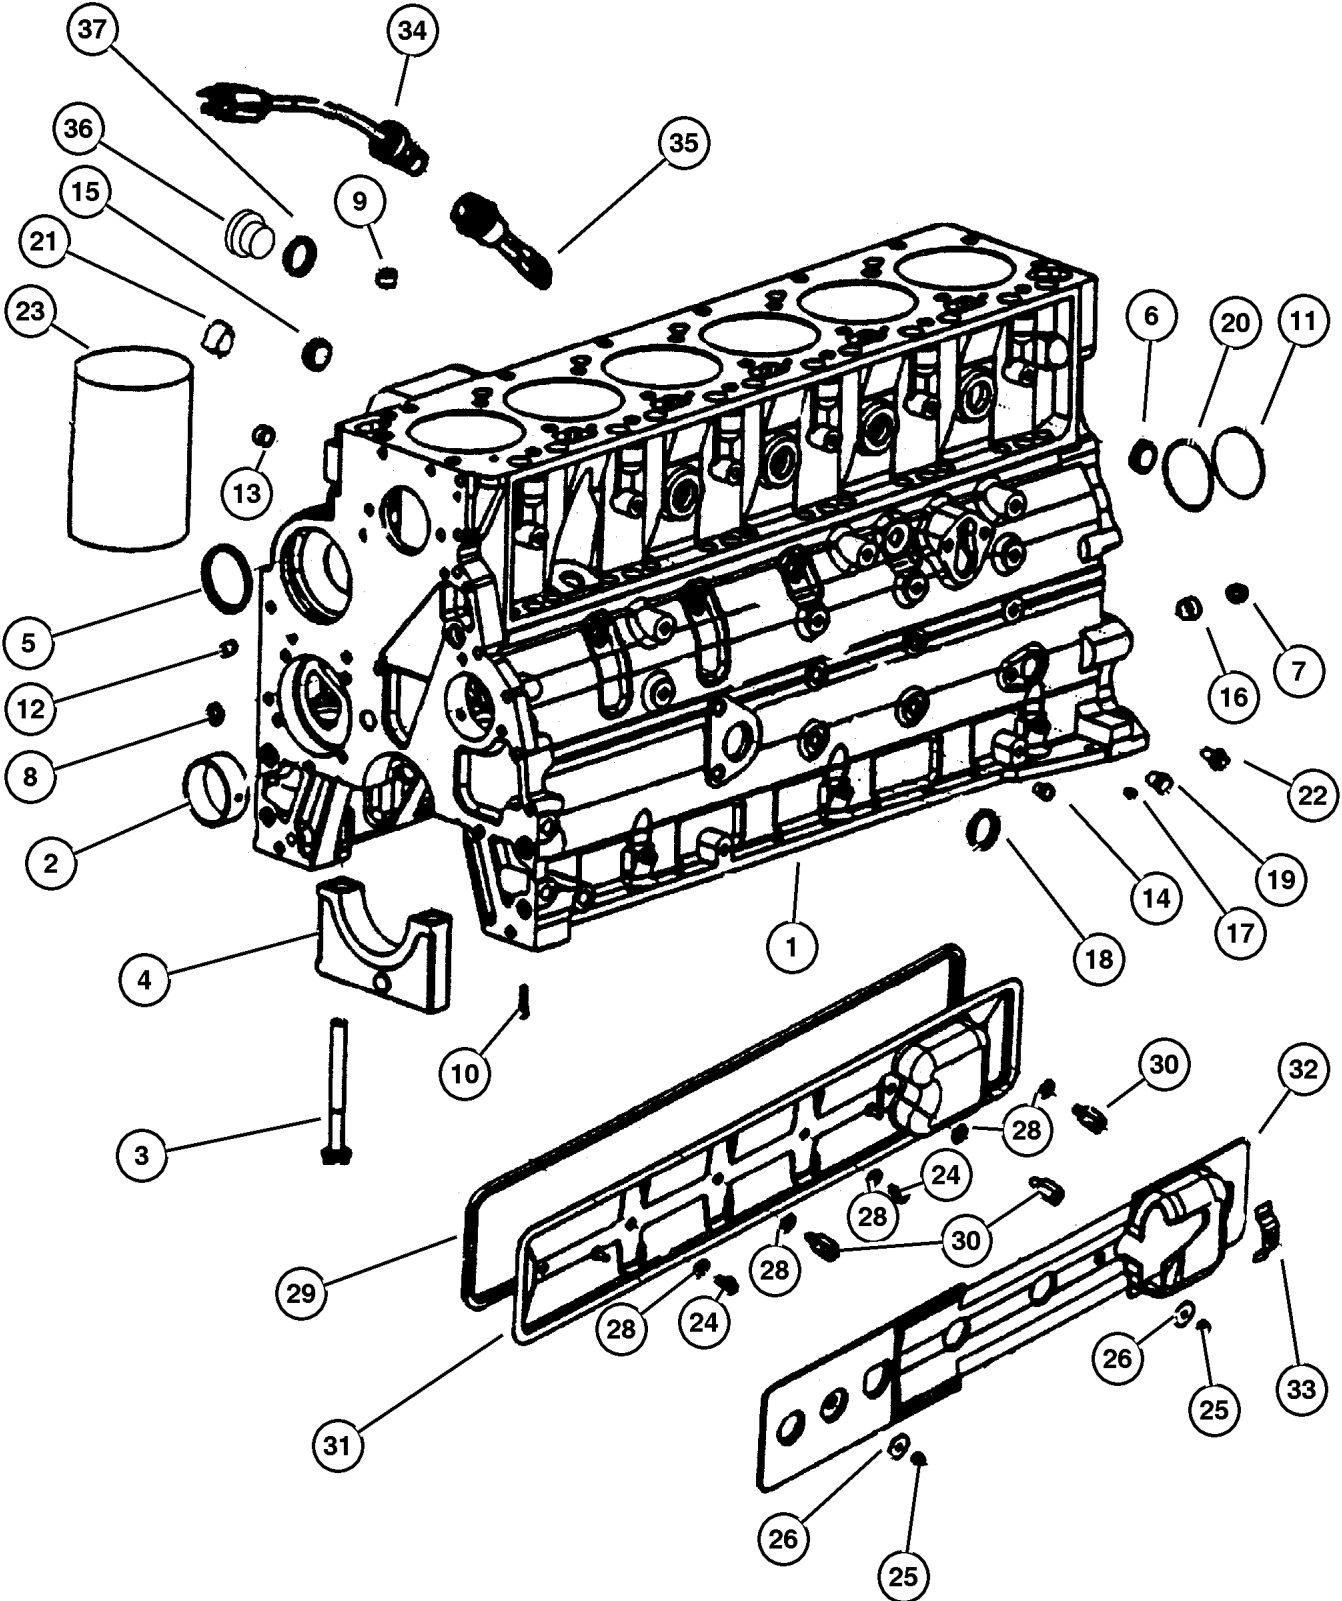
Cylinder Block 5.9L (ETC, ETH) Diesel Engine
Figure 5.9LD-315



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1				ETC	DBB		
22	4429 629	1				ETC			SCREW, Hex Head, M8x1.25x16
	4882 110	1				ETH	DBB		
		1				ETC	DG0		
23	4429 166	AR				ETC	DBB		SLEEVE, Cylinder Block SCREW, Hex Head
24	5011 792AA	3				ETC			
		3				ETH	DBB		
		3				ETC	DG0		
		3				ETC	DBB		
25	4429 959	2				ETC			NUT, Tappet Cover
		2				ETH	DBB		
		2				ETC	DG0		
		2				ETC	DBB		
26	4429 960	2				ETC			WASHER, Plain
		2				ETH	DBB		
		2				ETC	DG0		
		2				ETC	DBB		
-27						ETC	DBB		CLAMP, Serviced in Hose, (NOT SERVICED) (Not Serviced)
28	5003 620AA	6				ETC			SEAL, Grommet O-Ring
		6				ETH	DBB		
		6				ETC	DG0		
		6				ETC	DBB		
29	4798 940	1				ETC			GASKET, Camshaft Cover
		1				ETH	DBB		
		1				ETC	DG0		
		1				ETC	DBB		
30	5003 621AB	3				ETC			SPACER
	5003 621AA	3				ETH	DBB		
		3				ETC	DG0		
		3				ETC	DBB		
31									COVER, Camshaft

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

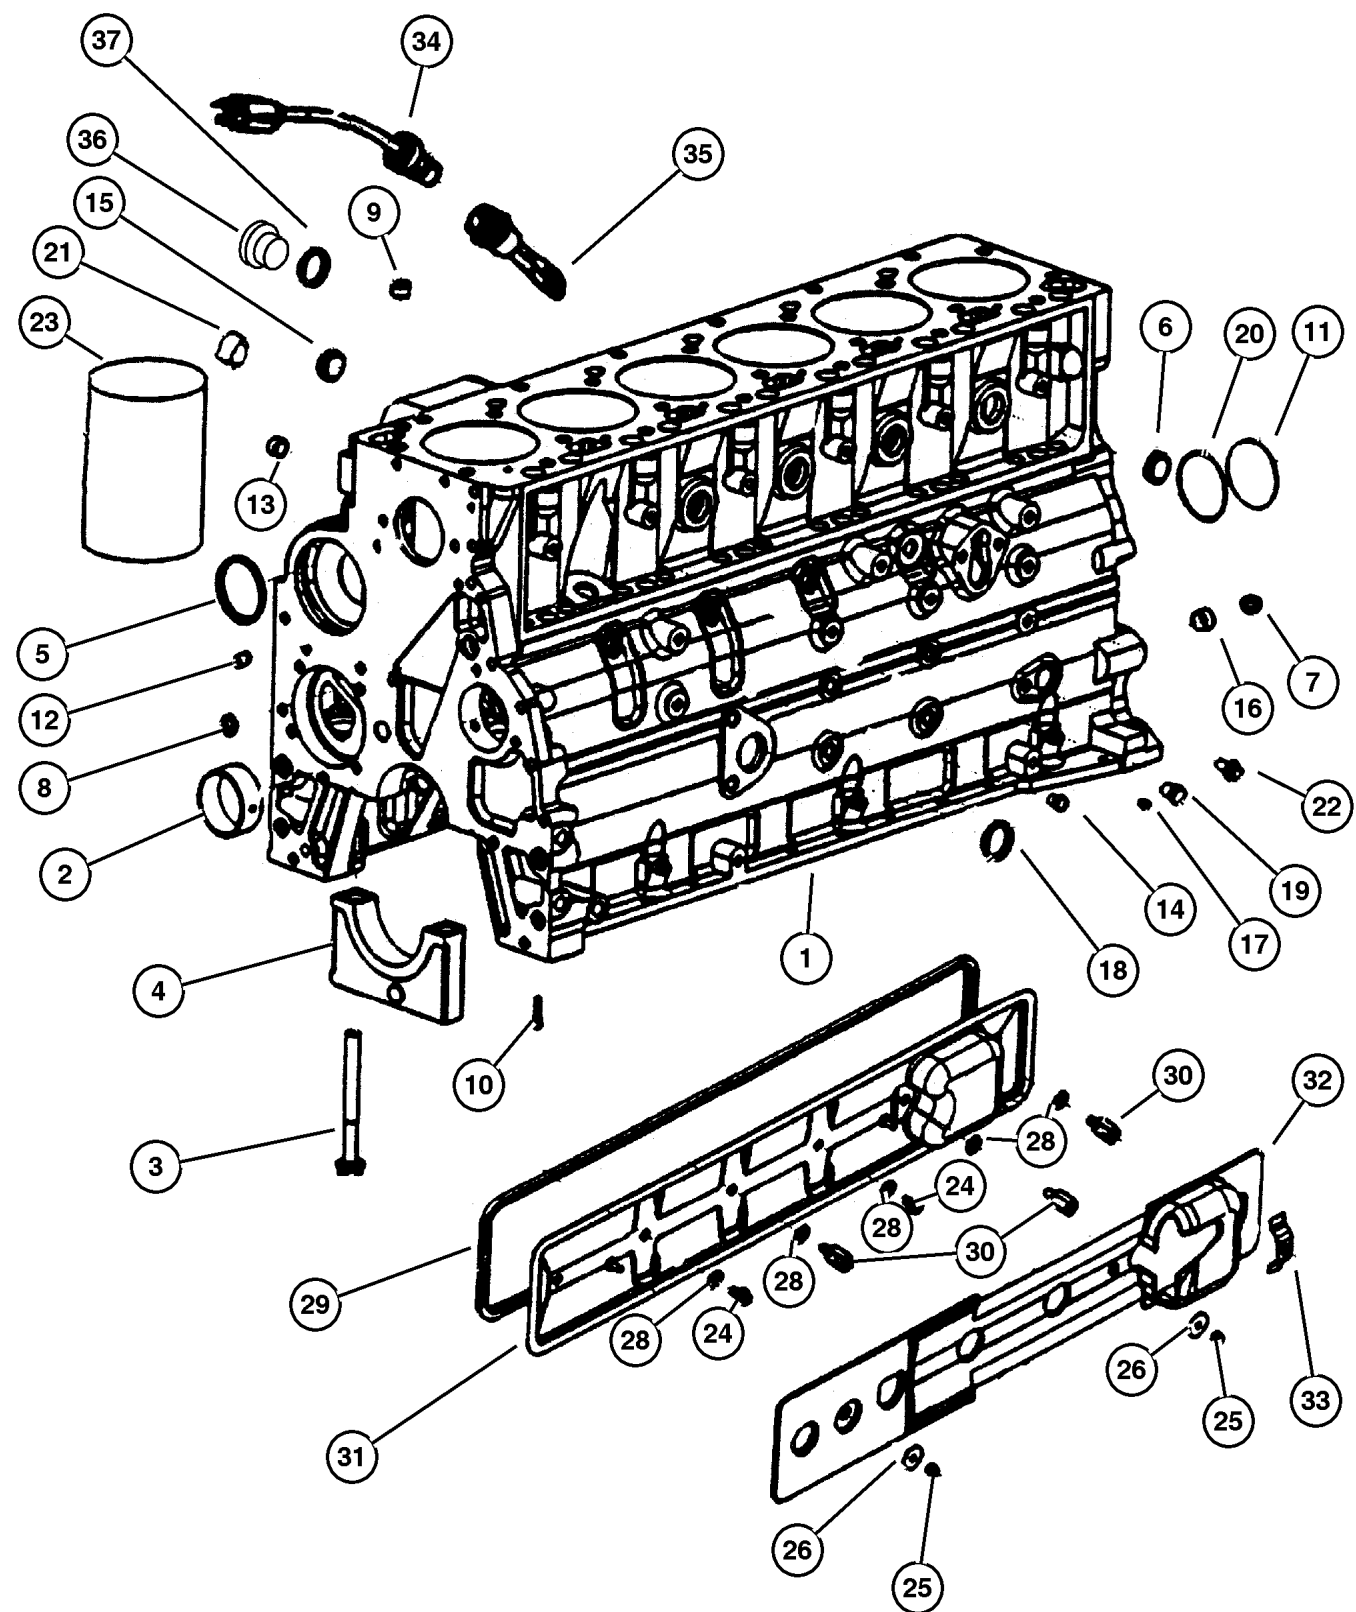Cylinder Block 5.9L (ETC, ETH) Diesel Engine
Figure 5.9LD-315



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5014 179AA	1				ETC			
		1				ETH	DBB		
		1				ETC	DG0		
		1				ETC	DBB		
32									COVER, Camshaft
	5015 551AA	1				ETC			
		1				ETH	DBB		
		1				ETC	DG0		
		1				ETC	DBB		
33									BRACKET
	5011 794AA	1				ETC			
		1				ETH	DBB		
		1				ETC	DG0		
		1				ETC	DBB		
34									CORD, Engine Block Heater
	4798 889	1				ETC			
		1				ETH	DBB		
		1				ETC	DG0		
		1				ETC	DBB		
35									HEATER, Engine Block
	5003 619AA	1				ETC			
		1				ETH	DBB		
		1				ETC	DG0		
		1				ETC	DBB		
36									PLUG
	5011 913AA	1				ETC	DBB		ETC W/O XCK, Manual
		1				ETC	DG0		ETC W/O XCK, Auto
		1				ETH	DBB		ETH,Manual
		1				ETC	DG0		ETC+XCK, Auto
		1				ETC	DBB		ETC+XCK, Manual
37									O RING, Oil Cooler
	5011 914AA	1				ETC	DBB		ETC W/O XCK, Manual
		1				ETC	DG0		ETC W/O XCK, Auto
	5003 647AA	1				ETH	DBB		ETH,Manual
		1				ETC	DG0		ETC+XCK, Auto
		1				ETC	DBB		ETC+XCK, Manual
-38	5013 690AA-	1				ETC			PLUG, Crank Sensor Hole Plate
-39	5011 856AA-	1				ETC			SCREW, Crank Sensor Hole Plate Attach
-40	5014 528AA-	AR				ETC			GASKET KIT, Lower Engine Set

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Crankshaft and Piston 5.9L (ETC, ETH) Diesel Engine
Figure 5.9LD-415

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

DBB = All Manual Transmissions

DG0 = All Automatic Transmissions

ETC = 5.9L Cummins 24V Diesel Engine

ETH = 5.9L HO Cummins Turbo Diesel Engine

XCK = 2001 Diesel Tracking


1									CRANKSHAFT
	5011 782AA	1				ETC			
	5017 775AA	1				ETH	DBB		ETC+XCK and ETH All
2									GEAR, Crankshaft
	4882 036	1				ETC			
		1				ETH	DBB		
3	4429 483	1				ETC			PIN, Crankshaft Gear, Fits ETC &
									ETH
4	5011 783AA	1				ETC			TONE RING, Sensor, Fits ETC &
									ETH
5	5011 784AA	5				ETC			SCREW, Fits ETC & ETH
6									BEARING KIT, Crankshaft, Standard
	4429 070	1				ETC			
		1				ETH	DBB		
-7									BEARING KIT, Crankshaft, .25mm
									Oversize
	4429 271	AR				ETC			
		1				ETH	DBB		
-8									BEARING KIT, Crankshaft, .50mm
									Oversize
	4429 272	AR				ETC			
		1				ETH	DBB		
-9									BEARING KIT, Crankshaft, .75mm
									Oversize
	4429 273	AR				ETC			
		1				ETH	DBB		
-10									BEARING KIT, Crankshaft, 1.00mm
									Oversize
	4429 274	AR				ETC			
		1				ETH	DBB		
11									BEARING, Crankshaft Thrust, .50
									mm U/S
	5012 552AA	AR				ETC			
	4429 282	1				ETH	DBB		ETC+XCK and ETH All

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

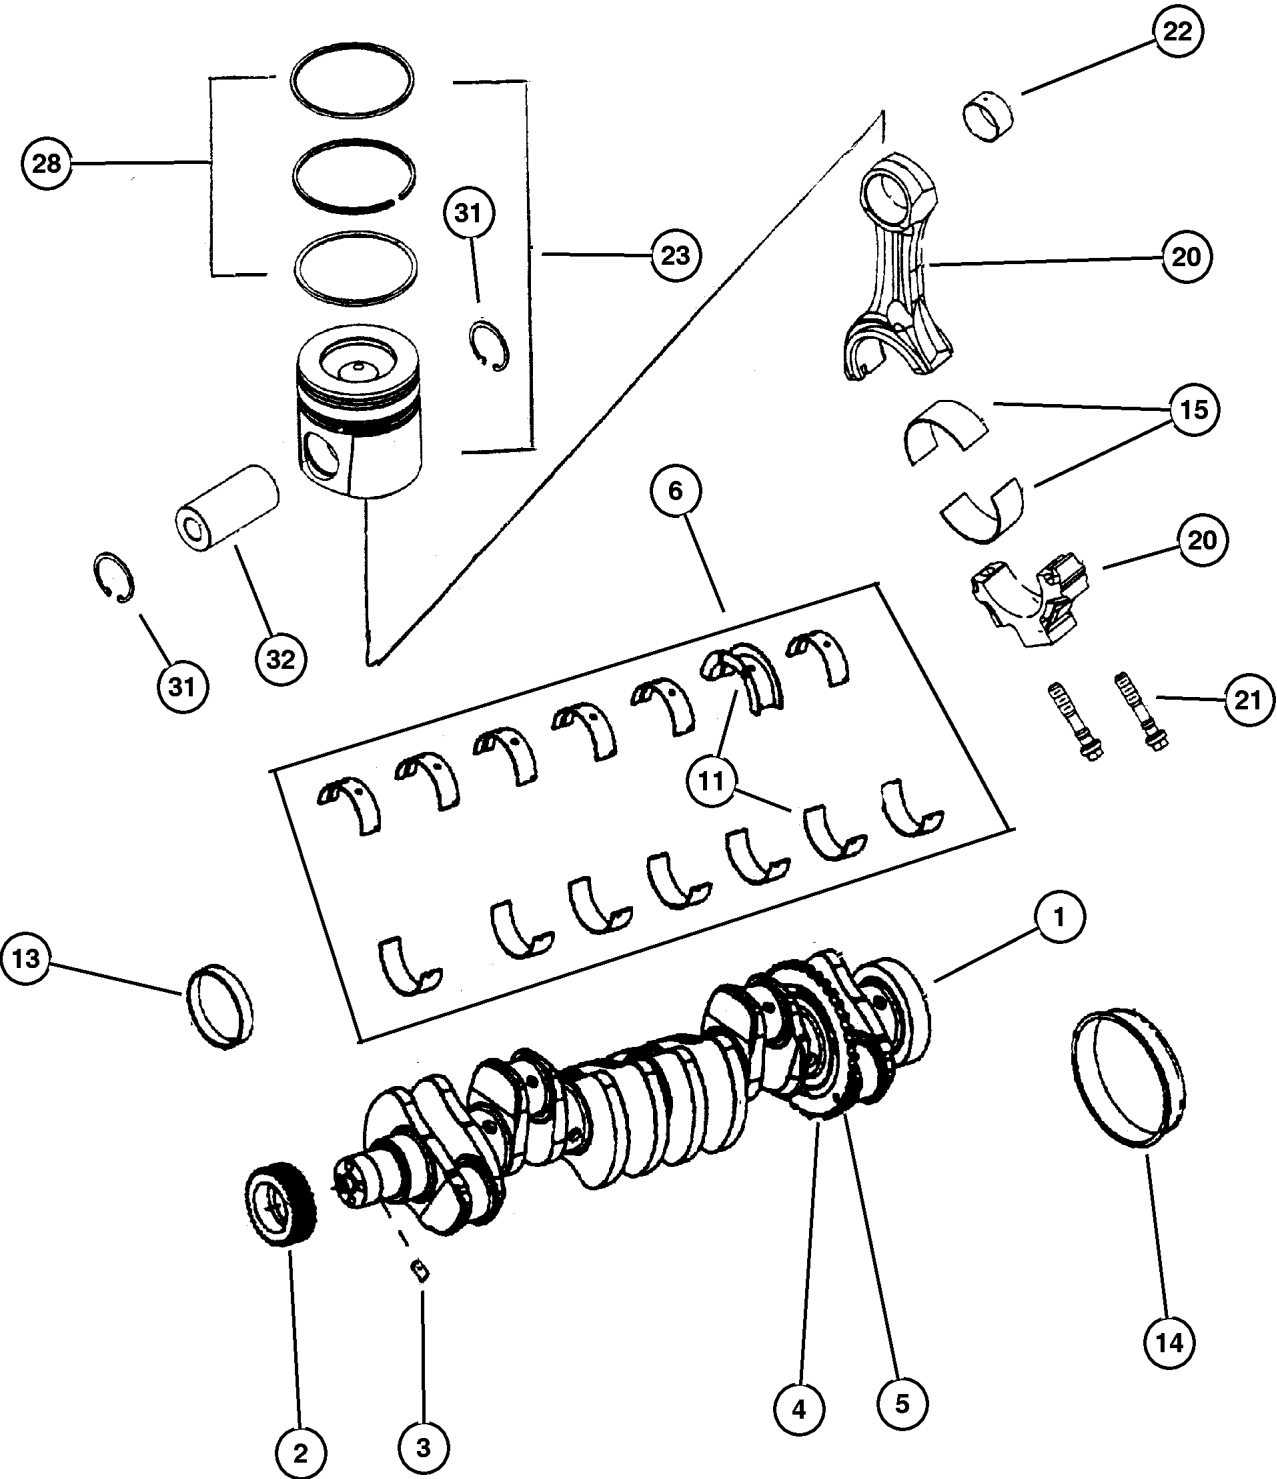September 16, 2005




Crankshaft and Piston 5.9L (ETC, ETH) Diesel Engine
Figure 5.9LD-415

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-12									BEARING, Crankshaft Thrust, 1.00 mm U/S
	5012 551AA-	1				ETC			
	4429 283	1				ETH	DBB		ETC+XCK and ETH, All SLEEVE, Wear
13	5011 935AA	1				ETC			
		1				ETH	DBB		
14	4897 876AA	1				ETC			SLEEVE KIT, Wear
		1				ETH	DBB		
15	4429 175	12				ETC			BEARING, Connecting Rod, STD.
		12				ETH	DBB		
-16	4429 171	AR				ETC			BEARING, Connecting Rod, .25 mm U/S
-17	4429 172	AR				ETC			BEARING, Connecting Rod, .50 mm U/S
-18	4429 173	AR				ETC			BEARING, Connecting Rod, .75 mm U/S
-19	4429 174	AR				ETC			BEARING, Connecting Rod, 1.00 mm U/S
20	5003 649AA	6				ETC			ROD, Connecting
		6				ETH	DBB		
21	4429 919	12				ETC			SCREW, Connecting Rod, 24x.44
		12				ETH	DBB		
22									BUSHING, Serviced in Rod, (NOT SERVICED) (Not Serviced)
23									PISTON AND RINGS, Diesel Engine, A Grade
	5015 810AA	6				ETC			
	5018 093AA	6				ETH	DBB		
	5011 857AA	6				ETC	DG0		ETC+XCK, All PISTON AND RINGS, Diesel Engine, B Grade
-24									
	5015 811AA-	6				ETC			
	5011 859AA-	6				ETC	DG0		ETC+XCK, All PISTON AND RINGS, Diesel Engine, C Grade
-25									

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

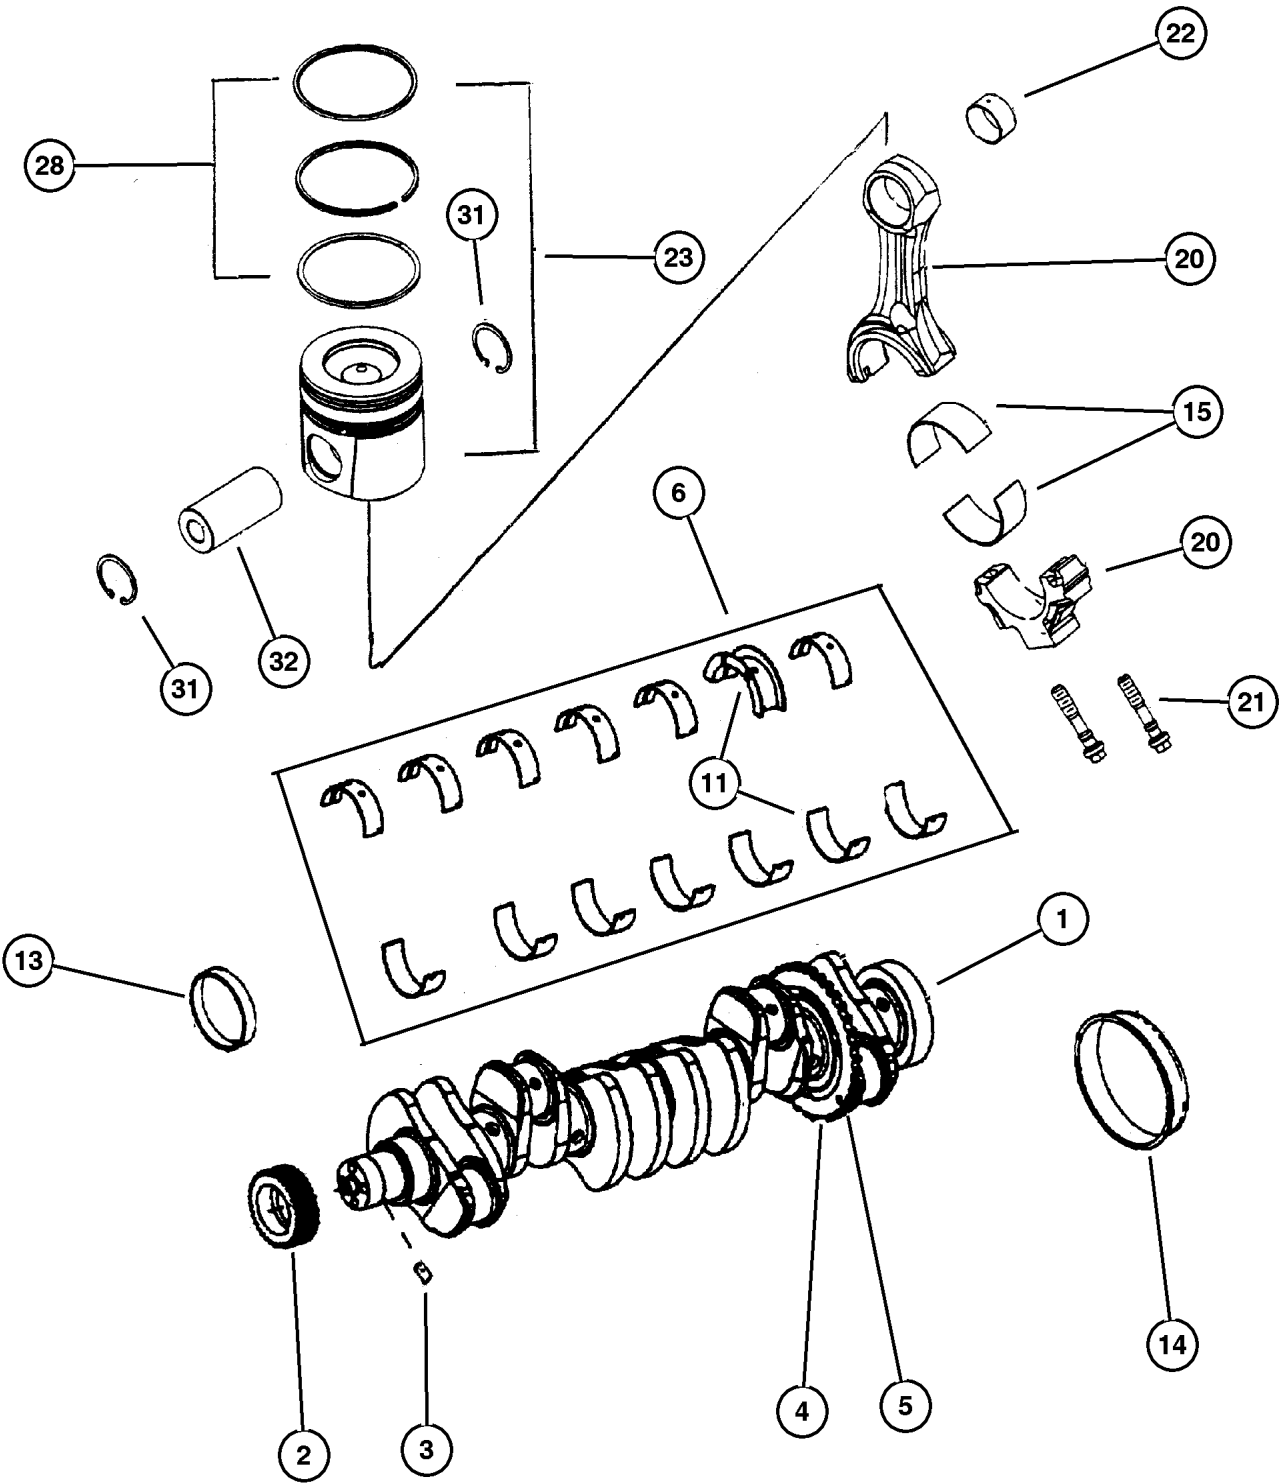September 16, 2005




Crankshaft and Piston 5.9L (ETC, ETH) Diesel Engine
Figure 5.9LD-415

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5015 812AA-	6				ETC			
	5011 860AA-	6				ETC	DG0		ETC+XCK, All
-26	5015 813AA-	AR				ETC			PISTON AND RINGS, Diesel Engine, .50MM Oversize
-27									PISTON AND RINGS, Diesel Engine, 1.00MM Oversize
	5015 814AA-	AR				ETC			
28	5011 871AA-	6				ETC	DG0		ETC+XCK,All RING KIT, Piston, Standard
	5011 858AA	6				ETC			
		3				ETH	DBB		
-29	5011 942AA-	AR				ETC			RING KIT, Piston, .50MM Oversize
		1				ETC	DG0		ETC+XCK, All
-30	5011 870AA-	AR				ETC			RING KIT, Piston, 1.00MM Oversize
31									RING, Piston Pin
	5003 650AA	6				ETC			
		12				ETH	DBB		
32									PIN, Piston
	5015 706AA	6				ETC	DBB		
		6				ETC	DG0		
		6				ETH	DBB		


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

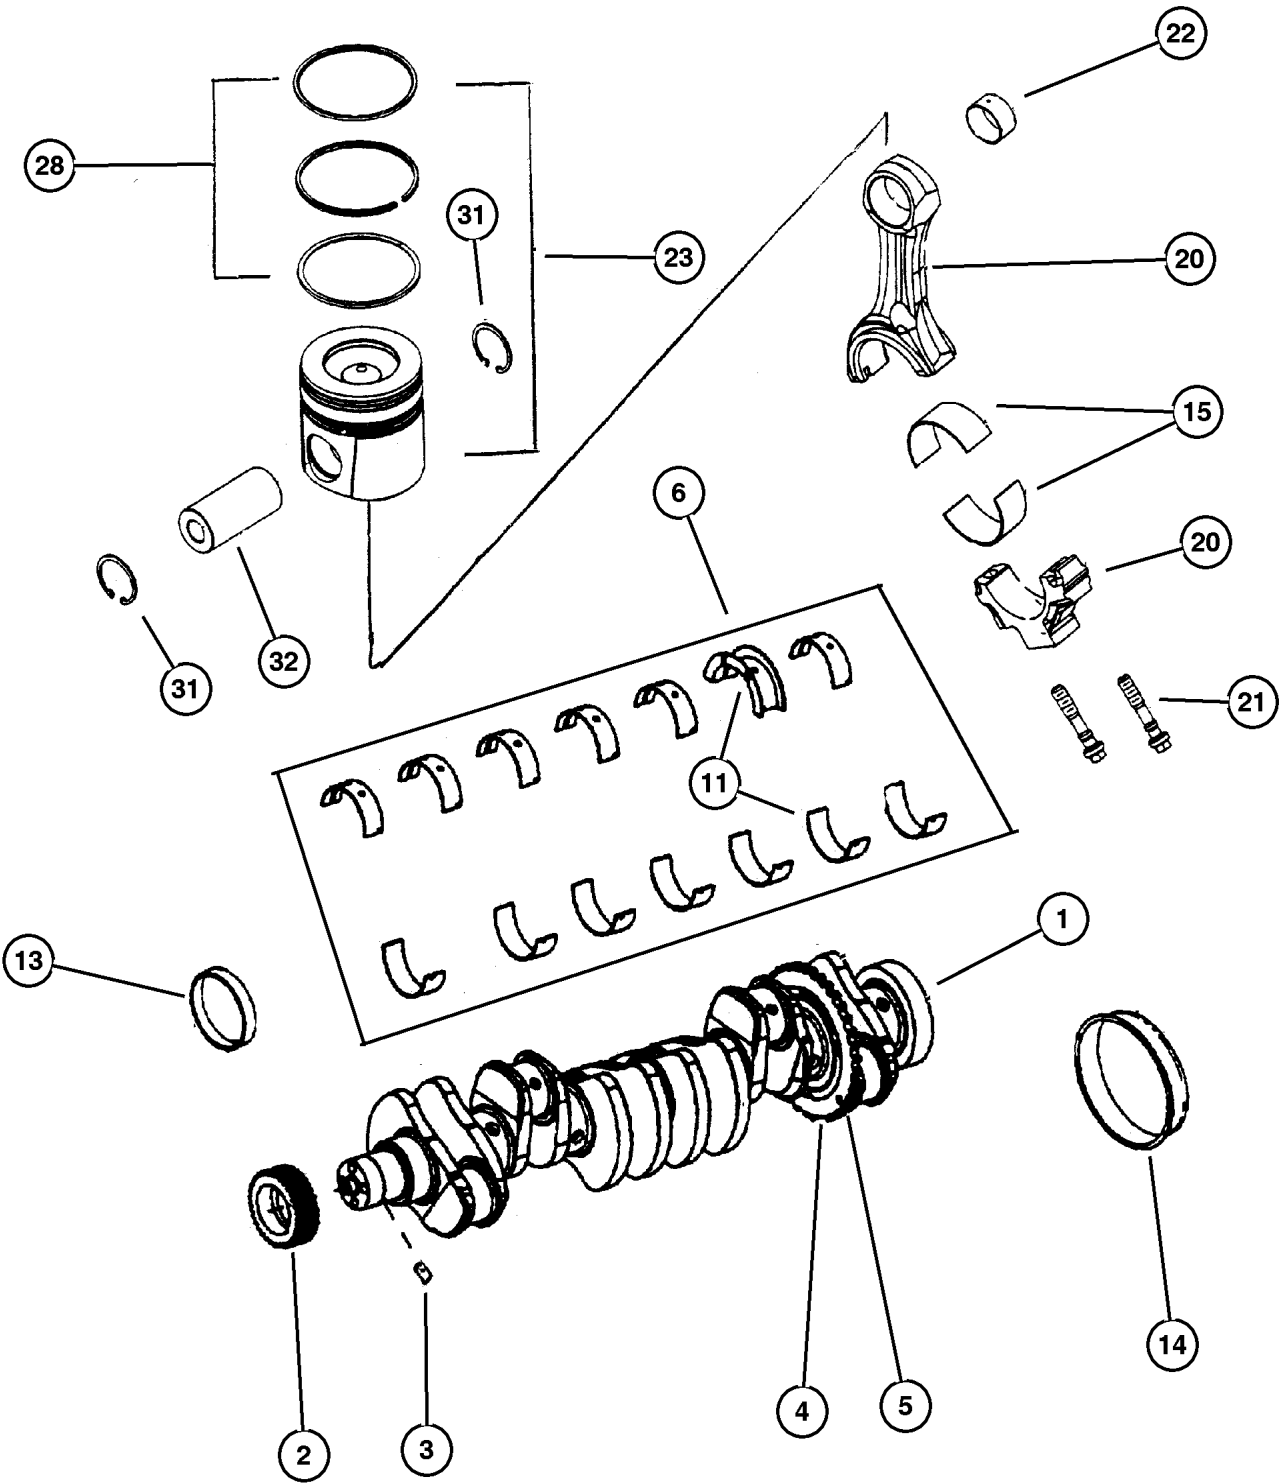September 16, 2005



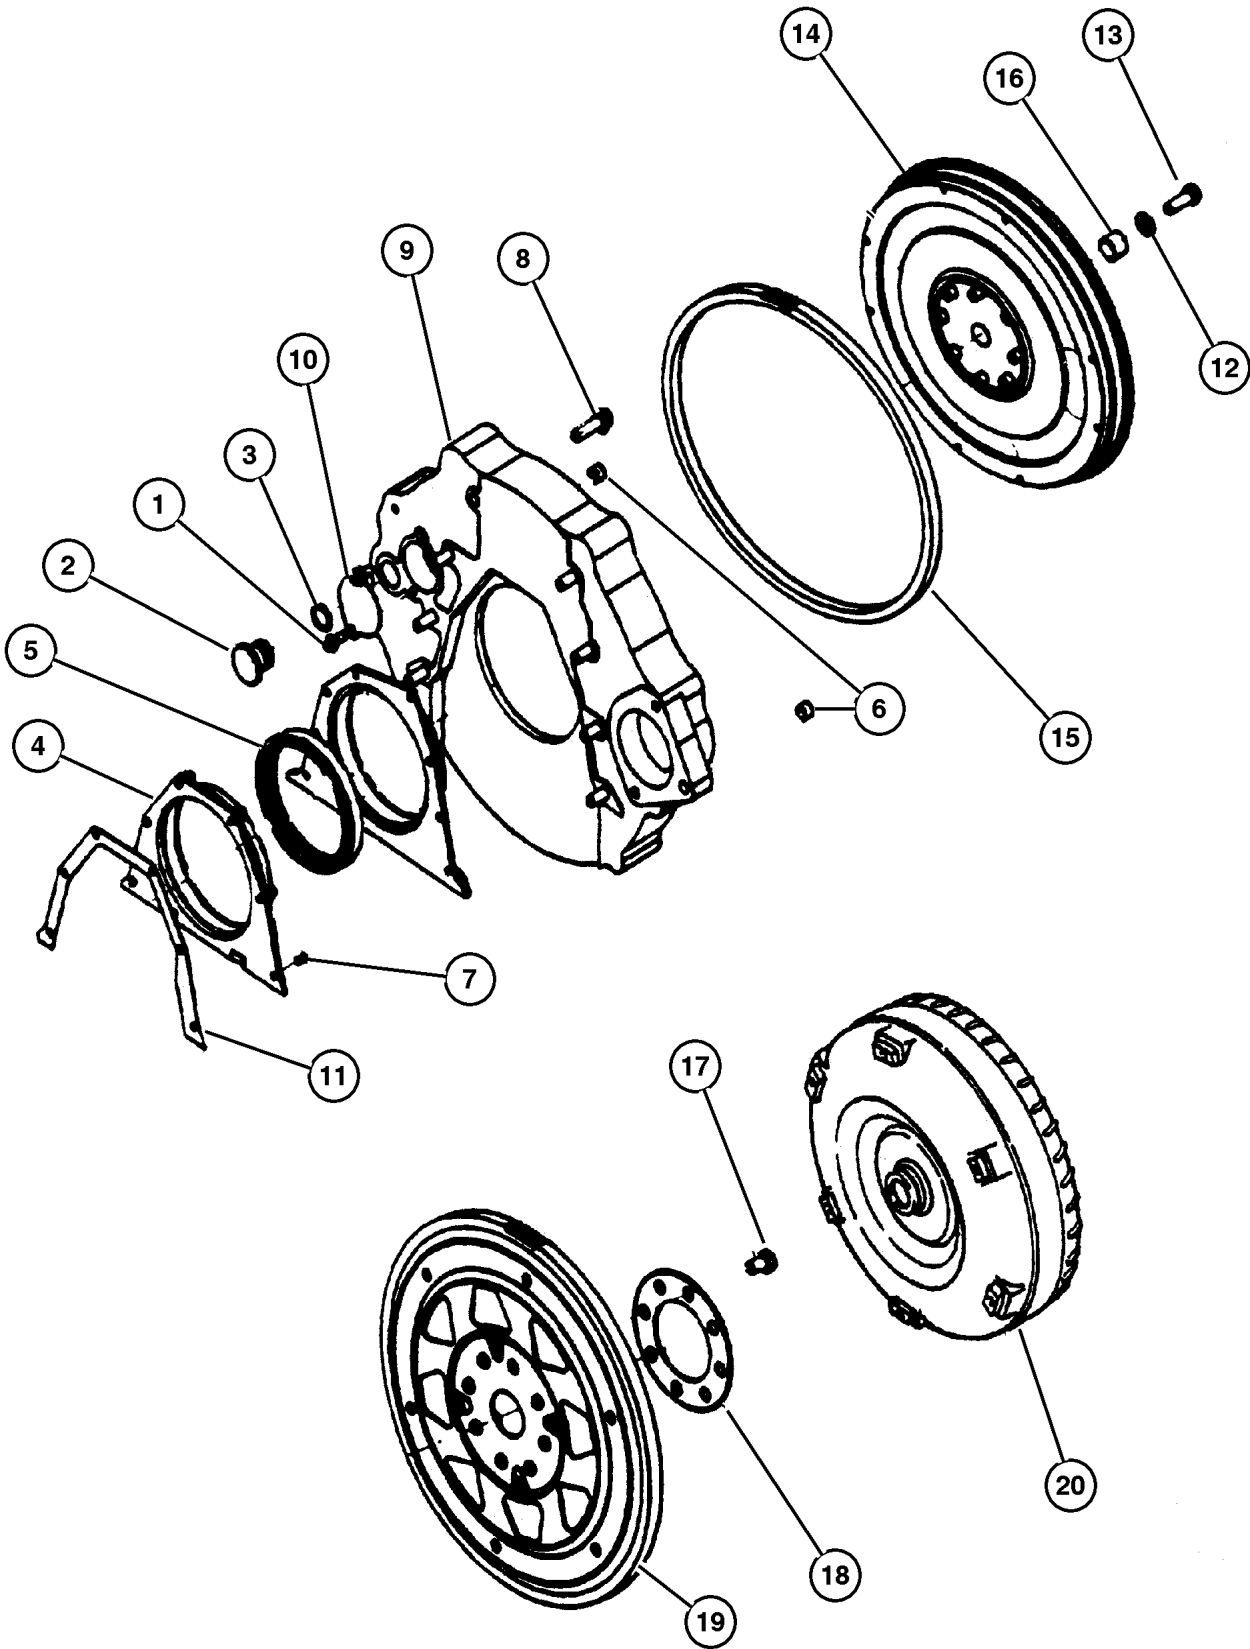Flywheel and Torque Converter 5.9L (ETC,ETH) Diesel Engine
Figure 5.9LD-425



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:
DBB = All Manual Transmissions
DG0 = All Automatic Transmissions
ETC = 5.9L Cummins 24V Diesel Engine
ETH = 5.9L HO Cummins Turbo Diesel Engine
XCK = 2001 Diesel Tracking


1	4429 630	2				ETC			BOLT, Hex Head
		2				ETH	DBB		
2	4429 248	1				ETC	DBB		PLUG, Adaptor Plate
		1				ETC	DG0		
		1				ETH	DBB		
3	4429 260	1				ETC			O RING, Transmission Adapter Plug
		1				ETH	DBB		
4	4638 817	1				ETC			HOUSING, Rear Main Seal
		1				ETH	DBB		
5	5015 705AA	1				ETC	DBB		SEAL
		1				ETC	DG0		
		1				ETH	DBB		
6	4429 678	2				ETC			PIN, Dowel
		2				ETH	DBB		
7	4429 638	6				ETC			BOLT, Hex Head
		6				ETH	DBB		
8	4761 248	8				ETC			BOLT, Flywheel Housing
		8				ETH	DBB		
9	4874 537	1				ETC			ADAPTER, Transmission
		1				ETH	DBB		
10	4761 247	1				ETC			COVER, Flywheel Housing
		1				ETH	DBB		
11	4856 021	1				ETC			GASKET, Rear Cover

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

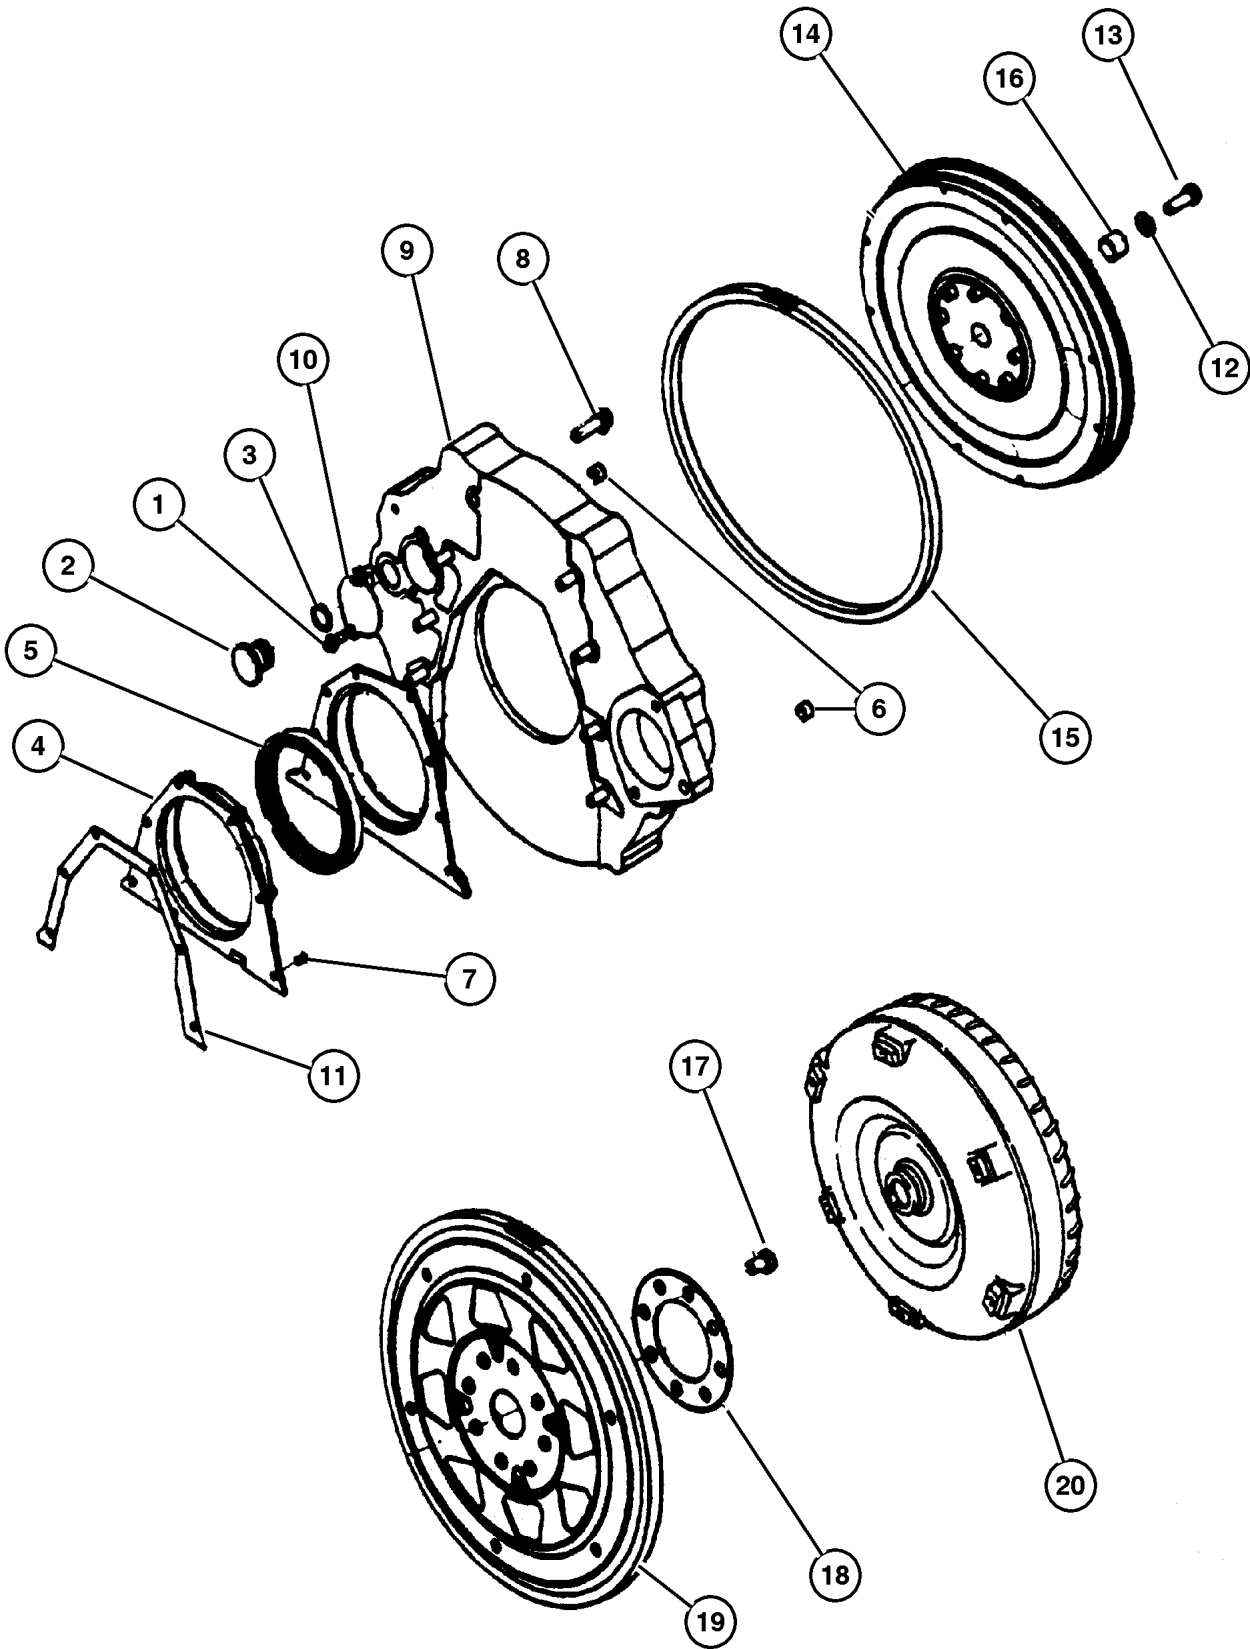Flywheel and Torque Converter 5.9L (ETC,ETH) Diesel Engine
Figure 5.9LD-425



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1				ETH	DBB		
12	6501 681	8				ETC	DBB		WASHER, Flat
		8				ETH	DBB		
13	6501 680	8				ETC	DBB		SCREW, Hex Head, M12x1.25x34.00
		8				ETH	DBB		
14	5015 624AA	1				ETC	DBB		FLYWHEEL
	5018 079AB	1				ETH	DBB		
15	4429 903	1				ETC	DBB		GEAR, Ring
		1				ETH	DBB		
16	5015 625AA	1				ETC	DBB		BEARING, Pilot
	5018 080AA	1				ETH	DBB		
17	4429 522	8				ETC	DG0		SCREW, Cap
18	4798 968	1				ETC	DG0		PLATE, Drive Plate Backing
19	4762 088	1				ETC	DG0		PLATE, Torque Converter Drive
	5015 709AA	1				ETC	DG0		ETC only
									ETC+XCK
20	5211 8868	1				ET0	DG0		CONVERTER, Torque
-21	6033 439	6				ET0	DG0		BOLT, Hex Head, .37-24x.55, Torque Converter to Flex Plate

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Torque Converter Cooler 5.9L (ETC, ETC+XCK) Diesel Engine
Figure 5.9LD-435

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:
DBB = All Manual Transmissions
DG0 = All Automatic Transmissions
ETC = 5.9L Cummins 24V Diesel Engine
ETH = 5.9L HO Cummins Turbo Diesel Engine
XCK = 2001 Diesel Tracking

1	4429 369	1				ETC			PLUG, Pipe
						ETC	DBB		
						ETH	DBB		
2	5011 913AA	1				ETC	DG0		PLUG
						ETC	DBB		
						ETH	DBB		
3	5011 914AA	1				ETC	DBB		O RING, Oil Cooler
						ETC	DG0		
4	4429 630	5				ETC	DG0		BOLT, Hex Head
5	4883 885AA	1				ETC	DG0		COUPLING, Hose
6	5011 405AA	2				ETC	DG0		HOSE, Oil Cooler
7	5011 409AA	2				ETC	DG0		HOSE, Oil Cooler
8	4429 089	2				ETC	DG0		CLAMP, Tube Retaining
9	4429 089	2				ETC	DG0		CLAMP, Tube Retaining
10	5011 900AA	8				ETC	DG0		CLAMP, Heater
11	5014 171AA	1				ETC	DG0		TUBE, Oil Cooler
12	5011 918AA	1				ETC	DG0		TUBE, Oil Cooler
13	5014 861AA	1				ETC	DG0		COOLER, Torque Converter
14	4429 369	1				ETC	DG0		PLUG, Pipe
15	4429 114	1				ETC	DG0		SCREW, Hex Flange Head
16	4429 689	1				ETC	DG0		NUT, Hex Flange


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Camshaft and Valves 5.9L (ETC,ETH) Diesel Engine

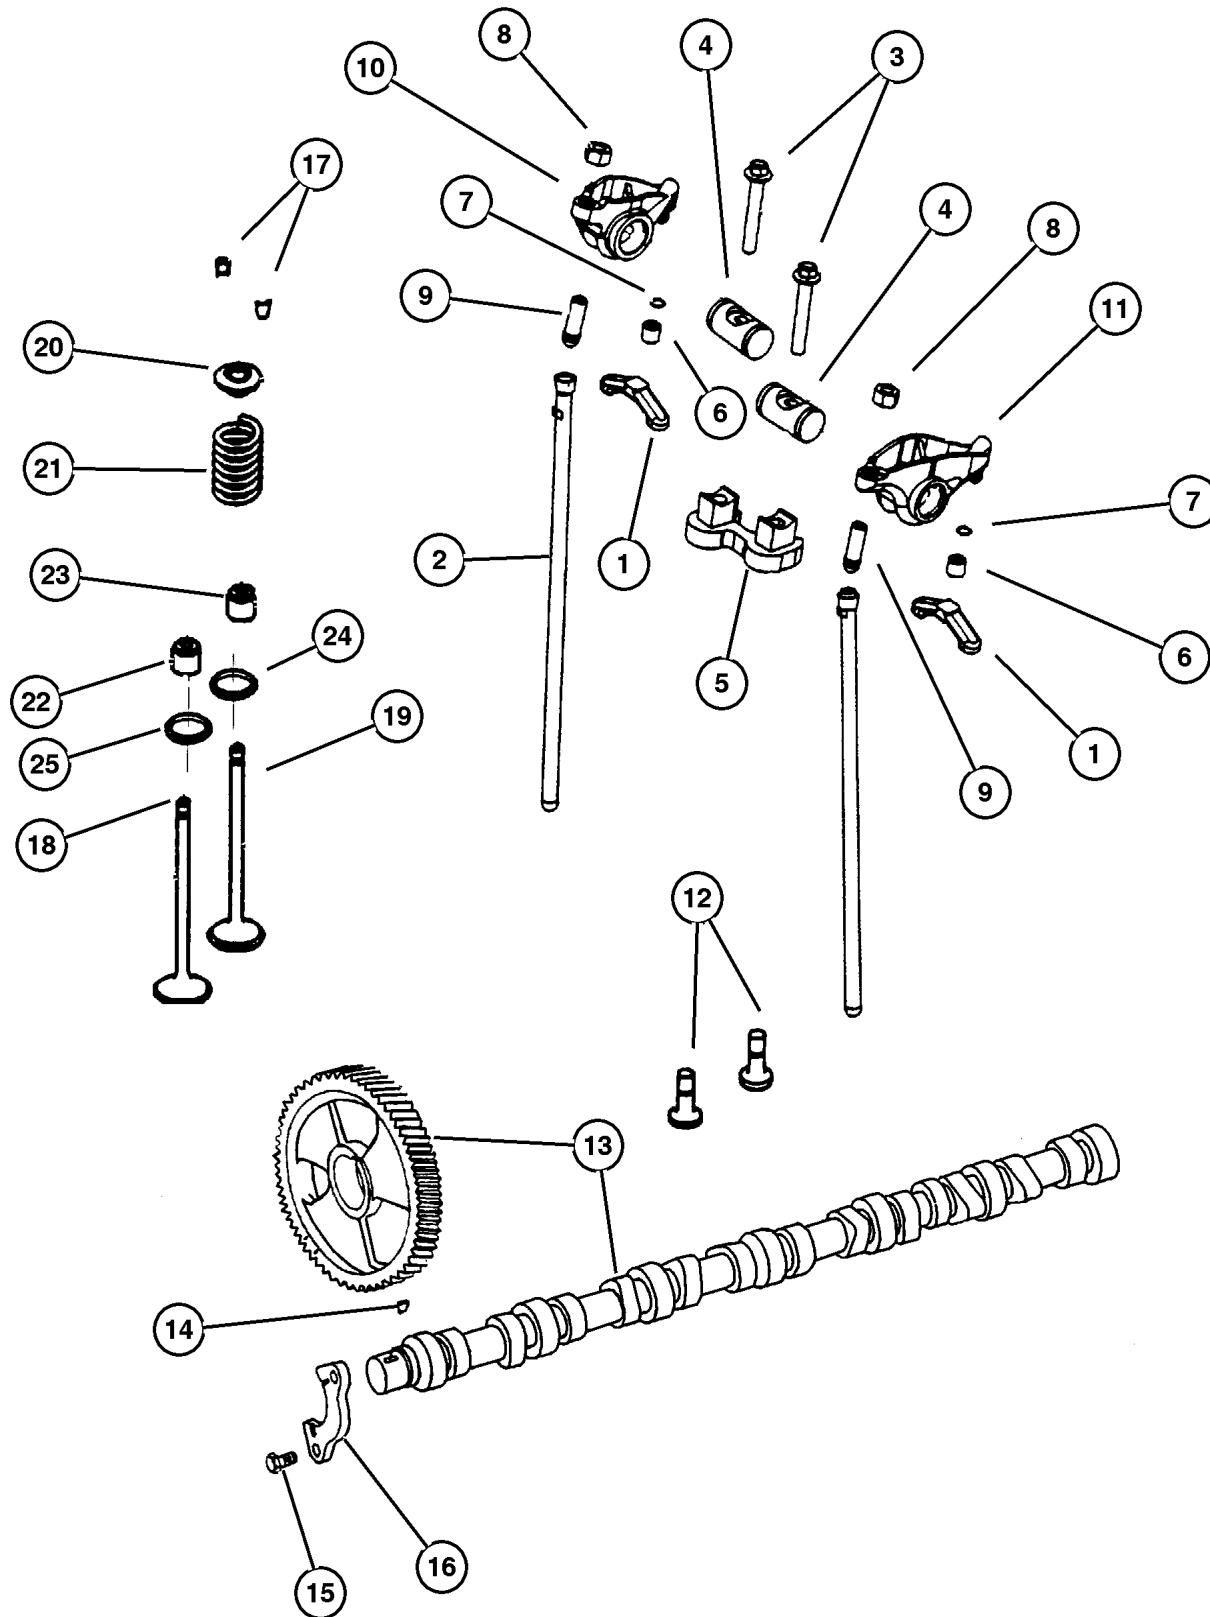Figure 5.9LD-515



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: DBB = All Manual Transmissions DG0 = All Automatic Transmissions ETC = 5.9L Cummins 24V Diesel Engine ETH = 5.9L HO Cummins Turbo Diesel Engine XCK = 2001 Diesel Tracking									
1	5011 477AA	12				ETC			VALVE, Crosshead
		12				ETH	DBB		
2	5011 892AA	12				ETC			PUSH ROD, Valve
		12				ETH	DBB		
3	5011 893AA	12				ETC			SCREW, Hex Head
		12				ETH	DBB		
4	5011 896AA	12				ETC			SHAFT, Rocker Arm
	5016 647AA	12				ETH	DBB		ETH and ETC+XCK, Manual
		12				ETC	DG0		ETC+XCK, Auto
5	5011 898AA	6				ETC			SUPPORT, Rocker Arm
		6				ETH	DBB		
6									SOCKET, Serviced in Rocker Lever, (NOT SERVICED) (Not Serviced)
7									CLIP, Serviced in Rocker Lever, (NOT SERVICED) (Not Serviced)
8	4638 530	12				ETC			NUT
		12				ETH	DBB		
9	5011 899AA	12				ETC			SCREW, Rocker Lever Adjusting
		12				ETH	DBB		
10	5011 431AA	6				ETC			ROCKER ARM, Intake
		6				ETH	DBB		
11	5011 432AA	6				ETC			ROCKER ARM, Exhaust
		6				ETH	DBB		
12	5011 790AA	12				ETC			TAPPET, Valve


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

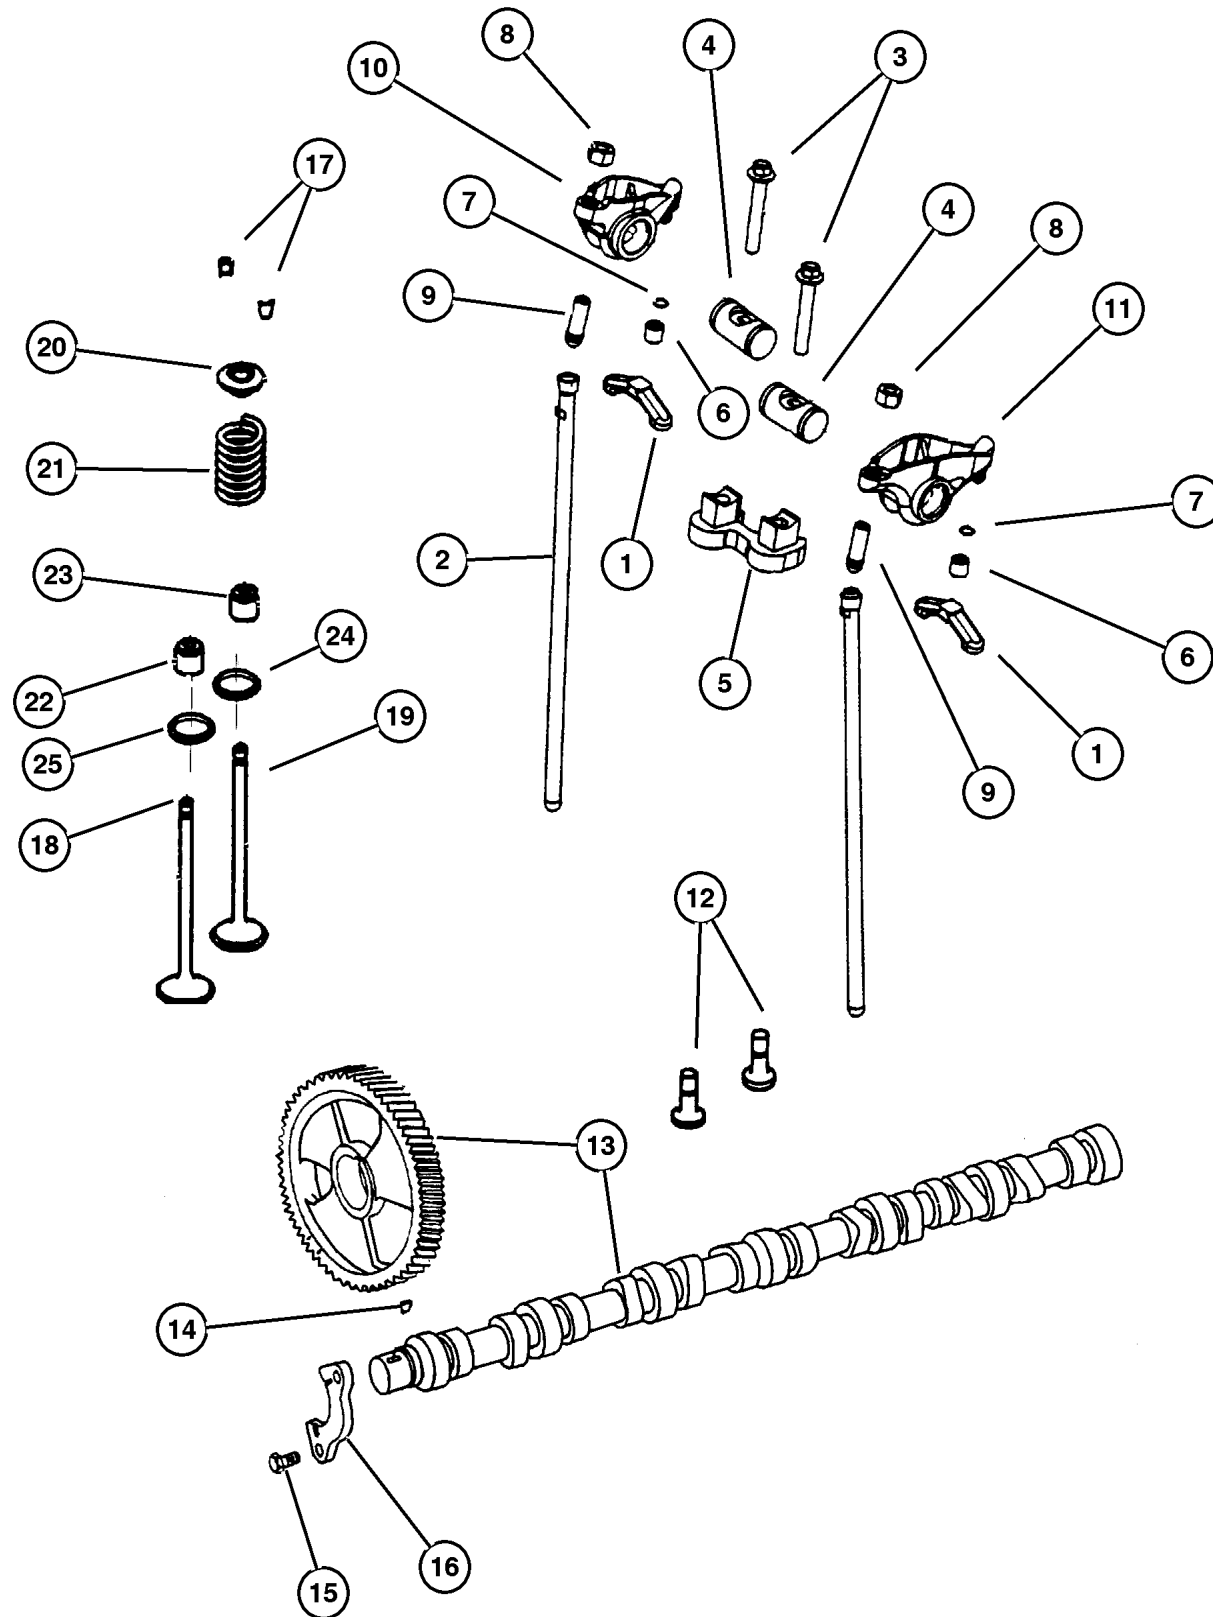Camshaft and Valves 5.9L (ETC,ETH) Diesel Engine Figure 5.9LD-515



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
13		12				ETH	DBB		CAMSHAFT KIT, Engine Up To 12/23/99 After 12/23/99 With XCK
	5018 412AB	1				ETC			
	5019 345AA	1				ETC			
14		1				ETH	DBB		KEY, Woodruff
	4429 332	1				ETC			
15		2				ETH	DBB		SCREW, Cap, .437-20x1.812
	4429 227	2				ETC			
16		1				ETH	DBB		SUPPORT, Camshaft Thrust
	4798 890	1				ETC			
17		24				ETH	DBB		LOCK, Valve Spring Retainer, ETC, ETC+XCK
	5011 878AA	24				ETC			
18		12				ETH	DBB		VALVE, Exhaust, Standard
	5011 877AA	12				ETC			
19		12				ETH	DBB		VALVE, Intake, Standard
	5011 879AA	12				ETC			
20		24				ETH	DBB		RETAINER, Valve Spring
	5011 455AA	24				ETC			
21		24				ETH	DBB		SPRING, Valve
	5011 441AA	24				ETC			
22		12				ETH	DBB		SEAL, Valve Guide
	5011 880AA	12				ETC			
23		12				ETH	DBB		ETH and ETC+XCK, All SEAL, Valve Guide
	5016 333AA	12				ETC			
24		12				ETH	DBB		INSERT, Intake Valve, Service in Cylinder Head Assy, (NOT SERVICED) (Not Serviced)
	5011 881AA	12				ETC			
25		12				ETH	DBB		INSERT, Exhaust Valve, Service in Cylinder Head Assy, (NOT SERVICED) (Not Serviced)
						ETC			


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

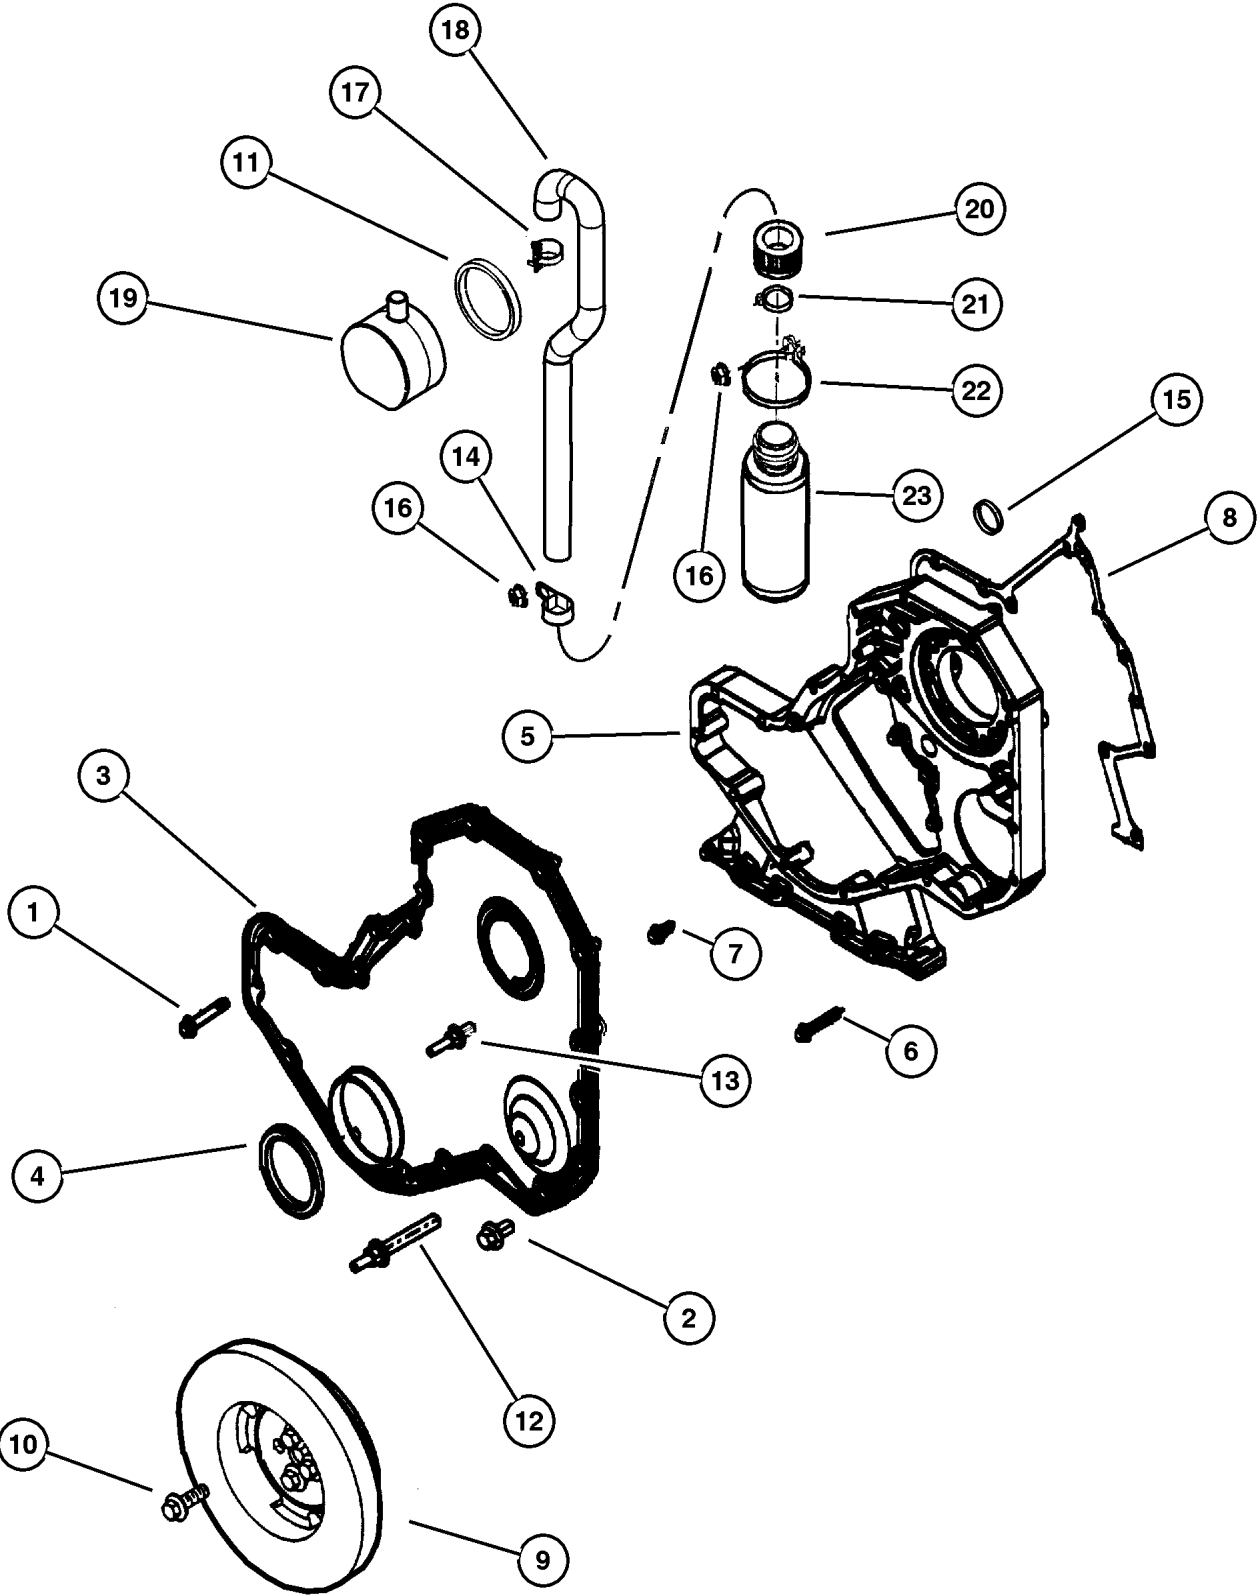Timing Gear and Cover 5.9L (ETC,ETH) Diesel Engine
Figure 5.9LD-615



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:
DBB = All Manual Transmissions
DG0 = All Automatic Transmissions
ETC = 5.9L Cummins 24V Diesel Engine
ETH = 5.9L HO Cummins Turbo Diesel Engine
XCK = 2001 Diesel Tracking


1	4429 633	8				ETC			SCREW, Hex Head, M8x1.25x50
		8				ETH	DBB		
2	4882 109	10				ETC			SCREW, Hex Head
		8				ETH	DBB		
3	5014 190AA	1				ETC			COVER, Timing Belt
		1				ETH	DBB		
4	5012 290AA	1				ETC			SEAL, Front Main Crankshaft
		1				ETH	DBB		
5	5011 788AA	1				ETC			CASE, Front
		1				ETH	DBB		
6	5011 789AA	5				ETC	DG0		ETC+XCK, Auto ETC+XCK, Manual
		5				ETH	DBB		
7	5017 753AA	5				ETC	DG0		SCREW, Hex Head, M8x1.25x20
		5				ETH	DBB		
8	5011 433AA	1				ETC			GASKET, Gear Housing
		1				ETH	DBB		
9	5011 800AA	1				ETC			DAMPER, Crankshaft
		1				ETH	DBB		
10	4429 857	4				ETH	DBB		SCREW, Hex Head Push Rod Point, 24x.44
		4				ETC	DG0		
11		4				ETC	DBB		GASKET, Oil Filler Connector

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

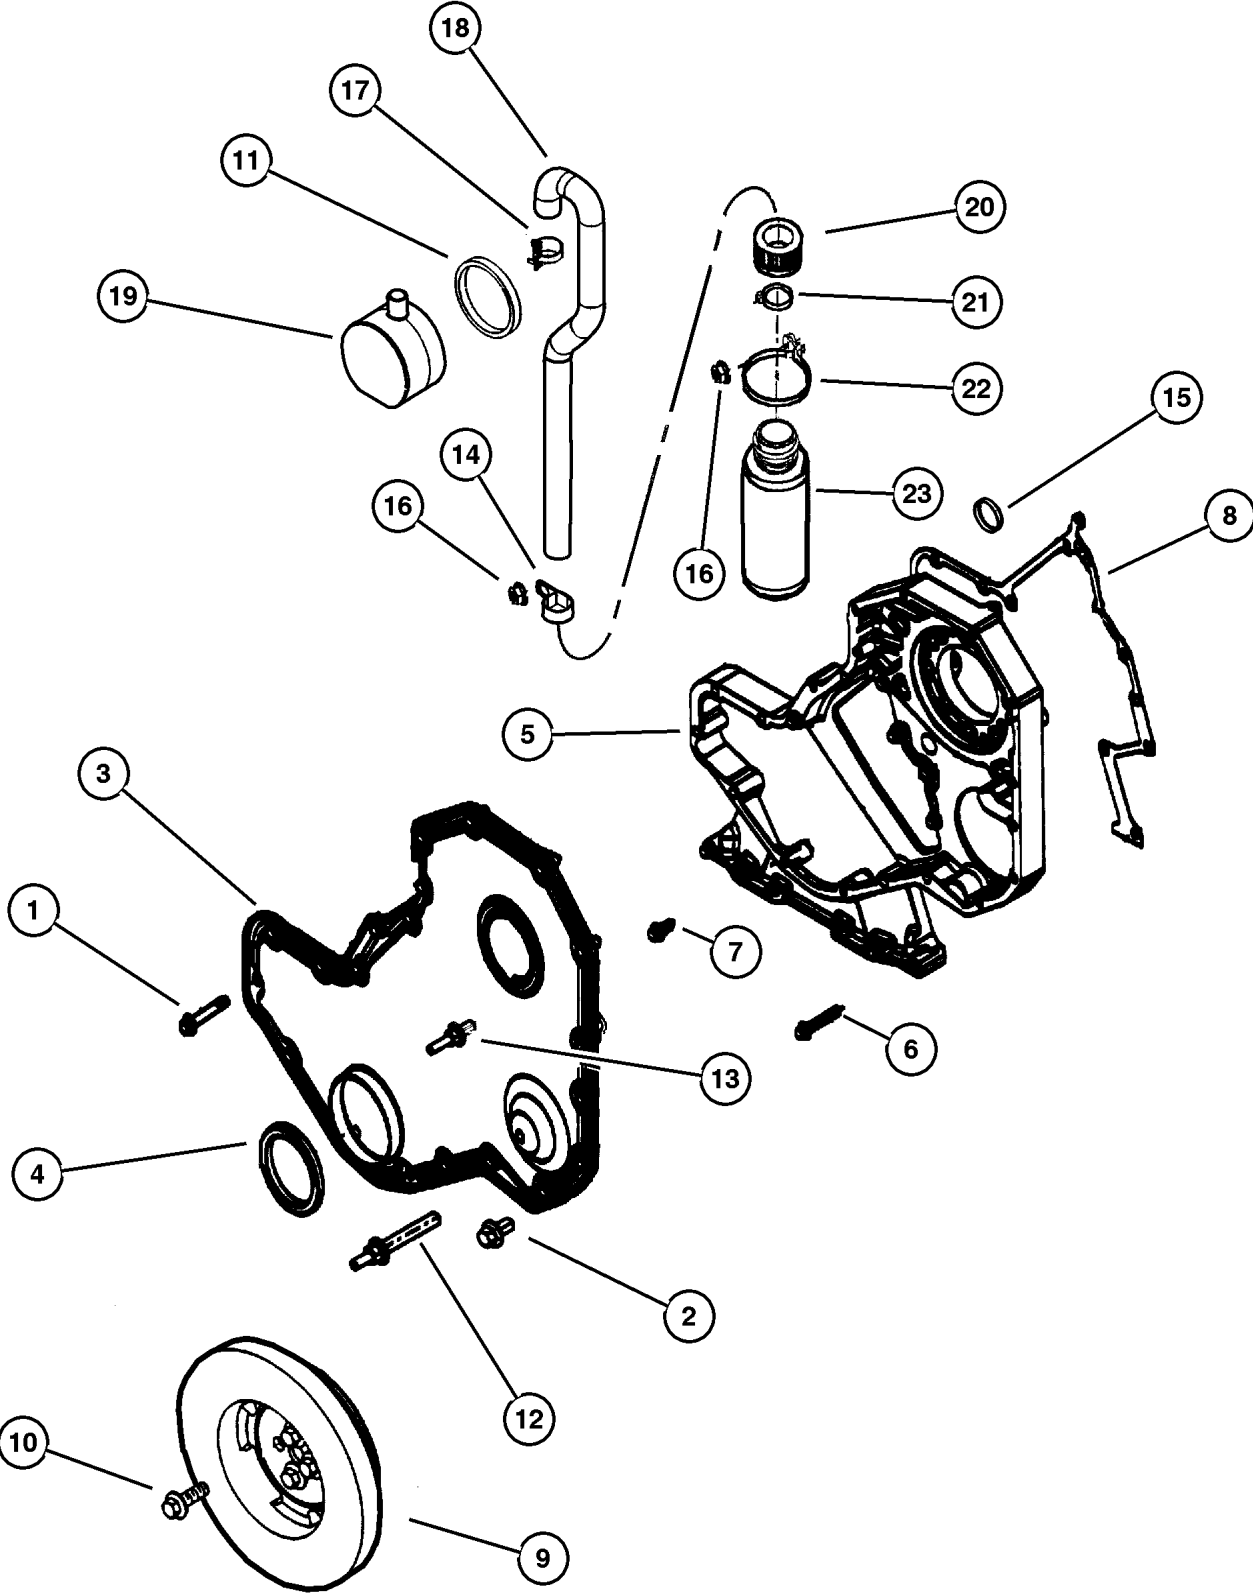Timing Gear and Cover 5.9L (ETC,ETH) Diesel Engine
Figure 5.9LD-615




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4429 475	1				ETC			
12		1				ETH	DBB		SCREW, Hex Head
	5014 222AA	1				ETC			
13		1				ETH	DBB		SCREW, Hex Head, M8x1.25x45
	4761 242	1				ETC			
14		1				ETH	DBB		P CLIP
	5014 194AA	1				ETC			
15		1				ETH	DBB		PLUG, Expansion
	4429 958	2				ETC			
16		1				ETH	DBB		NUT
	4429 316	1				ETC			
17		1				ETH	DBB		CLAMP
	5014 195AA	1				ETC			
18		1				ETH	DBB		HOSE, Engine Vent Line
	5015 076AA	1				ETC			
19		1				ETH	DBB		BREATHER, Crankcase
	5014 196AA	1				ETC			
20	5018 188AA	1				ETH	DBB		COVER, Engine
21	5018 185AA	1				ETC			CLAMP
22	5018 186AA	1				ETC			STRAP, Canister
23	5018 187AA	1				ETC			HOUSING, Oil Fill

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

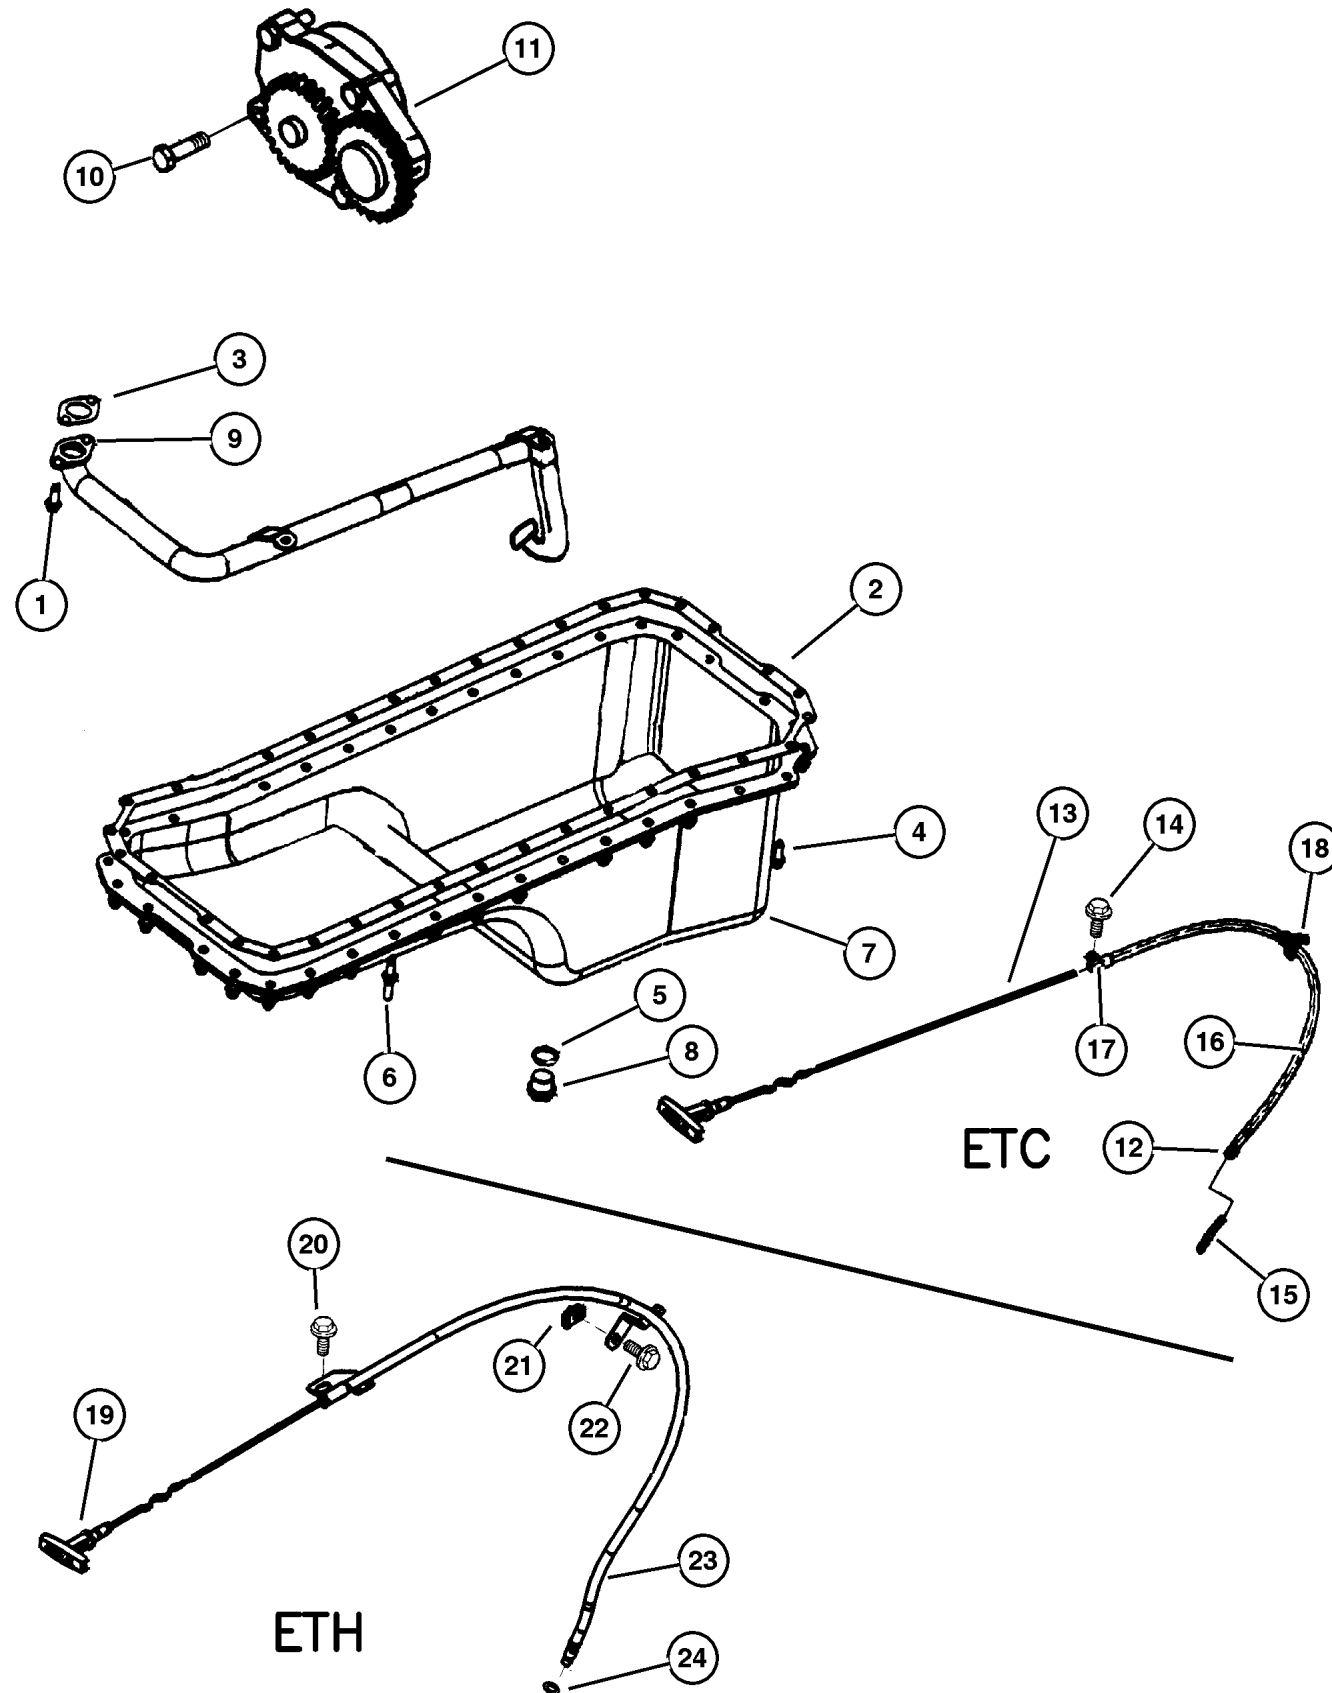Engine Oiling 5.9L (ETC,ETH) Diesel Engine Figure 5.9LD-715



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: DBB = All Manual Transmissions DG0 = All Automatic Transmissions ETC = 5.9L Cummins 24V Diesel Engine ETH = 5.9L HO Cummins Turbo Diesel Engine XCK = 2001 Diesel Tracking									
1	4429 630	4				ETC			BOLT, Hex Head
		4				ETH	DBB		
2	5003 694AA	1				ETC			GASKET, Oil Pan
		1				ETH	DBB		
3	5010 479AA	1				ETC			GASKET, Oil Suction Pipe
		1				ETH	DBB		
4	4761 331	33				ETC			SCREW, Hex Flange Head
		33				ETH	DBB		
5	4882 049	1				ETC			WASHER, Oil Pan Drain Plug
		1				ETH	DBB		
6	4746 685	3				ETC			BOLT, Hex Head, M8x1.25x49
		3				ETH	DBB		
7	4762 073	1				ETC			PAN, Engine Oil
		1				ETH	DBB		
8	4778 578	1				ETC			PLUG, Oil Drain
		1				ETH	DBB		
9	4883 926AA	1				ETC			PICKUP, Engine Oil
		1				ETH	DBB		
10	4429 677	4				ETC			SCREW, Hex Head Header Point, 24x.44
		4				ETH	DBB		
11	5010 965AA	1				ETC			PUMP, Engine Oil
		1				ETH	DBB		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

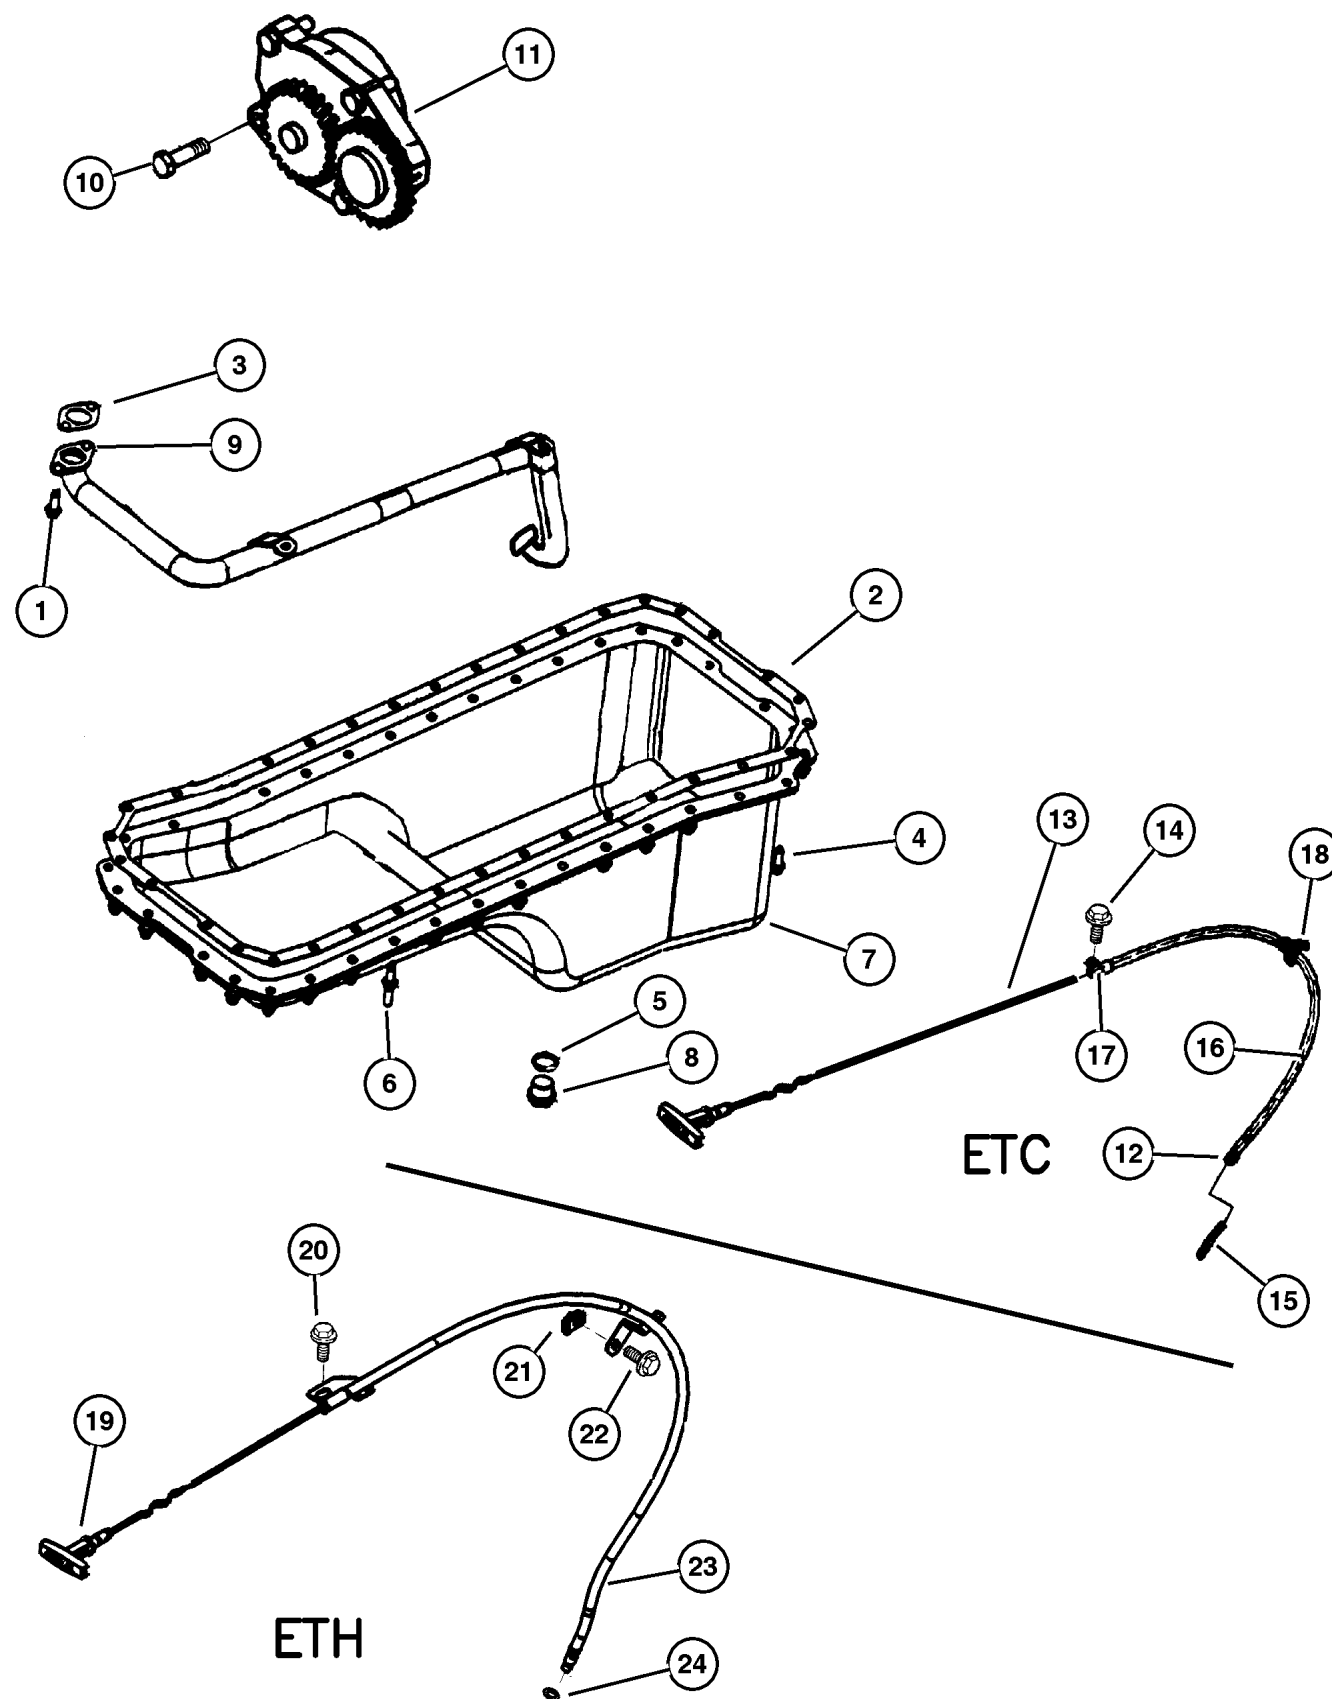
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Engine Oiling 5.9L (ETC,ETH) Diesel Engine Figure 5.9LD-715



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
12	4429 595	1				ETC			CLAMP, Hose, Spring Type
13	5014 562AA	1				ETC			INDICATOR, Engine Oil Level
14	4882 110	1				ETC			SCREW, Hex Head, M8x1.25x16
		1				ETH	DBB		
15	5011 848AA	1				ETC			TUBE, Engine Oil Indicator
16	5012 556AA	1				ETC			TUBE, Engine Oil Indicator
17	4429 154	1				ETC			CLIP
18	5011 846AA	1				ETC			CLIP
19	5017 784AA	1				ETH	DBB		INDICATOR, Engine Oil Level, ETH & ETC+ XCK
20	4882 110	1				ETH	DBB		SCREW, Hex Head, M8x1.25x16, ETH & ETC +XCK
21	5017 782AA	1				ETH	DBB		NUT, Clip-On, ETH & ETC+XCK
22	4429 638	1				ETH	DBB		BOLT, Hex Head, ETH & ETC+XCK
23	5017 777AA	1				ETH	DBB		TUBE, Engine Oil Indicator, ETH & ETC+XCK
24	5017 783AA	2				ETH	DBB		SEAL, O-Ring, ETH & ETC+XCK

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

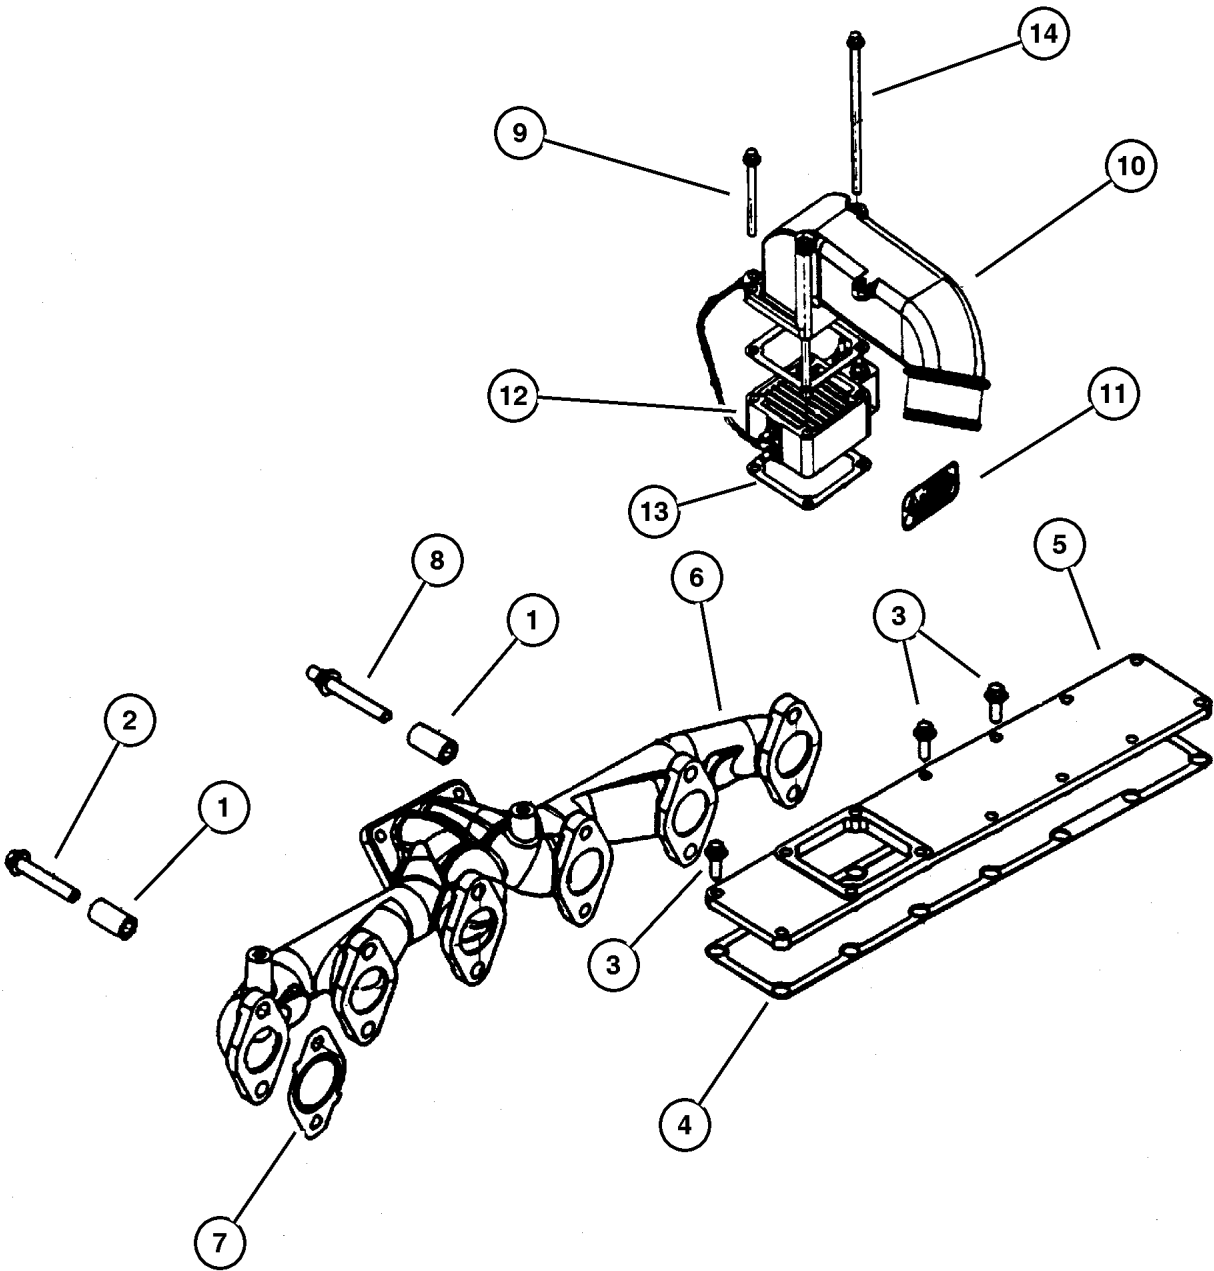
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Manifold, Intake and Exhaust 5.9L (ETC,ETH) Diesel Engine
Figure 5.9LD-815




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
DBB = All Manual Transmissions									
DGO = All Automatic Transmissions									
ETC = 5.9L Cummins 24V Diesel Engine									
ETH = 5.9L HO Cummins Turbo Diesel Engine									
1	5015 717AA	12				ETC	DBB		SPACER, Exhaust Manifold
		12				ETC	DGO		
		12				ETH	DBB		
2	5012 557AA	11				ETC			SCREW, Cap
		11				ETH	DBB		
3									SCREW, Fuel Tube Cap
	4638 695	3				ETC			
		3				ETH	DBB		
4	5010 167AA	1				ETC			GASKET, Intake Manifold Cover
		1				ETH	DBB		
5	5011 908AA	1				ETC			COVER, Intake Manifold
		1				ETH	DBB		
6	5014 170AA	1				ETC			MANIFOLD, Exhaust
		1				ETH	DBB		
7									GASKET, Exhaust Manifold
	5015 719AA	6				ETC	DBB		
		6				ETC	DGO		
		6				ETH	DBB		
8									SCREW
	5014 169AA	1				ETC			
		1				ETH	DBB		
9	4638 761	2				ETC			BOLT, Hex Head, M8x1.25x80
		2				ETH	DBB		
10	5011 840AA	1				ETC			CONNECTOR, Air Intake
		1				ETH	DBB		
11									PLATE, (NOT SERVICED) (Not Serviced)
12									HEATER, Engine

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DGO = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

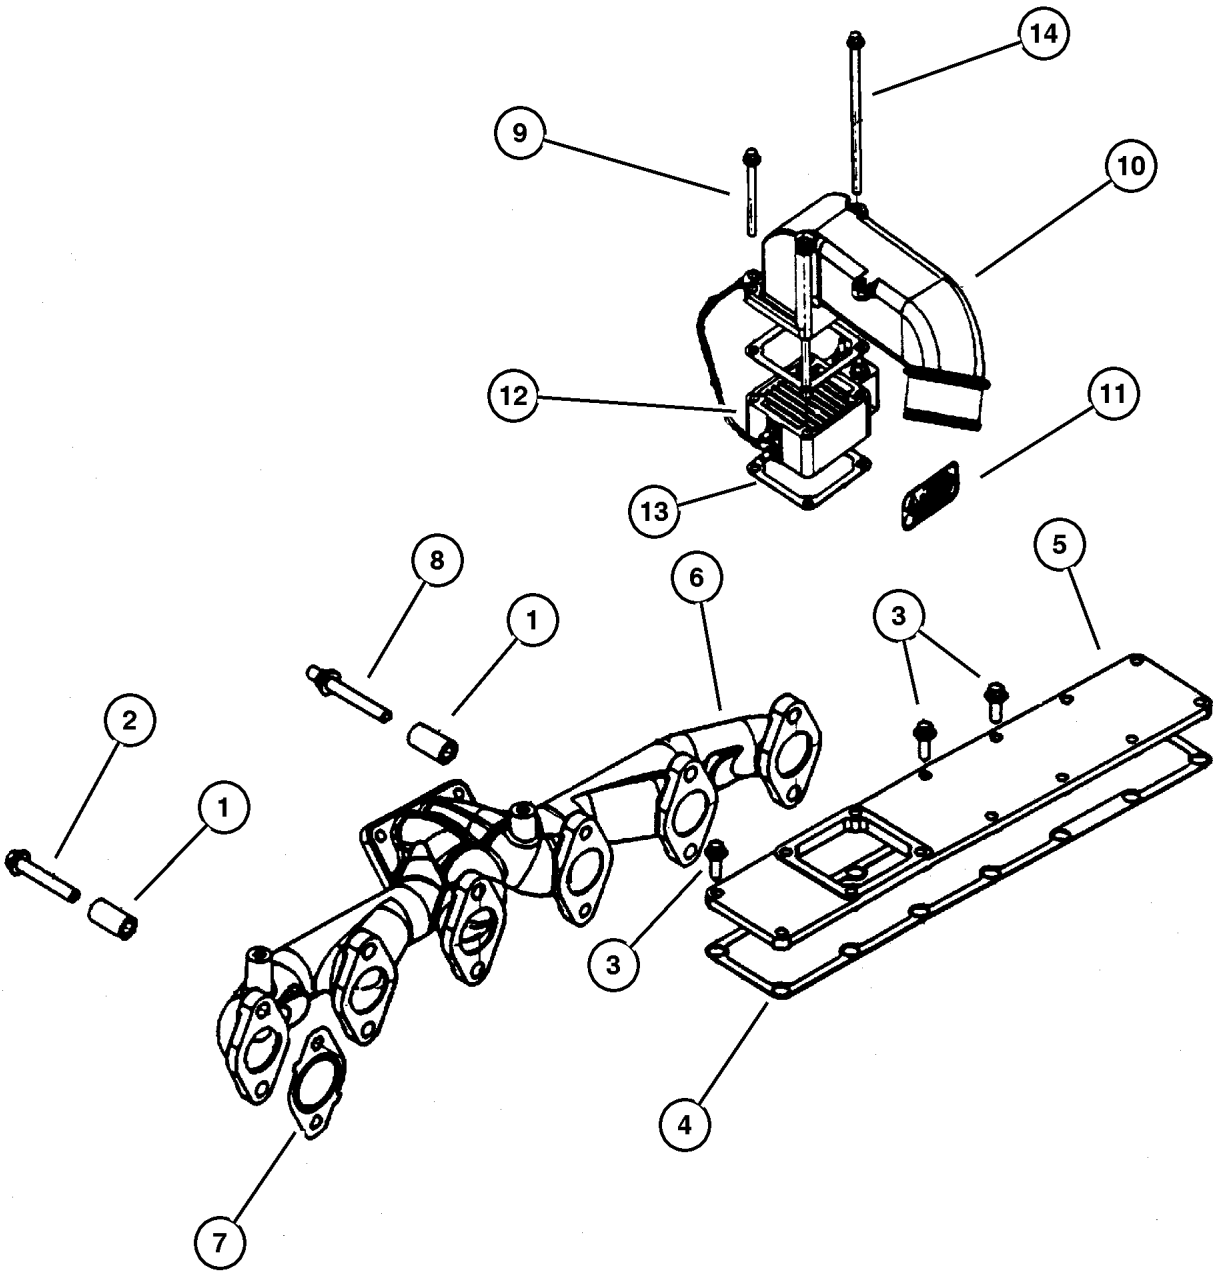Manifold, Intake and Exhaust 5.9L (ETC,ETH) Diesel Engine
Figure 5.9LD-815



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4762 012	1				ETC			
		1				ETH	DBB		
13	5010 480AA	1				ETC			GASKET, Air Intake Connector
		2				ETH	DBB		
14	5011 465AA	2				ETC			SCREW
		2				ETH	DBB		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Engine Oil Cooler 5.9L (ETC,ETH) Diesel Engine
Figure 5.9LD-1115

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


Note:
DBB = All Manual Transmissions
DGO = All Automatic Transmissions
ETC = 5.9L Cummins 24V Diesel Engine
ETH = 5.9L HO Cummins Turbo Diesel Engine
XCK = 2001 Diesel Tracking

1									SCREW, Hex Head Header Point, 24x.44
	4429 634	12				ETC			
		12				ETH	DBB		
2	4429 619	1				ETC			PLUG, Pipe
		1				ETH	DBB		
3	4429 386	1				ETC			PLUG, Pipe
		1				ETH	DBB		
4	4638 712	1				ETC			PLUNGER, Oil Pressure Regulator
		1				ETH	DBB		
5	5014 193AA	1				ETC			HEAD, Oil Filter
		1				ETH	DBB		
6	4429 355	1				ETC			ADAPTER, Oil Filter
		1				ETH	DBB		
7	4883 965AA	2				ETC			SCREW, Hex Flange Head
		2				ETH	DBB		
8	4761 985	1				ETC			SPRING, Oil Pressure Relief Valve
		1				ETH	DBB		
9	4797 726	1				ETC			VALVE, Oil Pressure Relief
		1				ETH	DBB		
10	5003 647AA	1				ETC			O RING, Oil Cooler
		1				ETH	DBB		
11	5011 843AA	1				ETC			COOLER, Engine Oil
	4713 985	1				ETH	DBB		ETH


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DGO = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

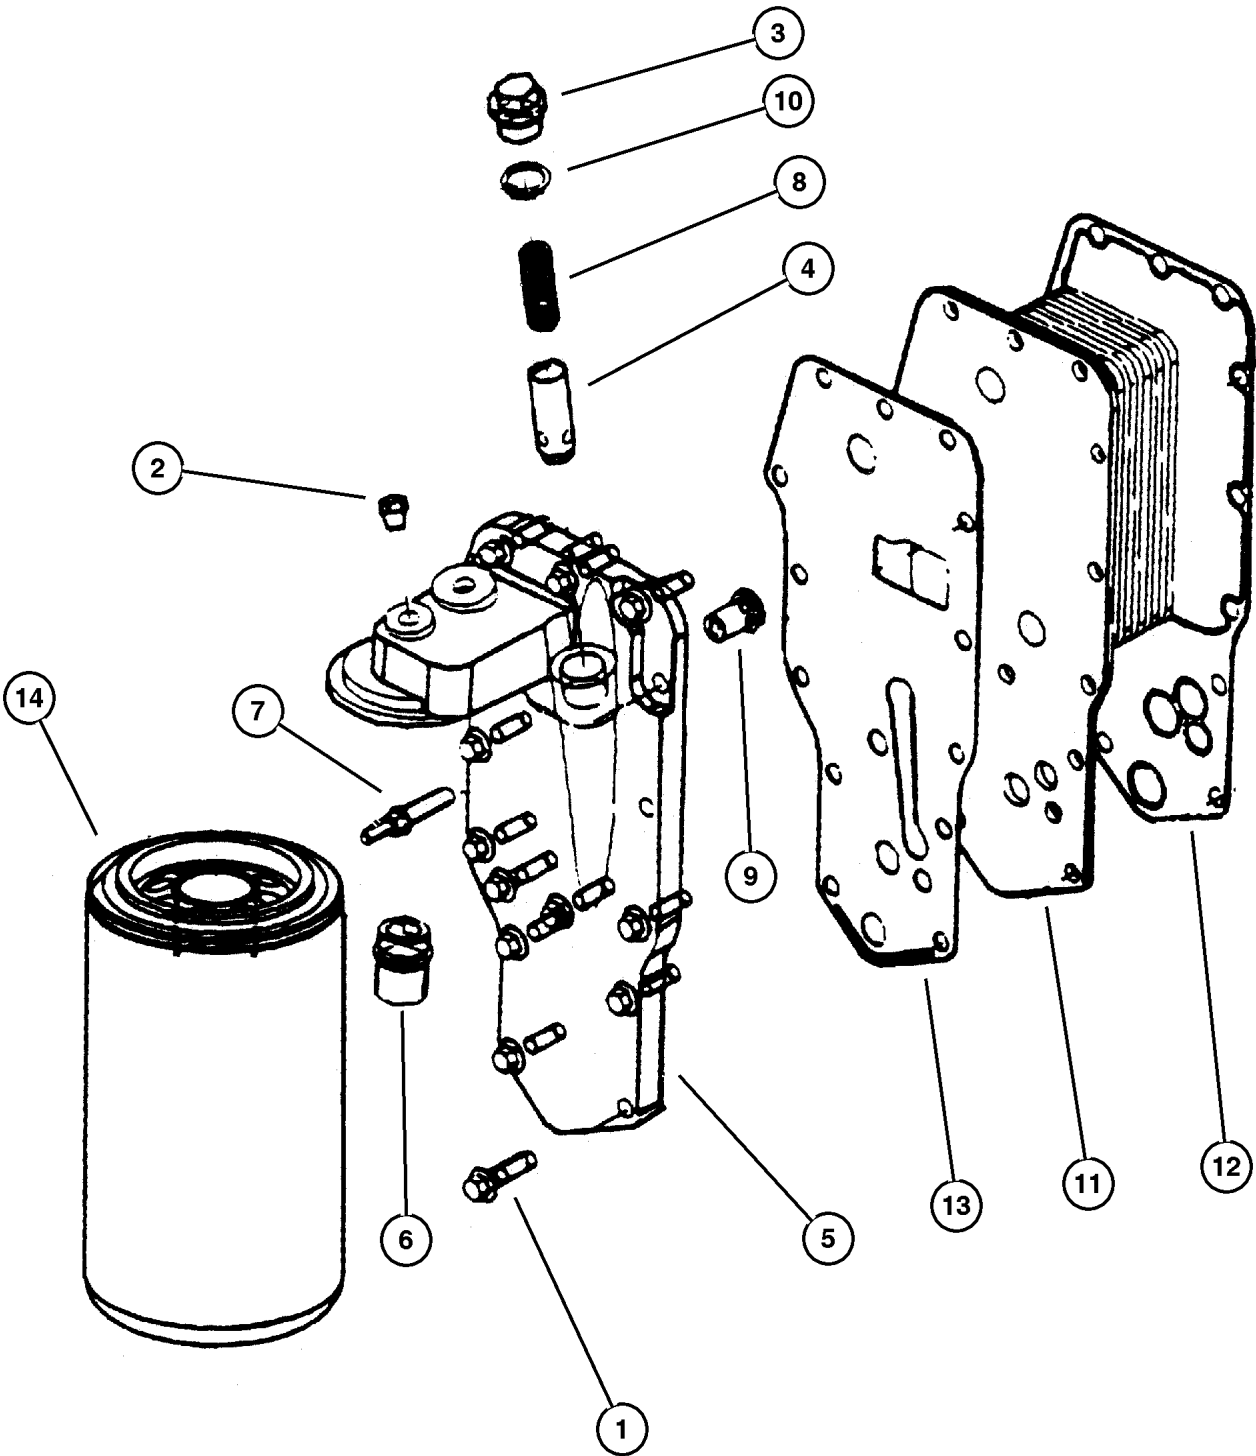September 16, 2005



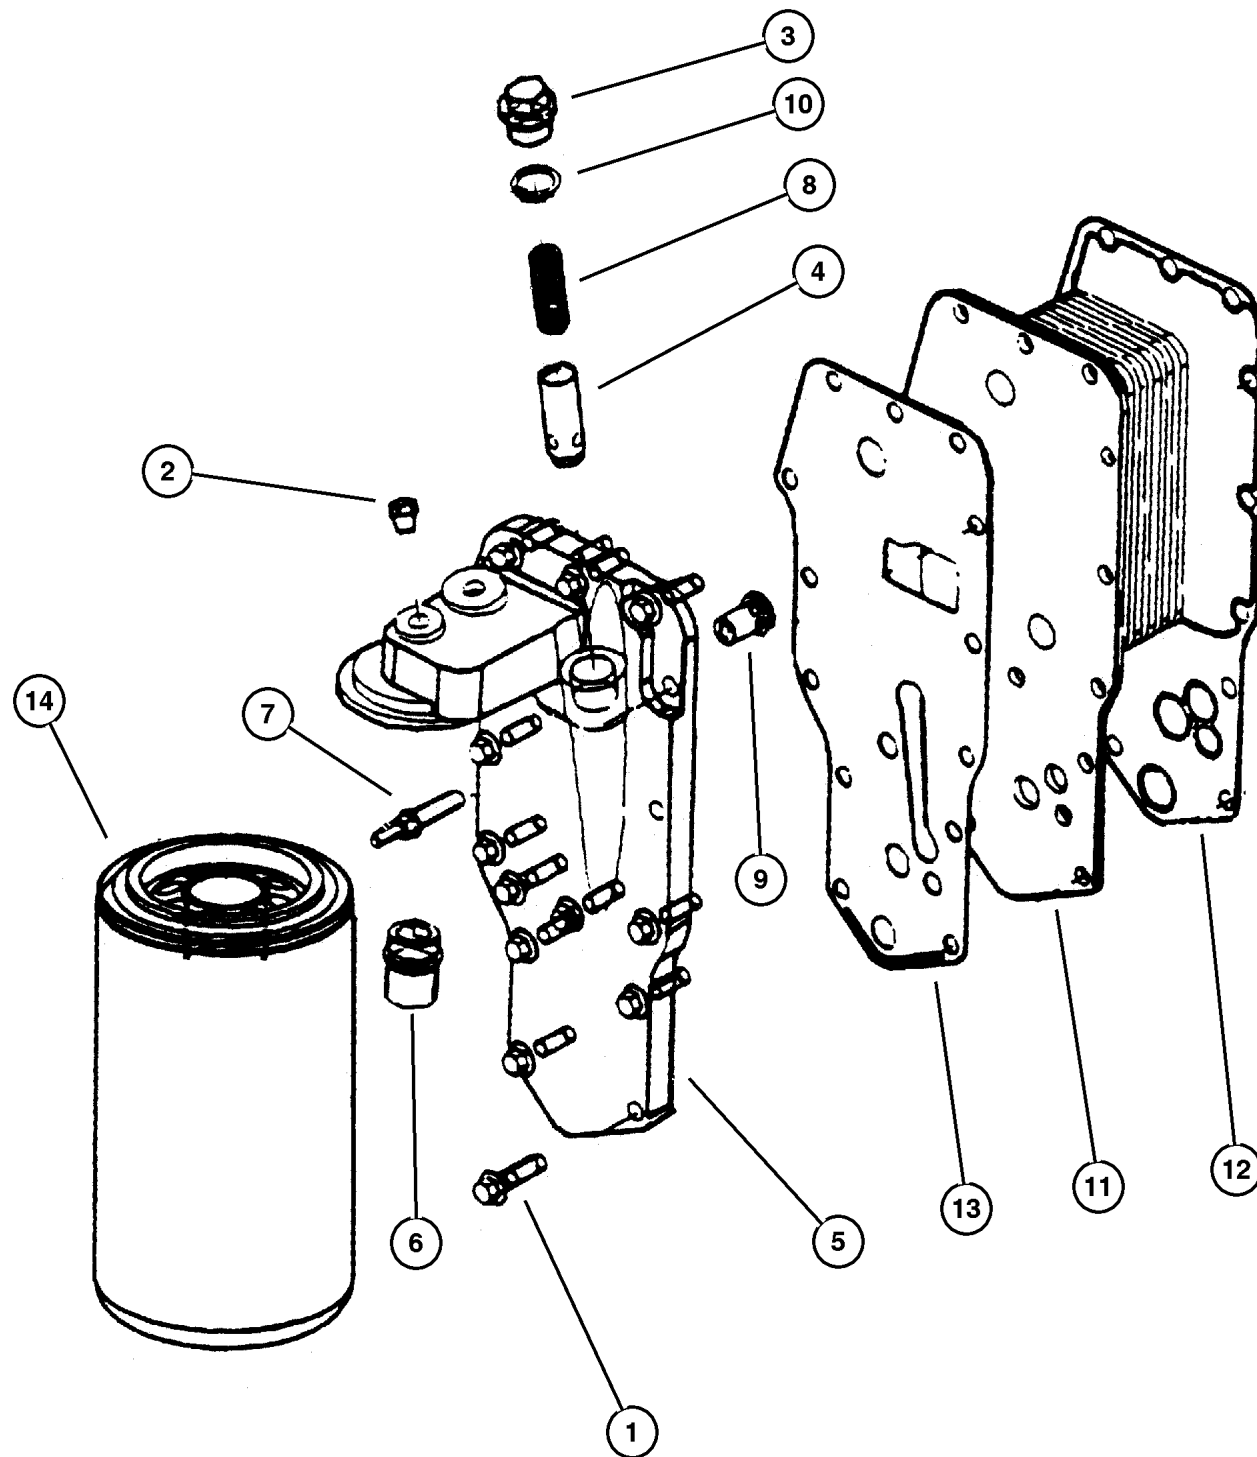Engine Oil Cooler 5.9L (ETC,ETH) Diesel Engine
Figure 5.9LD-1115



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1				ETC	DG0		ETC+XCK, Auto
12	5003 481AA	1				ETC	DBB		ETC+XCK, Manual
		1				ETC			GASKET, Oil Cooler
		1				ETH	DBB		
13	5011 438AA	1				ETC			GASKET, Oil Cooler
		1				ETH	DBB		
14	5016 547AA	1				ETC			FILTER, Engine Oil, All

DODGE RAM QUAD CAB/CLUB CAB (BE)

L = Ram Truck (All)

LINE

$$\begin{aligned} 1, 6 &= 1500 \\ 2, 7 &= 2500 \\ 3, 8 &= 3500 \end{aligned}$$

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Oil Lines 5.9L (ETC,ETH) Diesel Engine
Figure 5.9LD-1125

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:
DBB = All Manual Transmissions
DG0 = All Automatic Transmissions
ETC = 5.9L Cummins 24V Diesel Engine
ETH = 5.9L HO Cummins Turbo Diesel Engine
XCK = 2001 Diesel Tracking

1	5011 920AA	2				ETC			CLAMP
		2				ETH	DBB		
2	4429 630	2				ETC			BOLT, Hex Head
		2				ETH	DBB		
3	5003 605AA	1				ETC			PLUG, Expansion
		1				ETH	DBB		
4	4638 626	1				ETC			O RING, Turbo Oil Drain Tube
		1				ETH	DBB		
		1				ETC	DG0		
5	5016 648AA	1				ETH	DBB		FITTING, Oil Feed Line
		1				ETC	DG0		
		1				ETC	DBB		
5	5011 922AA	1				ETC			
		1				ETH	DBB		
6	5011 921AA	1				ETC			O RING, Turbo Oil Drain Tube
		1				ETH	DBB		
7	5015 575AA	1				ETC			HOSE, Turbocharger Feed
		1				ETH	DBB		
8	5011 924AA	1				ETC			O RING, Turbo Oil Drain Tube
		1				ETH	DBB		
9	4429 183	1				ETC			HOSE, Turbo Oil Drain
		1				ETH	DBB		
10	5011 412AA	1				ETC			TUBE, Turbo Oil Drain
		1				ETH	DBB		
11	5014 174AA	1				ETC			TUBE, Turbo Oil Drain
		1				ETC			

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005


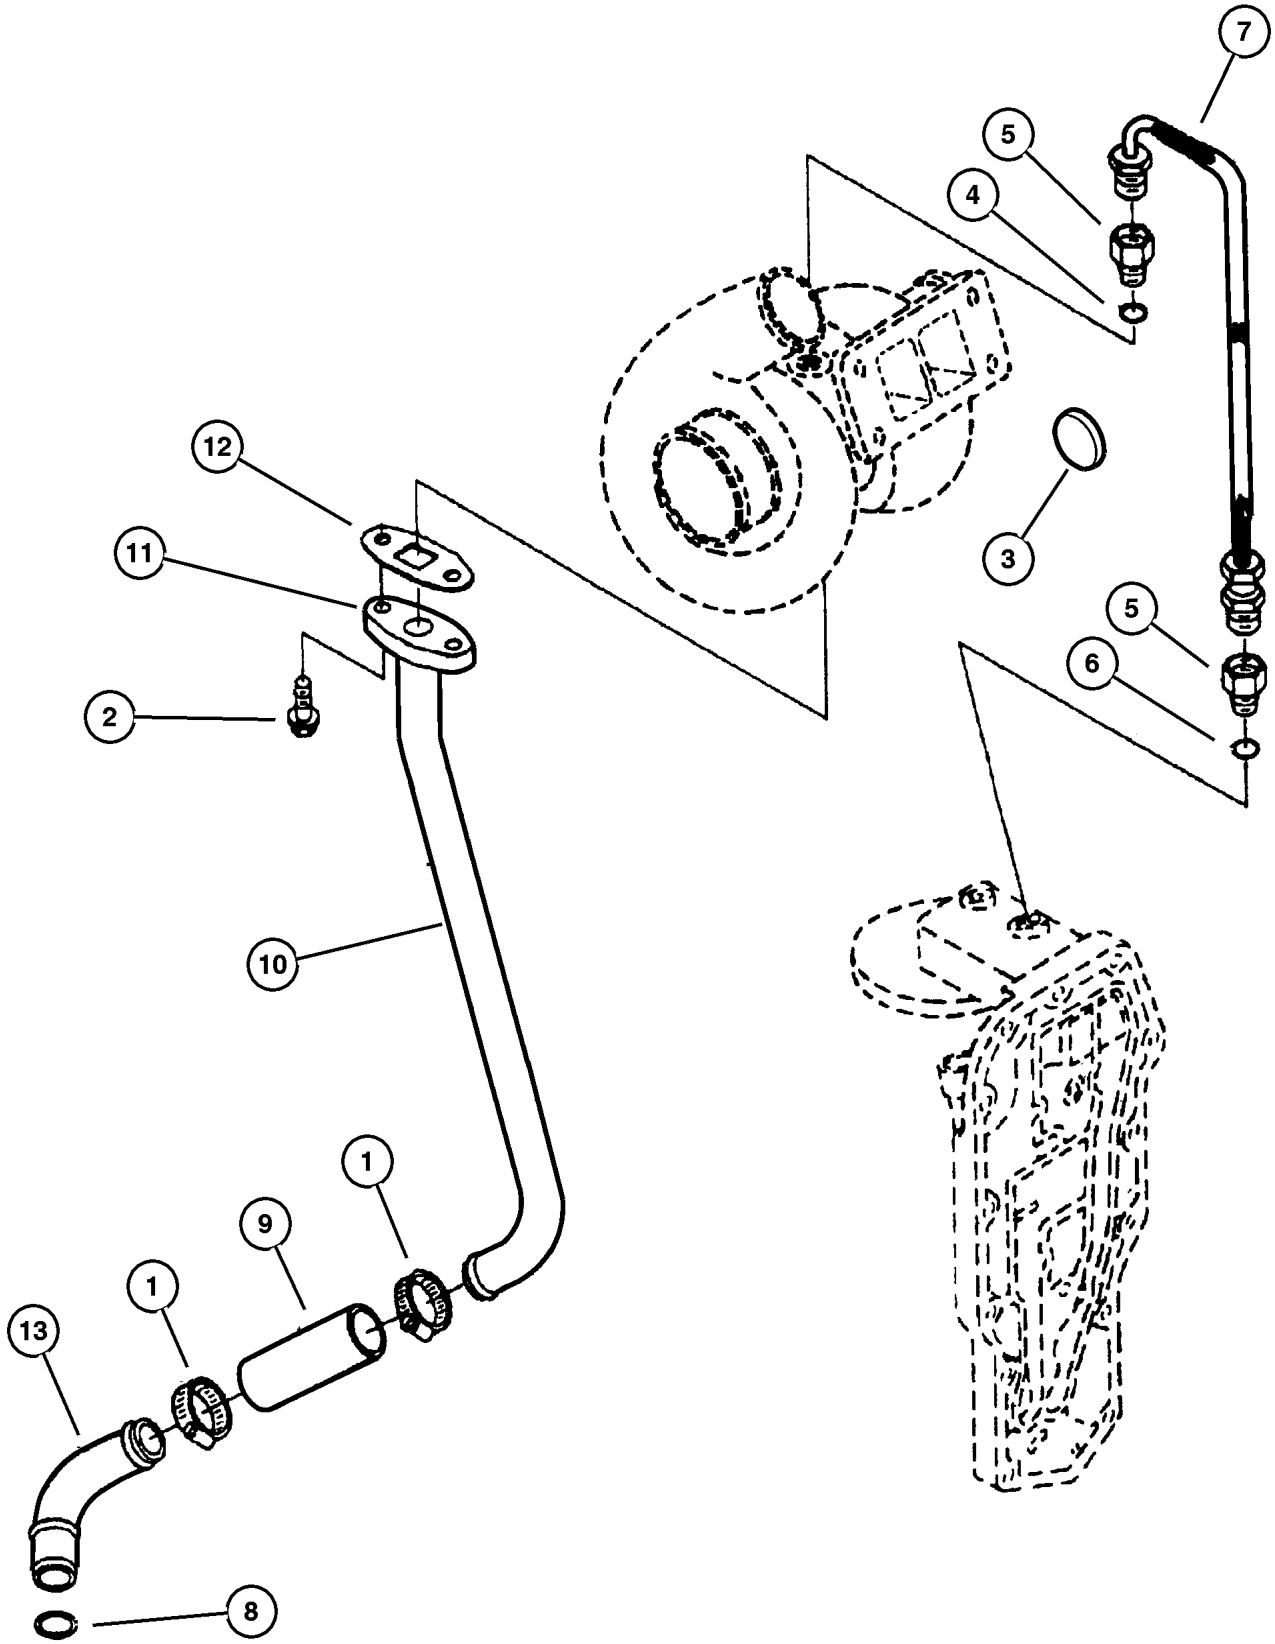


Figure 5.9LD-1125

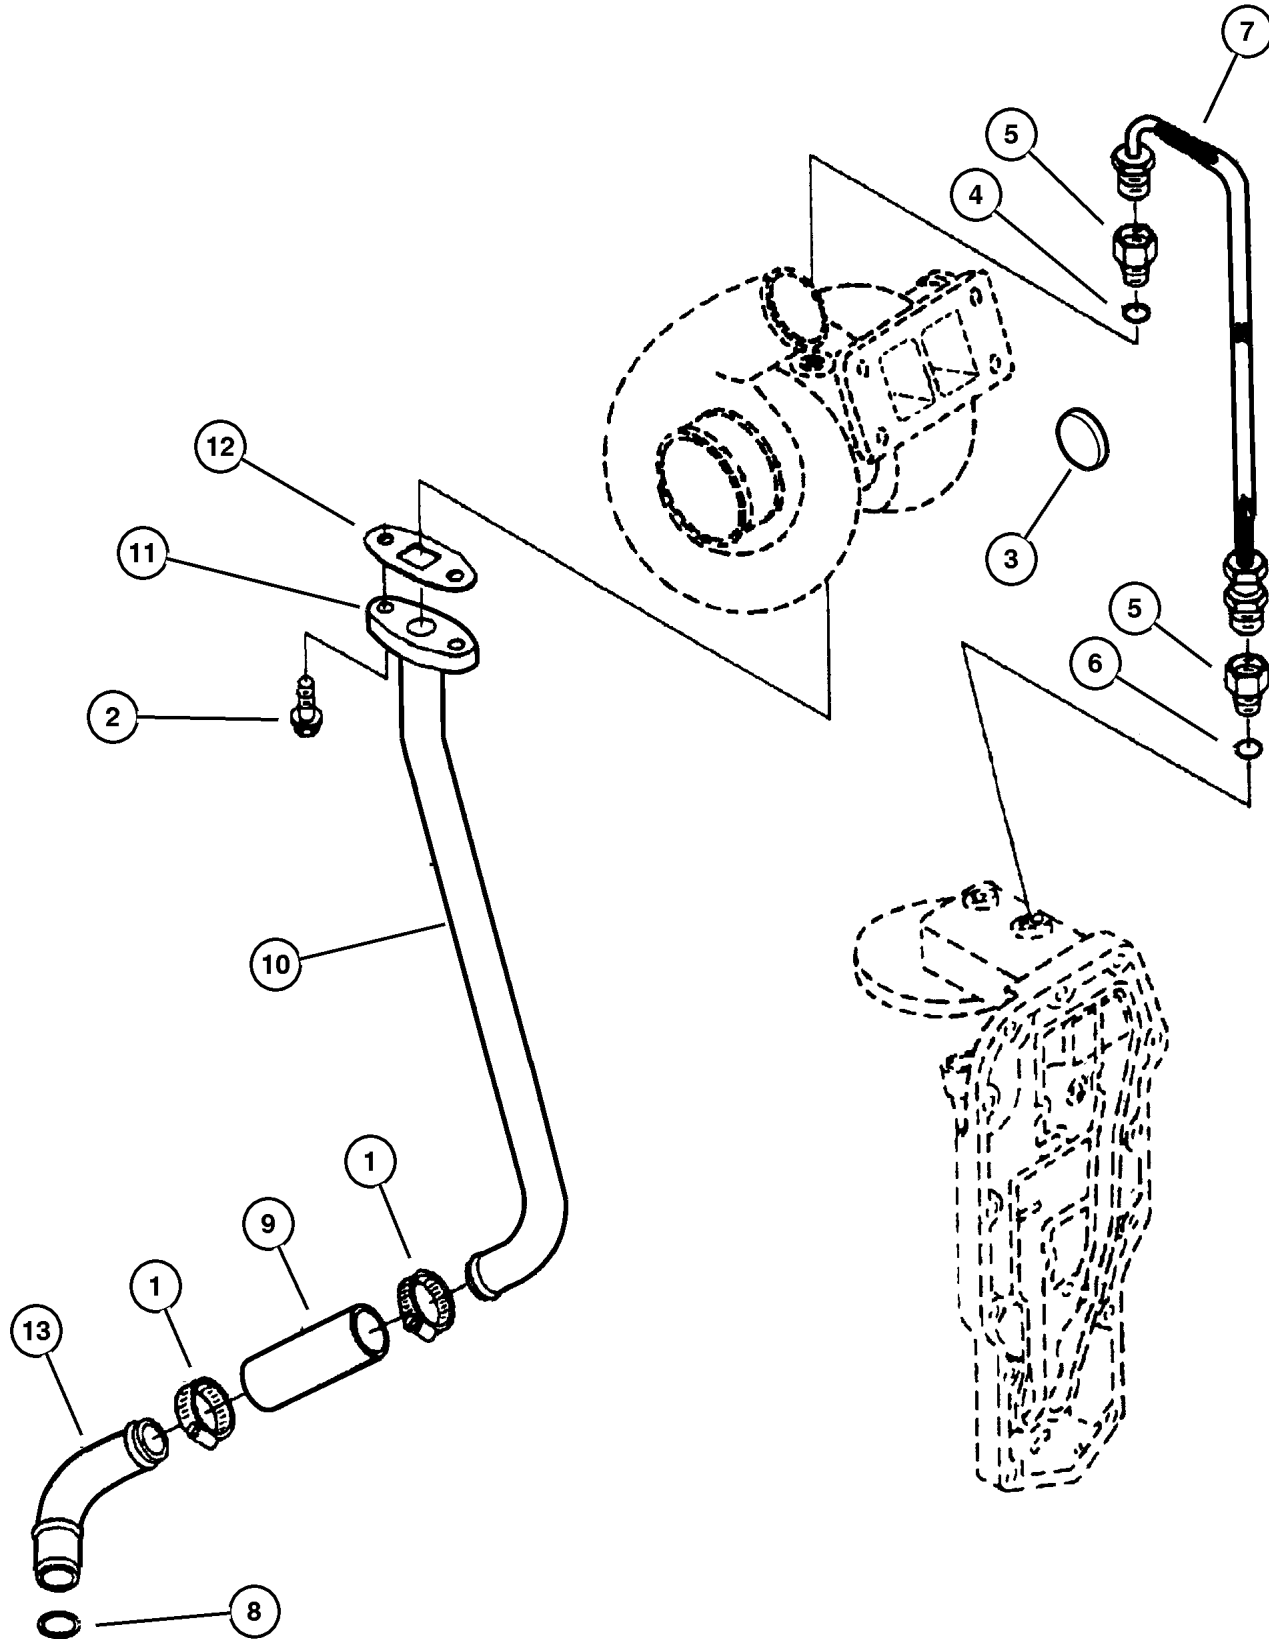

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5016 650AA	1				ETH	DBB		ETH, Manual
		1				ETC	DG0		ETC+XCK, Auto
		1				ETC	DBB		ETC+XCK, Manual
12									GASKET, Turbo Oil Drain Pipe
	5011 430AA	1				ETC			
		1				ETH	DBB		
13	5011 412AA	1				ETC			TUBE, Turbo Oil Drain

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE

$$\begin{aligned} 1, 6 &= 1500 \\ 2, 7 &= 2500 \\ 3, 8 &= 3500 \end{aligned}$$

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Group – 011

Exhaust

GROUP 11 - Exhaust

Illustration Title


Group-Fig. No.



Exhaust System

Exhaust System 5.2L (ELF), 5.9L (EML) Engine	Fig. 011-115
Exhaust System 5.9L (EMM), 8.0L (EWA) Engine	Fig. 011-125
Exhaust System 5.9L (ETC,ETH) Diesel Engine	Fig. 011-135


Heat Shields

Heat Shields 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 8.0L (EWA) Engine	Fig. 011-230
--	--------------

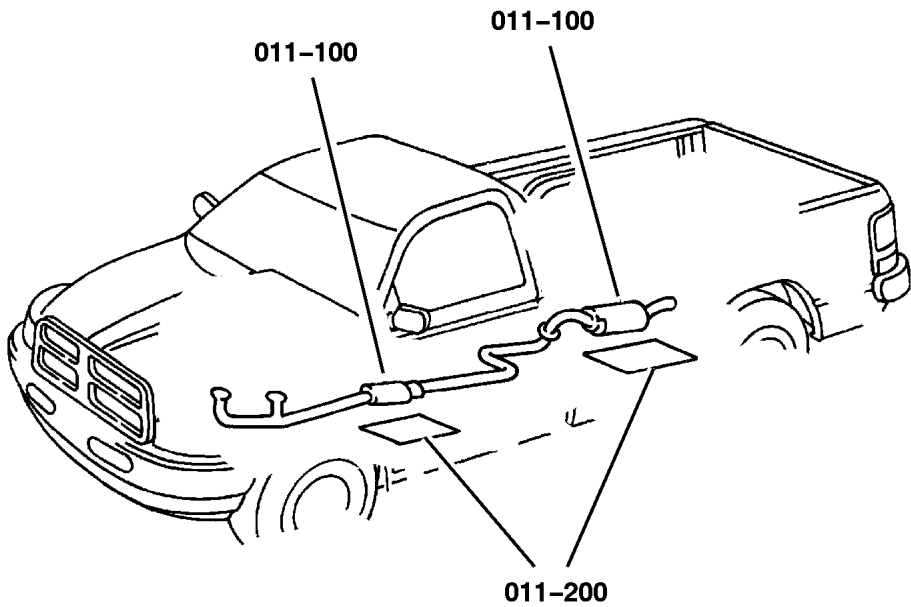
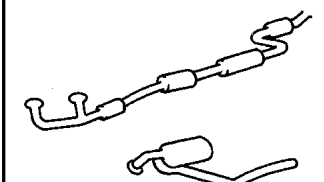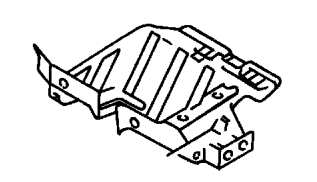
<div>011-100</div> <div>Exhaust System</div> <div></div>	<div>011-200</div> <div>Heat Shields</div> <div></div>		
---	---	--	--

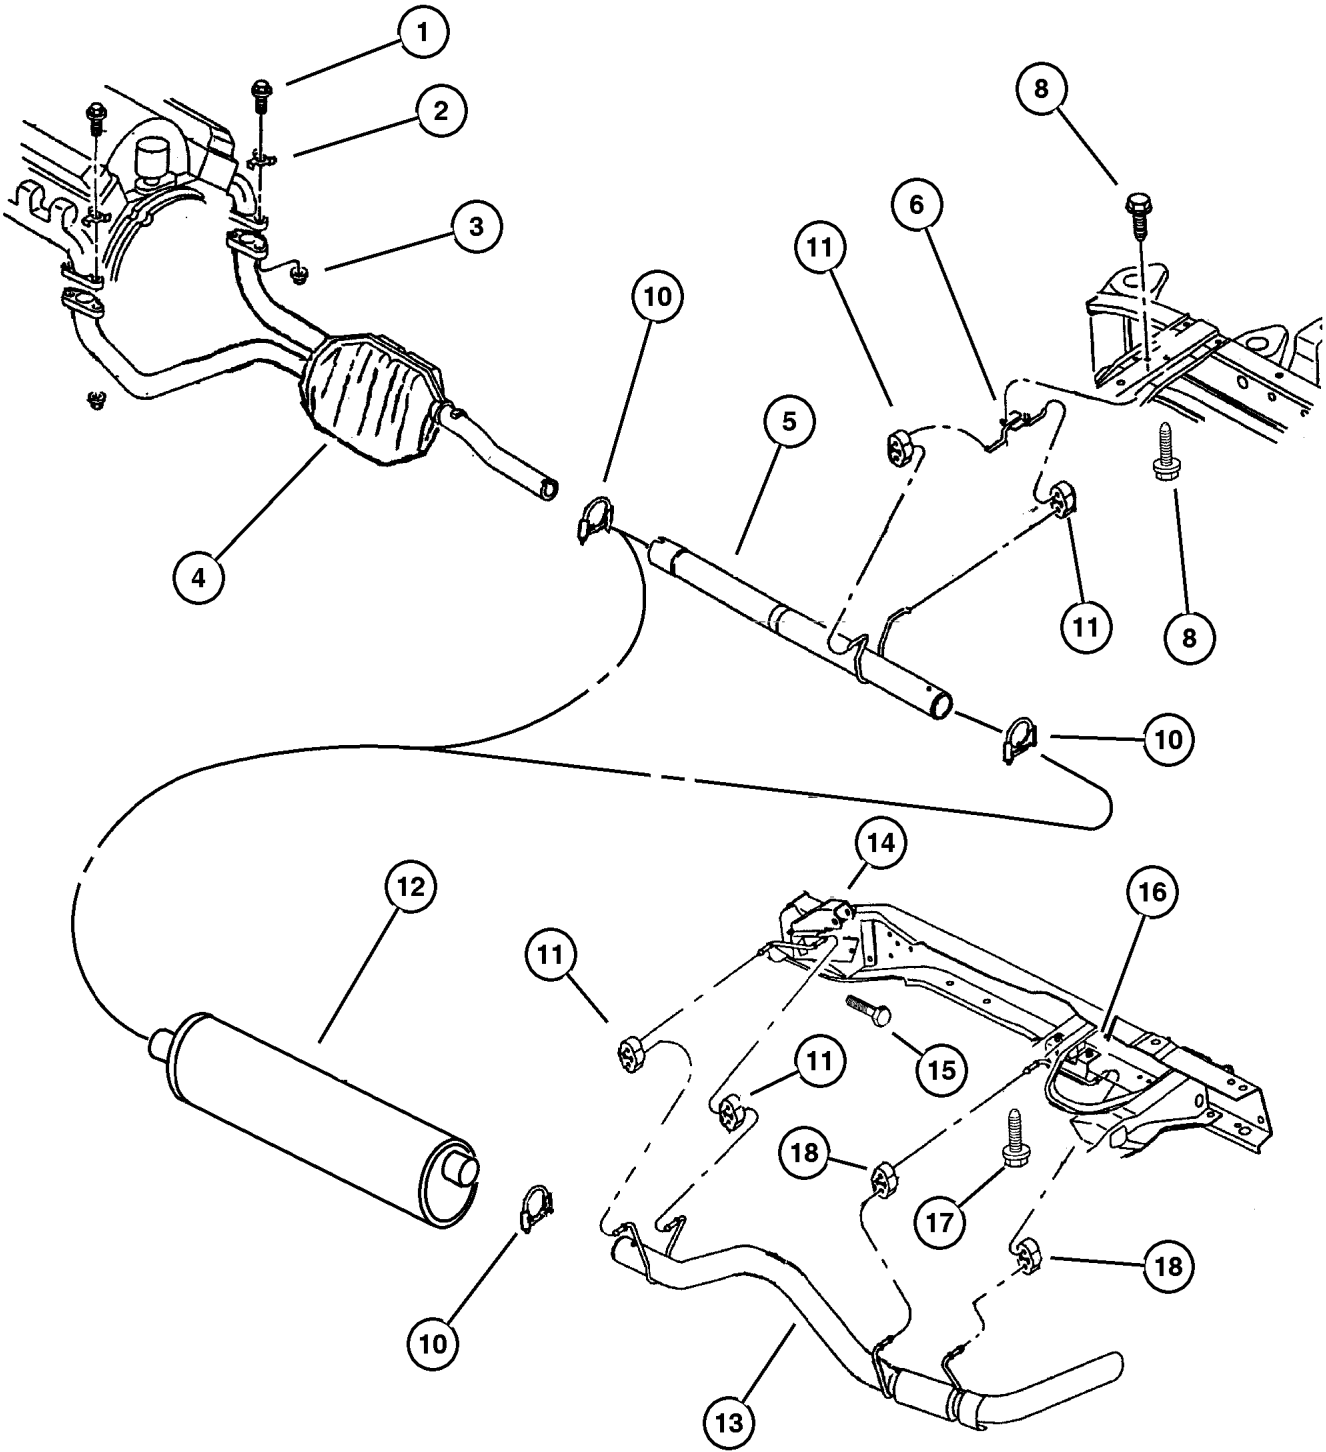Exhaust System 5.2L (ELF), 5.9L (EML) Engine
Figure 011-115



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

ELF = Magnum 5.2L SMPI V8 Engine
ELO = All 5.2L 8 Cyl Gas Engines
EML = Magnum 5.9L SMPI V8 Engine
EMO = All 5.9L 8 Cyl Gas Engines
EWO = All 8.0L Gas Engines

1	6035 375	4				EL0, EM0			BOLT, Hex Head, .375-16x2.50
2	4004 001	4				EL0, EM0, EWO			RETAINER, Exhaust Pipe to Manifold
3	0118 615	4				EL0, EM0, EWO			NUT, Hex, .375-16
4	5210 3201	1	2, 3, 7, 8			EWO			CONVERTER, Catalytic California
	52103 203AK	1				EML			Leaded Fuel
	52103 344AC	1				ELF, EML	DG0		California
	52103 345AB	1				ELF, EML	DD0		California
		1				ELF, EML			Federal
	52103 078AH	2	2, 3, 7, 8		33, 34	EMM, EWO			Federal
5	52020 006AB	1	1, 2, 6, 7		31, 33	EL0, EML			PIPE, Exhaust
	5202 0007	1			34	EL0, EML			
6	5201 8855	1			32, 34	EL0, EML			HANGER, Exhaust
-7	5201 9513	1	1, 2, 6, 7		31, 33	EL0, EML			BRACKET, Converter Hanger
8	3420 1888	3							SCREW, Hex Head
-9	3420 1888	3	1, 2, 6, 7		31, 33	EL0, EML			SCREW, Hex Head
10	4004 445	1				EL0, EML			CLAMP, Exhaust
11	5201 7607	2							INSULATOR, Exhaust
12									MUFFLER, Exhaust


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EWO = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

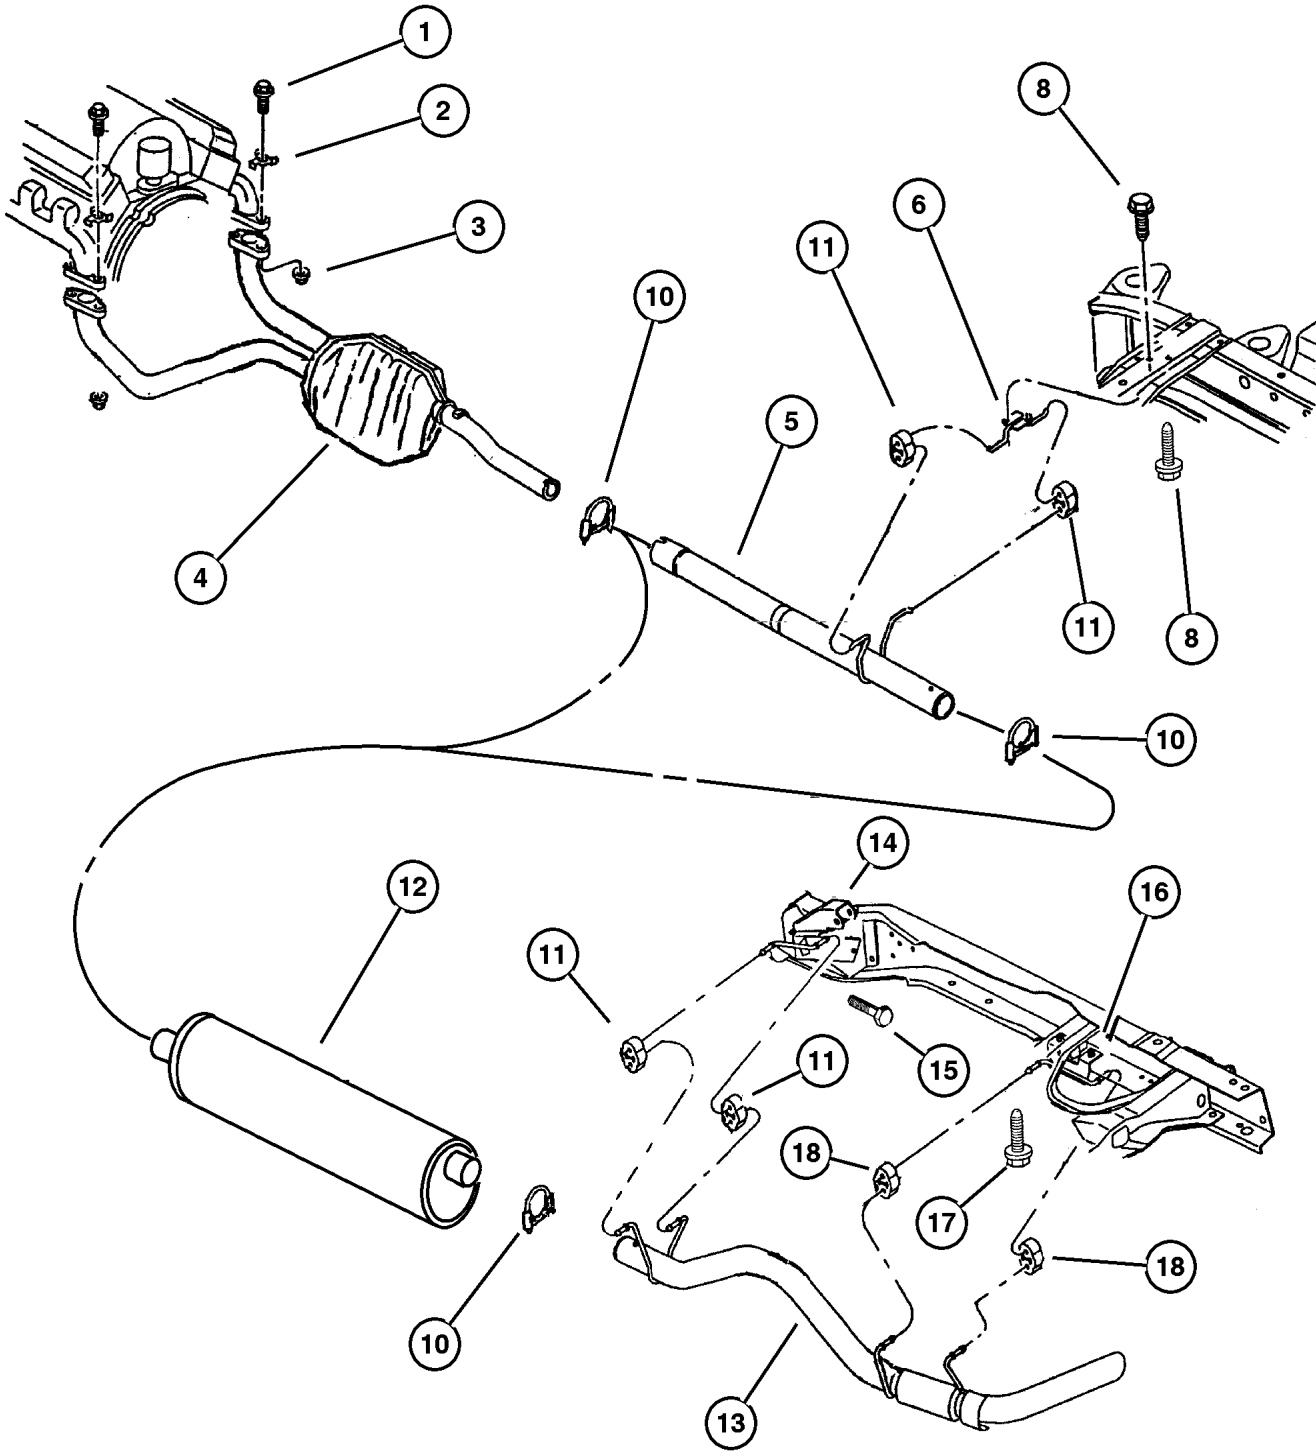Figure 011-115



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5210 3158	1				EL0			
	5210 3159	1				EML			
13	5210 3094	1				EL0, EML			TAILPIPE, Exhaust
14	52018 890AB	1							BRACKET, Muffler
15	3420 1888	3							SCREW, Hex Head
16	5210 3053	1				EL0, EML, EW0			HANGER, Tailpipe
17	6100 584	2							BOLT AND CONED WASHER, Hex Head, M8x30x20
18	4616 750	2							ISOLATOR, Exhaust Support

DODGE RAM QUAD CAB/CLUB CAB (BE)

L = Ram Truck (All)

LINE

1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

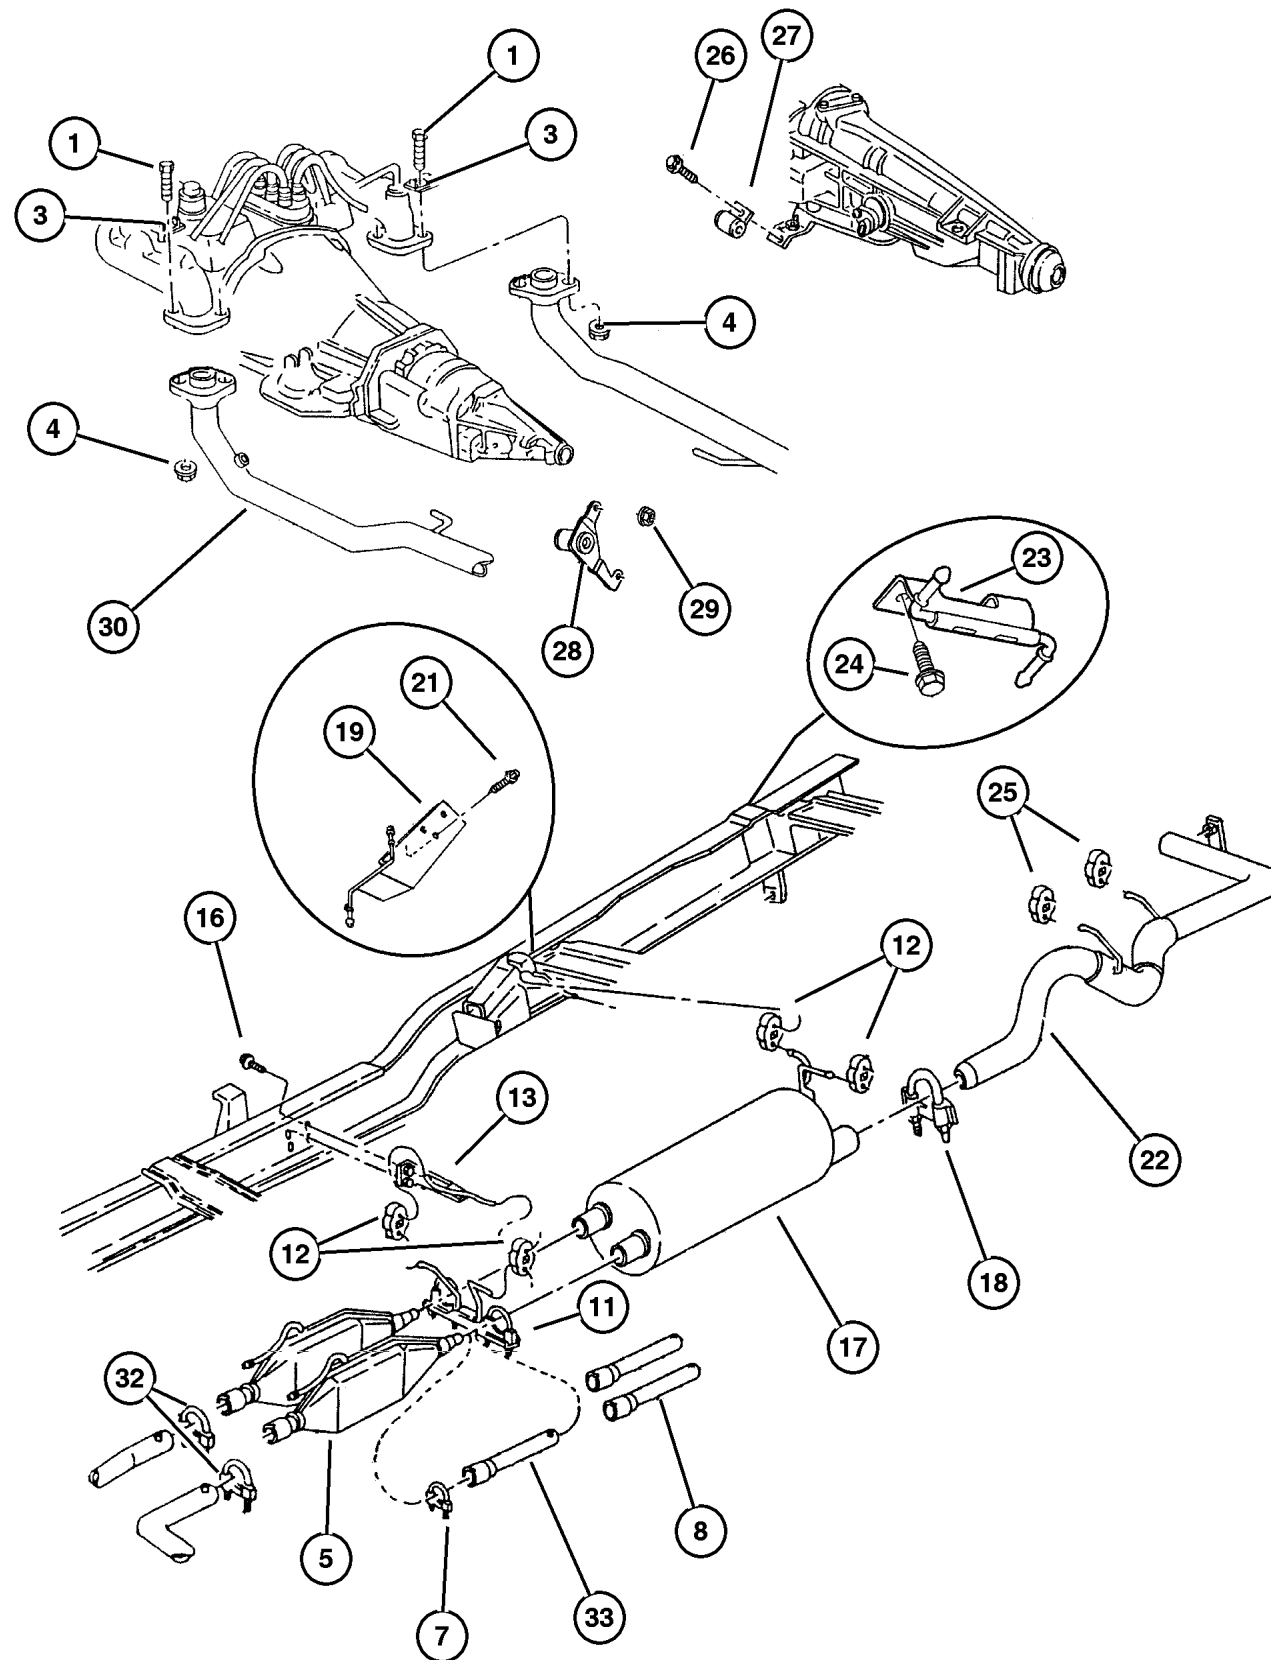
TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Exhaust System 5.9L (EMM), 8.0L (EWA) Engine Figure 011-125



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: EL0 = All 5.2L 8 Cyl Gas Engines EMM = Magnum 5.9L SMPI V8 Engine EM0 = All 5.9L 8 Cyl Gas Engines EW0 = All 8.0L Gas Engines									
1	6035 375	4				EL0, EM0			BOLT, Hex Head, .375-16x2.50
-2									BOLT, Hex Flange Head, .375-16 x 2.75, (NOT SERVICED) (Not Serviced)
3	4004 001	4				EL0, EM0, EW0			RETAINER, Exhaust Pipe to Manifold
4	0118 615	4				EL0, EM0, EW0			NUT, Hex, .375-16
5									CONVERTER, Catalytic
	5210 3201	1	2, 3, 7, 8			EW0			California
	52103 078AI	2	2, 3, 7, 8		33, 34	EMM, EW0			Federal
-6	5210 3000	2				EMM			RESONATOR, Exhaust, Leaded Fuel
7	5201 9397	2	2, 3, 7, 8			EW0			CLAMP, Exhaust
8									PIPE, Exhaust
	5201 8550	2	2, 7		31, 33	EW0			Federal
	5202 0187	2	3, 8		34	EMM			
	5201 9355	1	2, 3, 7, 8		34	EW0			California
-9	5201 8552	2	2, 3, 7, 8		34	EW0			RESONATOR, Exhaust, Federal
-10	5210 3115	1	2, 7		33	EW0			PIPE, Exhaust Extension, California
11									HANGER, Exhaust
	5201 8498	1	2, 3, 7, 8			EMM, EW0			
	5201 8668	1	2, 3, 7, 8			EW0			California
12	5201 7607	2							INSULATOR, Exhaust
13									HANGER, Exhaust
	5201 7629	1	2, 3, 7, 8		32, 34	EW0			Federal
		1	2, 3, 7, 8		32, 34	EMM			
-14	5210 3013	1	2, 7		33	EW0			HANGER, Muffler, Federal
-15	5201 8666	1	2, 3, 7, 8		32, 34	EW0			BRACKET, Catalytic Converter, California
16	6100 584	2							BOLT AND CONED WASHER, Hex Head, M8x30x20


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM, EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

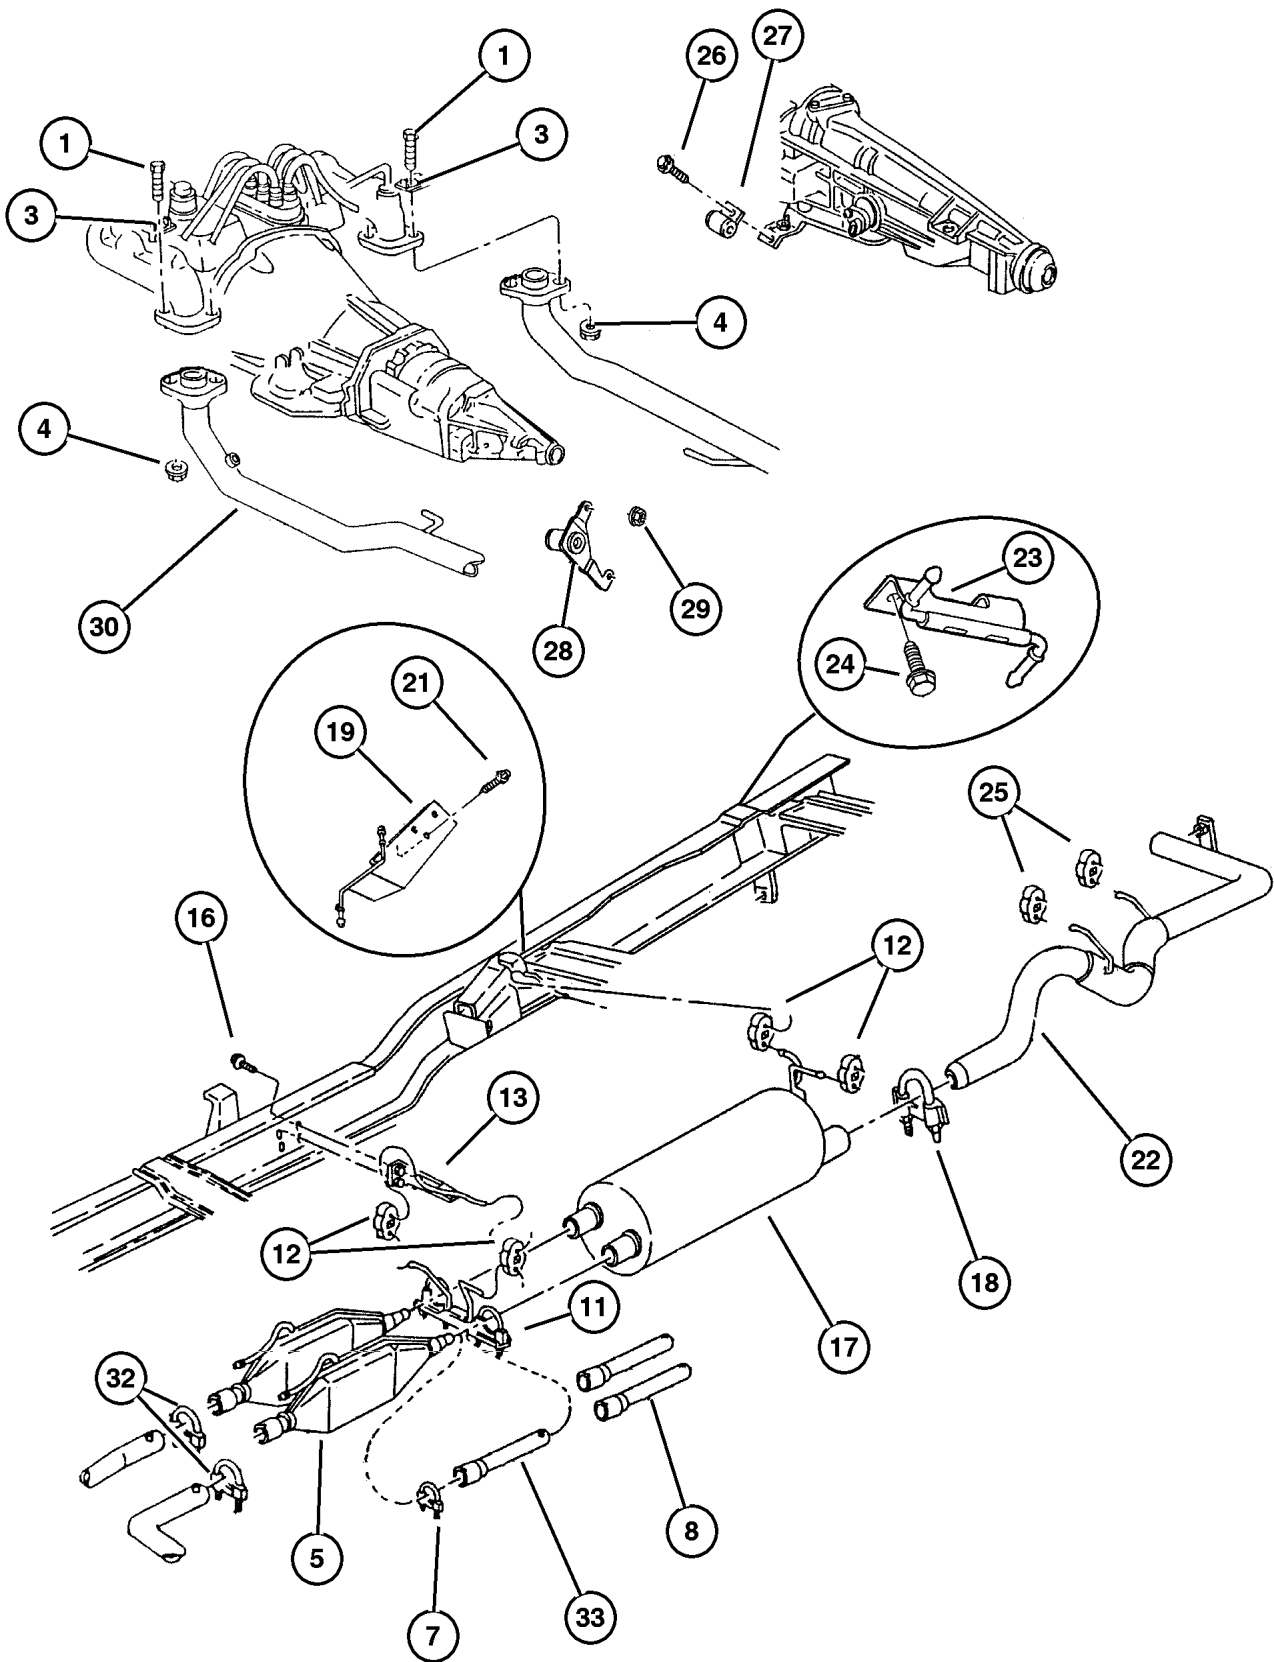Exhaust System 5.9L (EMM), 8.0L (EWA) Engine
Figure 011-125




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
17									MUFFLER, Exhaust
	5201 9323	1				EMM			
		1				EW0			Federal
	5201 9346	1	2, 3, 7, 8			EW0			California
18	5201 8623	1	2, 3, 7, 8		32, 33, 34	EW0			CLAMP, Exhaust
19	52018 890AB	1							BRACKET, Muffler
-20	5210 3024	1	2, 7		33	EW0			HANGER, Muffler, California
21	3420 1888	3							SCREW, Hex Head
22	52103 096AB	1	2, 3, 7, 8		32, 33, 34	EMM, EW0			TAILPIPE, Exhaust
23									HANGER, Tailpipe
	5210 3053	1				EL0, EML, EW0, EMM, ETC			
24	3420 1888	3							SCREW, Hex Head
25	4616 750	2							ISOLATOR, Exhaust Support
26									SCREW, M10x1.50x30.00, (NOT SERVICED) (Not Serviced)
27									BRACKET, Engine Mount
	5201 8654	1	2, 3			EMM			
		1	2, 3			EW0			
28									BRACKET, Exhaust Pipe to T/Case
	5201 8497	1	7, 8			EMM			
		1	7, 8			EW0			
29	6502 337	2							NUT, M10x1.5
30									PIPE, Exhaust
	52006 488AC	1	2, 3, 7, 8		33, 34	EW0			Right
	52006 532AD	1				EMM			Right
	52103 085AC	1	2, 3, 7, 8			EW0			
-31	52103 109AC-	1				EMM			PIPE, Exhaust Front Left
32									CLAMP, Exhaust
	4301 081	2	3, 8		34	EMM			
	5201 9397	2	2, 3, 7, 8			EW0			
33	52019 170AB	1	2, 3, 7, 8			EW0			PIPE, Exhaust, California

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

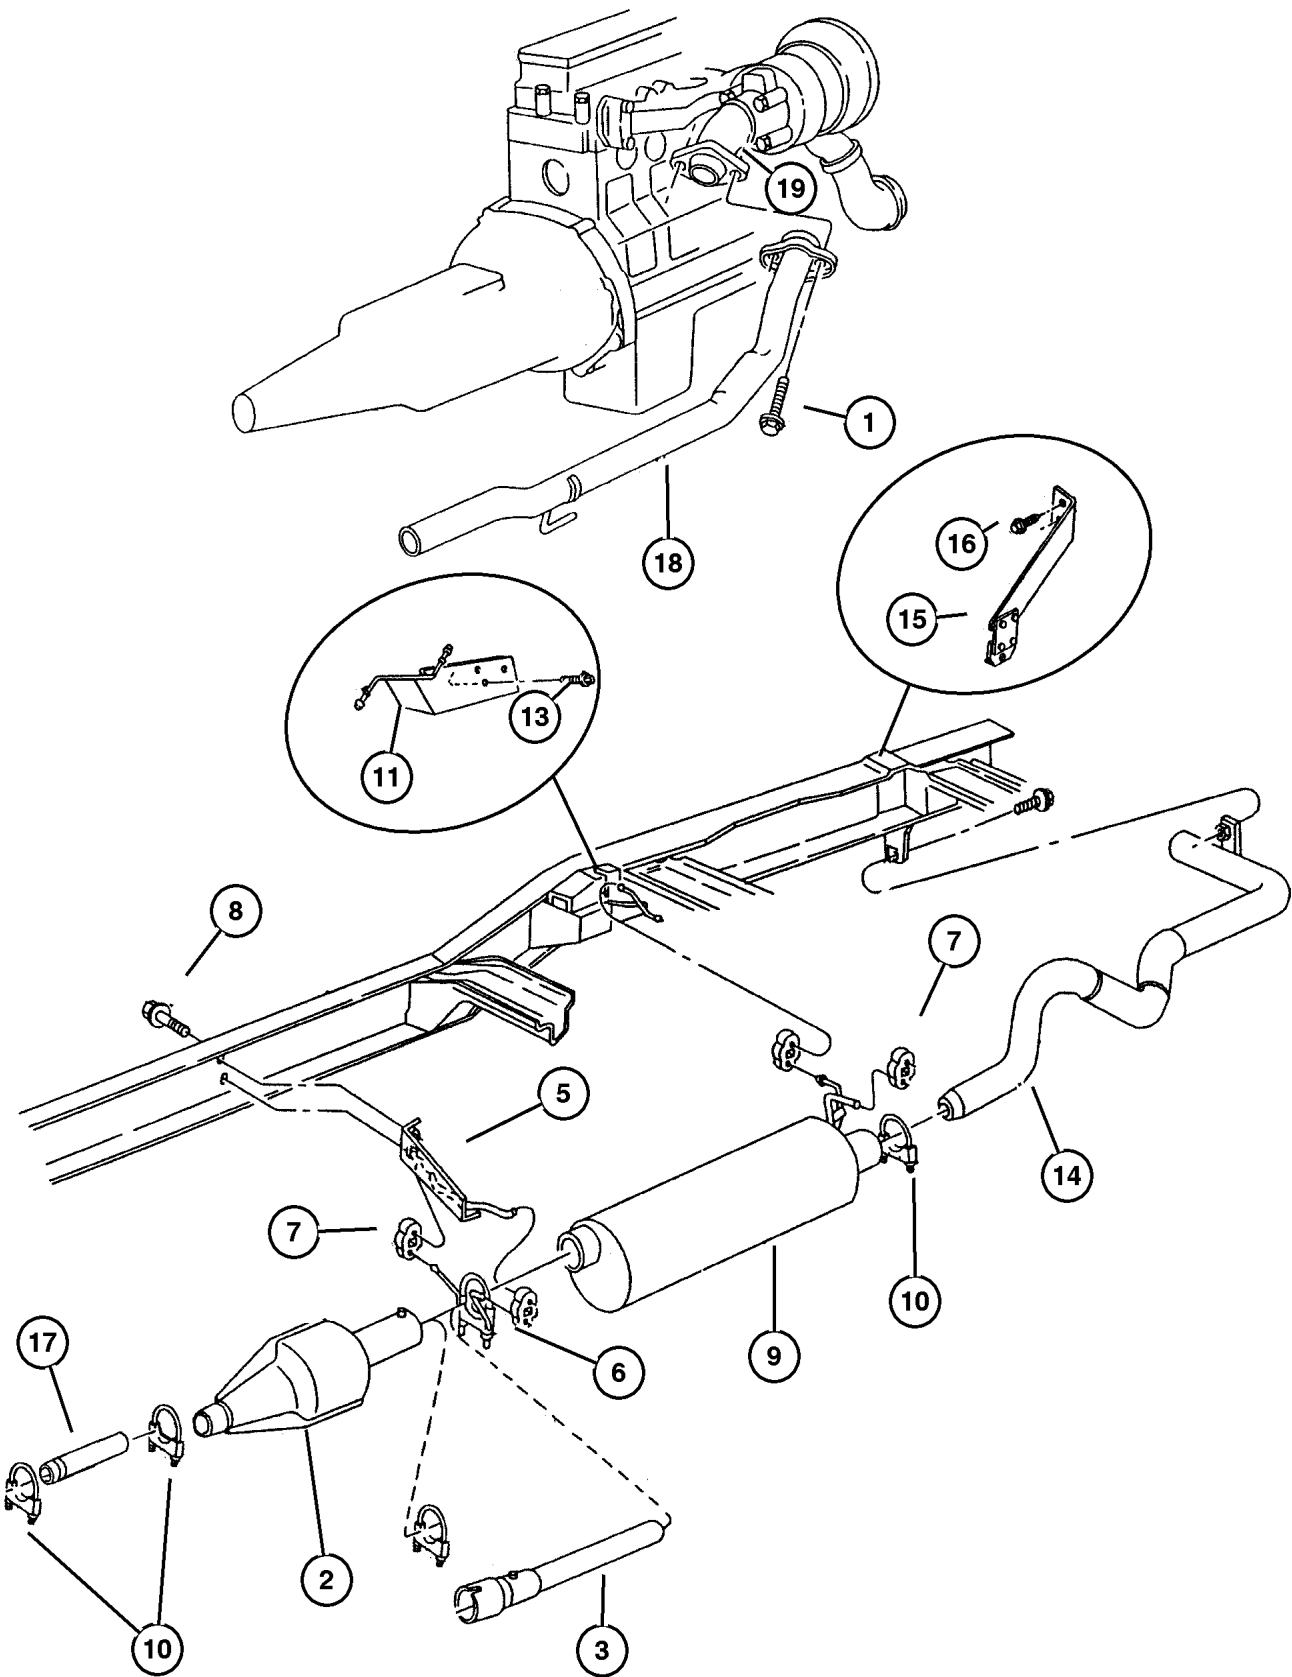Exhaust System 5.9L (ETC,ETH) Diesel Engine
Figure 011-135




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: EMM = Magnum 5.9L SMPI V8 Engine ET0 = All 5.9L Turbo Diesel Engines									
1	6100 940	2	2, 3, 7, 8			ET0			BOLT, Hex Flange Head, M10x1.5x50
2	52103 042AB	1	2, 3, 7, 8		33, 34	ET0			RESONATOR, Exhaust
3	5201 9355	1	2, 3, 7, 8		34	ET0			PIPE, Exhaust
-4	5210 3115	1	2, 7		33	ET0			PIPE, Exhaust Extension
5	5201 8666	1	2, 3, 7, 8		32, 34	ET0			BRACKET, Catalytic Converter
6	5201 8668	1	2, 3, 7, 8			ET0			HANGER, Exhaust
7	5201 7607	2							INSULATOR, Exhaust
8	6100 584	2							BOLT AND CONED WASHER, Hex Head, M8x30x20
9	52019 324AB	1	2, 3, 7, 8		33, 34	ET0			MUFFLER, Exhaust
10	5201 8623	1	2, 3, 7, 8		32, 33, 34	ET0			CLAMP, Exhaust
11	52018 890AB	1							BRACKET, Muffler, Federal
-12	5210 3024	1	2, 7		33	ET0			HANGER, Muffler, California
13	3420 1888	3							SCREW, Hex Head
14	52103 095AB	1	2, 3, 7, 8		33, 34	ET0			TAILPIPE, Exhaust
15	5210 3053	1				EMM, ET0			HANGER, Tailpipe
16	3420 1888	3							SCREW, Hex Head
17	5201 9355	1	2, 3, 7, 8		34	ET0			PIPE, Exhaust
18	52006 534AC	1	2, 3, 7, 8		33, 34	ET0			PIPE, Exhaust
19	5136 024AA	1				ETC	DBB		PIPE, Exhaust Turbo Elbow to Exhaust
		1				ETH	DBB		Turbo Elbow to Exhaust

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

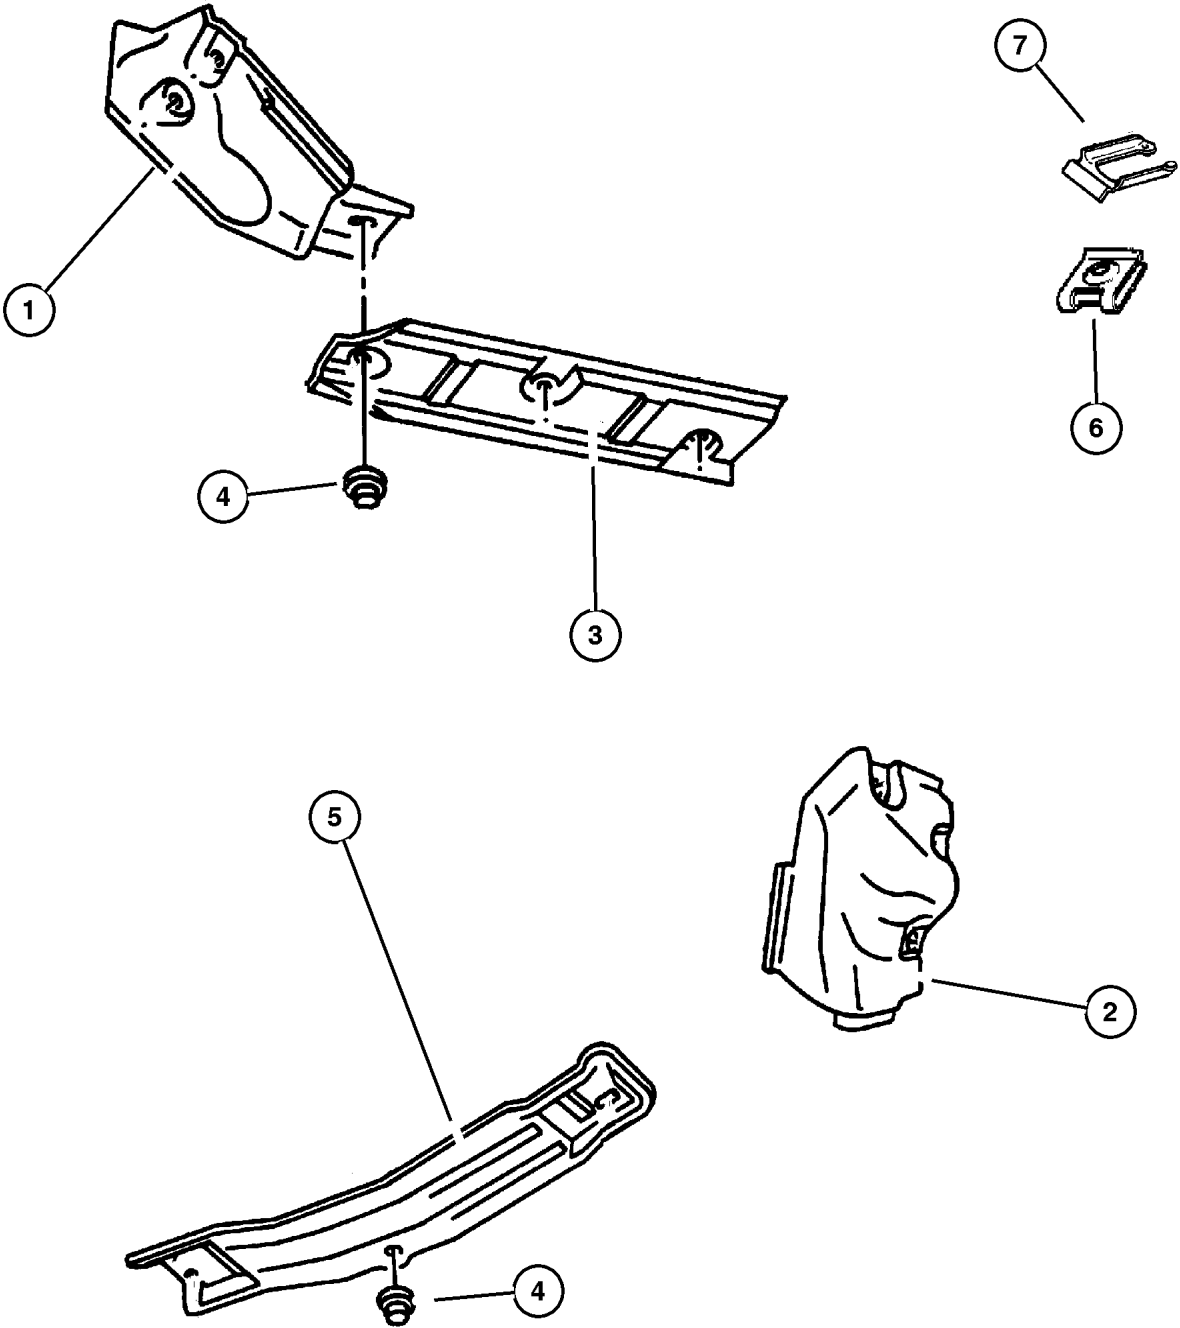Heat Shields 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 8.0L (EWA) Engine
Figure 011-230



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note									
EL0 = All 5.2L 8 Cyl Gas Engines									
EMM = Magnum 5.9L SMPI V8 Engine									
EM0 = All 5.9L 8 Cyl Gas Engines									
EW0 = All 8.0L Gas Engines									
1	5527 4650	1				EL0, EM0, EW0			SHIELD, Heat, Right
2	5527 5738	1				EL0, EM0, EW0			SHIELD, Heat, Left
3	5527 4656	1				EL0, EM0 EW0			SHIELD, Heat Right
4		1							Right NUT, .250-20, (NOT SERVICED) (Not Serviced)
5	55274 655AB	1				EMM, EW0			SHIELD, Heat, Left
6	5200 9136	4	2, 3, 7, 8			EMM, EW0			CLIP, Heat Shield
7	5205 8190	1	2, 3, 7, 8			EMM, EW0			BRACKET, Heat Shield

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Group – 013

Frames and Bumpers

GROUP 13 - Frames and Bumpers

Illustration Title

Group-Fig. No.

Frames

Frame

Fig. 013-140

Front Bumper and Fascia

Bumper, Front

Fig. 013-230

Bumper, Front, Sport

Fig. 013-235

Rear Bumper and Fascia

Rear Bumper and Licence Plate Attaching

Fig. 013-310

Body Hold Down

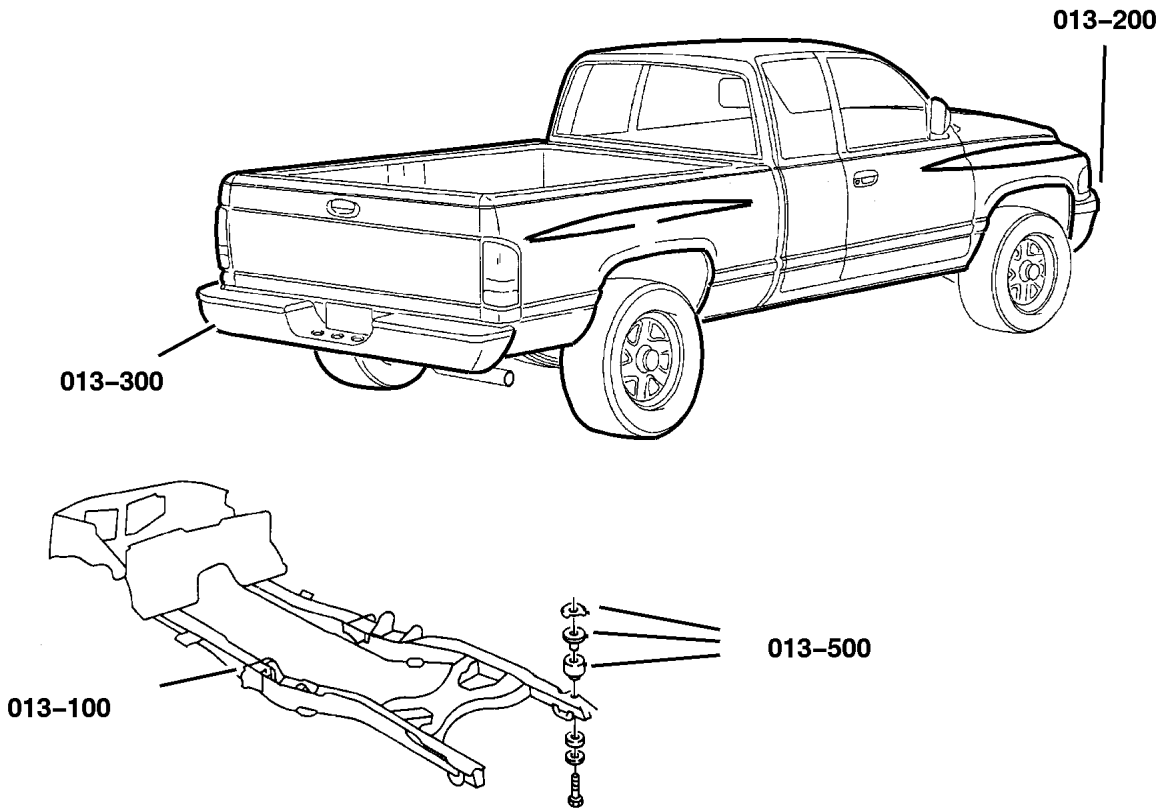
Body Hold Down And Front End Mounting


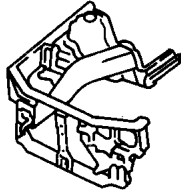



Fig. 013-520

Trailer Tow


Rear Hitch

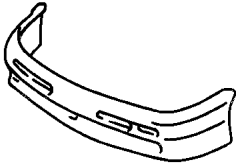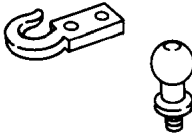Fig. 013-610



<div>013-100</div> <div>Frames</div> <div></div>	<div>013-200</div> <div>Front Bumper and Fascia</div> <div></div>	<div>013-300</div> <div>Rear Bumper and Fascia</div> <div></div>	<div>013-500</div> <div>Body Hold Down</div> <div></div>
<div>013-600</div> <div>Trailer Tow</div> <div></div>			

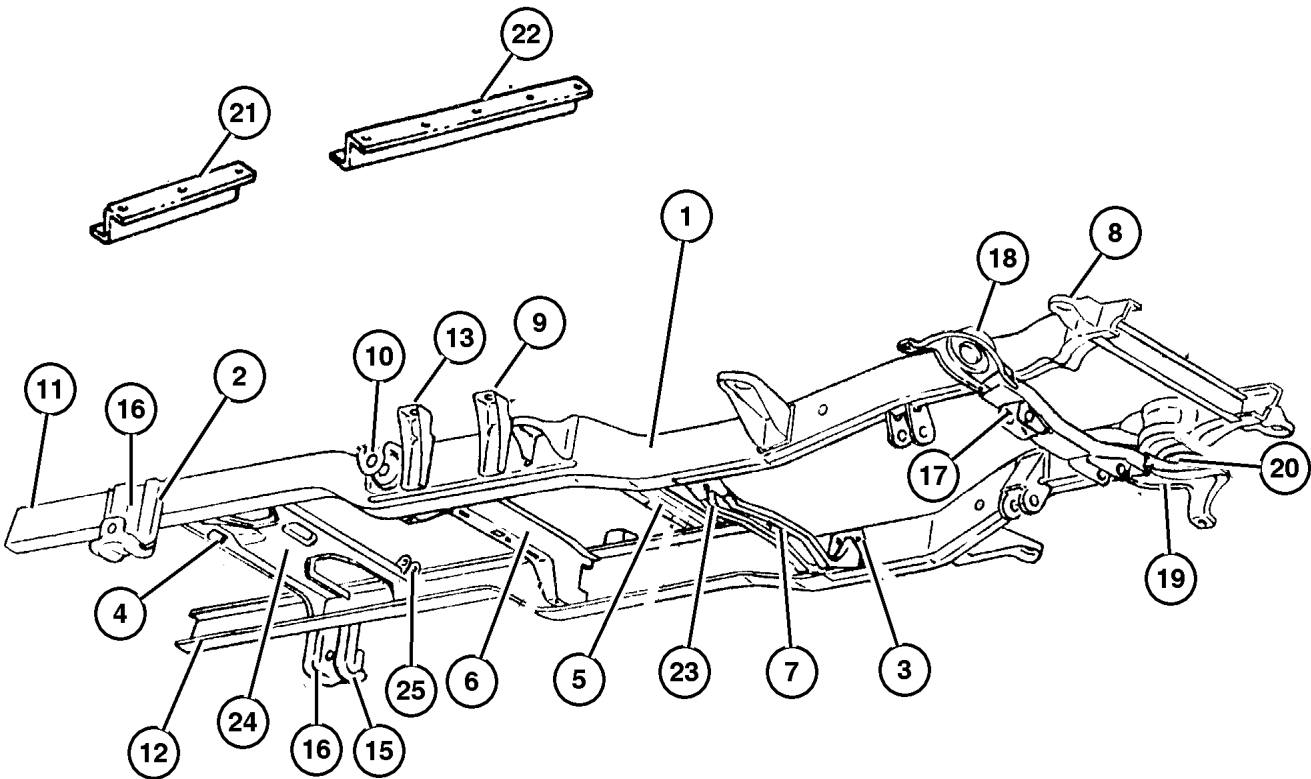Frame
Figure 013-140



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									FRAME ASSEMBLY, Chassis
	52020 260AC	1	1		31, 33				with Auto Transmission
	52020 261AC	1	1		31, 33				with Manual Transmission
	52020 340AC	1	1		34				
	52020 331AC	1	2		33				
	52020 333AC	1	2, 3		34				
	52020 334AC	1	6		31, 33				
	52020 336AC	1	6		34				
	52020 237AC	1	7		33				
	52020 338AC	1	7, 8		34				
2									RIVET
	0104 114	12	1		31, 33				
		12	1		34				
		12	2		33				
		12	2, 3		34				
		12	6		31, 33				
		12	6		34				
		12	7		33				
		12	7, 8		34				
3									NUT AND WASHER, Hex Nut-Coned Washer, .375-16
	6025 011	8	1		31, 33				
		8	1		34				
		8	2		33				
		8	2, 3		34				
		8	6		31, 33				
		8	6		34				
		8	7		33				
		8	7, 8		34				
4									BRACKET, Parking Brake
	52020 439AB	1	1		31, 33				
		1	2		33				
		1	1		34				
		1	2, 3		34				
		1	6		31, 33				
		1	6		34				
		1	7		33				
		1	7, 8		34				
5									CROSSMEMBER, Fuel Tank
	52057 524AB	1	1		31, 33				

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005


Frame
Figure 013-140

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	1		34				
		1	2		33				
		1	2, 3		34				
		1	6		31, 33				
		1	6		34				
		1	7		33				
		1	7, 8		34				
6									CROSSMEMBER, Rear Spring Front
	52057 525AB	1	1		31, 33				
		1	1		34				
		1	2		33				
		1	2, 3		34				
		1	6		31, 33				
		1	6		34				
		1	7		33				
		1	7, 8		34				
7									CROSSMEMBER, Transmission
	4882 390AB	1	6		31, 33				
		1	6		34				
	5003 051AB	1	2		33				
		1	2, 3		34				
		1	7		33				
		1	7, 8		34				
	5205 8460	1	1		31, 33				
		1	1		34				
8									BRACKET, Frame
	5205 7527	2	1		31, 33				
		2	1		34				
		2	2		33				
		2	2, 3		34				
		2	6		31, 33				
		2	6		34				
		2	7		33				
		2	7, 8		34				
9									BRACKET, Cab
	5205 7544	2	1		31, 33				
		2	1		34				
		2	2		33				
		2	2, 3		34				
		2	6		31, 33				


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

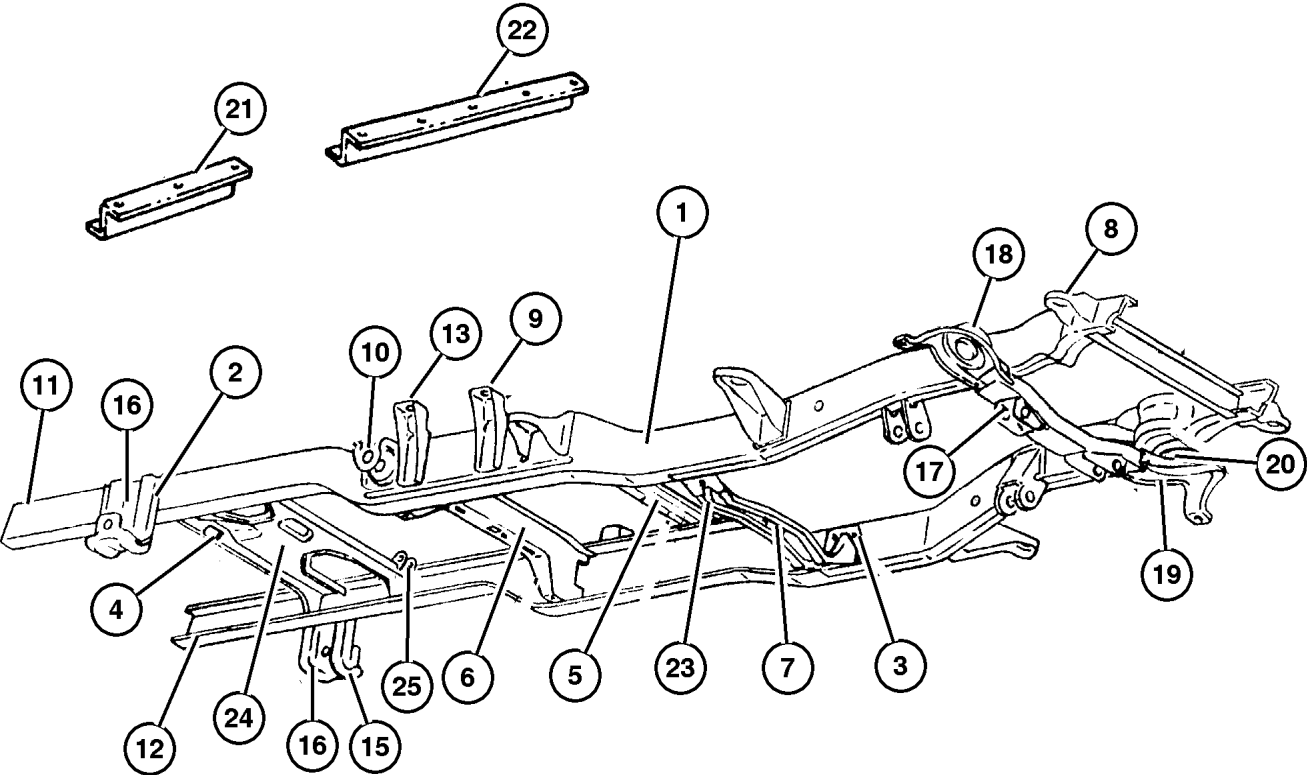September 16, 2005



Frame
Figure 013-140

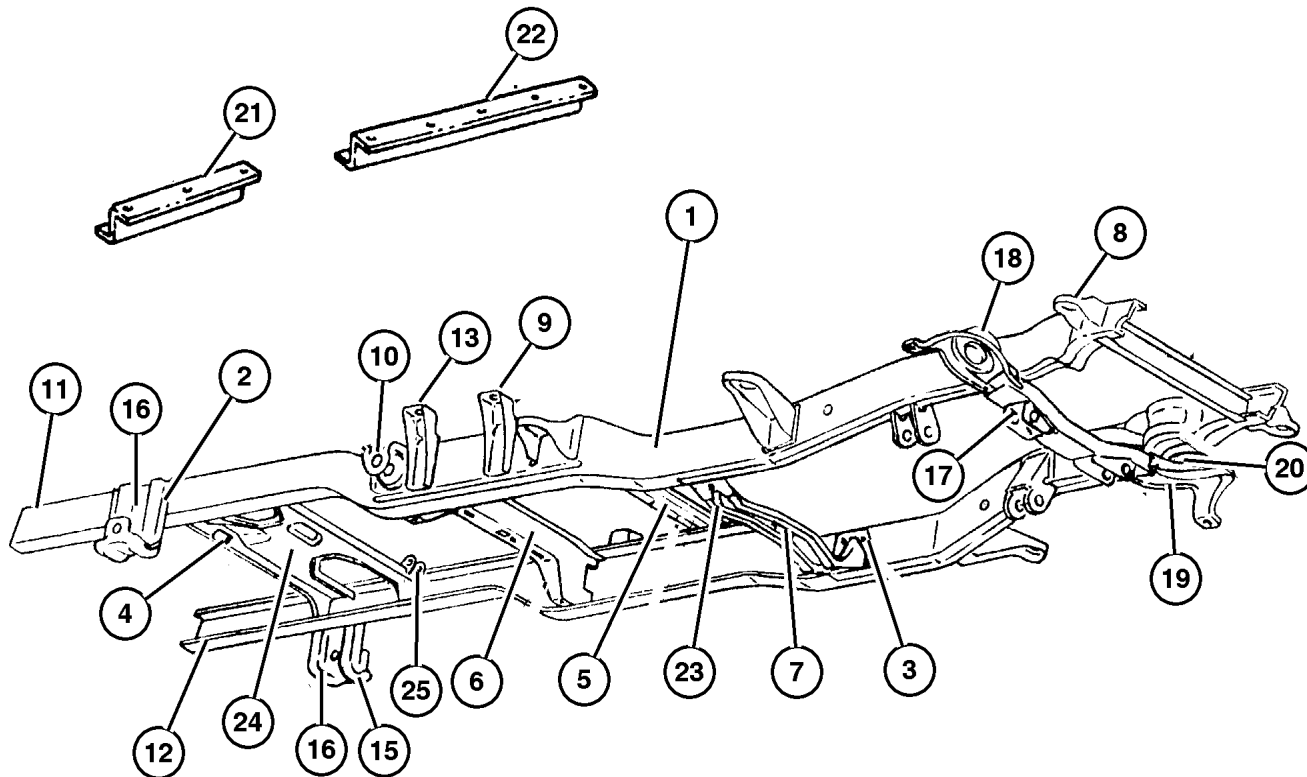

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
10	5205 7866	2	6		34				BRACKET, Shackle
		2	7		33				
		2	7, 8		34				
		2	1		31, 33				
11	52057 860AC	2	1		34				RAIL, Rear Right
		2	6		31, 33				
		2	6		34				
12	52057 861AC	1	2, 3		34				RAIL, Rear Left
		1	7, 8		34				
		1	2, 3		34				
13	5205 8360	2	1		31, 33				BRACKET, Cab
		2	1		34				
		2	2		33				
		2	2, 3		34				
		2	6		31, 33				
		2	6		34				
-14 15	5203 8233	2	7		33				BRACKET, Jounce Bumper
		2	7, 8		34				
		4	2, 3, 7, 8						
16	5205 7964	2	1		31, 33				BRACKET, Spring
		2	1		34				
		2	6		31, 33				
		2	6		34				
		2	2		33				
17	5205 8658	2	2, 3		34				Front Front Front Front Rear Rear Rear Rear
		2	7		33				
		2	7, 8		34				
		2	2		33				
		2	2, 3		34				
17	5205 8603	2	7		33				Rear BRACKET, Idler Arm
		1	7, 8		34				
17	5205 8603	2	7, 8		34				Rear BRACKET, Idler Arm
		1	2		33				

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005


Frame
Figure 013-140

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	2, 3		34				
18	52058 604AD	2	2		33				BRACKET, Upper Control Arm
		2	2, 3		34				
19									CUP, Jounce Bumper
	5205 8224	2	6		31, 33				
		2	6		34				
		2	7		33				
		2	7, 8		34				
20	5203 8233	4	2, 3, 7, 8						BRACKET, Jounce Bumper
21									ADAPTER, Frame To Body, (NOT REQUIRED)
22									BRACKET, Frame, (NOT REQUIRED)
23									CROSSMEMBER, Center Bearing Mount
	5201 9613	1	1		31, 33				
		1	2		33				
		1	7		33				
24	4773 168AB	1	2		33				CROSSMEMBER, K Type
		1	2, 3		34				
		1	6		31, 33				
		1	7		33				
		1	7, 8		34				
		1	1		31, 33				
		1	1		34				
		1	6		34				
25									BRACKET, Shock Mounting
	5205 8071	1	1		31, 33				
		1	2		33				
		1	2, 3		34				
		1	6		31, 33				
		1	7		33				
		1	6		34				
		1	7, 8		34				


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

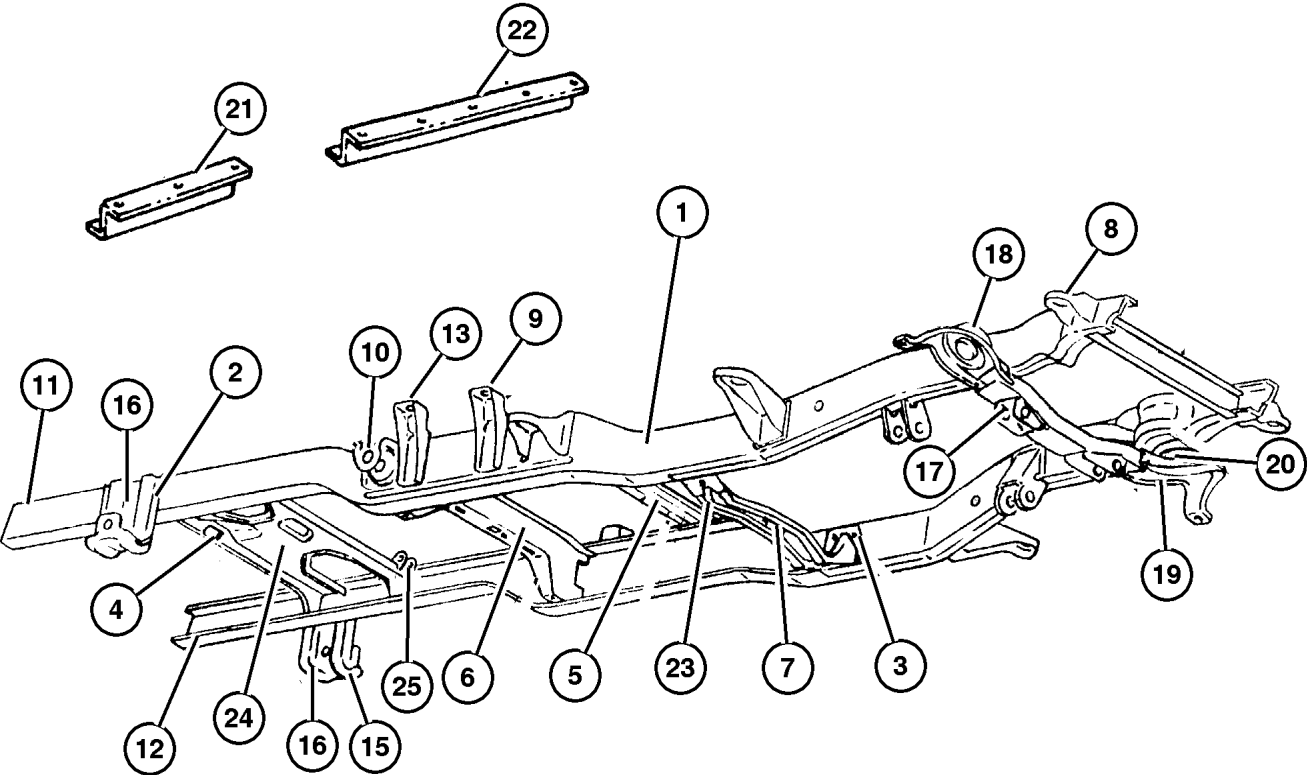September 16, 2005



Bumper, Front
Figure 013-230

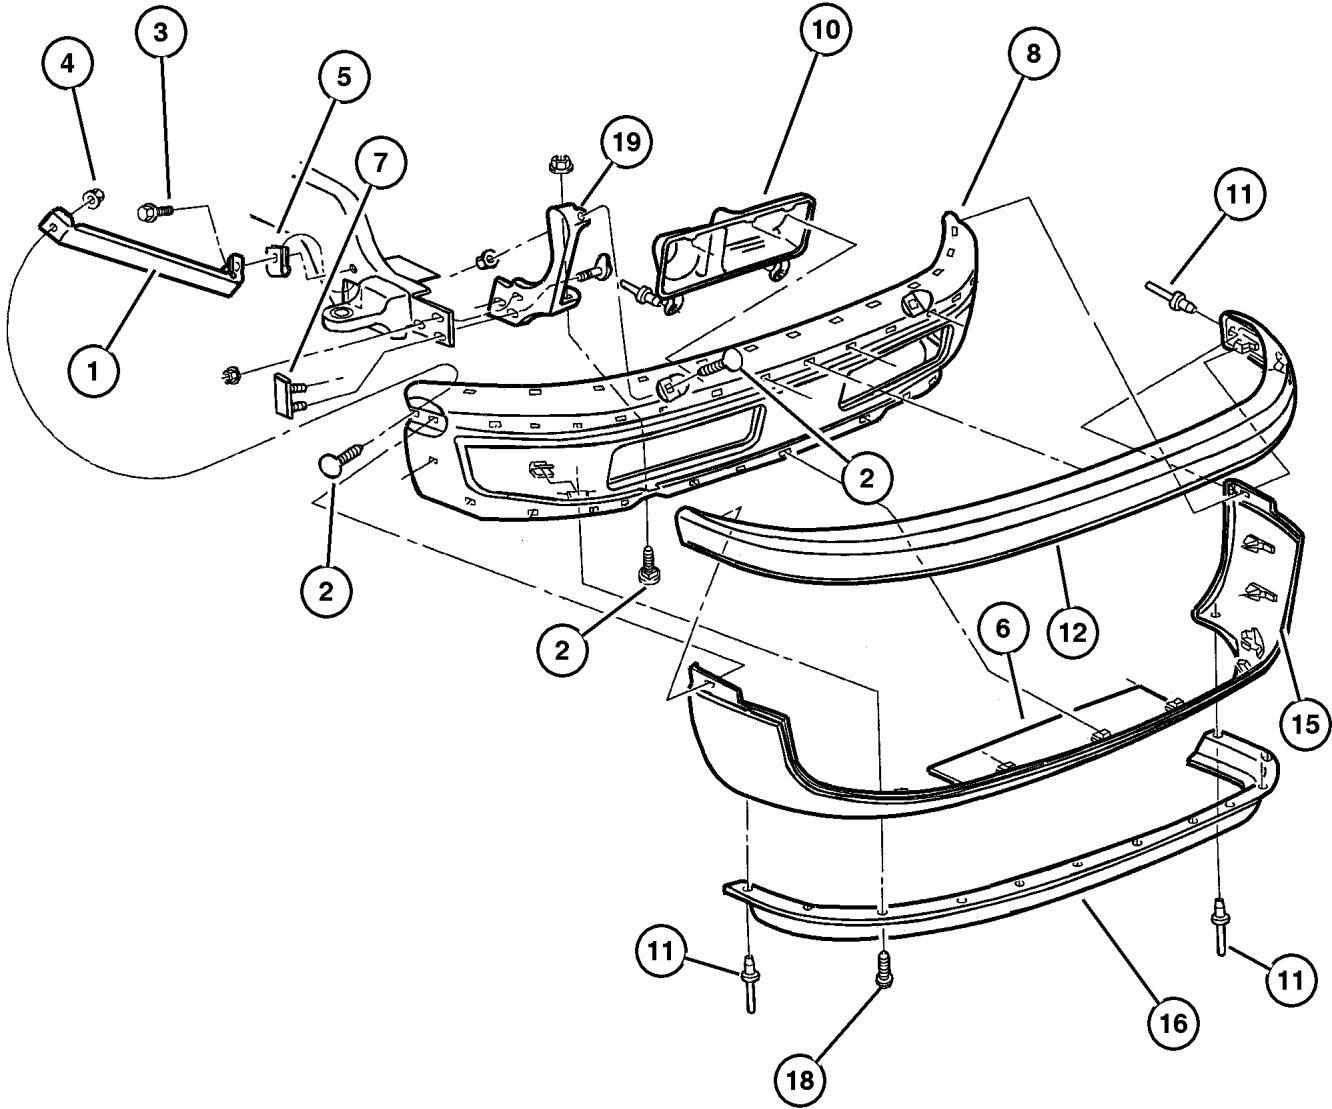


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									BRACKET, Front Bumper
	5523 4724	1							Right
	5523 4725	1							Left
2									BOLT, Bumper to Bracket, (NOT SERVICED) (Not Serviced)
3									SCREW, (NOT SERVICED) (Not Serviced)
4									NUT, (NOT SERVICED) (Not Serviced)
5									NUT, (NOT SERVICED) (Not Serviced)
6	5523 5115	1							SEAL, Radiator
7	6506 236AA	2							BOLT, M12x1.75x40
8	55076 599AD	1							BUMPER, Front
-9	55295 455AB-	1							BRACKET, License Plate
10									SHIELD, Bumper
	55076 786AB	1							w/o Sports Package w/Fog Lamps, Right
	55076 787AB	1							w/o Sports Package w/Fog Lamps, Left
	5507 6600	1							w/o Sports Package w/o Fog Lamps, Right
	5507 6601	1							w/o Sports Package w/o Fog Lamps, Left
11	6503 938	4							RIVET, Blind, .25xM4/M7
12	55076 610AB	1							FASCIA, Front, Valance to (For Square Holes Bumper, Upper
-13	6033 018	2							FASTENER, Hood Silencer
-14	6503 698	5							SCREW AND WASHER, Truss Head, M6-1.00x30.00
15	55076 614AB	1							FASCIA, Front
16									AIR DAM
	5527 4811	1							Air
	55077 350AA	1							with Tow Hooks [XEA]
-17	3420 1631	18							RIVET, M6.25x28 Black
18	6503 698	5							SCREW AND WASHER, Truss Head, M6-1.00x30.00
19									BRACKET, Front Bumper
	55076 778AB	1							Right
	55076 779AB	1							Left

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

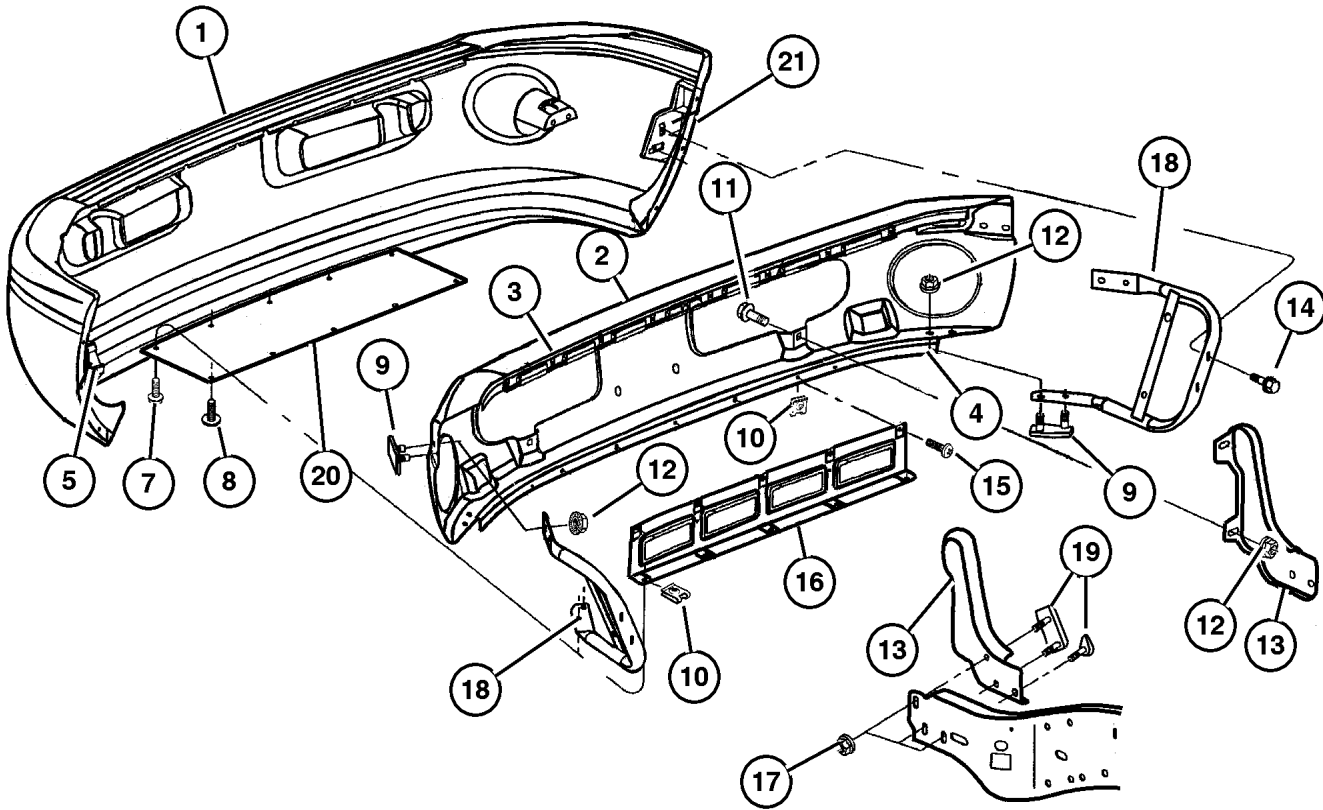Bumper, Front, Sport
Figure 013-235



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									FASCIA, Front, Primed
	5013 818AD	1							without Tow Hooks
	5016 301AA	1							with Tow Hooks
2	55077 011AB	1							BEAM, Front Bumper
3	55077 012AB	1							STRIP, Front Fascia, Black
4	6101 402	8							SCREW, Pan Head, M5x.80x125
5									NUT, Hex, .42-14, (NOT SERVICED)
									(Not Serviced)
-6	56021 863AB-	1							WIRING, Fog Lamp Jumper
7	6503 698	5							SCREW AND WASHER, Truss
									Head, M6-1.00x30.00
8	6503 221	4							PIN
9	6504 394	4							BOLT AND RETAINER, M12X1.
									75X35.00
10	6504 118	5							U-NUT, M6 x 1.00, M6x1.00
11	6504 790	6							BOLT, Square Neck, M12x1.75x30.5
12									NUT, U, M6x1, (NOT SERVICED)
									(Not Serviced)
13									BRACKET, Front Bumper
	55077 022AB	1							Right
	55077 023AB	1							Left
14	6503 259	6							SCREW, Tapping, M6x1x20
15									SCREW, Pan Head, M8x1.25x35,
									(NOT SERVICED) (Not Serviced)
16	55077 019AB	1							SUPPORT, Front Fascia
17	6502 697	8							NUT, Hex Flange Lock, M12x1.75
18									BRACKET, Front Bumper
	55077 014AB	1							Right
	55077 015AB	1							Left
19	6504 931AA	2							BOLT AND RETAINER, M12X1.
									75X32.50
20	55076 970AC	1							PANEL, Front Faccia
21									BRACKET, Front Bumper
	55076 972AC	1							Right
	55076 973AC	1							Left
-22									FOAM, Front Bumper Fascia
	55077 150AB-	1							Right
	55077 151AA-	2							Left
-23	55077 064AB-	1							BRACKET, License Plate

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Rear Bumper and Licence Plate Attaching
Figure 013-310

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									BUMPER, Rear
	55076 634AD	1							
	5FG80 DX8AE	1							(X8)
	5FG80 GW7AE	1							(W7)
	5FG80 PR4AE	1							(R4)
	5FG80 SG8AE	1							(G8)
	5FG80 VB3AE	1							(B3)
	5FG80 VYHAE	1							(YH)
2	5527 4863	2							BRACKET, Rear Bumper
3	6504 394	4							BOLT AND RETAINER, M12X1. 75X35.00
4	6505 099AA	8							NUT, Hex Flange Lock, M12x1.75
5									BRACKET, Rear Bumper Side
	5527 4868	1							Right
	5527 4869	1							Left
6	6504 122	2							BOLT, m12x1.75x35.00
7	6100 055	6							NUT AND WASHER, Hex Nut-Coned
									Washer, M12 x 1.75
8	6504 395	2							BOLT AND RETAINER, M12X1. 75X35.00
9									BRACKET, License Plate, (NOT SERVICED) (Not Serviced)
10	6027 958	2							NUT, Snap In, .25
11									SCREW, (NOT SERVICED) (Not Serviced)
12									STEP PAD, Rear Bumper
	5503 4460	1							Right
	5503 4461	1							Left
-13	5507 6850	AR							PANEL, License Plate


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Body Hold Down And Front End Mounting
 Figure 013-520

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	5527 4855	6							CUSHION, Body Hold Down, Load
2	5527 4857	2							CUSHION, Body Hold Down
3	5527 4828	6							CUSHION, Body Hold Down
-4	5527 4831	8							INSULATOR, Body Hold Down
5	6501 557	8							BOLT, Hex Flange Head, M12x1. 75x95.50

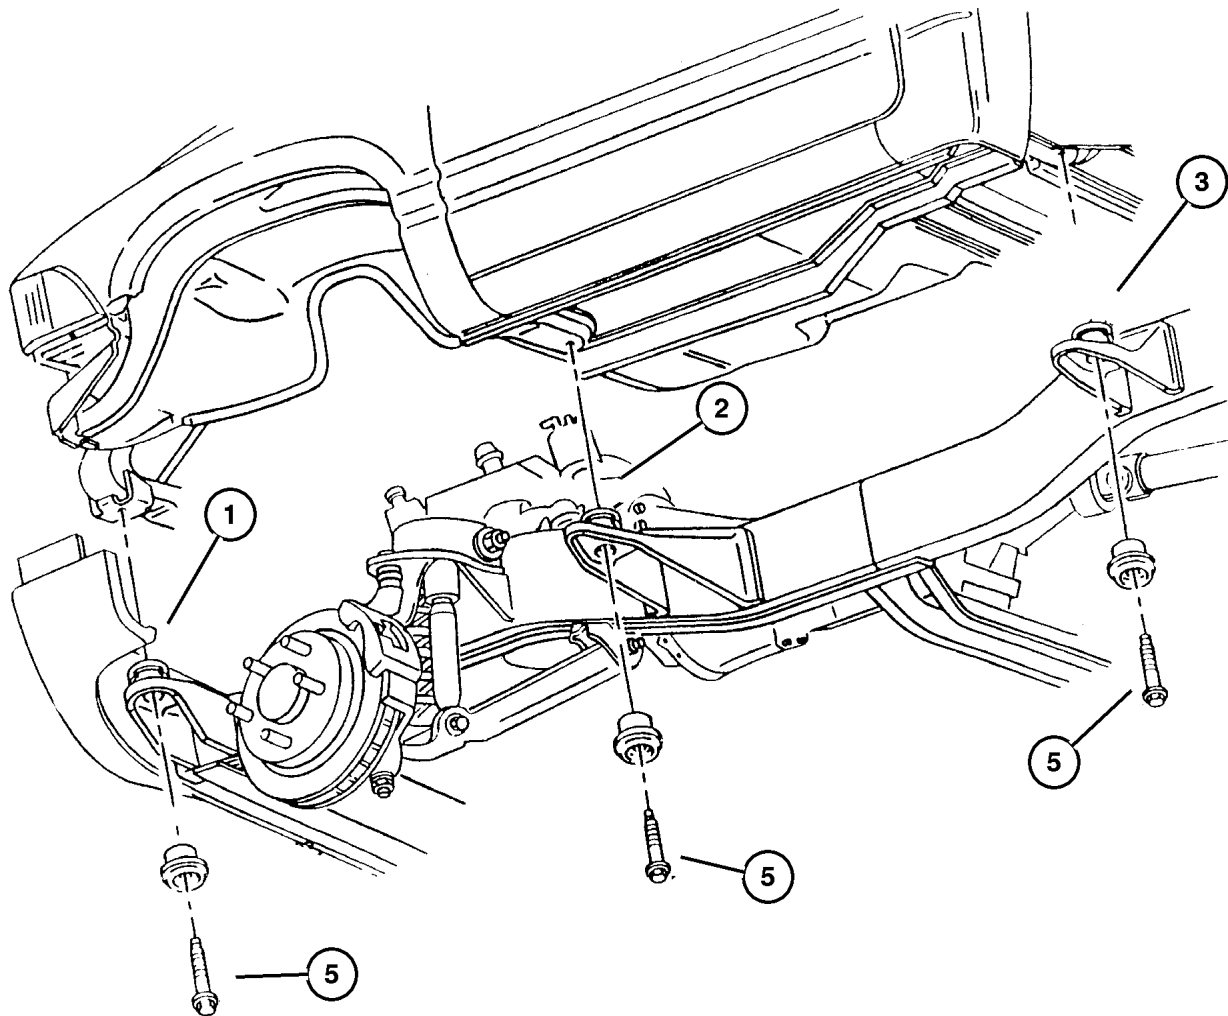


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Rear Hitch Figure 013-610

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	8220 7492	1		L					RECEIVER KIT, Trailer Tow
2	6503 252	6							BOLT, Hex Flange Head, M12x1.75x45
3	6026 430	6							NUT, Push
4	6100 055	6							NUT AND WASHER, Hex Nut-Coned Washer, M12 x 1.75

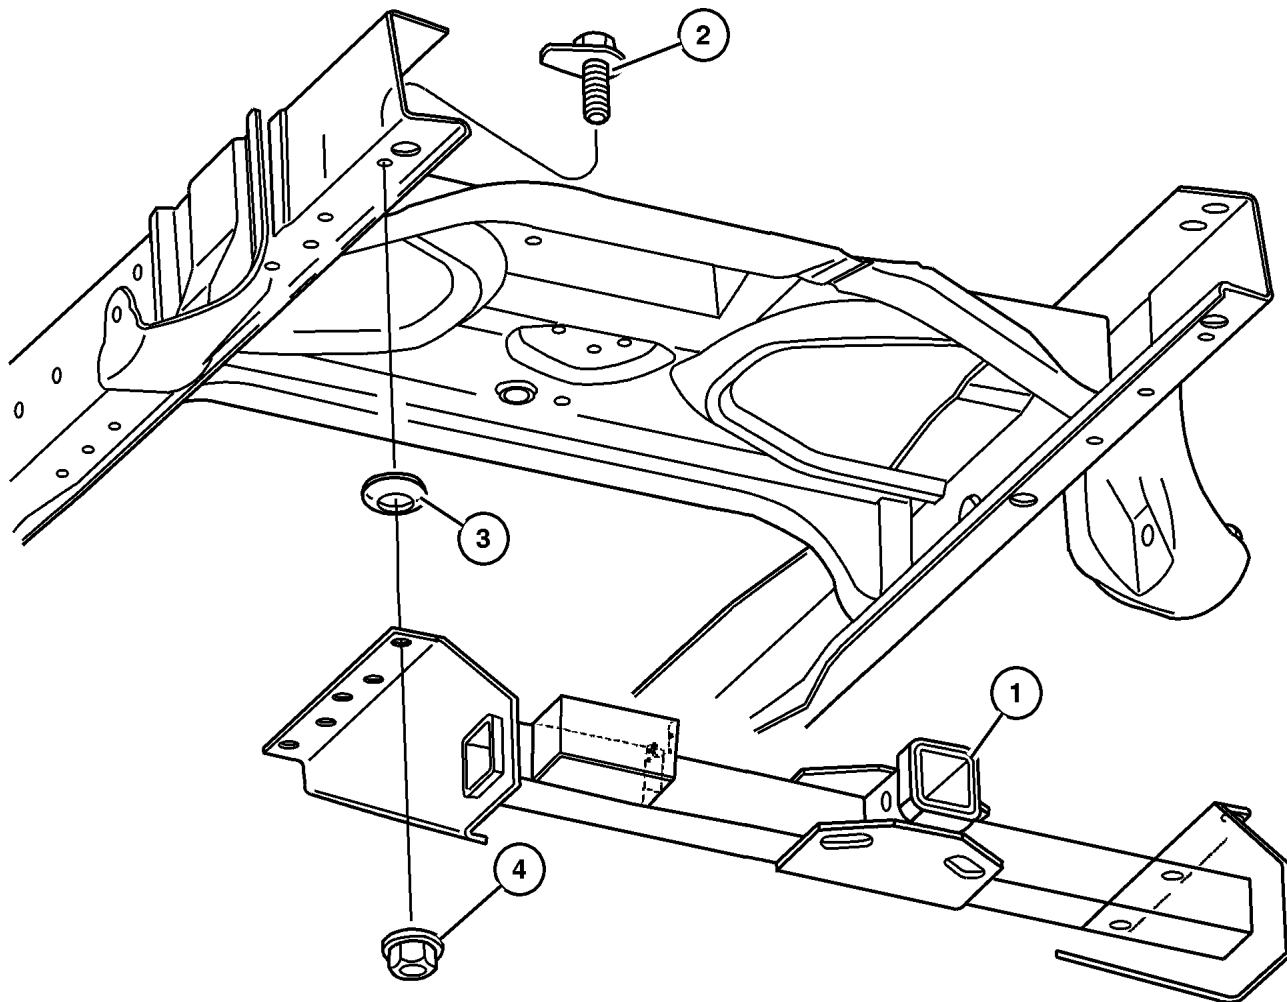


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Group – 014

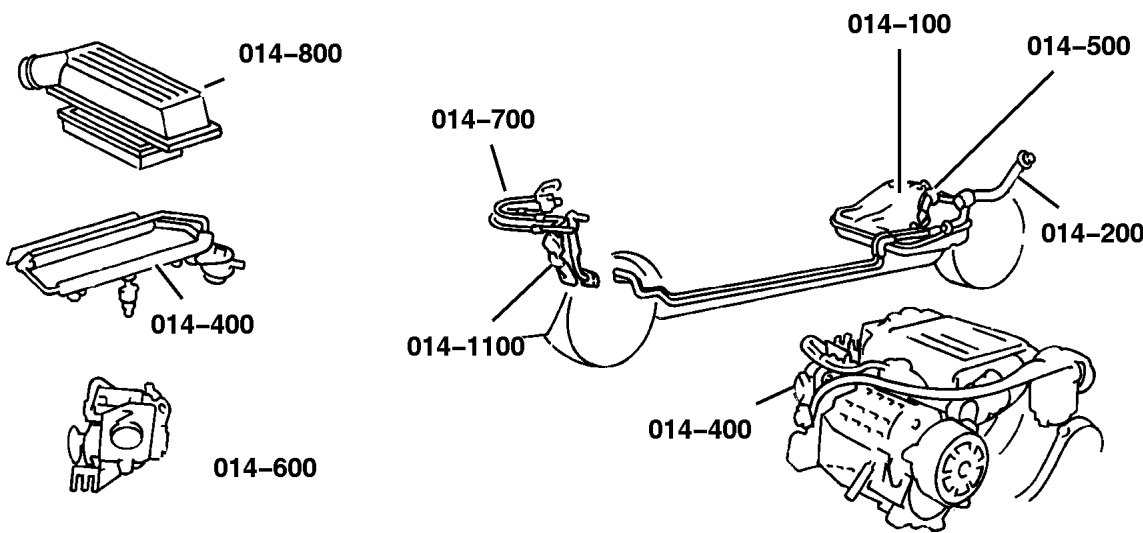Fuel



Group – 014

Fuel


014-900 Air Intake System	014-1000 Speed Control	014-1100 Accelerator Pedal	

014-100 Tank, Fuel	014-200 Fuel Tank Filler Tube	014-300 Fuel Lines	014-400 Fuel Rail
014-500 Fuel Pump and Sending Unit	014-600 Throttle Body	014-700 Throttle Controls	014-800 Air Cleaner

GROUP 14 - Fuel		GROUP 14 - Fuel	
Illustration Title	Group-Fig. No.	Illustration Title	Group-Fig. No.
Tank, Fuel		Accelerator Pedal	
Fuel Tank 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine	Fig. 014-132	Accelerator Pedal 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine	Fig. 014-1120
Fuel Tank Filler Tube			
Fuel Filler Tube 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine	Fig. 014-242		
Fuel Lines			
Fuel Lines, Front 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 8.0L (EWA) Engine	Fig. 014-315		
Fuel Lines, Rear 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 8.0L (EWA) Engine (ETC, ETH) Diesel Engine ngine	Fig. 014-325		
Fuel Lines 5.9L (ETC,ETH) Diesel Engine	Fig. 014-335		
Fuel Injector 5.9L (ETC,ETH) Diesel Engine	Fig. 014-345		
Air Fuel Control and Fuel Filter 5.9L (ETC,ETH) Diesel Engine	Fig. 014-365		
Fuel Rail			
Fuel Rail 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 8.0L (EWA) Engine	Fig. 014-430		
Fuel Pump and Sending Unit			
Fuel Module 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine	Fig. 014-525		
Fuel Injection Pump 5.9L (ETC,ETH) Diesel Engine	Fig. 014-535		
Fuel Accessories 5.9L (ETC,ETH) Diesel Engine	Fig. 014-550		
Fuel Pump Transfer Conversion	Fig. 014-555		
Throttle Body			
Throttle Body 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 8.0L (EWA) Engine	Fig. 014-630		
Turbocharger 5.9L (ETC,ETH) Diesel Engine	Fig. 014-650		
Throttle Controls			
Throttle Controls 5.2L (ELF), 5.9 (EML), 5.9L (EMM), 8.0L (EWA) Engine	Fig. 014-730		
Throttle Controls 5.9L (ETC,ETH) Diesel Engine	Fig. 014-750		
Air Cleaner			
Air Cleaner 5.2L (ELF), 5.9L (EML) Engine	Fig. 014-825		
Air Cleaner 5.9L (EMM) Engine	Fig. 014-827		
Air Cleaner 8.0L (EWA) Engine	Fig. 014-830		
Air Cleaner 5.9L (ETC,ETH) Diesel Engine	Fig. 014-840		
Air Intake System			
Air Intake System 5.2L (ELF), 5.9L (EML), 5.9L (EMM) Engine	Fig. 014-920		
Air Intake System 8.0L (EWA) Engine	Fig. 014-930		
Air Intake System 5.9L (ETC,ETH) Diesel Engine	Fig. 014-935		
Charge Air Cooler System 5.9L (ETC,ETH) Diesel Engine	Fig. 014-945		
Speed Control			
Speed Control 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine	Fig. 014-1030		



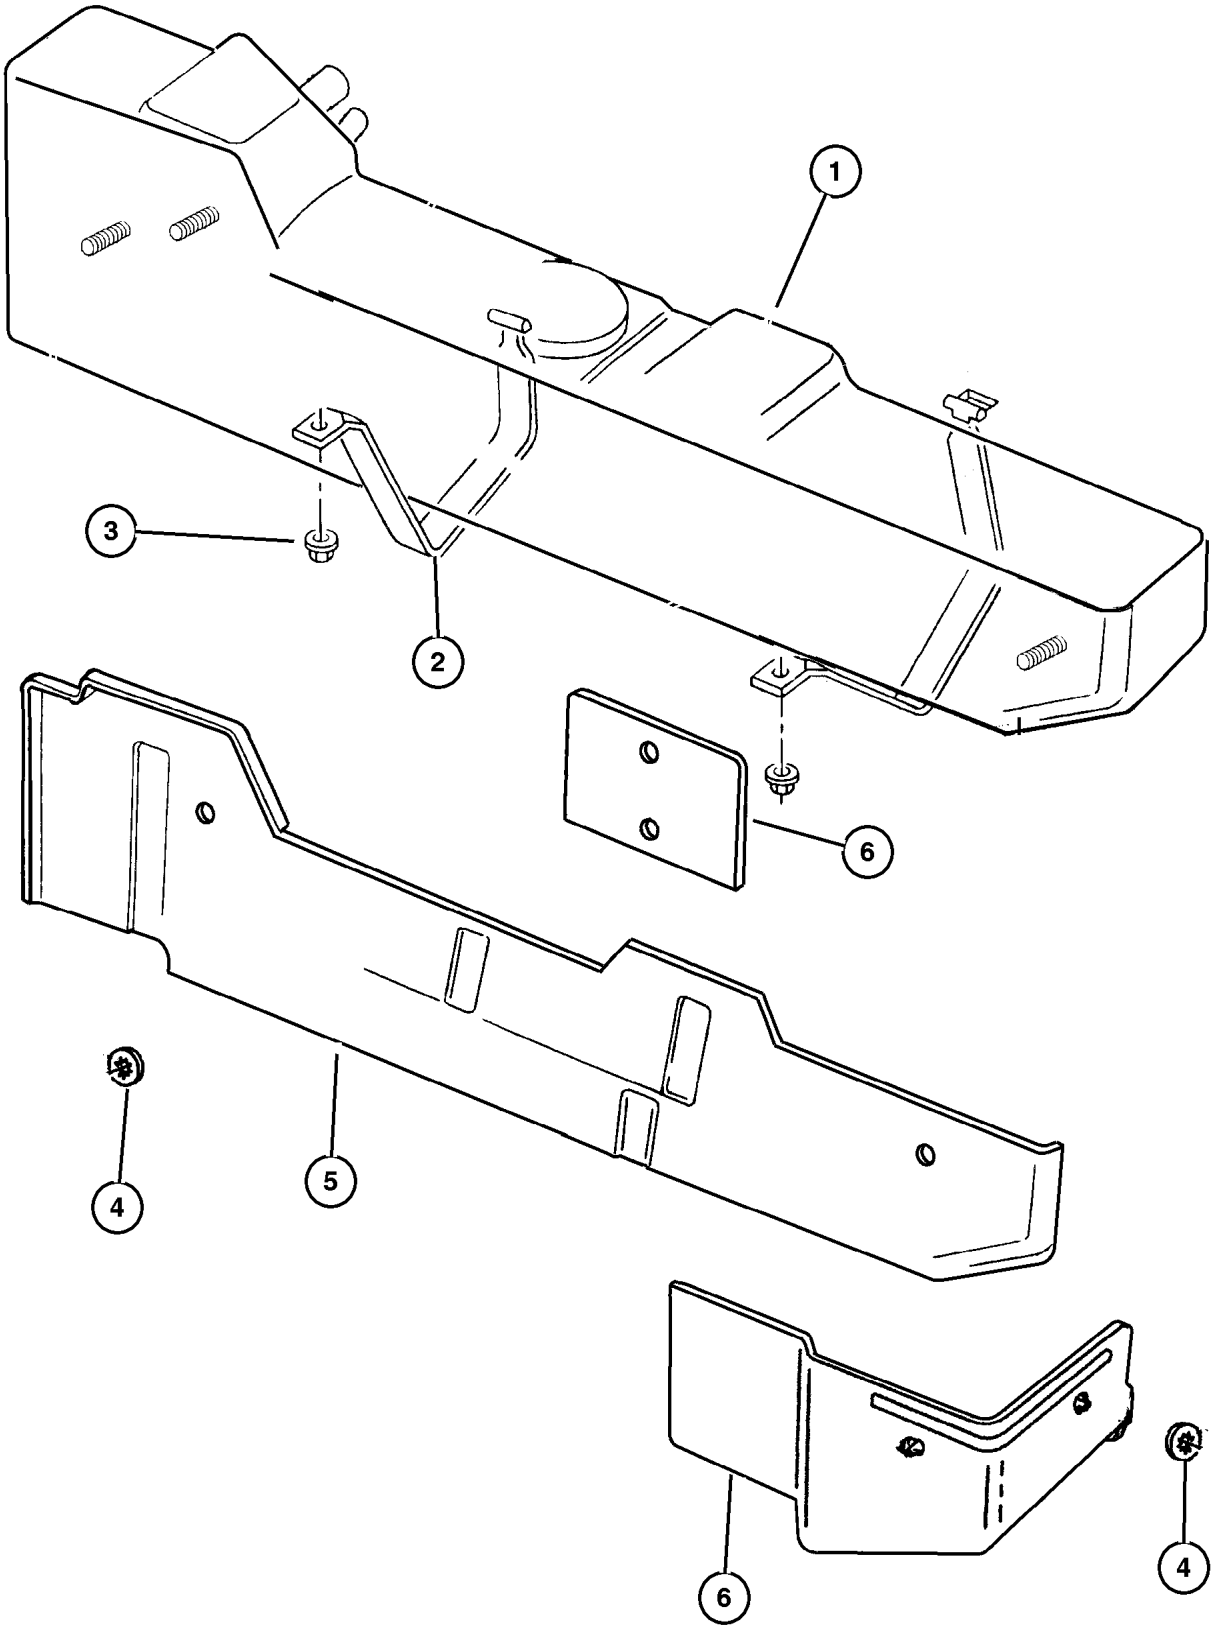Fuel Tank 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine
Figure 014-132




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note; ELO= All 5.2 Eng. EML,EMM= 5.9 Eng. ETO= All 5.9 Diesel Eng. EWO= All 8.0 Eng.									
1									TANK, Fuel
	52102 072AC	1				ELO, EML			26 Gallon
	52102 076AC	1				ELO, EMO,			35 Gallon
	52102 080AC	1				EWO			35 Gallon
	52102 238AF	1				ETO			34 Gallon
	52102 241AC	1				EMO,			34 Gallon
						EWO			
2									STRAP, Fuel Tank
	52102 058AC	1							Front
	5210 2059	1							Rear
3	6502 337	2							NUT, M10x1.5
4	J400 0235	4				EMM, EWO			NUT, Push, .375
5									SHIELD, Fuel Tank
	5210 2317	1			32, 34	ELO, EMO, EWO			35 Gallon
	5210 2318	1	1, 6		31, 33	ELO,			26 Gallon
	5210 2321	1				EML EMO, EWO			[Side]
	5210 2316	1				EMO,			[Front]
						EWO			
6	5210 2422	1	2, 3, 7, 8		32, 34	EMM, EWO			SHIELD, Heat
-7	52102 441AA-	1	6		31, 33				SKID PLATE, Fuel Tank, With Sales Code XEE

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, ELO = 5.2L 8 Cil. ETC, ETO, ETH = 5.9L 6 Cil. EML, EMM,EMO = 5.9L 8 Cil. EWA, EWO = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DGO = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DDO = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

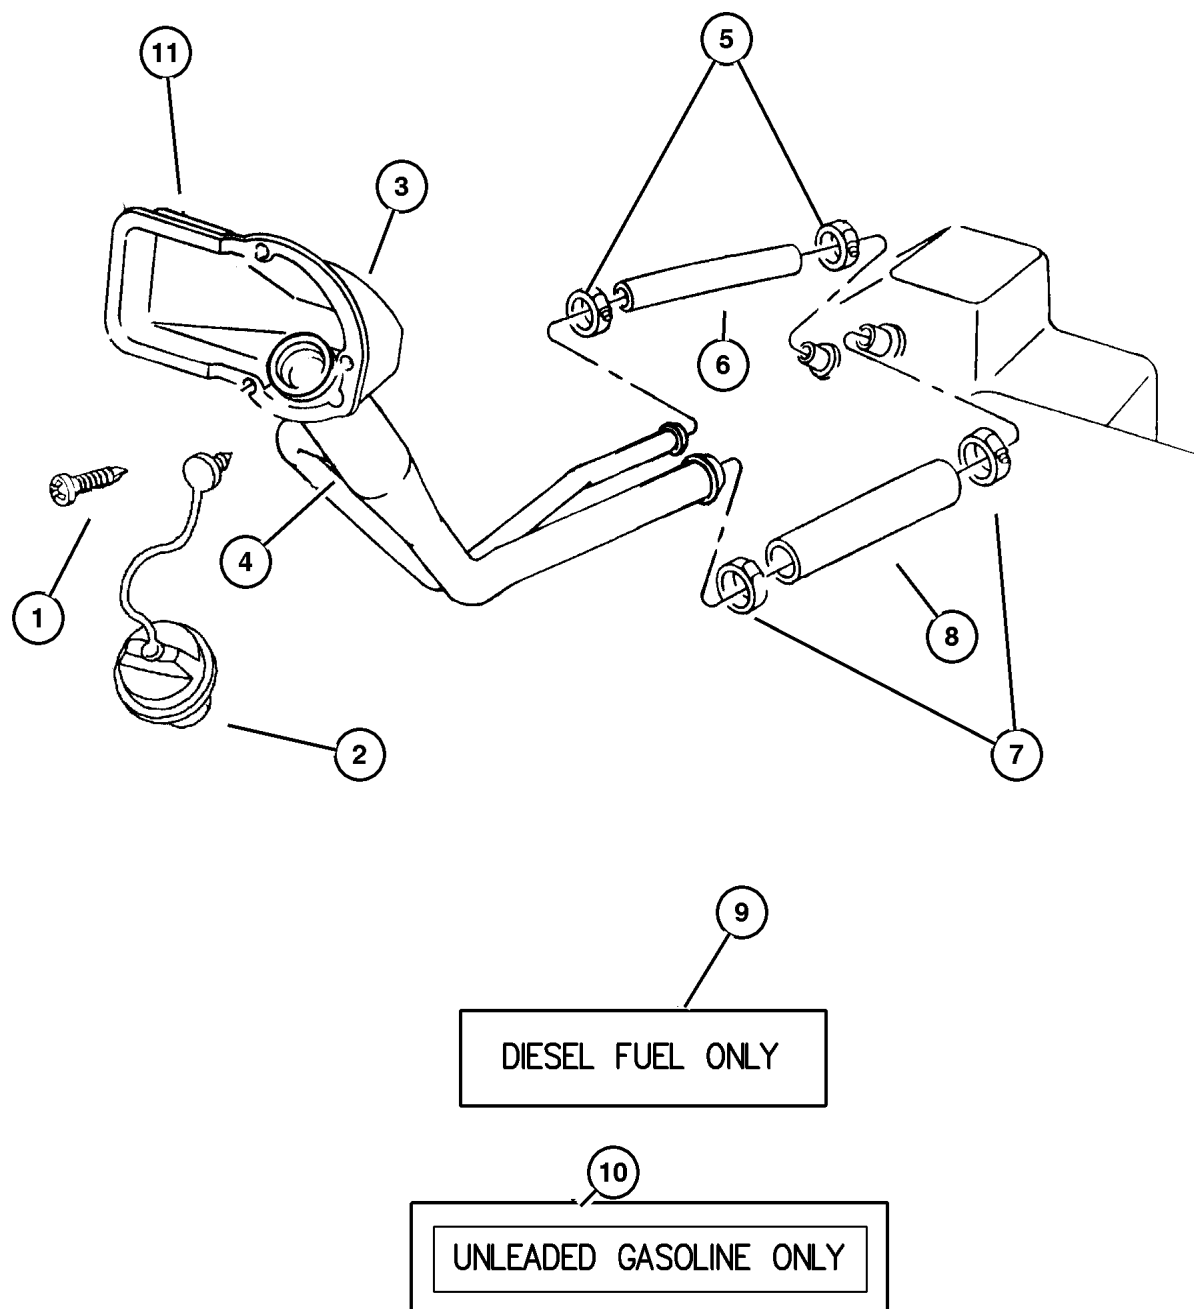**Fuel Filler Tube 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine
Figure 014-242**



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note;									
ELO = All 5.2L 8 Cyl Gas Engines									
EM0 = All 5.9L 8 Cyl Gas Engines									
ET0 = All 5.9L Turbo Diesel Engines									
EW0 = All 8.0L Gas Engines									
1									SCREW, .190-16x1.00, (NOT SERVICED) (Not Serviced)
2	5278 632AA	1							CAP, Fuel Filler
3									HOUSING, Fuel Filler
	52102 142AB	1	3, 8		34	EM0, EW0			Federal, California, w/Dual Wheels
		1	1, 2, 6, 7			ELO, EM0,			Leaded Fuel, w/o Dual Wheels
		1	2, 7			EW0 ET0			
		1	1, 2, 6, 7			ELO, EM0,			Federal, California, w/o Dual Wheels
		1	3, 8		34	EW0 ET0			
4									TUBE, Fuel Filler
	52102 491AA	1	1, 2, 6, 7			ELO,			Federal, California, w/o Dual Wheels
						EM0, EW0			
	52102 492AA	1	1, 2, 6, 7			ELO, EM0,			Leaded Fuel, w/o Dual Wheels
						EW0 ET0			
	52102 493AA	1	3, 8		34	ET0			
	52102 494AA	1	3, 8		34	EM0,			Federal, California, w/Dual Wheels
						EW0			
5	6505 321AA	2							CLAMP, Fuel Filler Pipe
6	52102 376AA	1							HOSE, Fuel Filler Vent
7	6504 998AA	2							CLAMP, Fuel Filler Pipe
8	52102 375AA	1							HOSE, Fuel Filler
9	4428 652	1				ET0			LABEL, Fuel
10	4206 059	1				ELF, EM0,			LABEL, Unleaded Fuel Only
						EW0			
11									GASKET, Filler Tube Housing

DODGE RAM QUAD CAB/CLUB CAB (BE)

L = Ram Truck (All)

LINE

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

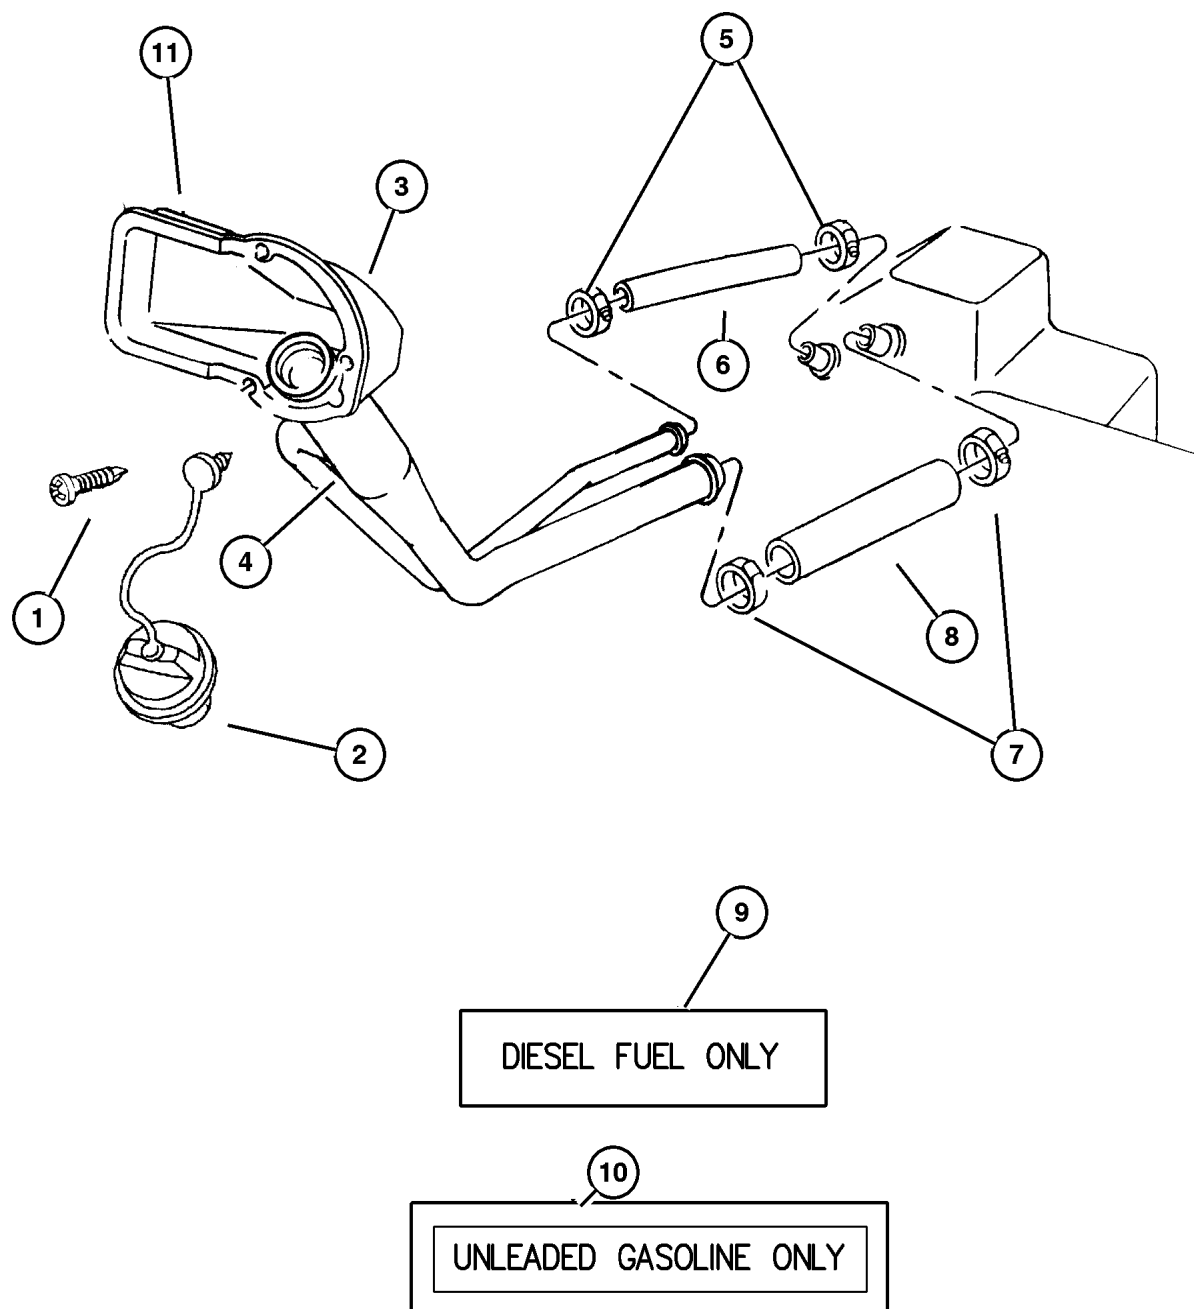
ENGINE

ELF, ELO = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

**Fuel Filler Tube 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine
Figure 014-242**

[illegible]

DODGE RAM QUAD CAB/CLUB CAB (BE)

L = Ram Truck (All)

LINE

1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

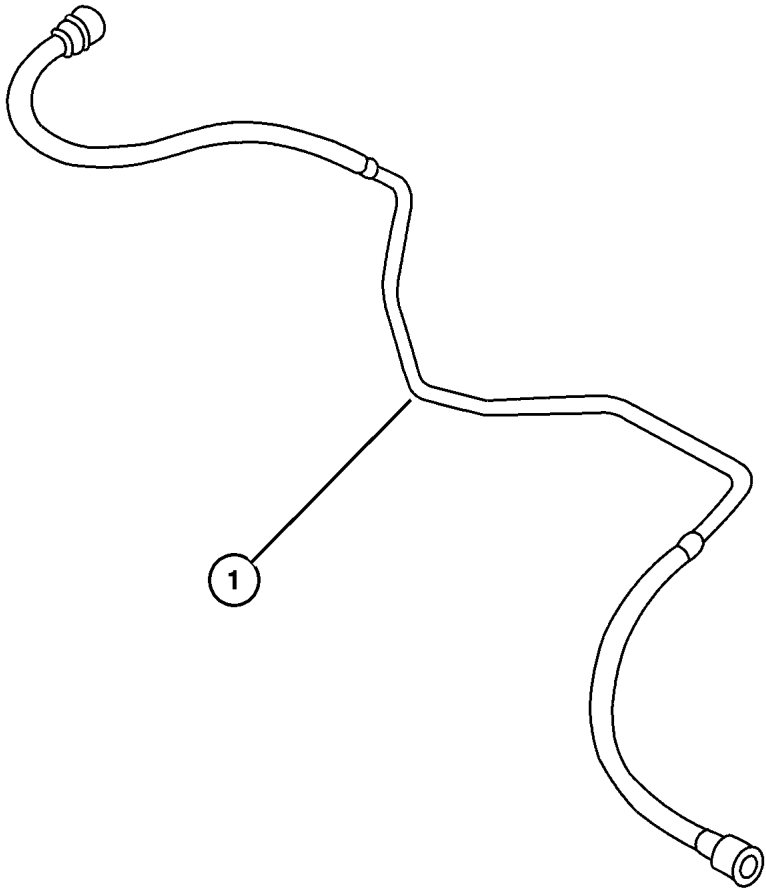
TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Fuel Lines, Front 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 8.0L (EWA) Engine
Figure 014-315



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; ELO= All 5.2 Eng.
EMO= All 5.9 Eng.
EWO= All 8.0 Eng.


1									BUNDLE, Fuel Line
	52127 819AD	1				ELO, EMO			
	52127 820AE	1				EWO			

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, ELO = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

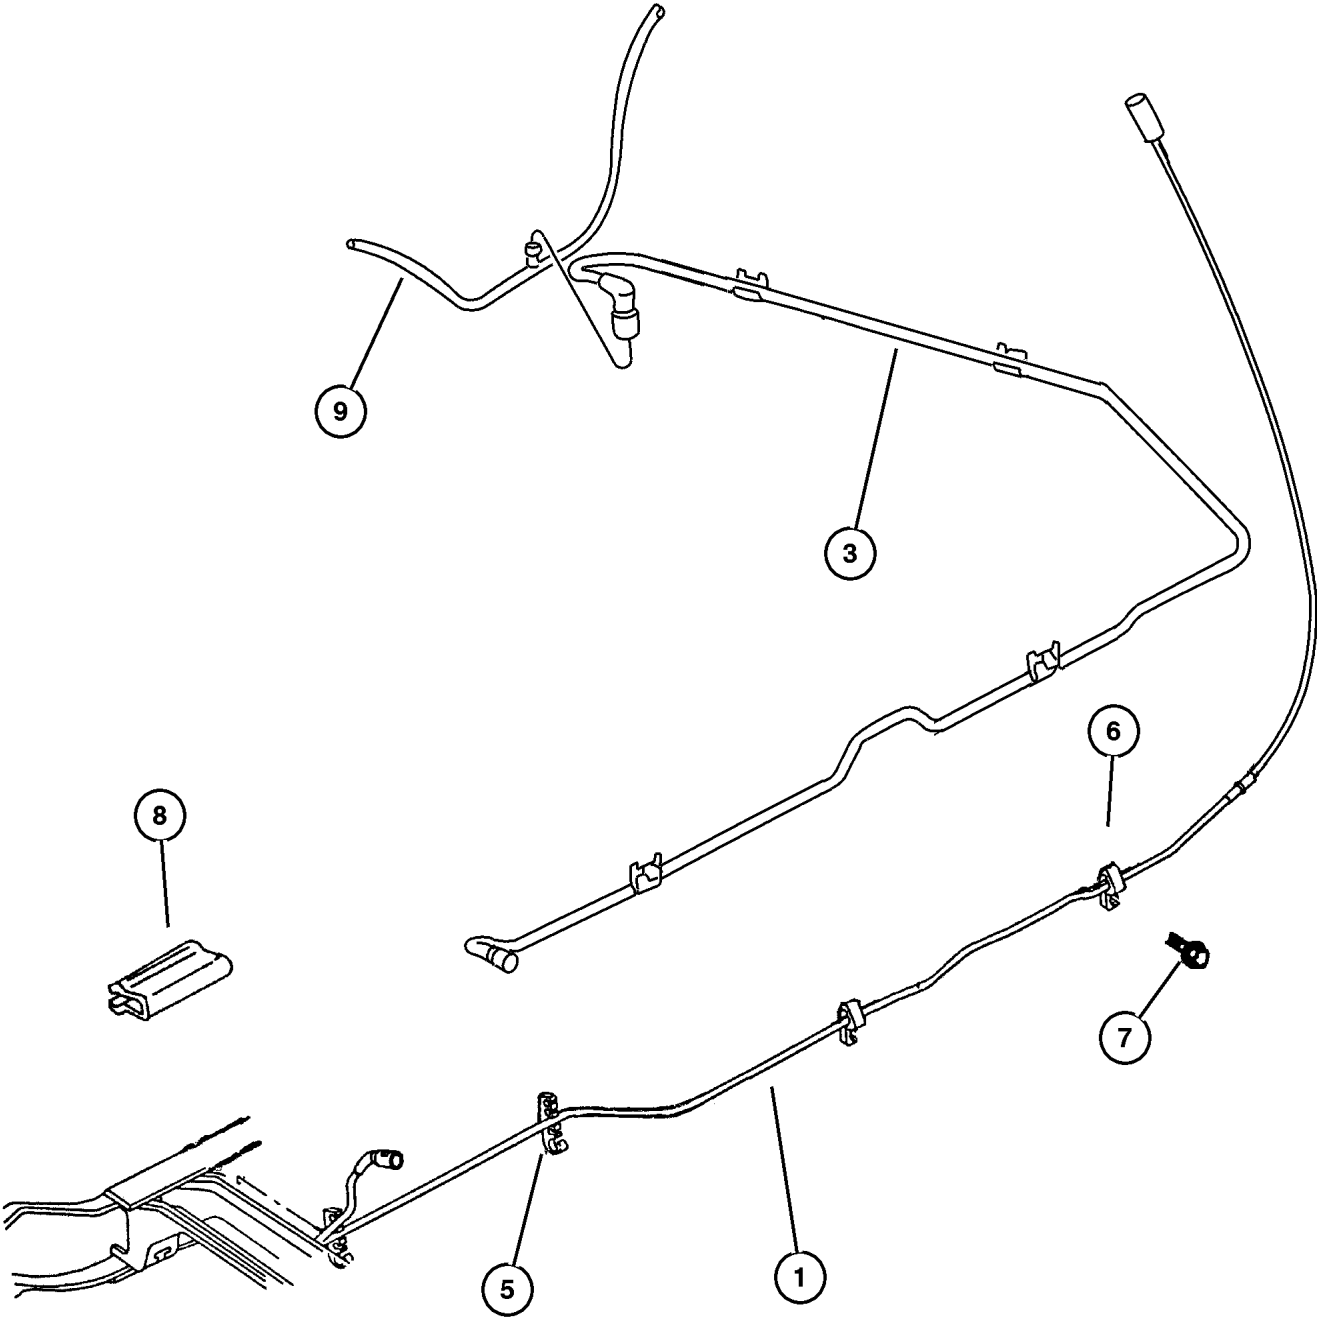Fuel Lines, Rear 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 8.0L (EWA) Engine (ETC, ETH) Diesel Engine ngine
Figure 014-325



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:
ELF = Magnum 5.2L SMPI V8 Engine
ELO = All 5.2L 8 Cyl Gas Engines
EML = Magnum 5.9L SMPI V8 Engine
EM0 = All 5.9L 8 Cyl Gas Engines
ET0 = All 5.9L Turbo Diesel Engines
EW0 = All 8.0L Gas Engines


1	5210 2314	1	2, 3, 7, 8		34	ET0			TUBE, Fuel Supply
	5210 2322	1	2, 7		33	ET0			Supply
-2	52102 300AC-	1	1, 2, 6, 7		31, 33	EL0, EM0,			BUNDLE, Fuel Line Without [AWL]
	52102 302AC-	1			34	EW0, EL0, EM0, EW0			
	52102 690AA-	1	6		31, 33	EL0, EM0, EW0			With [AWL]
3	52102 315AB	1	2, 3, 7, 8		34	ET0			TUBE, Fuel Return
	52102 323AB	1	2, 7		33	ET0			Return
-4	52102 294AB-	1	1, 2, 6, 7		31, 33	EL0, EM0, EW0			TUBE, Fuel Vapor
	52102 303AB-	1			34	EL0, EM0, EW0			Federal
		1			34	ELF, EML, EMM, EW0			California
	52102 474AA-	1			34	EMM, EW0			California
5	5210 2003	2	1, 2, 6, 7		31, 33	EL0, EM0, EW0			CLIP, Fuel
		4	2, 7		33	ET0			

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

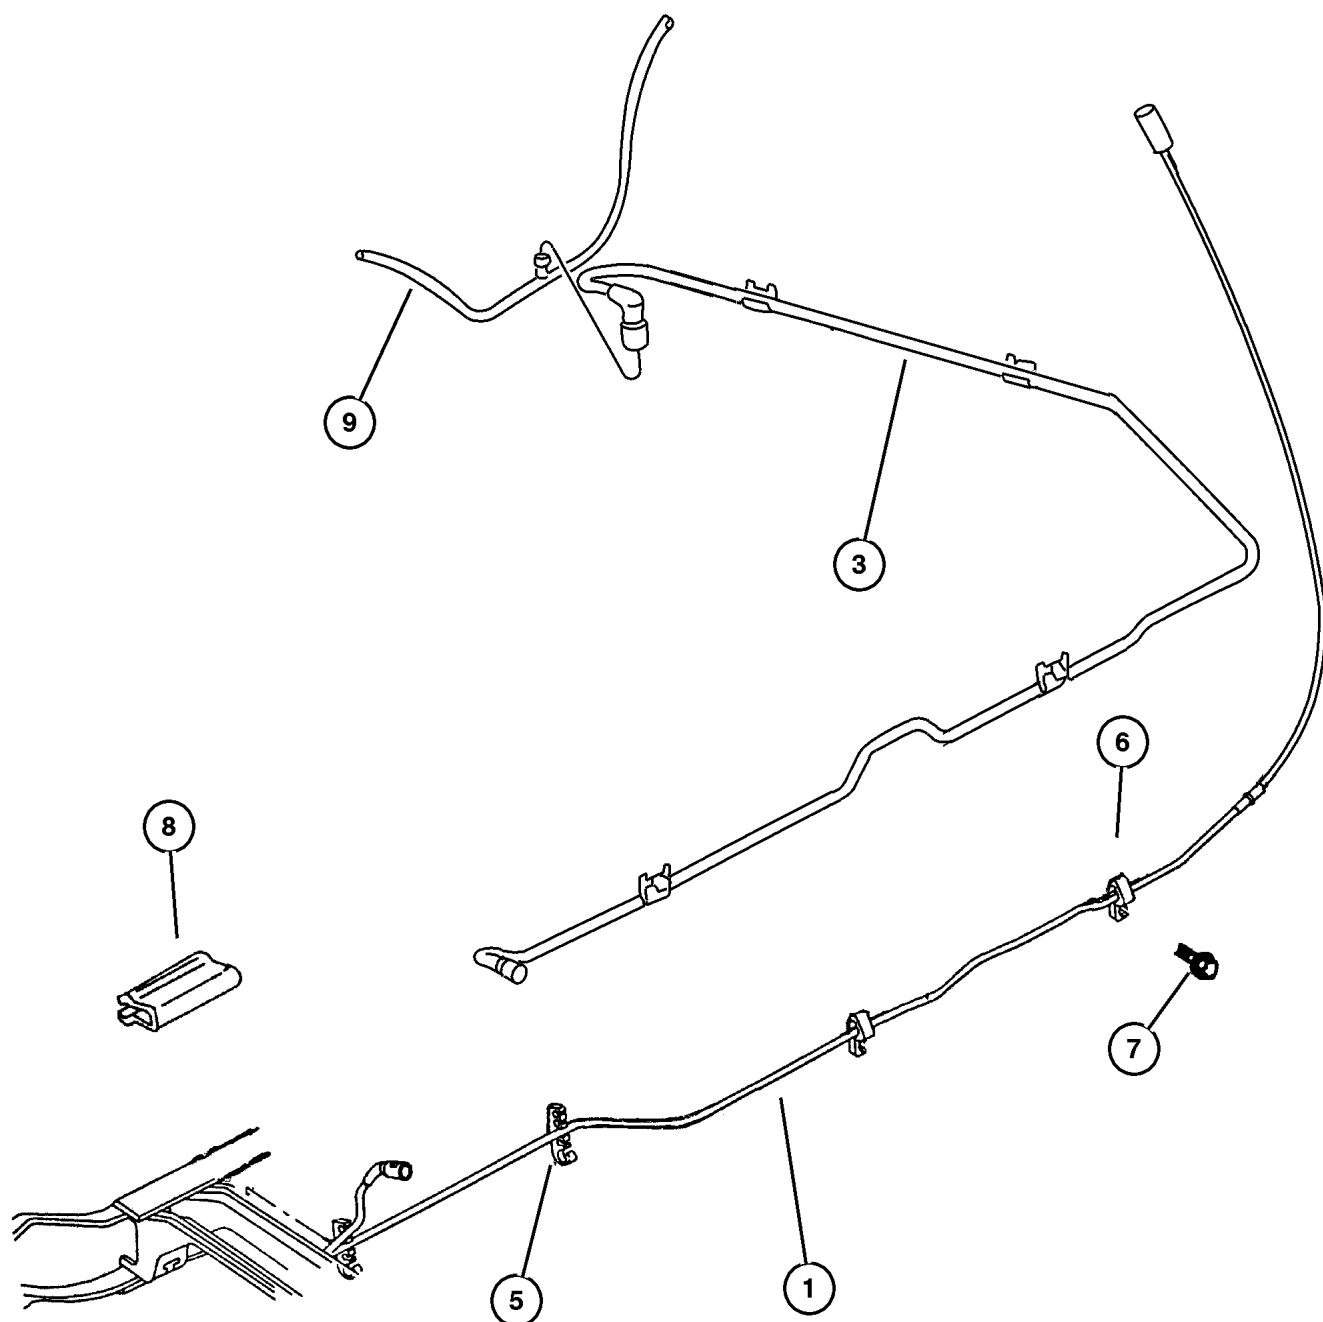Fuel Lines, Rear 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 8.0L (EWA) Engine (ETC, ETH) Diesel Engine
Figure 014-325

[illegible]

DODGE RAM QUAD CAB/CLUB CAB (BE)

L = Ram Truck (All)

LINE

$$1, 6 = 1500$$
 $2, 7 = 2500$
$$3, 8 = 3500$$

BODY

31 = Club Cab (138WB)

33 = QuadCab(138WB)

34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.

ETC, ET0, ETH = 5.9L 6 Cil.

EML, EMM, EMO = 5.9L 8 0

EWA, EW0 = 8.0L

EAA = All Engines
EAG = All Gas Engines

TRANSMISSION

DGP = 47RE 4 Speed Auto.

DGT, DG0 = 46RE 4 Speed Auto.

DDX, DDC = 5 Speed HD Mar

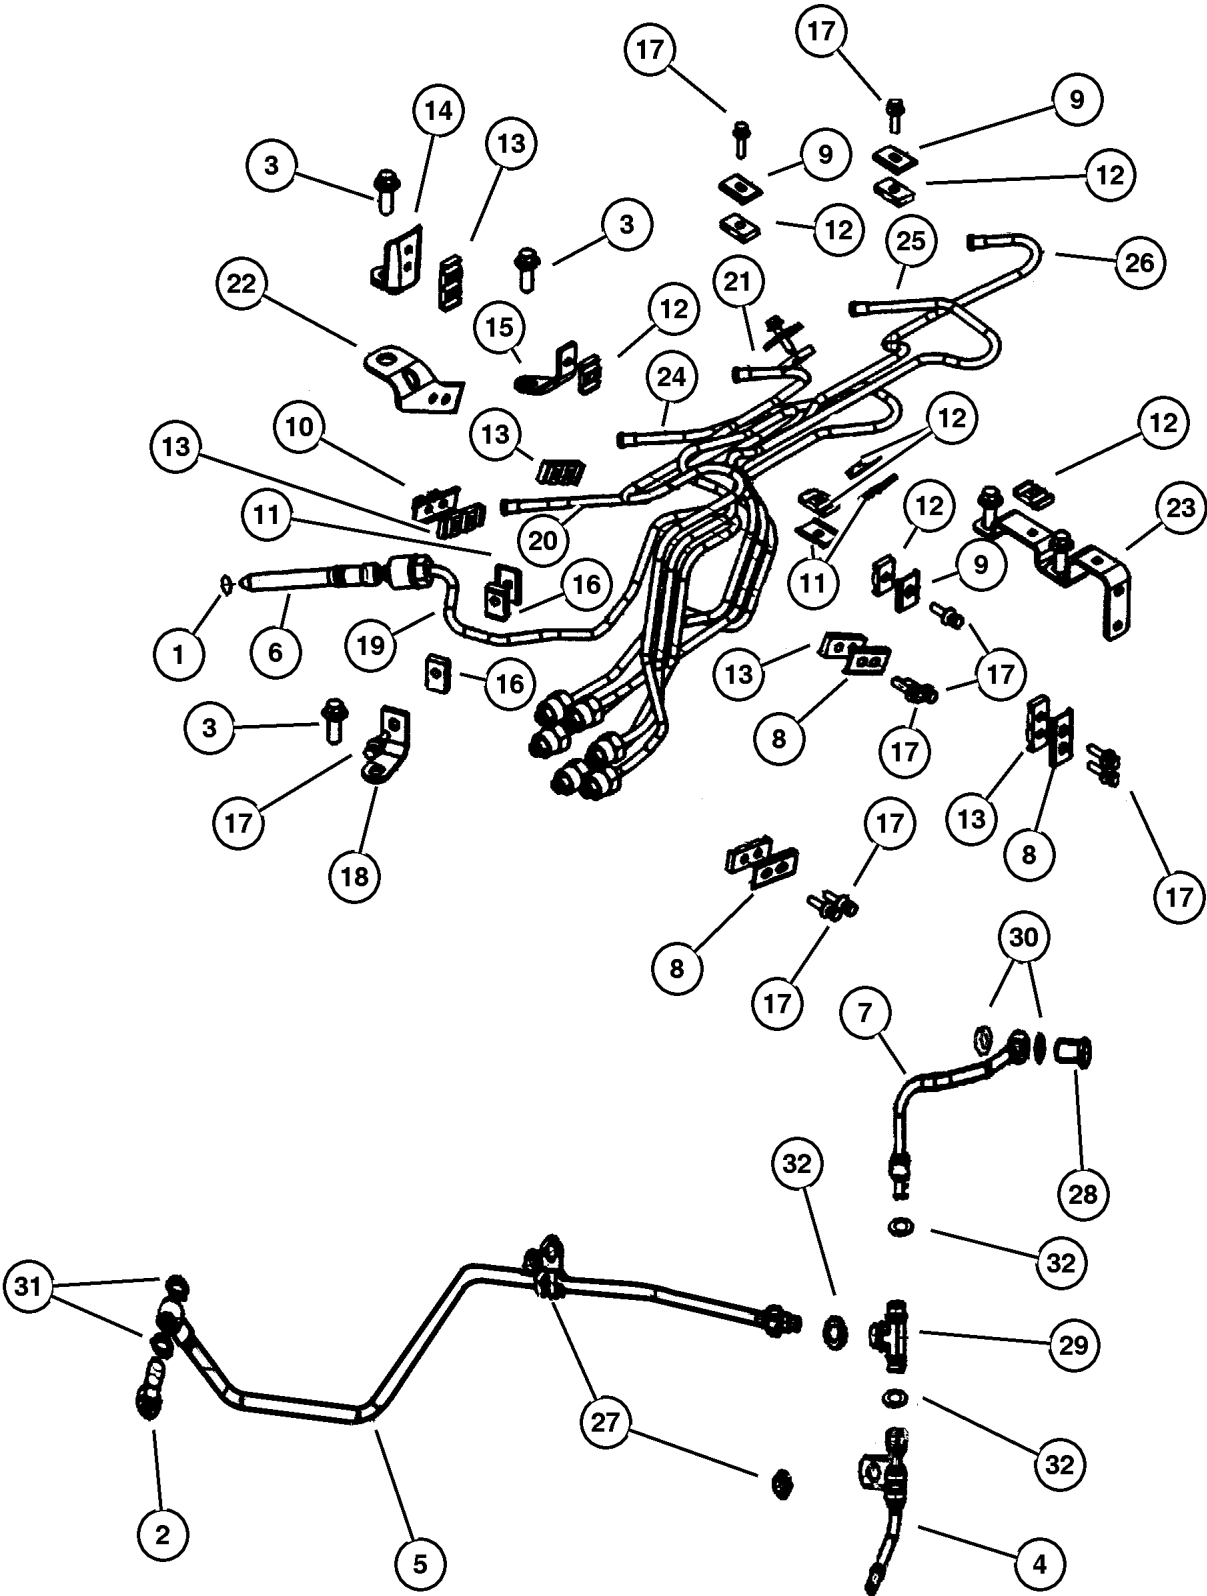
DDP, DD0 = 5 Speed Manual

DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Fuel Lines 5.9L (ETC,ETH) Diesel Engine
Figure 014-335



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note; ETC= 5.9 Diesel 24 Valve
ETH= 5.9 Diesel 24 Valve High Output
DBB= All Manual Trans.


1	5011 885AA	6				ETC			O RING, Fuel Injector
		6				ETH	DBB		
2	5011 824AA	1				ETC			CHECK VALVE, Fuel
		1				ETH	DBB		
3	4638 695	5				ETC			SCREW, Fuel Tube Cap
		4				ETH	DBB		
4	5011 826AA	1				ETC			TUBE, Fuel Return
		1				ETH	DBB		
5	5016 556AA	1				ETC			TUBE, Fuel Return
		1				ETH	DBB		
6	5013 856AA	6				ETC			CONNECTOR, Injector
		6				ETH	DBB		
7	5011 439AA	1				ETC			TUBE, Fuel Return
		1				ETH	DBB		
8	4429 519	3				ETC			BRACE, Fuel Tube
		1				ETH	DBB		
9	4762 019	2				ETC	DG0		BRACE, Fuel Tube
		2				ETH	DBB		
10	4740 354	1				ETC			BRACE, Fuel Tube
		1				ETH	DBB		
11	4762 021	3				ETC			BRACE, Fuel Tube
		2				ETH	DBB		
12	4762 022	8				ETC			ISOLATOR, Fuel Filter Vibration
		4				ETH	DBB		
13									ISOLATOR, Tube

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

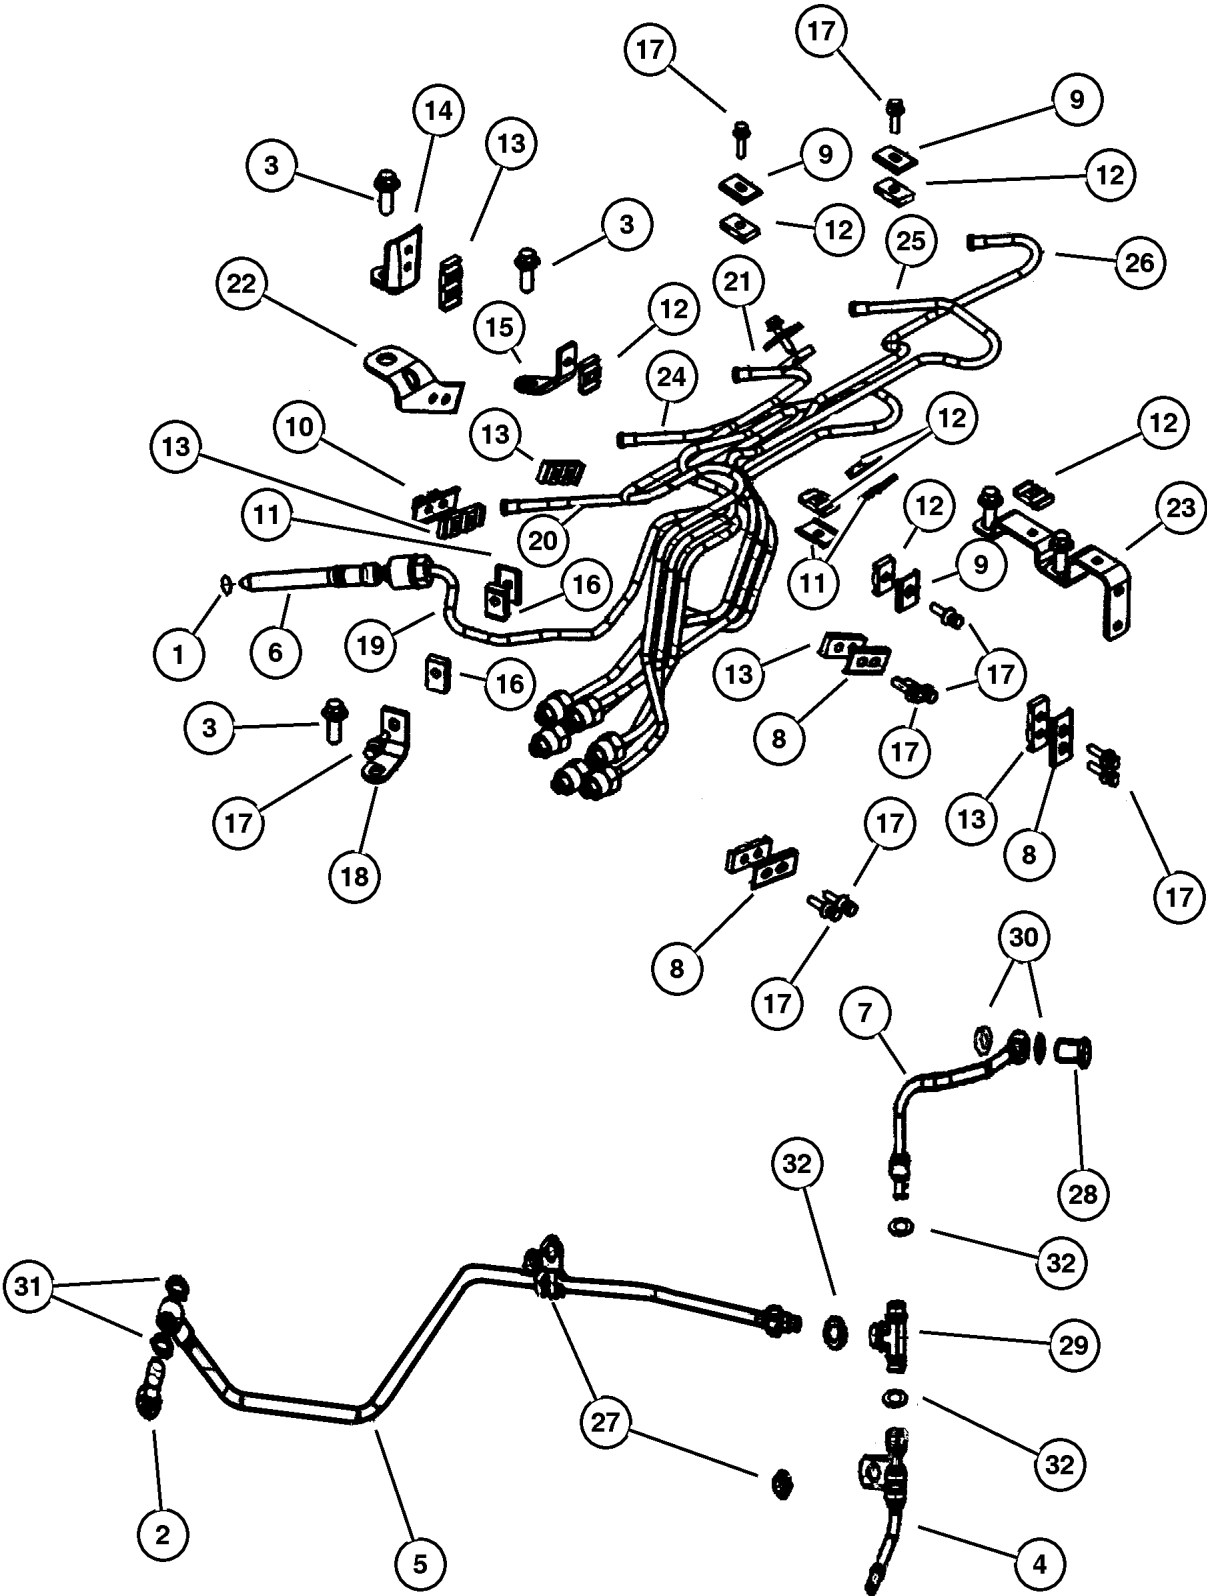Fuel Lines 5.9L (ETC,ETH) Diesel Engine
Figure 014-335




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4638 687	6				ETC			
14	5014 204AA	2				ETH	DBB		BRACE, Fuel Tube
		1				ETC			
15	5011 887AA	1				ETH	DBB		BRACE, Fuel Tube
		1				ETC			
16	5011 888AA	2				ETH	DBB		ISOLATOR, Tube
		2				ETC			
17	4761 708	11				ETH	DBB		SCREW, Fuel Tube Bracket
		7				ETC			
18	5011 889AA	1				ETH	DBB		BRACE, Fuel Tube
		1				ETC			
19	5011 457AA	1				ETH	DBB		TUBE, Fuel Injector Supply
		1				ETC			
20	5011 458AA	1				ETH	DBB		TUBE, Fuel Injector Supply
		1				ETC			
21	5011 460AA	1				ETH	DBB		TUBE, Fuel Injector Supply
		1				ETC			
22	5011 890AA	1				ETH	DBB		BRACE, Fuel Tube
		1				ETC			
23	5011 891AA	1				ETH	DBB		BRACE, Fuel Tube
		1				ETC			
24	5011 459AA	1				ETH	DBB		TUBE, Fuel Injector Supply
		1				ETC			
25	5011 461AA	1				ETH	DBB		TUBE, Fuel Injector Supply
		1				ETC			
26	5011 462AA	1				ETH	DBB		TUBE, Fuel Injector Supply
		1				ETC			

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

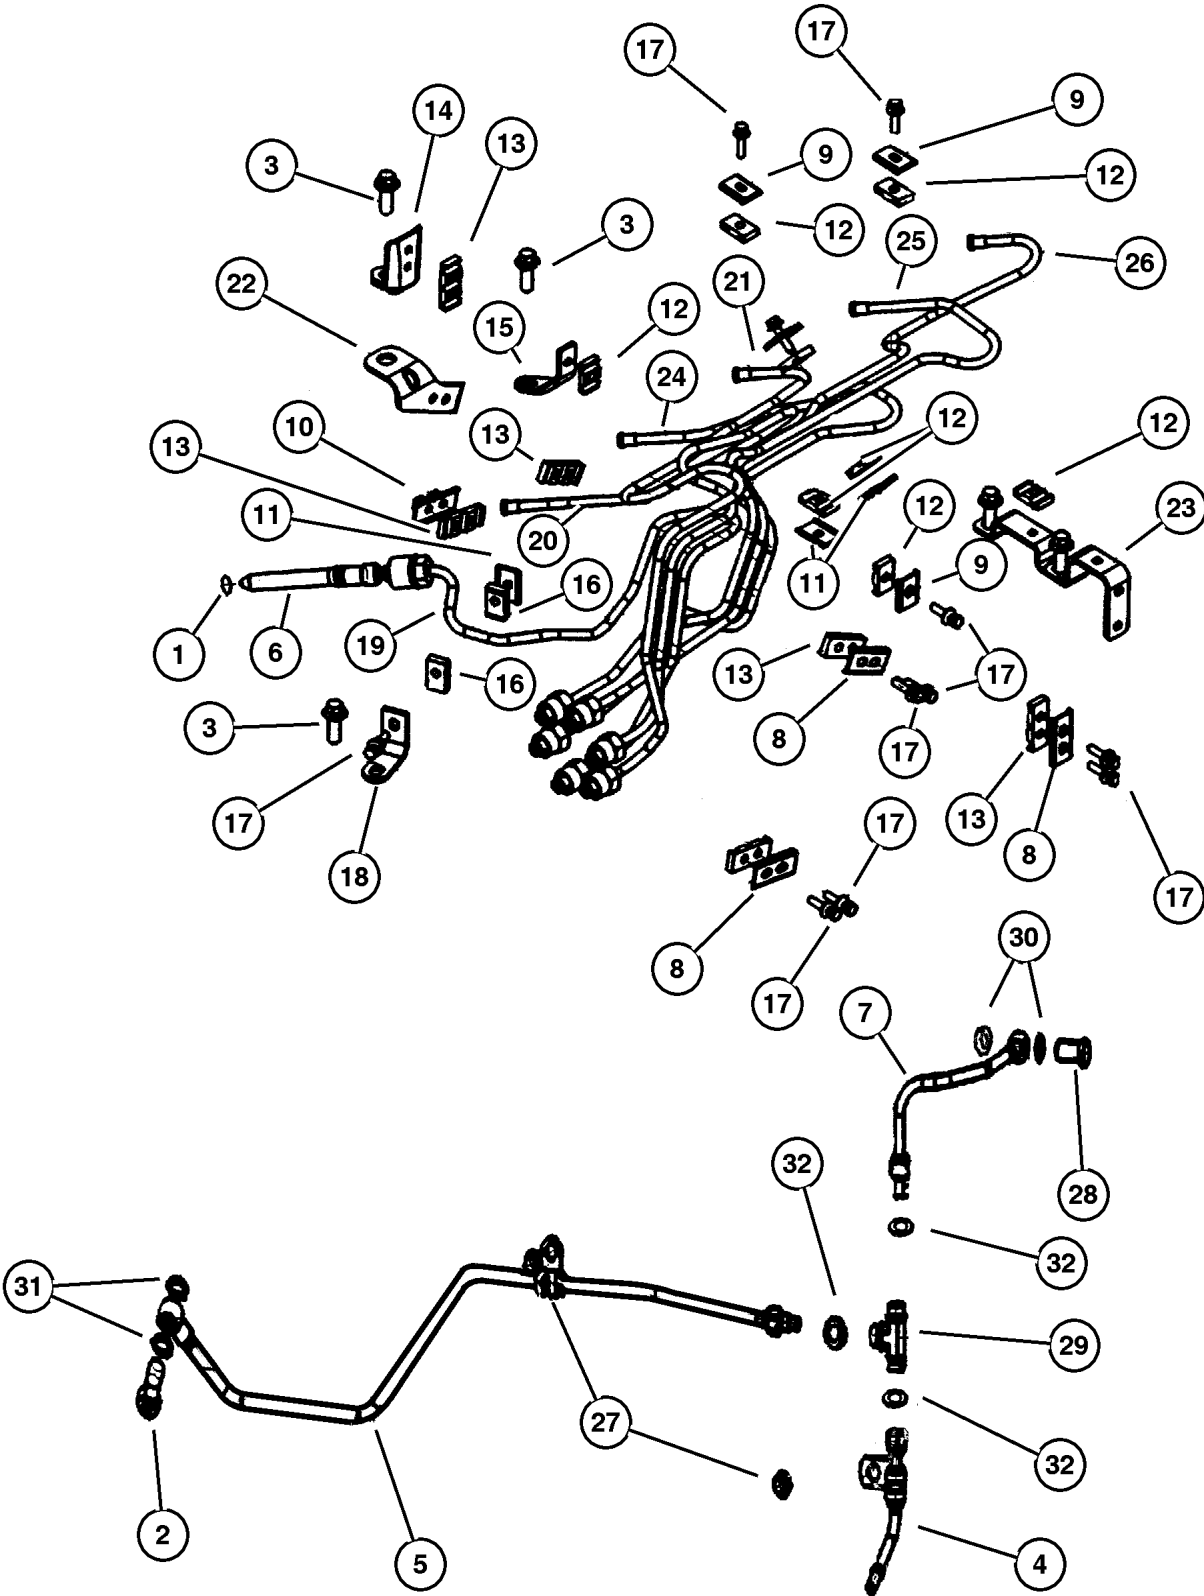Fuel Lines 5.9L (ETC,ETH) Diesel Engine
Figure 014-335




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1				ETH	DBB		
27	5011 818AA	1				ETC			SCREW, Hex Head, M8x1.25x12
		1				ETH	DBB		
28	4429 135	1				ETC			BOLT, Banjo
		1				ETH	DBB		
29	5011 820AA	1				ETC			TEE
		1				ETH	DBB		
30	5015 576AA	2				ETC			WASHER, Fuel Pump
		2				ETH	DBB		
31	4638 698	2				ETC			WASHER, Fuel Supply
32	4429 451	3				ETC			GROMMET
		3				ETH	DBB		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

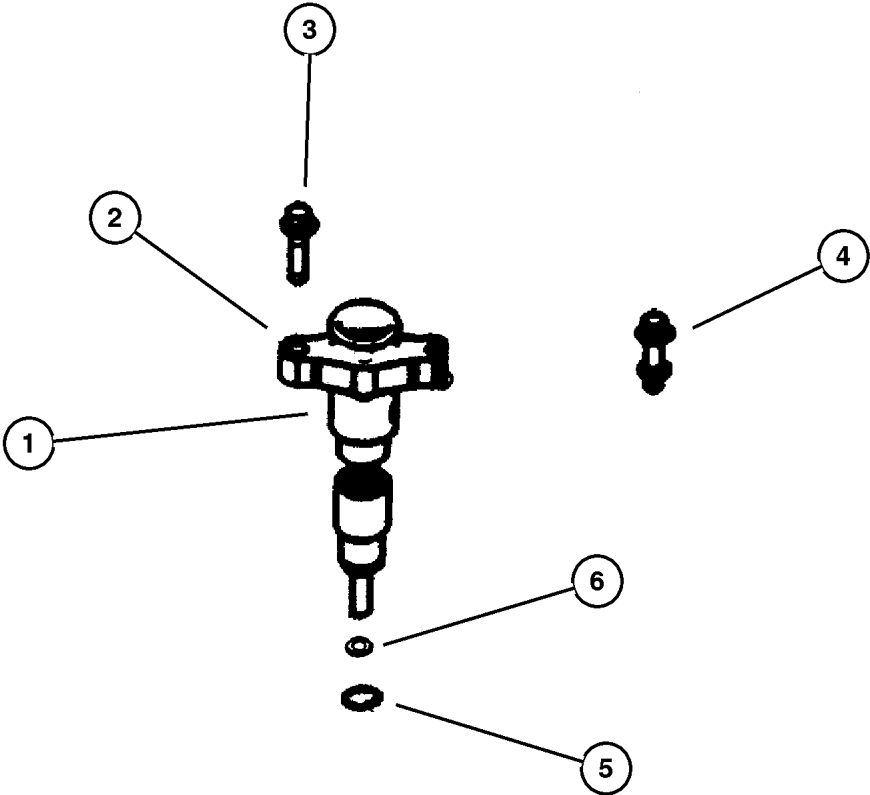Fuel Injector 5.9L (ETC,ETH) Diesel Engine
Figure 014-345



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:
DBB = All Manual Transmissions
DGO = All Automatic Transmissions
ETC = 5.9L Cummins 24V Diesel Engine
ETH = 5.9L HO Cummins Turbo Diesel Engine
ET0 = All 5.9L Turbo Diesel Engines


1									INJECTOR, Fuel
	5013 847AA	6				ETC	DBB		
	5013 848AA	6				ETC	DGO		
2	5018 177AA	6				ETH	DBB		CLAMP, Injector
	5011 886AA	6				ETC			
		6				ETH	DBB		
3	4761 269	6				ETC			SCREW, Hex Flange Head
		6				ETH	DBB		
4	5011 417AA	6				ETC			SCREW
		6				ETH	DBB		
5	5012 558AA	6				ETC			O RING, Fuel Injector
		1				ETH	DBB		
6	4798 375	6				ETC			SEAL, Fuel Injector
		1				ETH	DBB		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DGO = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

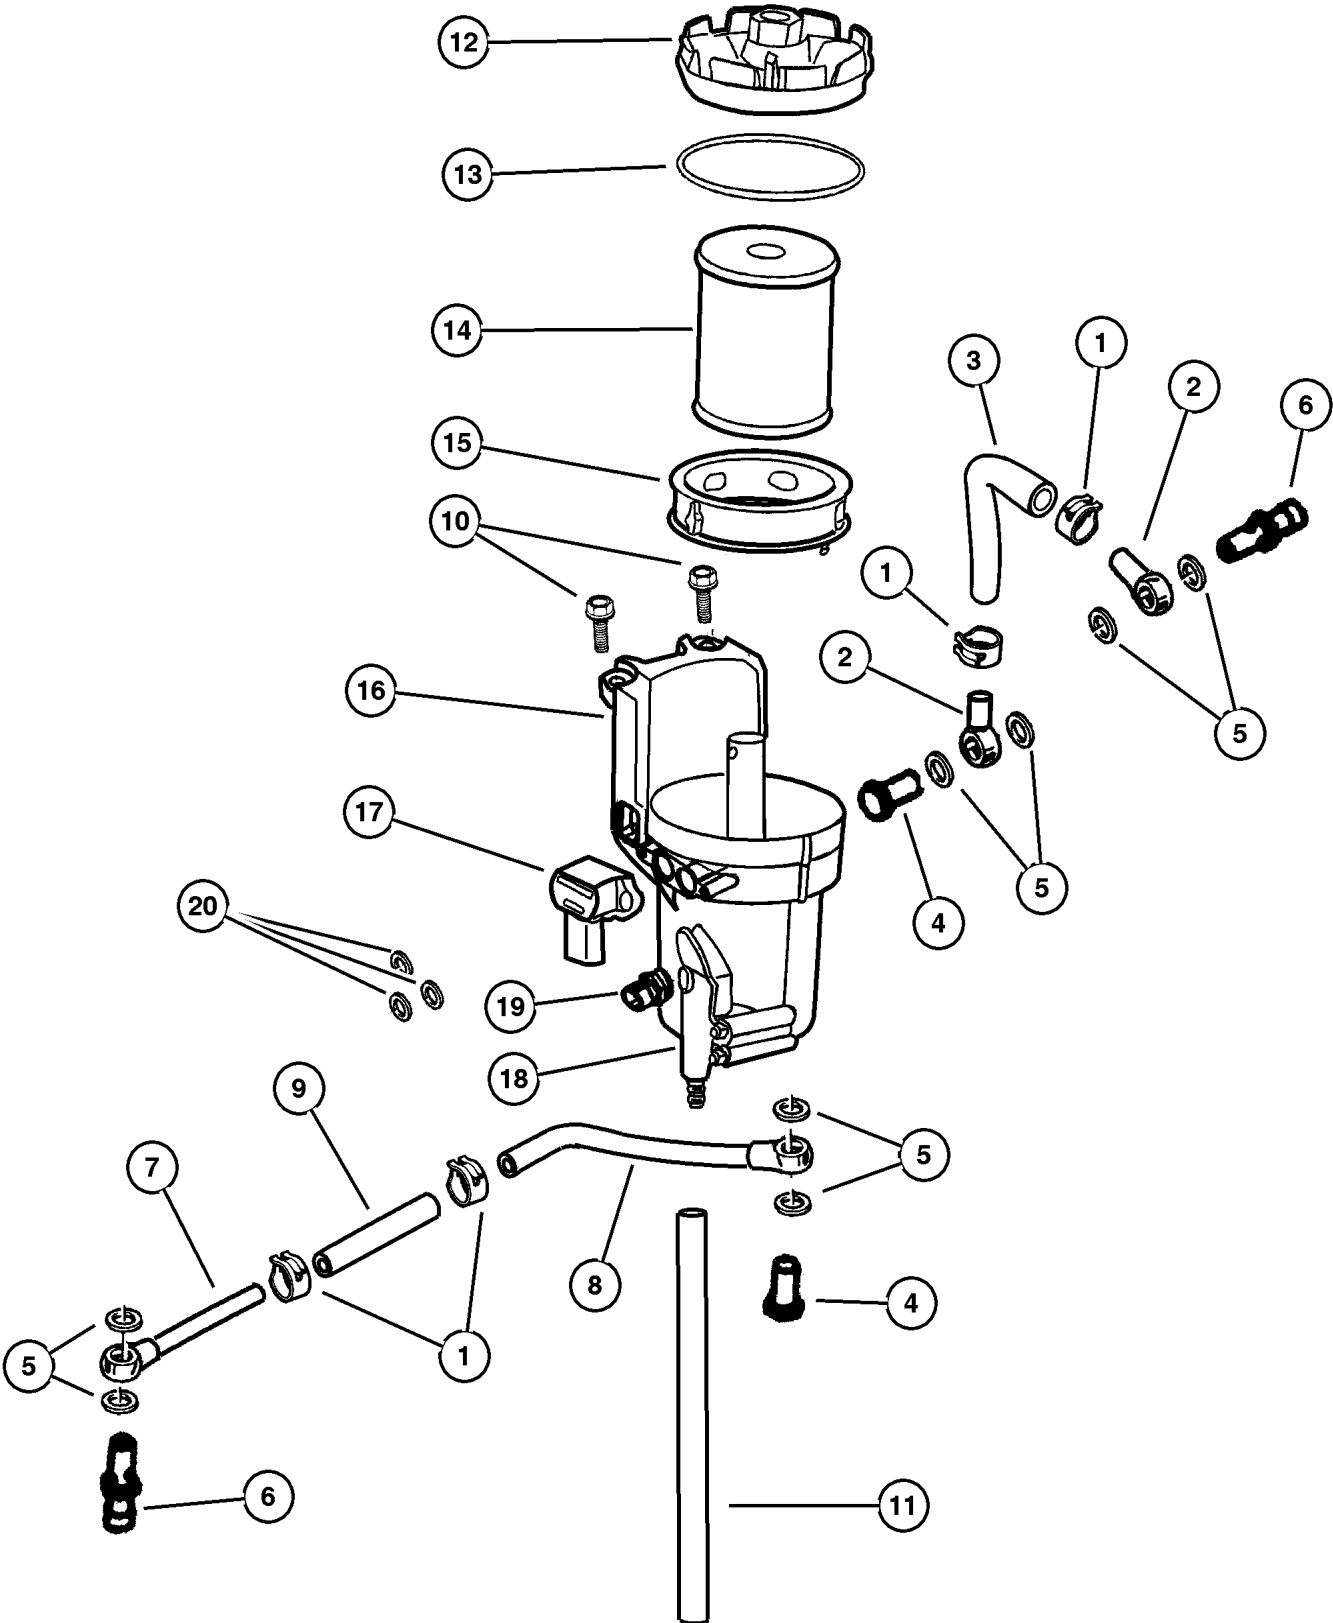Air Fuel Control and Fuel Filter 5.9L (ETC,ETH) Diesel Engine
Figure 014-365



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:
DBB = All Manual Transmissions
DG0 = All Automatic Transmissions
ETC = 5.9L Cummins 24V Diesel Engine
ETH = 5.9L HO Cummins Turbo Diesel Engine
ET0 = All 5.9L Turbo Diesel Engines


1	5014 261AA	1				ETC			CLAMP, Hose
		4				ETH	DBB		
2	5016 554AA	2				ETC			CONNECTOR, Fuel Filter
		2				ETH	DBB		
3	5015 711AA	1				ETC	DBB		HOSE, Fuel
		1				ETC	DG0		Federal
		1				ETC	DBB		Federal
		1				ETC	DG0		California
		1				ETC	DG0		California
		1				ETH	DBB		
4	4429 135	1				ETC			BOLT, Banjo
		1				ETH	DBB		
5	5016 555AA	2				ETC			WASHER, Fuel Line Banjo
		4				ETH	DBB		
6	5015 712AA	2				ETC	DBB		BOLT, Banjo
		2				ETC	DG0		Federal
		2				ETC	DBB		Federal
		2				ETC	DG0		California
		2				ETC	DG0		California
		1				ETH	DBB		
7	5015 714AA	1				ETC	DBB		TUBE, Fuel Supply
		1				ETC	DG0		Federal
		1				ETC	DBB		California
		1				ETC	DG0		California
		1				ETH	DBB		
8	5015 715AA	1				ETC	DBB		TUBE, Fuel Supply
		1				ETC	DG0		Federal
		1				ETC	DBB		Federal
		1				ETC	DBB		California

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

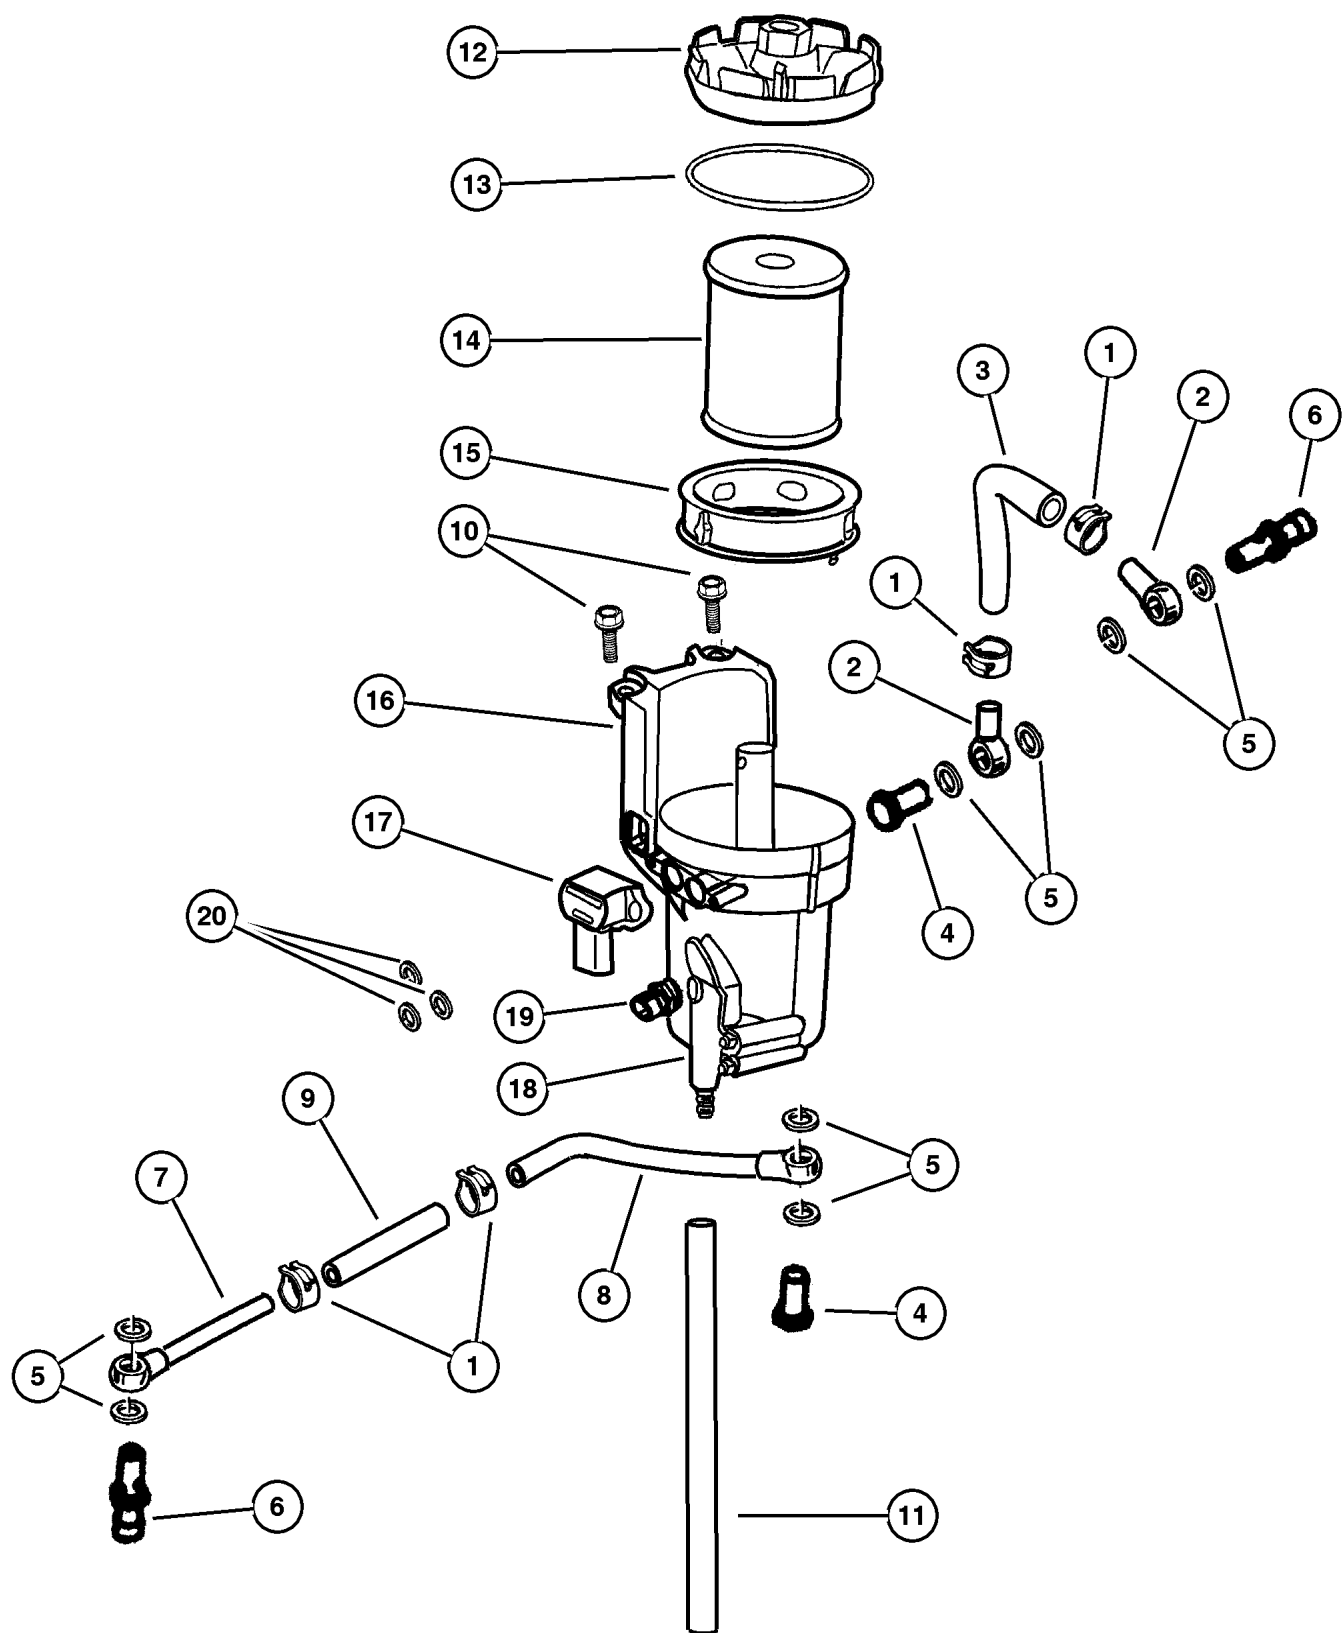Air Fuel Control and Fuel Filter 5.9L (ETC,ETH) Diesel Engine

[illegible]


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

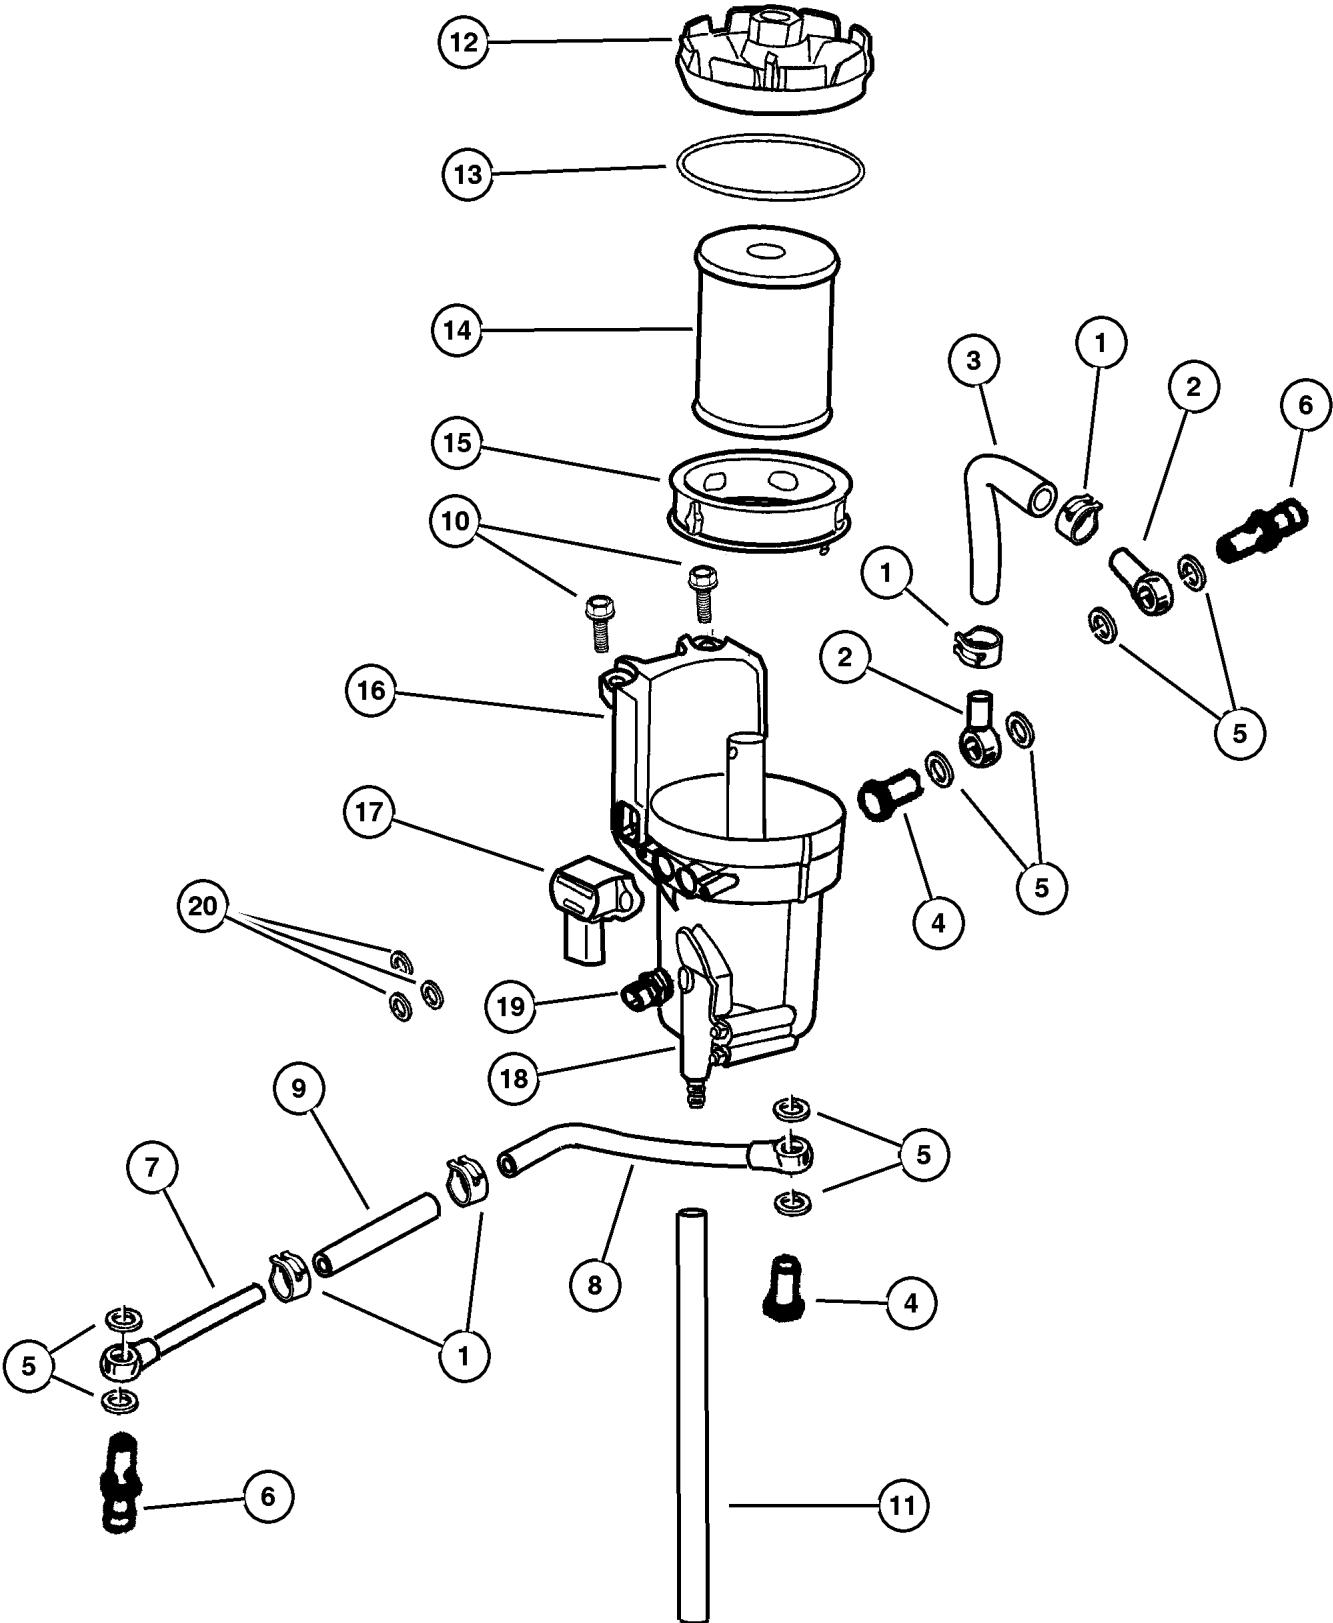Air Fuel Control and Fuel Filter 5.9L (ETC,ETH) Diesel Engine
Figure 014-365



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
17	5015 579AA	1				ETC	DG0		California
		1				ETH	DBB		
	5015 586AA	1				ETC	DBB		THERMOSTAT
		1				ETC	DBB		Federal
		1				ETC	DG0		California
		1				ETC	DG0		Federal
18		1				ETH	DBB		California
		1				ETC	DG0		
		1				ETC	DG0		DRAIN, Fuel Filter Bowl
		1				ETH	DBB		California
19	5015 580AB	1				ETC	DG0		Federal
		1				ETH	DBB		California
	5015 582AA	1				ETC	DBB		SENSOR, Fuel/Water
		1				ETC	DBB		Federal
		1				ETC	DG0		California
		1				ETC	DG0		Federal
20		1				ETH	DBB		California
	5015 583AA	1				ETC	DBB		SEAL
		1				ETC	DBB		Federal
		1				ETC	DG0		California
		1				ETC	DG0		Federal
		1				ETH	DBB		California

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

Fuel Rail 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 8.0L (EWA) Engine
Figure 014-430

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:
ELF = Magnum 5.2L SMPI V8 Engine
ELO = All 5.2L 8 Cyl Gas Engines
EM0 = All 5.9L 8 Cyl Gas Engines
EW0 = All 8.0L Gas Engines


1	5304 1029	1				EW0			RAIL, Fuel
	53030 598AB	1				ELF			
		1				EM0			
2	5212 7788	2				EW0			CLIP, Fuel Line
		1				ELO,			
						EM0			
3	5303 1571	10				EW0			INJECTOR, Fuel
	4854 181	8				ELF			
	53031 740AA	8				EM0			
4	4418 257	8				ELF			CLIP, Fuel Injector
		8				EM0			
		10				EW0			
5	6034 549	2				EW0			SCREW, Hex Head, .312-18x.94
		2				ELO,			
						EM0			
6	6034 549	4				ELO,			SCREW, Hex Head, .312-18x.94
						EM0			
		1				EW0			
-7	5018 781AA-	1				ELO,			CAP, Diagnostic Port
						EM0			
-8	5083 745AA-	8				EM0			O RING KIT, Fuel Injector
		10				EW0			

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, ELO = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

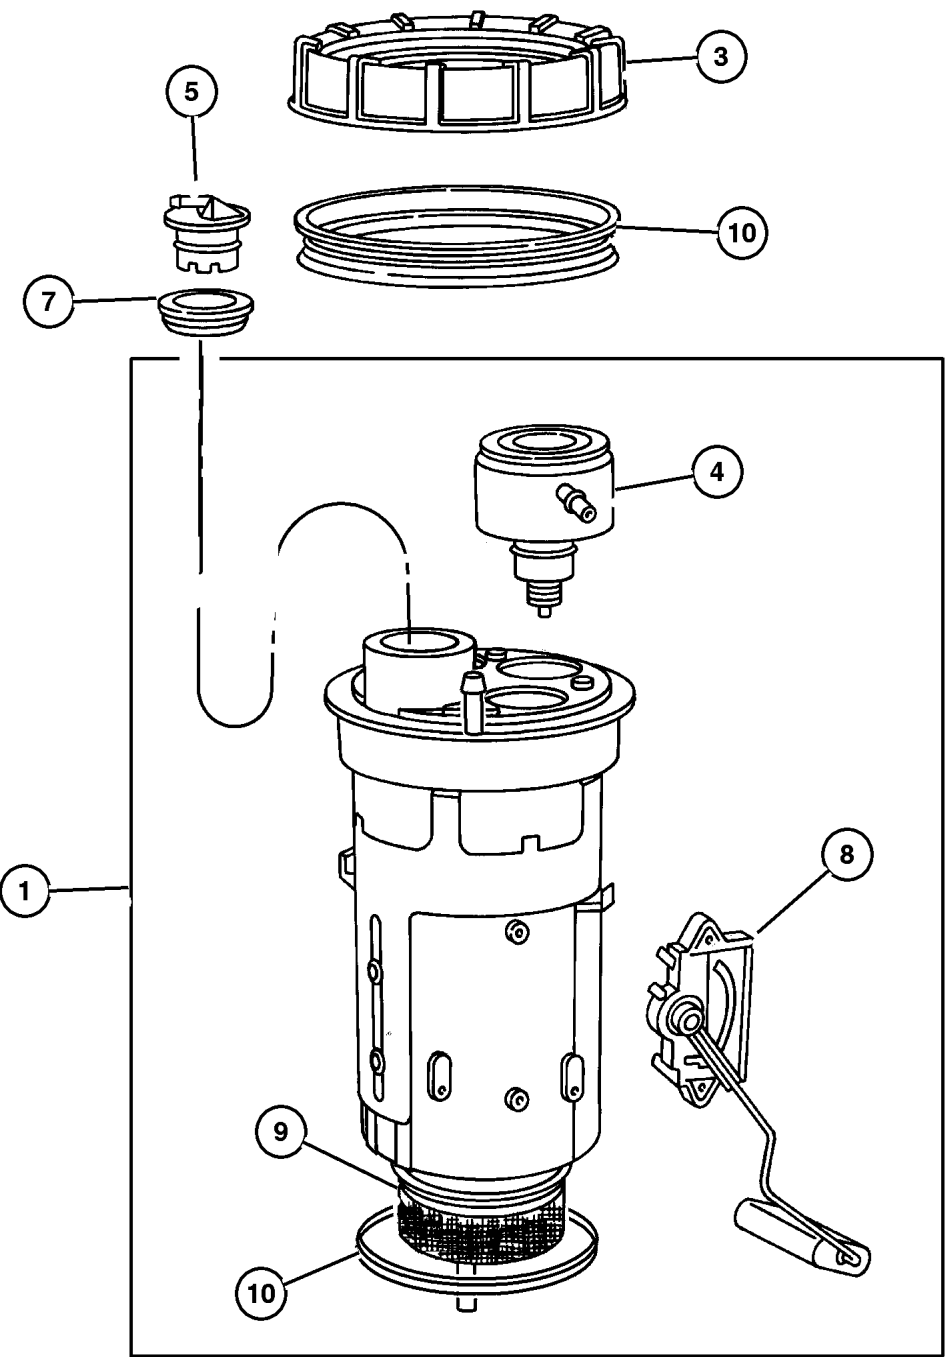Fuel Module 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine
Figure 014-525




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
EL0 = All 5.2L 8 Cyl Gas Engines									
EML = Magnum 5.9L SMPI V8 Engine									
EM0 = All 5.9L 8 Cyl Gas Engines									
ET0 = All 5.9L Turbo Diesel Engines									
EW0 = All 8.0L Gas Engines									
1	4897 666AC	1				EM0, EW0			MODULE KIT, Fuel Pump/Level Unit 34 Gallon
	4897 667AD	1				EL0, EM0, EW0			35 Gallon
	5014 318AA	1				EL0,			26 Gallon
-2	4897 668AE-	1				EML			MODULE KIT, Level Unit NUT, Fuel Pump Module
3	5200 5389	1				ET0			
		1				EL0, EM0, EW0 ET0			
4	4798 825	1				EL0, EM0, EW0 ET0			FILTER, Fuel Pressure Regulator
	4798 825AB	1				ET0			
5	5210 2172	1				EL0, EML EM0,			VALVE, Fuel Vapor
		1				EW0			
-6	5212 7666	1				ET0			VALVE, Fuel Tank Rollover Safety GROMMET, Rollover Valve
7	4616 244	1				EL0, EM0, EW0			
8	5014 461AA	1				EL0, EML			LEVEL UNIT KIT, Fuel 26 Gallon
	4897 669AB	1				EL0, EM0, EW0			

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

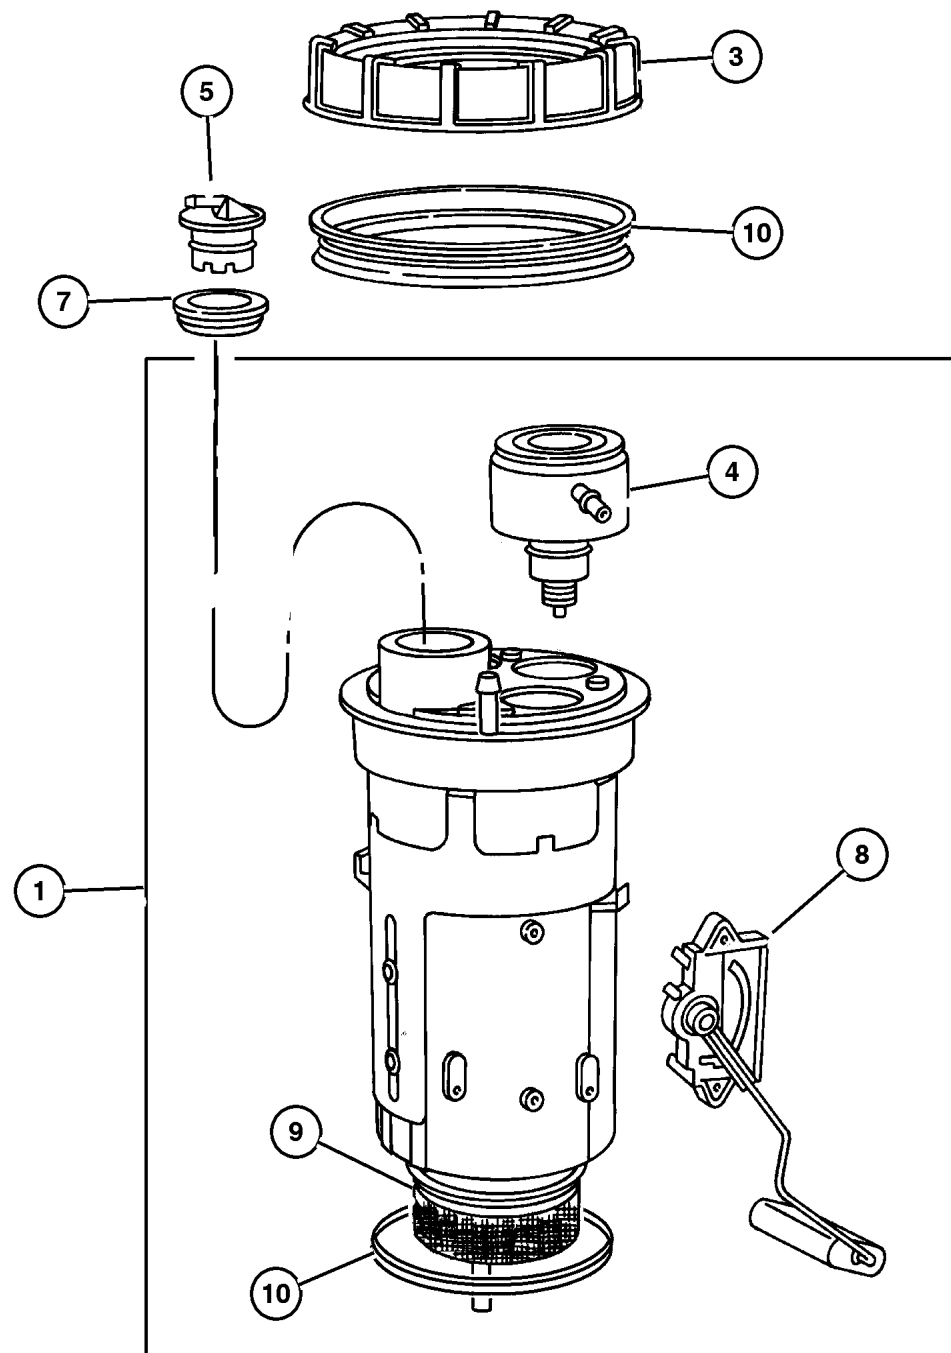**Fuel Module 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine
Figure 014-525**

[illegible]

DODGE RAM QUAD CAB/CLUB CAB (BE)

L = Ram Truck (All)

LINE

$$\begin{aligned} 1, 6 &= 1500 \\ 2, 7 &= 2500 \\ 3, 8 &= 3500 \end{aligned}$$

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005


Fuel Injection Pump 5.9L (ETC,ETH) Diesel Engine
Figure 014-535

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
DBB = All Manual Transmissions									
DG0 = All Automatic Transmissions									
ETC = 5.9L Cummins 24V Diesel Engine									
ETH = 5.9L HO Cummins Turbo Diesel Engine									
ET0 = All 5.9L Turbo Diesel Engines									
XCK = 2001 Diesel Tracking									
1	4429 630	3				ETC			BOLT, Hex Head
2	4429 862	4				ETH	DBB		NUT, Hex Flange, M10x1.5
		4				ETC			
		4				ETH	DBB		
3	4761 250	4				ETC			STUD, Fuel Pump
		4				ETH	DBB		
4	5014 189AA	1				ETC			O RING, Fuel Injection Pump, Diesel
		1				ETH	DBB		
5	5015 179AA	1				ETC			GEAR, Injection Pump
		1				ETH	DBB		
6	5015 362AA	1				ETC			BRACE, Fuel Pump
		1				ETH	DBB		
7	5016 186AA	1				ETC			BRACE, Fuel Pump
	5018 523AA	1				ETC	DBB		ETC+XCK, Manual
		1				ETC	DG0		ETC+XCK, Auto
		1				ETH	DBB		ETH, Manual
8	5011 423AA	2				ETC			SCREW
		2				ETH	DBB		
9	5011 813AA	1				ETC			DOWEL
		1				ETH	DBB		
10	5015 721AA	1				ETC	DBB		PUMP, Fuel Injection
		1				ETC	DG0		Federal
		1				ETC	DBB		Federal
		1				ETC	DBB		California

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

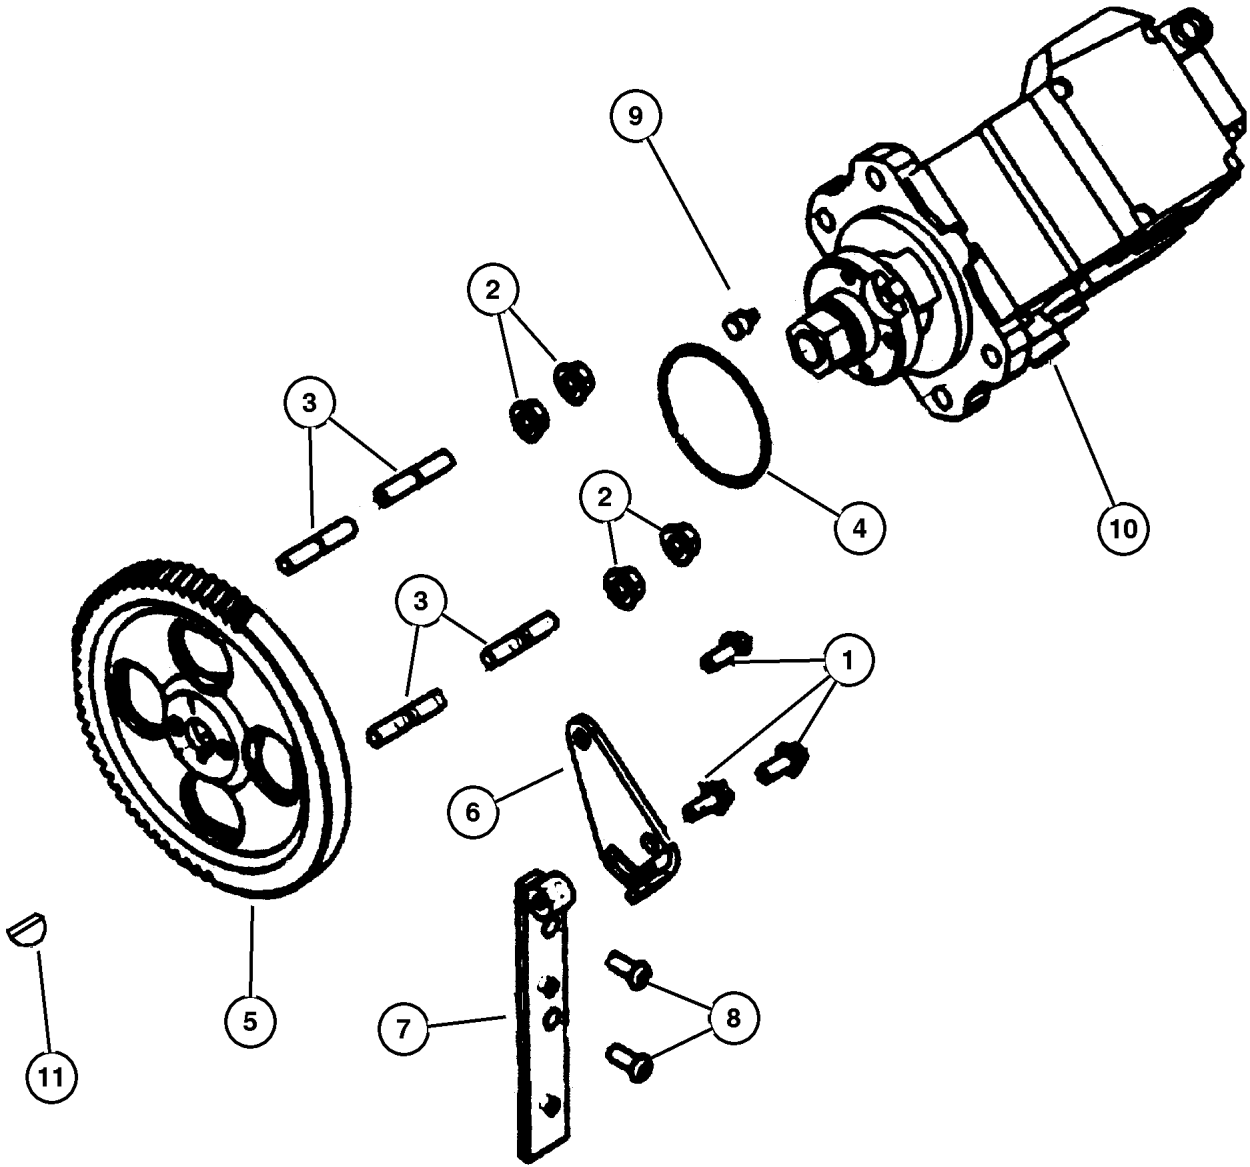September 16, 2005




Fuel Injection Pump 5.9L (ETC,ETH) Diesel Engine
Figure 014-535

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1				ETC	DG0		California
11	5018 061AA	1				ETH	DBB		KEY, Fuel Injection Pump
	5013 000AA	AR				ETC			0.00
	5013 026AA	AR				ETC			+0.26
	5013 052AA	AR				ETC			+0.52
	5013 078AA	AR				ETC			+0.78
	5013 104AA	AR				ETC			+1.04
	5013 130AA	AR				ETC			+1.30
	5013 156AA	AR				ETC			+1.56
	5013 182AA	AR				ETC			+1.82
	5013 208AA	AR				ETC			+2.08
	5013 234AA	AR				ETC			+2.34
	5013 260AA	AR				ETC			+2.60
	5014 026AA	AR				ETC			-0.26
	5014 052AA	AR				ETC			-0.52
	5014 078AA	AR				ETC			-0.78
	5014 104AA	AR				ETC			-1.04
	5014 130AA	AR				ETC			-1.30
	5014 156AA	AR				ETC			-1.56
	5014 182AA	AR				ETC			-1.82
	5014 208AA	AR				ETC			-2.08
	5014 234AA	AR				ETC			-2.34
	5014 260AA	AR				ETC			-2.60


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

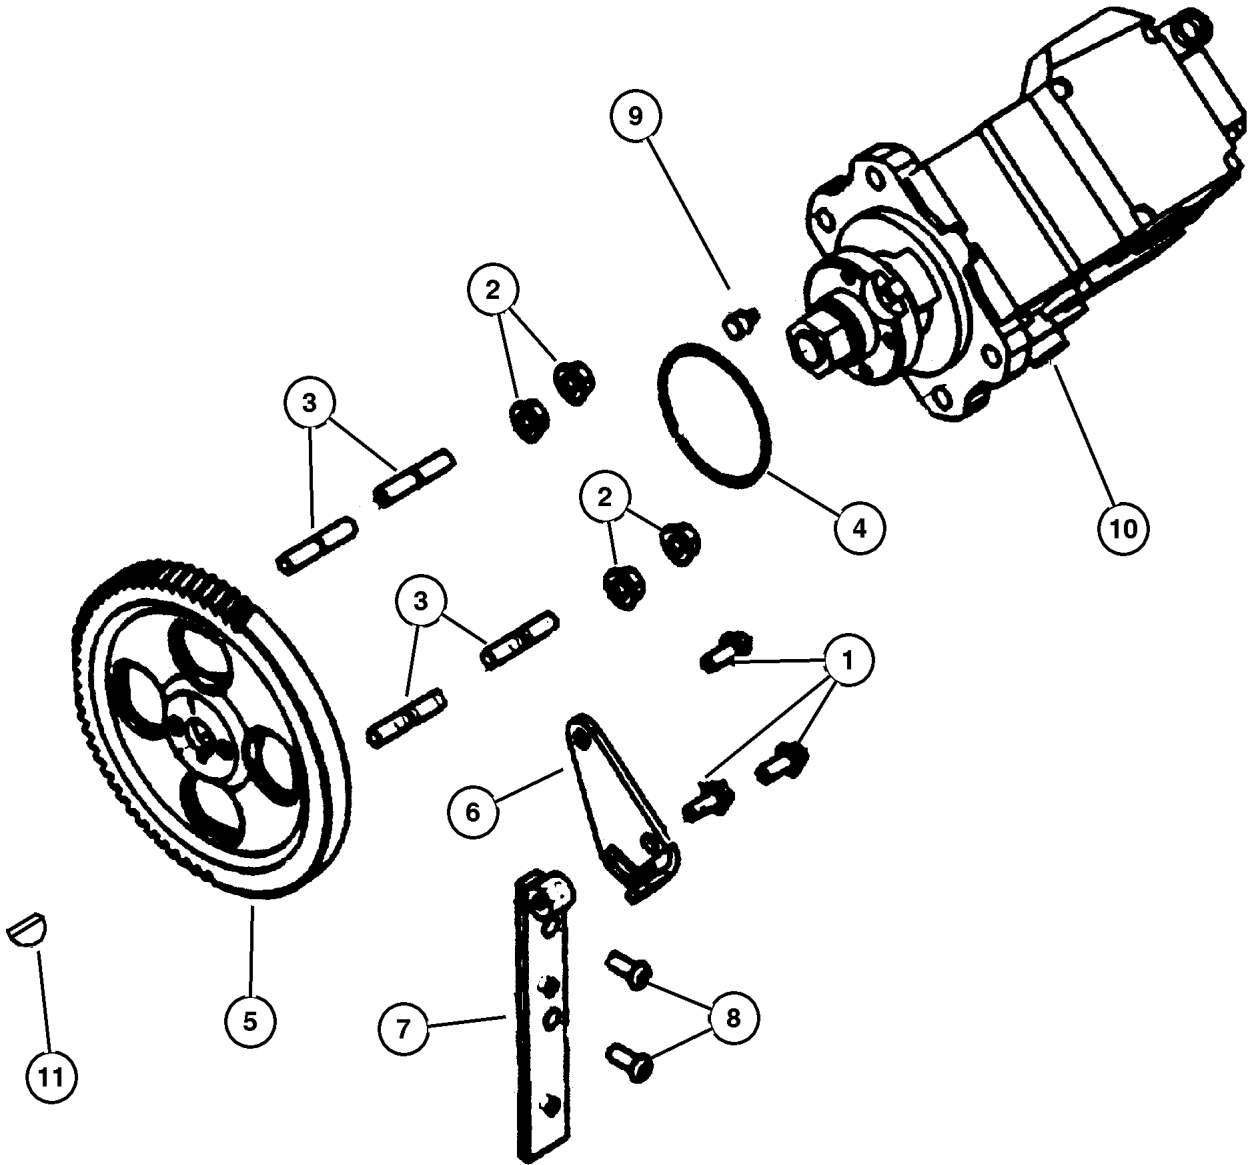September 16, 2005



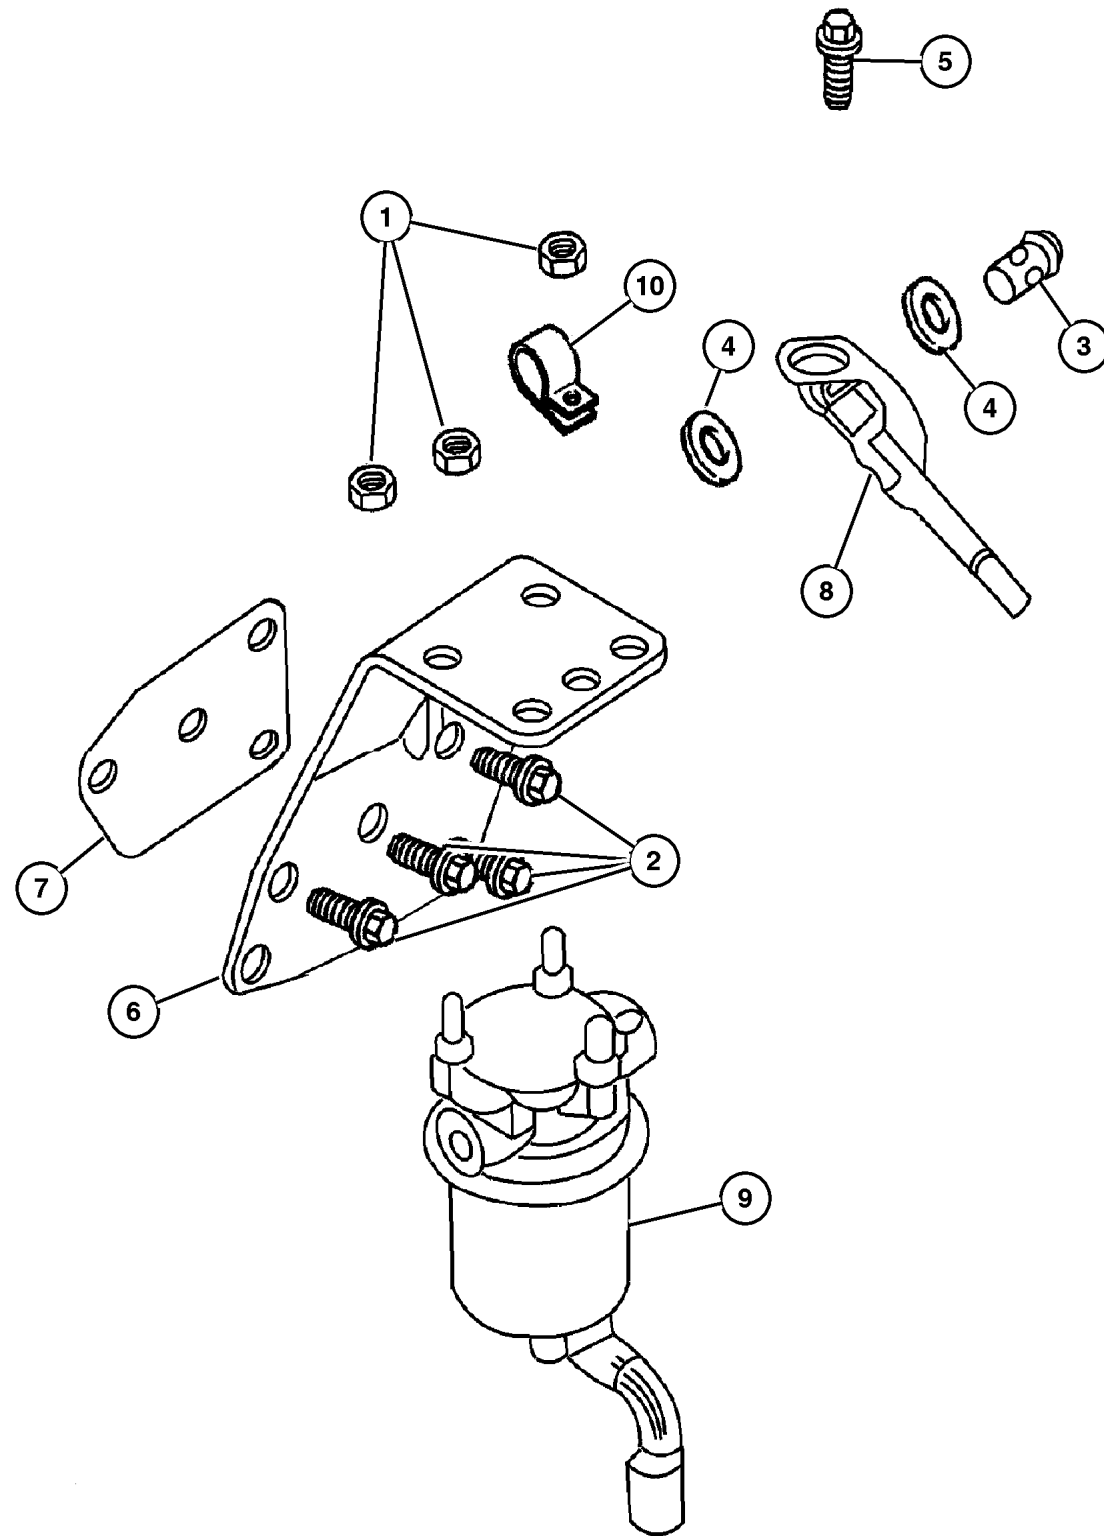Fuel Accessories 5.9L (ETC,ETH) Diesel Engine Figure 014-550



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: [DBB] = All Manual Transmissions [DG0] = All Automatic Transmissions [ETC] = 5.9L Cummins 24V Diesel Engine [ETH] = 5.9L HO Cummins Turbo Diesel Engine [ET0] = All 5.9L Turbo Diesel Engines									
1	5011 815AA	3				ETC			NUT, Hex
		3				ETH	DBB		
2	4429 630	4				ETC			BOLT, Hex Head
		4				ETH	DBB		
3	4429 135	1				ETC			BOLT, Banjo
		1				ETH	DBB		
4	5016 555AA	2				ETC			WASHER, Fuel Line Banjo
		2				ETH	DBB		
5	4882 110	1				ETC			SCREW, Hex Head, M8x1.25x16
		1				ETH	DBB		
6	5015 720AA	1				ETC	DBB		BRACKET, Pump
		1				ETC	DG0		Federal
		1				ETC	DBB		Federal
		1				ETC	DG0		California
		1				ETH	DBB		California
7	5011 437AA	1				ETC			GASKET, Engine Block Cover
		1				ETH	DBB		
8	5011 463AA	1				ETC			TUBE, Fuel Injector Supply
		1				ETH	DBB		
9	5080 885AA	1				ETC	DBB		PUMP, Fuel
		1				ETH	DBB		
		1				ETC	DG0		
10	5011 817AA	1				ETC			CLIP
	5300 8550	2	1, 2, 3			ETH	DEE		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines


TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Fuel Accessories 5.9L (ETC,ETH) Diesel Engine
Figure 014-550

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		2	6, 7, 8			ETH	DEE		

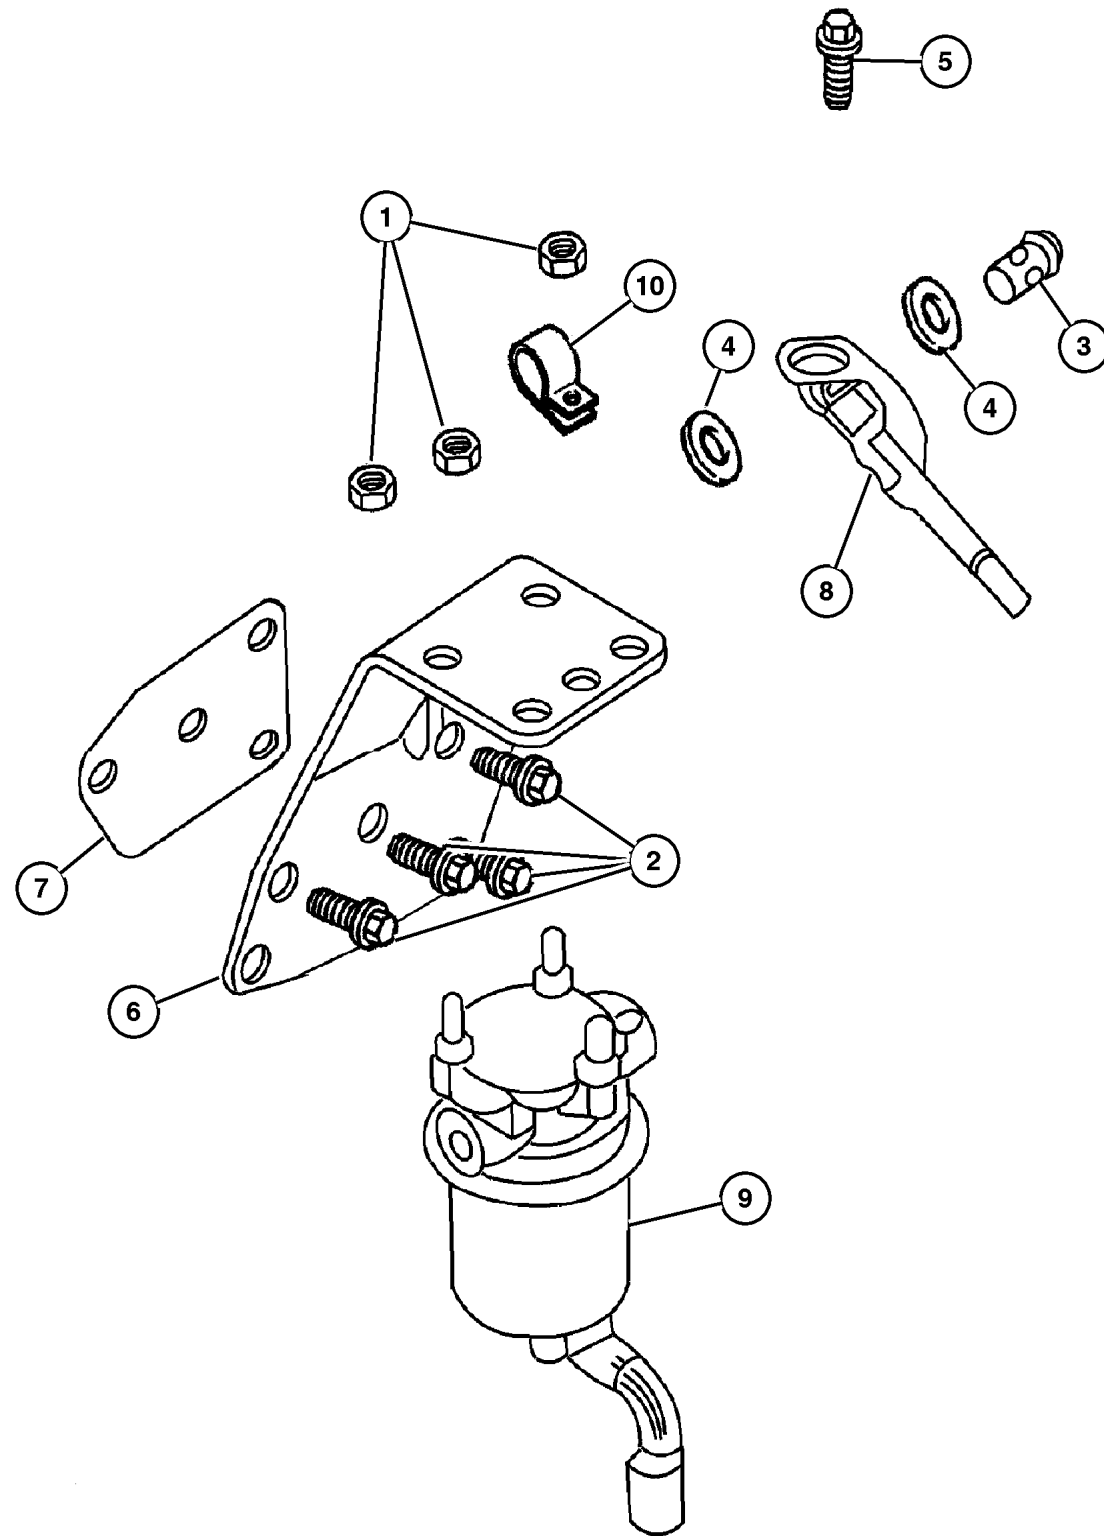


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM, EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Fuel Pump Transfer Conversion

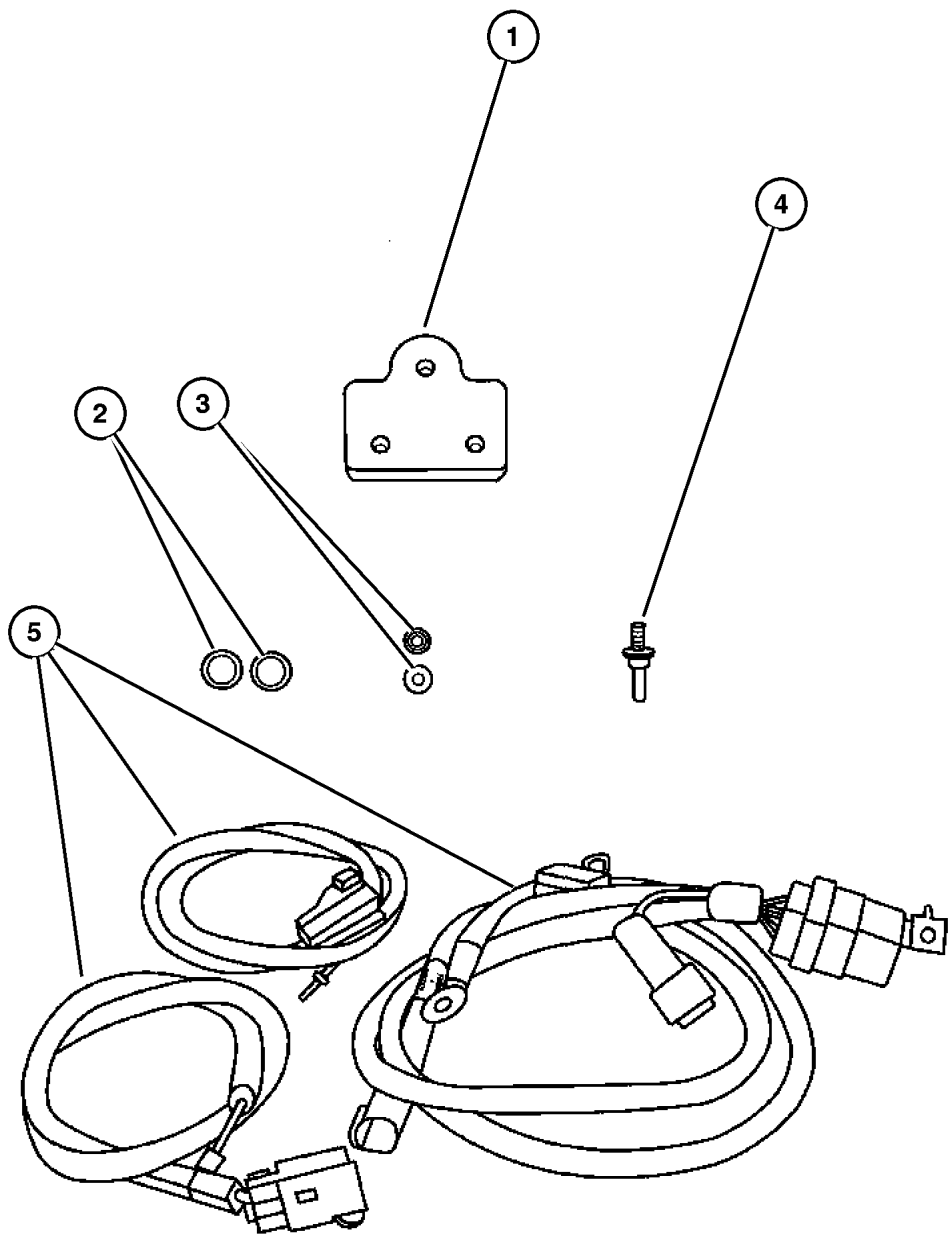Figure 014-555

[illegible]


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

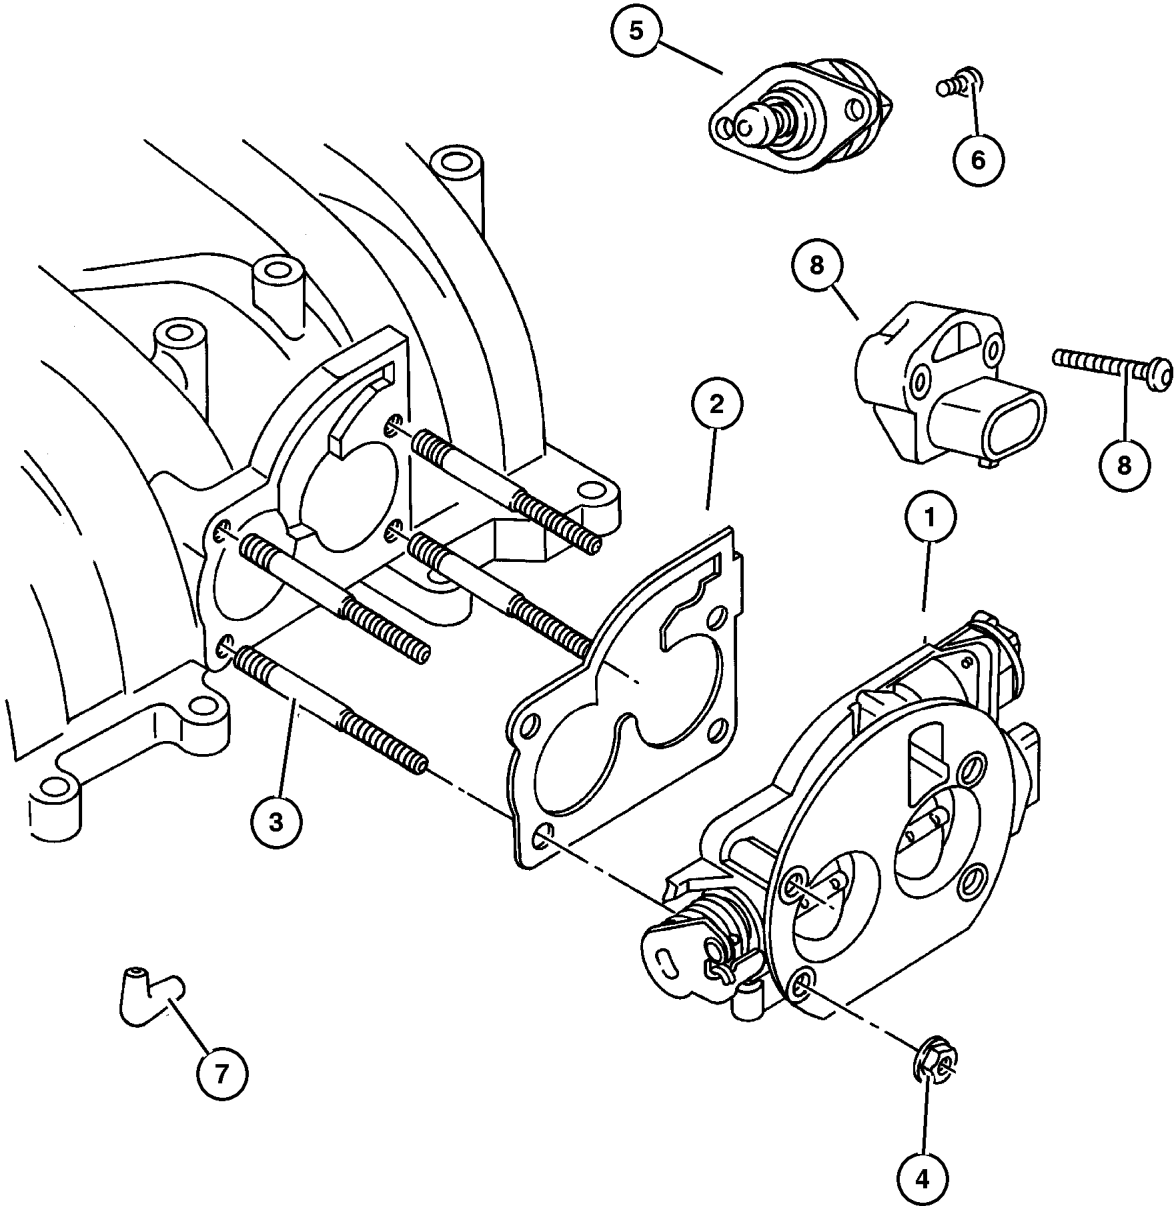Throttle Body 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 8.0L (EWA) Engine
Figure 014-630



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

EL0 = All 5.2L 8 Cyl Gas Engines

EM0 = All 5.9L 8 Cyl Gas Engines

EW0 = All 8.0L Gas Engines

1									THROTTLE BODY
	5303 1808	1				EW0			
	53031 733AA	1				EL0			
		1				EM0			
2									GASKET, Throttle Body To Intake
	5304 1120	1				EW0			
	5303 0541	1				EL0			
		1				EM0			
3	6034 380	4				EW0			STUD, .312-18/.250-20x4.00
4	6033 560	4				EW0			NUT AND WASHER, Hex Nut-Coned Washer, .25-20
5									MOTOR, A.I.S.
	53030 657AC	1				EL0			
		1				EM0			
	53032 067AA	1				EW0			
6									SCREW, A.I.S. Motor
	5003 467AA	2				EL0			
		2				EM0			
		2				EW0			
7	5300 9672	1				EL0, EM0			CONNECTOR, Emission Hose
8									SENSOR, Throttle Position
	4882 219	1				EW0			
		1				EL0			
		1				EM0			
-9	6036 338AA-	4				EL0, EM0			SCREW AND WASHER, Hex Head, .312-18x2.38


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

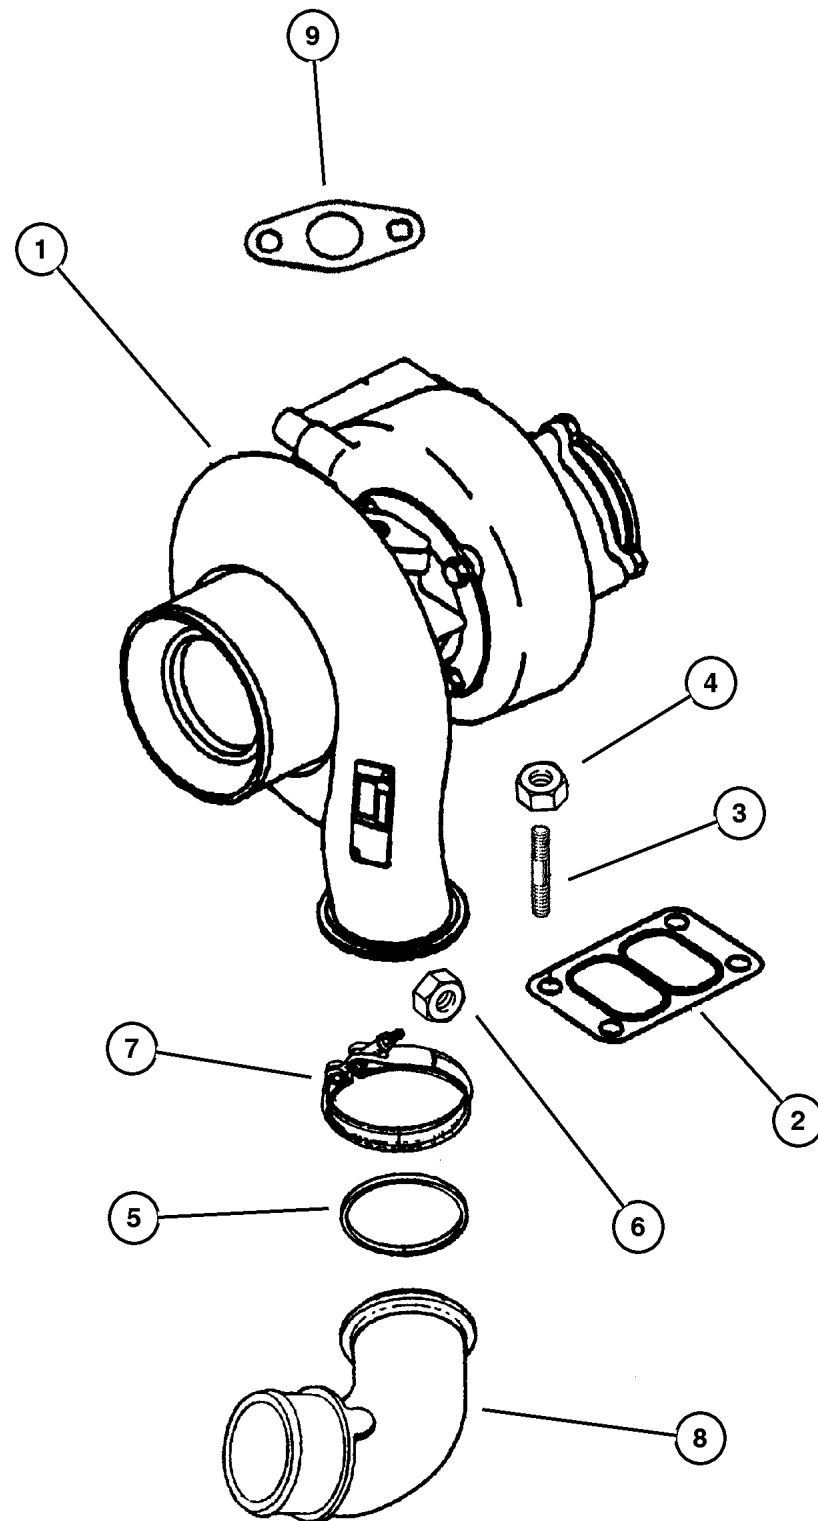Turbocharger 5.9L (ETC,ETH) Diesel Engine Figure 014-650



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
ETC = 5.9L Cummins 24V Diesel Engine									
ETH = 5.9L HO Cummins Turbo Diesel Engine									
ET0 = All 5.9L Turbo Diesel Engines									
XCK = 2001 Diesel Tracking									
1	5014 203AA	1				ETC	DG0		TURBOCHARGER
	5017 787AA	1				ETC	DG0		ETC W/O XCK, Auto
	5017 509AA	1				ETC	DBB		ETC+XCK, Auto
		1				ETH	DBB		ETC With or Without XCK, Manual
2	4429 357	1				ETH	DBB		ETH, Manual
	4886 034AA	1				ETC	DG0		GASKET, Turbocharger
		1				ETC	DG0		ETC
		1				ETH	DBB		ETC+XCK
3	4429 823	4				ETC	DBB		ETH
		4				ETH	DBB		STUD
		4				ETC	DG0		
		4				ETC	DBB		
4	4429 825	4				ETH	DBB		NUT, Turbo Mounting
		4				ETC	DG0		
		4				ETC	DBB		
5	4761 275	1				ETH	DBB		O RING, Air Intake Line
		1				ETC			
6	4882 114	1				ETH	DBB		NUT, Lock
		1				ETC			
		1				ETH	DBB		
7	4882 048	1				ETC			CLAMP, Air Intake Connection, V
		1				ETH	DBB		Clamp
8	4746 644	1				ETC			ELBOW, Air Intake
		1				ETH	DBB		
9	4886 033AA	1				ETC			GASKET, Turbo Oil Drain Pipe
	5011 430AA	1				ETH	DBB		ETC With or without XCK, Auto
-10	5136 024AA-	1				ETC	DBB		ETH, ETC+XCK, Manual
									PIPE, Exhaust


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

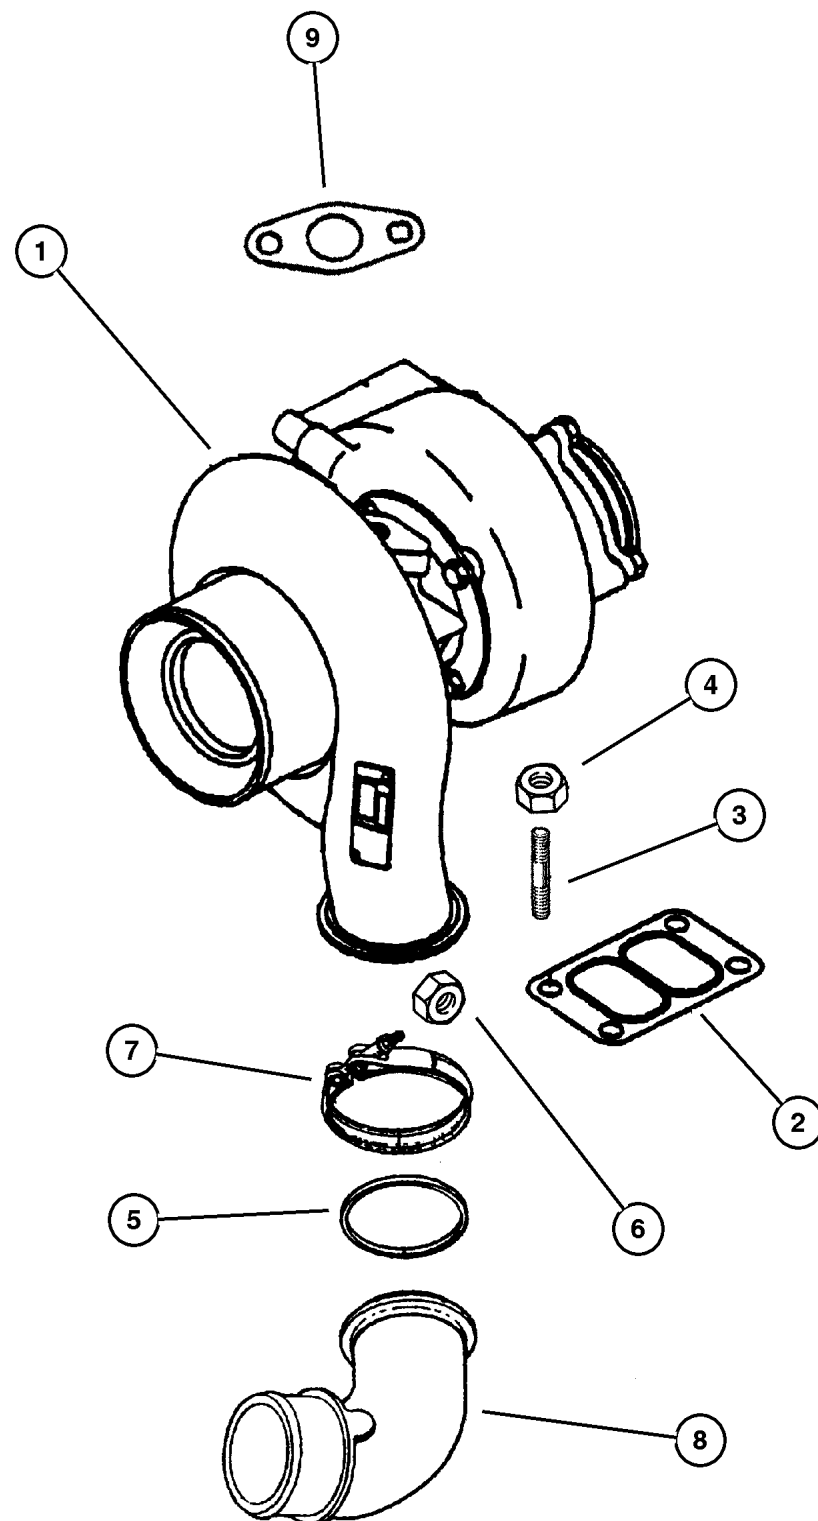Turbocharger 5.9L (ETC,ETH) Diesel Engine Figure 014-650




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-11	4874 541	1				ETC	DBB		GASKET, Turbocharger, Located
									between the turbo&elbow
-12	5161 580AA-	5				ETC	DBB		SCREW

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

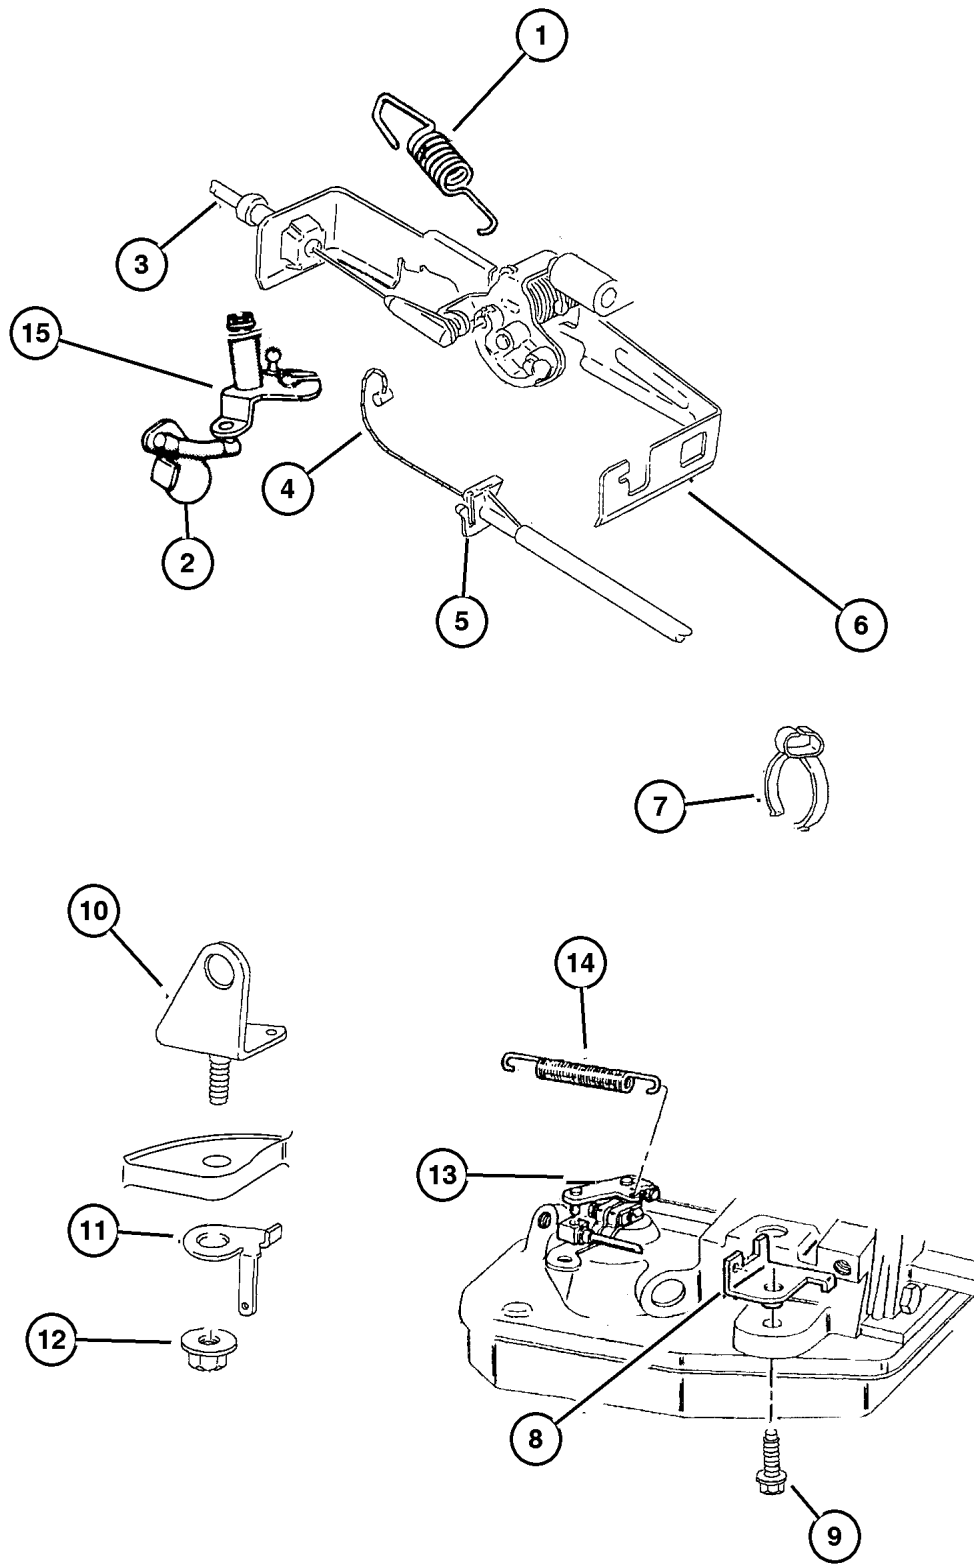Throttle Controls 5.2L (ELF), 5.9 (EML), 5.9L (EMM), 8.0L (EWA) Engine
Figure 014-730




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
DBB = All Manual Transmissions									
DG0 = All Automatic Transmissions									
EL0 = All 5.2L 8 Cyl Gas Engines									
ELF = Magnum 5.2L SMPI V8 Engine									
EM0 = All 5.9L 8 Cyl Gas Engines									
EW0 = All 8.0L Gas Engines									
1	5207 8102	1				ELF, EM0,	DBB		SPRING, Throttle Return
2	5207 7860	1				EW0			INDICATOR, Gear Selector
3	52104 030AD	1				EL0, EM0,	DG0		CABLE, Throttle Valve
4						EW0			CABLE, Accelerator
	5303 1501	1				EW0			
	53031 602AB	1				EL0, EM0			
5									CLIP, Serviced in Cable, (NOT SERVICED) (Not Serviced)
6	5303 1527	1				EW0			BRACKET, Accelerator
7	5207 8481	1				EL0, EM0			CLIP, Accelerator Cable
8	5207 9101	1					DG0		BRACKET, Cable
9	0181 112	1					DG0		SCREW AND WASHER, .375-16x1. 00
10	52107 806AA	1				EL0, EM0	DGT		BRACKET, Torque Shaft
11	5207 8718	1					DG0		BRACKET, Throttle Valve Spring
12	6028 114	1					DG0		NUT, Hex, .437-14
13	5207 9065	1					DG0		LEVER, Throttle Valve
14	5300 9055	1					DG0		SPRING, Throttle Valve Return
15	5207 9300	1				EW0			BELLCRANK, Accelerator and Cruise

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

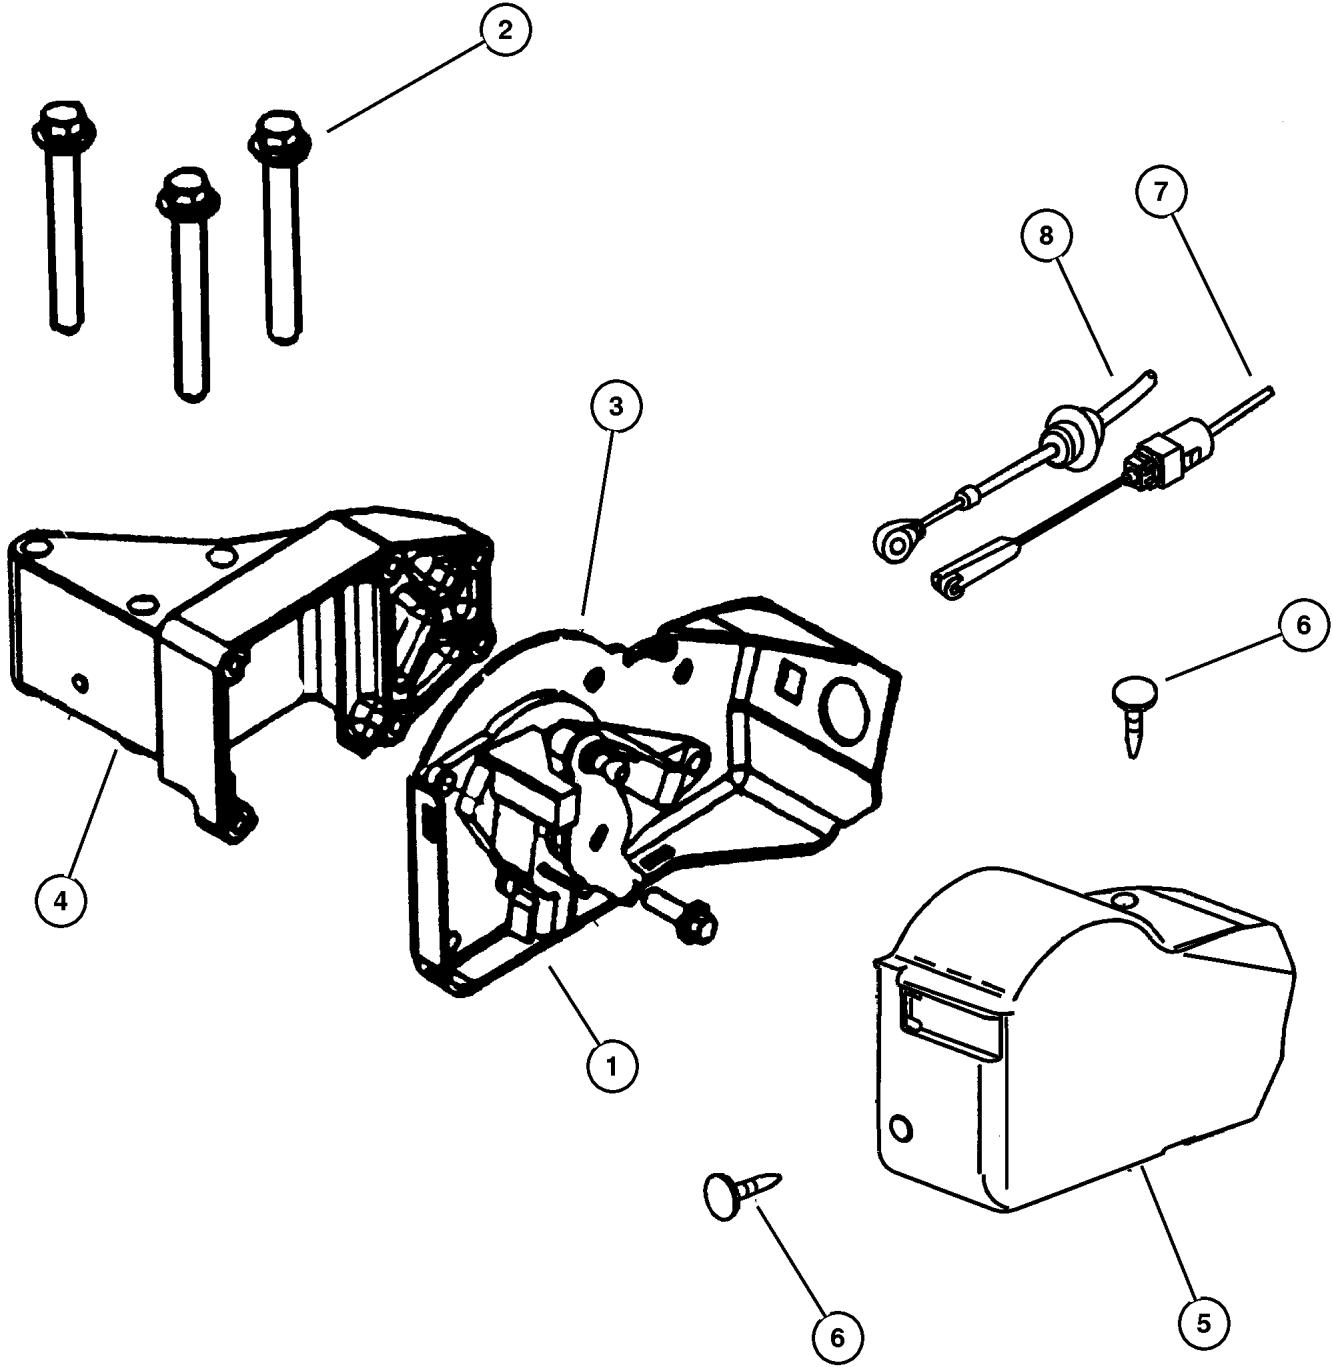Throttle Controls 5.9L (ETC,ETH) Diesel Engine
Figure 014-750




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
DBB = All Manual Transmissions									
DG0 = All Automatic Transmissions									
ETC = 5.9L Cummins 24V Diesel Engine									
ETH = 5.9L HO Cummins Turbo Diesel Engine									
ET0 = All 5.9L Turbo Diesel Engines									
1	4429 631	6				ETC			SCREW, Hex Head
		6				ETH	DBB		
2	4429 779	3				ETC			BOLT, Hex Head
		1				ETH	DBB		
3	5303 1575	1				ETC	DG0		BELLCRANK, Accelerator and Cruise
		1				ETC	DG0		Federal
	5303 1576	1				ETC	DBB		California
		1				ETC	DBB		Federal
		1				ETC	DBB		California
		1				ETH	DBB		
4	5011 838AA	1				ETC			SUPPORT, Bellcrank
		1				ETH	DBB		
5	5303 1577	1				ET0			SHROUD, Bellcrank
6	6502 871	2				ET0			BOLT, M6.3x22.80
7	5210 7742	1				ETC	DG0		CABLE, Throttle Valve
8	53031 626AC	1				ET0			CABLE, Accelerator

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

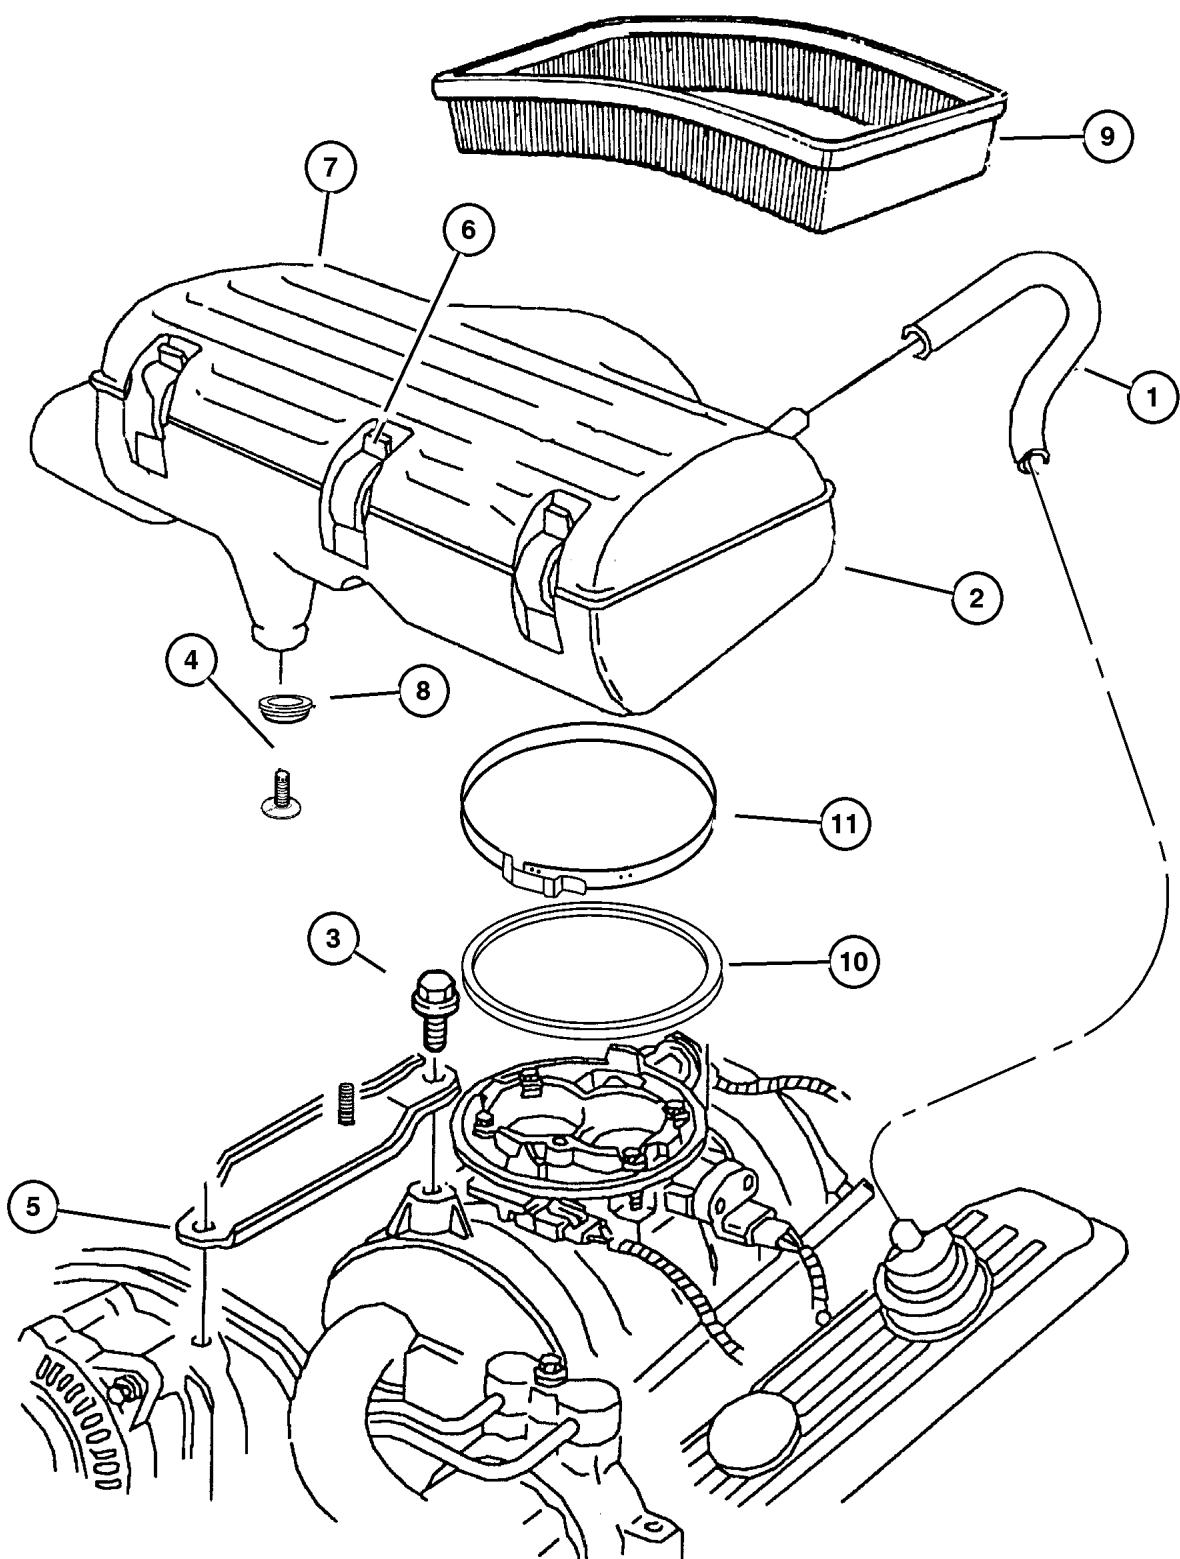Air Cleaner 5.2L (ELF), 5.9L (EML) Engine
Figure 014-825




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
EL0 = All 5.2L 8 Cyl Gas Engines									
EM0 = All 5.9L 8 Cyl Gas Engines									
EML = Magnum 5.9L SMPI V8 Engine									
1	53008 675AD	1				EL0,			TUBE, PCV Valve
2	4897 529AA	1				EM0			BODY, Air Cleaner
3						EL0,			SCREW, (NOT SERVICED) (Not
						EML			Serviced)
4	5303 0406	1				EL0,			FASTENER, Mounting Post
5	53030 353AB	1				EM0			BRACKET, Air Cleaner
6	5277 576	3				EL0,			LATCH, Air Cleaner
7	4897 527AA	1				EML			COVER, Air Cleaner
8	4268 295	1				EL0,			GROMMET, Air Cleaner Bracket
9	5300 4383	1				EML			FILTER, Air
10	5303 0600	1				EL0,			GASKET, Air Cleaner To T/Body
11	53032 106AA	1				EM0			CLAMP, Air Cleaner to T/Body
						EL0,			
						EML			

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

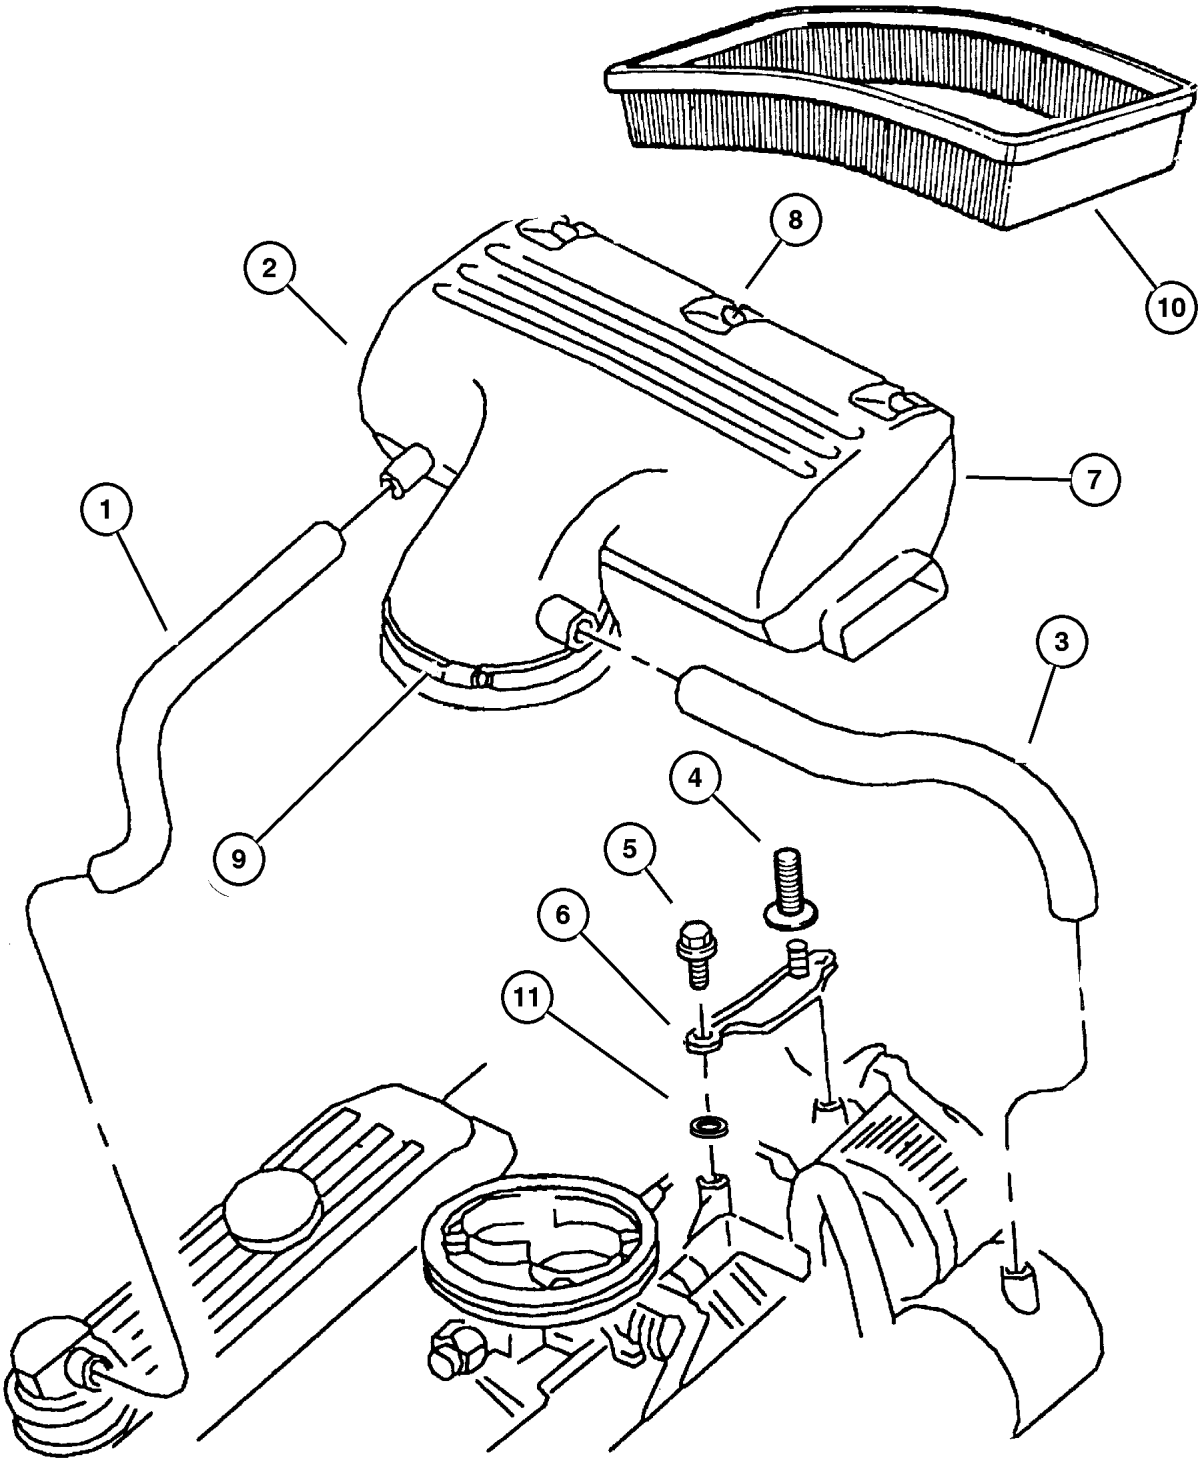Air Cleaner 5.9L (EMM) Engine
Figure 014-827



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
ELO = All 5.2L 8 Cyl Gas Engines									
EM0 = All 5.9L 8 Cyl Gas Engines									
EMM = Magnum 5.9L SMPI V8 Engine									
1	53030 817AD	1				ELO, EM0			HOSE, Crankcase Vent
2	4897 527AA	1				EMM			COVER, Air Cleaner Leaded Fuel
	4897 528AA	1				EMM			Unleaded Fuel
3	5303 0432	1				EMM			HOSE, Air Cleaner
4	5303 0406	1				ELO, EM0			FASTENER, Mounting Post
5									SCREW, (NOT SERVICED) (Not Serviced)
6	53030 353AB	1				ELO, EM0			BRACKET, Air Cleaner
7	4897 529AA	1				EMM			BODY, Air Cleaner
8	5277 576	3				EMM			LATCH, Air Cleaner
9	53032 106AA	1				EMM			CLAMP, Air Cleaner to T/Body Federal, California
		1				EMM			Unleaded Fuel
10	5300 4383	1				EMM			FILTER, Air
11	4268 295	1				EMM			GROMMET, Air Cleaner Bracket

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, ELO = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	


AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Air Cleaner 8.0L (EWA) Engine
Figure 014-830


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:									
EW0 = All 8.0L Gas Engines									
1	5303 0867	1				EW0			GASKET, Air Cleaner To T/Body
2	5304 0044	1				EW0			AIR CLEANER
3	5304 0025	1				EW0			FILTER, Air
4	6033 560	4				EW0			NUT AND WASHER, Hex Nut-Coned Washer, .25-20

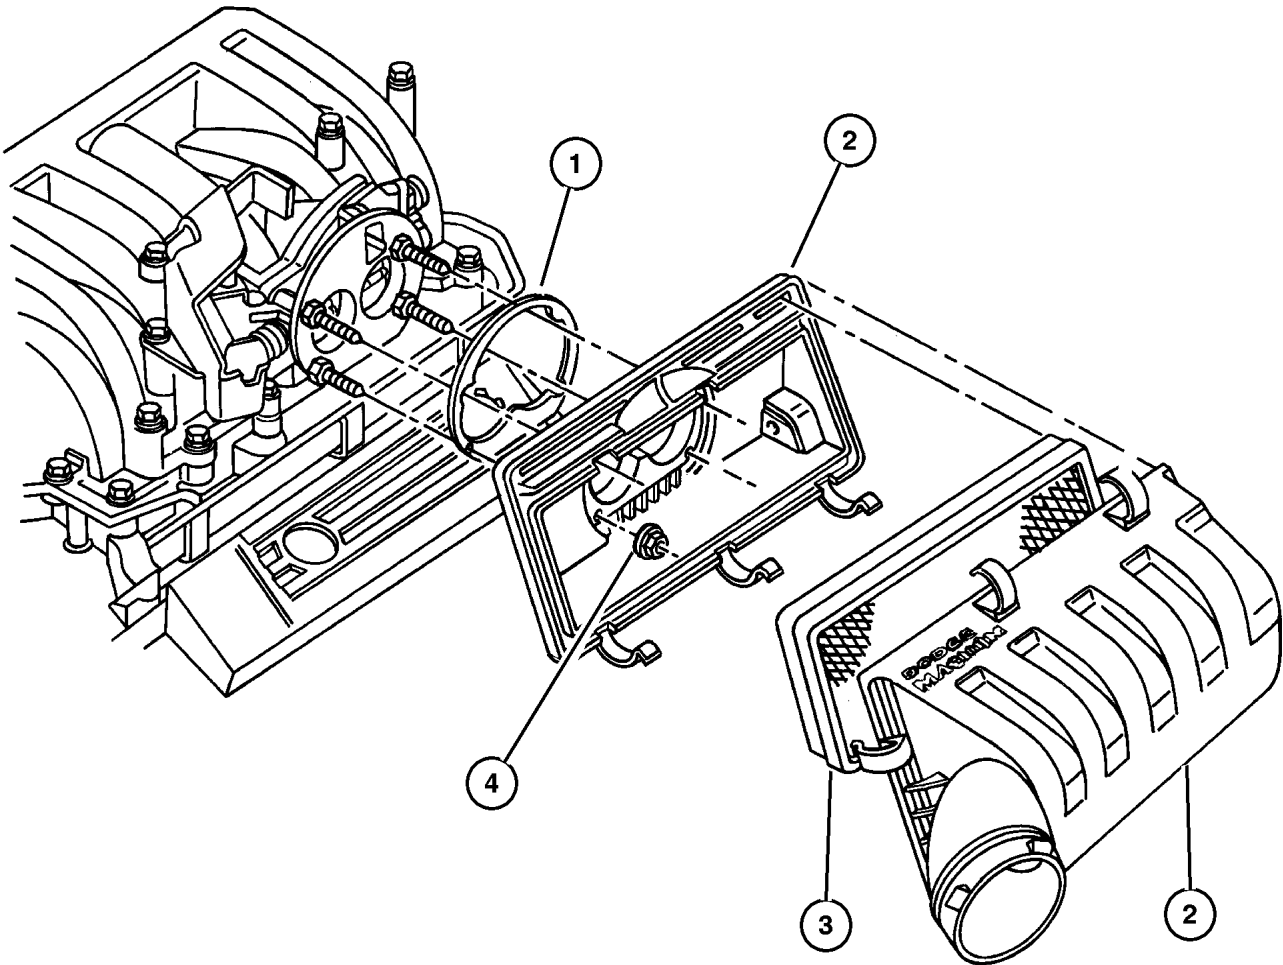

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

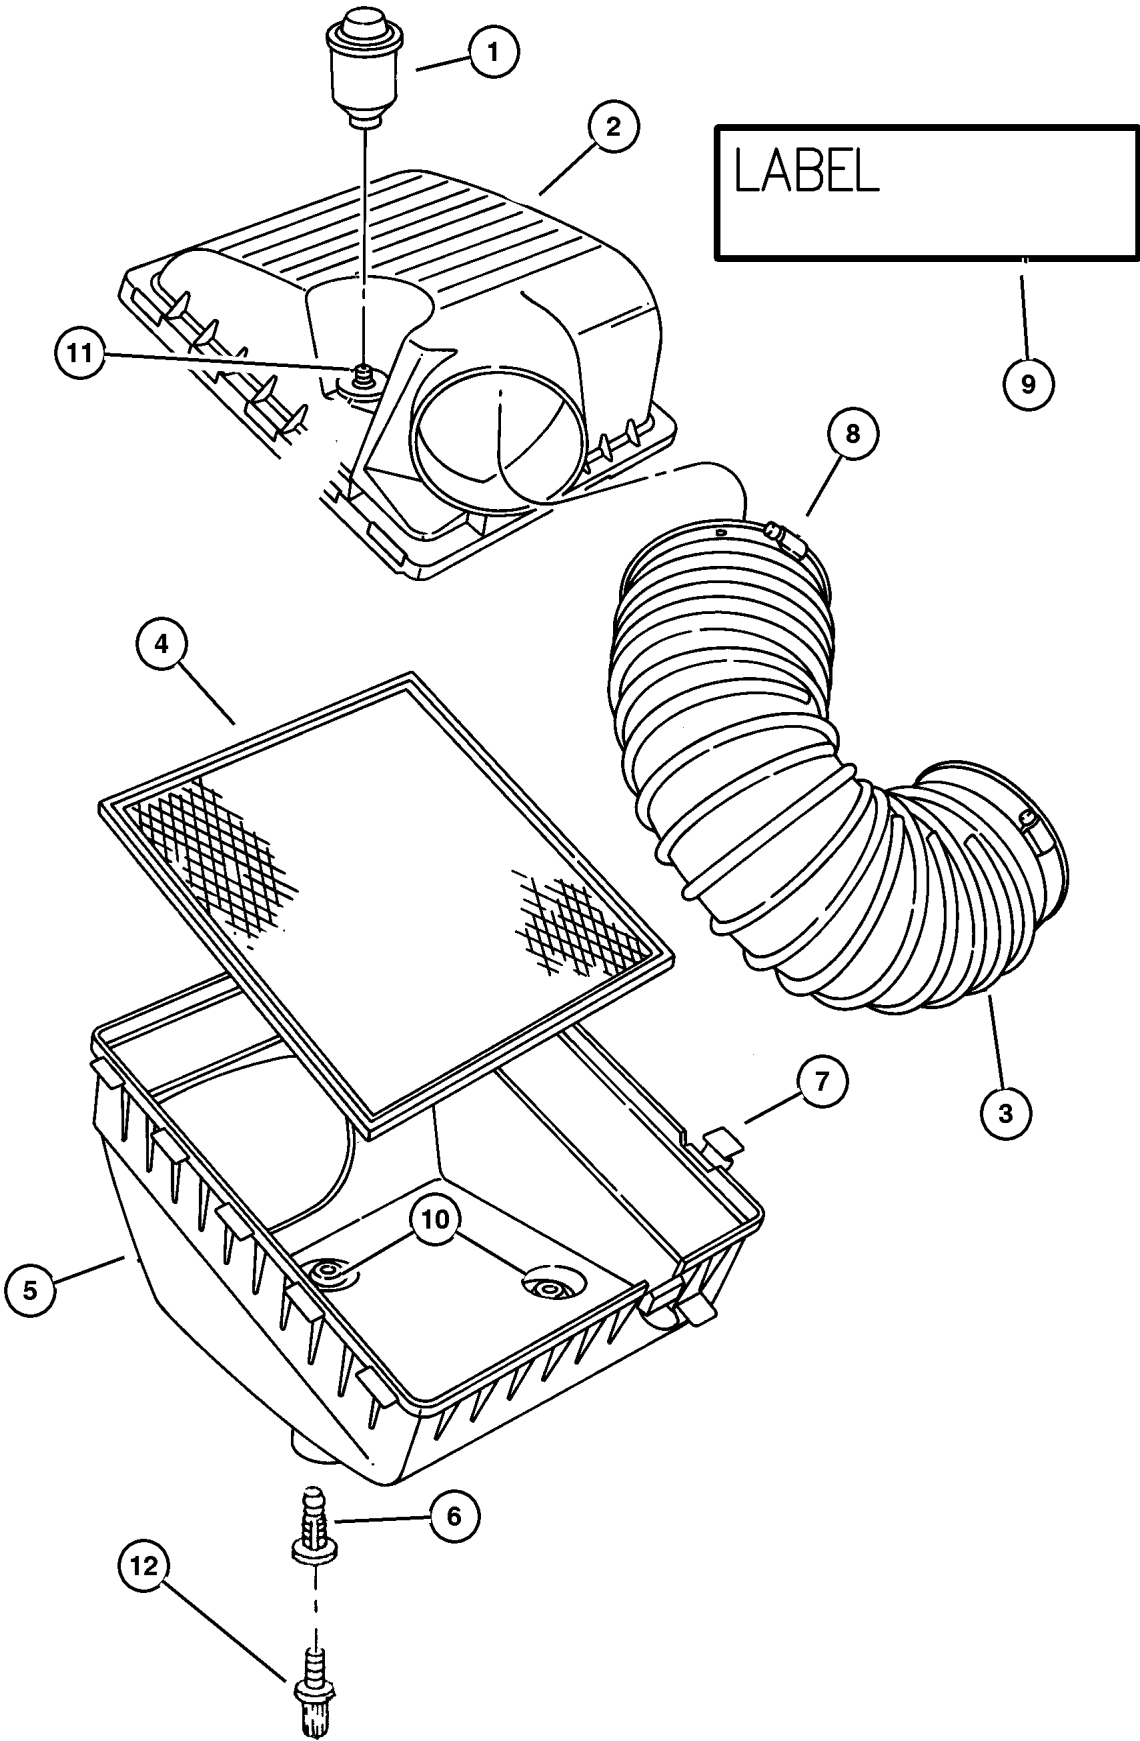Air Cleaner 5.9L (ETC,ETH) Diesel Engine
Figure 014-840



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
ETC = 5.9L Cummins 24V Diesel Engine									
ETH = 5.9L HO Cummins Turbo Diesel Engine									
ET0 = All 5.9L Turbo Diesel Engines									
1	4864 443AA	1				ET0			GAUGE, Air Restriction Indicator
2	4897 530AA	1				ET0			COVER, Air Cleaner
3	5303 0294	1				ET0			DUCT, Ambient Air
4	4864 442	1				ET0			ELEMENT, Air Cleaner
5	4728 407	1				ET0			HOUSING, Air Cleaner
6	5303 0406	3				ET0			FASTENER, Mounting Post
7	5277 576	4				ET0			LATCH, Air Cleaner
8									CLAMP, Air Cleaner Duct
	53032 105AA	1				ET0			Air Cleaner End
	53032 134AA	1				ET0			Turbocharger End
9	4428 963	1				ET0			LABEL, Diesel Starting
10	4268 295	4				ET0			GROMMET, Air Cleaner Bracket, Air Cleaner Mounting
11	4728 405	1				ET0			FITTING, Indicator Gauge
12	6503 955	3				ET0			STUD, M6x1.00x18

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	


AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Air Intake System 5.2L (ELF), 5.9L (EML), 5.9L (EMM) Engine
Figure 014-920

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:									
EL0 = All 5.2L 8 Cyl Gas Engines									
EM0 = All 5.9L 8 Cyl Gas Engines									
1	5303 0304	1				EL0, EM0			DUCT, Ambient Air

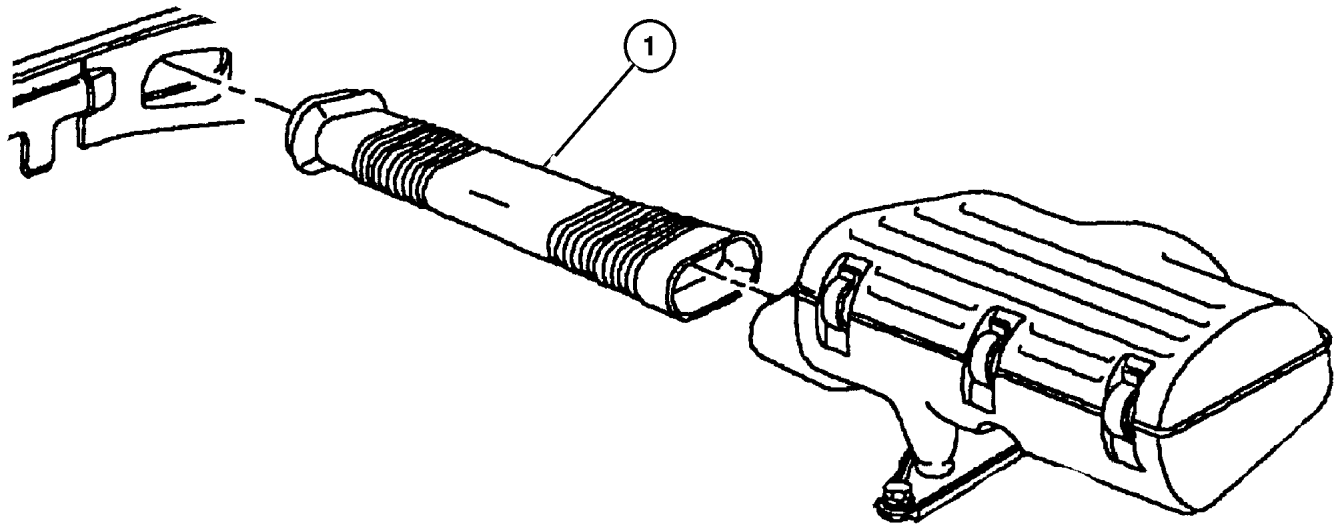

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005


Air Intake System 8.0L (EWA) Engine

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

EW0 = All 8.0L Gas Engines

1	5303 0165	1	EW0	HOSE, Air Cleaner to T/Body
2	5300 6584	2	EW0	CLAMP, Hose to Air Cleaner
3	5304 1043	1	EW0	DUCT, Ambient Air
4	0154 555	1	EW0	SCREW
5	5304 1042	1	EW0	DUCT, Ambient Air
6	6502 064	2	EW0	SCREW, Tapping, M6x1x20

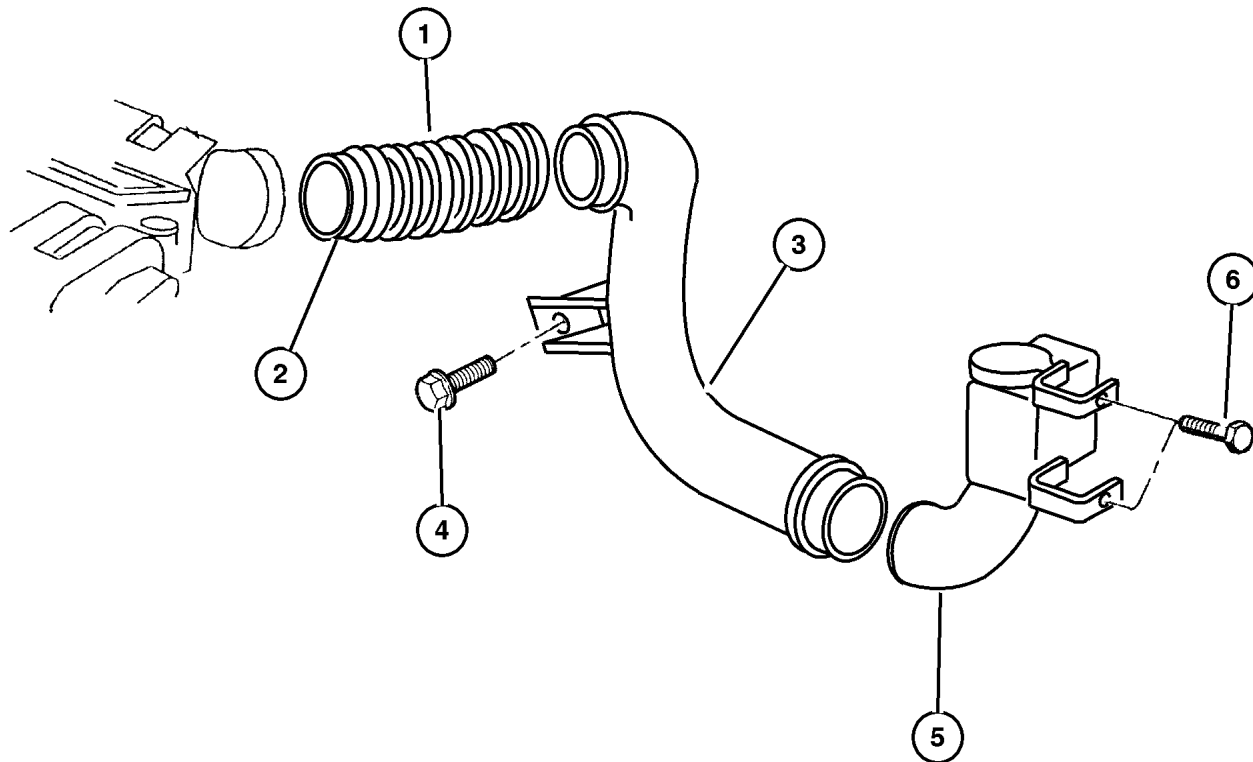


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

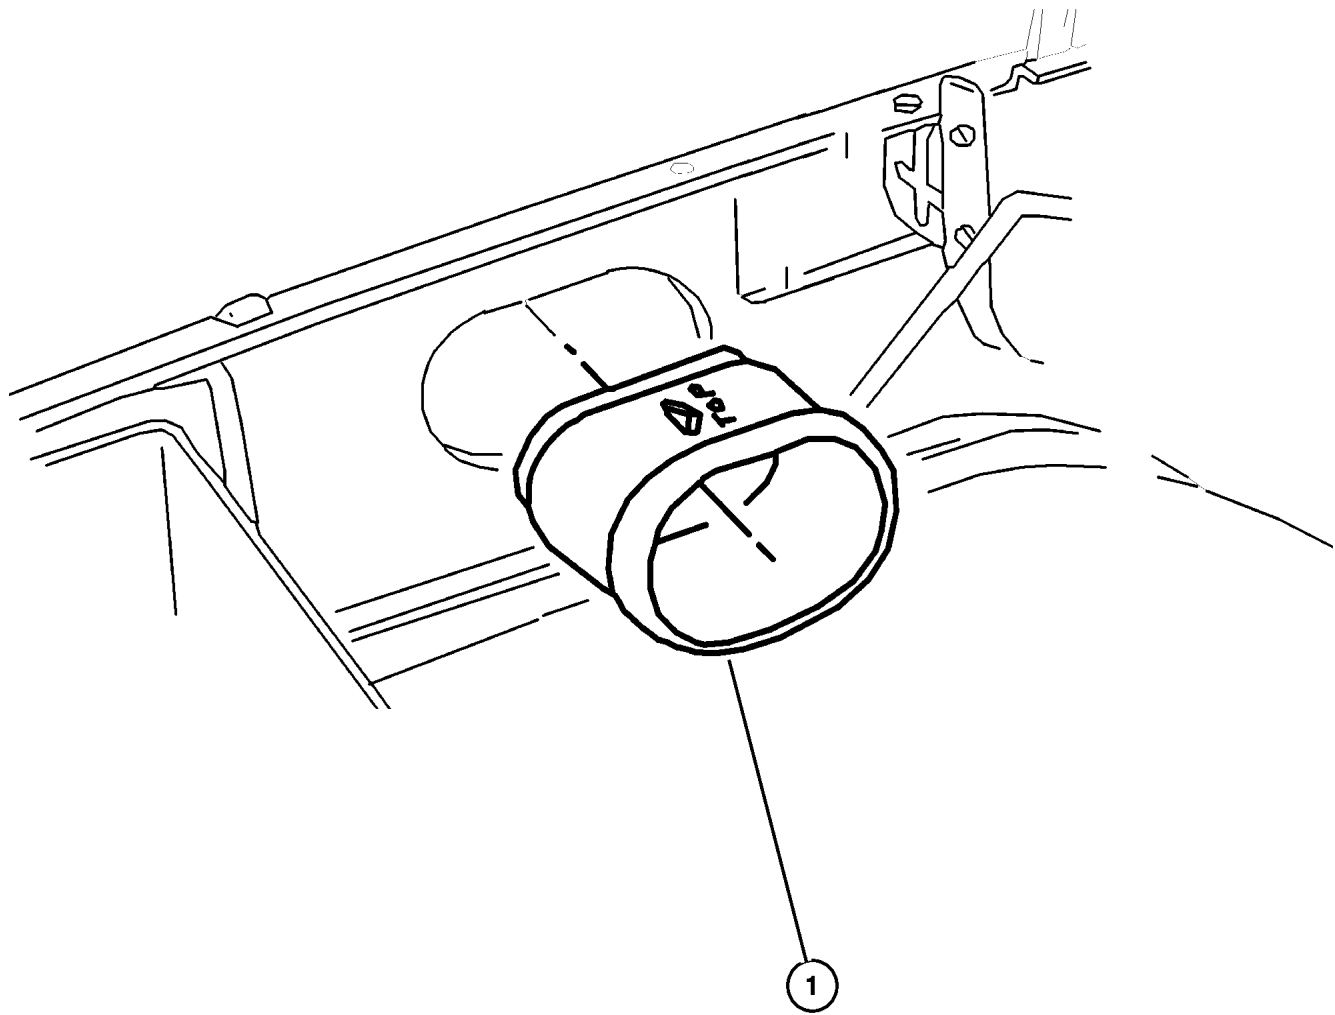Air Intake System 5.9L (ETC,ETH) Diesel Engine
Figure 014-935



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


Note:									
ET0 = All 5.9L Turbo Diesel Engines									
1	5303 1610	1				ET0			DUCT, Ambient Air

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

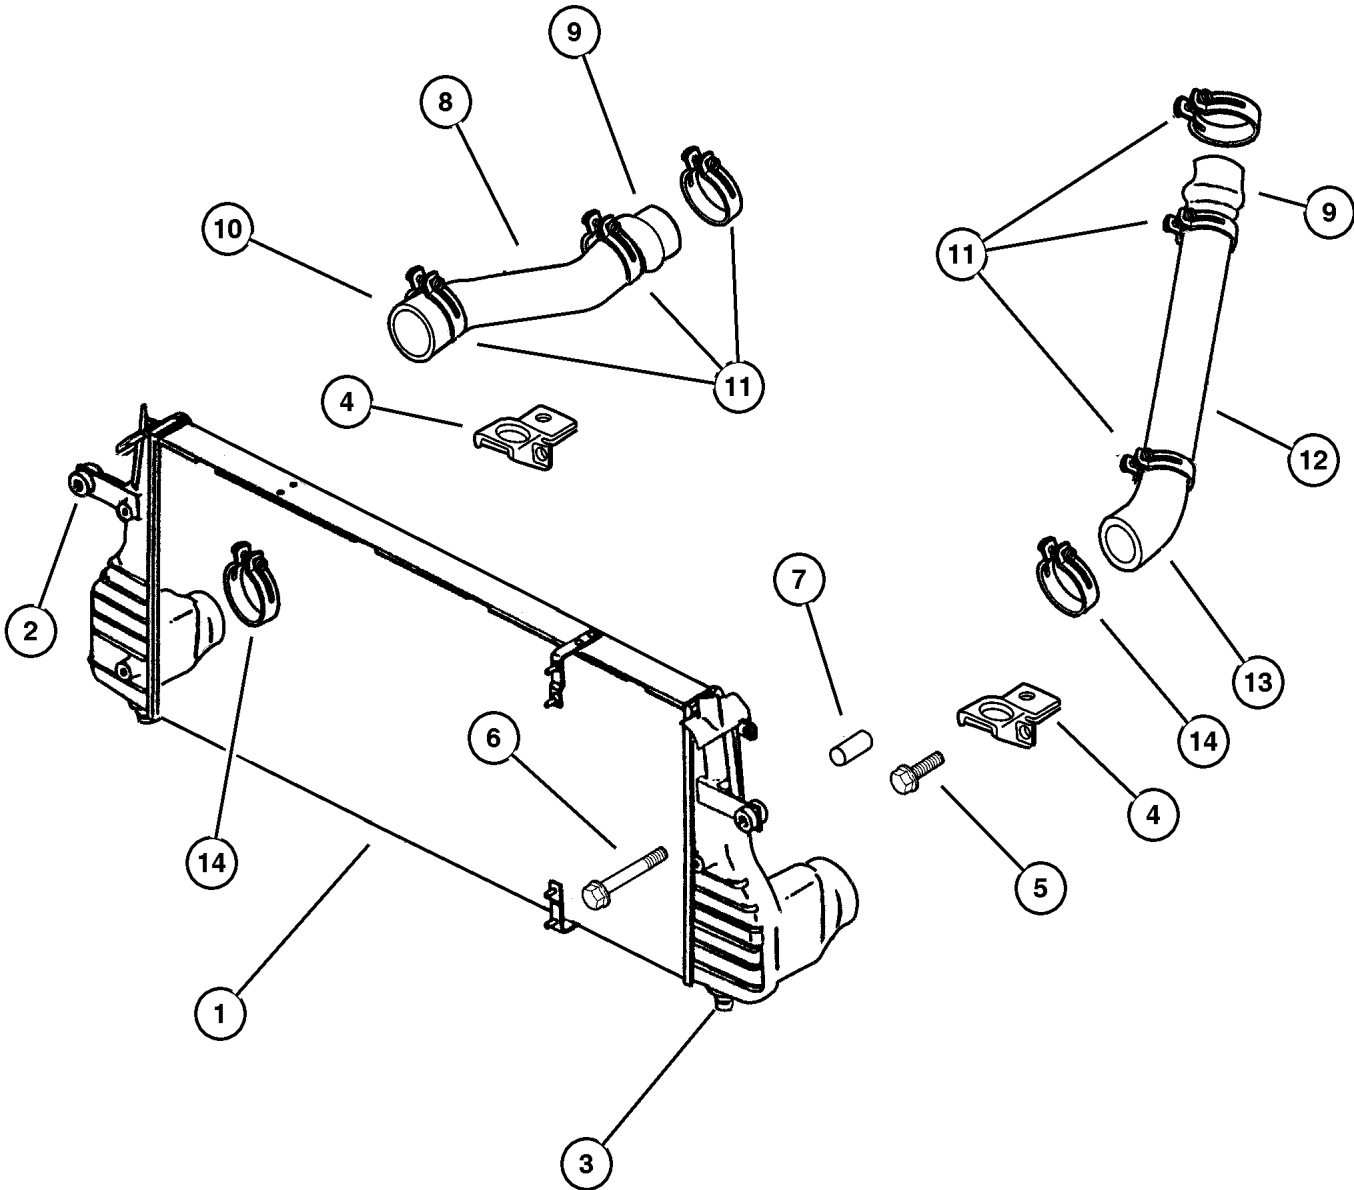Charge Air Cooler System 5.9L (ETC,ETH) Diesel Engine
Figure 014-945




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
ETC = 5.9L Cummins 24V Diesel Engine									
ETH = 5.9L HO Cummins Turbo Diesel Engine									
ET0 = All 5.9L Turbo Diesel Engines									
1	52028 724AC	1				ET0			COOLER, Charge Air
2	5202 7827	2				ETC			ISOLATOR, Radiator, All ETC's and ETH's
3	5202 7502	2				ETC			ISOLATOR, Radiator, All ETC'S and ETH's
4	5202 7724	1				ET0			BRACKET, Intercooler Right
	5202 7725	1				ET0			Left
5									SCREW, M8x1.25x20.00, (NOT SERVICED) (Not Serviced)
6									SCREW, M6x1.00x55.00, (NOT SERVICED) (Not Serviced)
7	6503 245	2				ET0			NUT/RIVET, Cooler To Closure Panel
8	5202 8489	1				ETC			DUCT, Charge Air Cooler, All ETC's and ETH's
9	52027 815AB	1				ETC			HOSE, Charge Air Cooler, All ETC's and ETH's
10	5202 7990	1				ETC			HOSE, Intercooler Intake
11	5202 7813	2				ET0			CLAMP, Hose Use this number up to 4-6-01
	52028 980AA	2				ET0			Use this number after 4-6-01
12	52028 492AB	1				ETC			DUCT, Charge Air Cooler, All ETC's and ETH's
13	5202 7516	1				ETC			HOSE, Outlet Duct To Cooler, All ETC's and ETH's
14	5202 7813	2				ET0			CLAMP, Hose Use this number up to 4-6-01
	52028 980AA	1				ET0			Use this number after 4-6-01 duct to engine
	52028 979AA	1				ET0			Charge air cooler to duct
-15	5202 7814	2				ET0			CLAMP

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

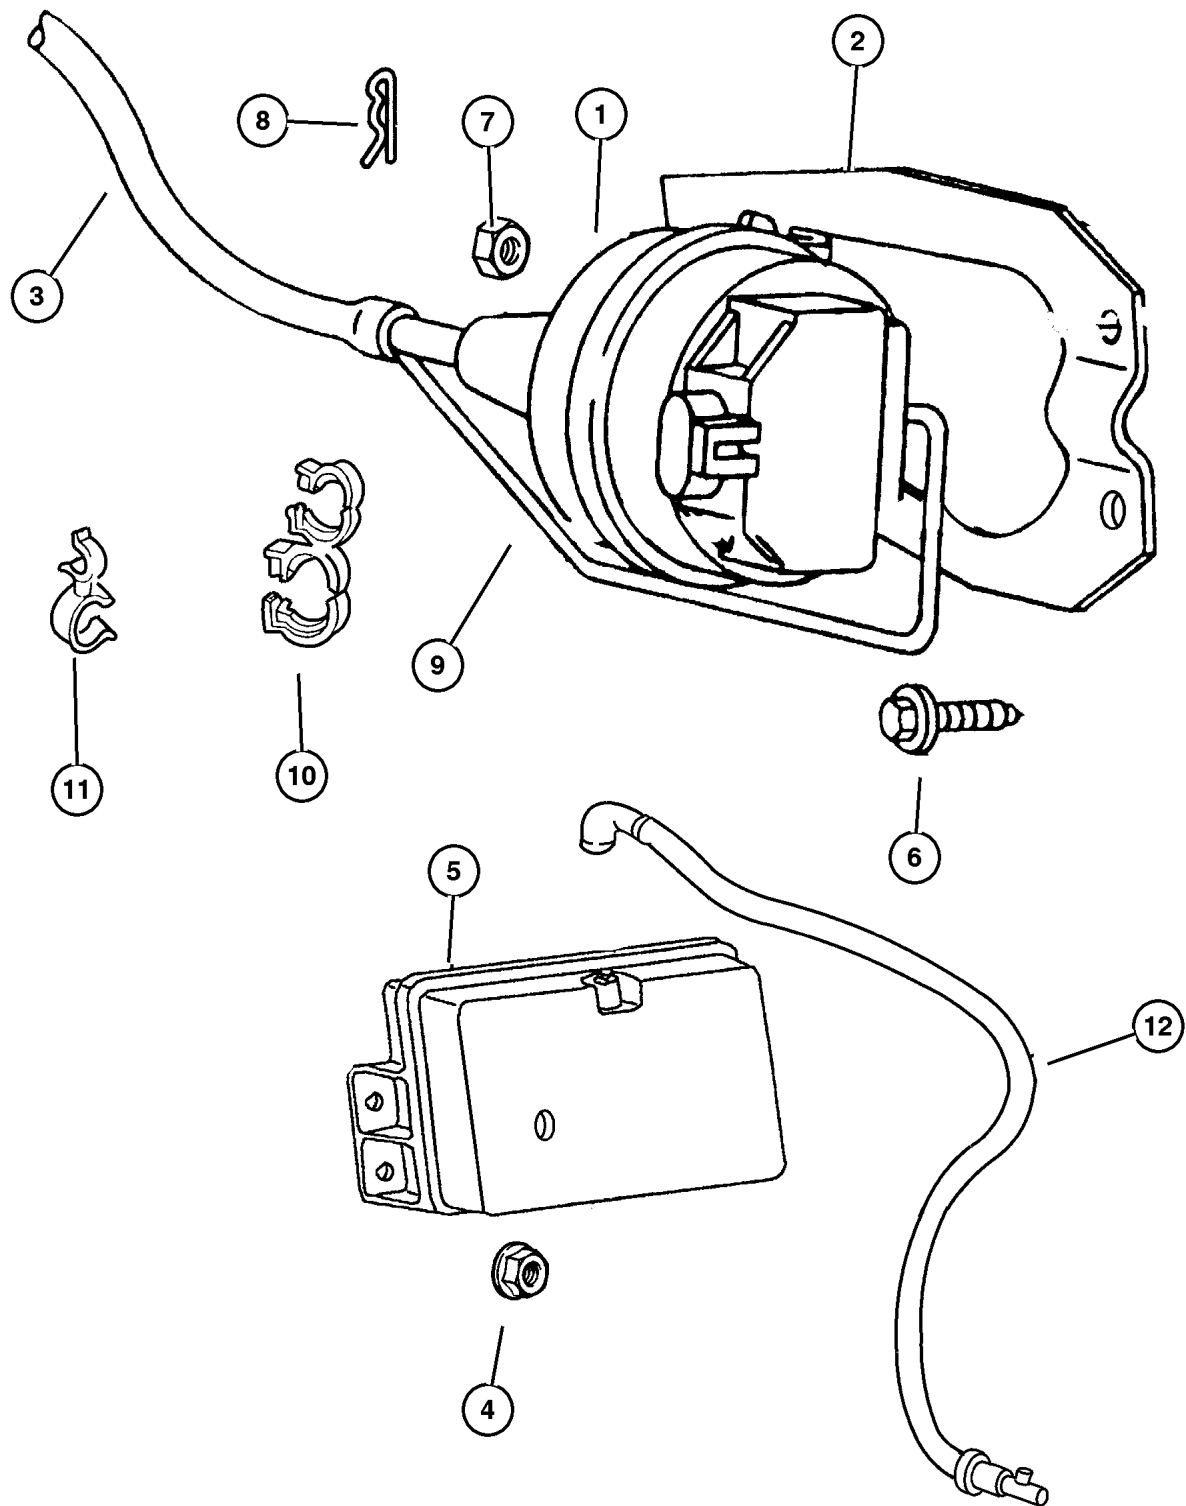Speed Control 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine
Figure 014-1030



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTE:

EL0 = All 5.2L 8 Cyl Gas Engines
EM0 = All 5.9L 8 Cyl Gas Engines
ETC = 5.9L Cummins 24V Diesel Engine
ET0 = All 5.9L Turbo Diesel Engines
EW0 = All 8.0L Gas Engines

1	4669 977	1				EL0, EM0			SERVO, Speed Control
		1				EW0			
		1				ET0			
2	5300 7958	1				EL0, EM0 EW0 ET0			BRACKET, Speed Control Servo
3	5303 1574 5207 8598 5207 9311	1 1 1				ETC EL0, EM0 EW0			CABLE, Speed Control
4	6100 775	2				EL0, EM0, EW0			NUT, Hex Flange, M5x.8
5	5503 5614	1				EL0, EM0, EW0			RESERVOIR, Vacuum
6	6032 988	3							SCREW
7	6502 493	2				EL0, EM0 EW0 ET0			NUT, Hex Flange Serration, M6x1
8	6025 867	1				EL0, EM0 EW0			CLIP, Cable to Servo Attach
9	5207 8320	1				EL0, EM0			HARNESS, Vacuum Speed Control


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

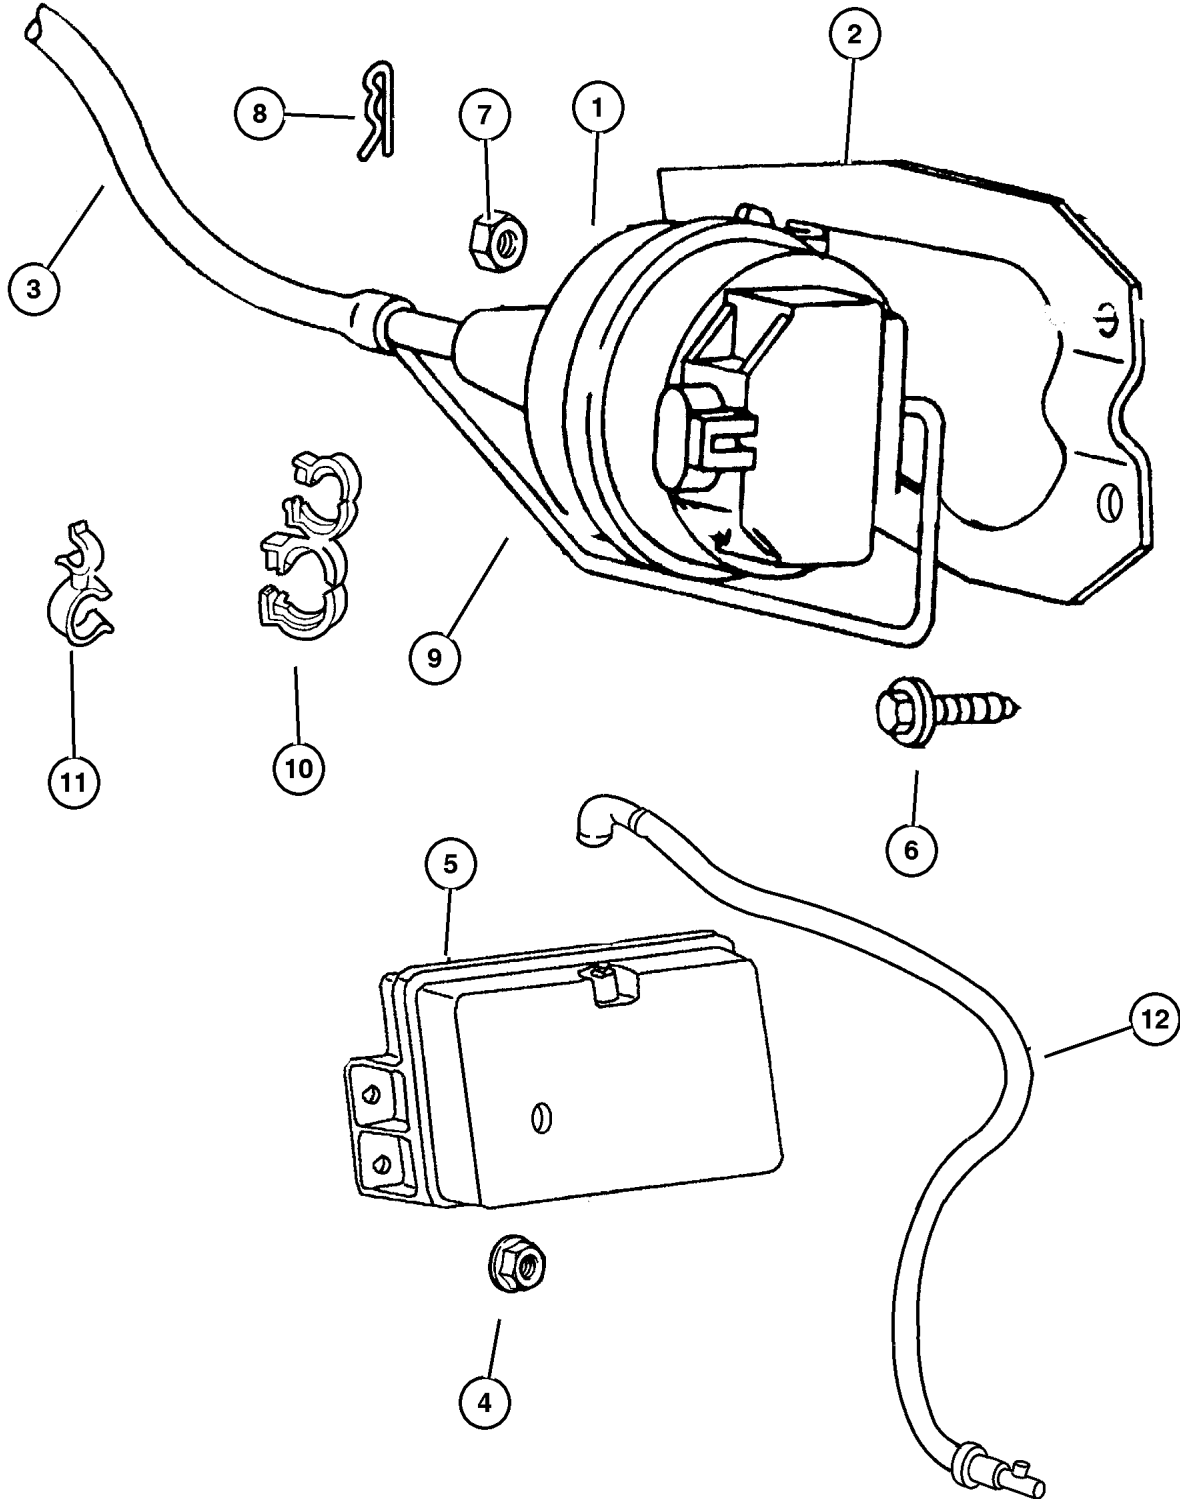Speed Control 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine
Figure 014-1030



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5207 8323	1				EW0			
		1				ET0			
10	5207 8479	2	6, 7, 8						CLIP, Vacuum Harness
11	6503 441	1				EL0, EM0			CLIP, Cruise Control
12	55055 705AB	1				EL0, EM0, EW0			HARNESS ASSEMBLY, vacuum
-13	5503 6068	1				EL0, EM0, EW0			VALVE, Vacuum Check, Also Served In Item #12


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Accelerator Pedal 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine
Figure 014-1120

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	5303 1526	1							LEVER, Accelerator Linkage
2	5207 8653	2							BUSHING, Accelerator Pedal

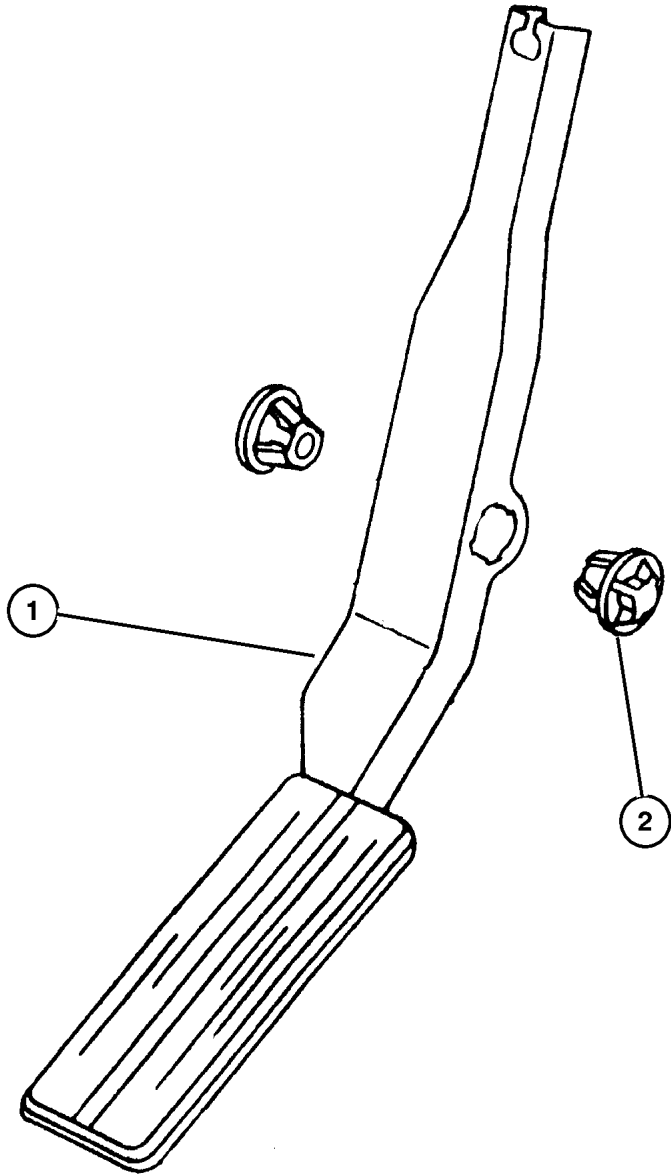

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Group – 016

Propeller Shafts and U-Joints


GROUP 16 - Propeller Shafts and U-Joints

Illustration Title

Group-Fig. No.


Propeller Shaft

Shaft,Propeller,Front,BE 6,7,8	Fig. 016-110
Shaft,Propeller,Rear,1 Piece,Body 31,33,BE 1,2,6,7	Fig. 016-120
Shaft,Propeller,Rear,2 Piece,Body 31,33,BE 1,2	Fig. 016-130
Shaft,Propeller,Rear,2 Piece,Body 34,BE 1,2,3,6,7,8	Fig. 016-140

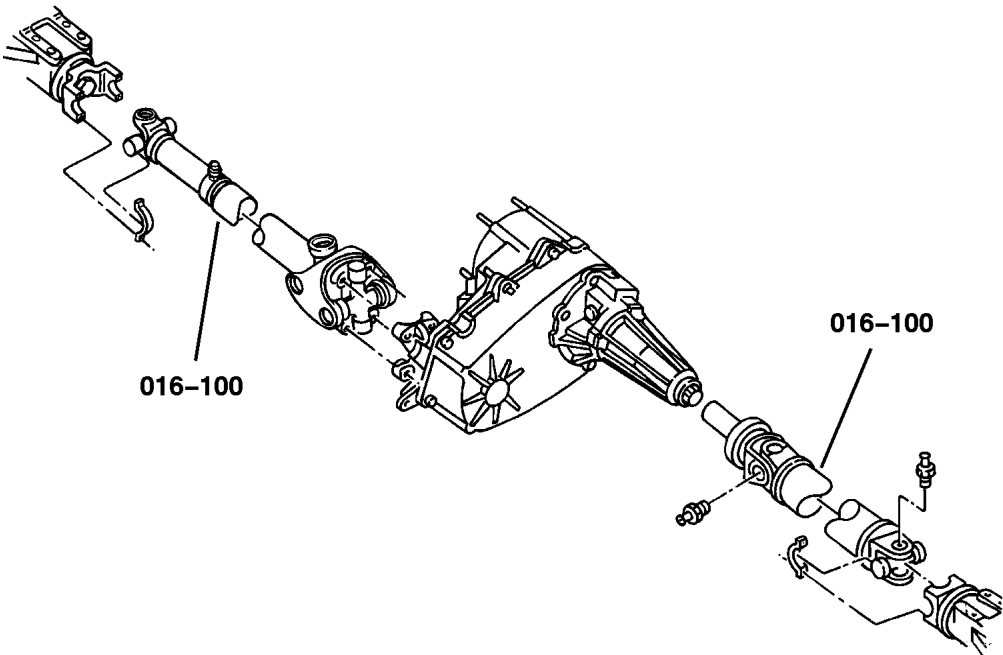

<div>016-100</div> <div>Propeller Shaft</div> <div></div>			
---	--	--	--

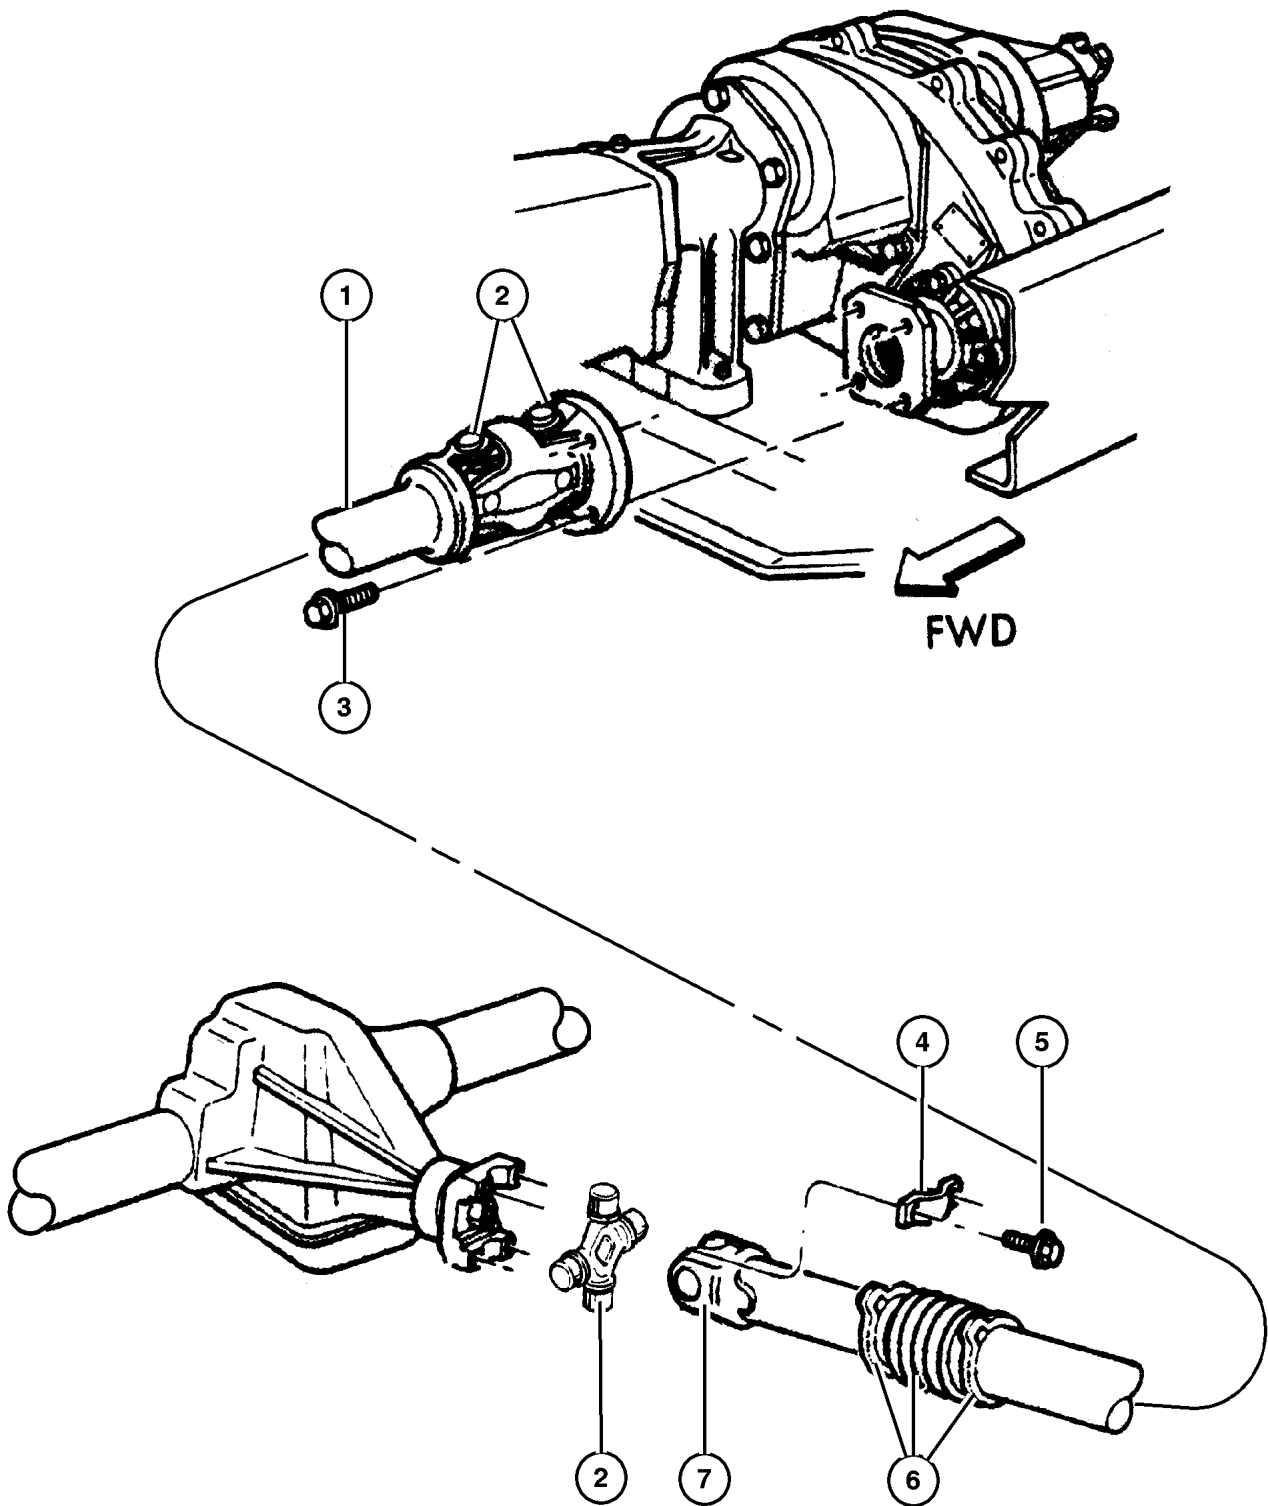Shaft,Propeller,Front,BE 6,7,8
 Figure 016-110




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: DBB = All Manual Transmissions DDC = 5 Speed Heavy Duty Manual Transmission DDP = 5 Speed Manual Transmission DDX = 5 Speed Heavy Duty Manual Transmission DEE = 6 Speed Heavy Duty Manual Transmission DGT = 4 Speed Automatic Transmission 46RE DHG = Transfer Case-Shift-on-the-Fly, 241HD DHH = Transfer Case-Shift-on-the-Fly, 241									
1									SHAFT, Drive, Front
	52105 871AB	1	6, 7, 8				DBB		
	52105 840AB	1	6, 7, 8				DDP		
	52105 871AB	1	6, 7, 8				DDX,		
							DGT		
	52105 866AB	1	6, 7, 8				DEE		
	52105 860AB	1	6, 7, 8				DG0		
	52105 862AB	1	6, 7, 8				DGP		[DHG]
	52105 860AB	1	6, 7, 8				DGP		[DHH]
2									U JOINT
	5014 733AA	3	6, 7, 8				DBB		
		3	6, 7, 8				DDP		
		3	6, 7, 8				DDX,		
							DGT		
		3	6, 7, 8				DEE		
		3	6, 7, 8				DG0		
		3	6, 7, 8				DGP		[DHG]
		3	6, 7, 8				DGP		[DHH]
3	6033 358	4	6, 7, 8						SCREW AND WASHER, Hex Head Locking, .437-14x1.25, Propeller Shaft to Transfer Case Flange
4	J324 0553	2	6, 7, 8						STRAP, Prop Shaft
5	J400 6928	4	6, 7, 8						BOLT
6									BOOT, Driveshaft
	5012 793AA	1	6, 7, 8				DBB		
		1	6, 7, 8				DDP		
		1	6, 7, 8				DDX,		
							DGT		
		1	6, 7, 8				DEE		
		1	6, 7, 8				DG0		
		1	6, 7, 8				DGP		[DHG]

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

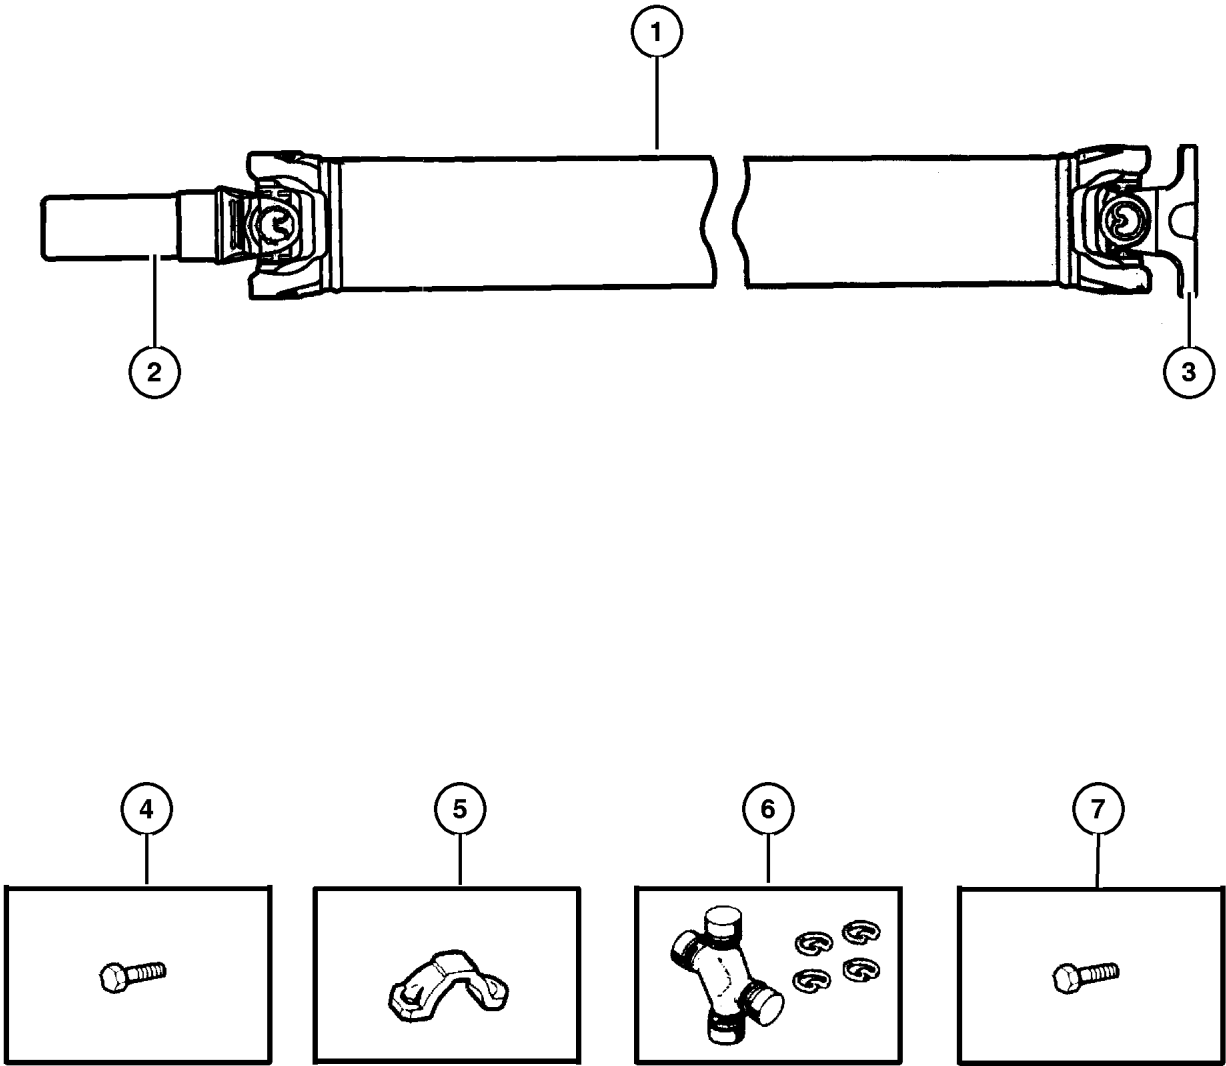Shaft,Propeller,Rear,1 Piece,Body 31,33,BE 1,2,6,7
Figure 016-120



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:
DDC = 5 Speed Heavy Duty Manual Transmission
DDP = 5 Speed Manual Transmission
DDX = 5 Speed Heavy Duty Manual Transmission
DEE = 6 Speed Heavy Duty Manual Transmission
DGT = 4 Speed Automatic Transmission 46RE
DHG = Transfer Case-Shift-on-the-Fly, 241HD
DHH = Transfer Case-Shift-on-the-Fly, 241
EML = "Magnum" 5.9L SMPI V8 Engine
EM0 = All 5.9L 8 Cyl Gas Engines
ET0 = All 5.9L Turbo Diesel Engines
EW0 = All 8.0L Gas Engines



1		SHAFT, Drive							
52105 800AA	1	1			31, 33		DGT		
52105 693AB	1	2			33	EML	DGT		
52105 275AB	1	2			33		DGP		
52105 769AA	1	6			31, 33		DGT		
52105 772AA	1	6			31, 33		DDC		
5210 5129	1	7			33		DDP		[DHG]
5210 5130	1	7			33		DGT		[DHG]
52105 283AB	1	7			33		DEE		[DHG]
5210 5122	1	7			33	ET0, EW0	DDX		[DHG]
5210 5290	1	7			33	ET0, EW0	DGP		[DHG]
52105 285AB	1	7			33		DEE		[DHH]
52105 284AB	1	7			33	ET0, EW0	DDX		[DHH]
5209 9255	1	7			33		DDP		[DHH]
5209 9195	1	7			33		DGT		[DHH]
5209 9183	1	7			33	ET0, EW0	DGP		[DHH]
2		YOKE, Drive Shaft							
5003 633AA	1	1			31, 33		DGT		with Shaft 52105800AA
5011 238AA	1	2			33	EML	DGT		with Shaft 52105693AB
	1	2			33		DGP		with Shaft 52105275AB
5014 043AA	1	6			31, 33		DGT		with Shaft 52105769AA
5014 042AA	1	6			31, 33		DDC		with Shaft 52105772AA
4882 185	1	7			33		DGT		with Shaft 52105130
	1	7			33		DEE		with Shaft 52105283AB

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

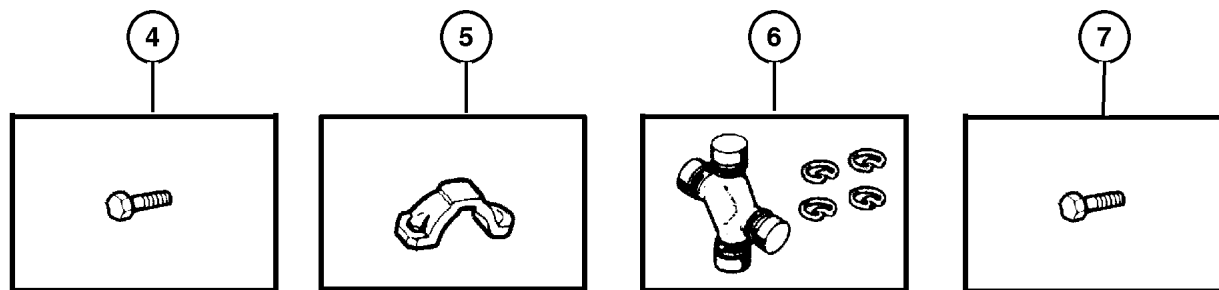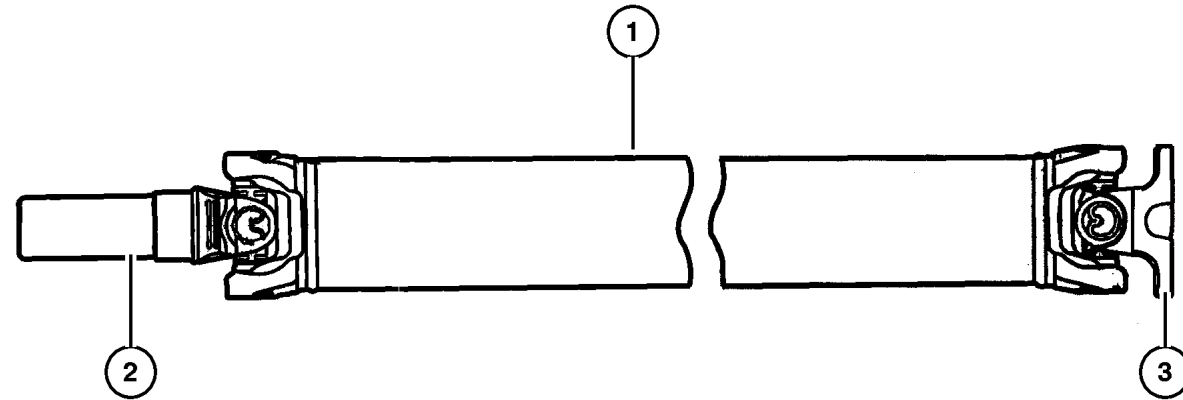Shaft,Propeller,Rear,1 Piece,Body 31,33,BE 1,2,6,7
Figure 016-120



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4773 017	1	7		33	ET0, EW0	DDX		with Shaft 52105284AB
	4882 180	1	7		33	ET0, EW0	DEE		with Shaft 52105285AB
		1	7		33		DGP		with Shaft 52105290
	4773 021	1	7		33		DGT		with Shaft 52099195
	4882 185	1	7		33	ET0, EW0	DDX		with Shaft 52105122
	4773 021	1	7		33		DDP		with Shaft 52099255
		1	7		33	ET0, EW0	DGP		with Shaft 52099183
	4882 185	1	7		33		DDP		with Shaft 52105129
3									FLANGE, Driveshaft Yoke
	5015 556AA	1	1		31, 33		DGT		with Shaft 52105800AA, Rear
		1	6		31, 33		DGT		with Shaft 52105769AA, Rear
		1	6		31, 33		DDC		with Shaft 52105772AA, Rear
4	6034 965	4	2, 3, 7, 8		33, 34				BOLT, Hex Head, Rear Propshaft U- Joint Mounting
5	4428 723	2	2, 3, 7, 8		33, 34				CLAMP, U-Joint, Rear Propshaft
6									U JOINT
	5014 733AA	2	1		31, 33		DGT		with Shaft 52105800AA
	5003 146AA	2	2		33	EML	DGT		with Shaft 52105693AB
		2	2		33		DGP		with Shaft 52105275AB
	5014 733AA	2	6		31, 33		DGT		with Shaft 52105769AA
		2	6		31, 33		DDC		with Shaft 52105772AA
	5003 146AA	2	7		33		DGT		with Shaft 52105130
		2	7		33		DEE		with Shaft 52105283AB
		2	7		33	ET0, EW0	DDX		with Shaft 52105284AB
		2	7		33		DEE		with Shaft 52105285AB
		2	7		33	ET0, EW0	DGP		with Shaft 52105290
		2	7		33		DGT		with Shaft 52099195
		2	7		33	ET0, EW0	DDX		with Shaft 52105122
		2	7		33		DDP		with Shaft 52099255
		2	7		33	ET0, EW0	DGP		with Shaft 52099183
		2	7		33		DDP		with Shaft 52105129
7	6505 288AA	4	1, 6						BOLT, Hex Head, Rear Propshaft Flange Mountng


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

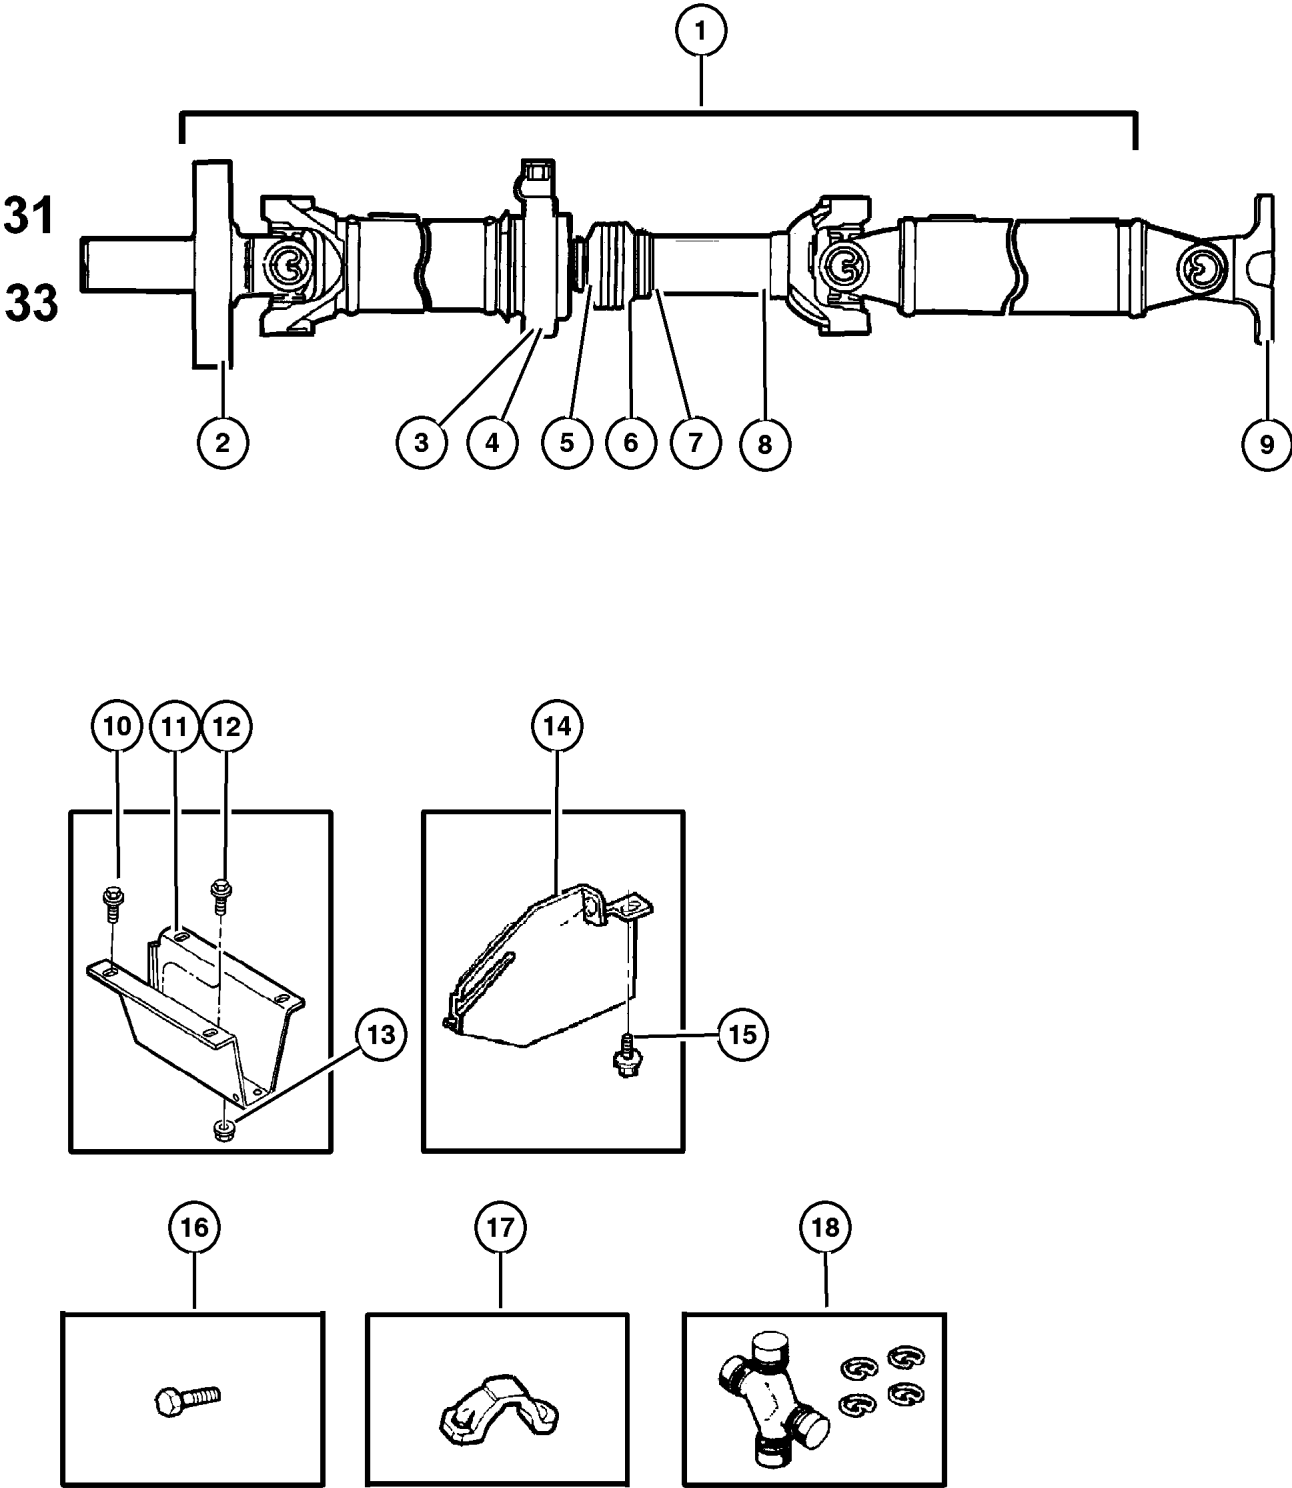Shaft,Propeller,Rear,2 Piece,Body 31,33,BE 1,2
 Figure 016-130



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

DBB = All Manual Transmissions
 DDC = 5 Speed Heavy Duty Manual Transmission
 DDP = 5 Speed Manual Transmission
 DDX = 5 Speed Heavy Duty Manual Transmission
 DEE = 6 Speed Heavy Duty Manual Transmission
 EML = "Magnum" 5.9L SMPI V8 Engine
 EM0 = All 5.9L 8 Cyl Gas Engines
 ET0 = All 5.9L Turbo Diesel Engines
 EW0 = All 8.0L Gas Engines

1	52105 805AA	1	1		31, 33		DDC		SHAFT, Drive, 2 Piece with Shaft 52105805AA
	52105 709AC	1	2		33	EML	DDP		with Shaft 52105709AC
	52105 276AE	1	2		33	ET0, EW0	DDX		with Shaft 52105276AE
		1	2		33	ET0	DEE		with Shaft 52105276AE
2	5014 041AA	1	1		31, 33		DDC		YOKE, Drive Shaft with Shaft 52105805AA
	4773 015	1	2		33	EML	DDP		with Shaft 52105709AC
	4882 170	1	2		33	ET0, EW0	DDX		with Shaft 52105276AE
		1	2		33	ET0	DEE		with Shaft 52105276AE
3	5014 097AA	1	1		31, 33		DDC		CENTER BEARING, Drive Shaft, with Shaft 52105805AA
4	5014 586AA	1	2		33	EML	DDP		BEARING, Drive Shaft with Shaft 52105709AC
		1	2		33	ET0, EW0	DDX		with Shaft 52105276AE
		1	2		33	ET0	DEE		with Shaft 52105276AE
5	5212 720	1	2		33	ET0	DEE		CLAMP, Boot with Shaft 52105276AE
		1	2		33	ET0, EW0	DDX		with Shaft 52105276AE
6	5012 793AA	1	1		31, 33		DDC		BOOT, Driveshaft with Shaft 52105805AA
	4428 807	1	2		33	ET0, EW0	DDX		with Shaft 52105276AE
		1	2		33	ET0	DEE		with Shaft 52105276AE
7	4428 808	1	2		33	ET0	DEE		CLAMP, Boot with Shaft 52105276AE


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

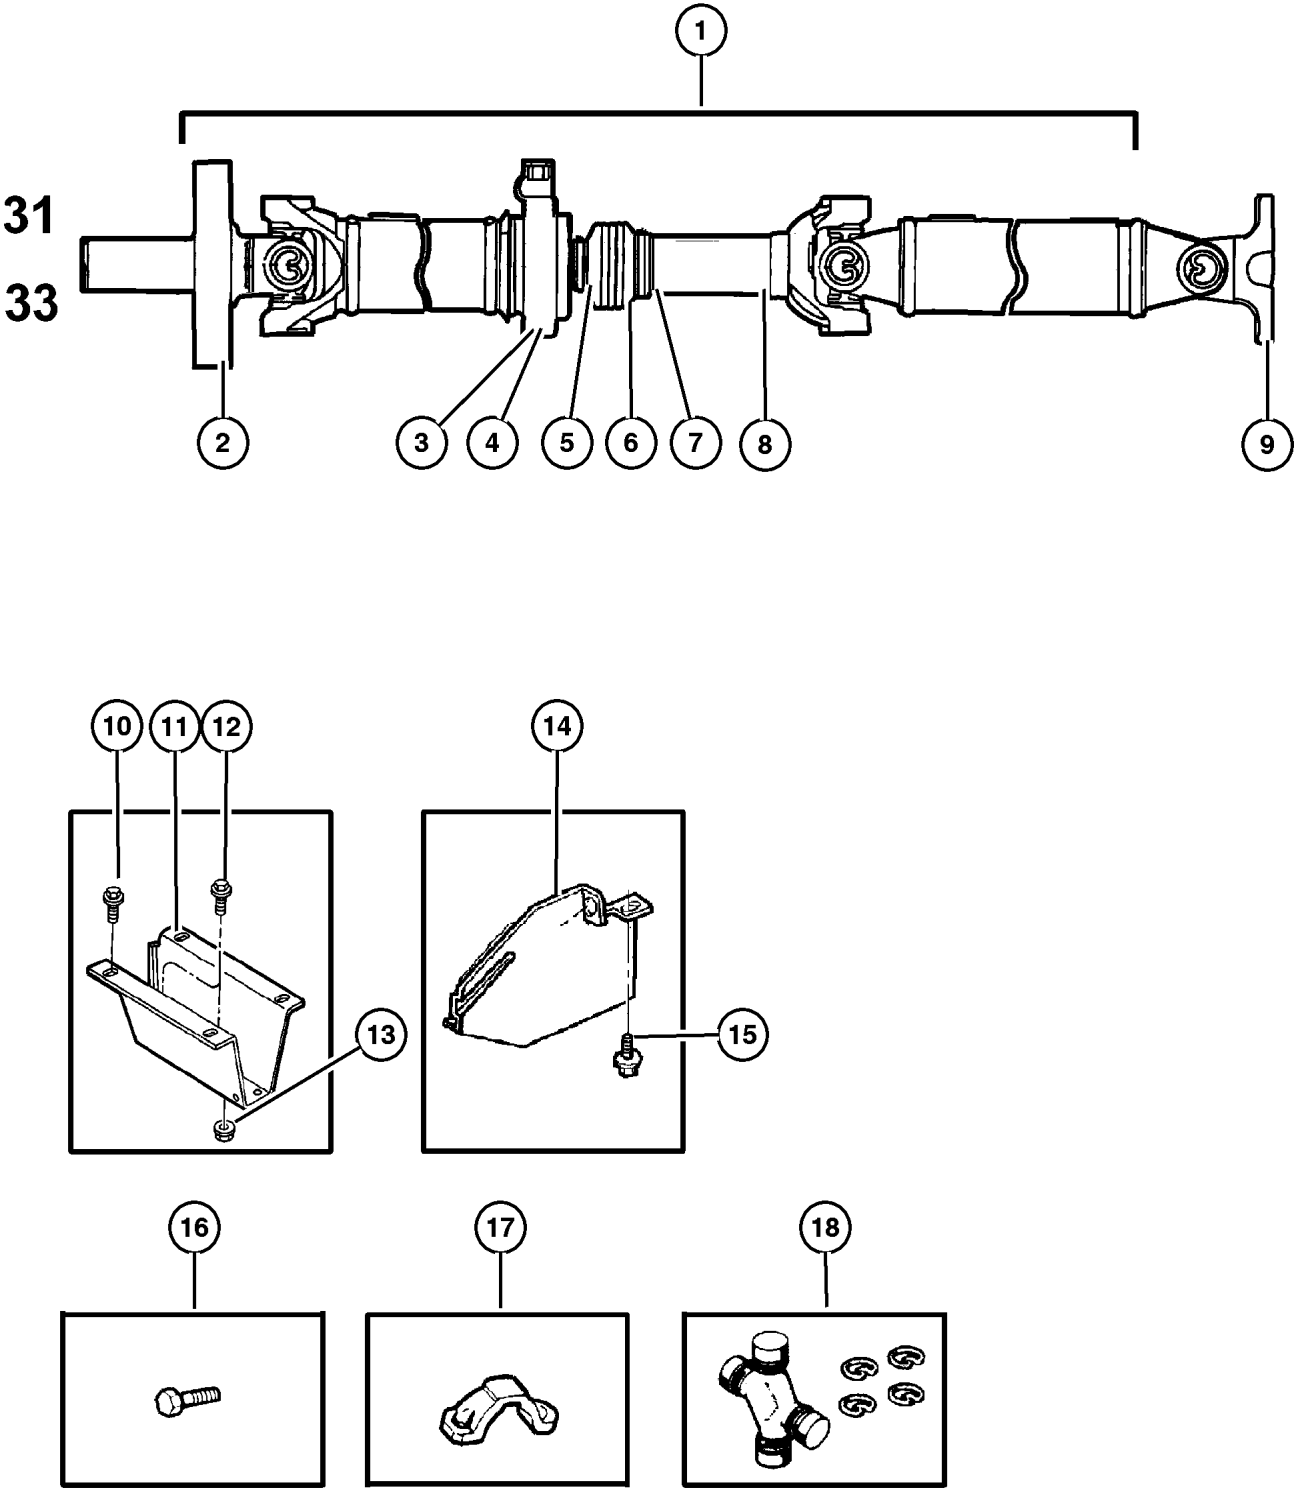Shaft,Propeller,Rear,2 Piece,Body 31,33,BE 1,2
 Figure 016-130




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	2		33	ET0, EW0	DDX		with Shaft 52105276AE
8	5014 056AA	1	1		31, 33		DDC		YOKE, Drive Shaft
	4428 804	1	2		33	EML	DDP		with Shaft 52105805AA
		1	2		33	ET0, EW0	DDX		with Shaft 52105709AC
9	5015 556AA	1	2		33	ET0	DEE		with Shaft 52105276AE
		1	1		31, 33		DDC		FLANGE, Driveshaft Yoke, with Shaft
									52105805AA
10	6101 060	4	1, 2				DBB		SCREW AND WASHER, Hex Head, M10x1.5x30, Center Bearing Bracket to Frame Crossmember
11	52105 337AC	1	1, 2		31, 33		DBB		Mounting BRACKET, Prop Shaft
12	6101 060	4	1, 2				DBB		SCREW AND WASHER, Hex Head, M10x1.5x30, Center Bearing
13	6101 696	6	1, 2				DBB		Mounting NUT, Center Bearing and Center Bearing Bracket Mounting
14	52105 387AA	1	1, 2		31, 33		DBB		SHIELD, Center Bearing, Heat
15	3420 1888	2							SCREW, Hex Head, Heat Shield Mounting
16	6505 288AA	4	1, 6						BOLT, Hex Head Drive Shaft Yoke Flange Mounting
	6034 965	4	2, 3, 7, 8		33, 34				Drive Shaft U-Joint Clamp Mounting
17	4428 723	2	2, 3, 7, 8		33, 34				CLAMP, U-Joint
18	5014 733AA	3	1		31, 33		DDC		with Shaft 52105805AA
	5003 146AA	2	2		33	EML	DDP		with Shaft 52105709AC
		1	2		33	ET0, EW0	DDX		with Shaft 52105276AE
		1	2		33	ET0	DEE		with Shaft 52105276AE

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

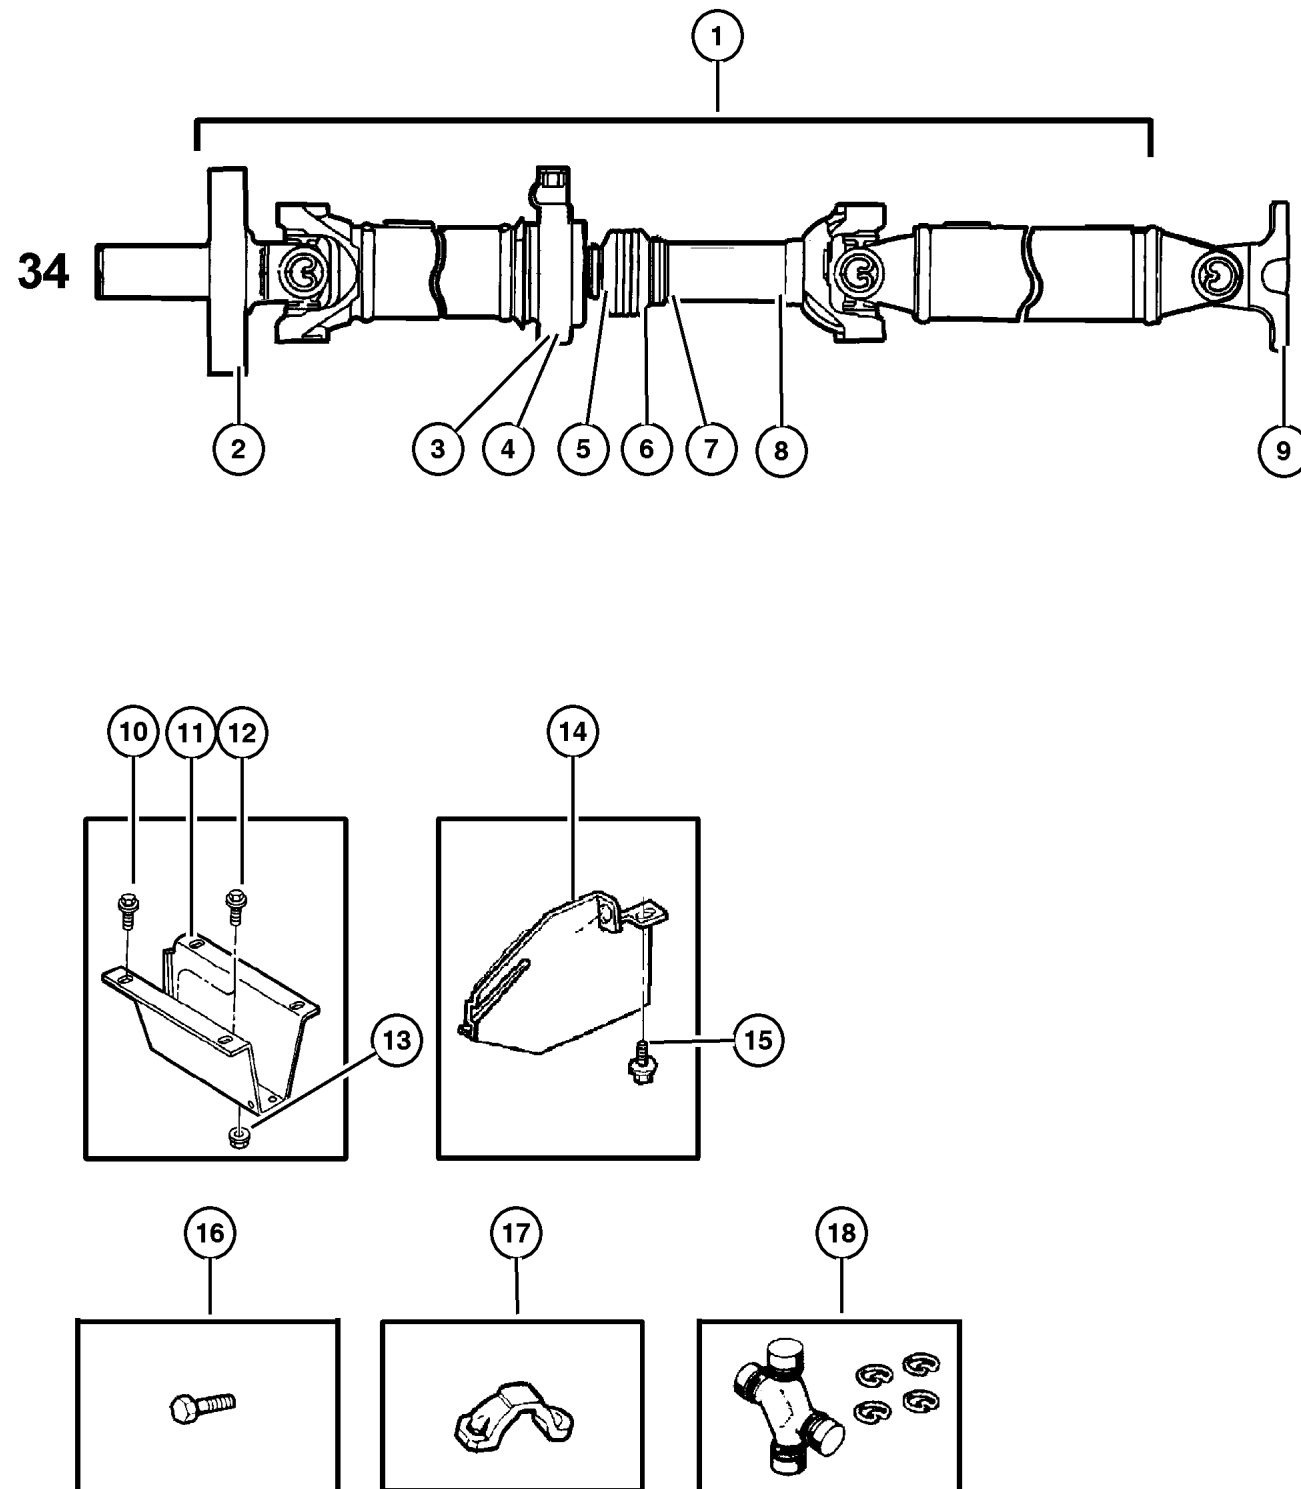Shaft,Propeller,Rear,2 Piece,Body 34,BE 1,2,3,6,7,8
Figure 016-140



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: DDC = 5 Speed Heavy Duty Manual Transmission DDP = 5 Speed Manual Transmission DDX = 5 Speed Heavy Duty Manual Transmission DEE = 6 Speed Heavy Duty Manual Transmission DGT = 4 Speed Automatic Transmission 46RE DHG = Transfer Case-Shift-on-the-Fly, 241HD DHH = Transfer Case-Shift-on-the-Fly, 241 EM0 = All 5.9L 8 Cyl Gas Engines ET0 = All 5.9L Turbo Diesel Engines EW0 = All 8.0L Gas Engines									
1									SHAFT, Drive, 2 Piece
	52105 806AA	1	1		34		DDC		
	52105 801AA	1	1		34		DGT		
	5210 5516	1	2		34		DGT		
	5210 5517	1	2		34		DDP		
	5210 5521	1	2		34		DGP		
	52105 520AD	1	2, 3		34	ET0, EW0	DDX		
		1	2, 3		34	ET0	DEE		
	5210 5519	1	3		34		DDP		
	5210 5518	1	3		34		DGT		
	5210 5523	1	3		34		DGP		
	52105 773AA	1	6		34		DDC		
	52105 770AA	1	6		34		DGT		
	5210 5529	1	7		34		DGP		[DHH]
	52105 535AC	1	7		34	ET0, EW0	DDX		[DHH]
	5210 5536	1	7		34		DDP		[DHG]
	5210 5537	1	7		34		DGT		[DHG]
	52105 277AB	1	7		34		DEE		[DHH]
	5210 5526	1	7		34		DDP		[DHH]
	5210 5527	1	7		34		DGT		[DHH]
	5210 5571	1	7		34		DGP		[DHG]
	52105 278AB	1	7, 8		34		DEE		[DHG]
	52105 552AC	1	7, 8		34	ET0, EW0	DDX		[DHG]
	5210 5546	1	8		34		DDP		
	5210 5553	1	8		34		DGP		[DHG]
	5210 5538	1	8		34	EM0	DGT		[DHG]
2									YOKE, Drive Shaft


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

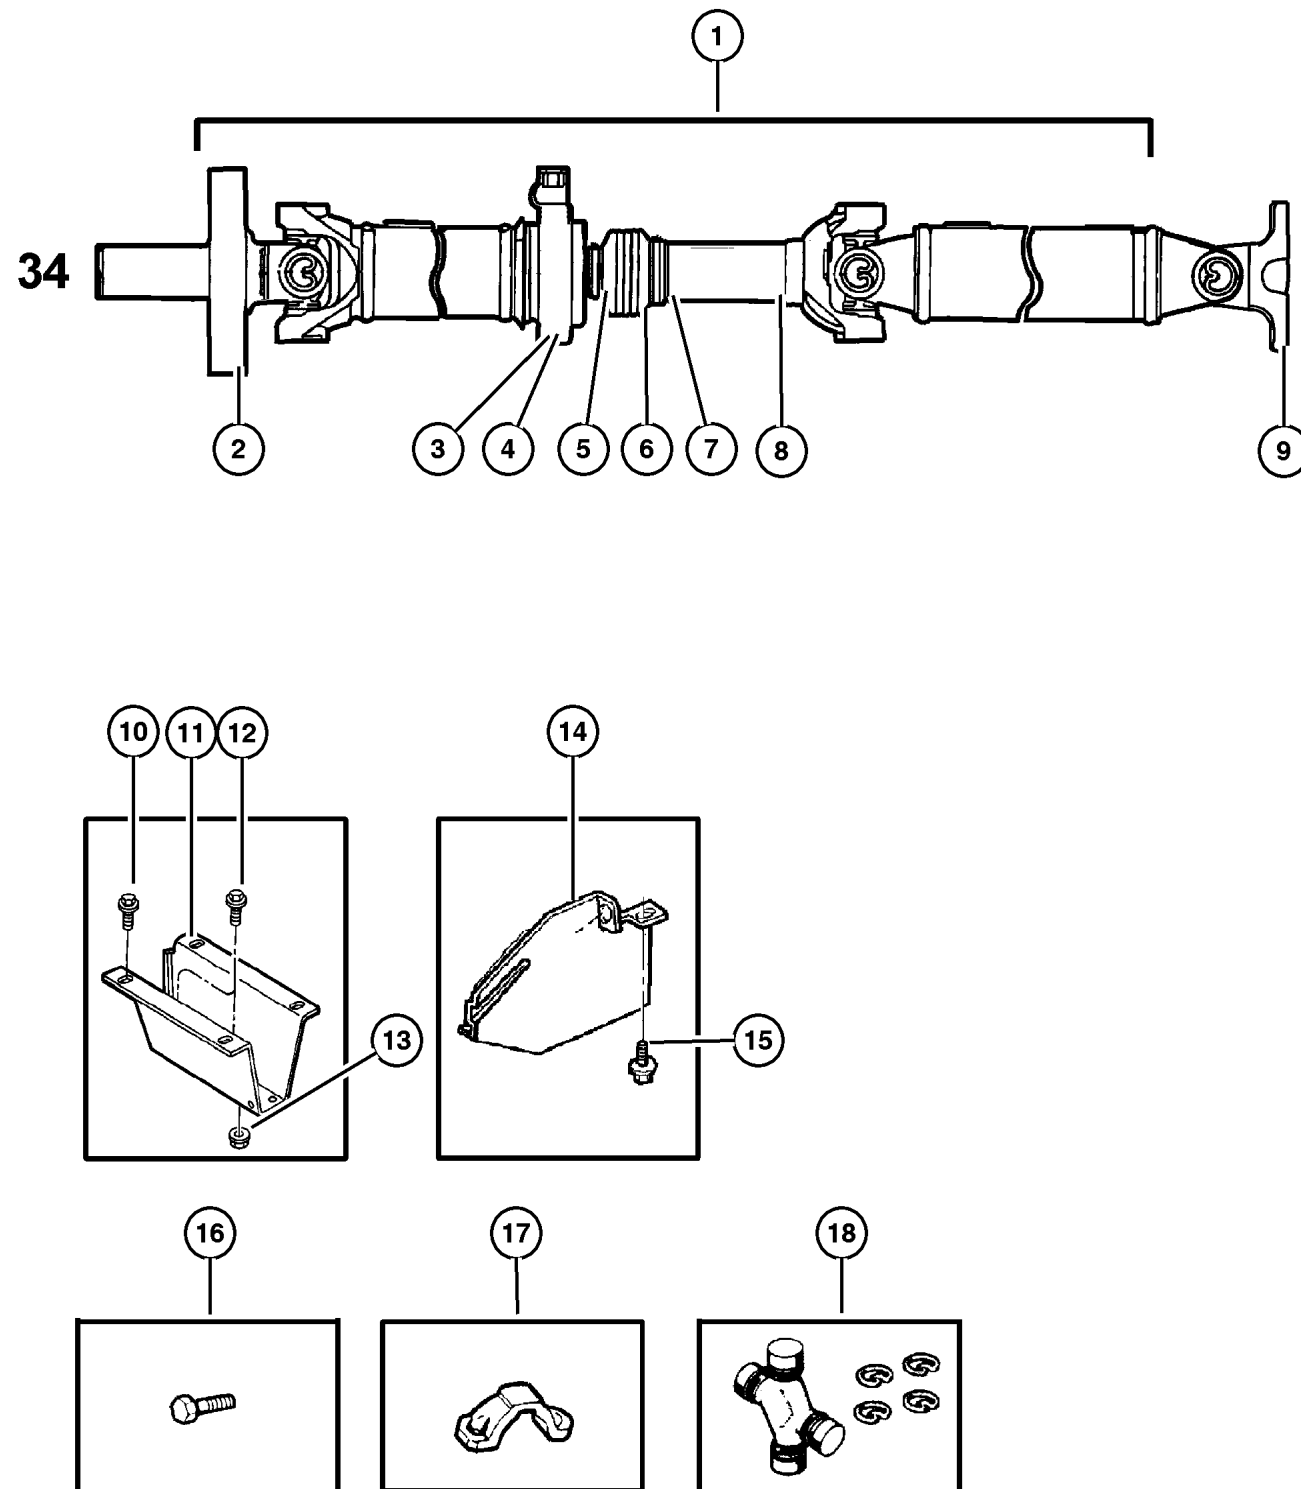Shaft,Propeller,Rear,2 Piece,Body 34,BE 1,2,3,6,7,8
Figure 016-140



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4773 017	1	7		34		DEE		with Shaft 52105277AB
	4882 170	1	7, 8		34		DEE		with Shaft 52105278AB
	4773 015	1	2		34		DGT		with Shaft 52105516
		1	2		34		DDP		with Shaft 52105517
		1	3		34		DGT		with Shaft 52105518
		1	3		34		DDP		with Shaft 52105519
	4882 170	1	2, 3		34	ET0	DEE		with Shaft 52105520AD
		1	2, 3		34	ET0, EW0	DDX		with Shaft 52105520AD
	4773 015	1	2		34		DGP		with Shaft 52105521
		1	3		34		DGP		with Shaft 52105523
	4773 017	1	7		34		DDP		with Shaft 52105526
		1	7		34		DGT		with Shaft 52105527
		1	7		34		DGP		with Shaft 52105529
		1	7		34	ET0, EW0	DDX		with Shaft 52105535AC
	4882 170	1	7		34		DDP		with Shaft 52105536
		1	7		34		DGT		with Shaft 52105537
		1	8		34	EM0	DGT		with Shaft 52105538
		1	8		34		DDP		with Shaft 52105546
		1	7, 8		34	ET0, EW0	DDX		with Shaft 52105552AC
		1	8		34		DGP		with Shaft 52105553
		1	7		34		DGP		with Shaft 52105571
	5014 043AA	1	6		34		DGT		with Shaft 52105770AA
	5014 042AA	1	6		34		DDC		with Shaft 52105773AA
	5014 044AA	1	1		34		DGT		with Shaft 52105801AA
	5014 041AA	1	1		34		DDC		with Shaft 52105806AA
3									CENTER BEARING, Drive Shaft
	5014 097AA	1	6		34		DGT		with Shaft 52105770AA
		1	6		34		DDC		with Shaft 52105773AA
		1	1		34		DGT		with Shaft 52105801AA
		1	1		34		DDC		with Shaft 52105806AA
4									BEARING, Drive Shaft
	4773 014	1	7		34		DEE		with Shaft 52105277AB
		1	7, 8		34		DEE		with Shaft 52105278AB
		1	2		34		DGT		with Shaft 52105516
		1	2		34		DDP		with Shaft 52105517
		1	3		34		DGT		with Shaft 52105518
		1	3		34		DDP		with Shaft 52105519

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

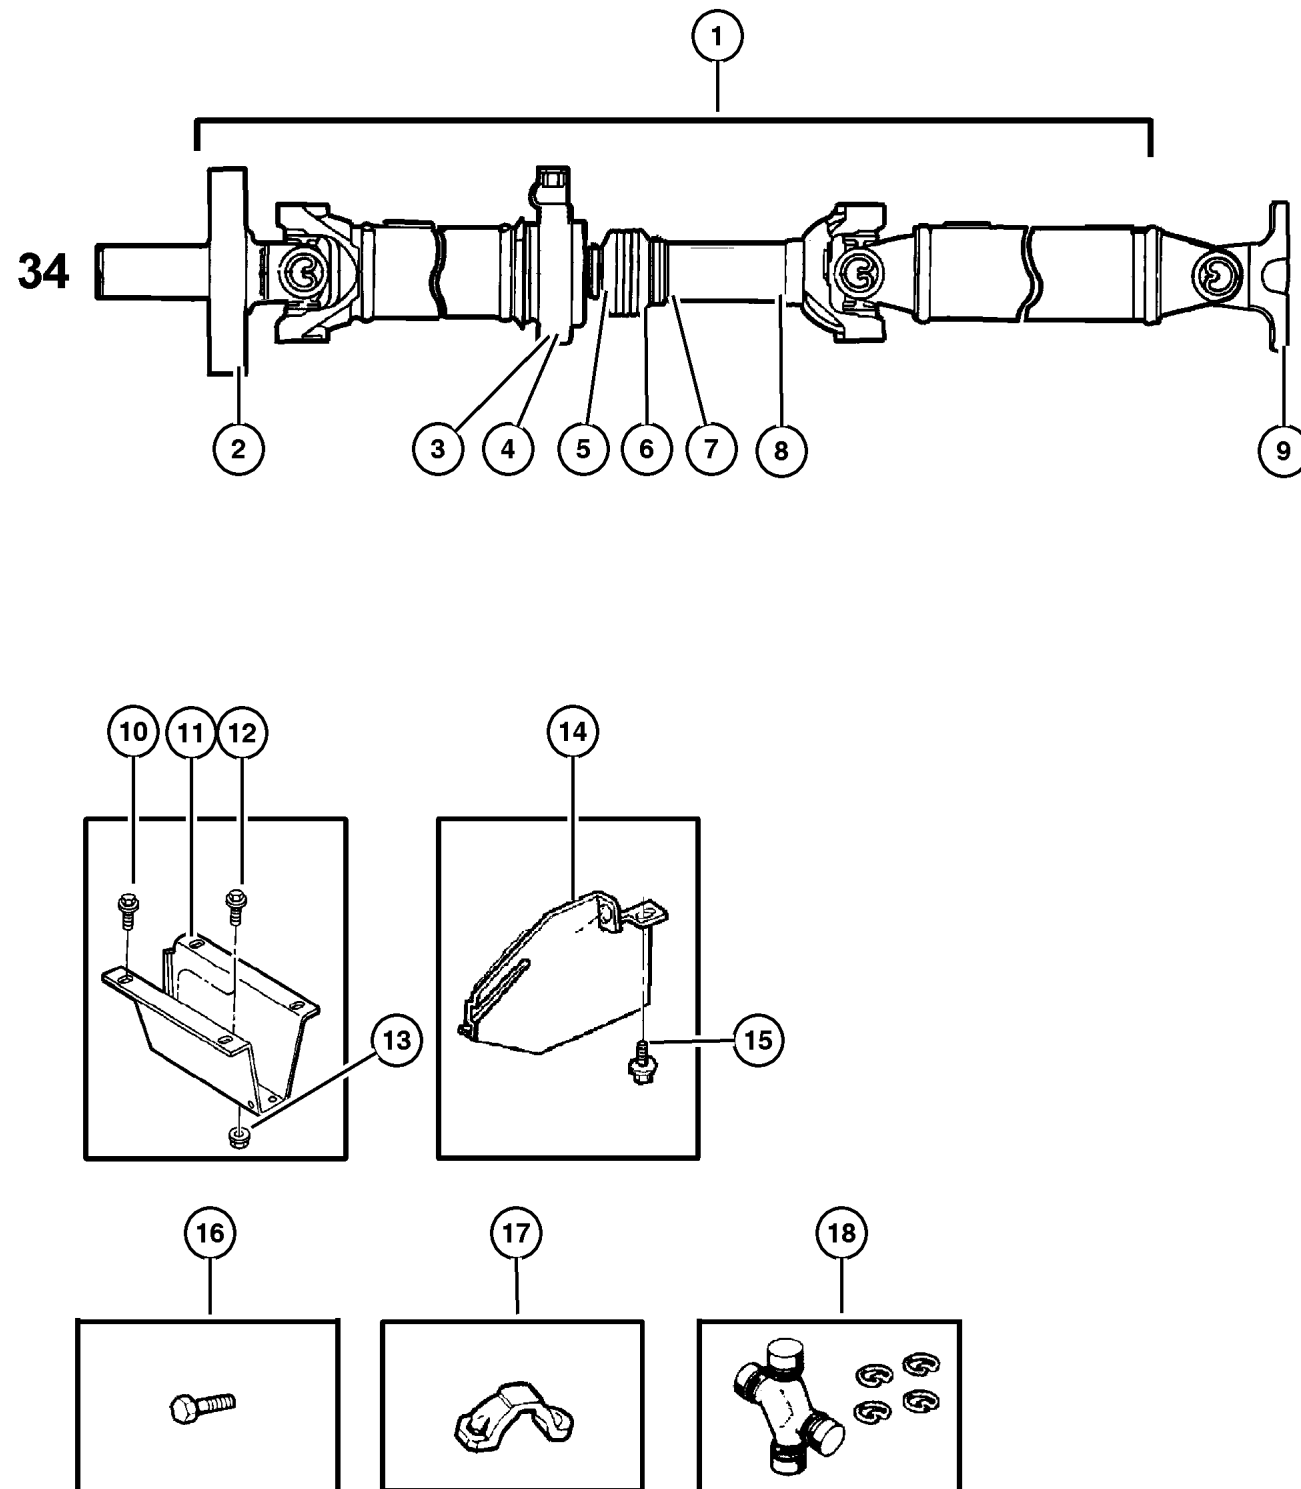
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Shaft,Propeller,Rear,2 Piece,Body 34,BE 1,2,3,6,7,8
Figure 016-140



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	2, 3		34	ET0, EW0	DDX		with Shaft 52105520AD
		1	2, 3		34	ET0	DEE		with Shaft 52105520AD
		1	2		34		DGP		with Shaft 52105521
		1	3		34		DGP		with Shaft 52105523
		1	7		34		DDP		with Shaft 52105526
		1	7		34		DGT		with Shaft 52105527
		1	7		34		DGP		with Shaft 52105529
		1	7		34	ET0, EW0	DDX		with Shaft 52105535AC
		1	7		34		DDP		with Shaft 52105536
		1	7		34		DGT		with Shaft 52105537
		1	8		34	EM0	DGT		with Shaft 52105538
		1	8		34		DDP		with Shaft 52105546
		1	7, 8		34	ET0, EW0	DDX		with Shaft 52105552AC
		1	8		34		DGP		with Shaft 52105553
		1	7		34		DGP		with Shaft 52105571
5	5212 720	1	7		34		DEE		CLAMP, Boot with Shaft 52105277AB
		1	7, 8		34		DEE		with Shaft 52105278AB
		1	2		34		DGT		with Shaft 52105516
		1	2		34		DDP		with Shaft 52105517
		1	3		34		DGT		with Shaft 52105518
		1	3		34		DDP		with Shaft 52105519
		1	2, 3		34	ET0	DEE		with Shaft 52105520AD
		1	2, 3		34	ET0, EW0	DDX		with Shaft 52105520AD
		1	2		34		DGP		with Shaft 52105521
		1	3		34		DGP		with Shaft 52105523
		1	7		34		DDP		with Shaft 52105526
		1	7		34		DGT		with Shaft 52105527
		1	7		34		DGP		with Shaft 52105529
		1	7		34	ET0, EW0	DDX		with Shaft 52105535AC
		1	7		34		DDP		with Shaft 52105536
		1	7		34		DGT		with Shaft 52105537
		1	8		34	EM0	DGT		with Shaft 52105538
		1	8		34		DDP		with Shaft 52105546

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

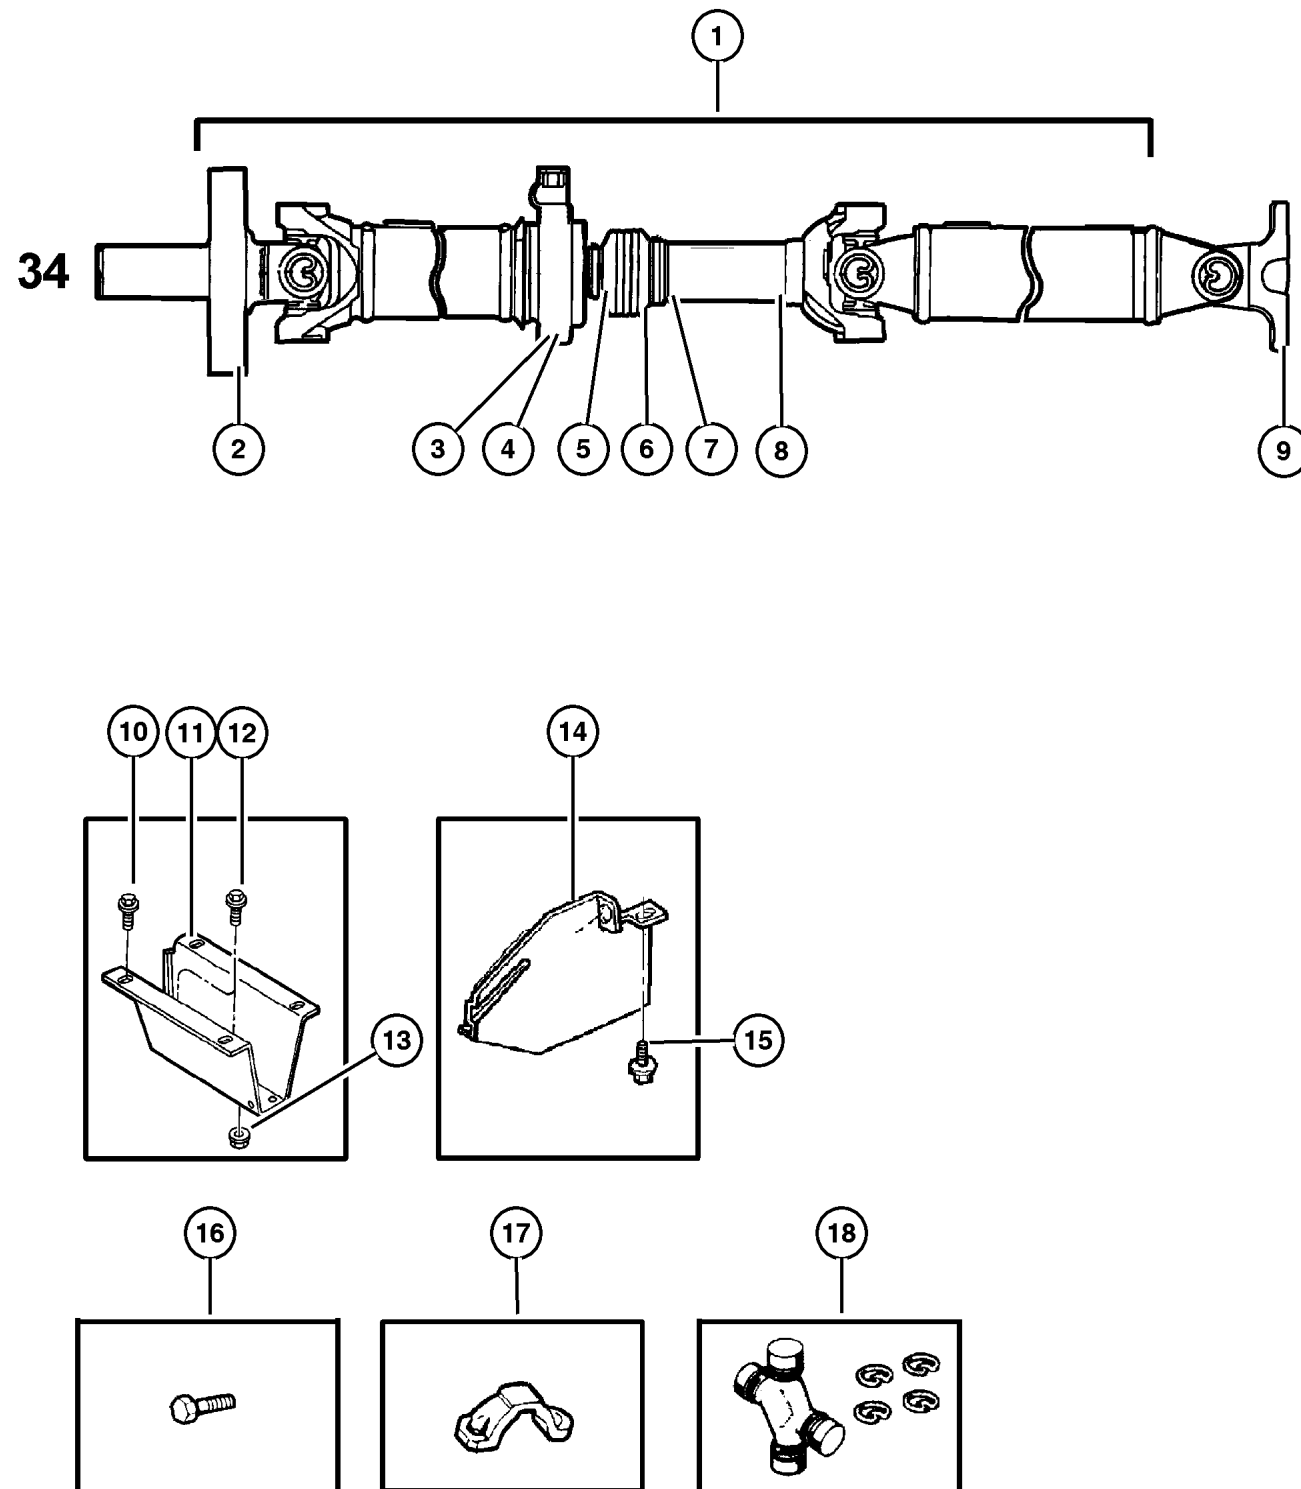
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Shaft,Propeller,Rear,2 Piece,Body 34,BE 1,2,3,6,7,8
Figure 016-140



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	7, 8		34	ET0, EW0	DDX		with Shaft 5210552AC
		1	8		34		DGP		with Shaft 52105553
		1	7		34		DGP		with Shaft 52105571
6									BOOT, Driveshaft
	4428 807	1	7		34		DEE		with Shaft 52105277AB
		1	7, 8		34		DEE		with Shaft 52105278AB
		1	2		34		DGT		with Shaft 52105516
		1	2		34		DDP		with Shaft 52105517
		1	3		34		DGT		with Shaft 52105518
		1	3		34		DDP		with Shaft 52105519
		1	2, 3		34	ET0	DEE		with Shaft 52105520AD
		1	2, 3		34	ET0, EW0	DDX		with Shaft 52105520AD
		1	2		34		DGP		with Shaft 52105521
		1	3		34		DGP		with Shaft 52105523
		1	7		34		DDP		with Shaft 52105526
		1	7		34		DGT		with Shaft 52105527
		1	7		34		DGP		with Shaft 52105529
		1	7		34	ET0, EW0	DDX		with Shaft 52105535AC
		1	7		34		DDP		with Shaft 52105536
		1	7		34		DGT		with Shaft 52105537
		1	8		34	EM0	DGT		with Shaft 52105538
		1	8		34		DDP		with Shaft 52105546
		1	7, 8		34	ET0, EW0	DDX		with Shaft 5210552AC
		1	8		34		DGP		with Shaft 52105553
		1	7		34		DGP		with Shaft 52105571
	5012 793AA	1	6		34		DGT		with Shaft 52105770AA
		1	6		34		DDC		with Shaft 52105773AA
		1	1		34		DGT		with Shaft 52105801AA
		1	1		34		DDC		with Shaft 52105805AA
7									CLAMP, Boot
	4428 808	1	7		34		DEE		with Shaft 52105277AB
		1	7, 8		34		DEE		with Shaft 52105278AB
		1	2		34		DGT		with Shaft 52105516
		1	2		34		DDP		with Shaft 52105517
		1	3		34		DGT		with Shaft 52105518
		1	3		34		DDP		with Shaft 52105519

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

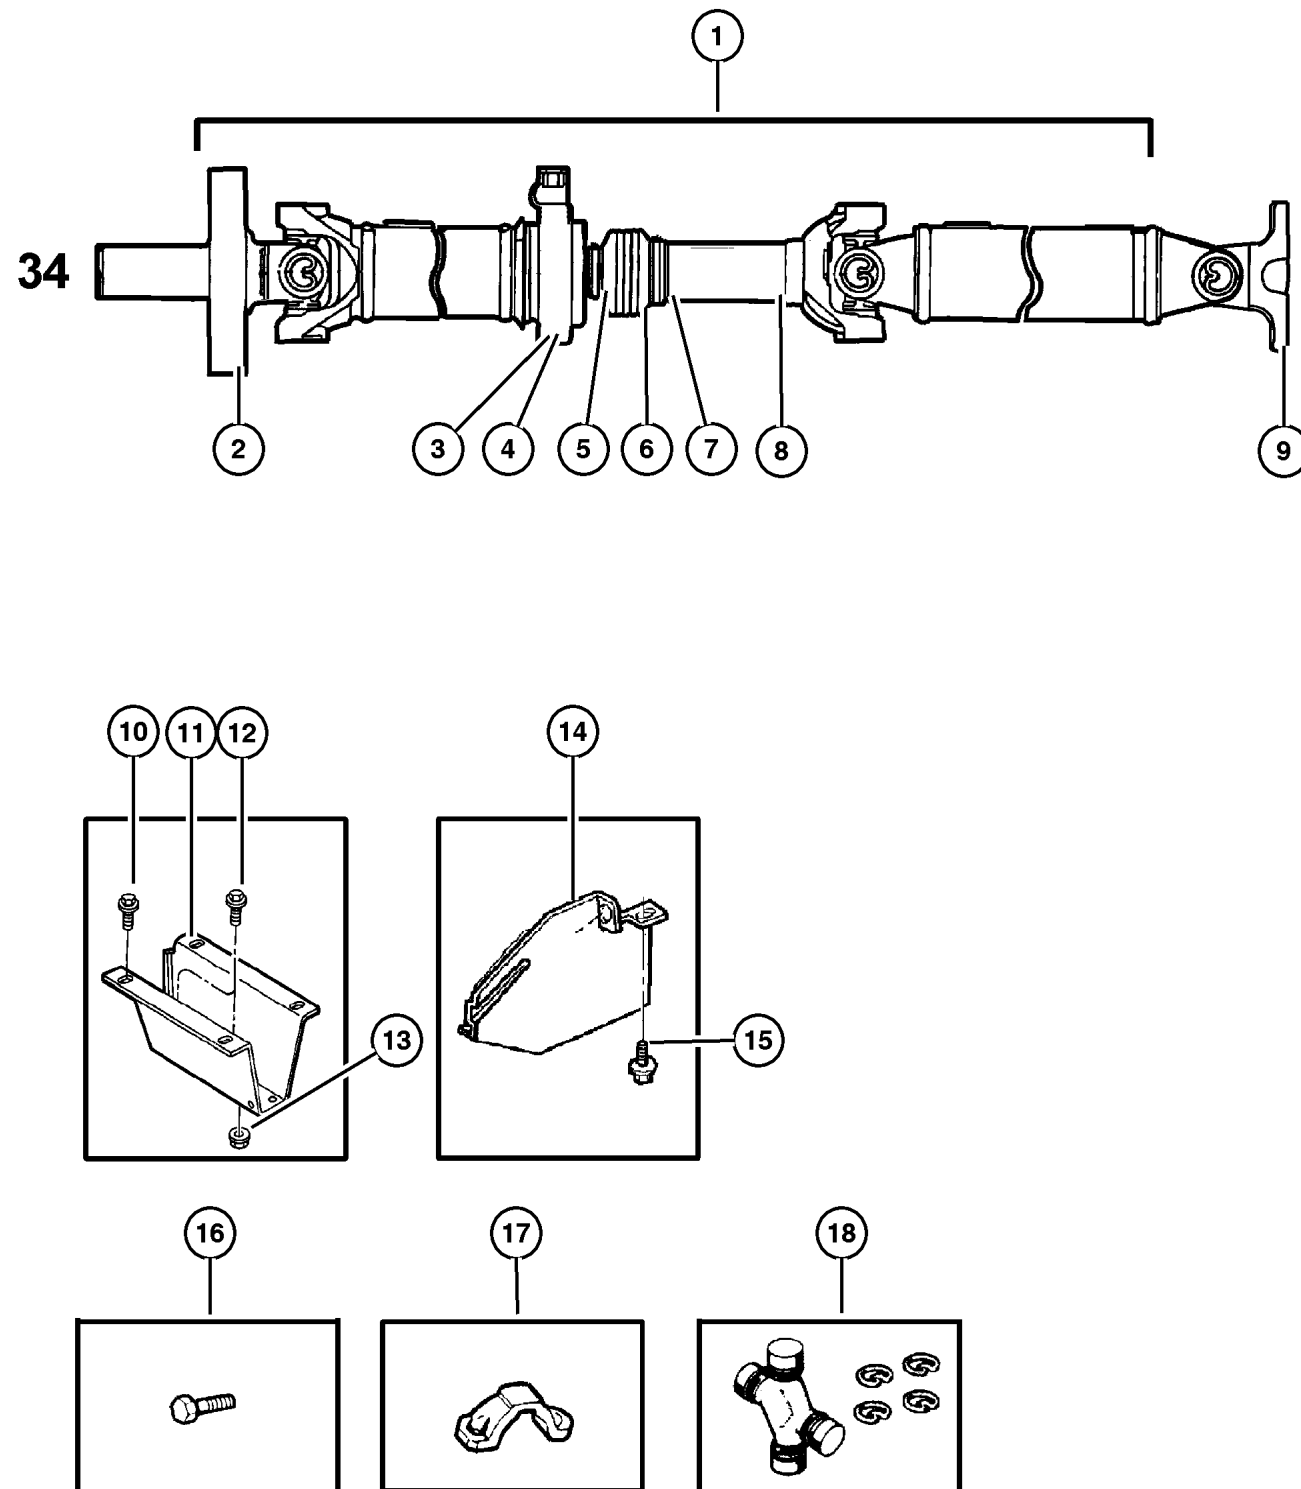
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Shaft,Propeller,Rear,2 Piece,Body 34,BE 1,2,3,6,7,8
Figure 016-140



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	2, 3		34	ET0	DEE		with Shaft 52105520AD
		1	2, 3		34	ET0, EW0	DDX		with Shaft 52105520AD
		1	2		34		DGP		with Shaft 52105521
		1	3		34		DGP		with Shaft 52105523
		1	7		34		DDP		with Shaft 52105526
		1	7		34		DGT		with Shaft 52105527
		1	7		34		DGP		with Shaft 52105529
		1	7		34	ET0, EW0	DDX		with Shaft 52105535AC
		1	7		34		DDP		with Shaft 52105536
		1	7		34		DGT		with Shaft 52105537
		1	8		34	EM0	DGT		with Shaft 52105538
		1	8		34		DDP		with Shaft 52105546
		1	7, 8		34	ET0, EW0	DDX		with Shaft 5210552AC
		1	8		34		DGP		with Shaft 52105553
		1	7		34		DGP		with Shaft 52105571
8	4428 804	1	7		34		DEE		YOKE, Drive Shaft with Shaft 52105277AB
		1	7, 8		34		DEE		with Shaft 52105278AB
		1	2		34		DGT		with Shaft 52105516
		1	2		34		DDP		with Shaft 52105517
		1	3		34		DGT		with Shaft 52105518
		1	3		34		DDP		with Shaft 52105519
		1	2, 3		34	ET0, EW0	DDX		with Shaft 52105520AD
		1	2, 3		34	ET0	DEE		with Shaft 52105520AD
		1	2		34		DGP		with Shaft 52105521
		1	3		34		DGP		with Shaft 52105523
		1	7		34		DDP		with Shaft 52105526
		1	7		34		DGT		with Shaft 52105527
		1	7		34		DGP		with Shaft 52105529
		1	7		34	ET0, EW0	DDX		with Shaft 52105535AC
		1	7		34		DDP		with Shaft 52105536
		1	7		34		DGT		with Shaft 52105537
		1	8		34	EM0	DGT		with Shaft 52105538
		1	8		34		DDP		with Shaft 52105546

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

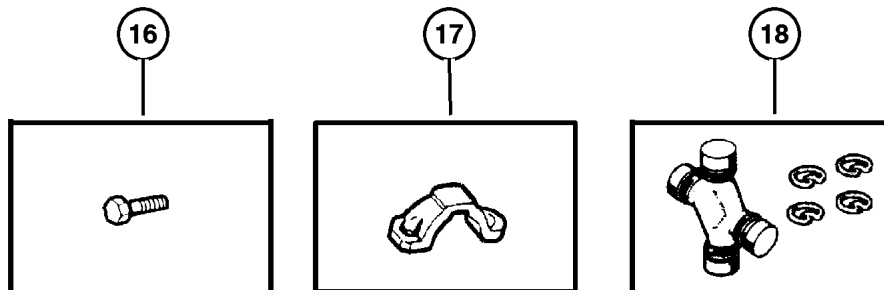
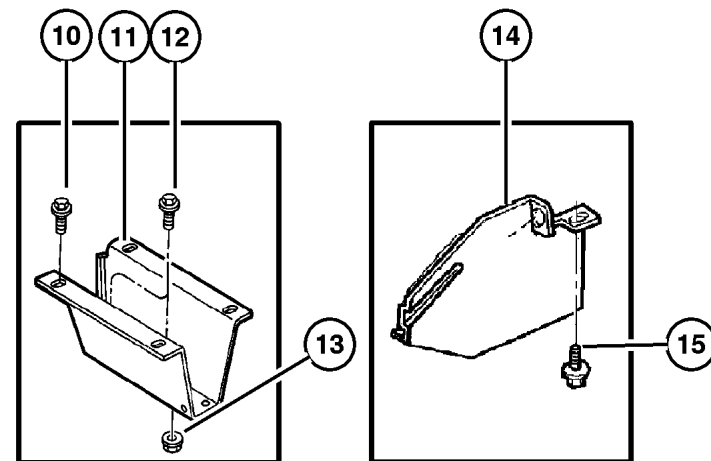
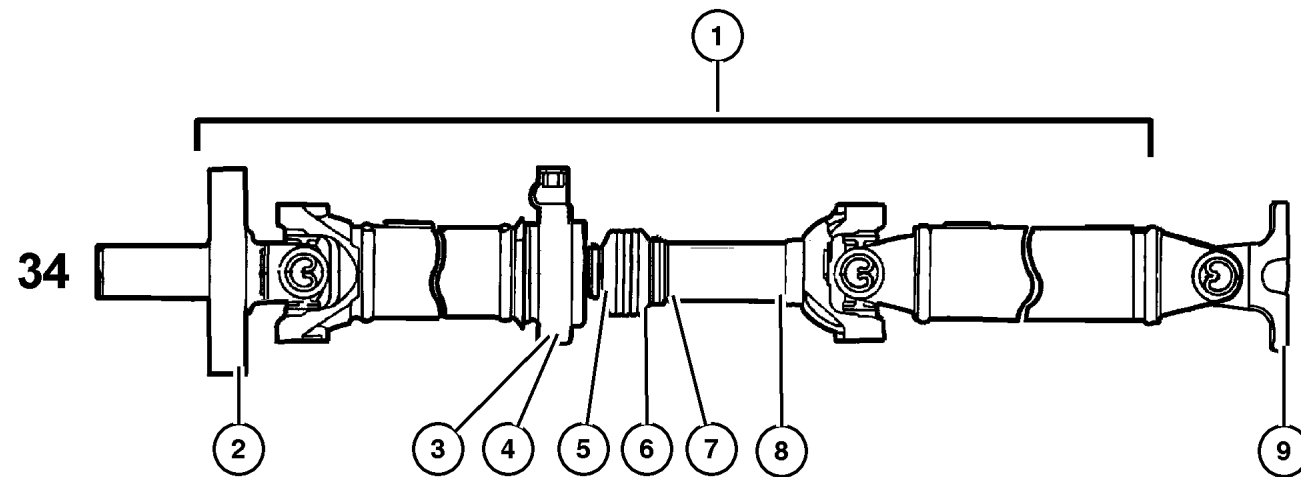
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Shaft,Propeller,Rear,2 Piece,Body 34,BE 1,2,3,6,7,8
Figure 016-140



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	7, 8		34	ET0, EW0	DDX		with Shaft 5210552AC
		1	8		34		DGP		with Shaft 52105553
		1	7		34		DGP		with Shaft 52105571
5014	056AA	1	6		34		DGT		with Shaft 52105770AA
		1	6		34		DDC		with Shaft 52105773AA
		1	1		34		DGT		with Shaft 52105801AA
		1	1		34		DDC		with Shaft 52105806AA
9									FLANGE, Driveshaft Yoke
	5015 556AA	1	6		34		DGT		with Shaft 52105770AA
		1	6		34		DDC		with Shaft 52105773AA
		1	1		34		DGT		with Shaft 52105801AA
		1	1		34		DDC		with Shaft 52105806AA
10									SCREW AND WASHER, Hex Head, M10x1.5x30
	6101 060	4	1, 2		34		DG0		Center Bearing Bracket to Frame Crossmember Mounting
		4	3, 6, 7, 8		34				Center Bearing Bracket to Frame Crossmember Mounting
11									BRACKET, Drive Shaft Bearing
	5210 5268	1	7, 8		34				
	5210 5280	1	1		34				
	5210 5293	1	2, 3		34				
	5210 5294	1	6		34				
12									SCREW AND WASHER, Hex Head, M10x1.5x30
	6101 060	6	1, 2		34		DG0		Center Bearing Mounting
		6	3, 6, 7, 8		34				Center Bearing Mounting
13									NUT
	6101 696	4	1, 2				DBB		Center Bearing and Center Bearing Bracket Mounting
		4	3, 7, 8		34				Center Bearing and Center Bearing Bracket Mounting
		4	1		34		DG0		Center Bearing and Center Bearing Bracket Mounting
14	5209 7944	1	2, 3, 6, 7, 8		34	EMM, EW0			SHIELD, Center Bearing, Heat
15	3420 1888	2							SCREW, Hex Head, Heat Shield Mounting
16									BOLT, Hex Head

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

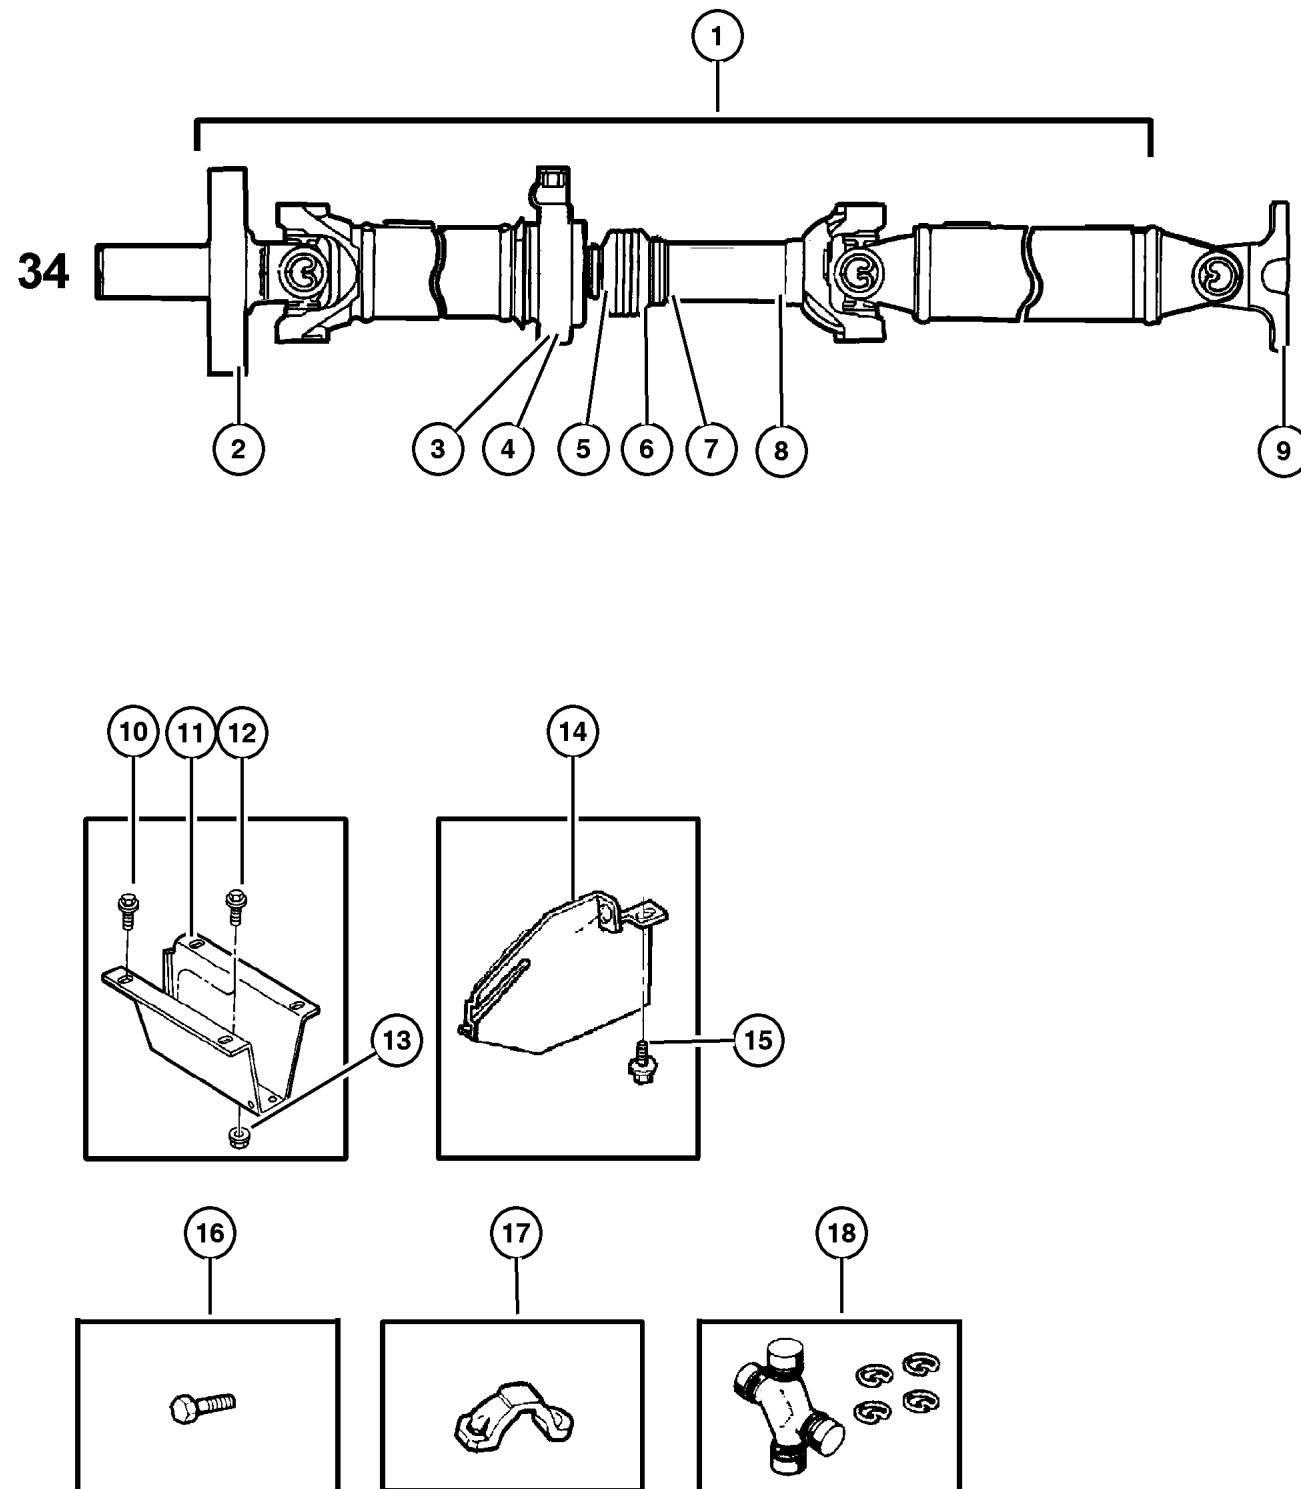
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Shaft,Propeller,Rear,2 Piece,Body 34,BE 1,2,3,6,7,8
Figure 016-140



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	6505 288AA	4	1, 6						Driveshaft Yoke Flange Mounting
	6034 965	4	2, 3, 7, 8		33, 34				Driveshaft U-Joint Clamp Mounting
17	4428 723	2	2, 3, 7, 8		33, 34				CLAMP, U-Joint
18									U JOINT
	5003 146AA	3	7		34		DEE		with Shaft 52105277AB
		3	7, 8		34		DEE		with Shaft 52105278AB
		3	2		34		DGT		with Shaft 52105516
		3	2		34		DDP		with Shaft 52105517
		3	3		34		DGT		with Shaft 52105518
		3	3		34		DDP		with Shaft 52105519
		3	2, 3		34	ET0	DEE		with Shaft 52105520AD
		3	2, 3		34	ET0, EW0	DDX		with Shaft 52105520AD
		3	2		34		DGP		with Shaft 52105521
		3	3		34		DGP		with Shaft 52105523
		2	7		34		DDP		with Shaft 52105526
		2	7		34		DGT		with Shaft 52105527
		2	7		34		DGP		with Shaft 52105529
		3	7		34	ET0, EW0	DDX		with Shaft 52105535AC
		2	7		34		DGT		with Shaft 52105537
		1	8		34	EM0	DGT		with Shaft 52105538
		3	8		34		DDP		with Shaft 52105546
		3	7, 8		34	ET0, EW0	DDX		with Shaft 52105552AC
		3	8		34		DGP		with Shaft 52105553
		2	7		34		DGP		with Shaft 52105571
	5014 733AA	3	6		34		DGT		with Shaft 52105770AA
		3	6		34		DDC		with Shaft 52105773AA
		3	1		34		DGT		with Shaft 52105801AA
		3	1		34		DDC		with Shaft 52105806AA

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year


September 16, 2005



Group – 017

Rear Suspension

GROUP 17 - Rear Suspension

Illustration Title	Group-Fig. No.
Rear Suspension	
Suspension, Rear,Leaf With Shock Absorber	Fig. 017-110
Rear Stabilizer	
Stabilizer, Rear	Fig. 017-210

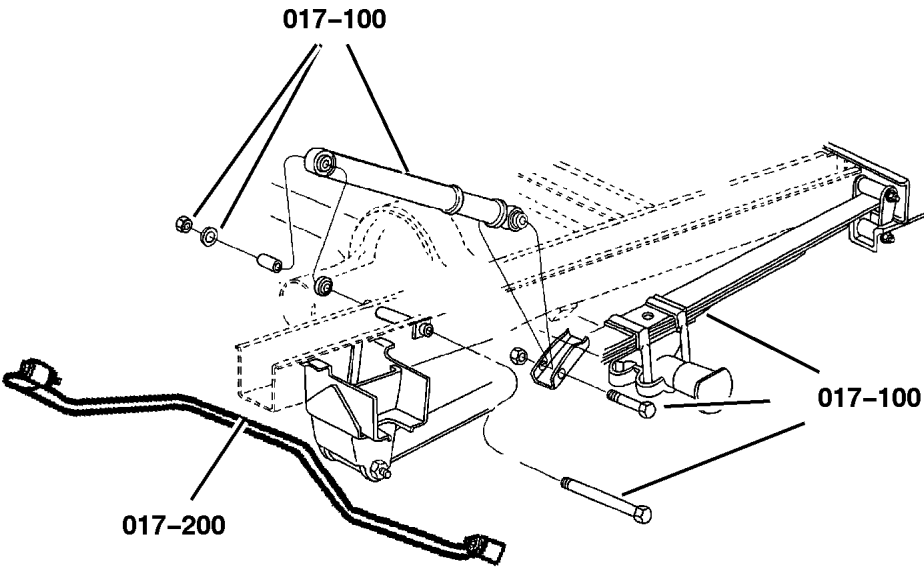

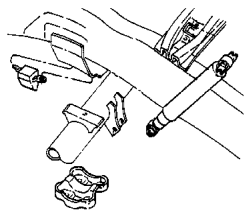017-100 Rear Suspension	017-200 Rear Stabilizer		
			

Suspension, Rear,Leaf With Shock Absorber Figure 017-110

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: DRB=9.25 Light Duty Axle---DRG=9.25 Heavy Duty Axle---DRD=Dana 60 Heavy Duty Axle---DRE=Dana 70 Axle--- DRL=Dana 80 Axle--- AHJ = Camper Special Group---Check the Vin Number for the 'Z' Code GVW Rating.									
1	5203 8217	2	1, 6						SEAT, Spring [Z1B,Z6B,DRB,DRD]
	52038 310AB	2	2, 7						[Z2B,Z7B,DRD,DRE]
	52038 311AB	2	2, 7						[Z2B,Z7B,DRL]
		2	3, 8		34				[Z3A,Z8B,DRL]
2	5203 7938	4	1						CLIP, Spring [Z1B]
	52106 313AA	4	2						[Z2B,DRD,DRE,AHJ]
	52106 414AA	4	2, 3		33, 34				[Z2B,Z3A,DRL,AHJ]
	52106 412AA	4	2, 3						[Z2B,Z3A,DRL]
	5203 7933	4	2, 3		33, 34				[Z2B,Z3A,DRD,DRE]
	5203 8645	4	6						[Z6B]
	5203 8486	4	7		33, 34				[Z7B,DRE,DRD]
	5203 8966	4	7		33, 34				[Z7B,DRE,DRD,AHJ]
	5203 8650	4	7, 8		33, 34				[Z7B,Z8B,DRL]
	52113 025AA	4	7, 8		33, 34				[Z7B,Z8B,DRL,AHJ]
3	5203 8718	2	1, 2, 3						BUMPER, Jounce Rear
		2	6, 7, 8						Rear
4	6502 817	2							LOCK NUT, M14-2.00, Upper Shock, Mounting
5	6101 223	12	2, 3, 7, 8		33, 34				SCREW, Hex Head, [AHJ]
6	52106 435AA	4	2, 3, 7, 8		33, 34				BRACKET, Bumper, [AHJ] with Pad
7	6502 698	6	1, 6						NUT, Hex Flange Lock [Z1B,Z6B] Shackle, Mounting
	6502 396	6	2, 3, 7, 8		33, 34				[Z2B,Z3A,Z7B,Z8B] Shackle, Mounting
8	6505 599AA	6	1, 6						SCREW, Pilot Point [Z1B,Z6B] Shackle, Mounting
	6504 782	6	2, 3, 7, 8		33, 34				[Z2B,Z3A,Z7B,Z8B] Shackle, Mounting
9	5203 8359	4	2, 3, 7, 8		33, 34				NUT, Hex Flange Lock, M10x1.5, [AHJ]
10	6502 818	2							BOLT, Hex Flange Head, M14x2. 00x80, Upper Shock, Mounting
11	52039 479AA	2	1, 6						SHACKLE, Spring [Z1B,Z6B]
	52038 664AB	2	2, 3, 7, 8		33, 34				[Z2B,Z3A,Z7B,Z8B]

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

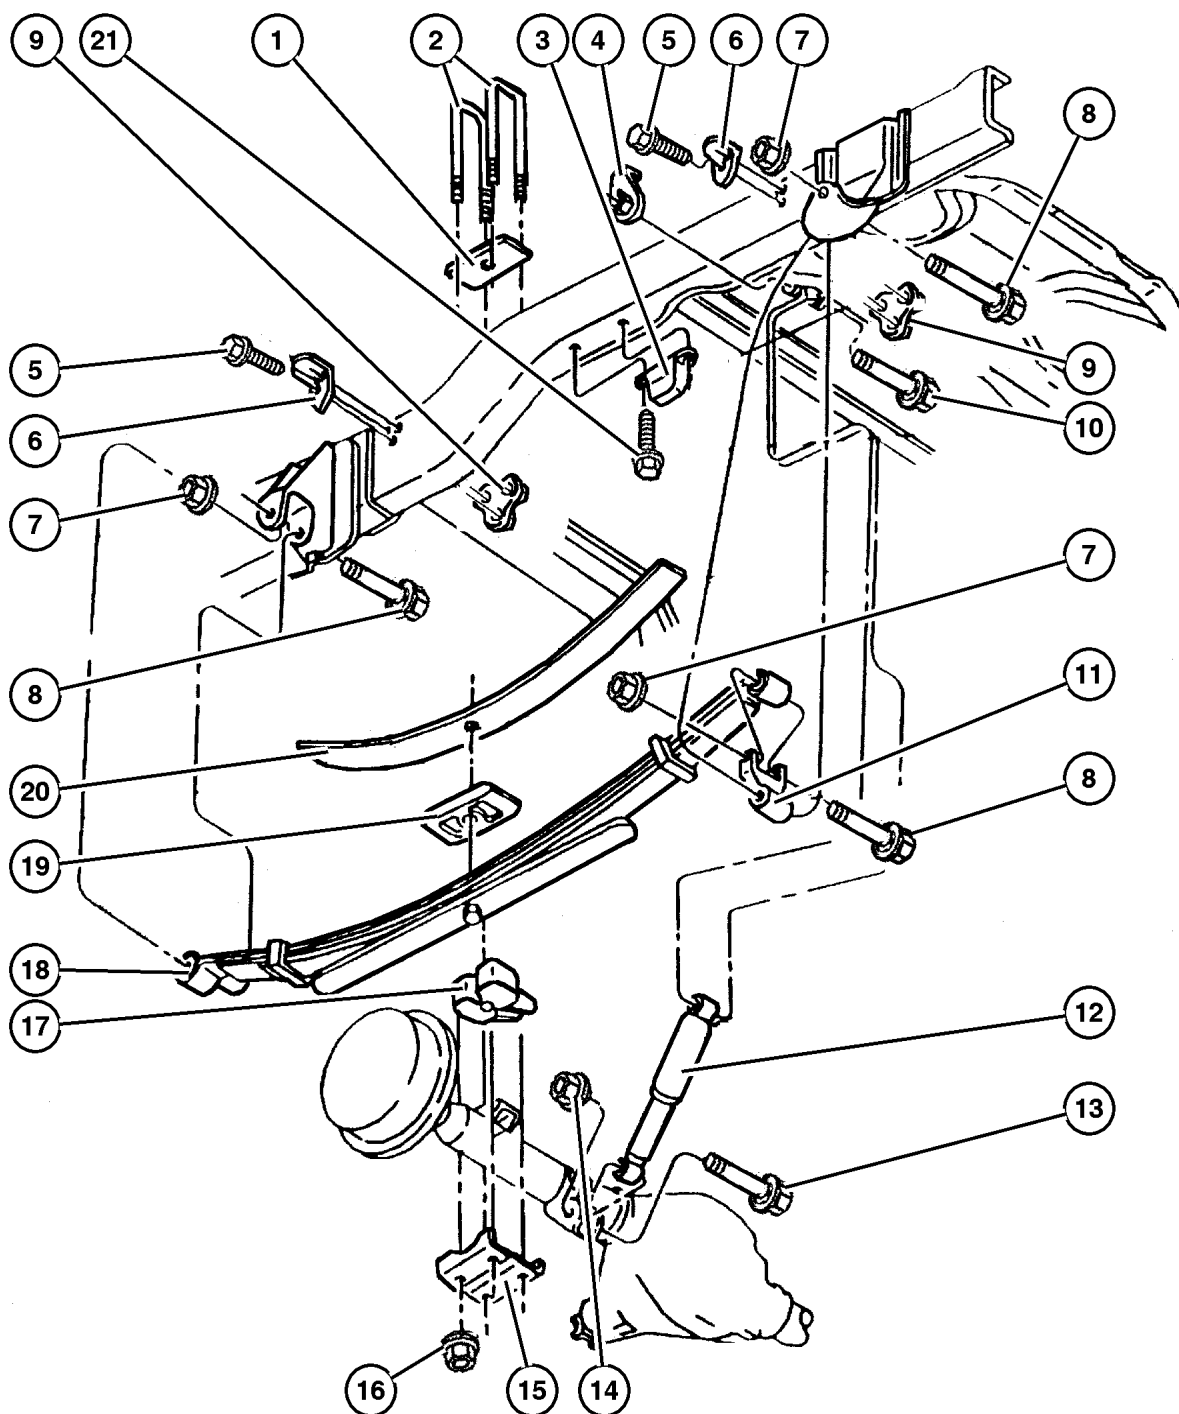
BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines


TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005



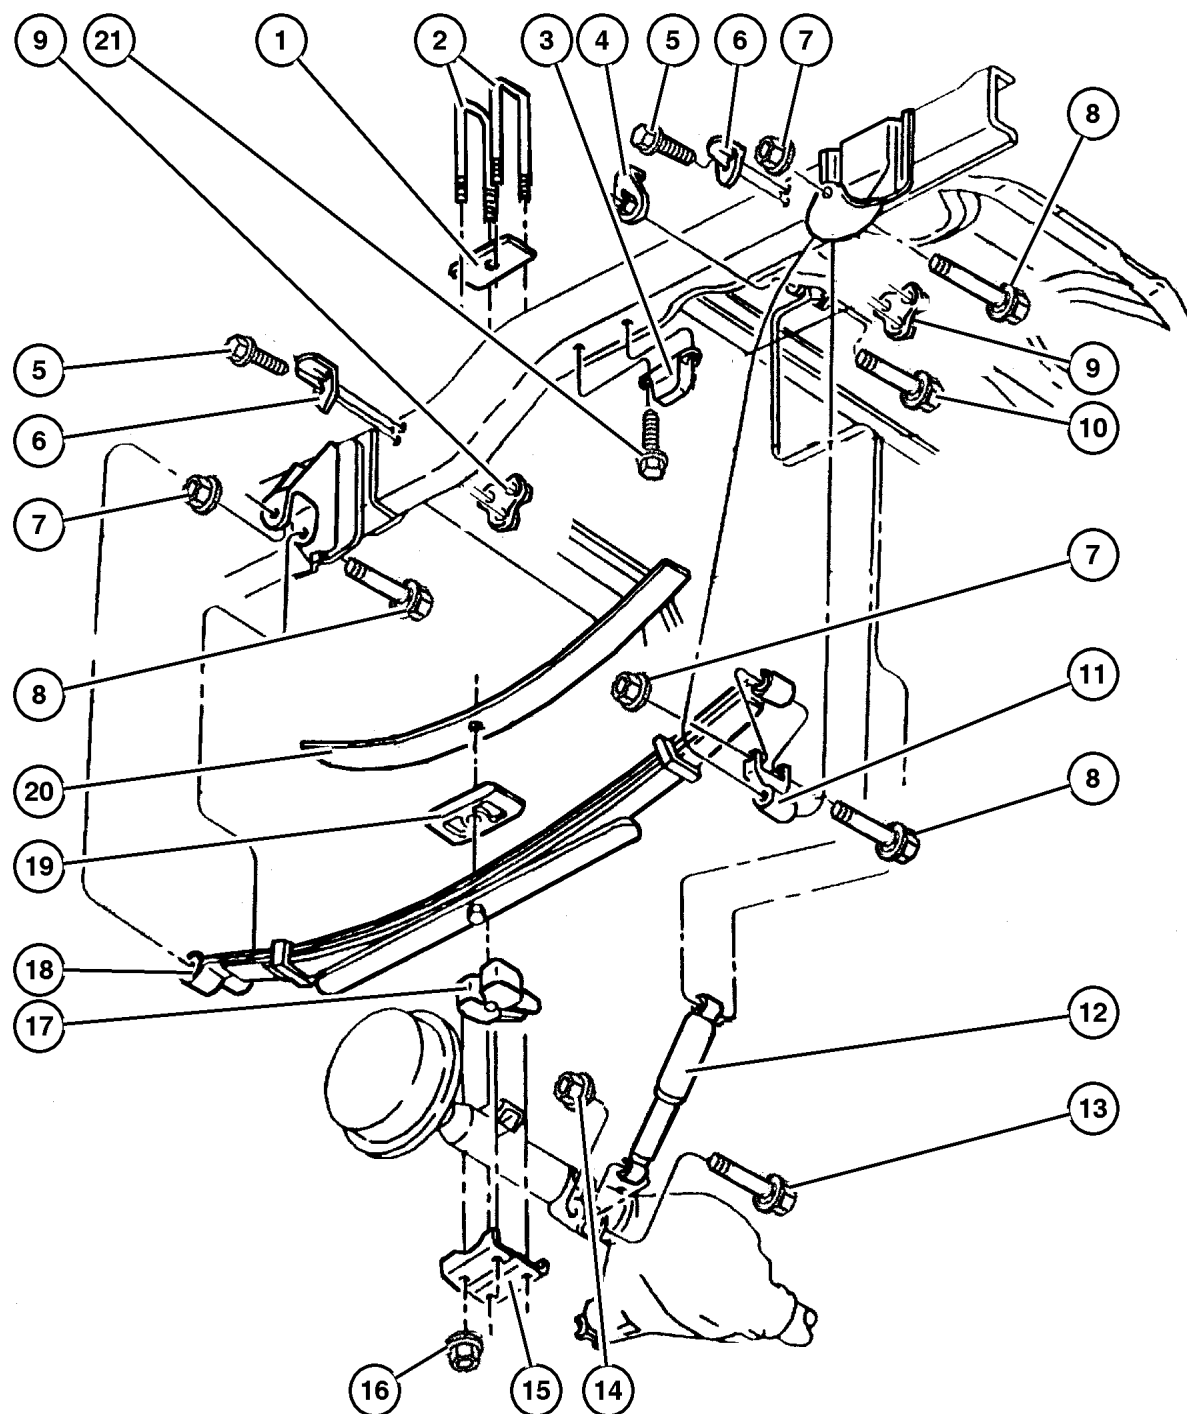Suspension, Rear,Leaf With Shock Absorber Figure 017-110



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
12									SHOCK ABSORBER, Suspension, Rear
	52039 481AB	2	1			EL0, EM0			[Z1B]
	52106 385AB	2	2		33, 34	EL0, EM0			[Z2B]
		2	2		34	ET0, EW0			[Z2B]
	52106 383AB	2	2		33	EW0			[Z2B]
	52106 382AB	2	2		33	ET0			[Z2B]
	52106 381AB	2	3		34				[Z3A]
	52113 011AB	2	6		31, 33	EL0, EM0			[Z6B,+AWL]
	52039 485AA	2	6			EL0, EM0			[Z6B,-AWL]
	52039 490AB	2	7		34	ET0			[Z7B]
	52039 488AB	2	7		33, 34	EL0, EM0			[Z7B]
	52106 265AB	2	7		33	ET0, EW0			[Z7B]
	52039 492AB	2	8		34				[Z8B]
13	6502 818	2							BOLT, Hex Flange Head, M14x2. 00x80, Lower Shock, Mounting
14	6502 698	2							NUT, Hex Flange Lock, Lower Shock, Mounting
15									PLATE, Rear Spring Clip
	5203 8457	2	1, 6						[Z1B,Z6B,DRB,DRD]
	5203 8458	2	2, 7						[Z2B,Z7B,DRD,DRE]
	52106 913AA	2	2, 7		33, 34				[Z2B,Z7B,DRL]
		2	3, 8		34				[Z3A,Z8B,DRL]
16	6502 698	8	1, 2, 3						NUT, Hex Flange Lock [Z1B,Z2B,Z3A]-Spring Clip, Mounting
		8	6, 7						[Z6B,Z7B] -Spring Clip, Mounting
		8	8		34				[Z8B] -Spring Clip, Mounting
17									SPACER, Spring
	52106 299AB	2	2, 3		33, 34				[Z2B,Z3A,]
	52106 924AA	2	6						[Z6B]
	52106 925AA	2	7, 8		33, 34				[Z7B,Z8B]
18									SPRING, Rear Leaf
	52106 015AF	1							[ZDR,ZSR]

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

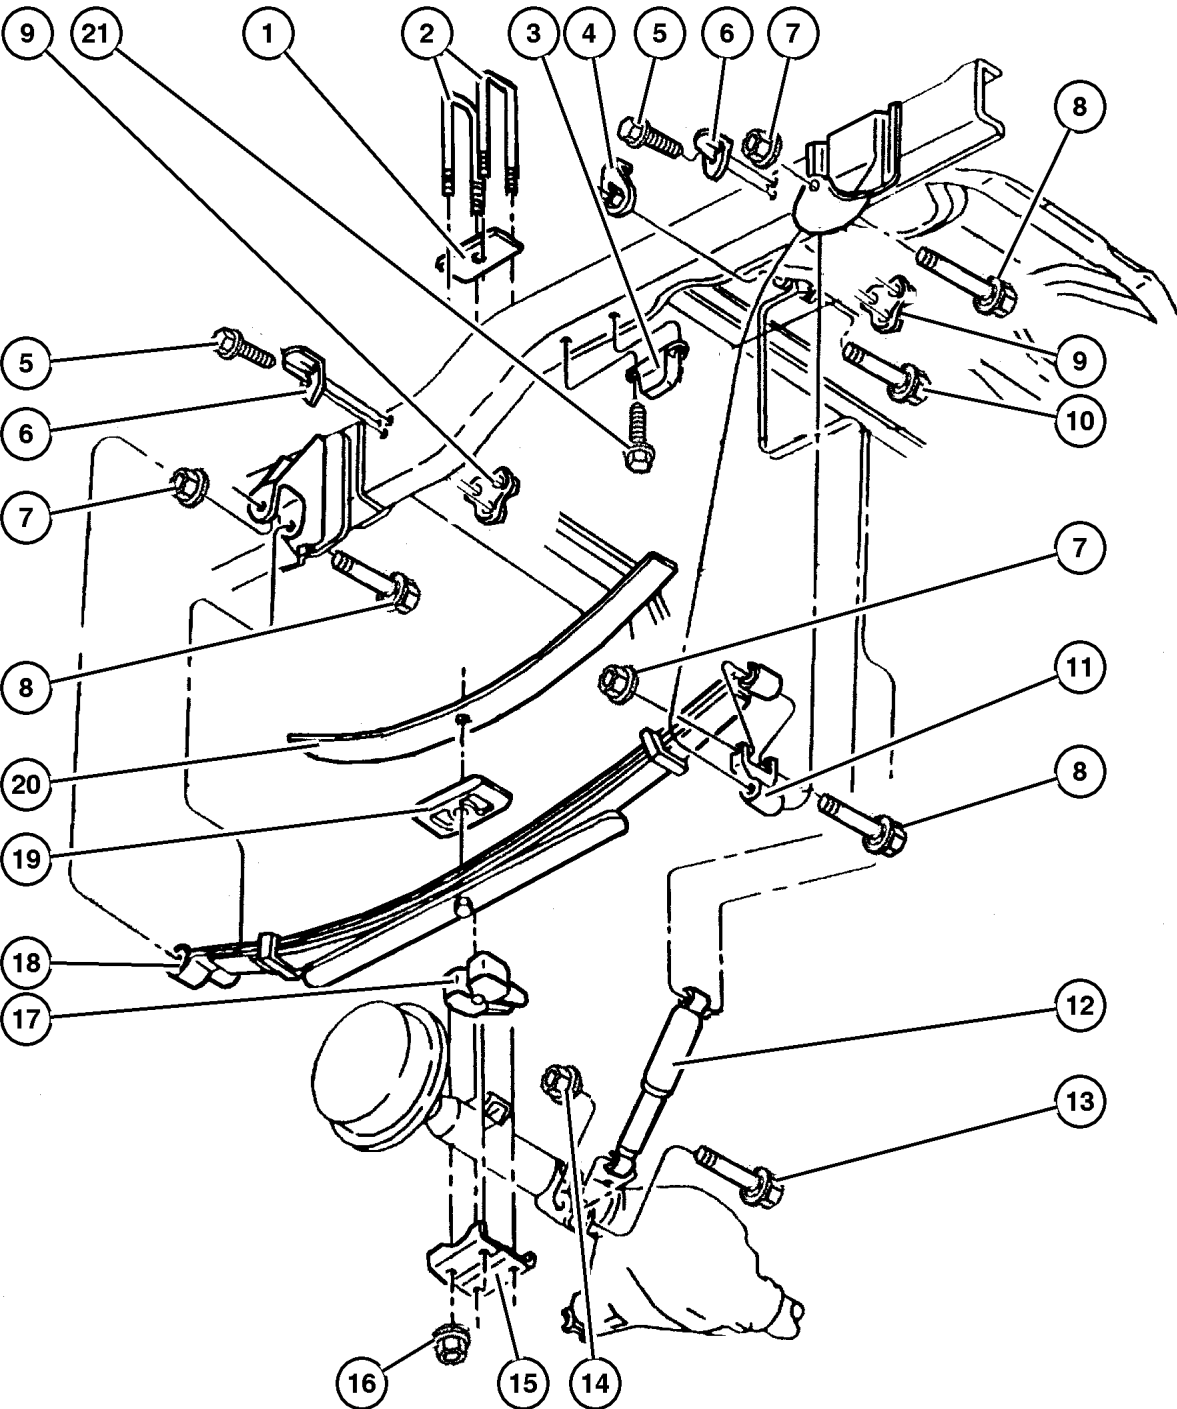
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Suspension, Rear,Leaf With Shock Absorber
Figure 017-110




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	52106 016AF	1							[ZGR,ZVR]
	52106 017AF	1							[ZHR,ZWR]
	52106 018AF	1							[ZCR,ZRR]
	52106 019AE	1							[ZAS,ZNS]
	52106 030AE	1							[ZBS,ZPS]
	52106 292AG	1							[ZFR,ZUR]
19	52038 327AB	2	2, 3, 7, 8		33, 34				SPACER, Spring, [AHJ]
20	52039 181AD	2	2, 3		33, 34				SPRING, Rear Auxilliary [Z2B,Z3A,AHJ]
	52106 402AD	2	7, 8		33, 34				[Z7B,Z8B,AHJ]
21	6503 183	4							SCREW, Hex Head, M10x1.5x30, M10X1.50X30.00

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

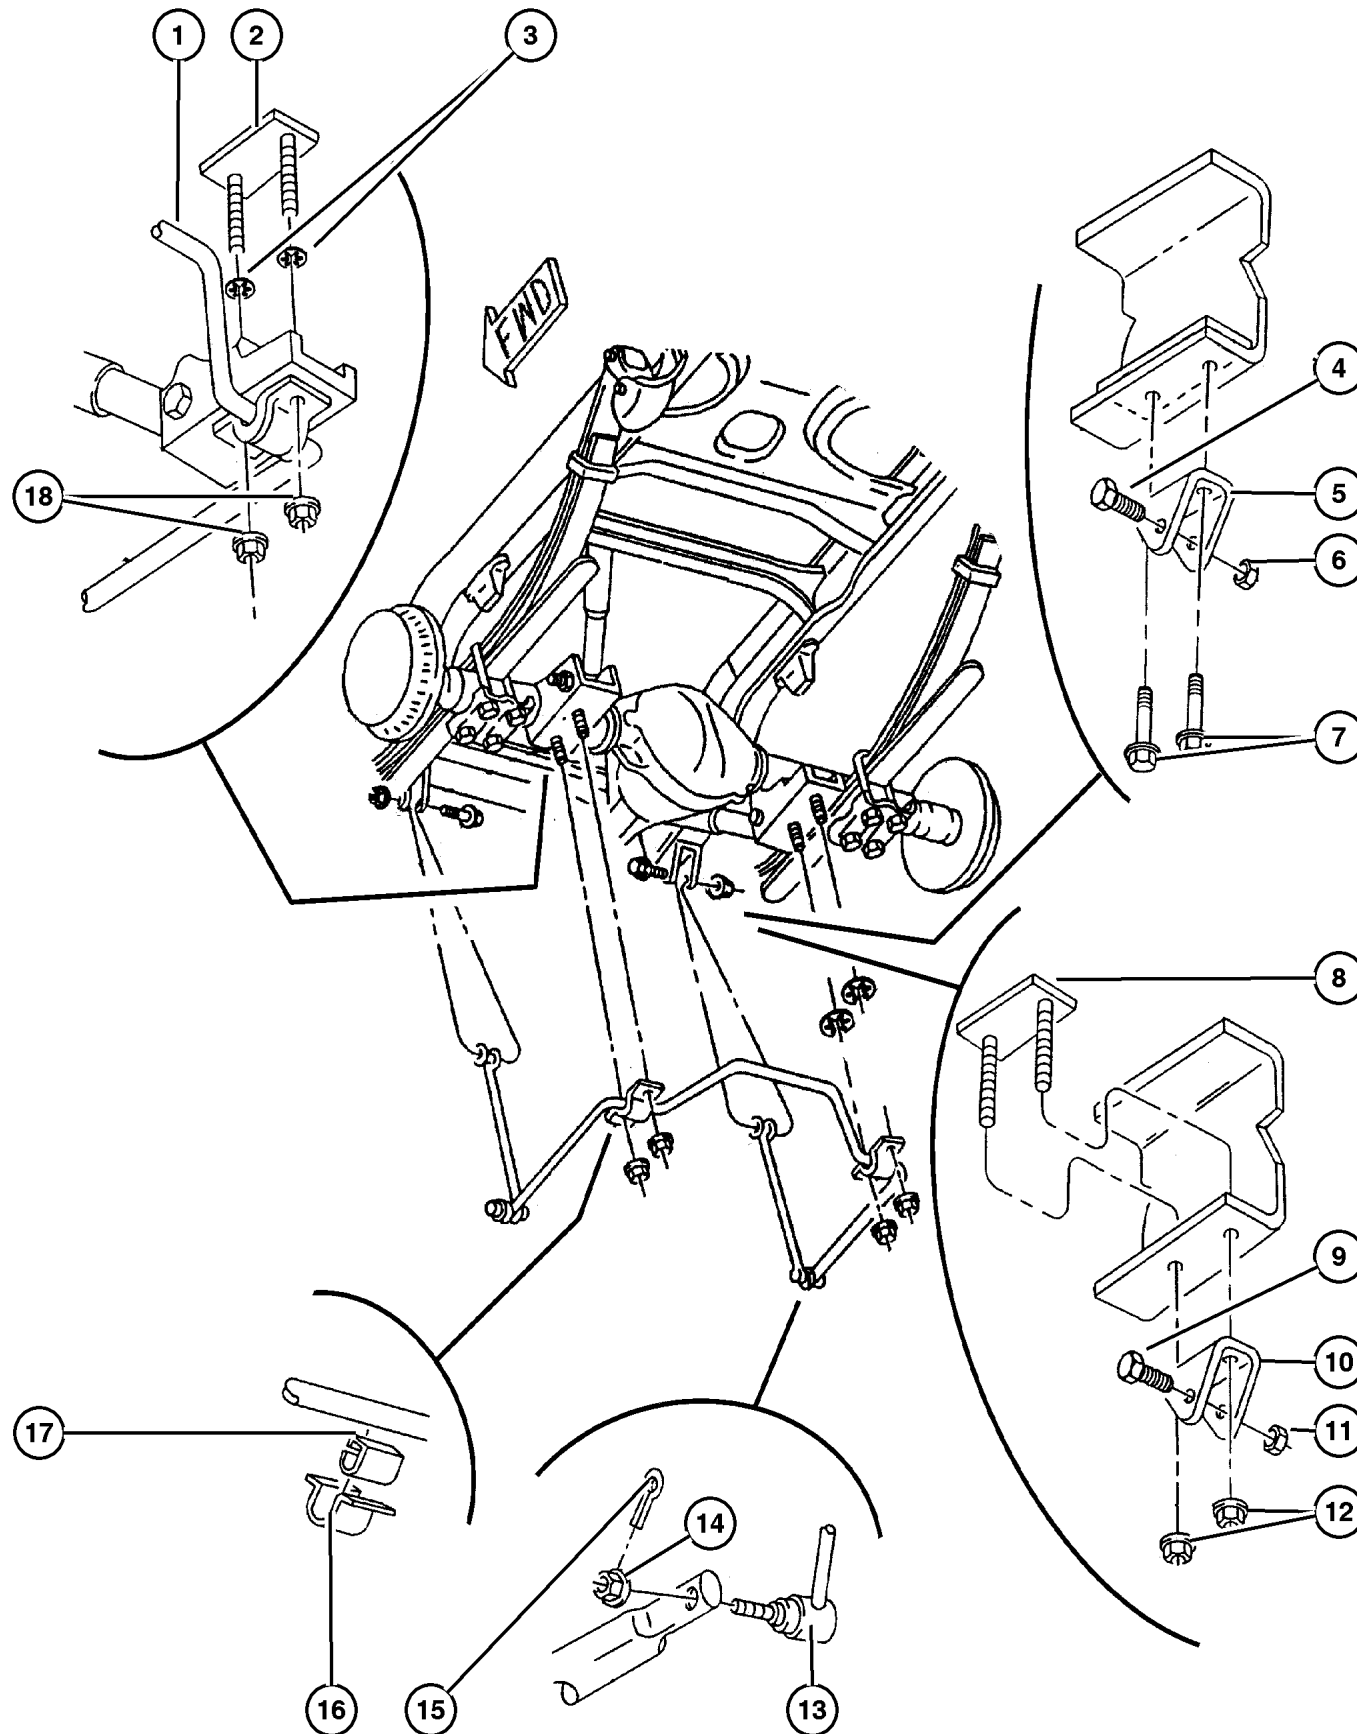Stabilizer, Rear Figure 017-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									BAR, Rear Sway
	5203 8907	1	2, 3		33, 34				
	5203 9120	1	7, 8		33, 34				
2	5203 8713	2							PLATE, Sway Bar, Stud Plate to Frame or Axle
3	J400 0235	1							NUT, Push, .375, Stabilizer Bar Stud Plate Retaining
4	1150 5098	2							BOLT, Hex Flange Head, M12x1.75x60, Stabilizer Bar Link
5	5203 8700	2							BRACKET, Stabilizer Bar
6	6502 697	2							NUT, Hex Flange Lock, M12x1.75, Stabilizer Bar Link to Frame
7	6101 223	12	2, 3, 7, 8		33, 34				SCREW, Hex Head
8	5203 8713	2							PLATE, Sway Bar, Stud Plate to Frame or Axle
9	1150 5098	2							BOLT, Hex Flange Head, M12x1.75x60, Stabilizer Bar Link
10	5203 8700	2							BRACKET, Stabilizer Bar
11	6502 697	2							NUT, Hex Flange Lock, M12x1.75, Stabilizer Bar Link to Frame
12	6502 696	4							NUT, Hex Flange Lock, M10x1.5, Stabilizer Bar Retainer
13									LINK, Sway Eliminator
	52106 057AA	2	2, 3		33, 34				
	52106 058AA	2	7, 8		33, 34				
14	6502 748	2							NUT, Hex, M12x1.75, Stabilizer to Link Mounting
15	6100 017	2							PIN, Cotter, M2.5x28.00, Stabilizer Bar Link
16	5208 7865	2							RETAINER, Sway Bar, Bushing
17									BUSHING, Sway Bar
	5203 8843	2	2, 3		33, 34				
	5203 7548	2	7, 8		33, 34				
18	6502 696	4							NUT, Hex Flange Lock, M10x1.5, Stabilizer Bar Retainer

DODGE RAM QUAD CAB/CLUB CAB (BE)


SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual







AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Group – 019

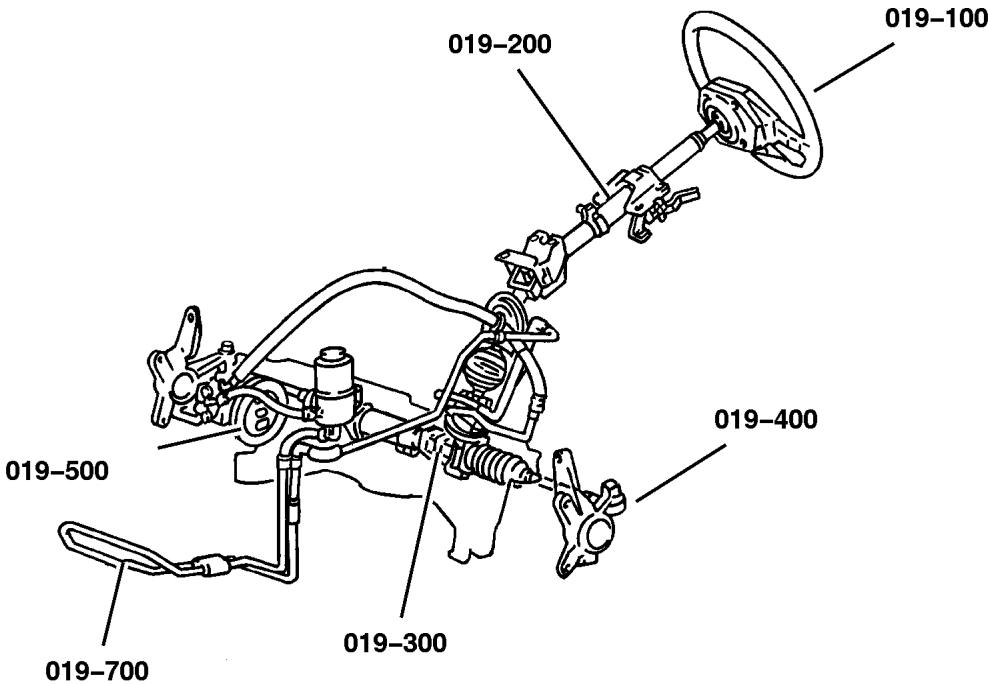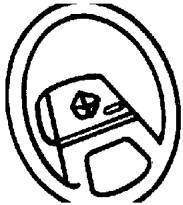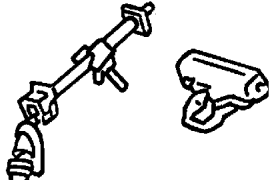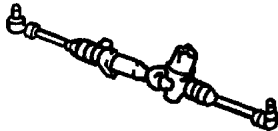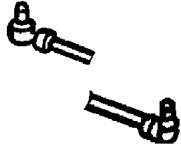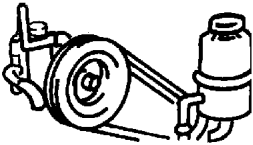Steering




019-100 Steering Wheel	019-200 Steering Column	019-300 Steering Gear	019-400 Steering Linkage
			
019-500 Power Steering Pump	019-700 Power Steering Hoses		
			

GROUP 19 - Steering

Illustration Title	Group-Fig. No.
Steering Wheel	
Wheel, Steering	Fig. 019-110
Steering Column	
Column, Steering,Upper And Lower	Fig. 019-210
Steering Gear	
Power Steering Gear	Fig. 019-310
Steering Linkage	
Linkage, Steering,BE 1,2,3	Fig. 019-410
Linkage, Steering,BE 6,7,8	Fig. 019-420
Power Steering Pump	
Pump,Power Steering and Mounting,EL0,EM0 Gas	Fig. 019-510
Pump,Power Steering and Mounting,EW0 Gas	Fig. 019-520
Pump,Power Steering and Mounting,ET0 Diesel	Fig. 019-530
Power Steering Hoses	
Hoses,Power Steering with EL0,EM0 Gas	Fig. 019-710
Hoses,Power Steering with EW0 Gas	Fig. 019-720
Hoses,Power Steering,with Hydroboost System with EM0,ET0,EW0 Engines	Fig. 019-730

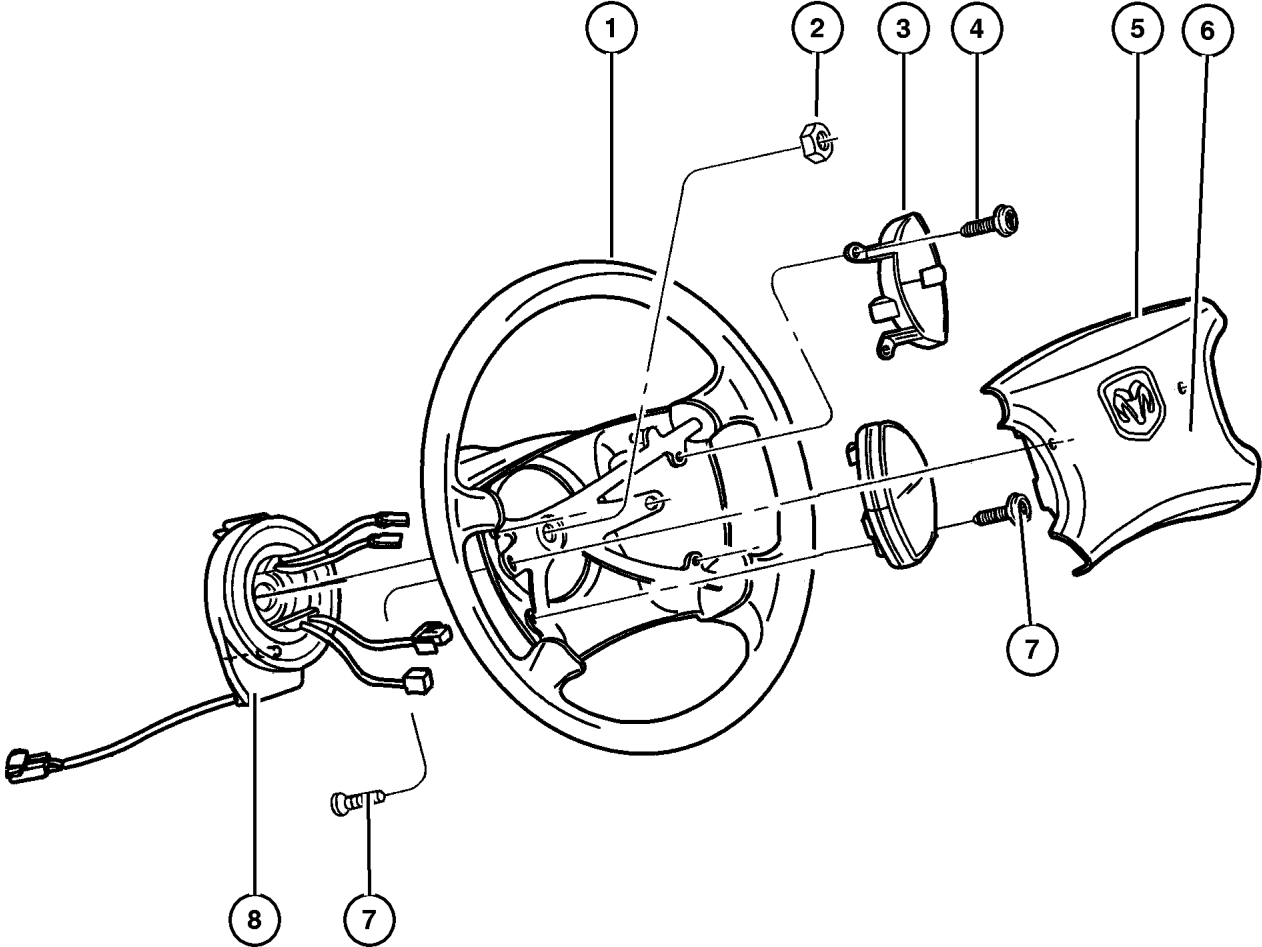Wheel, Steering
Figure 019-110



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:If Horn Switch is defective, you must replace the AIR BAG COVER WITH SWITCH and not the AIR BAG MODULE ASSEMBLY itself.

Note:
CGW = Air Bags-Next Generation
DG0 = All Automatic Transmissions
NHM = Speed Control
RDZ = Audio Controls-Steering Wheel Mounted
SCB = Steering Wheel-2 Spoke
SCV = Steering Wheel-Leather Wrapped


1	5EH10 DX9AC	1							WHEEL, Steering Black [SCB,-NHM]
	5FM14 DX9AC	1							Black [SCB,+NHM]
	5FL42 1X9AD	1							Black [SCV,+NHM,-RDZ]
	5GC42 1X9AF	1							Black [SCV,+NHM,+RDZ]
2	6505 248AA	1					DG0		NUT, Hex Flange Lock, Steering Wheel Mounting
3									SWITCH, Speed Control
	56021 332AB	1							Right
	56021 333AB	1							Left
4	6035 142	1							SCREW, .164-32x1.00, Speed Control Switch Mounting
5	5GV11 DX9AA	1							AIR BAG, Driver
6	TK64 DX9AA	1							COVER, Air Bag Module, Includes Horn Switch
7	6503 771	2							SCREW, Hex Flange Head, M6x1x23, Air Bag Module to Steering Wheel Mounting
8	56045 454AC	1							CLOCKSPRING [-NHM,-RDZ]
	56045 455AC	1							[+NHM,-RDZ]
	56045 456AC	1							[+NHM,+RDZ]
-9									SWITCH, Radio Control
	4685 619AB-	1							Right
	4685 632AB-	1							Left

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

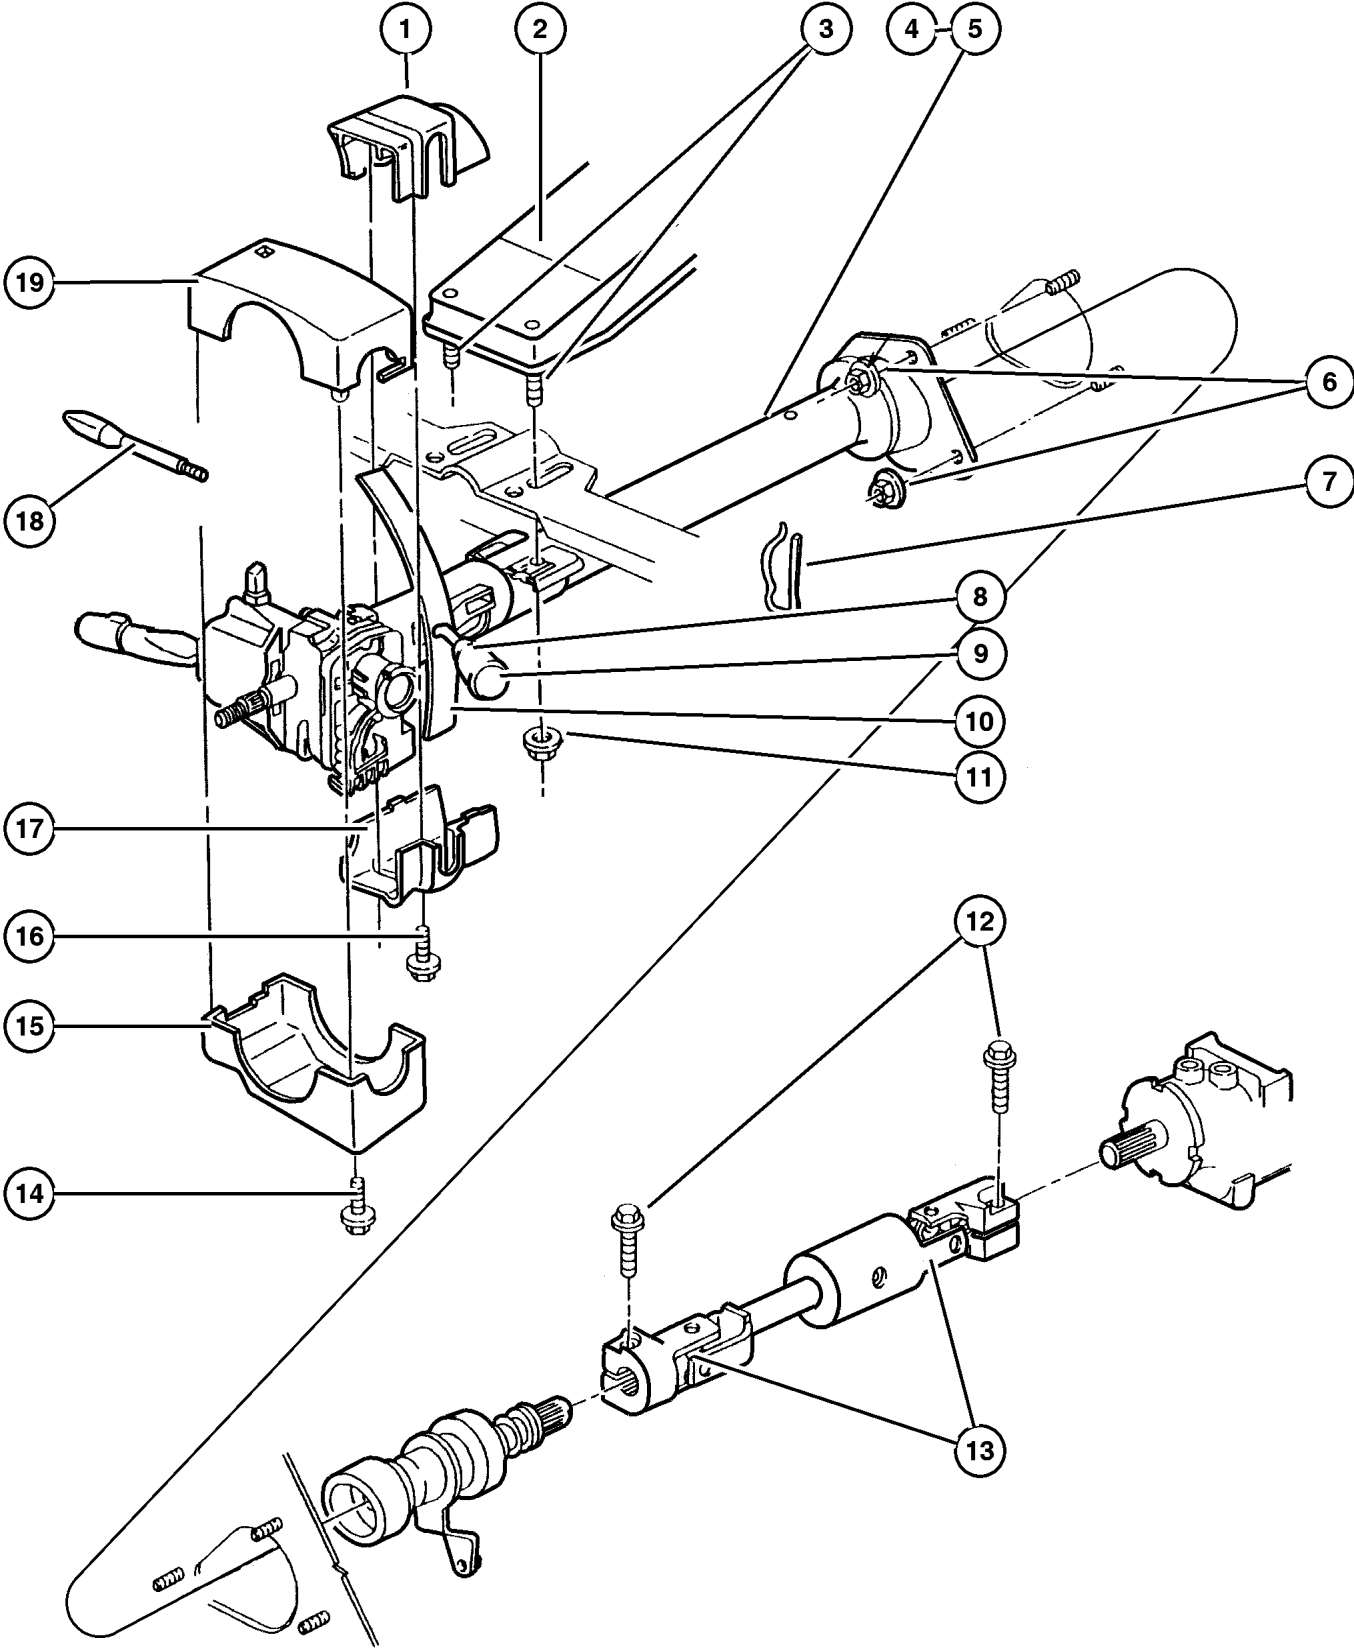Column, Steering,Upper And Lower
Figure 019-210




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
SUA = Tilt Steering Column									
DBB = All Manual Transmissions									
DG0 = All Automatic Transmissions									
1									SHROUD, Steering Column
	5CN6 7PX8	1					DBB		Front Fixed with Floor Shift [DBB], Upper
	5CE58 JX8AB	1					DG0		Front Fixed with Column Shift [DG0], Upper
2	55351 014AE	1							BRACKET, Steering Column, Clutch and Brake Pedal
3	6503 761	2							STUD, M6x1.00mmx48.80mm, Steering Column Upper
4									COLUMN, Steering, Tilt
	4897 478AC	1					DG0		[DG0]
	4897 479AC	1					DBB		[DBB]
5									COLUMN, steering, non tilt
	4897 480AC	1					DG0		[DG0]
	4897 481AC	1					DBB		[DBB]
6									NUT AND WASHER, Hex Lock Nut-Coned Lock Washer, M8 x 1.25, (NOT SERVICED) (Not Serviced)
7									PIN, Pivot, Part of Column Assembly, (NOT SERVICED) (Not Serviced)
8	4690 522AB	1					DG0		LEVER, Gearshift, Includes Gap Hider and Overdrive Switch
9	5602 1048	1					DG0		SWITCH, Overdrive Lockout, [DG0]
10	4470 108AB	1					DG0		GAP HIDER, Steering Column Shroud, [DG0]
11	6503 014	2							NUT AND WASHER, Hex, M6x1
12	6504 926AA	2							SCREW, Hex Flange Head, M10x1.5x40, Intermediate Shaft to Gear and Column Mounting
13									SHAFT, Intermediate
	55351 114AB	1	1, 2, 3						
	55351 113AB	1	6, 7, 8						
14									SCREW, .164-32x1.00
	6035 142	1							Lower Fixed Shroud to Steering Column Attaching
		1							Lower Lock Housing to Steering Column

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

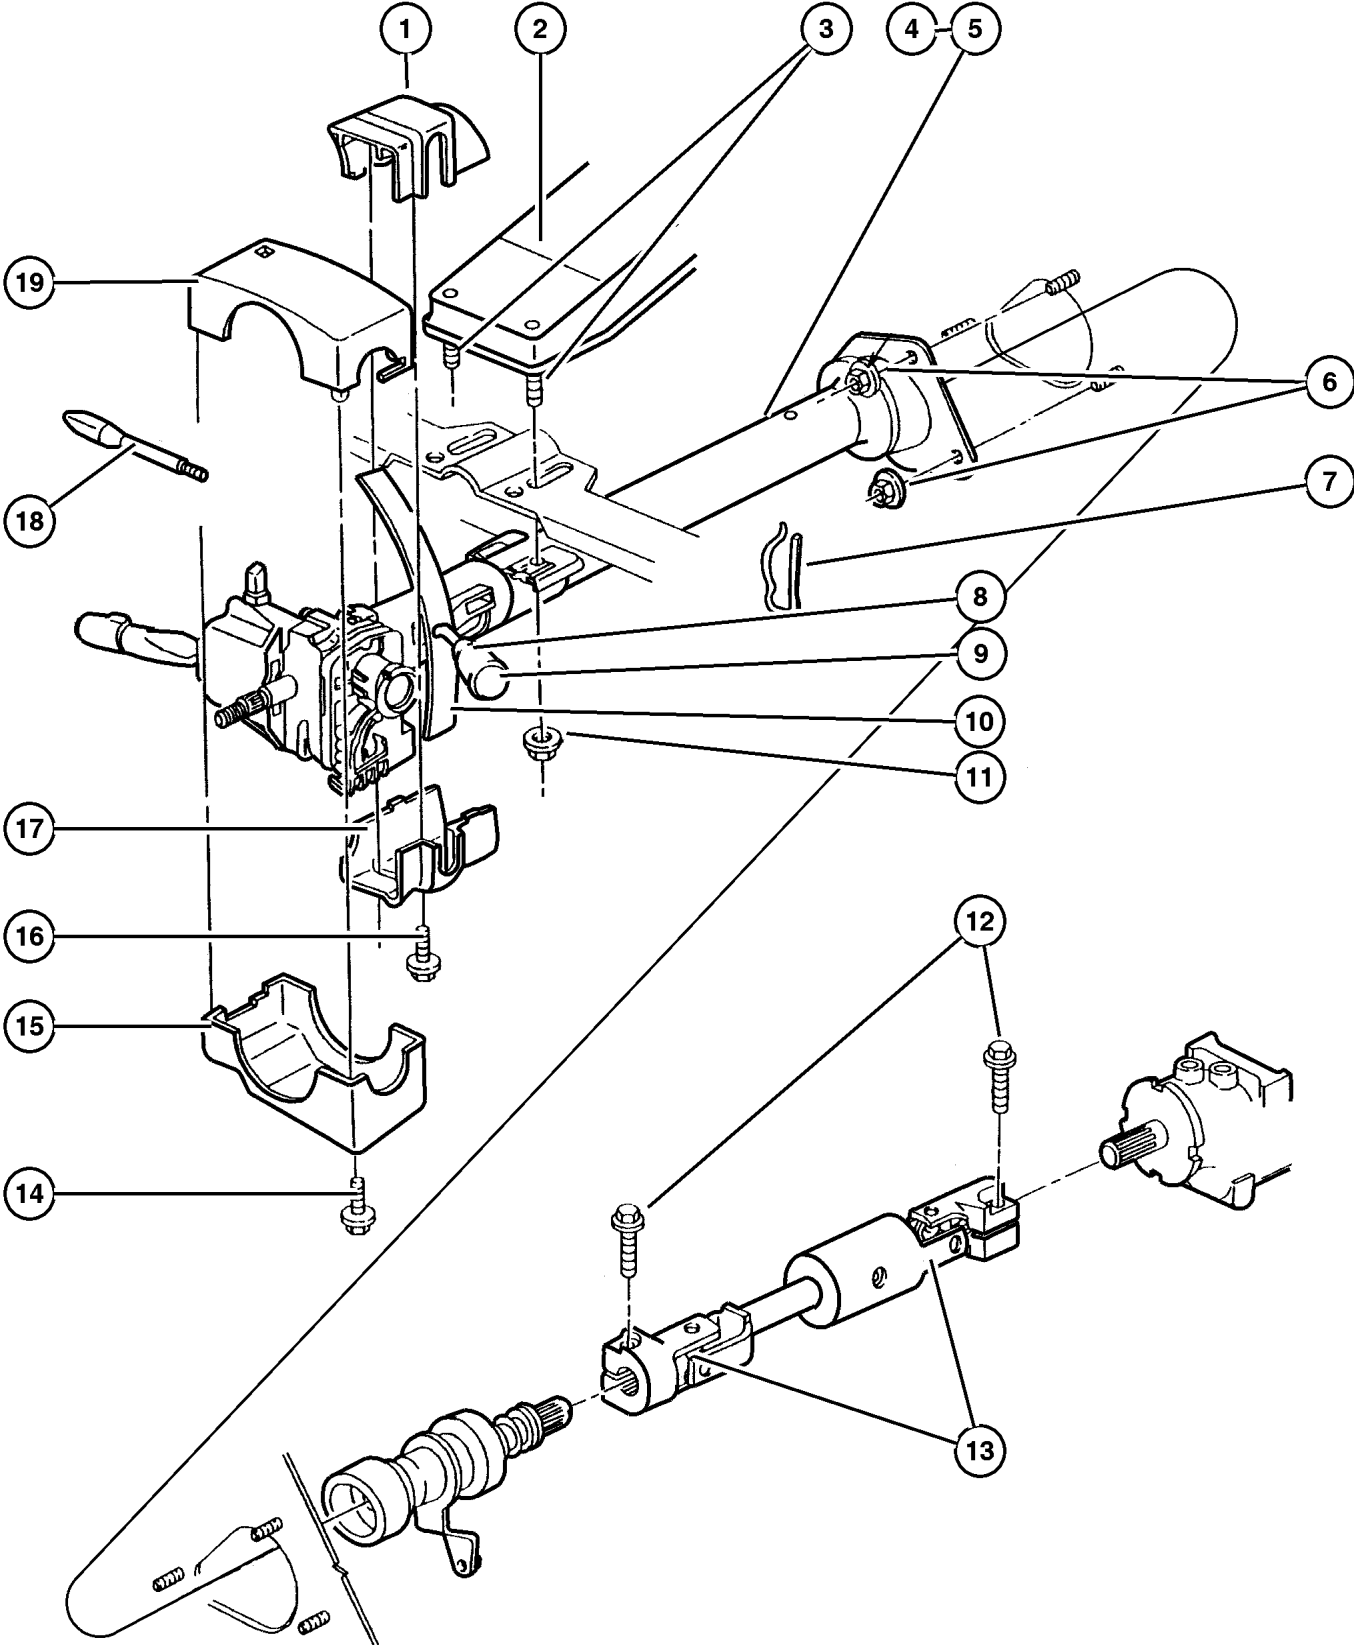Column, Steering,Upper And Lower
Figure 019-210




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
15	KJ95 JX8AB	1							SHROUD, Steering Column, Rear
16	4470 105	1							Lock Housing with Key Pad, Lower
17									SCREW, Filister Head, #8-16x.25, Upper to Lower Lock Housing
18	5CT42 JX8AC	1					DG0		SHROUD, Steering Column
19	5CU51 JX8AB	1					DBB		Front Fixed, Lower
18	4470 103	1							Front Fixed, Lower
19									LEVER, Tilt Column Release
	DH72 JX8AB	1							SHROUD, Lock Housing
	DH69 JX8AC	1							Rear [-SUA], Upper
-20									Rear [+SUA], Upper
	6506 514AA-	5					DBB		SCREW, 6 Lobed
		5					DG0		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

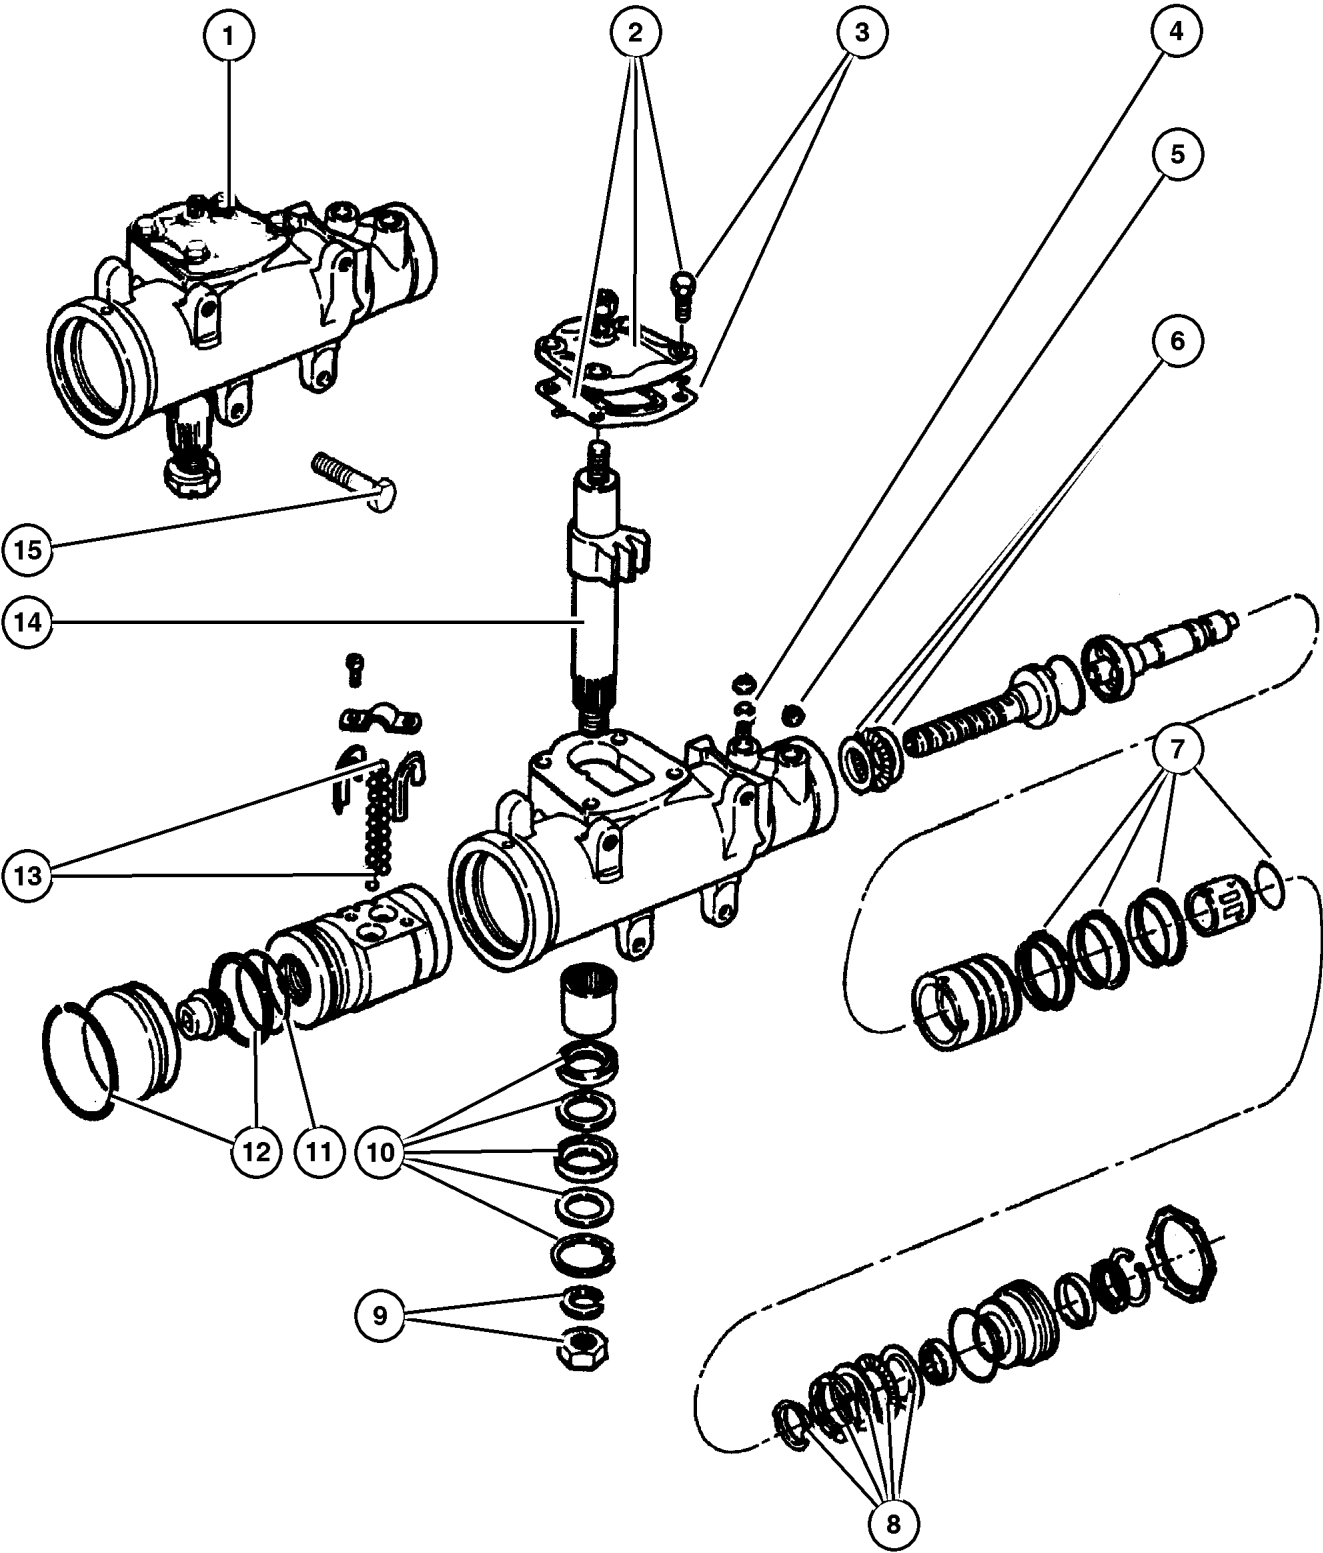Power Steering Gear
Figure 019-310




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:Check the VIN Number for the 'Z' Code Identification.									
1	5083 894AA	1	1, 6						GEAR, Power Steering
	52113 611AC	1	2, 3						
	52113 500AE	1	7, 8						
2	3893 554	1	1, 6						COVER, Steering Gear Housing
		1	2, 3						
		1	7, 8						
3	3893 558	1	1, 6						SEAL, Steering Gear Cover
		1	2, 3						
		1	7, 8						
4	4210 545	1	1, 6						VALVE, Power Steering Gear
		1	2, 3						
		1	7, 8						
5	J325 1183	1	1, 6						O RING, Power Steering Pump
		1	2, 3, 7, 8						
6	4897 000AA	1	1, 6						REPAIR KIT, Thrust Bearing, Steering Gear
		1	2, 3						
		1	7, 8						
7	3491 350	1	1, 6						SEAL, Steering Gear Valve
		1	2, 3						
		1	7, 8						
8	4886 349AA	1	1, 6						SEAL KIT, Steering gear adjuster plug
		1	2, 3						
		1	7, 8						
9	J320 0501	1	1, 6						NUT, Steering Gear Arm
		1	7, 8						
10	4470 365	1	1, 6						SEAL KIT, Steering gear pitman shaft

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

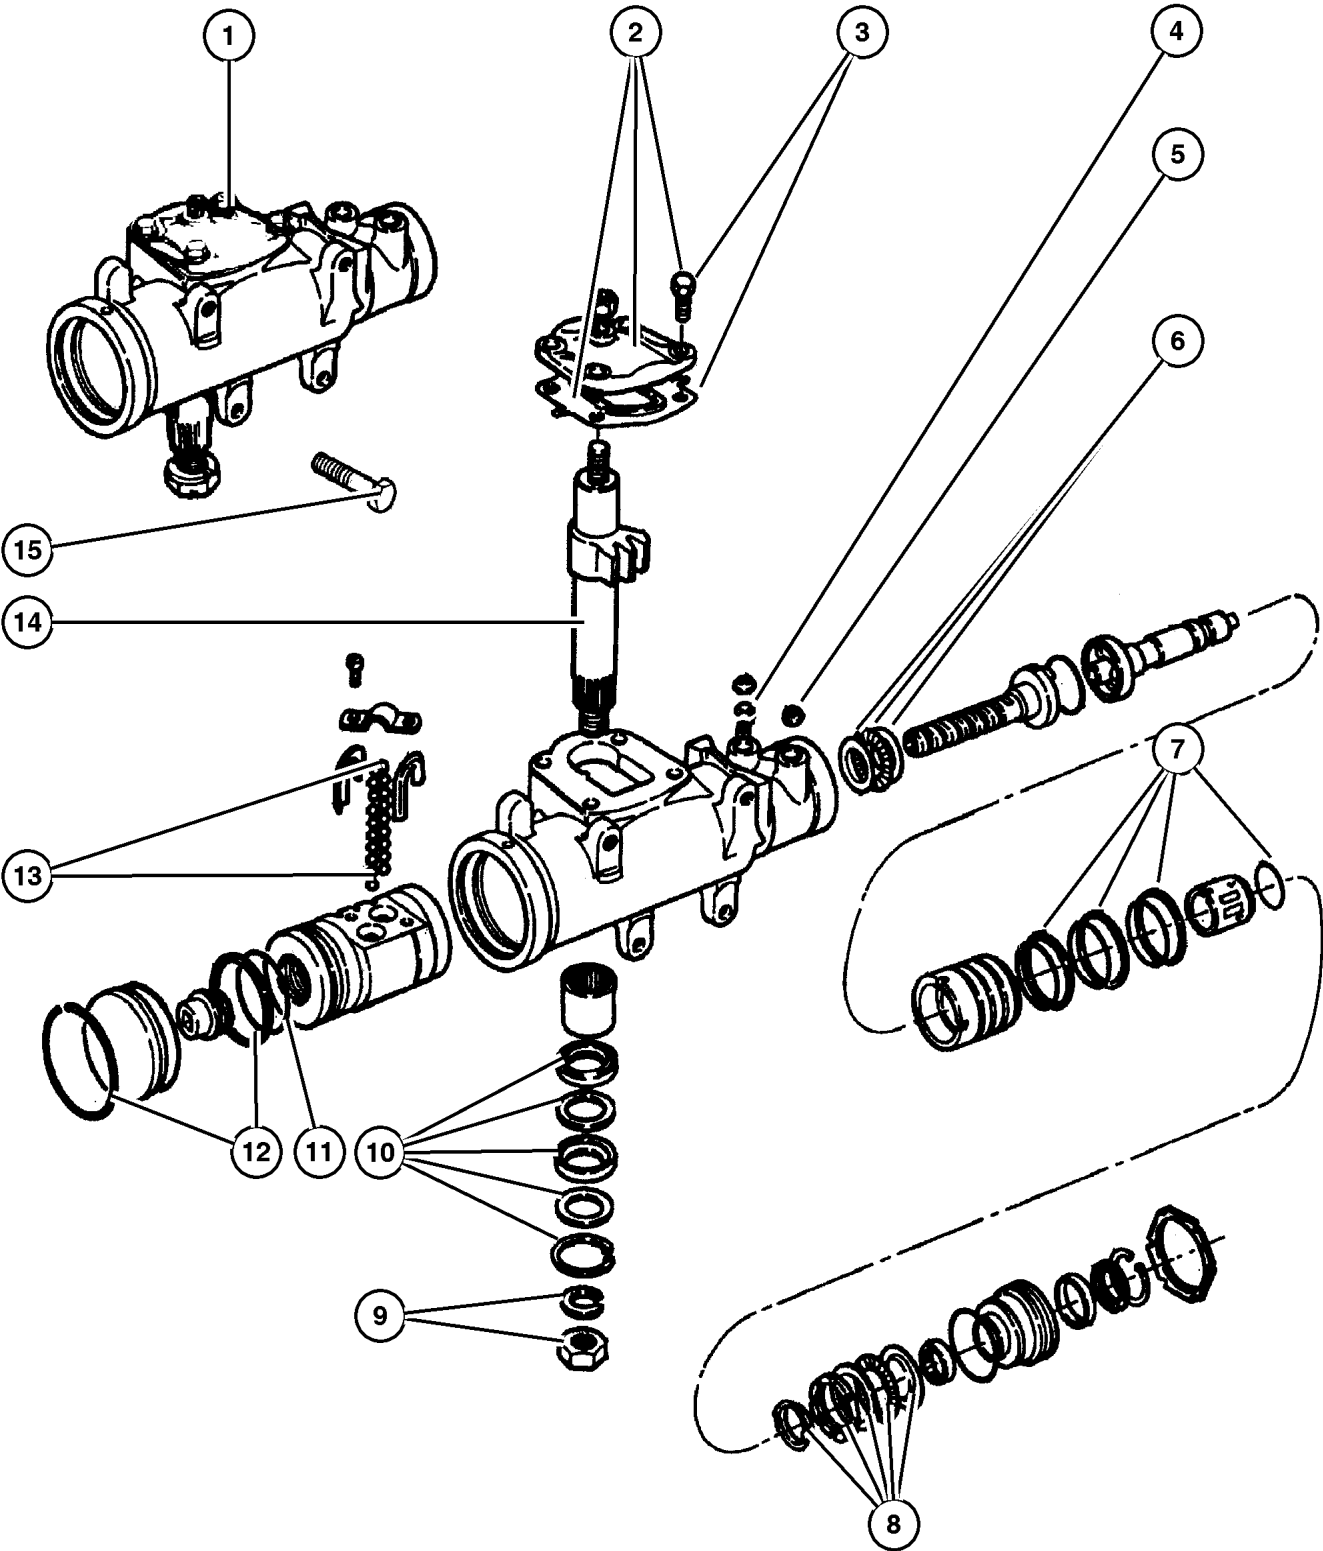Power Steering Gear
Figure 019-310




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
11	3893 559	1	2, 3						SEAL, Steering Gear
		1	7, 8						
		1	1, 6						
		1	2, 3						
12	3893 557	1	7, 8						SEAL KIT, Steering gear end plug
		1	1, 6						
		1	2, 3						
		1	7, 8						
13	3822 799	1	1, 6						BALL, Steering Gear
		1	2, 3						
		1	7, 8						
		1	7, 8						
14	3491 343	1	1, 6						SHAFT, Pitman
		1	2, 3, 7, 8						
		1	2, 3, 7, 8						
		1	2, 3, 7, 8						
15	6504 742	3							SCREW AND WASHER, Hex Head, M14 x 2 x 115.0

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

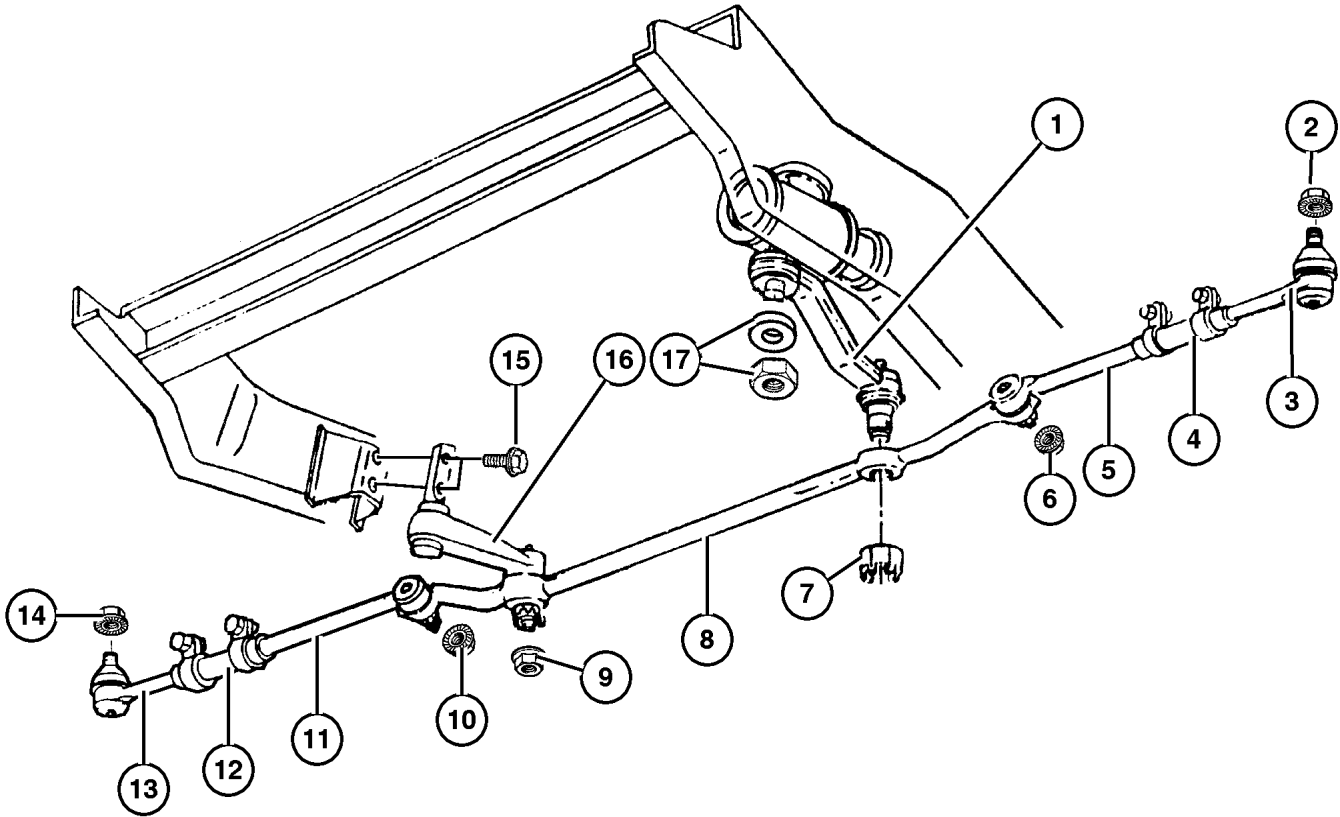Linkage, Steering, BE 1,2,3
 Figure 019-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:Check the VIN Number for the 'Z' Code Identification.

1	52106 054AB	1	1, 2, 3						ARM, Pitman
2	6505 623AA	1	1, 2, 3						NUT, Hex Locking, M14x1.5, Outer Tie Rod to Knuckle Mounting
3									SOCKET PACKAGE, Tie Rod End, Outer
	5017 670AA	1	1						
		1	2, 3						
4									SLEEVE, Steering Linkage
	5200 4472	1	1						Adjusting
		1	2, 3						Adjusting
5									SOCKET PACKAGE, Tie Rod End, Inner
	5017 671AA	1	1						
		1	2, 3						
6	6505 623AA	1	1, 2, 3						NUT, Hex Locking, M14x1.5, Inner Tie Rod to Center Link
7	6505 623AA	1	1, 2, 3						NUT, Hex Locking, M14x1.5, Steering Gear Arm to Center Link
8									LINK, Steering Center
	52039 496AA	1	2, 3						
	52106 259AA	1	1						
9	6505 623AA	1	1, 2, 3						NUT, Hex Locking, M14x1.5, Center Link to Idler Arm
10	6505 623AA	1	1, 2, 3						NUT, Hex Locking, M14x1.5, Inner Tie Rod to Center Link
11									SOCKET PACKAGE, Tie Rod End, Inner
	5017 671AA	1	1						
		1	2, 3						
12									SLEEVE, Steering Linkage
	5200 4472	1	1						Adjusting
		1	2, 3						Adjusting
13									SOCKET PACKAGE, Tie Rod End, Outer
	5017 670AA	1	1						
		1	2, 3						
14	6505 623AA	1	1, 2, 3						NUT, Hex Locking, M14x1.5, Outer Tie Rod to Knuckle Mounting
15	6503 814	2	1, 2, 3						SCREW AND WASHER, M16x2x50, Idler Arm to Frame Mounting


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Linkage, Steering, BE 1,2,3
 Figure 019-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
16									ARM, Idler
	52106 049AB	1	1						
		1	2, 3						
17									NUT, Steering Gear Arm
	J320 0501	1	7, 8						
		1	1, 6						

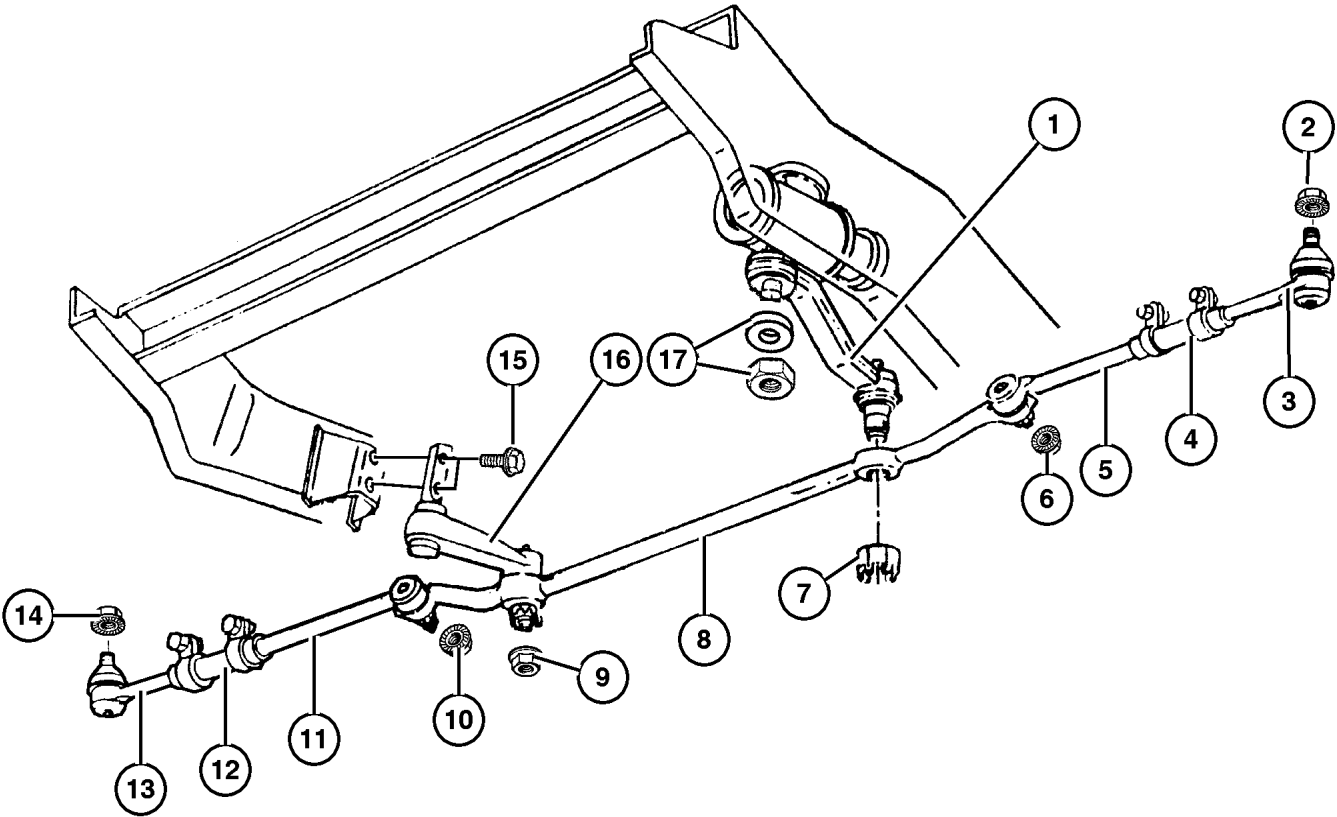


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005


Linkage, Steering, BE 6,7,8
 Figure 019-420

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: R3 With Z3B Suspension Code, Uses 4WD Style Front Suspension.									
1	6505 623AA	1	6, 7, 8						NUT, Hex Locking, M14x1.5, Drag Link to Knuckle
2	6505 623AA	1	6, 7, 8						NUT, Hex Locking, M14x1.5, Tie Rod to Drag Link Mounting
3	52106 954AA	1	6, 7, 8						SOCKET, Drag Link, Outer
4	5203 7600	1	6, 7, 8						TUBE, Tie Rod
5	52106 463AA	1	6, 7, 8						SOCKET, Drag Link, Inner
6	52106 473AA	1	6, 7, 8						ARM, Pitman
7	52106 984AA	1	6, 7, 8						SOCKET, Tie Rod, Inner
8	5203 7600	1	6, 7, 8						TUBE, Tie Rod
9	6505 623AA	1	6, 7, 8						NUT, Hex Locking, M14x1.5, Tie Rod to Knuckle Mounting
10	52106 975AA	1	6, 7, 8						SOCKET, Tie Rod, Outer
11	6506 276AA	1	6, 7, 8						NUT, Hex Flange Lock, M12x1.75, Damper to Inner Tie Rod Mounting
12	52106 909AB	1	6, 7, 8						DAMPER, Steering
13	6502 473	1	6, 7, 8						BOLT, Hex Flange Head, M12x1.75x65, Damper to Axle Bracket Mounting
14	6502 697	2							NUT, Hex Flange Lock, M12x1.75, Damper to Axle Bracket Mounting

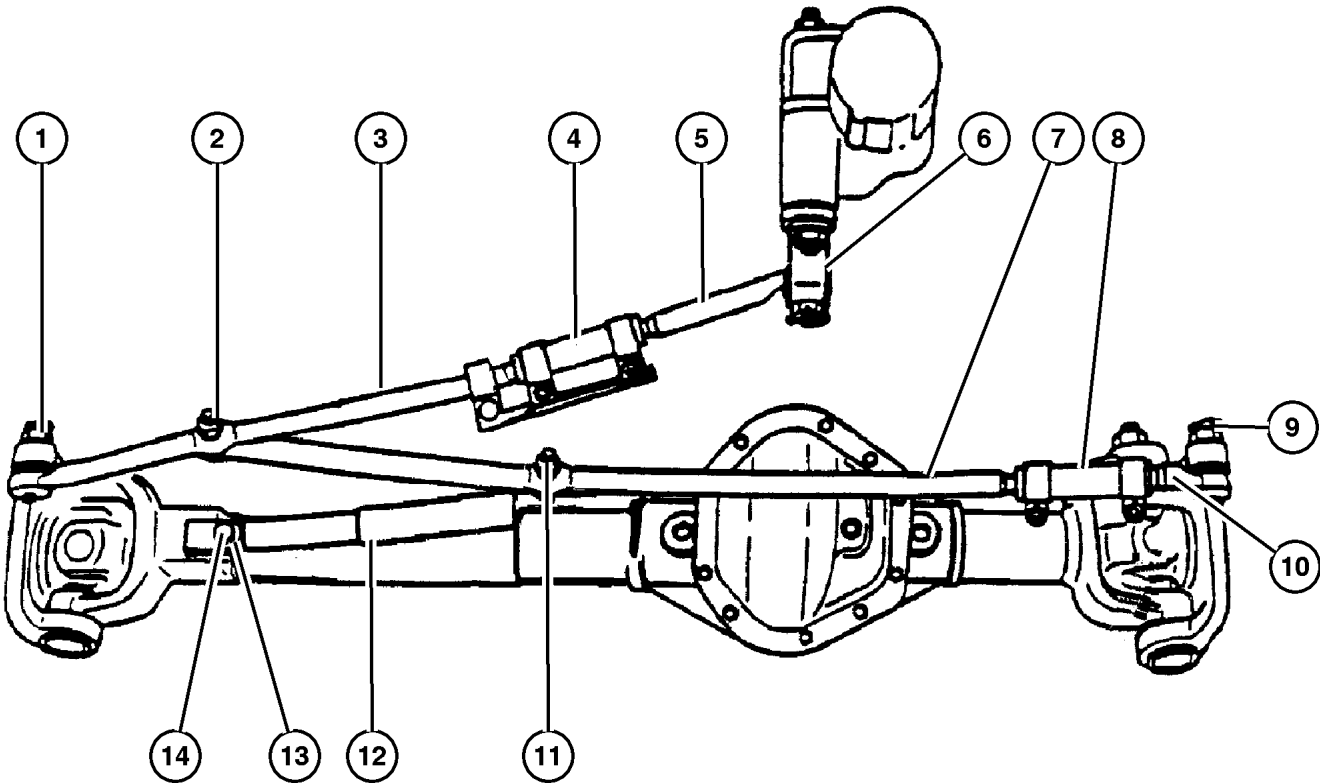

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

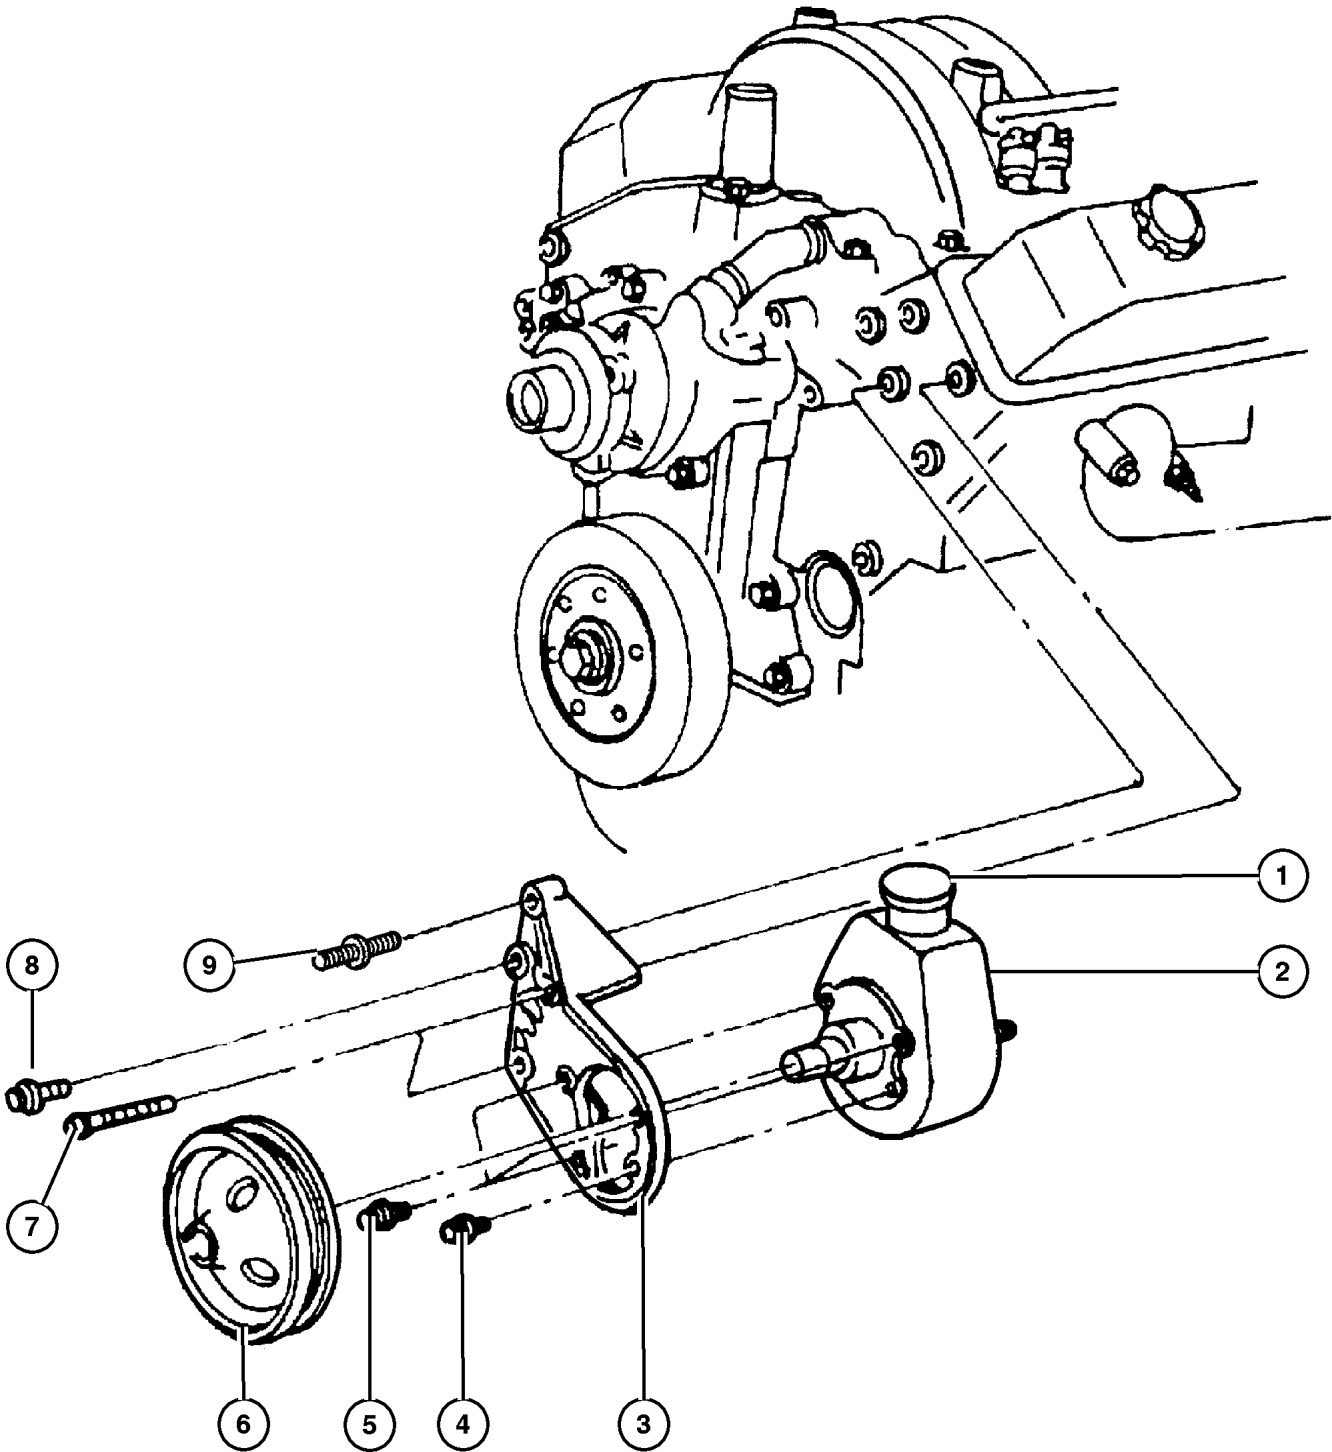Pump,Power Steering and Mounting,EL0,EM0 Gas
Figure 019-510




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
EL0 = All 5.2L 8 Cyl Gas Engines									
EM0 = All 5.9L 8 Cyl Gas Engines									
EW0 = All 8.0L Gas Engines									
1									CAP, Power Steering Pump
	4694 766	1				EL0			Reservior
		1	1, 2, 6, 7			EM0			Reservior
		1	3, 8			EM0			Reservior
2									PUMP, Power Steering
	52039 145AB	1				EL0			
		1	1, 2, 6, 7			EM0			
	52039 042AB	1	3, 8			EM0			
3									BRACKET, Power Steering Pump
	5300 5613	1				EL0			Mounting
		1	1, 2, 6, 7			EM0			Mounting
		1	3, 8			EM0			Mounting
4									SCREW AND WASHER, Hex Head, M10-1.50x30, (NOT SERVICED) (Not Serviced)
5									BOLT, Hex Head, M10x1.50x28 Power Steering Bracket to Pump
	6502 501	3				EL0			
		3	1, 2, 6, 7			EM0			Power Steering Bracket to Pump
		3	3, 8			EM0			Power Steering Bracket to Pump
6									PULLEY, Power Steering Pump
	5300 5614	1				EL0			
		1	1, 2, 6, 7			EM0			
		1	3, 8			EM0			
7	6034 247	2				EL0, EM0, EW0			BOLT, Hex Head, .375-16x.25, Power Steering Braket to Cylinder Head
8	6034 249	1				EL0, EM0, EW0			SCREW AND WASHER, Power Steering Braket to Cylinder Head
9	6034 985	1				EL0, EM0, EW0			STUD, .375-16x3.04, Power Steering Braket to Cylinder Head

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

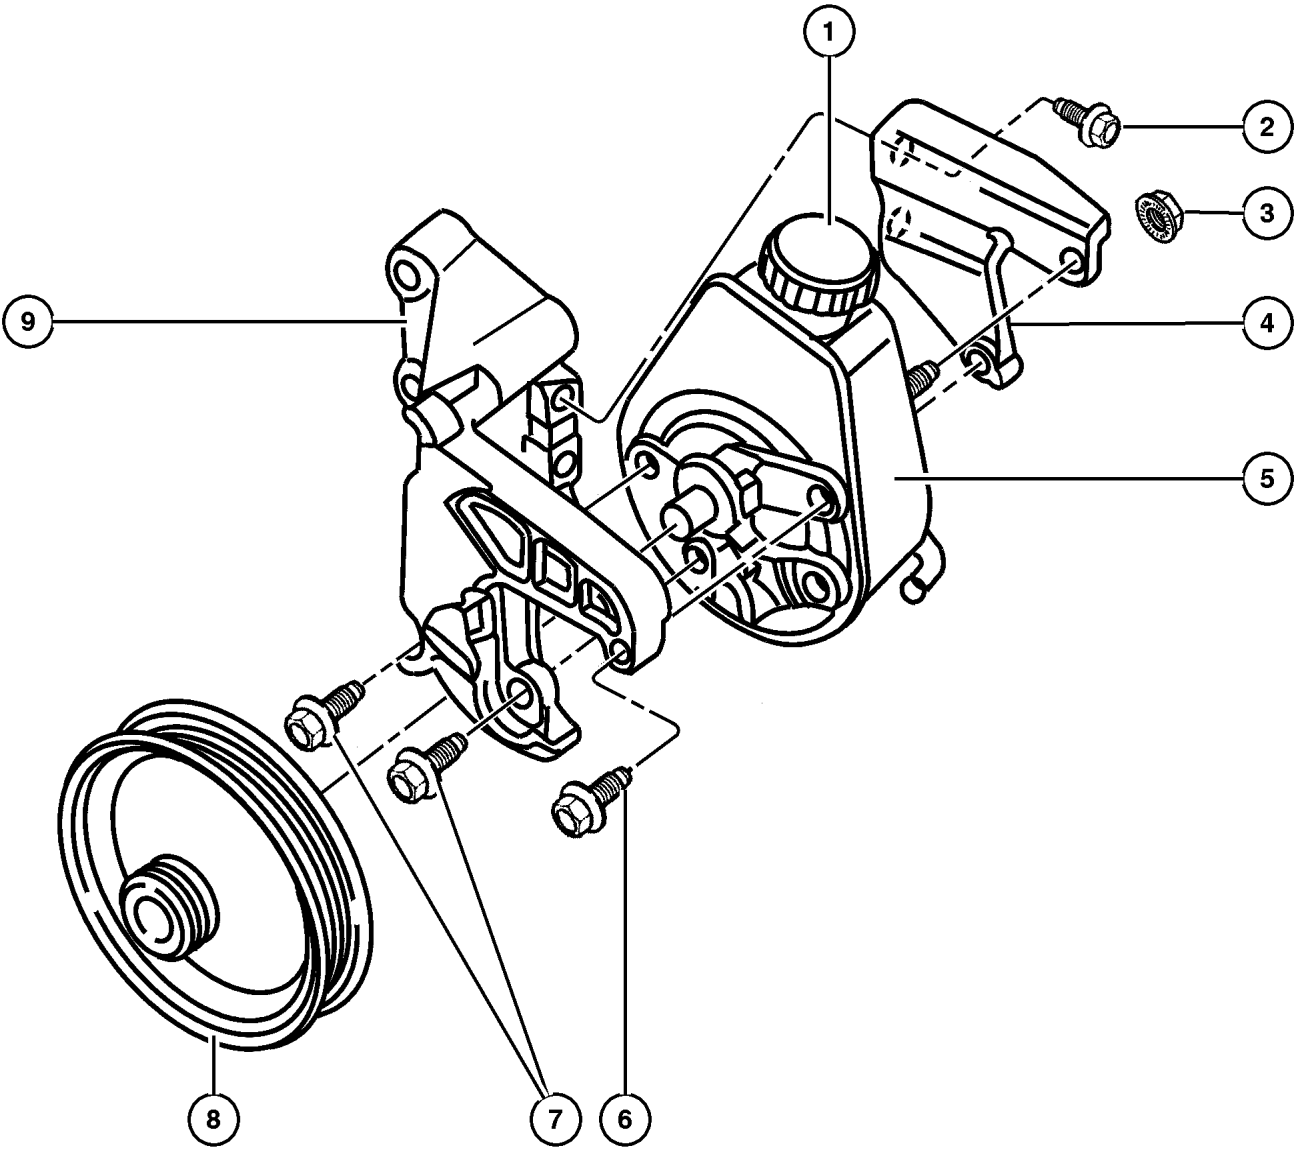Pump,Power Steering and Mounting,EW0 Gas
Figure 019-520



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Notes: EW0=8.0L V-10 Gas Engine

1	4694 766	1	1, 2, 6, 7			EW0			CAP, Power Steering Pump
		1	3, 8			EW0			Reservior
2	6034 549	2	1, 2, 6, 7			EW0			SCREW, Hex Head, .312-18x.94
		2	3, 8			EW0			Rear Bracket to Front Bracket
3	6502 135	2	1, 2, 6, 7			EW0			NUT, Hex Flange, M10x1.5
		2	3, 8			EW0			Pump Stud to Rear Bracket
4	5301 0011	1	1, 2, 6, 7			EW0			BRACKET, Power Steering Pump
		1	3, 8			EW0			Rear
5	52039 145AB 52039 042AB	1	1, 2, 6, 7			EW0			PUMP, Power Steering
		1	3, 8			EW0			
6	6502 501	1	1, 2, 6, 7			EW0			BOLT, Hex Head, M10x1.50x28
		1	3, 8			EW0			Front Bracket to Pump
7	6101 864	2	1, 2, 6, 7			EW0			SCREW, M10x1.5x35
		2	3, 8			EW0			Front Bracket to Pump
8	5300 5614	1	1, 2, 6, 7			EW0			PULLEY, Power Steering Pump
		1	3, 8			EW0			
9	5301 0002	1	1, 2, 6, 7			EW0			BRACKET, Power Steering Pump
		1	3, 8			EW0			Front


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

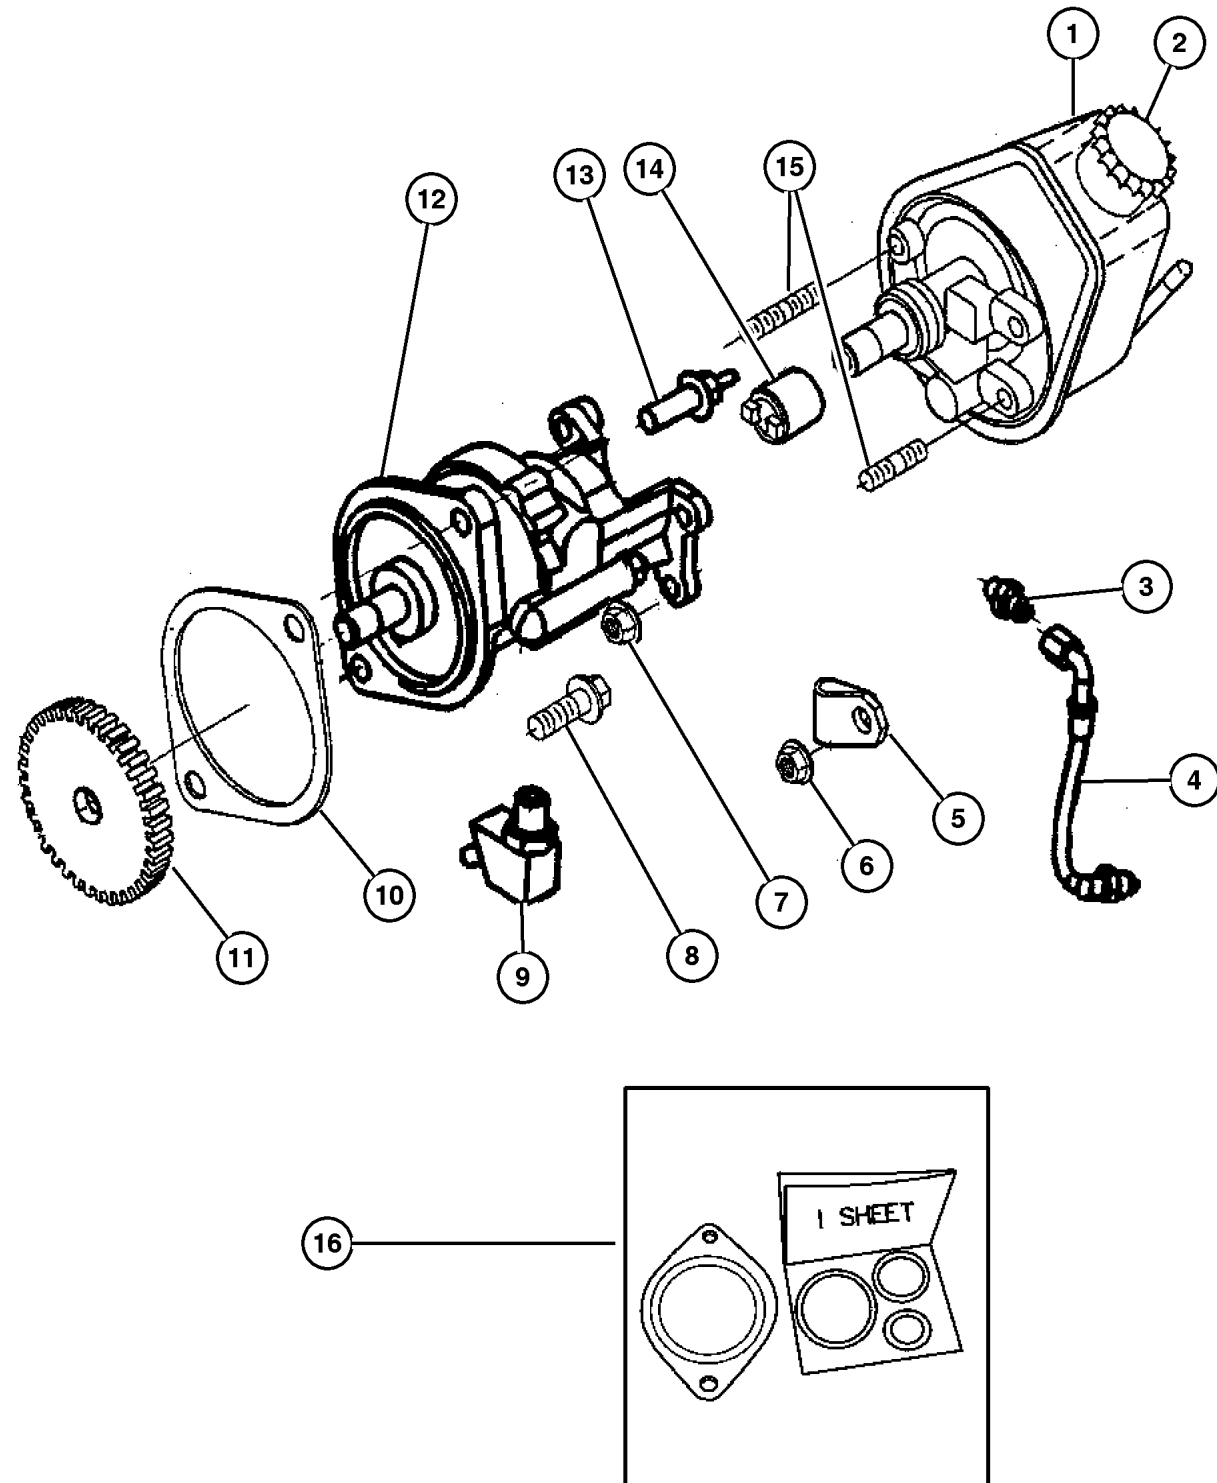Pump,Power Steering and Mounting,ET0 Diesel
Figure 019-530



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
ETC = 5.9L Cummins 24V Diesel Engine									
ET0 = All Diesel Engines									
1	4883 960AA	1				ETC			PUMP, Power Steering
2	5018 358AA	1				ETC			CAP, Power Steering Pump
3	5003 637AA	1				ETC			NIPPLE, Pump
4	5011 428AA	1				ETC			HOSE, Vacuum Pump
5	5011 799AA	1				ETC			BRACKET, Vacuum Pump
6	4429 862	4				ETC			NUT, Hex Flange, M10x1.5
7	4429 862	4				ETC			NUT, Hex Flange, M10x1.5
8	4429 637	1				ETC			SCREW, Hex Head, m12X1.75X.35
9	5011 617AA	1				ETC			CHECK VALVE, Vacuum Pump
10	4638 531	1				ETC			GASKET, Hydraulic Pump
11	5011 797AA	1				ETC			GEAR, Accessory Drive
12	5011 796AA	1				ETC			PUMP, Vacuum
13	5011 421AA	1				ETC			SCREW
14	4728 162	1				ETC			HUB, Hydraulic Brake Pump
15	4761 972	4				ETC			STUD
16	5140 342AA	1				ETC			SEAL KIT, Vacuum Pump
									THIS KIT CONTAINS LIP SEAL , SMALL O-RING~~& LARGE O- RING AND I SHEET.
		1				ETH	DBB		THIS KIT CONTAINS LIP SEAL , SMALL O-RING~~& LARGE O- RING AND I SHEET.


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

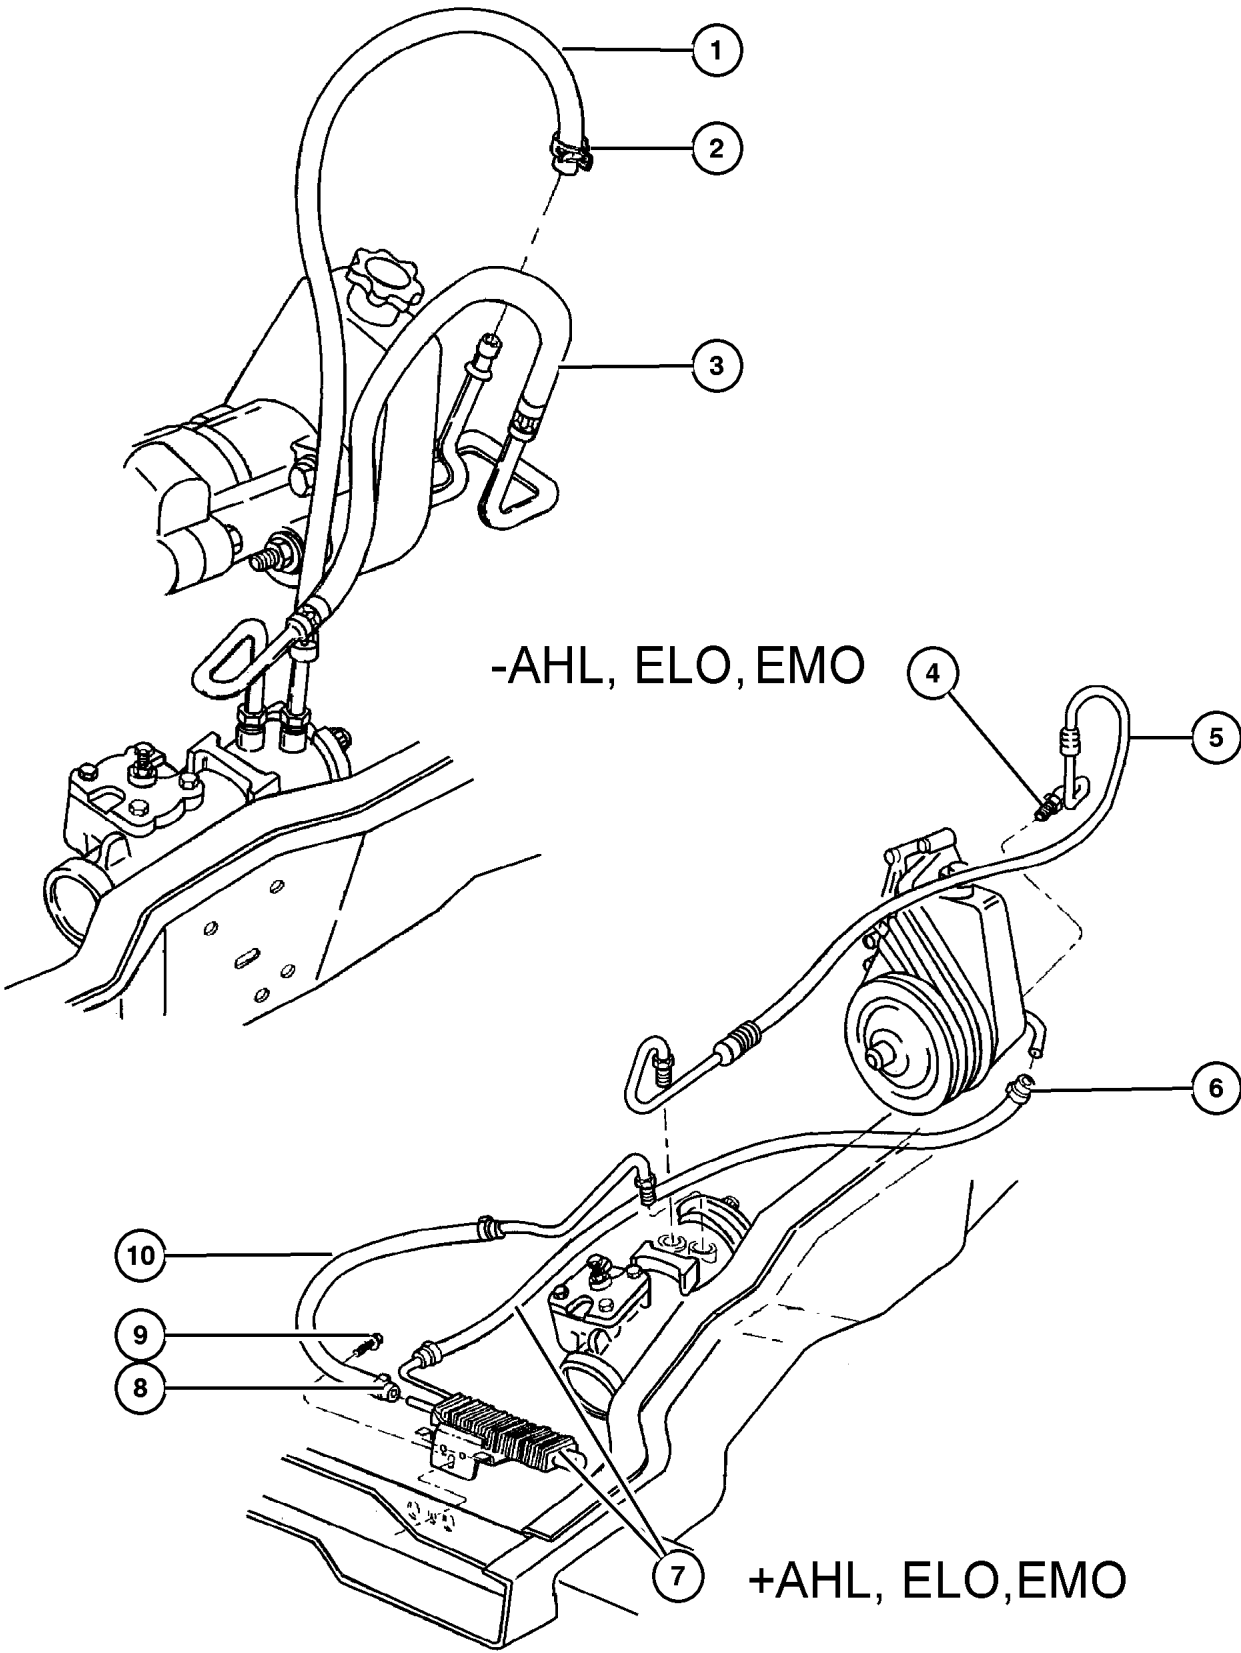Hoses,Power Steering with EL0,EM0 Gas
Figure 019-710



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:EL0=5.2L V-8---EM0=5.9L V8---AHC=Trailer Tow Prep Group

1	5203 8432	1				EL0, EM0			HOSE, Power Steering Return, [-AHC]
2	2448 761	1				EL0, EM0			CLAMP, Hose
3	5203 8430	1	1, 2, 3			EL0, EM0			HOSE, Power Steering Pressure
	5203 9356	1	6, 7, 8			EL0, EM0			
4	5205 254	1				EL0, EM0			O RING, Power Steering Hose, As Required On All Engines
5	5203 8430	1	1, 2, 3			EL0, EM0			HOSE, Power Steering Pressure
	5203 9356	1	6, 7, 8			EL0, EM0			
6	2448 761	1				EL0, EM0			CLAMP, Hose
7	52106 395AA	1				EL0, EM0			HOSE AND COOLER, Power Steering, [+AHC]
8	2448 761	1				EL0, EM0			CLAMP, Hose
9	6502 064	1				EL0, EM0			SCREW, Tapping, M6x1x20, Cooler Mounting
10	5203 8567	1				EL0, EM0			HOSE, Power Steering Return, [+AHC]


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

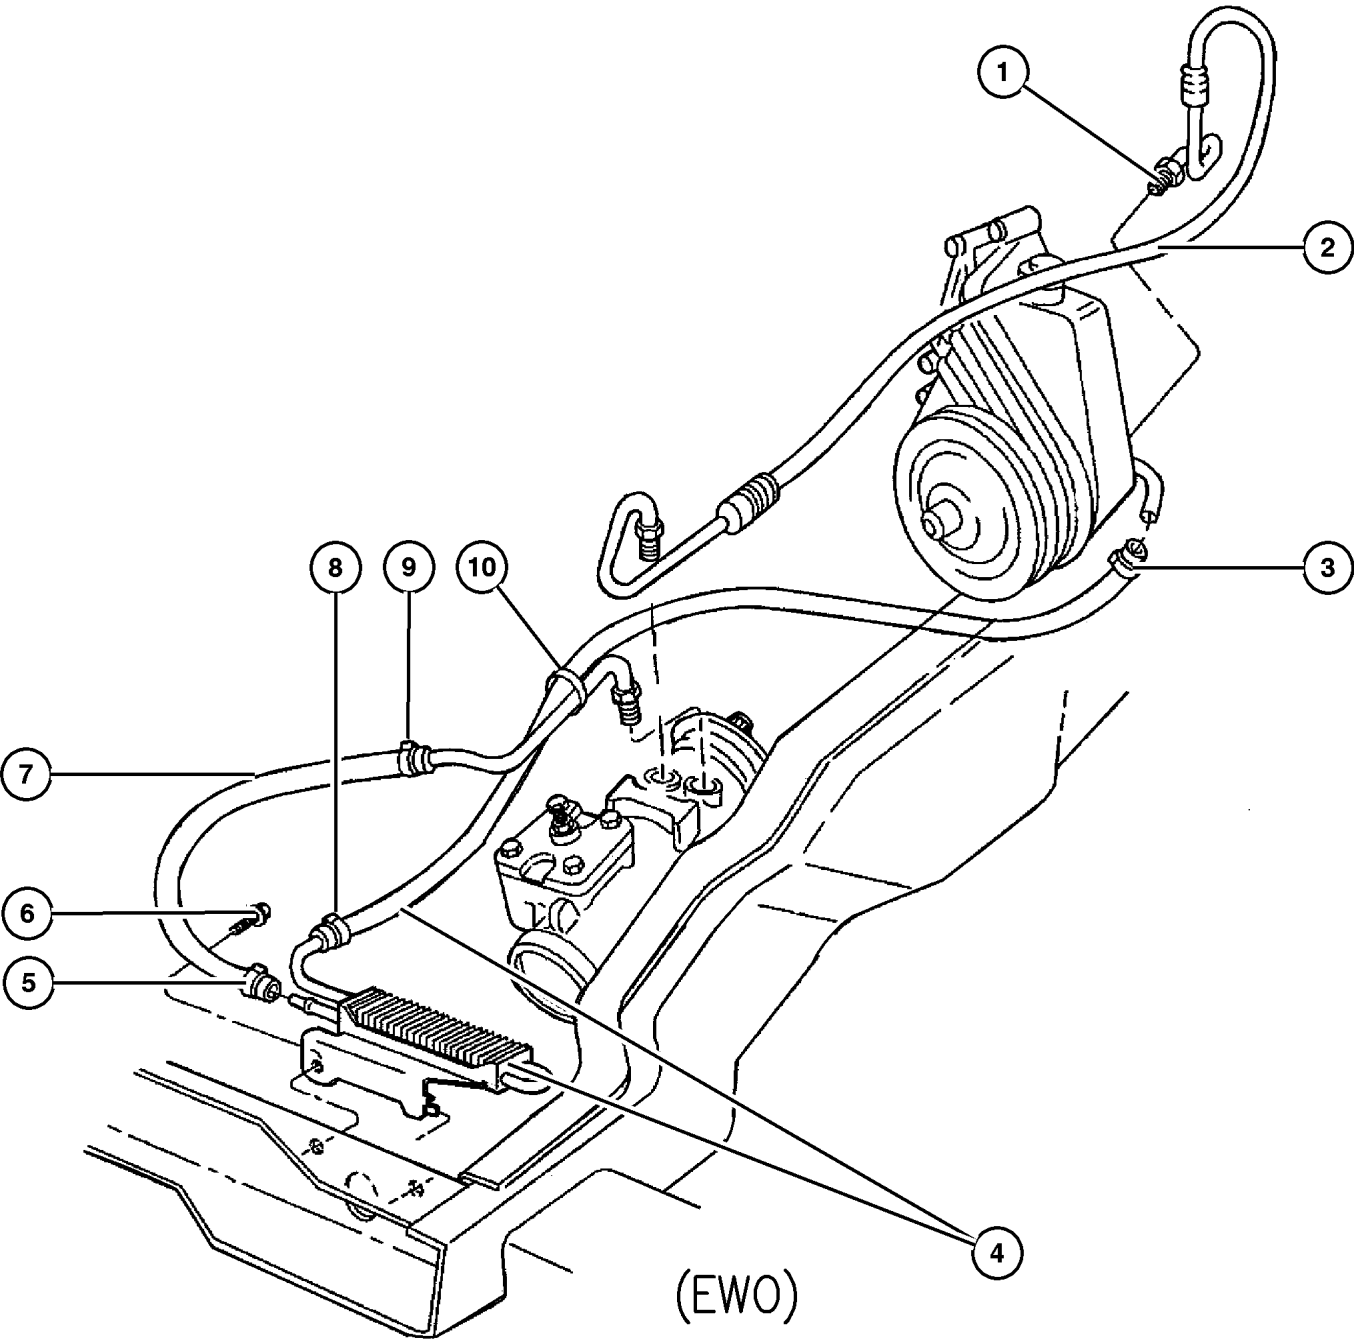Hoses,Power Steering with EW0 Gas
Figure 019-720




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
EW0=8.0L Engine									
1	5205 254	1				EW0			O RING, Power Steering Hose, Use as required
2	5203 8434	1				EW0			HOSE, Power Steering Pressure
3	2448 761	1				EW0			CLAMP, Hose
4	52106 395AA	1				EW0			HOSE AND COOLER, Power Steering
5	2448 761	1				EW0			CLAMP, Hose
6	6502 064	1				EW0			SCREW, Tapping, M6x1x20, Cooler Mounting
7	5203 8567	1				EW0			HOSE, Power Steering Return
8	2448 761	1				EW0			CLAMP, Hose
9	2448 761	1				EW0			CLAMP, Hose
10	4641 780	1				EW0			STRAP, Tie

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

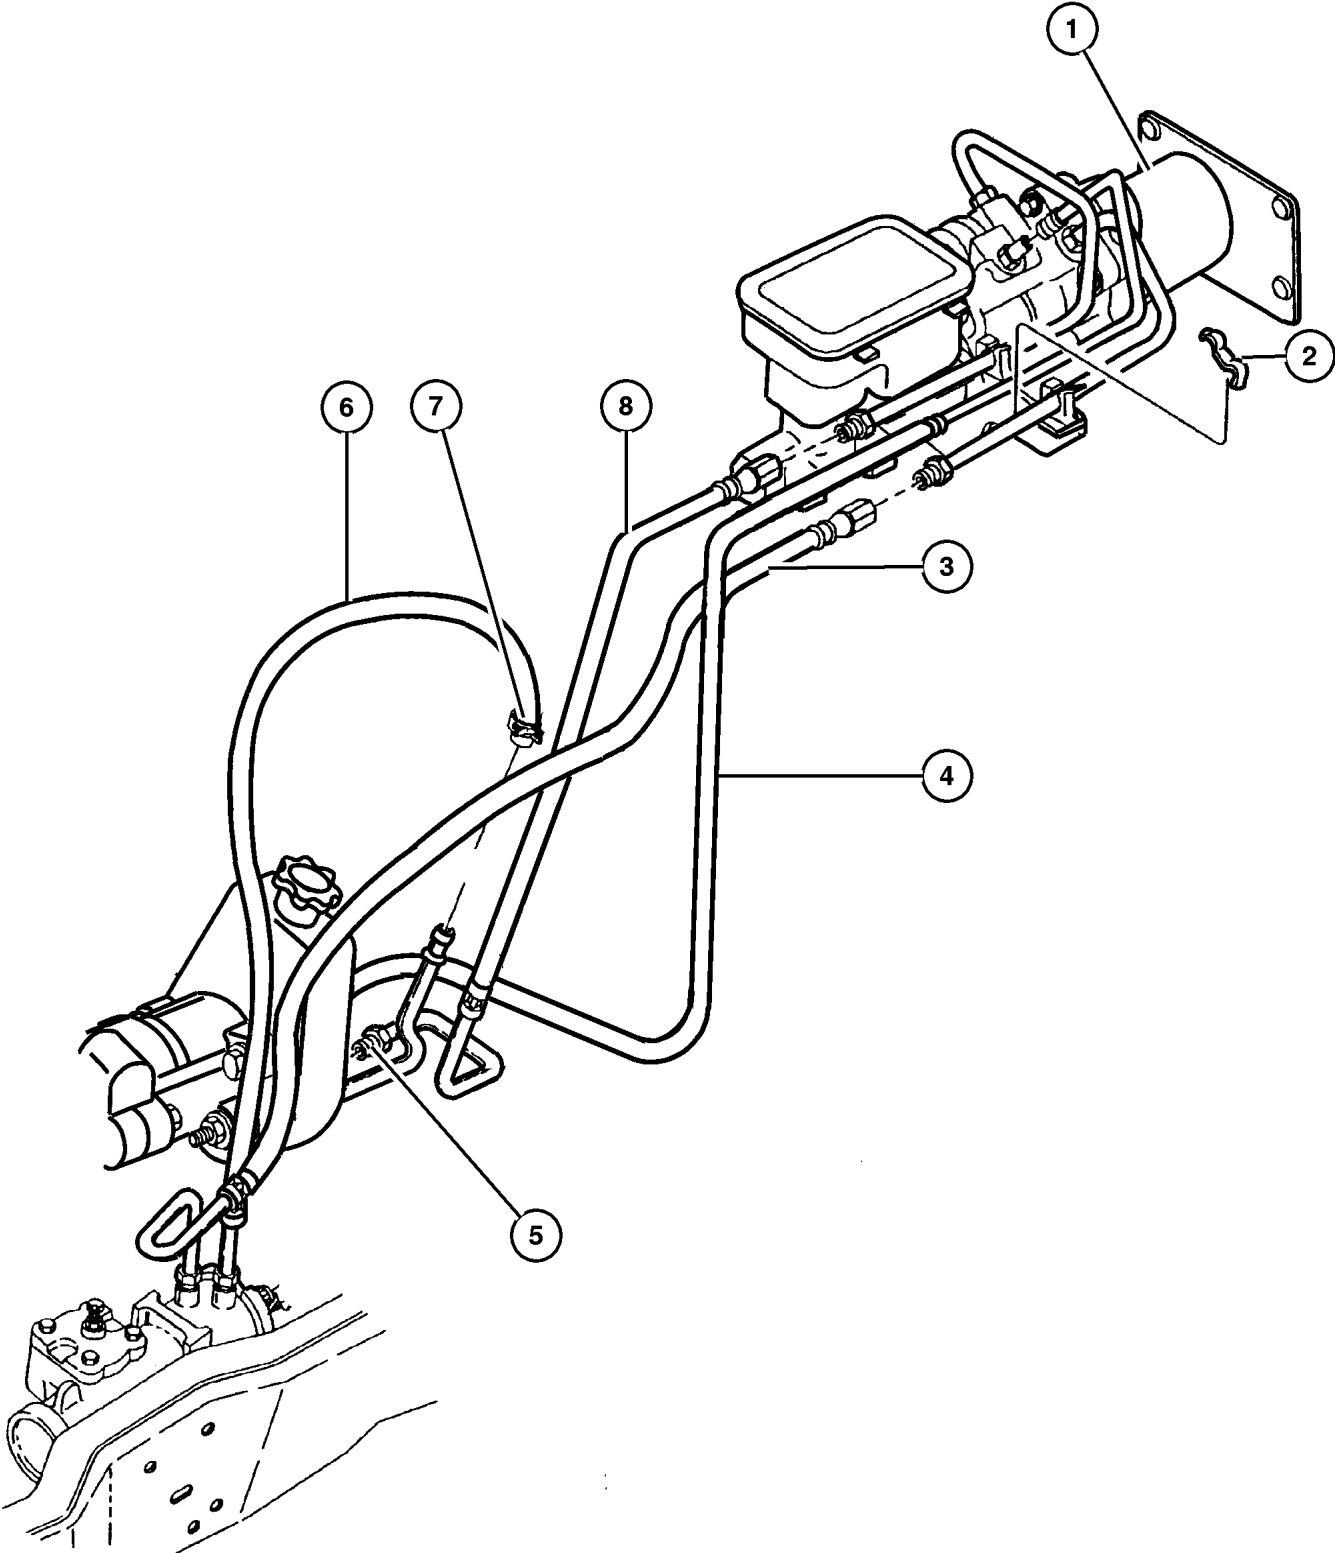Hoses,Power Steering,with Hydroboost System with EM0,ET0,EW0 Engines
Figure 019-730



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: AHC=Trailer Tow Prep Group DBB = All Manual Transmissions EM0 = All 5.9L 8 Cyl Gas Engines ET0 = All 5.9L Turbo Diesel Engines EW0 = All 8.0L Gas Engines									
1	5003 330AB	1	2, 7			ET0			HYDRO-BOOSTER, Power Brake
		1	3, 8						
2	4695 734	2				ET0			CLIP, Power Steering Hose
		2	3, 8			EM0, EW0			
3	52039 358AC	1	2, 3, 7, 8			ET0			HOSE, Power Steering Pressure
		1	3, 8			EM0, EW0			Gear to Hydroboost
4	52106 085AA	1	2, 3, 7, 8			ET0			HOSE, Power Steering Return
	52106 996AA	1	3, 8			EM0, EW0			Hydroboost
									Pump to Hydroboost
5	5205 254	2	2, 3, 7, 8			ET0			O RING, Power Steering Hose
		2	3, 8			EM0, EW0			as Required
6	5200 6724	1	2, 3, 7, 8			ET0			HOSE, Power Steering Return
	5203 8567	1				EW0			Gear to Pump
		1				EL0, EM0			Gear to Pump
7	2448 761	2					DBB		CLAMP, Hose
8	52106 302AA	1	2, 3, 7, 8			ET0			HOSE, Power Steering Pressure
		1	3, 8			EM0, EW0			Pump to Hydroboost


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

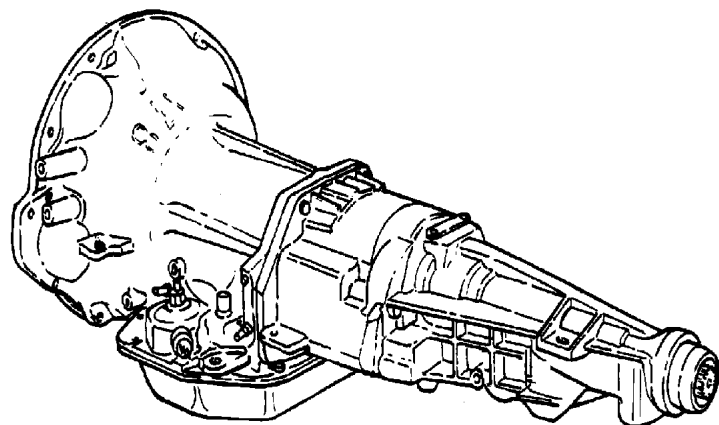September 16, 2005

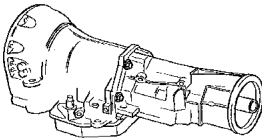
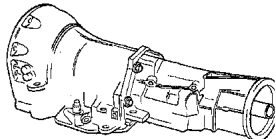

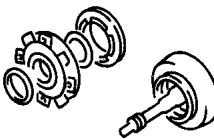
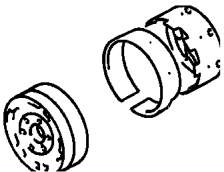

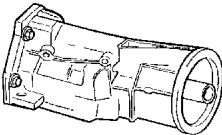
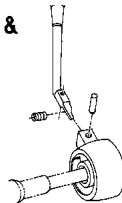
Group – 46RE

Automatic Transmission 4 Speed




GROUP 46RE - Automatic Transmission 4 Speed

Illustration Title	Group-Fig. No.
Transmission Assembly	
Transmission Assembly - 46RE [DGT]	Fig. 46RE-110
Case and Extension	
Case and Related Parts - 46RE [DGT]	Fig. 46RE-210
Extension - 46RE [DGT]	Fig. 46RE-220
Oil Pump	
Pump, Oil with Reaction Shaft - 46RE [DGT]	Fig. 46RE-310
Gear Train	
Clutch, Front and Rear with Gear Train - 46RE [DGT]	Fig. 46RE-410
Gear Train and Intermediate Shaft - 46RE [DGT]	Fig. 46RE-420
Output Shaft - 46RE [DGT]	Fig. 46RE-430
Bands, Reverse and Kickdown	
Bands, Reverse and Kickdown - 46RE [DGT]	Fig. 46RE-510
Valve Body	
Valve Body - 46RE [DGT]	Fig. 46RE-710
Servos, Accumulator Piston and Spring - 46RE [DGT]	Fig. 46RE-720
Parking Sprag [DGT]	Fig. 46RE-730
Overdrive Gear Train	
Clutch, Overdrive with Gear train - 46RE [DGT]	Fig. 46RE-1010
Gearshift Controls	
Controls, Gearshift Lower - 46RE [DGT]	Fig. 46RE-1210

46RE-100 Transmission Assembly	46RE-200 Case and Extension	46RE-300 Oil Pump	46RE-400 Gear Train
			
46RE-500 Bands, Reverse and Kickdown	46RE-700 Valve Body	46RE-1000 Overdrive Gear Train	46RE-1200 Gearshift Controls
			

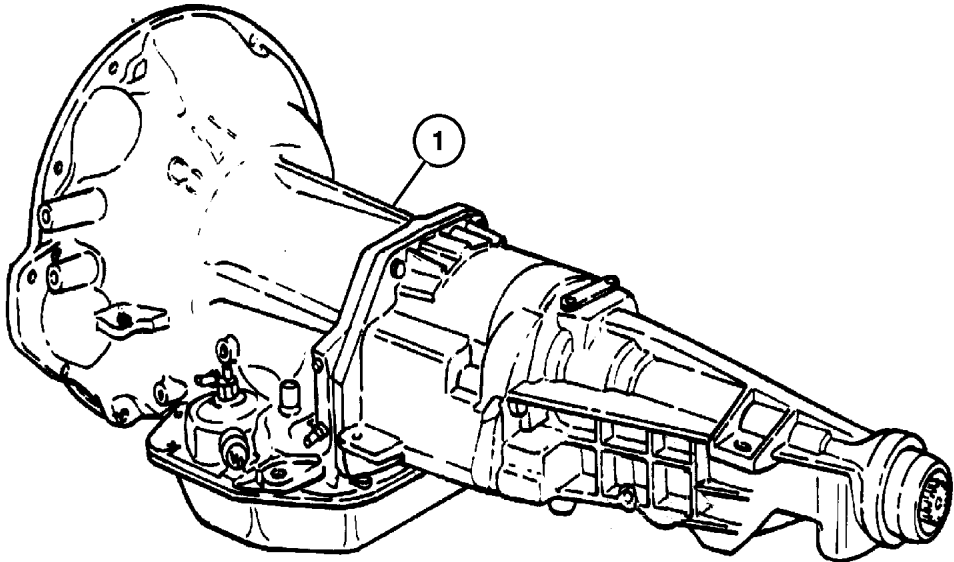Transmission Assembly - 46RE [DGT]
Figure 46RE-110



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: Sales Codes
[DGT] = 4 Speed Automatic Transmission 46RE
[EL0] = All 5.2L 8 Cylinder Gas Engines
[EM0] = All 5.9L 8 Cylinder Gas Engines


1	TRANSMISSION PACKAGE								
	5014 769AA	1	1, 2, 3			EL0	DGT		52119843AA(Package Contains, 52119843AA Transmission, K4736591 Converter, K1949765 Bolts)
	5014 771AA	1	1, 2, 3			EM0	DGT		52119845AA(Package Contains 52119845AA Transmission, K4736591 Converter, K1949765 Bolts)
	5014 772AA	1	6, 7, 8			EM0	DGT		52119846AA(Package Contains 52119846AA transmission, K4736591 Converter, K1949765 Bolts)
	5014 770AA	1	6, 7, 8			EL0	DGT		52119844AA (Package Contains 52119844AA Transmission, K4736595 Converter, K1949765 Bolts),
-2	OVERDRIVE								
	5211 8156	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
	5211 8784	1	1, 2, 3			EM0	DGT		
		1	1, 2, 3			EL0	DGT		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

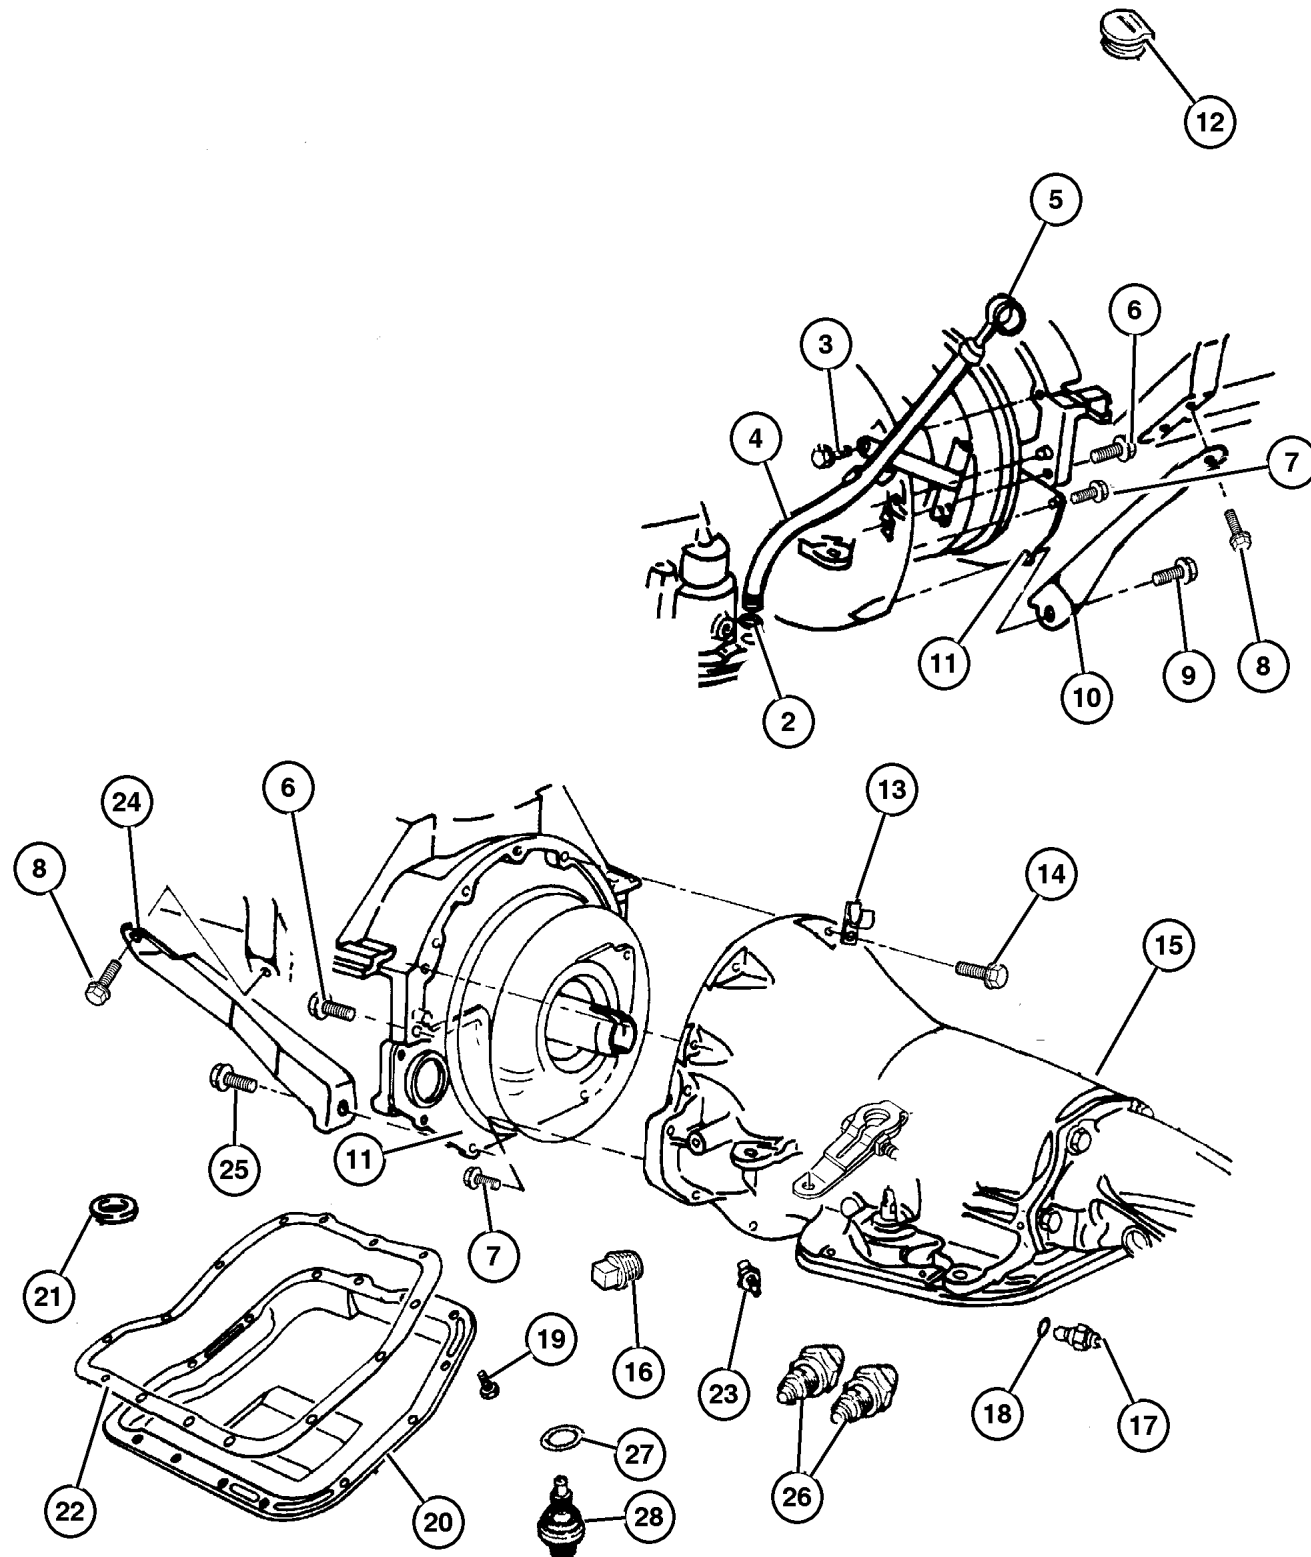Case and Related Parts - 46RE [DGT] Figure 46RE-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes									
[DGT] = 4 Speed Automatic Transmission 46RE									
[DGO] = All Automatic Transmissions									
[ELO] = All 5.2L 8 Cylinder Gas Engines									
[EM0] = All 5.9L 8 Cylinder Gas Engines									
[ET0] = All 5.9L Turbo Diesel Engines									
[EW0] = All 8.0L Gas Engines									
-1									SEAL AND GASKET PACKAGE, Transmission
	4863 884AF-	1	1, 2, 3			ELO	DGT		
		1	6, 7, 8			ELO	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
2	52118 629AB	1					DGO		SEAL, Oil Filler Tube
3	0181 112	1					DGO		SCREW AND WASHER, .375-16x1.00
4	52118 620AC	1					DGT		TUBE, Transmission Oil Filler
5	52107 769AA	1					DGT		INDICATOR, Transmission Fluid Level
6	6024 473	2				EW0	DGP		SCREW AND WASHER, Hex Head, .437-14x2.00
7	6023 092	2					DGT		SCREW AND WASHER, Hex Head, .25-20x.50
8	0181 112	4				ELO, EM0, EW0	DGO		SCREW AND WASHER, .375-16x1.00
9									SCREW AND WASHER, Hex Head, .437-14x.25, (NOT SERVICED) (Not Serviced)
10	5211 7772	1					DGT		STRUT, Transmission to Block
11	4130 503	1					DGT		COVER, Transmission Dust
12	5211 7709	1				ELO, EM0			GROMMET, Timing Probe
13									CLIP
	5211 8181	1	1, 2, 3			ELO	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			ELO	DGT		
		1	6, 7, 8			EM0	DGT		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

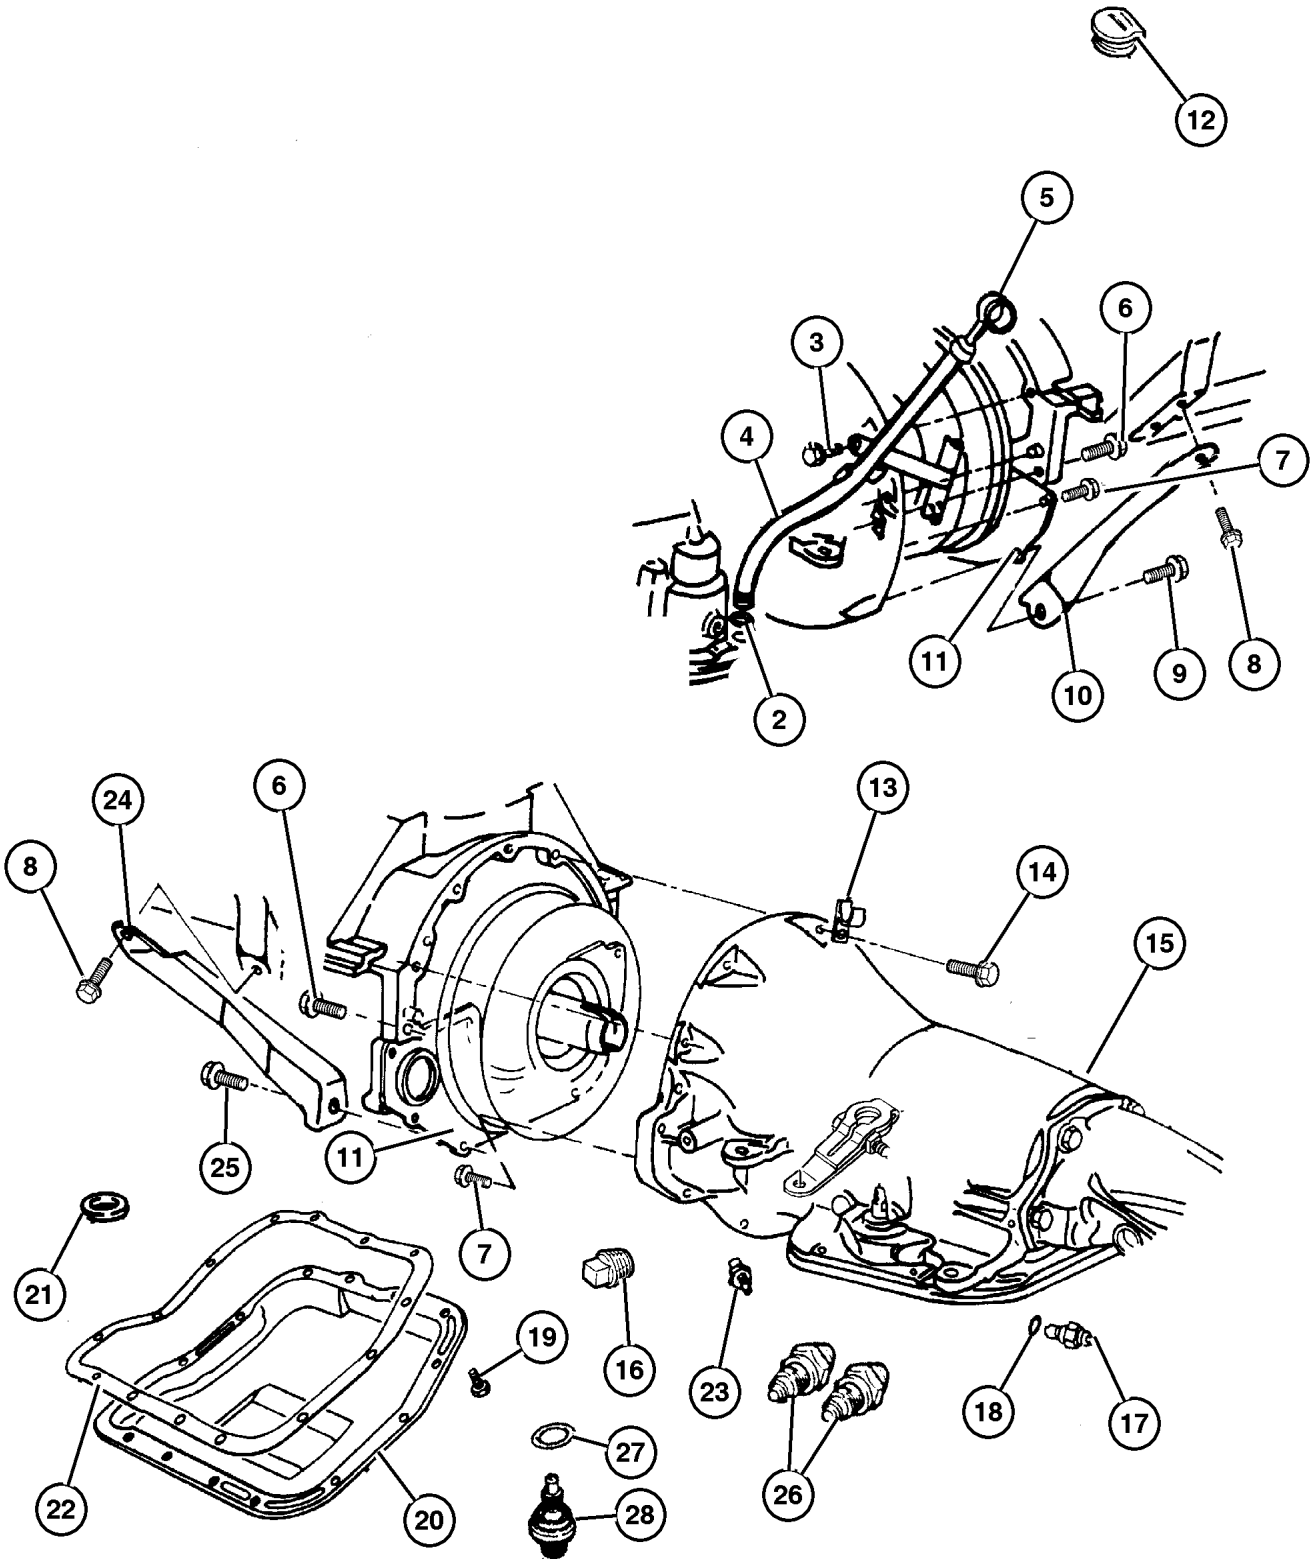
ENGINE
ELF, ELO = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DGO = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Case and Related Parts - 46RE [DGT]
Figure 46RE-210




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
14	6022 266	4				EL0, EM0, EW0	DG0		SCREW, Hex Head, .375-16x1.5
15	5211 8756	1	1, 2, 3			EL0	DGT		CASE, Transmission
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
16	6028 095	1	1, 2, 3			EL0	DGT		PLUG, Pressure Check
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
17	56028 181AB	1	1, 2, 3			EL0	DGT		SWITCH, Neutral, Safety, Back Up
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
18	2408 143	1	1, 2, 3			EL0	DGT		WASHER, Switch
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
19									SCREW AND WASHER, Hex Head, .312-18x.625
	4723 548	2	1, 2, 3			EL0	DGT		
		2	1, 2, 3			EM0	DGT		
		2	6, 7, 8			EL0	DGT		
		2	6, 7, 8			EM0	DGT		
20	5211 8780	1	1, 2, 3			EL0	DGT		PAN, Transmission Oil
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
21	3681 601	1	1, 2, 3			EL0	DGT		MAGNET, Transmission
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
22									GASKET, Oil Pan

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

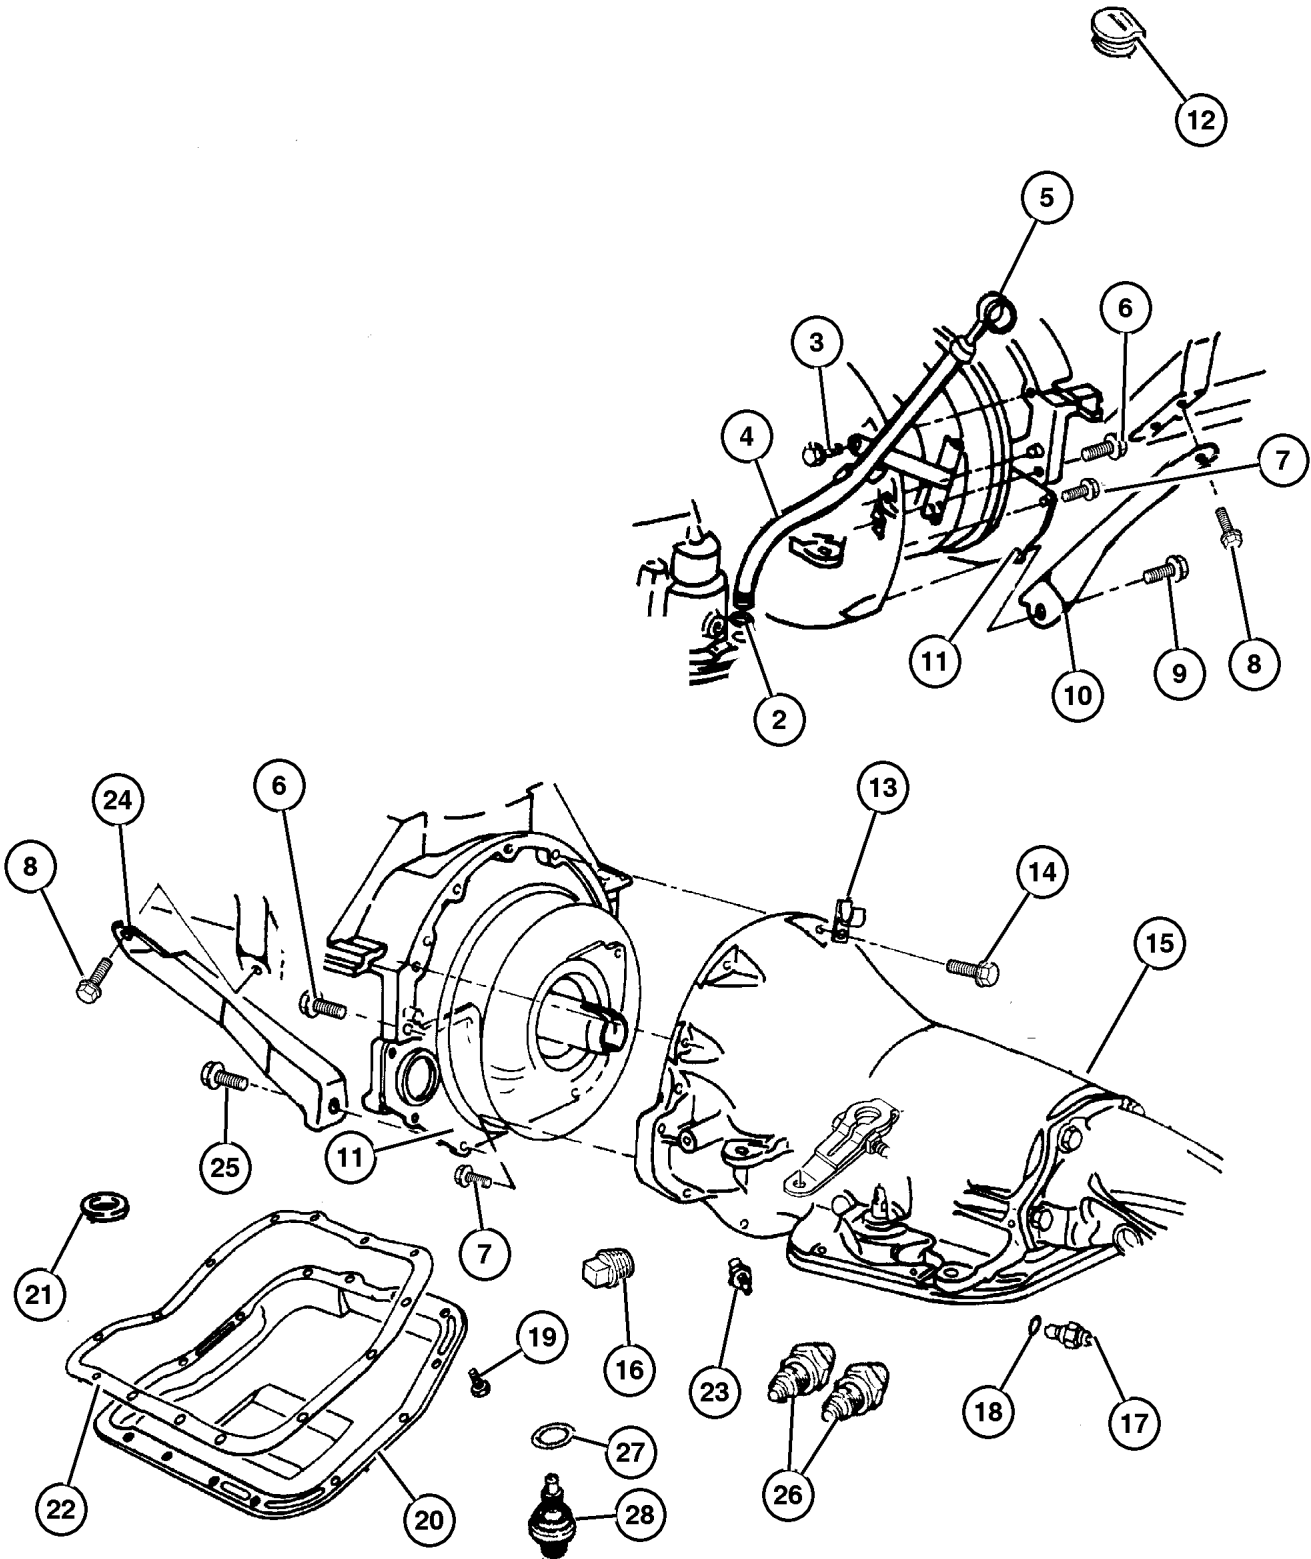Case and Related Parts - 46RE [DGT]
Figure 46RE-210




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
23	2464 324	1	1, 2, 3			EL0	DGT		SCREW
		1	6, 7, 8			EL0	DGT		
	6036 115AA	1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
24	5211 7771	1	6, 7, 8			EL0	DGT		STRUT, Transmission to Block SCREW, (NOT SERVICED) (Not Serviced)
		1	6, 7, 8			EM0	DGT		
		1					DGT		
		1							
26	6033 879	2	1, 2, 3			EL0	DGT		NUT, Inverted Flare, .62-18
		2	6, 7, 8			EL0	DGT		
		2	1, 2, 3			EM0	DGT		
		2	6, 7, 8			EM0	DGT		
27	6501 701	1	1, 2, 3			EL0	DGT		O RING, Trans Speed Sensor
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
28	4412 879	1	1, 2, 3			EL0	DGT		SENSOR, Transmission Output Speed
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

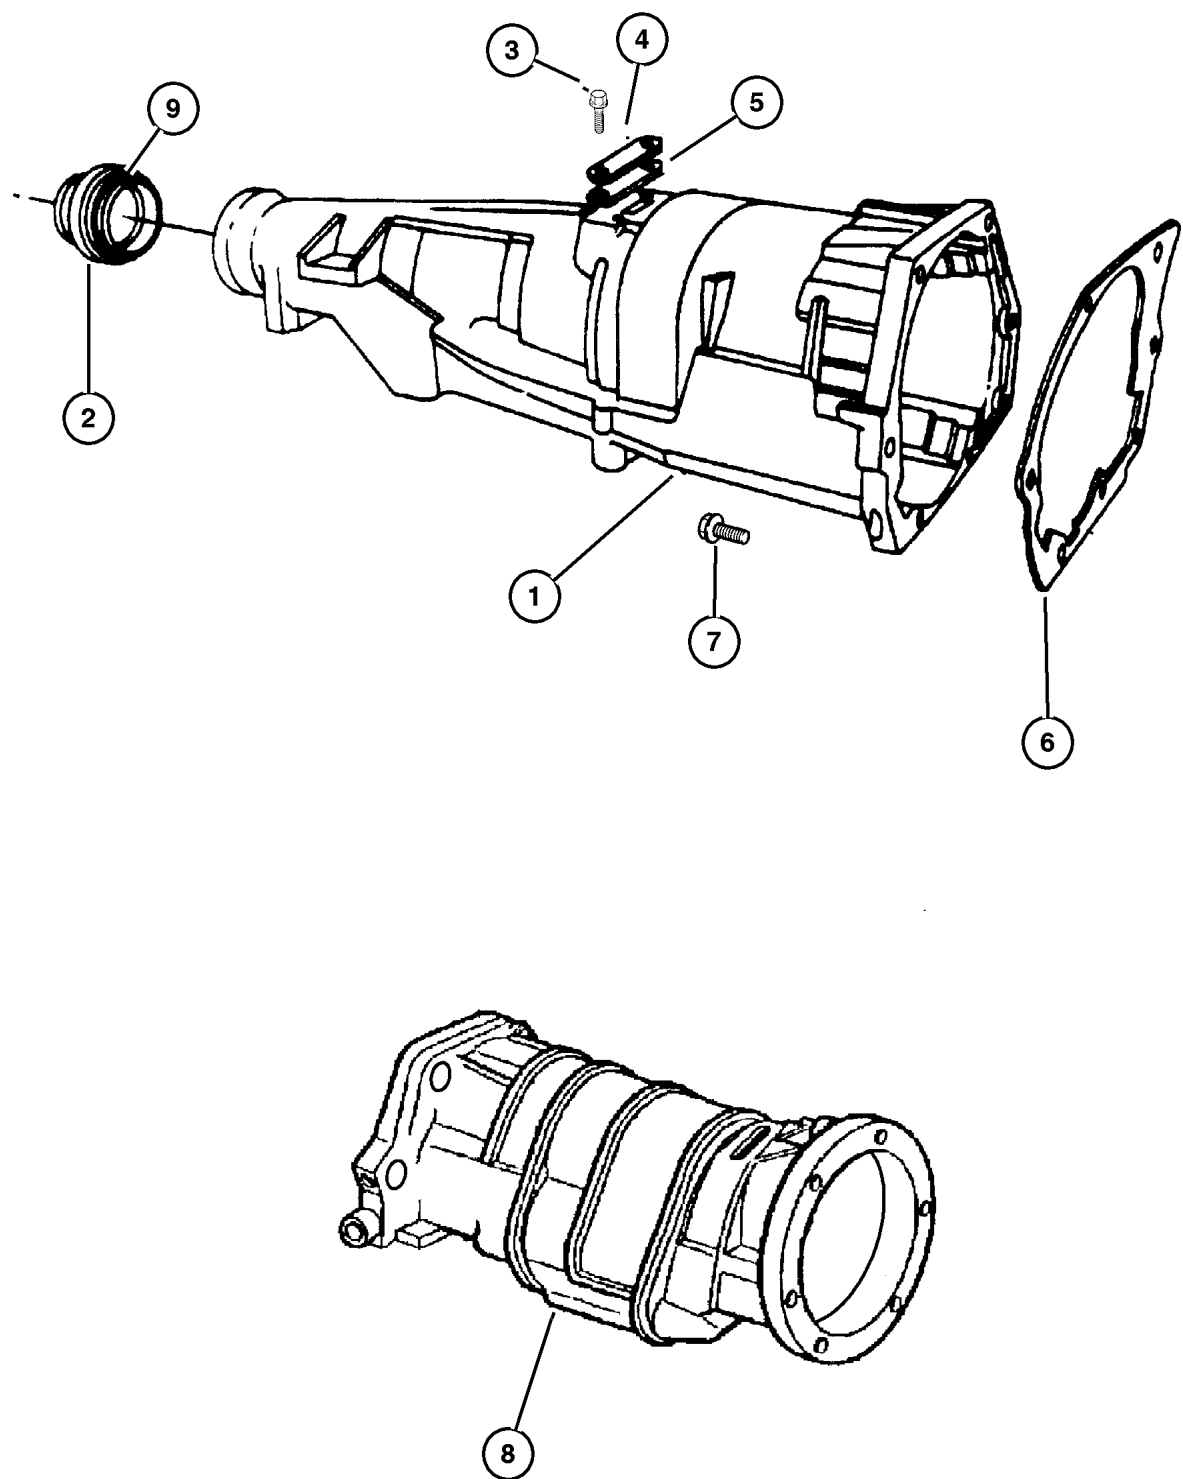Extension - 46RE [DGT]
Figure 46RE-220




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes									
[DGT] = 4 Speed Automatic Transmission 46RE									
[EL0] = All 5.2L 8 Cylinder Gas Engines									
[EM0] = All 5.9L 8 Cylinder Gas Engines									
1									CASE, Transmission Rear
	5003 231AA	1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
2									SEAL, Extension Yoke
	4531 216	1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
3									SCREW, (NOT SERVICED) (Not Serviced)
4									COVER, Transmission Converter
	2466 957	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
5									GASKET, Transmission
	2801 398	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
6									GASKET, Overdrive Piston Retainer
	4471 565	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
7									SCREW, Hex Flange Head, .375-16x1.38
	6036 046AA	7	6, 7, 8			EL0	DGT		
		7	1, 2, 3			EM0	DGT		
8									ADAPTER, Transfer Case
	4798 535	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
9									SEAL, Adapter
	4269 956	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

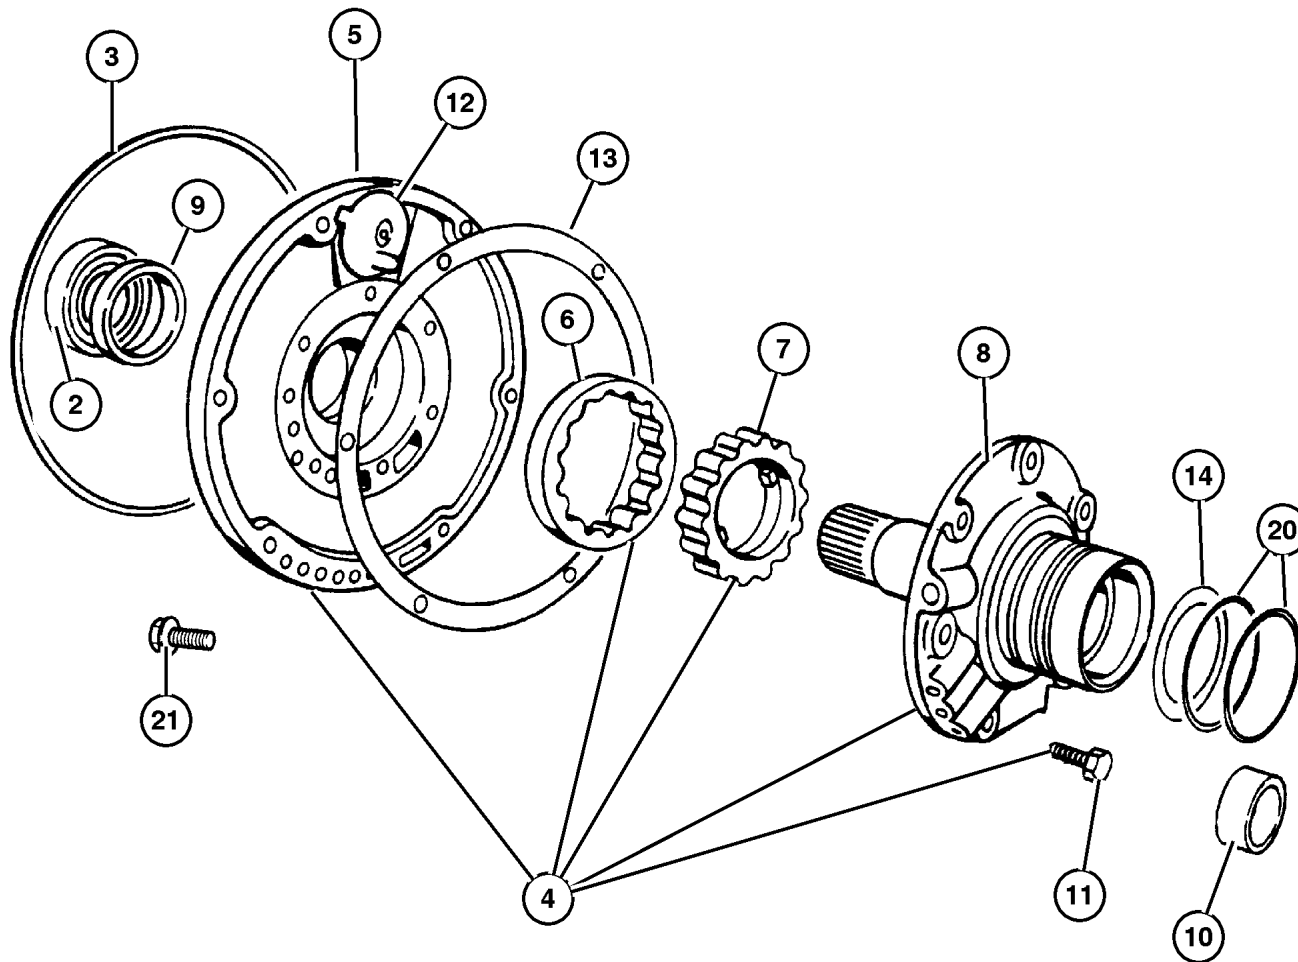**Pump, Oil with Reaction Shaft - 46RE [DGT]
Figure 46RE-310**



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes									
[DGT] = 4 Speed Automatic Transmission 46RE									
[EL0] = All 5.2L 8 Cylinder Gas Engines									
[EM0] = All 5.9L 8 Cylinder Gas Engines									
-1									GASKET AND SEAL PACKAGE, Transmission Oil Pump
	4746 109AB-	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
2	4531 225	1	1, 2, 3			EL0	DGT		SEAL, Impeller Hub, 57.25mm OD
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
3	1942 021	1	1, 2, 3			EL0	DGT		SEAL, Front Pump Housing
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
4	4796 467AB	1	1, 2, 3			EL0	DGT		PUMP PACKAGE, Transmission
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
5									HOUSING, Pump, (NOT SERVICED) (Not Serviced)
6									ROTOR, Oil Pump, (NOT SERVICED) (Not Serviced)
7									ROTOR, Oil Pump, (NOT SERVICED) (Not Serviced)
8									SHAFT, Oil Pump, (NOT SERVICED) (Not Serviced)
9									BUSHING, (NOT SERVICED) (Not Serviced)
10									BUSHING, (NOT SERVICED) (Not Serviced)
11	0179 815	6	1, 2, 3			EL0	DGT		SCREW, Hex Head, .312-18x.687
		6	6, 7, 8			EL0	DGT		


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM, EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

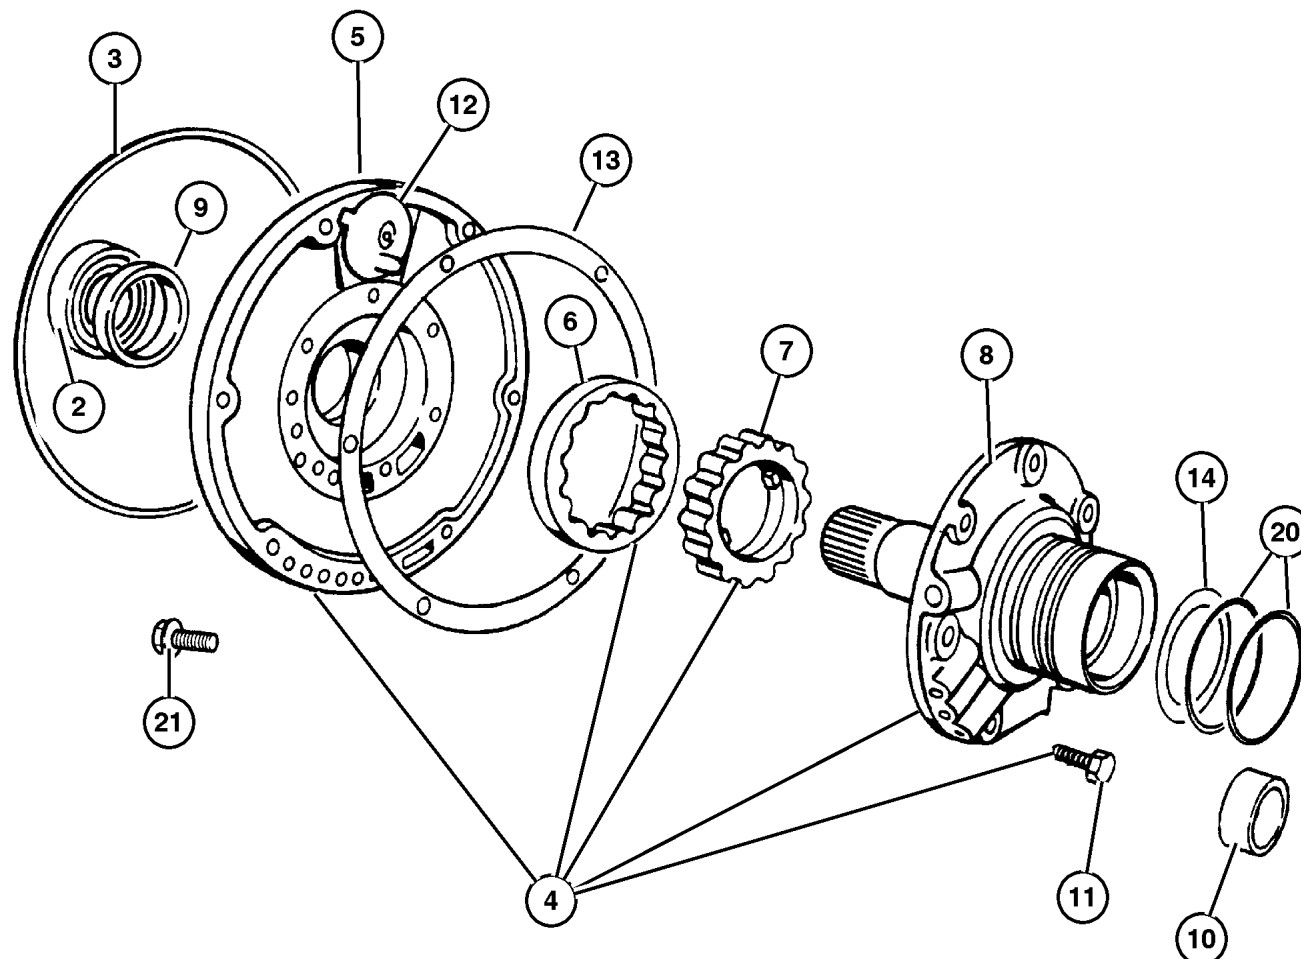Pump, Oil with Reaction Shaft - 46RE [DGT]
Figure 46RE-310



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
12	3420 087	6	1, 2, 3			EM0	DGT		BAFFLE PACKAGE, Pump
		6	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
13	4028 377	1	1, 2, 3			EM0	DGT		GASKET, Transmission Oil Pump
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
14	4617 161	1	1, 2, 3			EL0	DGT		THRUST WASHER, Front Clutch
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
-15	4617 162	1	1, 2, 3			EL0	DGT		THRUST WASHER, Front Clutch, Pink .085
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
-16	4617 163	1	1, 2, 3			EL0	DGT		THRUST WASHER, Front Clutch, Yellow .103
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
-17	4617 164	1	1, 2, 3			EL0	DGT		THRUST WASHER, Front Clutch, Orange .121
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
-18	4617 165	1	1, 2, 3			EL0	DGT		THRUST WASHER, Front Clutch, Blue .139"
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM, EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005


Pump, Oil with Reaction Shaft - 46RE [DGT]
Figure 46RE-310

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-19	4617 166	1	6, 7, 8			EM0	DGT		THRUST WASHER, Front Clutch, Black .157
		1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
20	3743 689	1	6, 7, 8			EM0	DGT		SEAL, Reaction Shaft
		2	1, 2, 3			EL0	DGT		
		2	6, 7, 8			EL0	DGT		
		2	1, 2, 3			EM0	DGT		
21	6023 943	2	6, 7, 8			EM0	DGT		SCREW AND WASHER, Hex Flange Head, .312-18x1.375
		7	1, 2, 3			EL0	DGT		
		7	6, 7, 8			EL0	DGT		
		7	1, 2, 3			EM0	DGT		
		7	6, 7, 8			EM0	DGT		


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

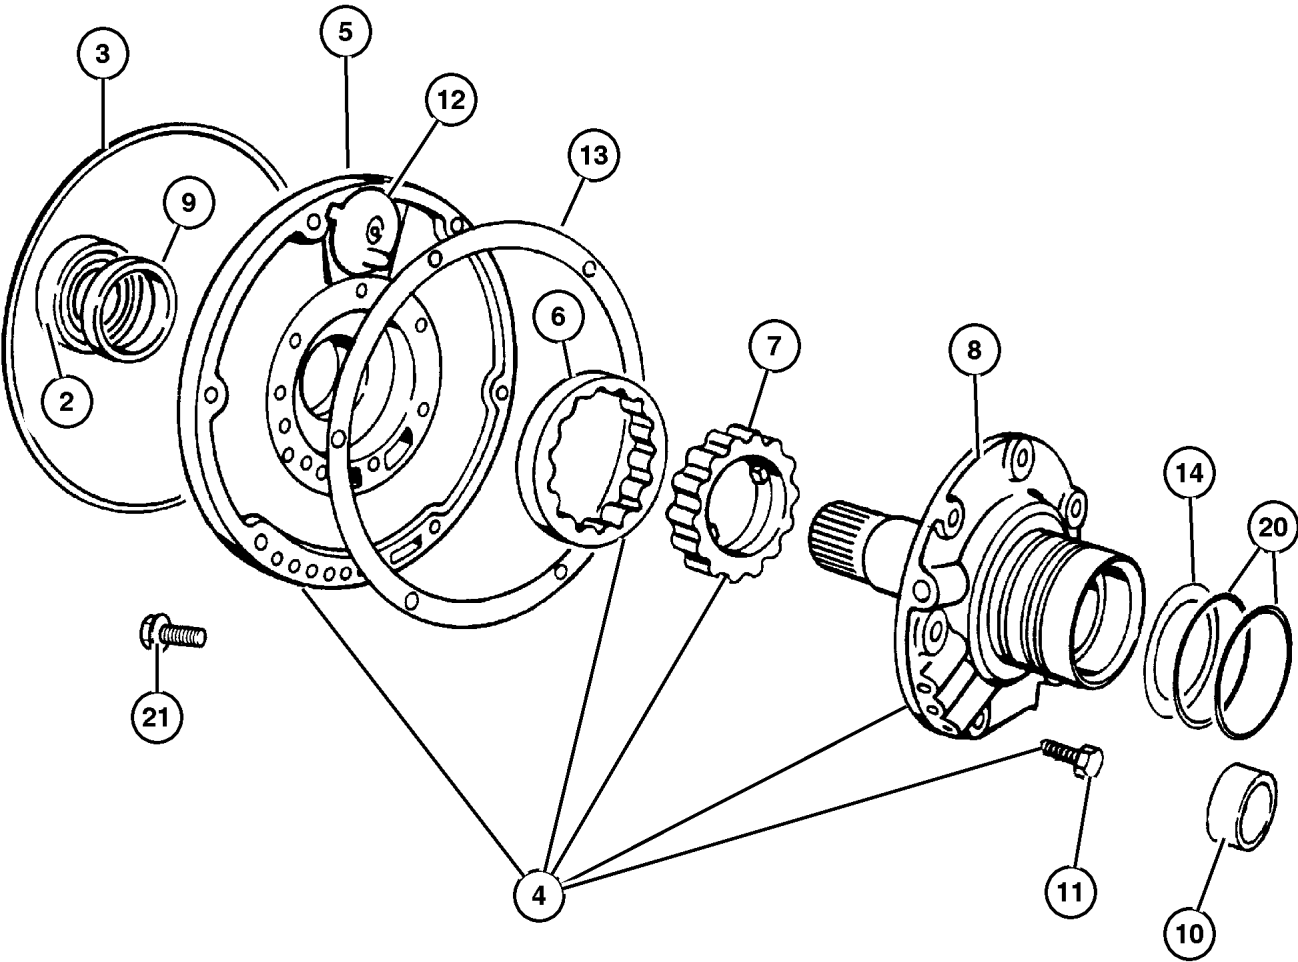September 16, 2005



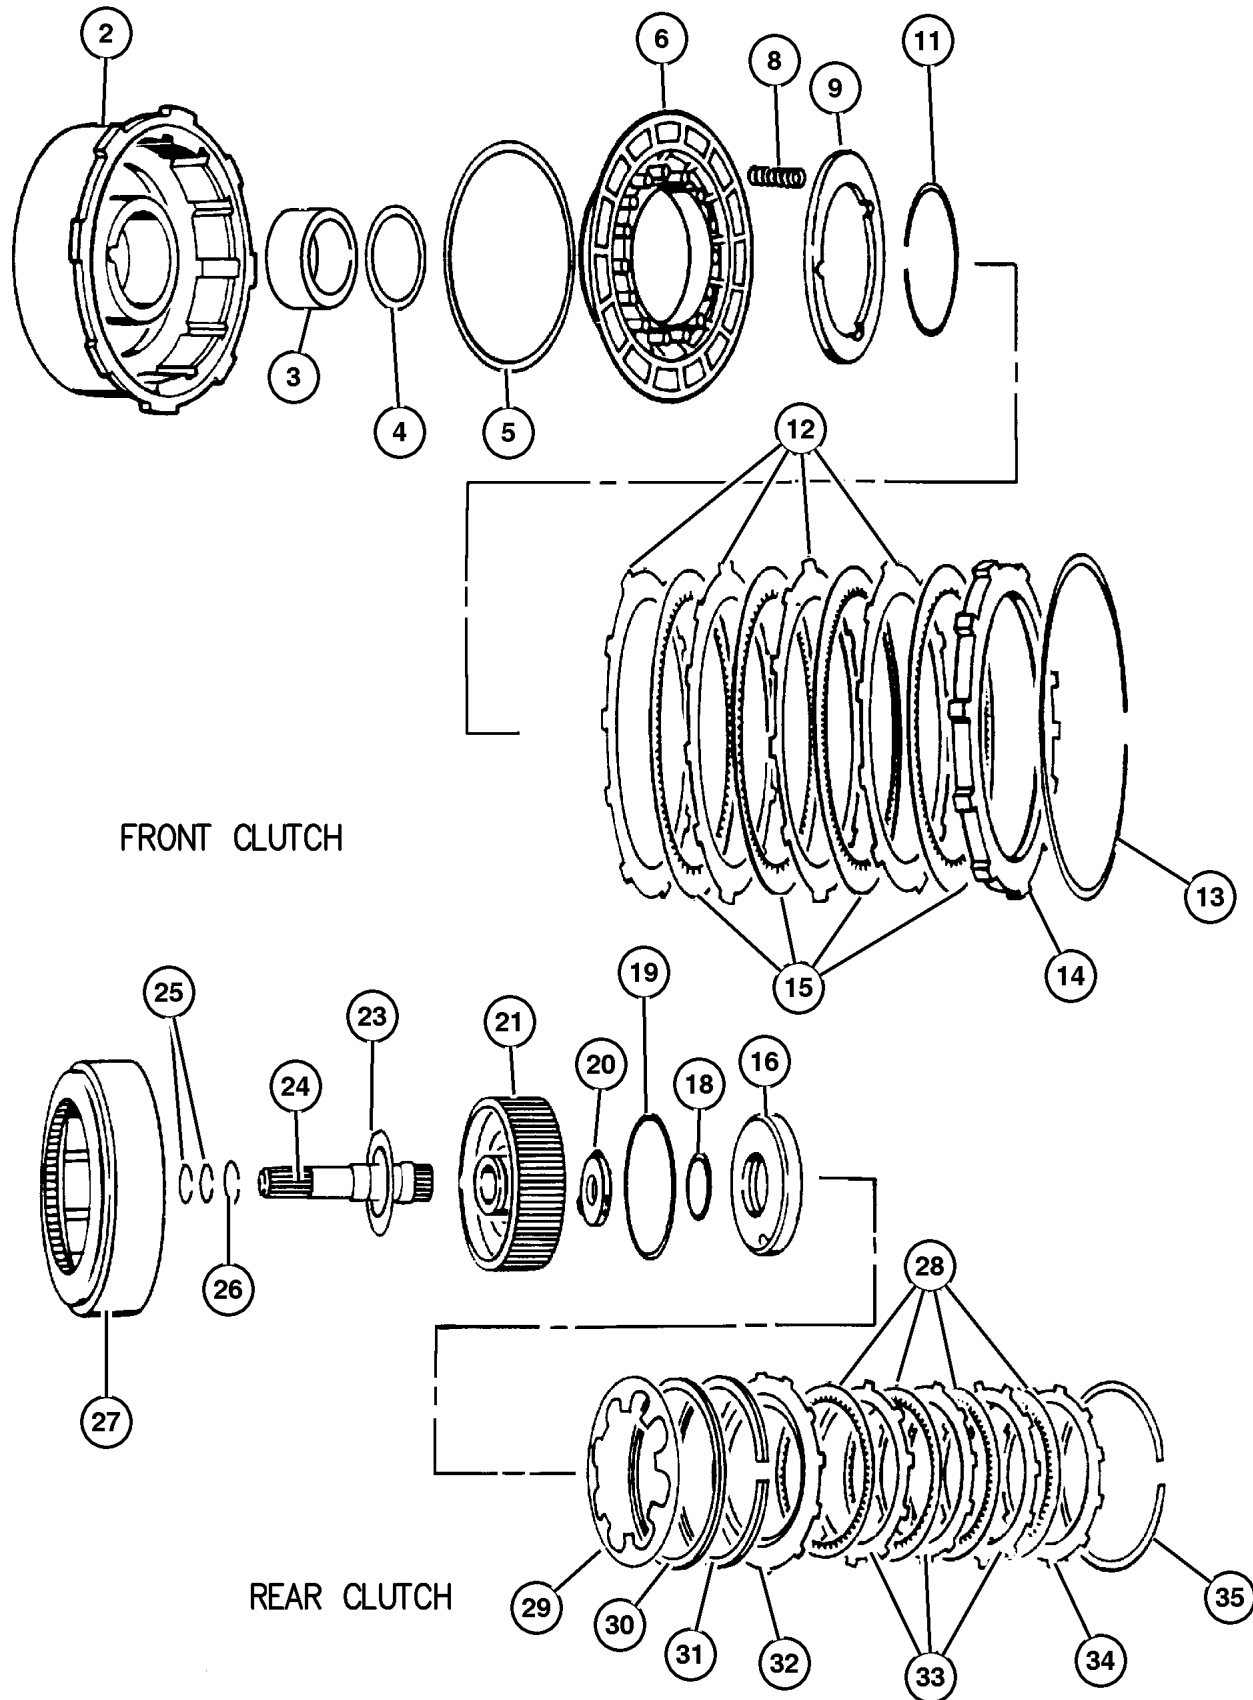Clutch, Front and Rear with Gear Train - 46RE [DGT] Figure 46RE-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes									
[DGT] = 4 Speed Automatic Transmission 46RE									
[EL0] = All 5.2L 8 Cylinder Gas Engines									
[EM0] = All 5.9L 8 Cylinder Gas Engines									
-1									SEAL PACKAGE, Transmission Clutch
	4637 078	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
2		1	6, 7, 8			EM0	DGT		
	4058 437AB	1	1, 2, 3			EL0	DGT		RETAINER, Clutch
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
3		1	1, 2, 3			EL0	DGT		BUSHING, Front Clutch
	4058 647	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
4		1	1, 2, 3			EL0	DGT		SEAL, Front Clutch Piston
	3410 226	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
5		1	1, 2, 3			EL0	DGT		SEAL, Front Piston Clutch
	4058 484	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
6		1	1, 2, 3			EL0	DGT		PISTON, Clutch
	2464 651AB	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
-7		1	1, 2, 3			EL0	DGT		CHECK BALL, Dia-.187
	0147 483	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
8									SPRING, Front Clutch

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

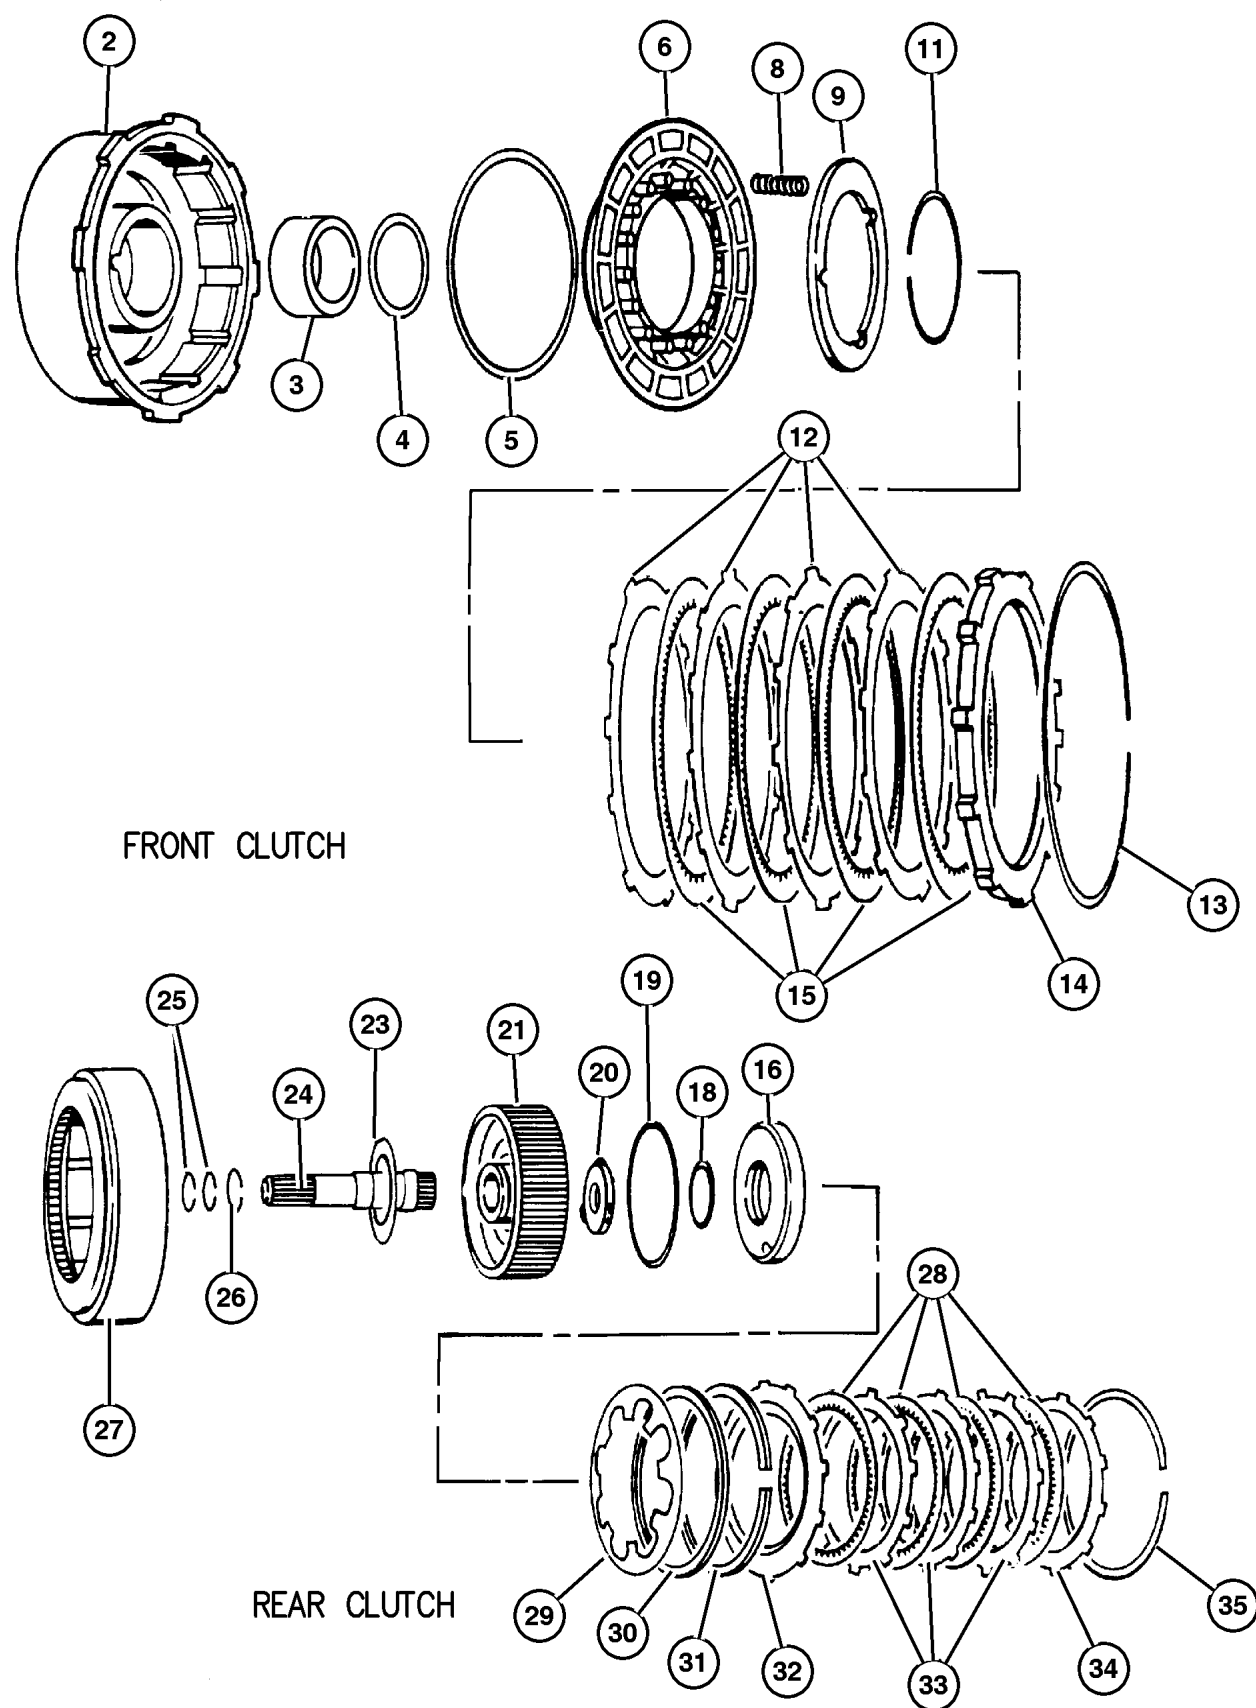
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Clutch, Front and Rear with Gear Train - 46RE [DGT] Figure 46RE-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	2801 243	9	1, 2, 3			EL0	DGT		
		9	6, 7, 8			EL0	DGT		
	4617 205	9	1, 2, 3			EM0	DGT		
		9	6, 7, 8			EM0	DGT		
9									RETAINER, Transmission
	2801 949	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
-10									CHECK BALL, Dia-.187
	0147 483	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
11									SNAP RING
	2124 824	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
12									PLATE, Clutch Separator
	2124 826AB	3	1, 2, 3			EL0	DGT		
		3	6, 7, 8			EL0	DGT		
		3	1, 2, 3			EM0	DGT		
		3	6, 7, 8			EM0	DGT		
13									SNAP RING
	3410 570	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
14									PLATE, Transmission Clutch Reaction
	4617 567	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
15									DISC, Direct Clutch
	4617 201AB	3	1, 2, 3			EL0	DGT		
		3	6, 7, 8			EL0	DGT		
		3	1, 2, 3			EM0	DGT		
		3	6, 7, 8			EM0	DGT		
16									PISTON, Clutch

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

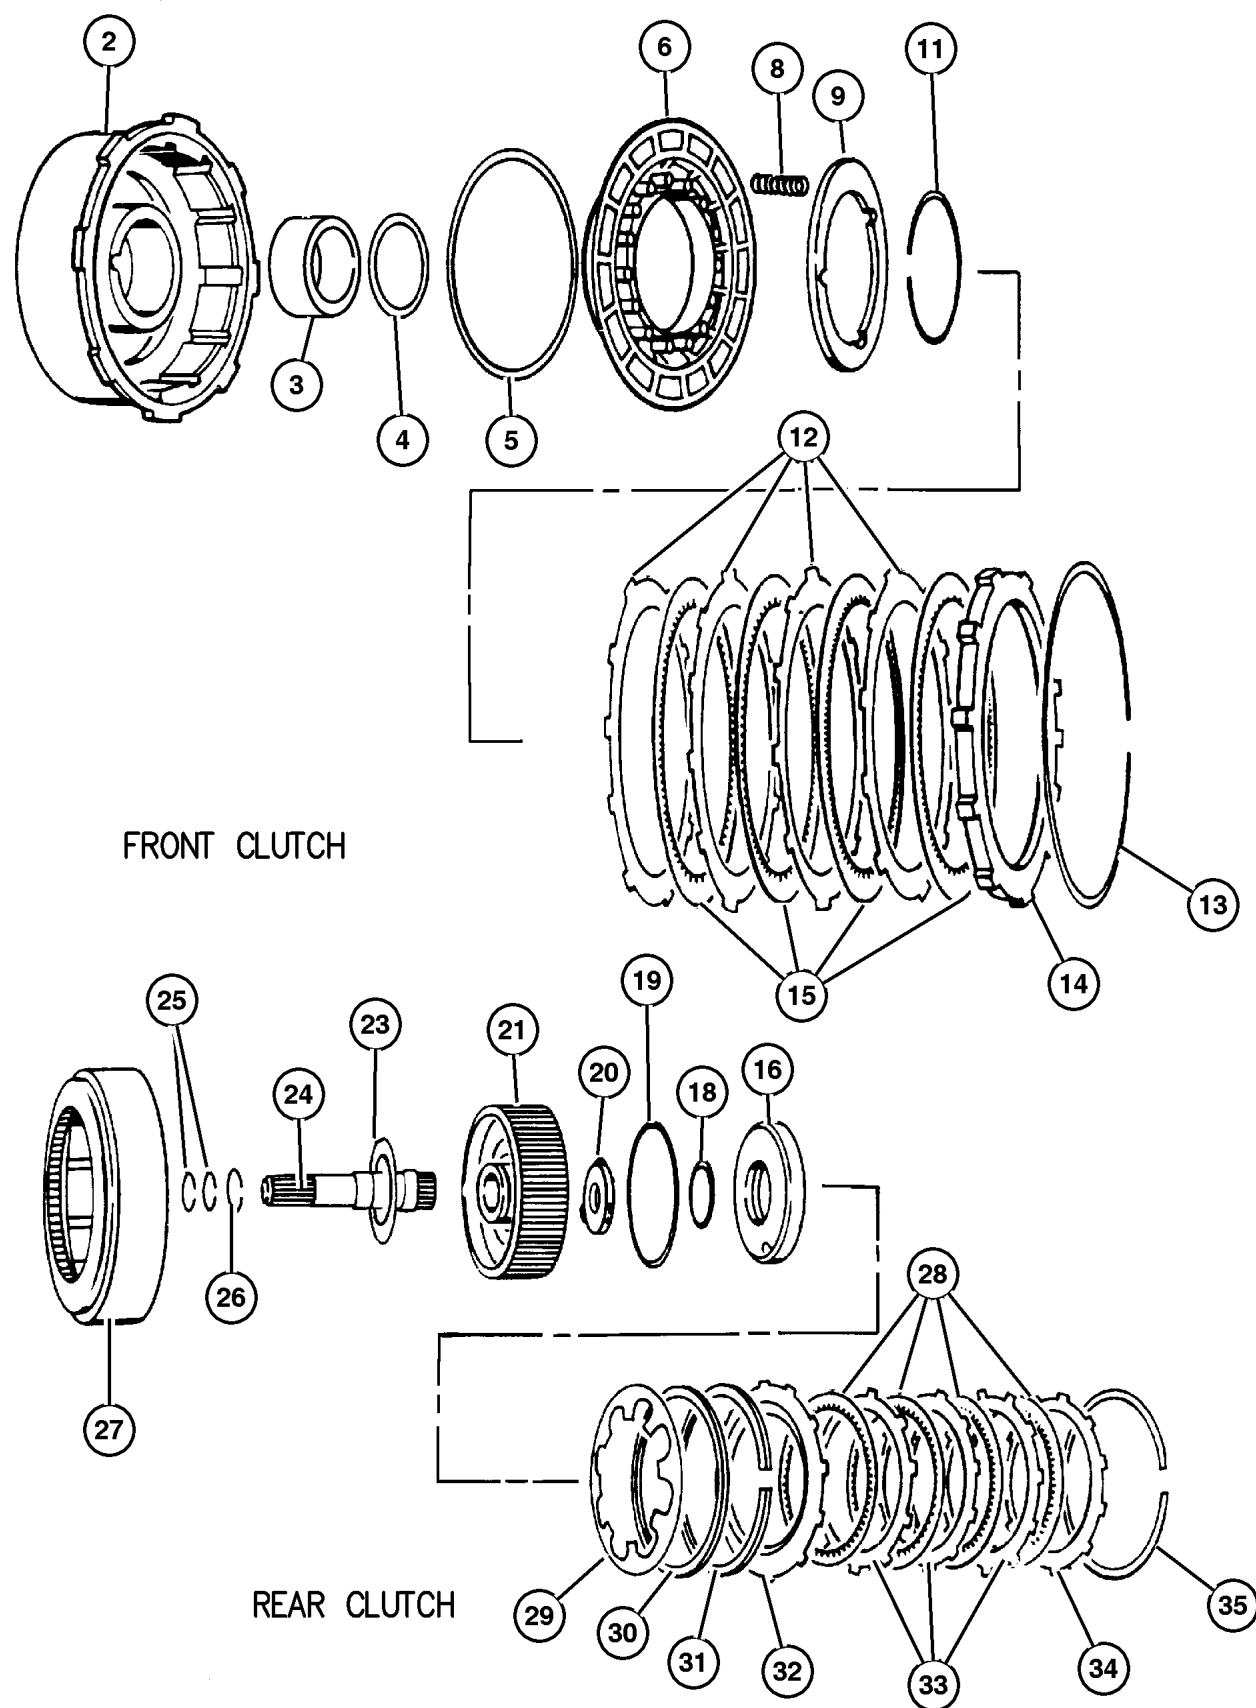
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Clutch, Front and Rear with Gear Train - 46RE [DGT] Figure 46RE-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	3743 624AB	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
-17									CHECK BALL, Dia-.187
	0147 483	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
18									SEAL, Rear Clutch Piston
	1942 054	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
19									SEAL, Rear Clutch Piston
	2124 835	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
20									THRUST WASHER, Output Shaft, Red .068
	4505 186	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
21									RETAINER, Transmission
	4617 855	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
-22									SEAL, Rear Clutch Retainer
	4058 443	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
23									THRUST WASHER, Front Clutch
	4617 161	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
24									INPUT SHAFT, Transmission

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE

1, 6 = 1500

2, 7 = 2500

3, 8 = 3500

BODY

31 = Club Cab (138WB)

33 = QuadCab(138WB)

34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.

ETC, ET0, ETH = 5.9L 6 Cil.

EML, EMM,EM0 = 5.9L 8 Cil.

EWA, EW0 = 8.0L 10 Cyl.

EAA = All Engines

EAG = All Gas Engines

TRANSMISSION

DGP = 47RE 4 Speed Auto.

DGT, DG0 = 46RE 4 Speed Auto.

DDX, DDC = 5 Speed HD Manual

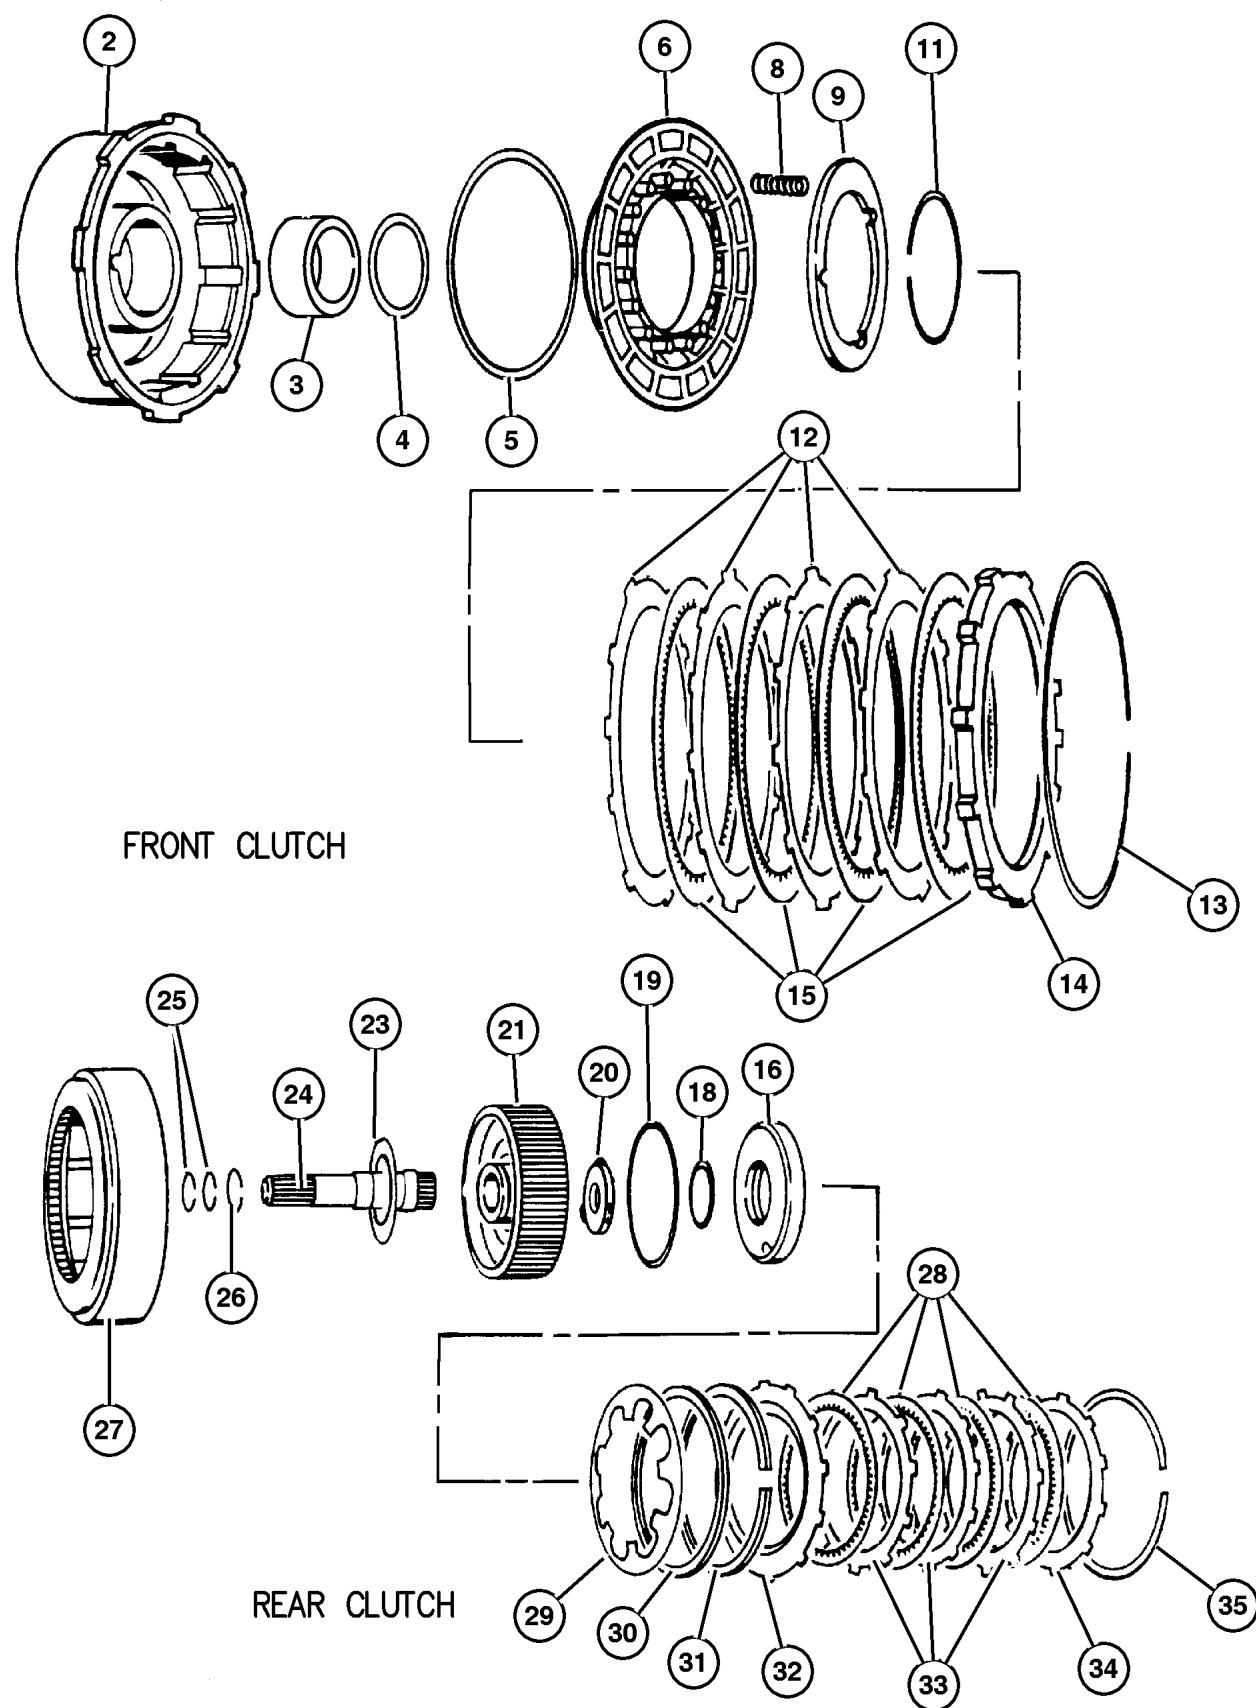
DDP, DD0 = 5 Speed Manual

DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Clutch, Front and Rear with Gear Train - 46RE [DGT] Figure 46RE-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4617 396	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
25									SEAL, Input Shaft
	4617 418AB	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
26									SNAP RING
	2124 872	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
27									RETAINER, Rear Clutch
	3743 622	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
28									DISC, Clutch
	2801 992AB	4	1, 2, 3			EL0	DGT		
		4	6, 7, 8			EL0	DGT		
		4	1, 2, 3			EM0	DGT		
		4	6, 7, 8			EM0	DGT		
29									SPRING, Rear Clutch Piston
	3743 621AB	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
30									SPACER, Rear Clutch Piston
	3515 077	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
31									SPRING, Rear Clutch
	2466 806	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
32									PLATE, Clutch Pressure

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE

1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

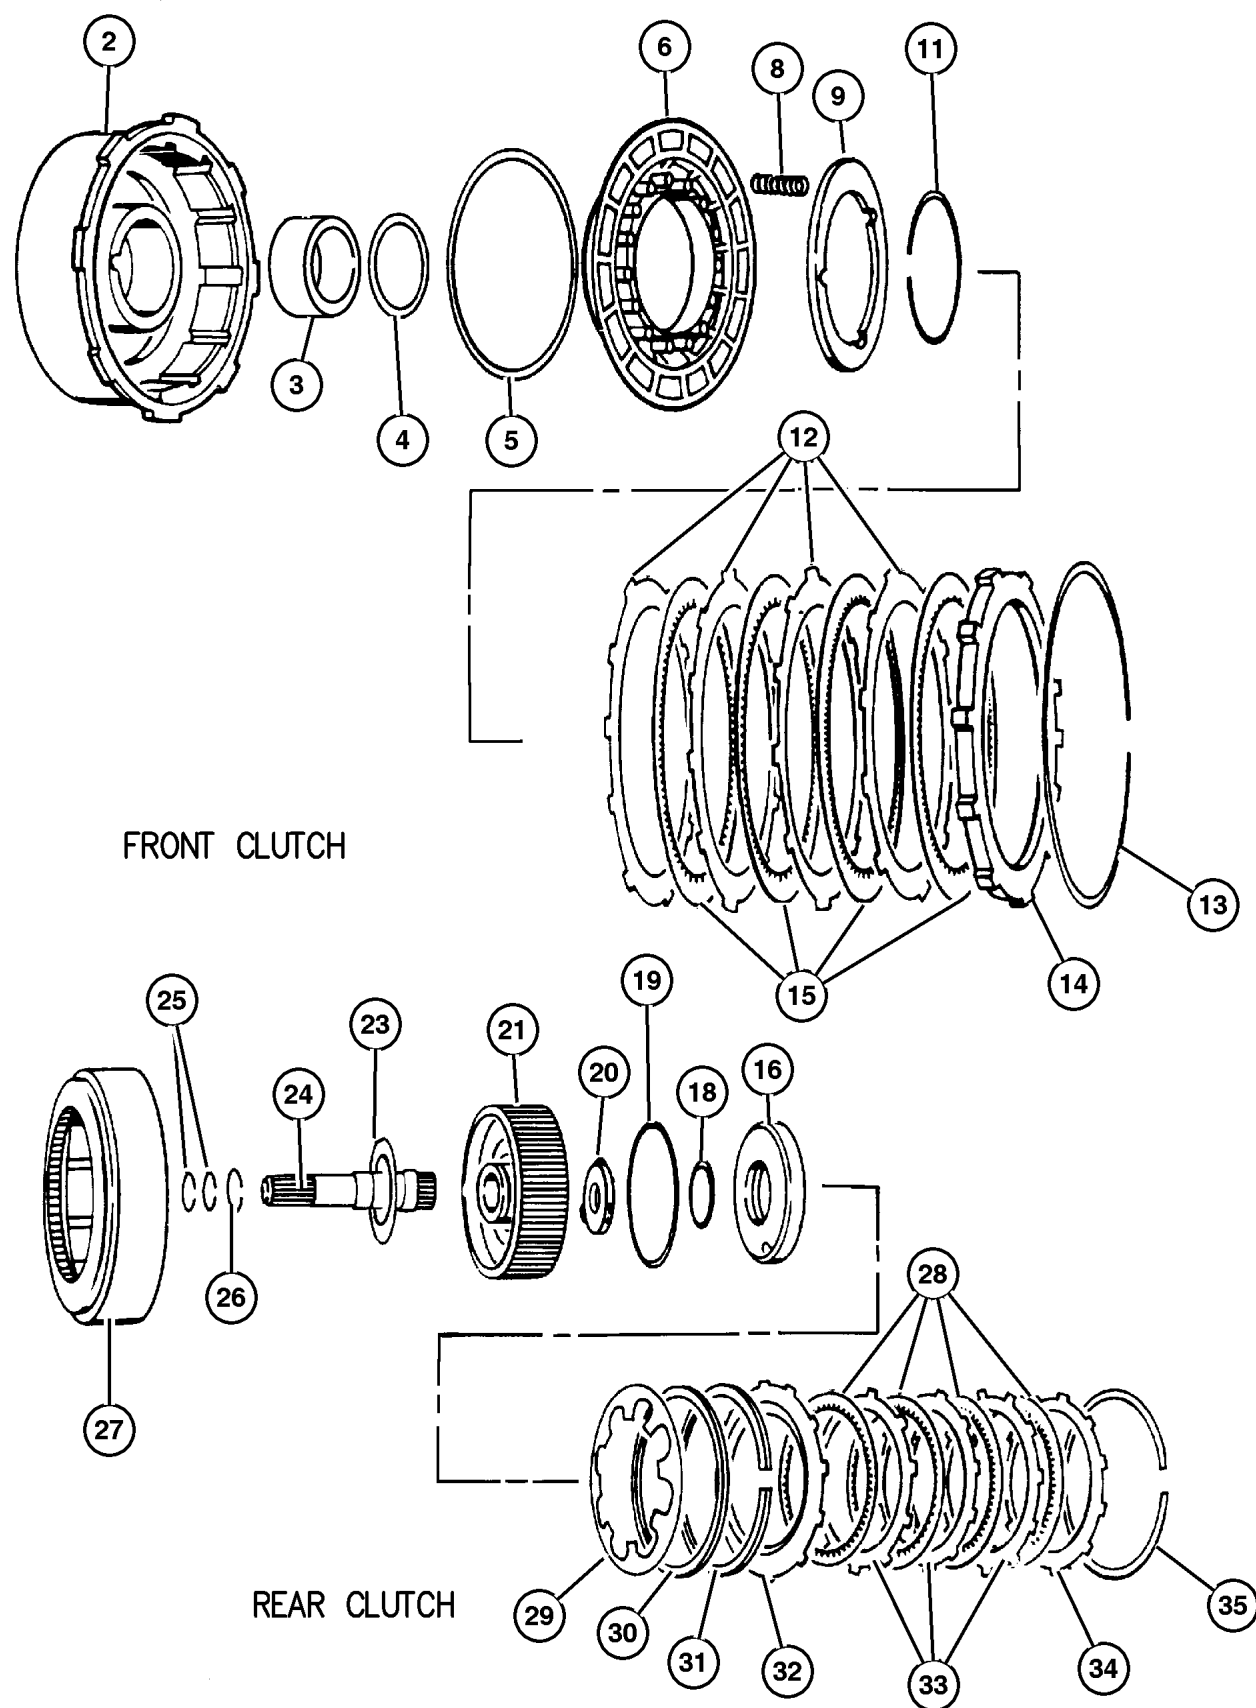
TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Clutch, Front and Rear with Gear Train - 46RE [DGT] Figure 46RE-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	2466 803	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
33									PLATE, Clutch Separator
	52118 812AA	3	1, 2, 3			EL0	DGT		
		3	6, 7, 8			EL0	DGT		
		3	1, 2, 3			EM0	DGT		
		3	6, 7, 8			EM0	DGT		
34									PLATE, Transmission Clutch Reaction
	4617 567	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
35									SNAP RING
	1942 063	1	1, 2, 3			EL0	DGT		.060" Thick
		1	1, 2, 3			EM0	DGT		.060" Thick
		1	6, 7, 8			EL0	DGT		.060" Thick
		1	6, 7, 8			EM0	DGT		.060" Thick
	1942 064	1	1, 2, 3			EL0	DGT		.074" Thick
		1	1, 2, 3			EM0	DGT		.074" Thick
		1	6, 7, 8			EL0	DGT		.074" Thick
		1	6, 7, 8			EM0	DGT		.074" Thick
	1942 065	1	1, 2, 3			EL0	DGT		.088" Thick
		1	1, 2, 3			EM0	DGT		.088" Thick
		1	6, 7, 8			EL0	DGT		.088" Thick
		1	6, 7, 8			EM0	DGT		.088" Thick
	2466 811	1	1, 2, 3			EL0	DGT		.106" Thick
		1	1, 2, 3			EM0	DGT		.106" Thick
		1	6, 7, 8			EL0	DGT		.106" Thick
		1	6, 7, 8			EM0	DGT		.106" Thick

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Gear Train and Intermediate Shaft - 46RE [DGT]
Figure 46RE-420

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: Sales Codes

[DGT] = 4 Speed Automatic Transmission 46RE

[EL0] = All 5.2L 8 Cylinder Gas Engines

[EM0] = All 5.9L 8 Cylinder Gas Engines

1									SNAP RING, 1.108 Free Diameter
	6024 312	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
2									CARRIER, Planetary Pinion
	4617 612	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
	5211 8693	1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
3									THRUST WASHER, Planetary Carrier
	2801 060	1	1, 2, 3			EL0	DGT		4 Tabs
		1	6, 7, 8			EL0	DGT		4 Tabs
		1	1, 2, 3			EM0	DGT		4 Tabs
		1	6, 7, 8			EM0	DGT		4 Tabs
4									GEAR, Front Annulus
	2892 656	1	1, 2, 3			EL0	DGT		w/Support 2 1/2" I.D. Center Hole
		1	6, 7, 8			EL0	DGT		w/Support 2 1/2" I.D. Center Hole
		1	1, 2, 3			EM0	DGT		w/Support 2 1/2" I.D. Center Hole
		1	6, 7, 8			EM0	DGT		w/Support 2 1/2" I.D. Center Hole
5									WASHER
	4618 000	1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
6									SNAP RING, Sun Gear
	1736 521	1	1, 2, 3			EL0	DGT		Driving Shell Lock
		1	6, 7, 8			EL0	DGT		Driving Shell Lock
		1	1, 2, 3			EM0	DGT		Driving Shell Lock
		1	6, 7, 8			EM0	DGT		Driving Shell Lock
7									GEAR, Sun
	2801 311	1	1, 2, 3			EL0	DGT		w/Bushing
		1	6, 7, 8			EL0	DGT		w/Bushing
		1	1, 2, 3			EM0	DGT		w/Bushing
		1	6, 7, 8			EM0	DGT		w/Bushing
8									SHELL, Sun Gear

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Gear Train and Intermediate Shaft - 46RE [DGT]
Figure 46RE-420

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4617 978	1	1, 2, 3			EL0	DGT		Driving
		1	6, 7, 8			EL0	DGT		Driving
		1	1, 2, 3			EM0	DGT		Driving
		1	6, 7, 8			EM0	DGT		Driving
9									INTERMEDIATE SHAFT,
									Transmission
	4617 611	1	1, 2, 3			EL0	DGT		w/Plug
		1	6, 7, 8			EL0	DGT		w/Plug
		1	1, 2, 3			EM0	DGT		w/Plug
		1	6, 7, 8			EM0	DGT		w/Plug
10									PLATE, Transmission Module
	4505 188	1	1, 2, 3			EL0	DGT		.060' Thick
		1	6, 7, 8			EL0	DGT		.060' Thick
		1	1, 2, 3			EM0	DGT		.060' Thick
		1	6, 7, 8			EM0	DGT		.060' Thick
11									PLATE, Sun Gear Driving Shell
	1942 080	1	1, 2, 3			EL0	DGT		w/4 Inside Thongs
		1	6, 7, 8			EL0	DGT		w/4 Inside Thongs
		1	1, 2, 3			EM0	DGT		w/4 Inside Thongs
		1	6, 7, 8			EM0	DGT		w/4 Inside Thongs
12									SNAP RING, Sun Gear
	1736 521	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
13									THRUST WASHER, Planetary Carrier
	2801 060	1	1, 2, 3			EL0	DGT		Rear, w/4Tabs , 3 13/32' O.D.
		1	6, 7, 8			EL0	DGT		Rear, w/4Tabs , 3 13/32' O.D.
		1	1, 2, 3			EM0	DGT		Rear, w/4Tabs , 3 13/32' O.D.
		1	6, 7, 8			EM0	DGT		Rear, w/4Tabs , 3 13/32' O.D.
14									CARRIER, Planetary Pinion
	2801 061	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
15									PLATE, Annulus Gear Thrust
	2400 580	1	1, 2, 3			EL0	DGT		w/31 Inside Teeth, 3 23/64' O.D.
		1	6, 7, 8			EL0	DGT		w/31 Inside Teeth, 3 23/64' O.D.
		1	1, 2, 3			EM0	DGT		w/31 Inside Teeth, 3 23/64' O.D.

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

Gear Train and Intermediate Shaft - 46RE [DGT] Figure 46RE-420

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
16	4810 002AB	1	6, 7, 8			EM0	DGT		w/31 Inside Teeth, 3 23/64" O.D. GEAR, Rear Annulus
		1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
17	6033 591	1	6, 7, 8			EM0	DGT		SNAP RING Reverse Drum
		1	1, 2, 3			EL0	DGT		Reverse Drum
		1	6, 7, 8			EM0	DGT		Reverse Drum
		1	6, 7, 8			EM0	DGT		Reverse Drum
18	6024 666	4	1, 2, 3			EL0	DGT		DOWEL, .108x1.00 Front and Rear, Planet Pinion
		4	6, 7, 8			EL0	DGT		Shaft Front and Rear, Planet Pinion
		4	1, 2, 3			EM0	DGT		Shaft Rear, Planet Pinion
		5	1, 2, 3			EM0	DGT		Front, Planet Pinion shaft
19	4428 223	4	6, 7, 8			EM0	DGT		Rear, Planet Pinion Shaft
		5	1, 2, 3			EM0	DGT		Front, Planet Pinion shaft
		4	6, 7, 8			EM0	DGT		Rear, Planet Pinion Shaft
		5	6, 7, 8			EM0	DGT		Front, Planet Pinion shaft
20	2801 315	8	1, 2, 3			EL0	DGT		SHAFT, Planetary Rear
		8	6, 7, 8			EL0	DGT		Rear
		8	1, 2, 3			EL0	DGT		Rear
		8	6, 7, 8			EL0	DGT		Rear
21		8	1, 2, 3			EM0	DGT		Front
		8	1, 2, 3			EM0	DGT		Front
		4	1, 2, 3			EL0	DGT		Front
		4	6, 7, 8			EL0	DGT		Front
21		10	1, 2, 3			EM0	DGT		THRUST WASHER, Planetary Carrier
		10	6, 7, 8			EM0	DGT		Rear
		8	1, 2, 3			EL0	DGT		Rear
		8	6, 7, 8			EL0	DGT		Front
21		8	1, 2, 3			EM0	DGT		Rear
		8	6, 7, 8			EL0	DGT		Front
		8	6, 7, 8			EM0	DGT		Rear
		10	1, 2, 3			EM0	DGT		Front
21		10	6, 7, 8			EM0	DGT		Front
		10	6, 7, 8			EM0	DGT		THRUST WASHER, Planet Pinion

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

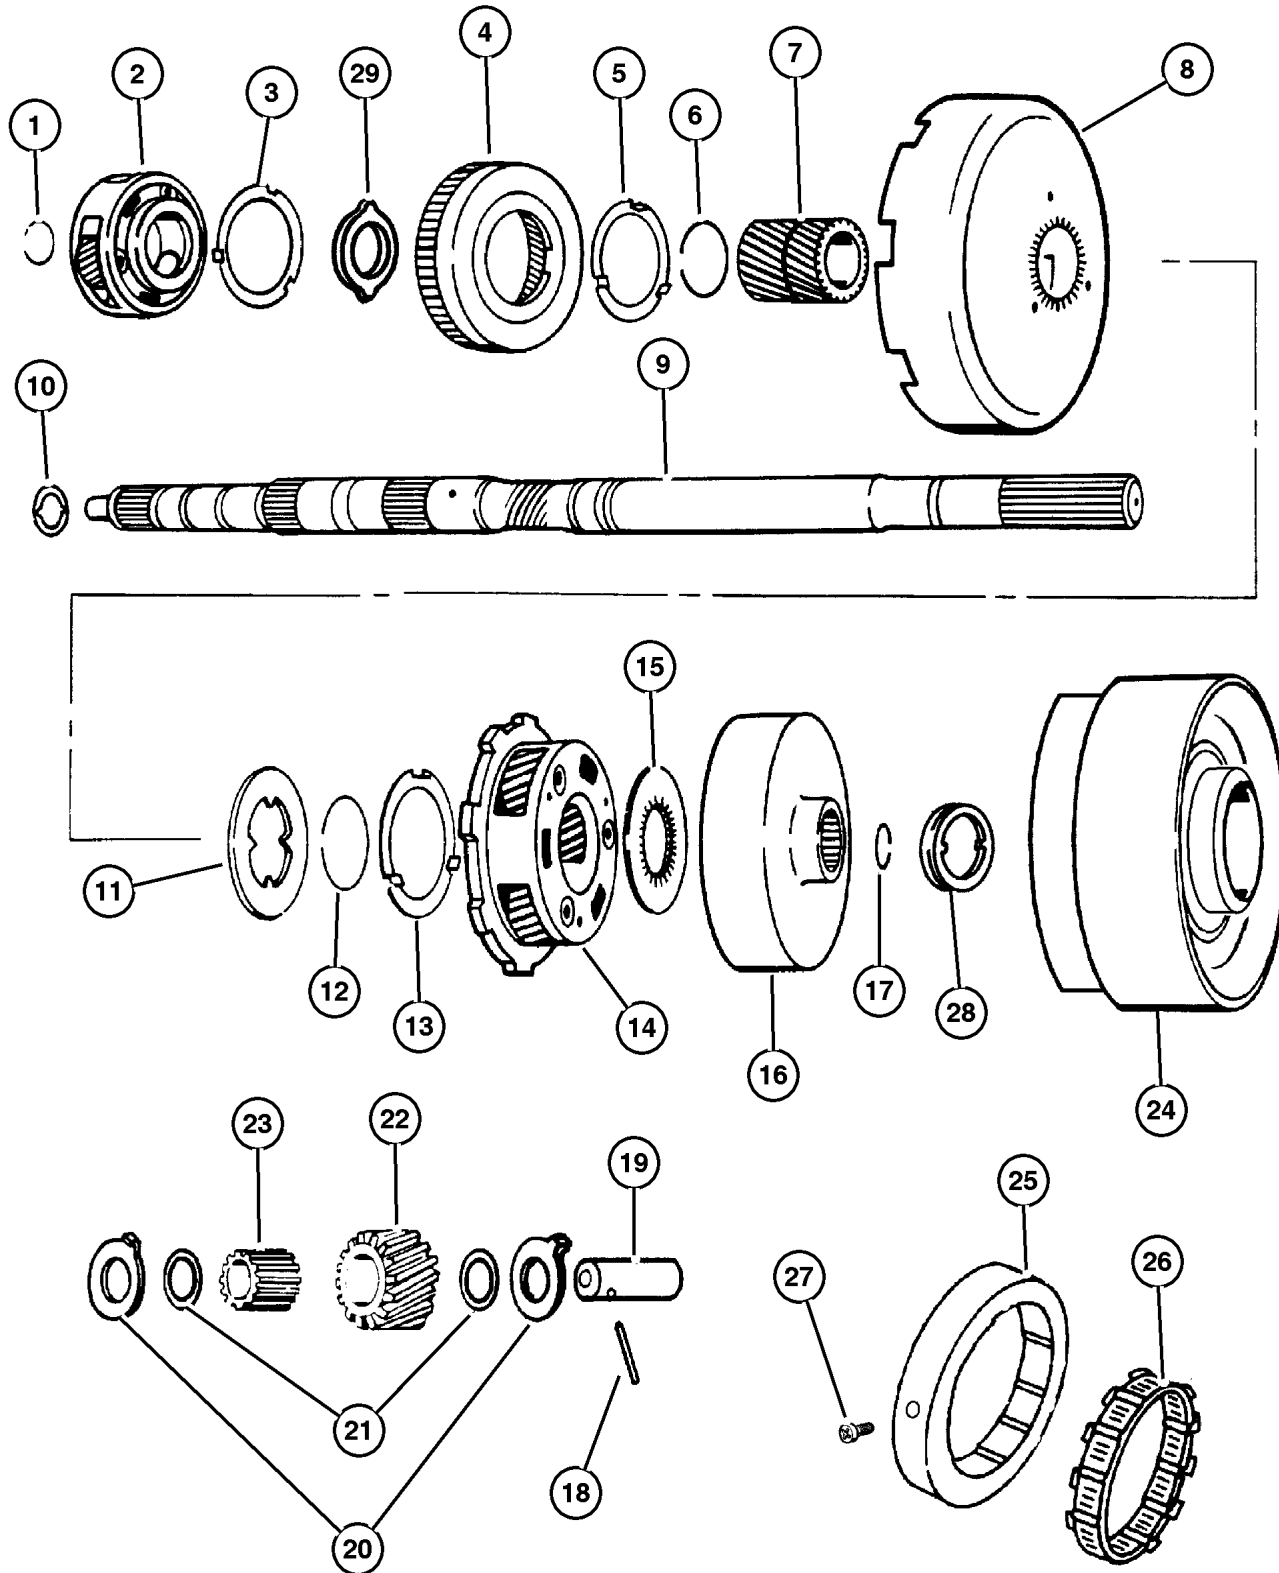
BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005



FRONT & REAR PLANET PINION CARRIER GEARS

Gear Train and Intermediate Shaft - 46RE [DGT] Figure 46RE-420

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	2204 649	8	1, 2, 3			EL0	DGT		Rear
		8	1, 2, 3			EM0	DGT		Rear
		8	6, 7, 8			EL0	DGT		Rear
		8	6, 7, 8			EM0	DGT		Rear
		8	1, 2, 3			EL0	DGT		Front
22	2400 667	8	6, 7, 8			EL0	DGT		Front
		10	1, 2, 3			EM0	DGT		Front
		10	6, 7, 8			EM0	DGT		Front
									PINION, Transmission Planetary
	2400 667	4	1, 2, 3			EL0	DGT		Rear
		4	1, 2, 3			EM0	DGT		Rear
		4	6, 7, 8			EL0	DGT		Rear
		4	6, 7, 8			EM0	DGT		Rear
		4	1, 2, 3			EL0	DGT		Front
	2400 667	4	6, 7, 8			EL0	DGT		Front
		5	1, 2, 3			EM0	DGT		Front
		5	6, 7, 8			EM0	DGT		Front
		5	1, 2, 3			EM0	DGT		Front
		5	6, 7, 8			EM0	DGT		Front
23									ROLLER, Front and Rear Pinion
	3743 664	92	1, 2, 3			EL0	DGT		Rear
		92	1, 2, 3			EM0	DGT		Rear
		92	6, 7, 8			EL0	DGT		Rear
	3743 664	92	6, 7, 8			EM0	DGT		Rear
		92	1, 2, 3			EL0	DGT		Front
		92	6, 7, 8			EL0	DGT		Front
		115	1, 2, 3			EM0	DGT		Front
		115	6, 7, 8			EM0	DGT		Front
24									DRUM, Automatic Transmission
	5211 8057	1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
	5211 8057	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
25									CAM, Overrunning Clutch
	4471 473	1	1, 2, 3			EL0	DGT		14 Cam Lobes
		1	1, 2, 3			EM0	DGT		14 Cam Lobes
		1	6, 7, 8			EL0	DGT		14 Cam Lobes
		1	6, 7, 8			EM0	DGT		14 Cam Lobes
26									CLUTCH, Overrunning
	4617 199	1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EL0	DGT		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE

1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

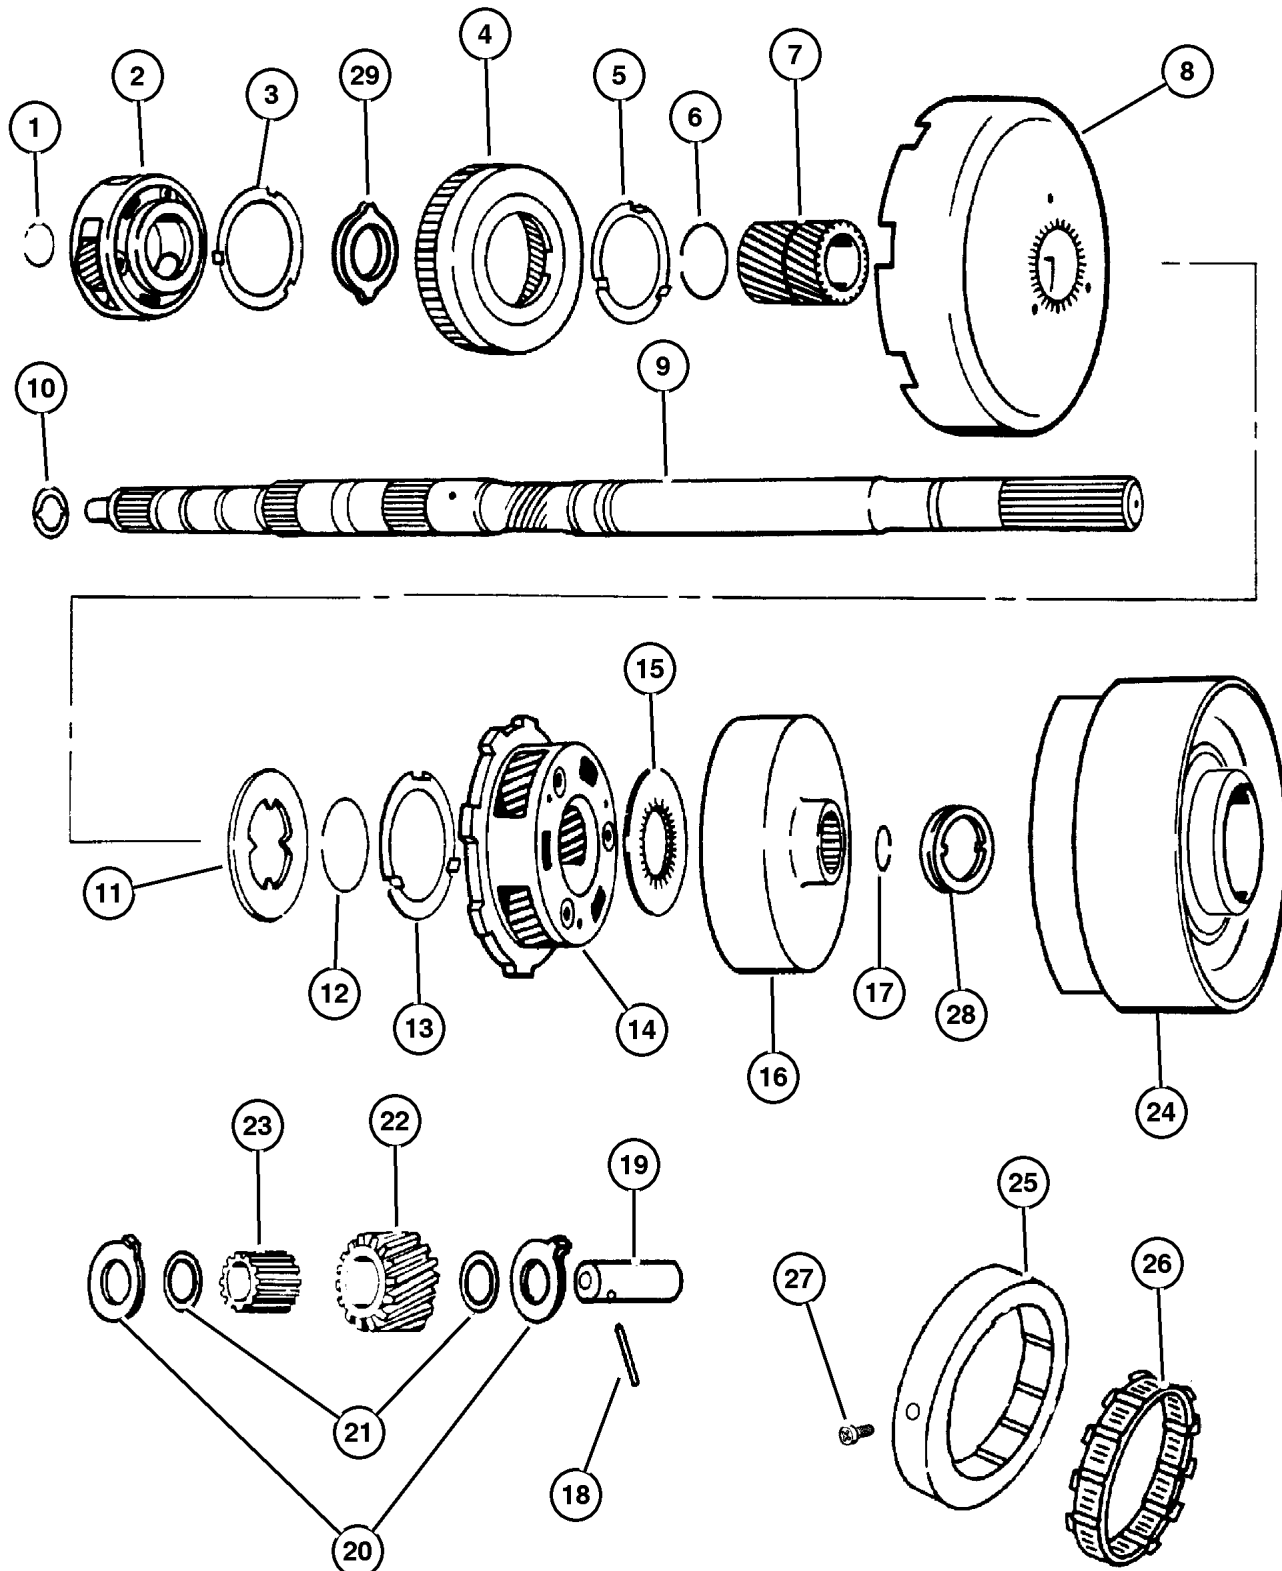
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005




FRONT & REAR PLANET PINION CARRIER GEARS

Gear Train and Intermediate Shaft - 46RE [DGT]
Figure 46RE-420

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	6, 7, 8			EM0	DGT		
27	6023 092	2					DGT		SCREW AND WASHER, Hex Head, .25-20x.50
28	5211 8059	1	1, 2, 3			EL0	DGT		THRUST WASHER, Reverse Drum
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
29									PLATE, Annulus Gear Thrust
	2400 580	1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

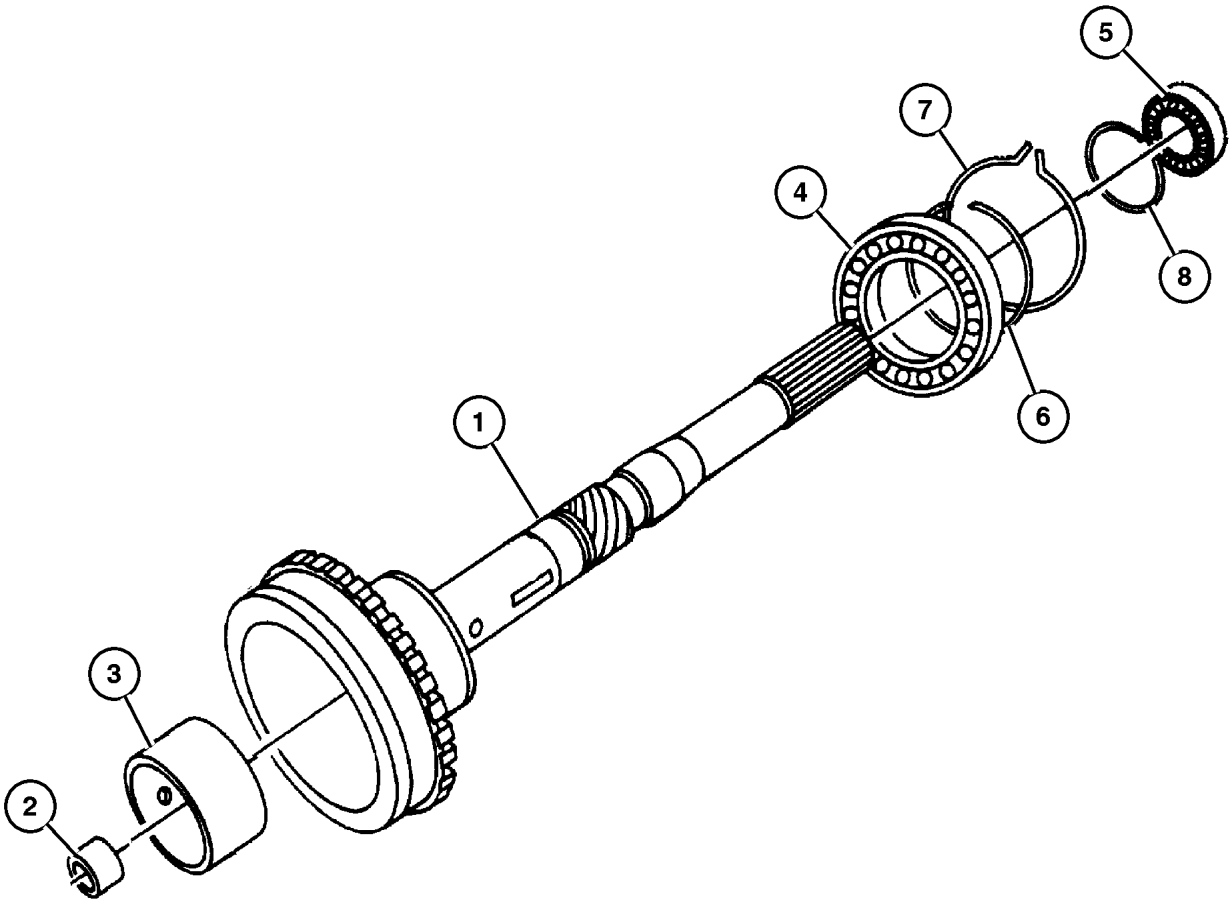Output Shaft - 46RE [DGT]
Figure 46RE-430



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: Sales Codes
[DGT] = 4 Speed Automatic Transmission 46RE
[EL0] = All 5.2L 8 Cylinder Gas Engines
[EM0] = All 5.9L 8 Cylinder Gas Engines


1									SHAFT, Output
	4798 536	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
	5003 232AA	1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
2									BUSHING, (NOT SERVICED) (Not Serviced)
3									BUSHING, (NOT SERVICED) (Not Serviced)
4	4461 008	1	6, 7, 8			EL0	DGT		BEARING, Output Shaft
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
5	2466 224	1	1, 2, 3			EL0	DGT		BEARING, Output Shaft
		1	1, 2, 3			EM0	DGT		
6	4461 057	1	6, 7, 8			EL0	DGT		SNAP RING
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
7	4461 057	1	6, 7, 8			EL0	DGT		SNAP RING
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
8	4461 069	1	1, 2, 3			EL0	DGT		SNAP RING
		1	1, 2, 3			EM0	DGT		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	


AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

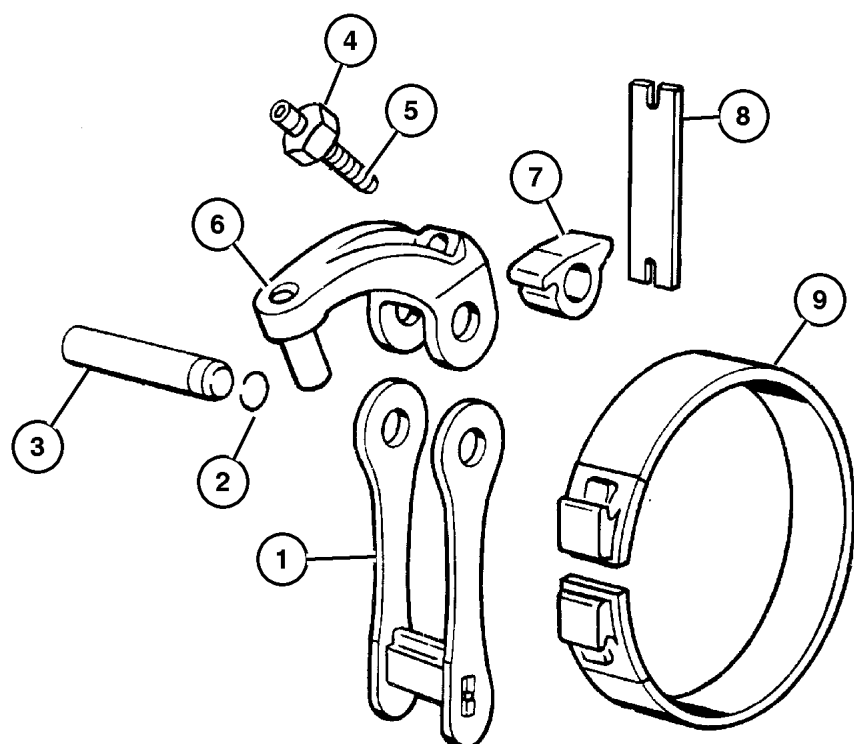**Bands, Reverse and Kickdown - 46RE [DGT]
Figure 46RE-510**



REVERSE BAND

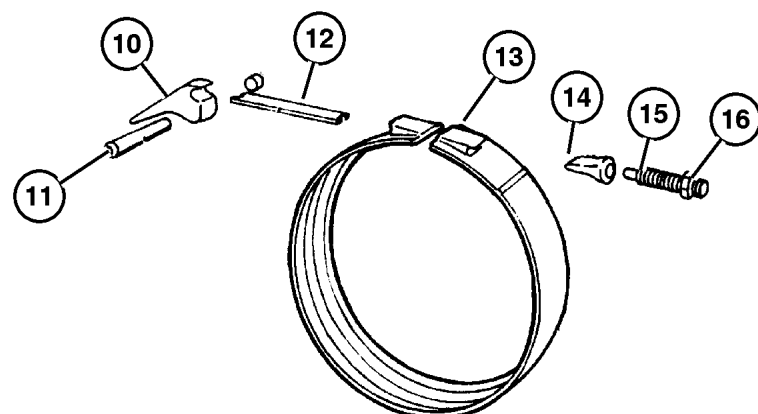

KICKDOWN BAND

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes									
[DGT] = 4 Speed Automatic Transmission 46RE									
[EL0] = All 5.2L 8 Cylinder Gas Engines									
[EM0] = All 5.9L 8 Cylinder Gas Engines									
1									LINK, Transmission Reverse Band
	4617 044	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
2	6030 910	2	1, 2, 3			EL0	DGT		SEAL, Reverse Band
		2	6, 7, 8			EL0	DGT		
3	2124 857	1	1, 2, 3			EL0	DGT		SHAFT, Band Lever
		1	6, 7, 8			EM0	DGT		
4	0271 506	1	1, 2, 3			EL0	DGT		NUT, Hex, .42-20
		1	6, 7, 8			EM0	DGT		
5									SCREW, Trans Reverse Band
	1942 141	1	1, 2, 3			EL0	DGT		Adjusting, .437-20x1.5
		1	6, 7, 8			EM0	DGT		
6	4617 028AB	1	1, 2, 3			EL0	DGT		LEVER, Reverse Band
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
7	4617 014AB	1	1, 2, 3			EL0	DGT		LEVER, Reverse Band
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
8	4471 497AB	1	1, 2, 3			EL0	DGT		STRUT, Reverse Band
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
9	4471 476AB	1	1, 2, 3			EL0	DGT		BAND, Reverse
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
10									LEVER, Kickdown

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE

1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

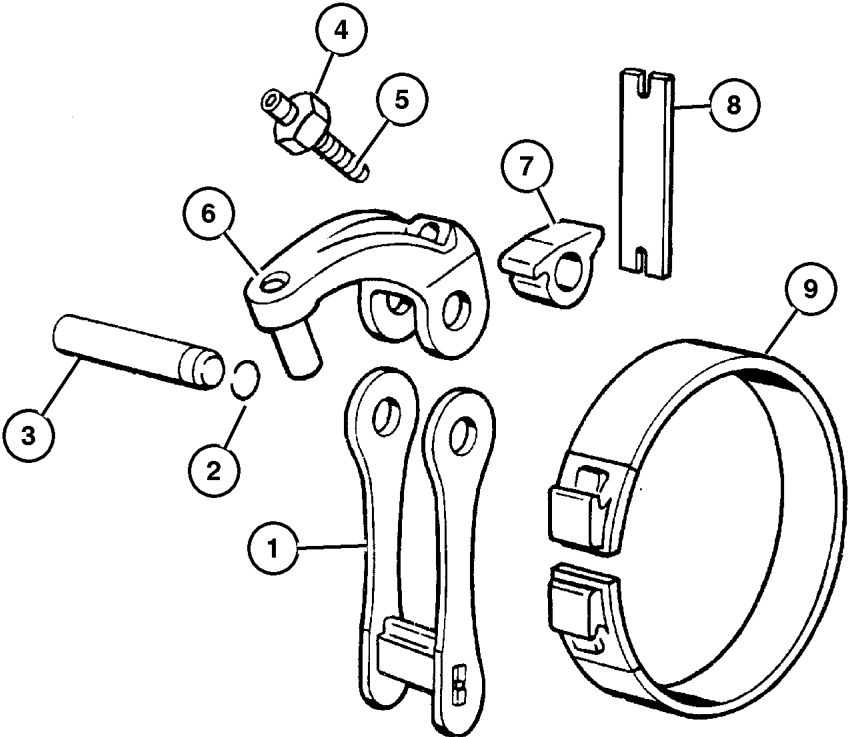
TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual


AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Bands, Reverse and Kickdown - 46RE [DGT]
Figure 46RE-510



REVERSE BAND

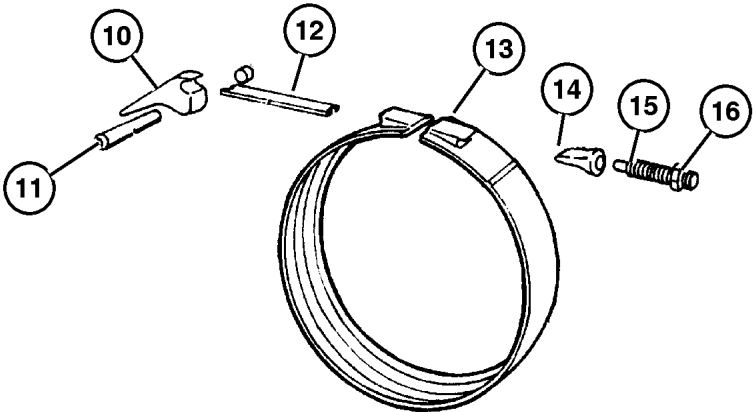

KICKDOWN BAND


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5211 8264	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
11									SHAFT, Band Lever
	4531 181	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
12									STRUT, Kickdown Band
	2124 848	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
13									BAND, Kickdown
	4329 853	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
14									ANCHOR, Kickdown Band
	3743 338	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
15									SCREW
	6036 115AA	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
16									NUT, Hex Jam, .50-20
	0124 934	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

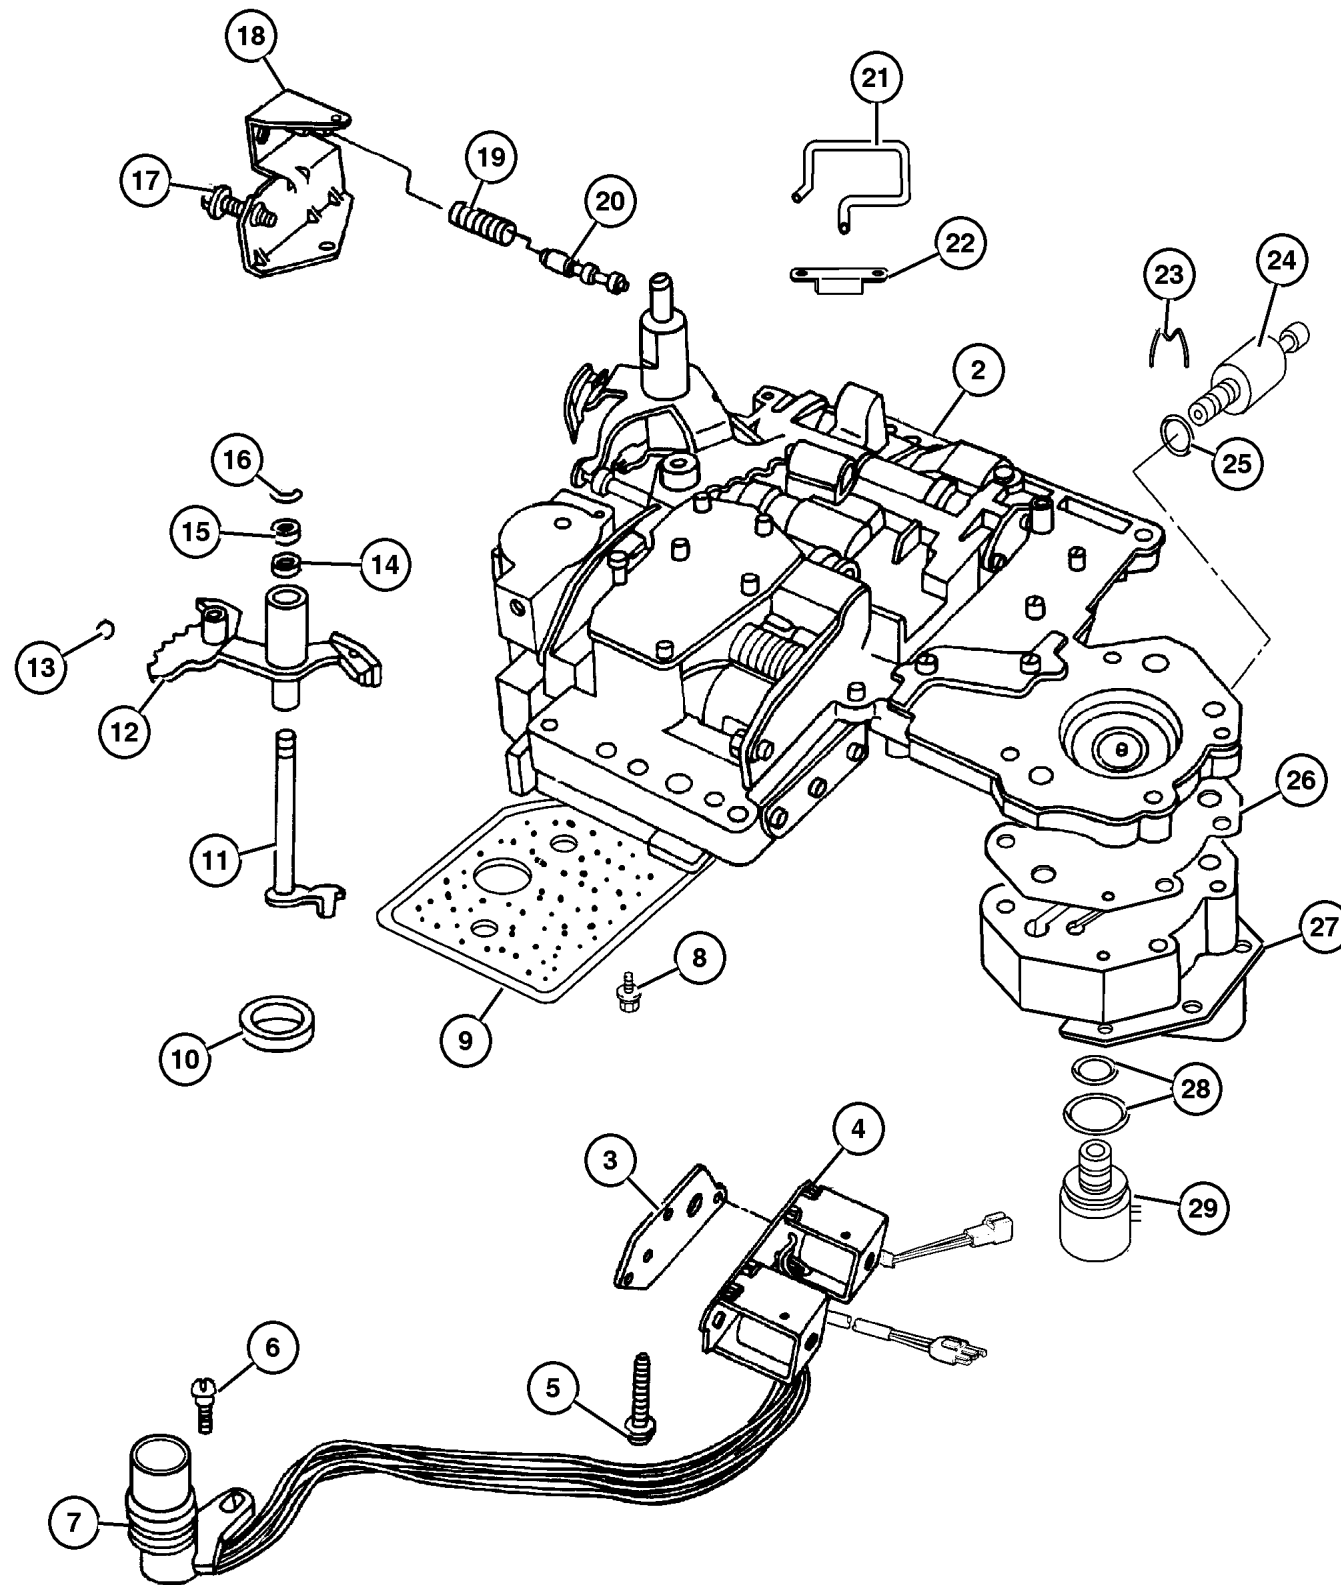Valve Body - 46RE [DGT] Figure 46RE-710



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes									
[DGT] = 4 Speed Automatic Transmission 46RE									
[EL0] = All 5.2L 8 Cylinder Gas Engines									
[EM0] = All 5.9L 8 Cylinder Gas Engines									
-1									SEAL AND GASKET PACKAGE, Valve Body and Servo
	4863 892AC-	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
2	52118 793AB	1	1, 2, 3			EL0	DGT		VALVE BODY ASSEMBLY
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
3									GASKET PACKAGE, Transmission Solenoid
	4886 333AA	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
4	52118 500AB	1	1, 2, 3			EL0	DGT		SOLENOID, Transmission Overdrive
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
5	0181 071	3	1, 2, 3			EL0	DGT		BOLT, Valve Body, .25-20x1.75
		3	6, 7, 8			EL0	DGT		
		3	1, 2, 3			EM0	DGT		
		3	6, 7, 8			EM0	DGT		
6	6033 985	1	1, 2, 3			EL0	DGT		SCREW, Tapping, .19-24x.75
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
7									O RING, Solenoid Wiring, Transmission
	6034 748	2	1, 2, 3			EL0	DGT		
		2	6, 7, 8			EL0	DGT		


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM, EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

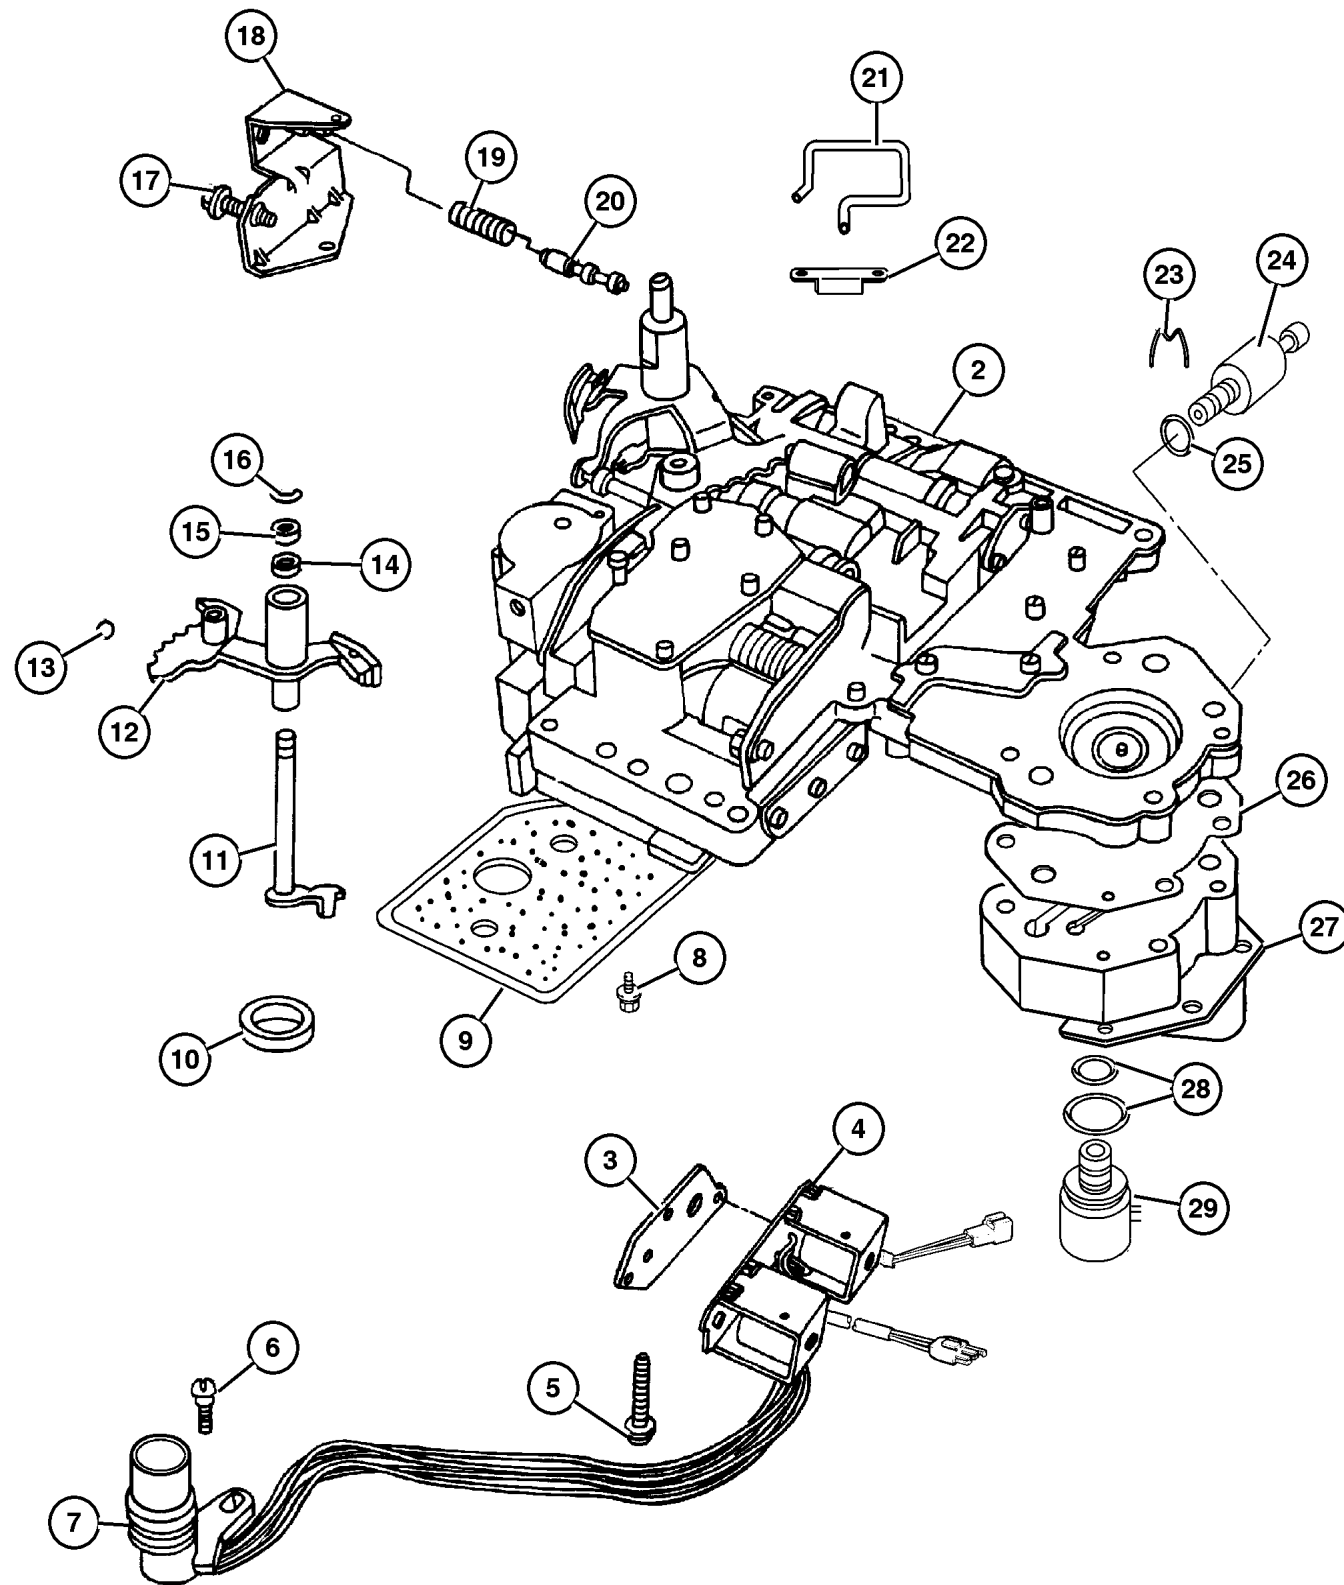Valve Body - 46RE [DGT]
Figure 46RE-710



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
8	6033 985	2	1, 2, 3			EM0	DGT		SCREW, Tapping, .19-24x.75
		2	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
9	5211 8789	1	1, 2, 3			EM0	DGT		FILTER, Valve Body
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
10	4505 098	1	1, 2, 3			EL0	DGT		SEAL, Manual Shift Valve, 1.25 OD
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
11	3681 227	1	1, 2, 3			EL0	DGT		LEVER, Throttle Valve
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
12	4617 439	1	1, 2, 3			EL0	DGT		LEVER, Manual Valve
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
13	0147 488	1	1, 2, 3			EL0	DGT		BALL, Manual Lever Detent, .343 Diameter
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
14	2466 548	1	1, 2, 3			EL0	DGT		SEAL, Valve Lever Shift
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
15	2538 062	1	1, 2, 3			EL0	DGT		WASHER, Manual Valve Lever
		1	1, 2, 3			EL0	DGT		


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM, EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

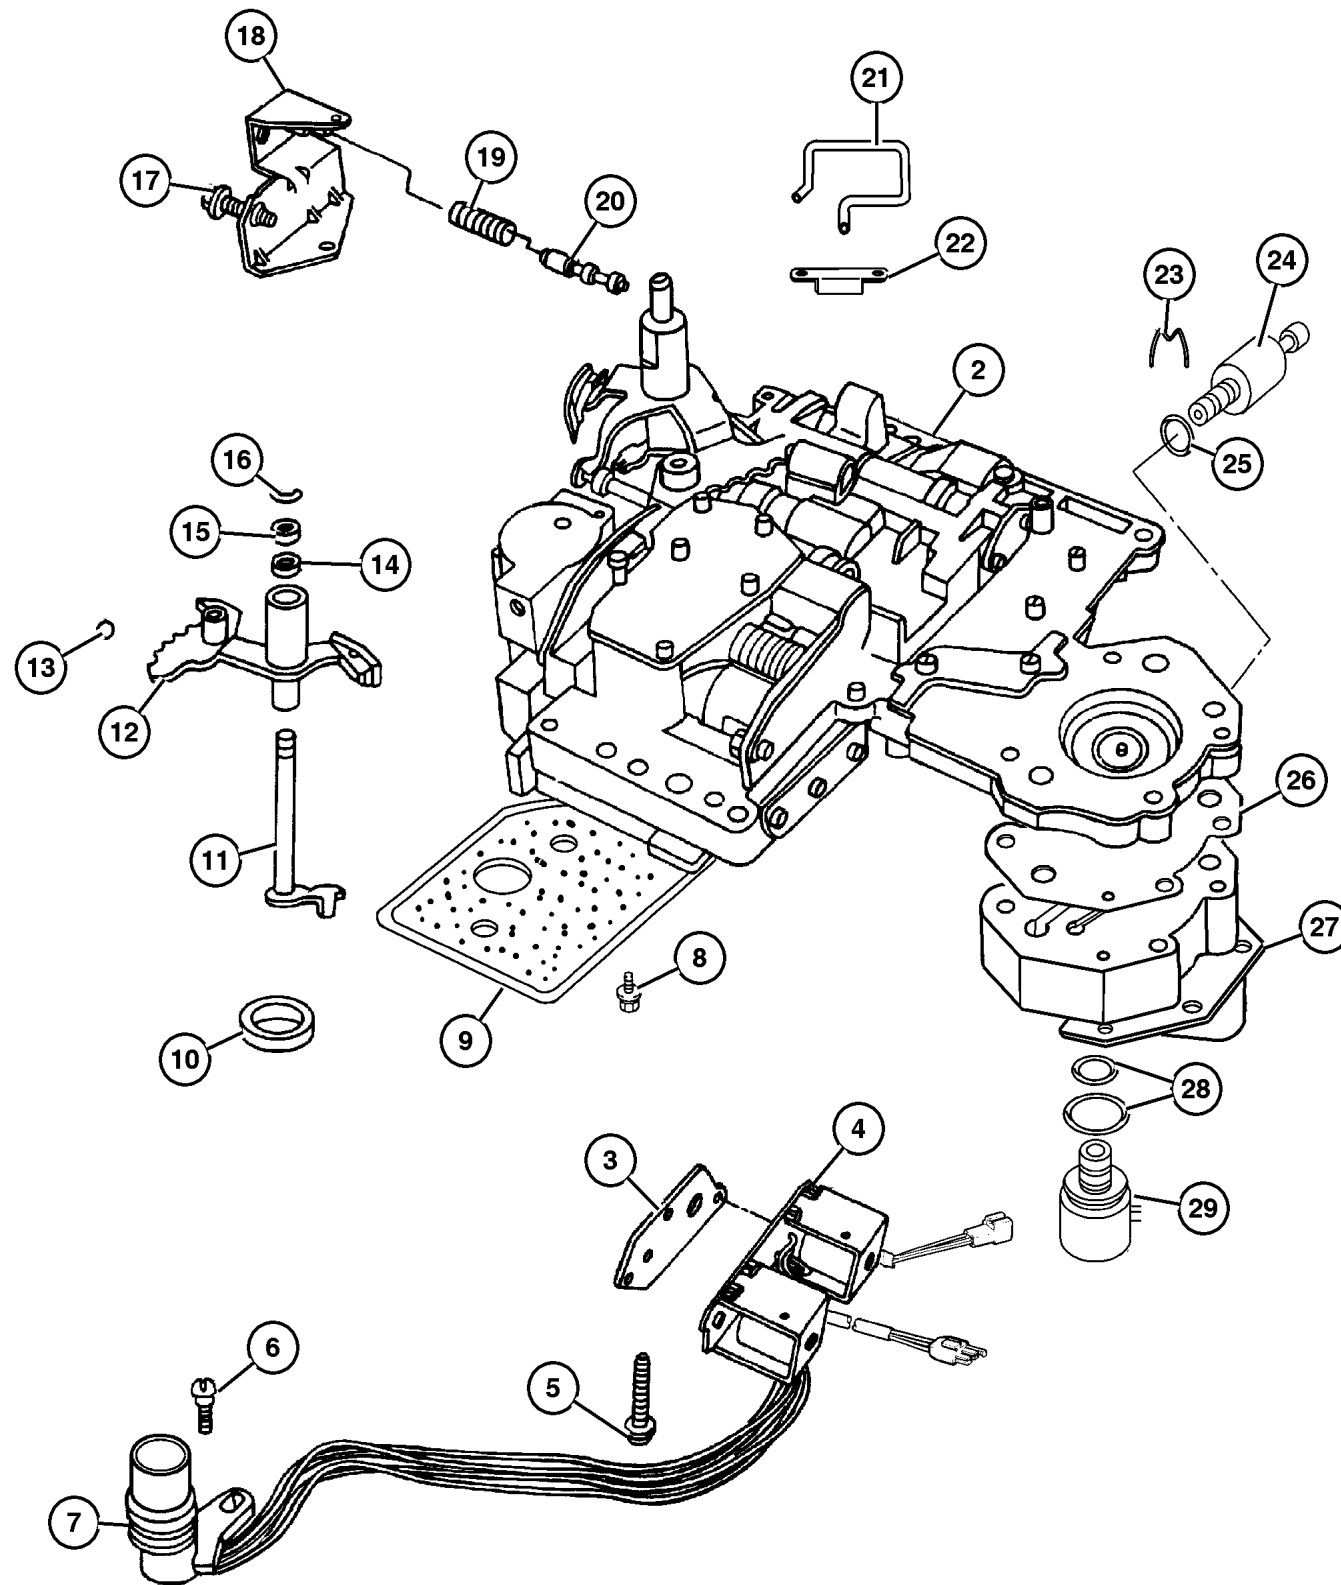Valve Body - 46RE [DGT]
Figure 46RE-710



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
16	6035 208	1	1, 2, 3			EL0	DGT		SNAP RING
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
17									SCREW, Cap Head Lock, .312-24x1. 25
	6030 609	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
18	4617 010	1	6, 7, 8			EM0	DGT		BRACKET, Valve Body Switch
		1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
19	4130 492	1	1, 2, 3			EL0	DGT		SPRING, Switch Valve
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
20									VALVE, Trans Lockup Switch
	4505 036	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
21	4617 008	1	1, 2, 3			EL0	DGT		TUBE, Boost Valve
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
22									RETAINER, Boost Valve Oil Supply Tube
	5211 7958	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM, EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

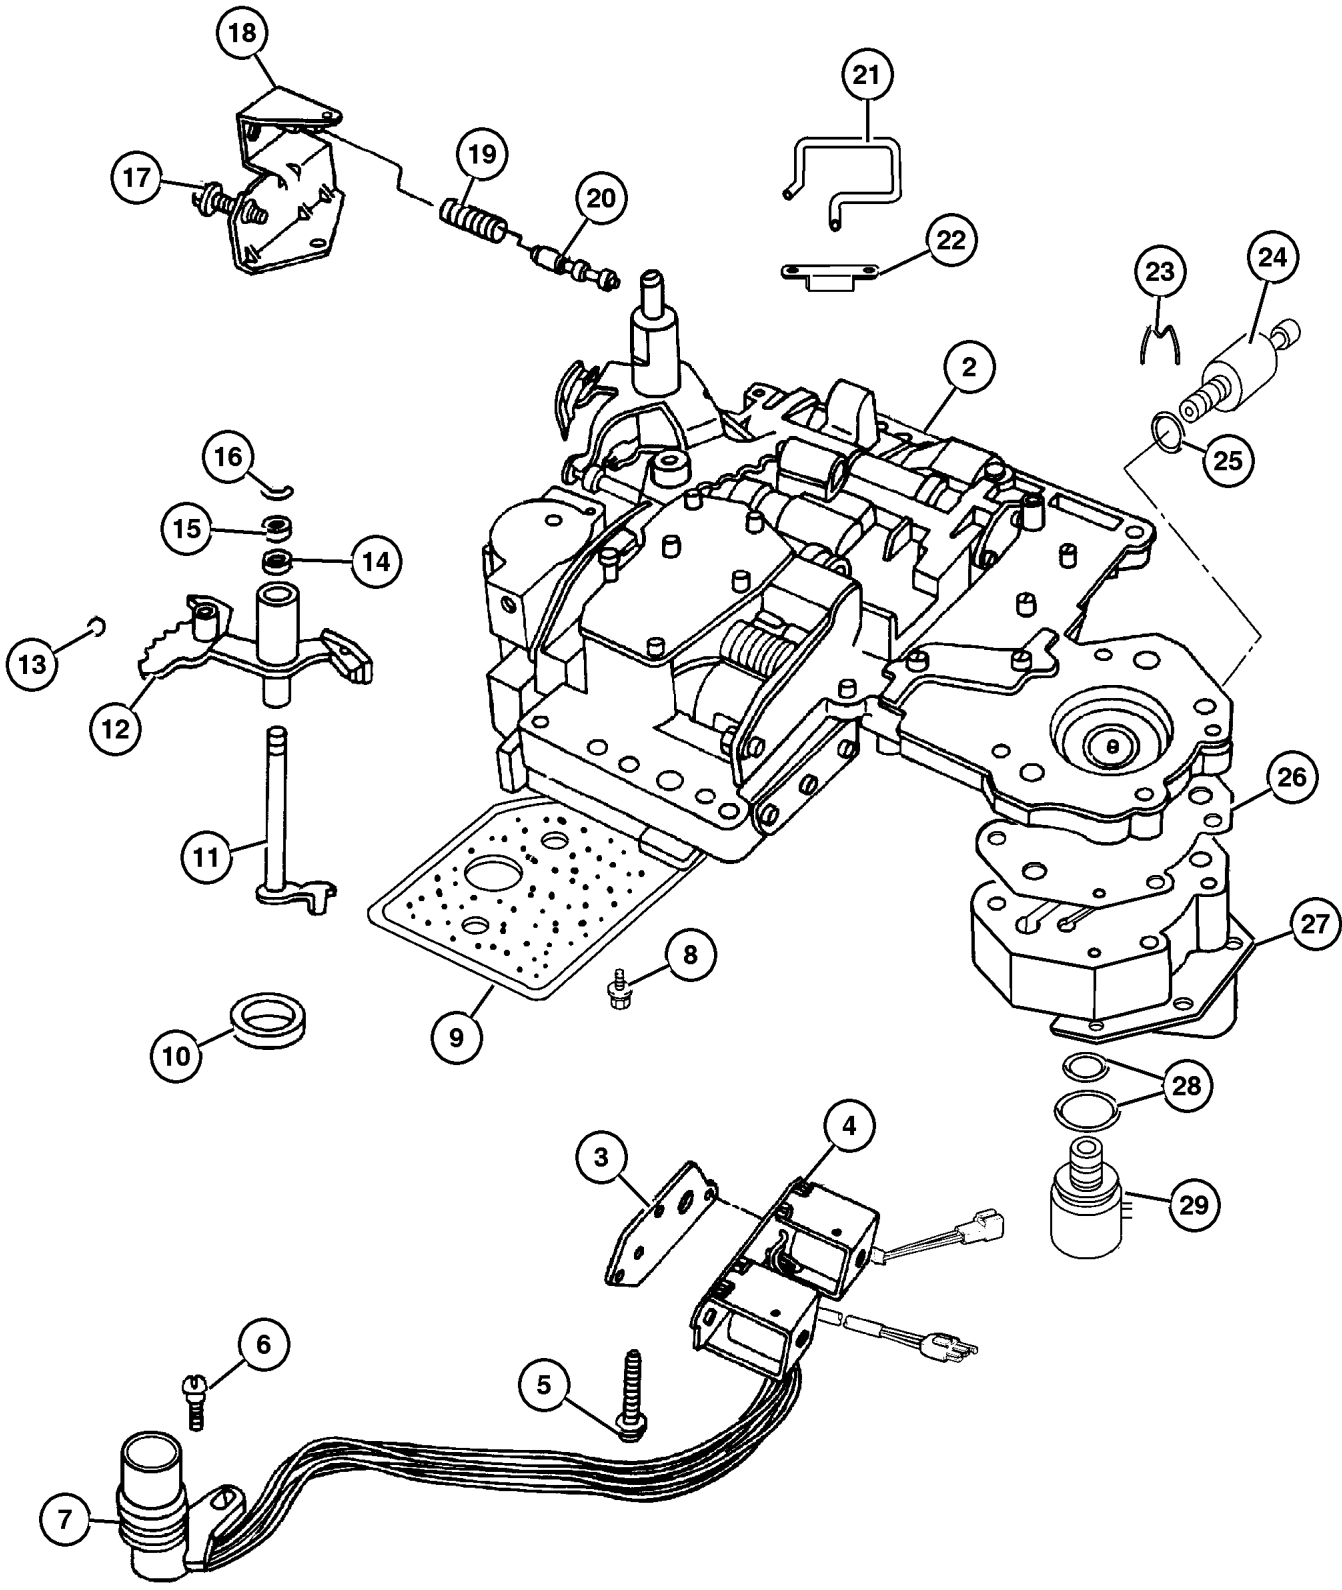Valve Body - 46RE [DGT]
Figure 46RE-710




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
23	4617 219	1	1, 2, 3			EL0	DGT		CLIP, Transmission Governor Transducer
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
24	56028 196AA	1	1, 2, 3			EL0	DGT		TRANSDUCER, Pressure Sensor
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
25	6034 493	1	1, 2, 3			EL0	DGT		O RING, Pressure Switch
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
26	4617 216	1	1, 2, 3			EL0	DGT		GASKET, Transmission Solenoid
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
27	4617 211AB	1	1, 2, 3			EL0	DGT		RETAINER, Transmission Governor Solenoid
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
28	4723 549	1	1, 2, 3			EL0	DGT		O RING PACKAGE, Valve Body, Transmission
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
29	4617 210	1	1, 2, 3			EL0	DGT		SOLENOID, Transmission Governor
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
-30									SCREEN, Transmission Regulator Valve

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

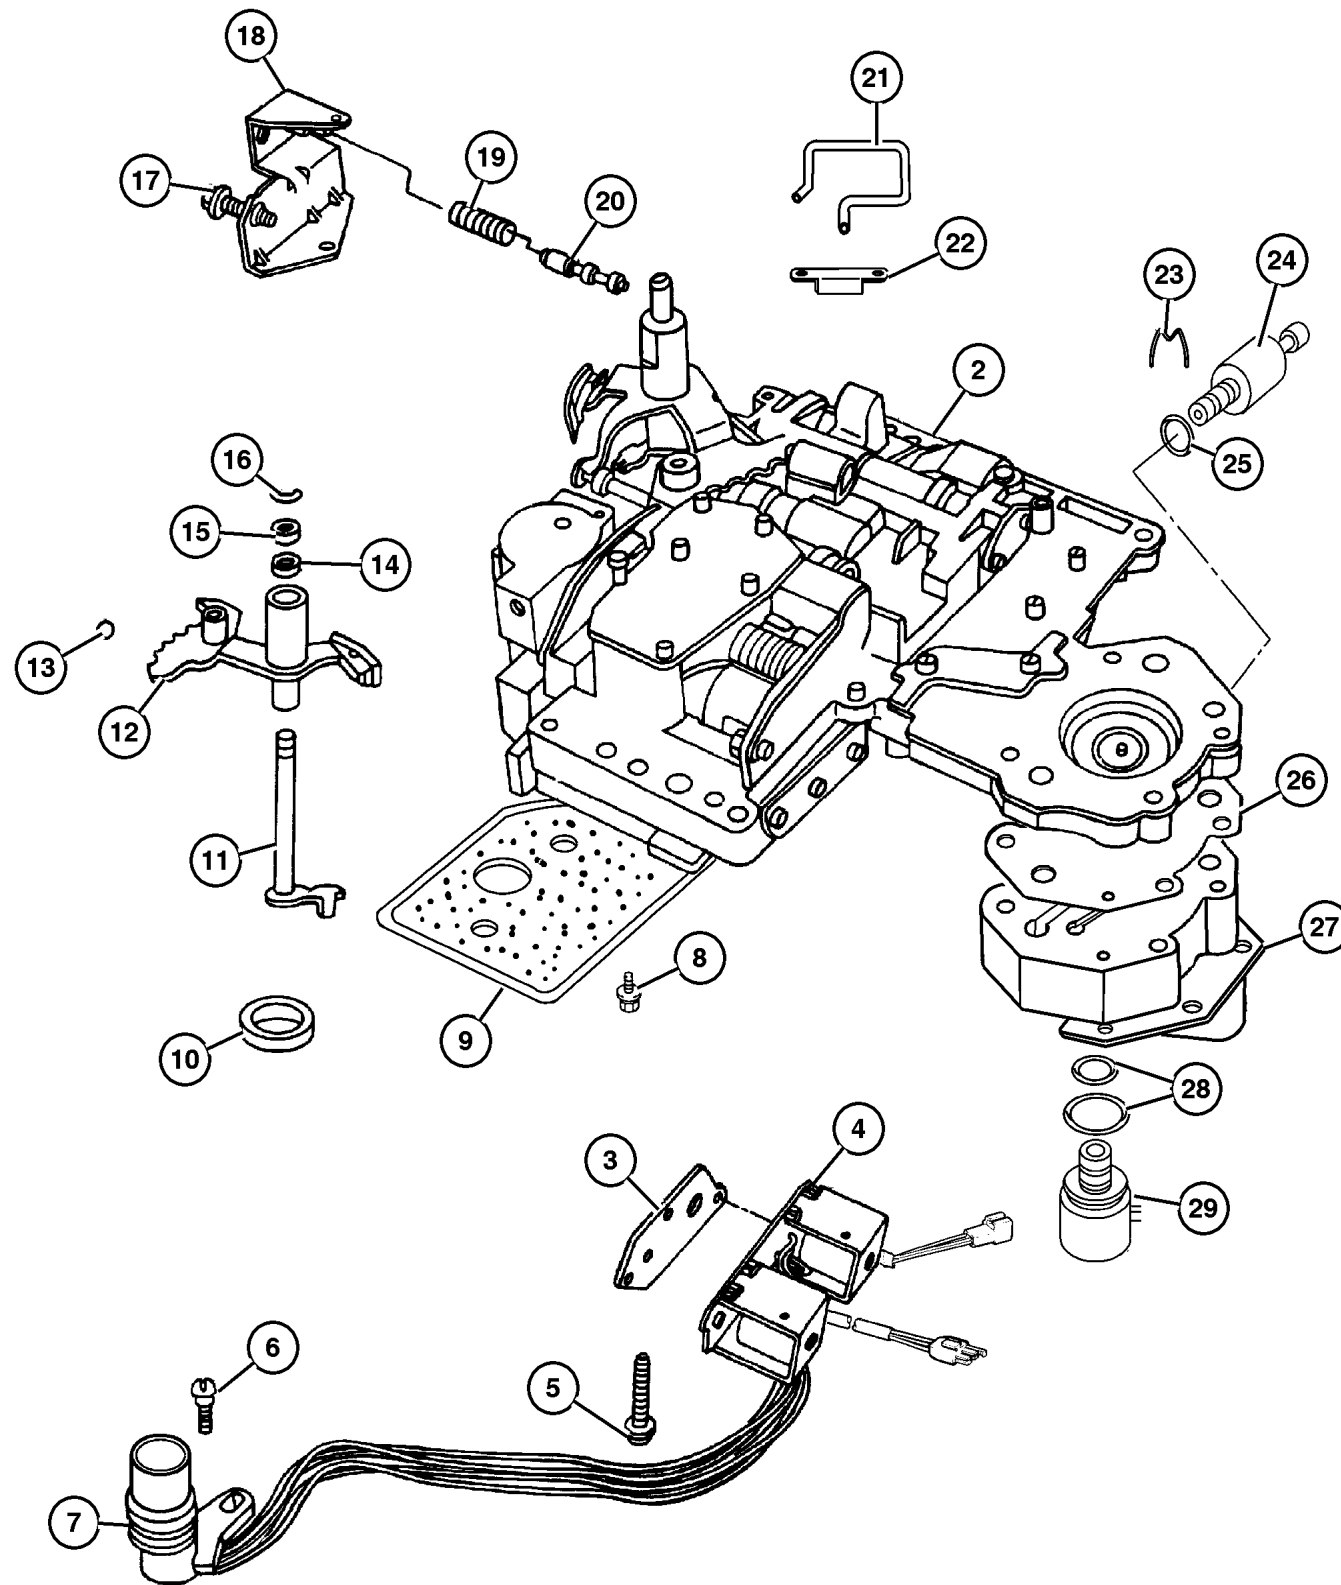Valve Body - 46RE [DGT]
Figure 46RE-710



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	3878 313	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		

DODGE RAM QUAD CAB/CLUB CAB (BE)

**DODGE RAM TRUCK
SERIES**
L = Ram Truck (All)

LINE

1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

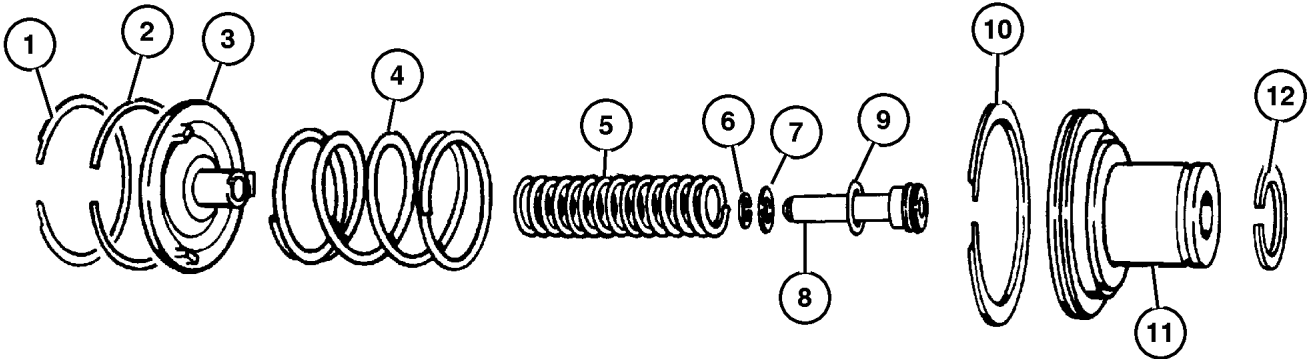
TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual


AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005


Servos, Accumulator Piston and Spring - 46RE [DGT]
Figure 46RE-720



KICKDOWN SERVO

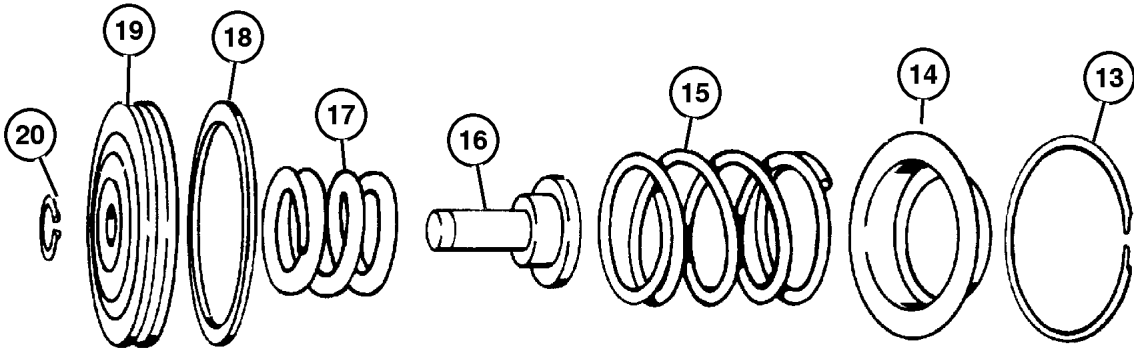

LOW AND REVERSE SERVO

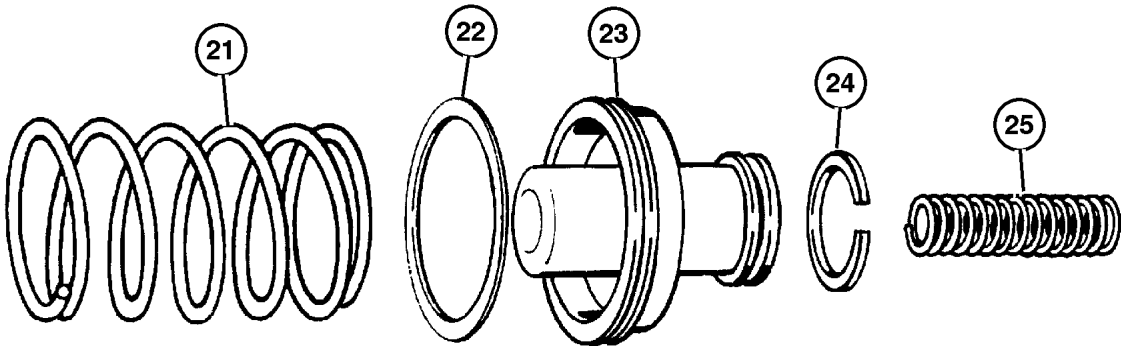

ACCUMULATOR PISTON AND SPRING


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes									
[DGT] = 4 Speed Automatic Transmission 46RE									
[EL0] = All 5.2L 8 Cylinder Gas Engines									
[EM0] = All 5.9L 8 Cylinder Gas Engines									
1	SNAP RING								
1942 130	1	1, 2, 3				EL0	DGT		
	1	6, 7, 8				EL0	DGT		
	1	1, 2, 3				EM0	DGT		
	1	6, 7, 8				EM0	DGT		
2	SEAL, Servo Piston								
1942 123	1	1, 2, 3				EL0	DGT		
	1	6, 7, 8				EL0	DGT		
	1	1, 2, 3				EM0	DGT		
	1	6, 7, 8				EM0	DGT		
3	GUIDE, Kickdown Servo								
3410 441	1	1, 2, 3				EL0	DGT		
	1	6, 7, 8				EL0	DGT		
	1	1, 2, 3				EM0	DGT		
	1	6, 7, 8				EM0	DGT		
4	SPRING, Kickdown Servo Piston								
3410 444	1	1, 2, 3				EL0	DGT		
	1	6, 7, 8				EL0	DGT		
	1	1, 2, 3				EM0	DGT		
	1	6, 7, 8				EM0	DGT		
5	SPRING, Kickdown Servo Piston								
3410 444	1	1, 2, 3				EL0	DGT		
	1	6, 7, 8				EL0	DGT		
	1	1, 2, 3				EM0	DGT		
	1	6, 7, 8				EM0	DGT		
6	SNAP RING, Brake Master Cylinder								
6031 392	1	1, 2, 3				EL0	DGT		
	1	6, 7, 8				EL0	DGT		
	1	1, 2, 3				EM0	DGT		
	1	6, 7, 8				EM0	DGT		
7	RETAINER, Kick Down								
3410 437	1	1, 2, 3				EL0	DGT		
	1	6, 7, 8				EL0	DGT		
	1	1, 2, 3				EM0	DGT		
	1	6, 7, 8				EM0	DGT		
8	PISTON, Kickdown Servo								

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	


AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

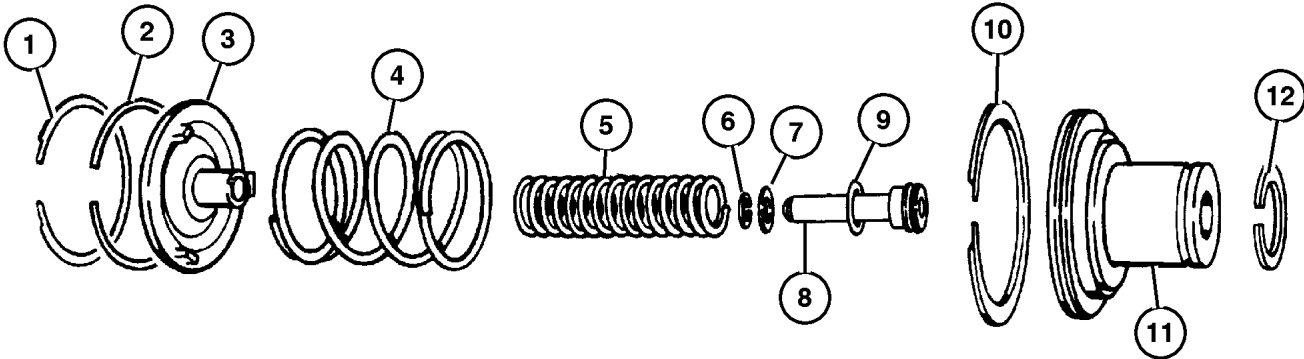
Servos, Accumulator Piston and Spring - 46RE [DGT]
Figure 46RE-720



KICKDOWN SERVO

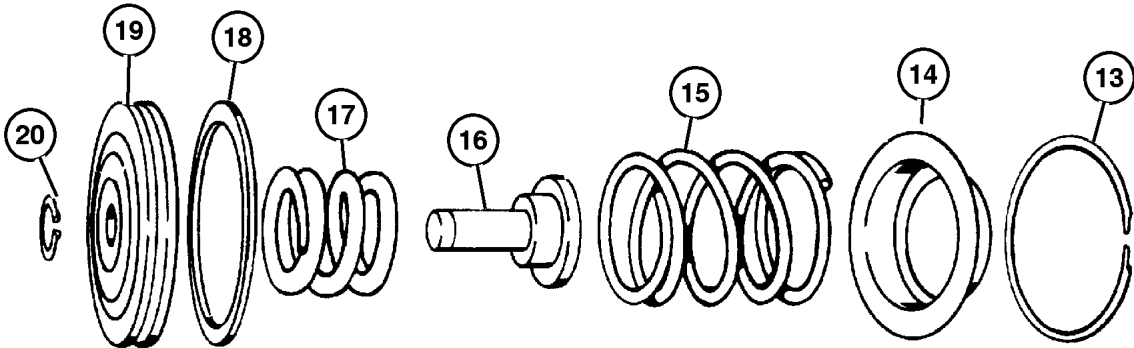

LOW AND REVERSE SERVO

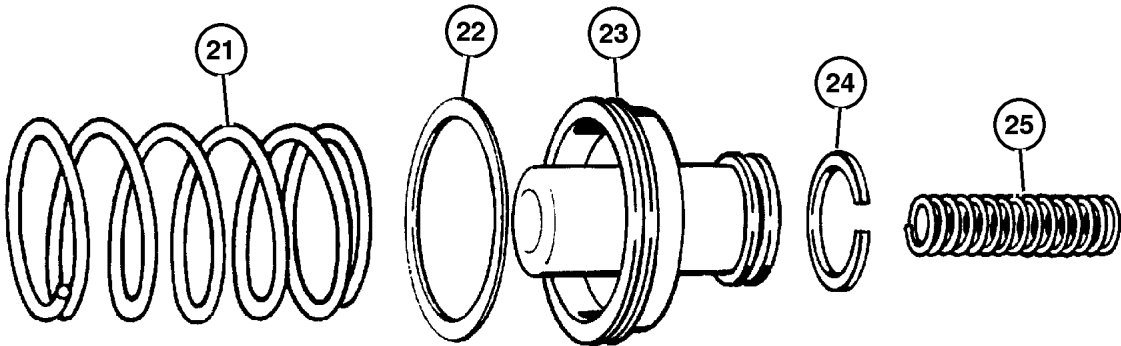

ACCUMULATOR PISTON AND SPRING

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	3410 445	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
9									O RING, Kick Down Servo
	6028 864	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
10									SEAL, Servo Piston
	1942 123	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
11									PISTON, Kickdown Servo
	3410 440	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
12									SEAL, Kickdown Servo
	4412 444	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
13									SNAP RING
	1942 130	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
14									RETAINER, Transmission Reverse Servo Piston Spring
	1942 150	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
15									SPRING, Reverse Servo Piston
	2801 241	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
16									PLUG, Reverse Servo Piston


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual


AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

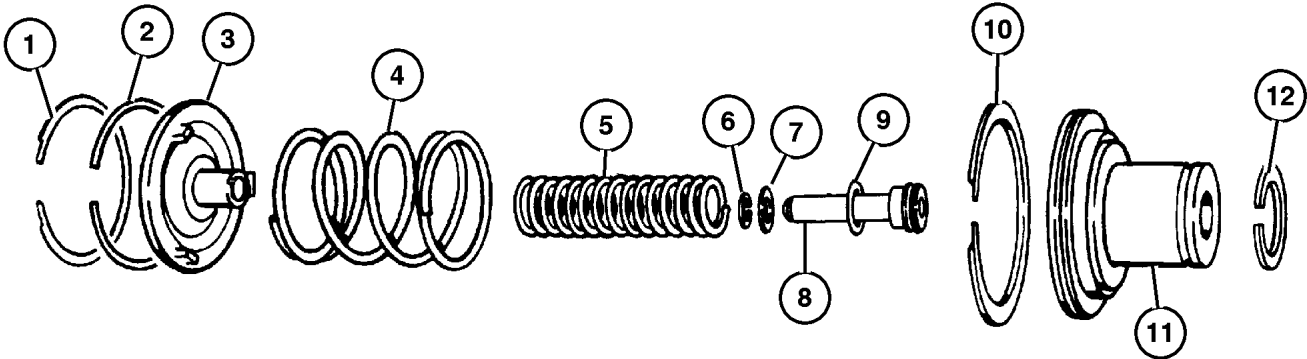
Servos, Accumulator Piston and Spring - 46RE [DGT]
Figure 46RE-720



KICKDOWN SERVO

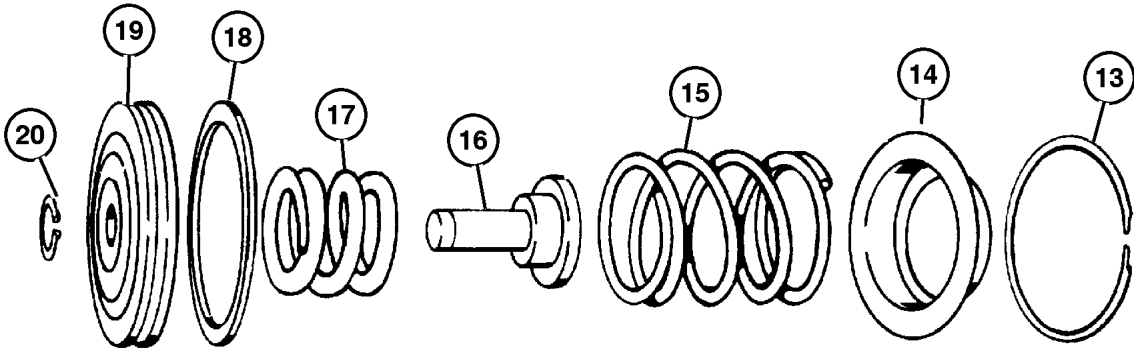

LOW AND REVERSE SERVO

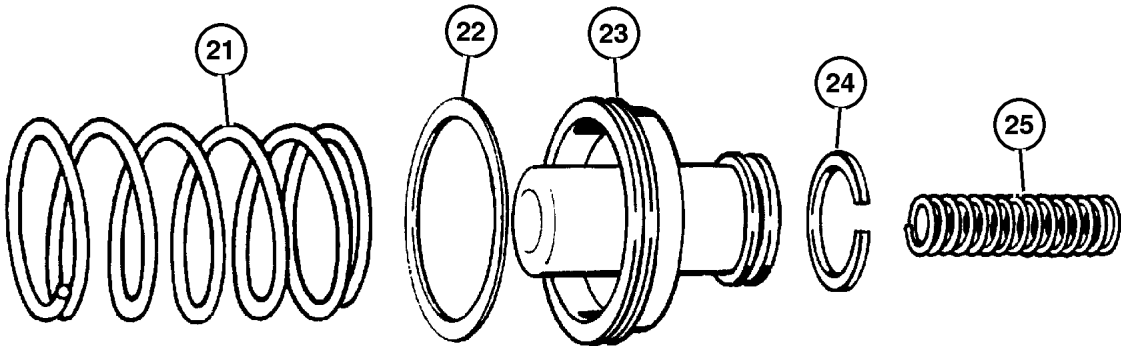

ACCUMULATOR PISTON AND SPRING


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	52118 740AB	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
17									SPRING, Reverse Servo Piston
	2801 241	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
18									SEAL, Piston Reverse Servo, Rubber
	4058 741	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
19									PISTON, Reverse Servo
	2801 281	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
20									SNAP RING, .435 ID
	6027 153	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
21									SPRING, Accumulator Piston
	3515 079	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
22									SEAL, Piston Accumulator
	3743 010	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
23									PISTON, Accumulator
	3743 650	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
24									SEAL, Piston Accumulator

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	


AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

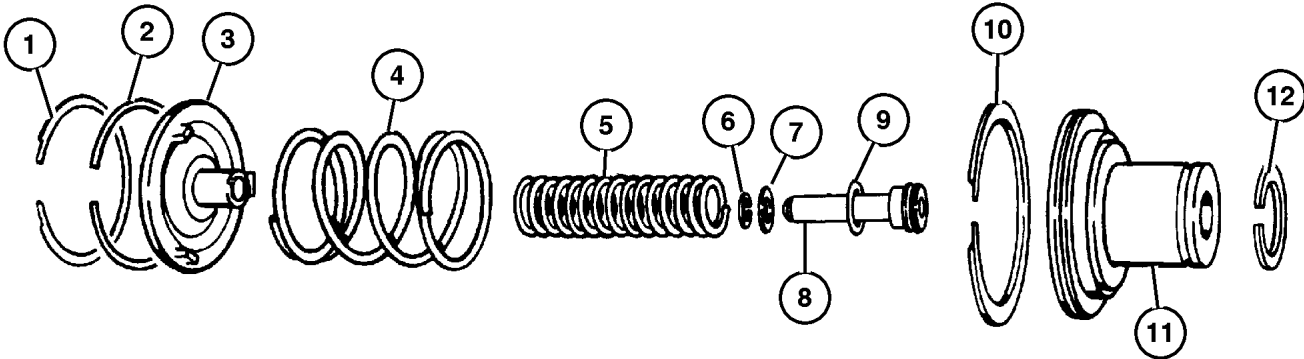
Servos, Accumulator Piston and Spring - 46RE [DGT]
Figure 46RE-720



KICKDOWN SERVO

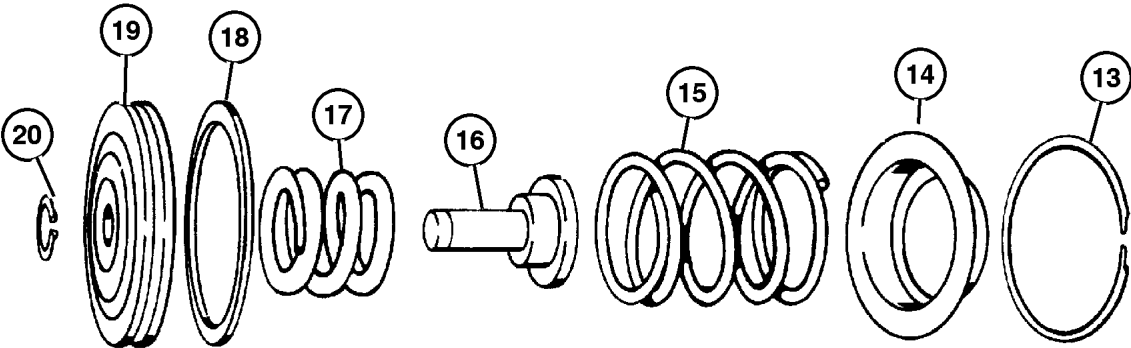

LOW AND REVERSE SERVO

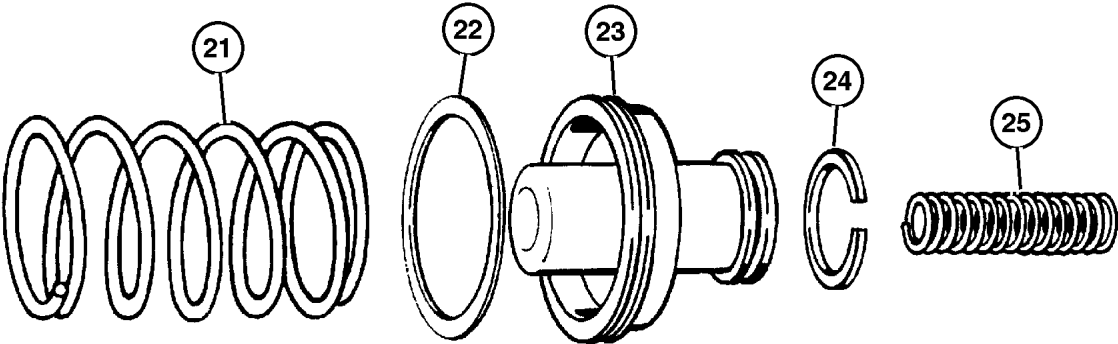

ACCUMULATOR PISTON AND SPRING


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	3743 010	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
25									SPRING, Accumulator Piston
	4617 529	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

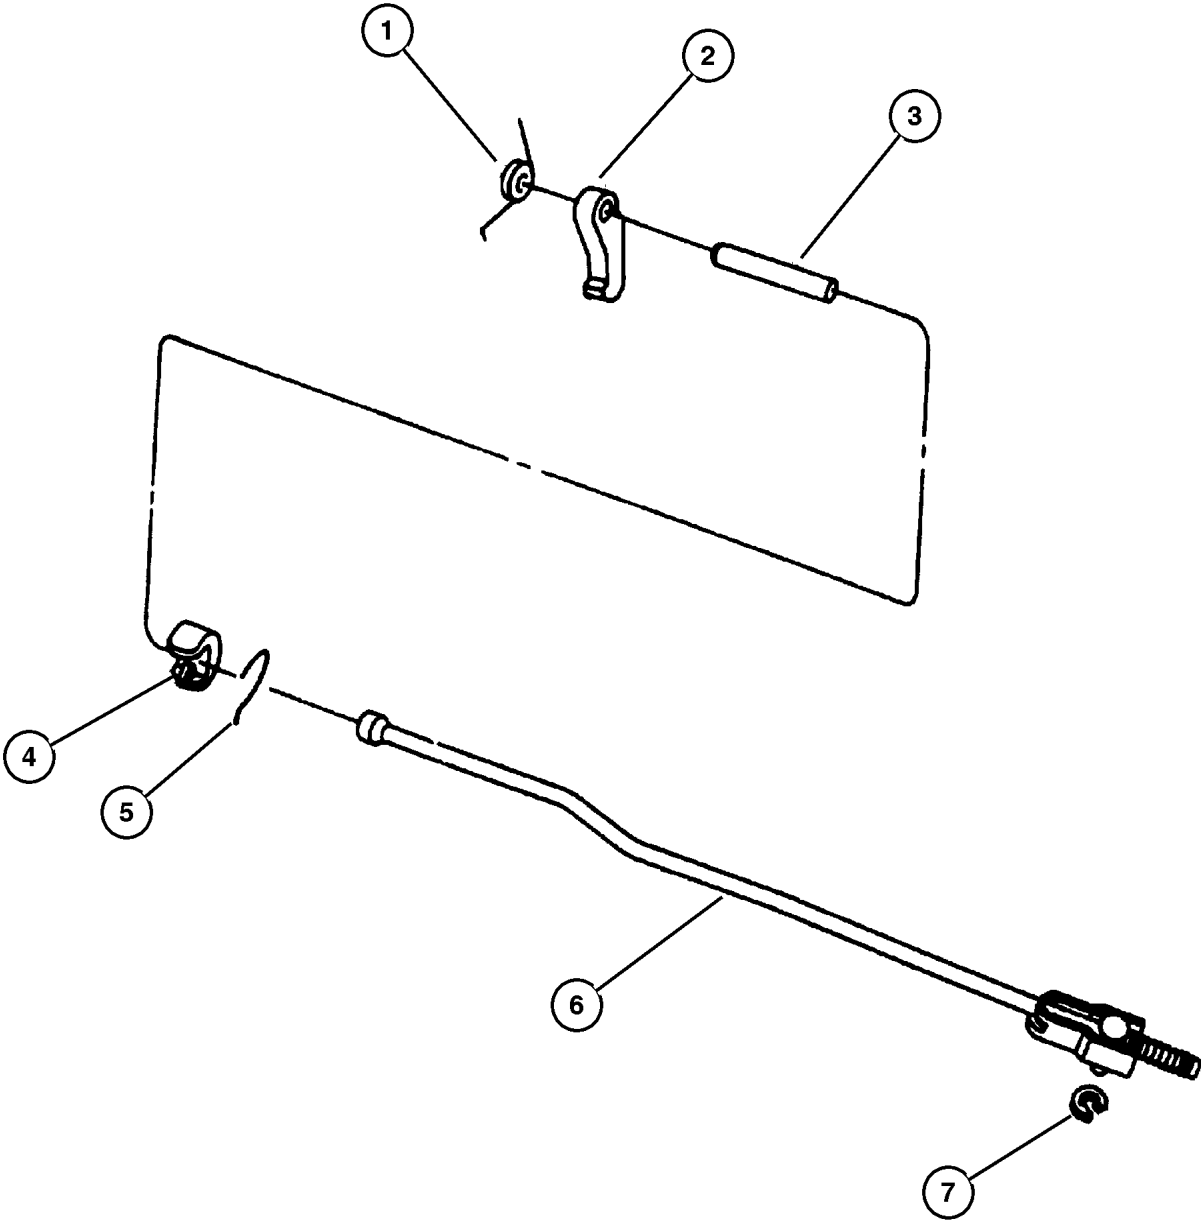Parking Sprag [DGT]
Figure 46RE-730



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: Sales Codes
[DGT] = 4 Speed Automatic Transmission 46RE
[EL0] = All 5.2L 8 Cylinder Gas Engines
[EM0] = All 5.9L 8 Cylinder Gas Engines


1									SPRING, Parking Sprag
	2466 909	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
2									SPRAG, Transmission Parking
	4471 415	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
3									SHAFT, Parking Sprag
	2466 892	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
4									SNAP RING, Rod
	6035 256	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
5									PLUG, Parking Sprag
	2538 042	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
6									SNAP RING, Transmission
	2538 034	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
7									ROD, Parking Sprag
	4471 478	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

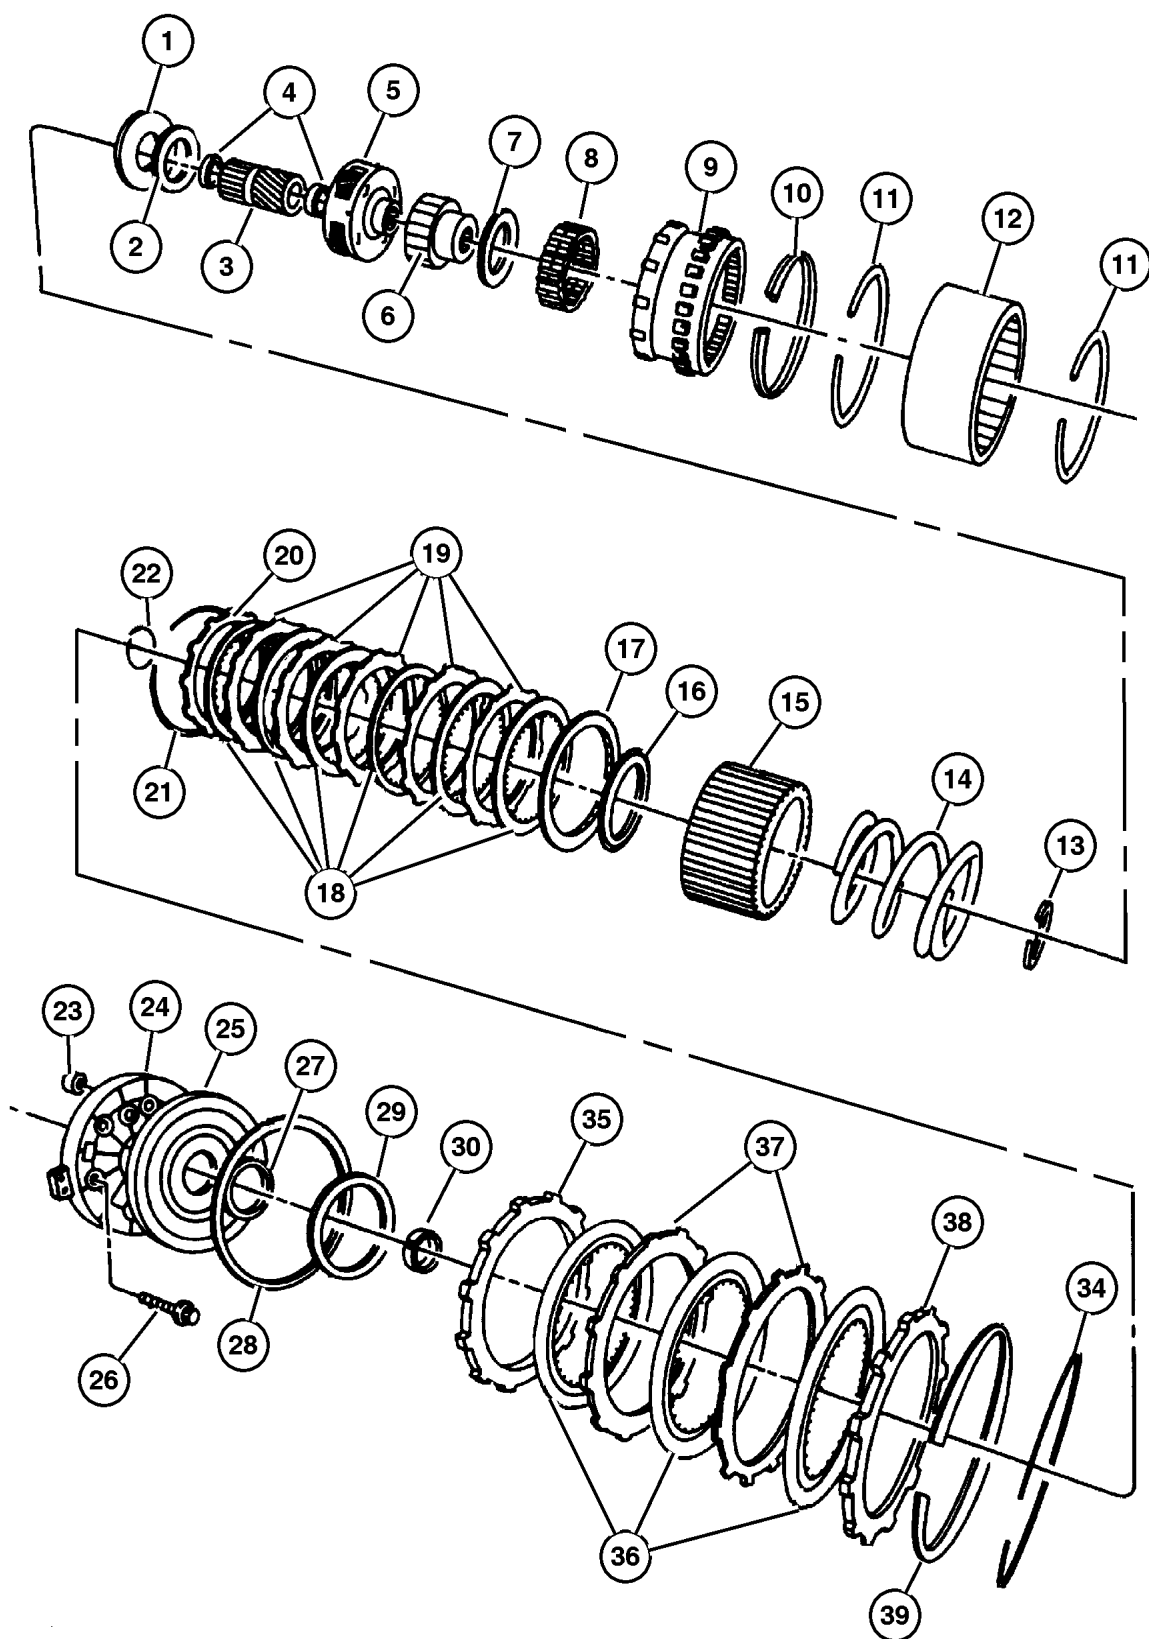Clutch, Overdrive with Gear train - 46RE [DGT]
Figure 46RE-1010



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: Sales Codes

[DGT] = 4 Speed Automatic Transmission 46RE

[EL0] = All 5.2L 8 Cylinder Gas Engines

[EM0] = All 5.9L 8 Cylinder Gas Engines

1									PLATE PACKAGE, Transmission Module
	4740 774	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
2									BEARING, (NOT SERVICED) (Not Serviced)
3									GEAR, Overdrive Sun
	5015 107AA	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
4									BUSHING, (NOT SERVICED) (Not Serviced)
5									CARRIER, O/Drive Planet Pinion
	4798 520	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
6									RACE, Overrunning Clutch
	4461 124	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
7									THRUST BEARING, Ovedrive Third Position
	4461 014	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
8									CLUTCH, Overdrive Overrunning
	4461 015	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
9									GEAR, Overdrive Annulus


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

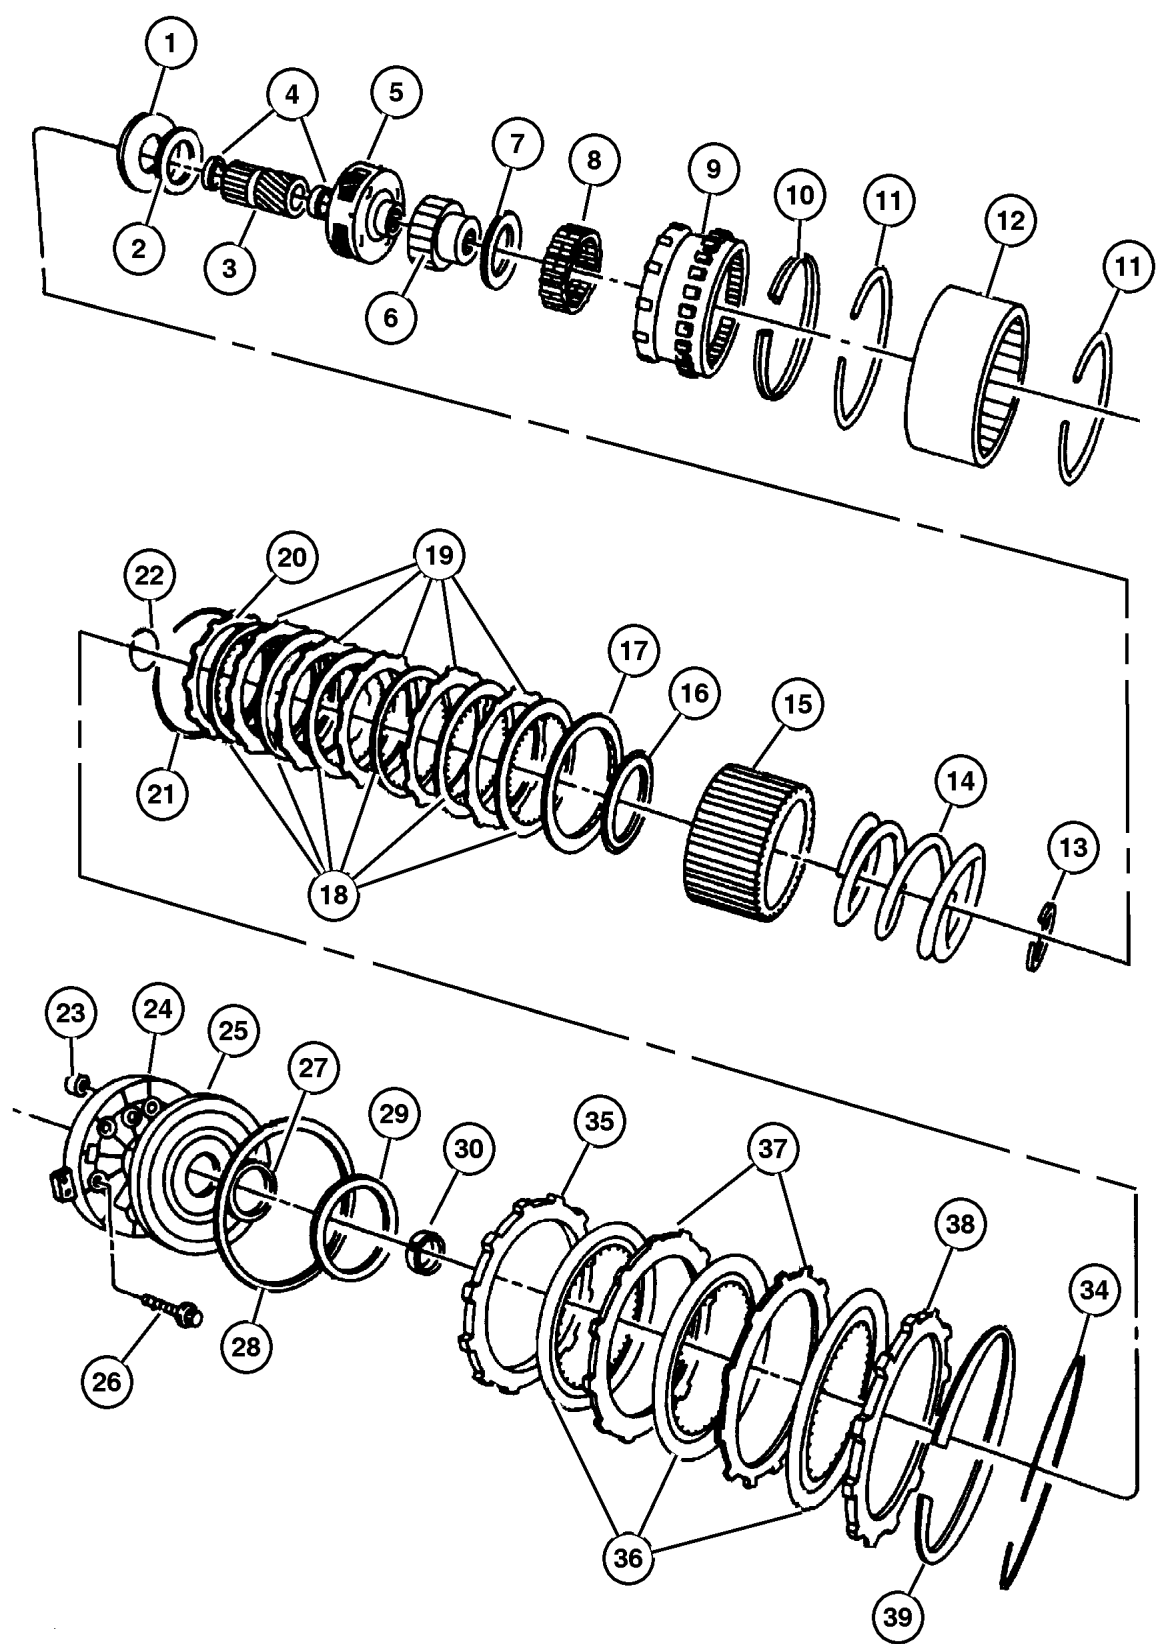
Clutch, Overdrive with Gear train - 46RE [DGT]
Figure 46RE-1010



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4761 010	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
10									SNAP RING, 5.25 OD
	4461 059	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
11									SNAP RING, 6.00 OD
	4461 060	2	6, 7, 8			EL0	DGT		
		2	6, 7, 8			EM0	DGT		
		2	1, 2, 3			EL0			
		2	1, 2, 3			EM0	DGT		
12									DRUM, Automatic Transmission
	4461 089	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
13									SNAP RING, 2.1875 OD
	4461 063	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
14									SPRING, Direct Clutch
	4461 027	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
15									HUB, Direct Clutch
	4461 072	AR	6, 7, 8			EL0	DGT		
		AR	6, 7, 8			EM0	DGT		
		AR	1, 2, 3			EL0	DGT		
		AR	1, 2, 3			EM0	DGT		
16									THRUST BEARING, Overdrive
	4446 724	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
17									PLATE, Transmission Clutch Reaction

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

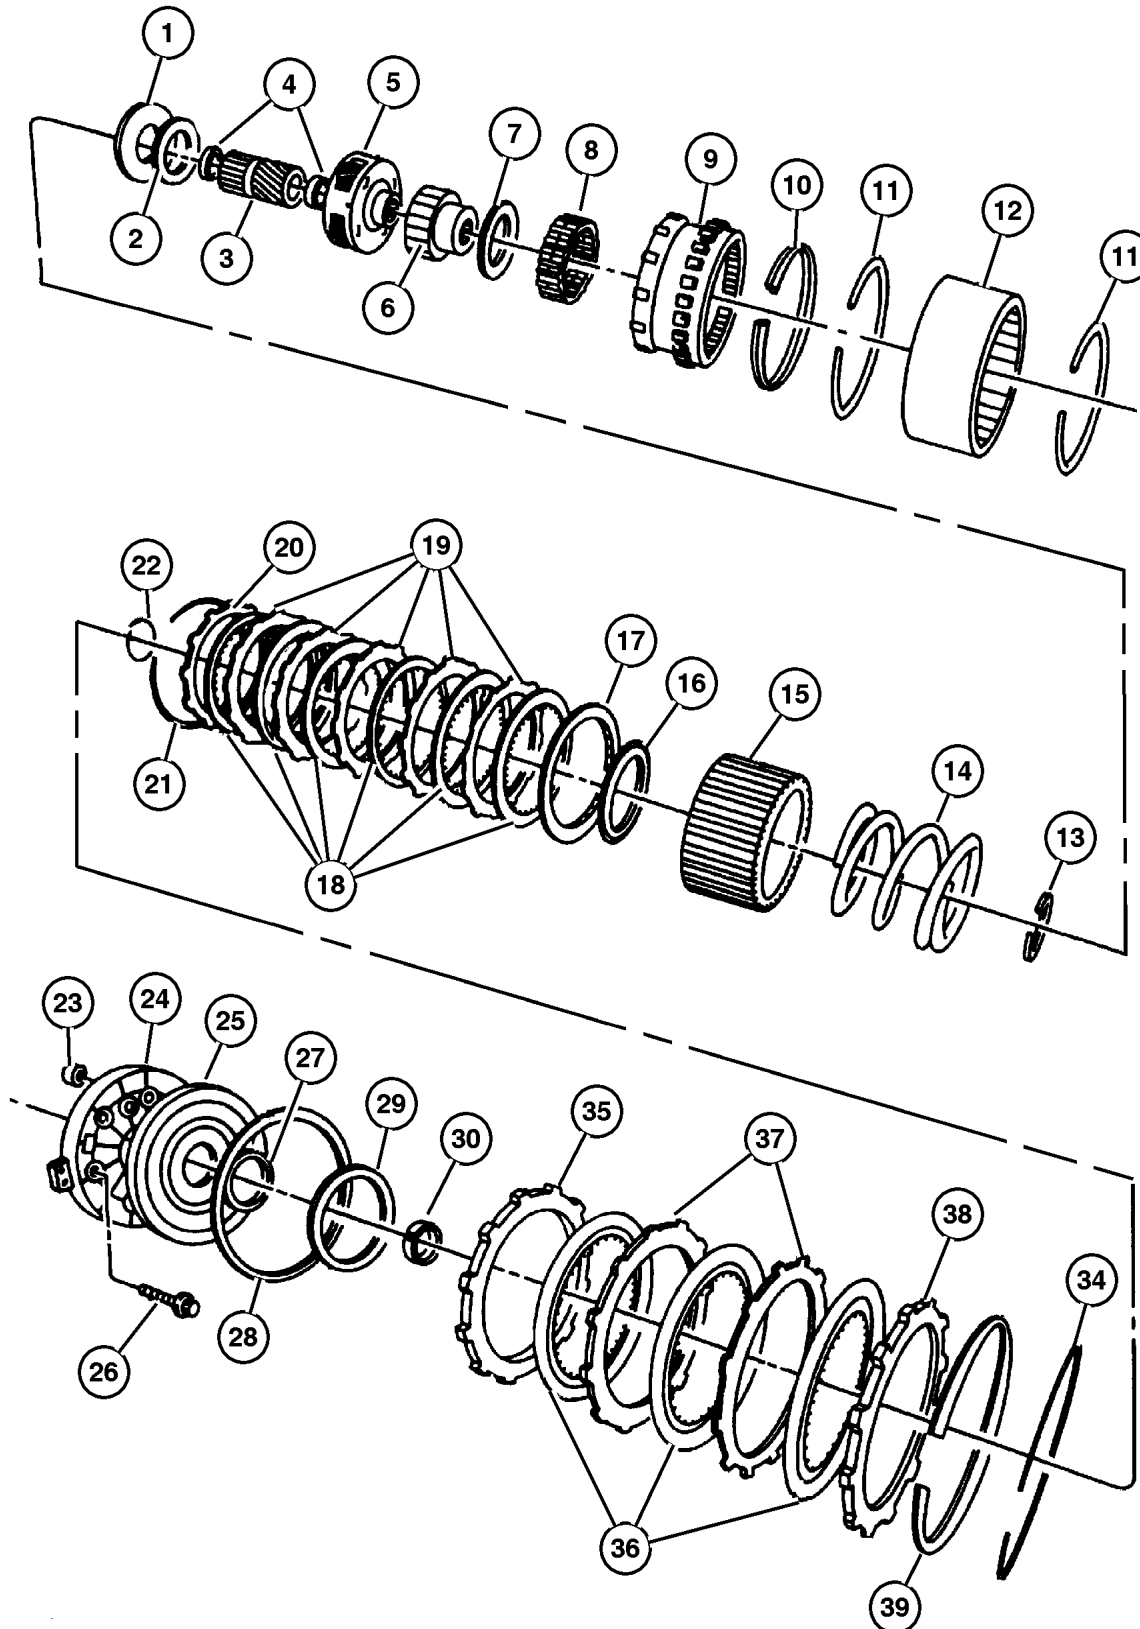Clutch, Overdrive with Gear train - 46RE [DGT]
Figure 46RE-1010



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
18	4461 030	1	6, 7, 8			EL0	DGT		DISC, Direct Clutch
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
19	4461 042	8	6, 7, 8			EL0	DGT		PLATE, Transmission Clutch Reaction
		8	6, 7, 8			EM0	DGT		
		8	1, 2, 3			EL0	DGT		
		8	1, 2, 3			EM0	DGT		
20	4461 054	7	6, 7, 8			EL0	DGT		PLATE, Transmission Clutch Reaction
		7	6, 7, 8			EM0	DGT		
		7	1, 2, 3			EL0	DGT		
		7	1, 2, 3			EM0			
21	4461 031	1	6, 7, 8			EL0	DGT		SPRING, Direct Clutch
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
22	4461 032	1	6, 7, 8			EL0	DGT		SNAP RING, 1.875" OD
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
23	4461 064	AR	6, 7, 8			EL0	DGT		FILTER, Overdrive Clutch
		AR	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
24	4412 583	1	1, 2, 3			EL0	DGT		RETAINER, Transmission O/Drive Clutch Piston
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
	5211 7975	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

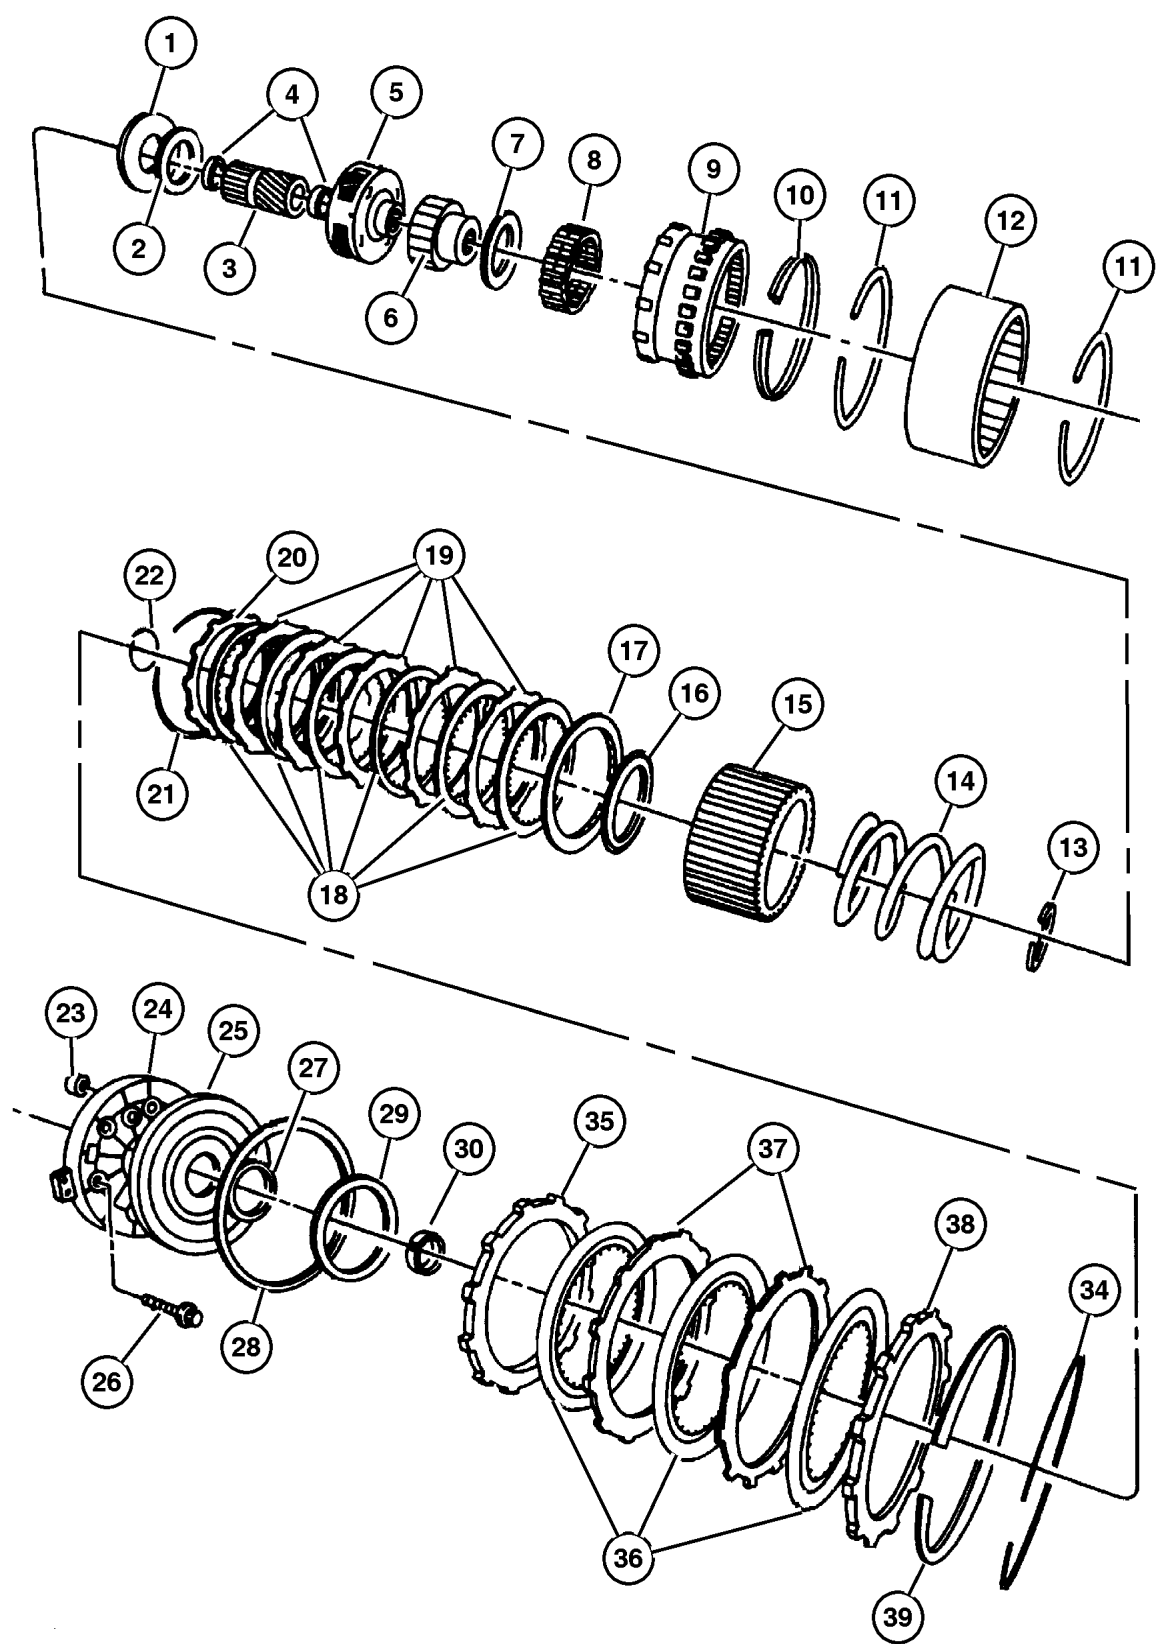
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005


Clutch, Overdrive with Gear train - 46RE [DGT]
Figure 46RE-1010



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
25	5211 8599	1	1, 2, 3			EM0	DGT		PISTON, Overdrive Clutch
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
26	0152 796	1	1, 2, 3			EM0	DGT		SCREW, .25-20
		1	6, 7, 8			EM0	DGT		
		6	1, 2, 3			EL0	DGT		
		6	6, 7, 8			EL0	DGT		
27	4431 697	6	6, 7, 8			EM0	DGT		SEAL, Overdrive Clutch Piston
		6	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
28	4431 696	1	1, 2, 3			EL0	DGT		SEAL, Overdrive Clutch Piston
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
29	4431 585	1	6, 7, 8			EM0	DGT		PLATE, Transmission O/Drive Clutch .123-.125" Thick
		1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
	4431 586	1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
	4431 587	1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
4431 588		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
4431 590		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EL0	DGT		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

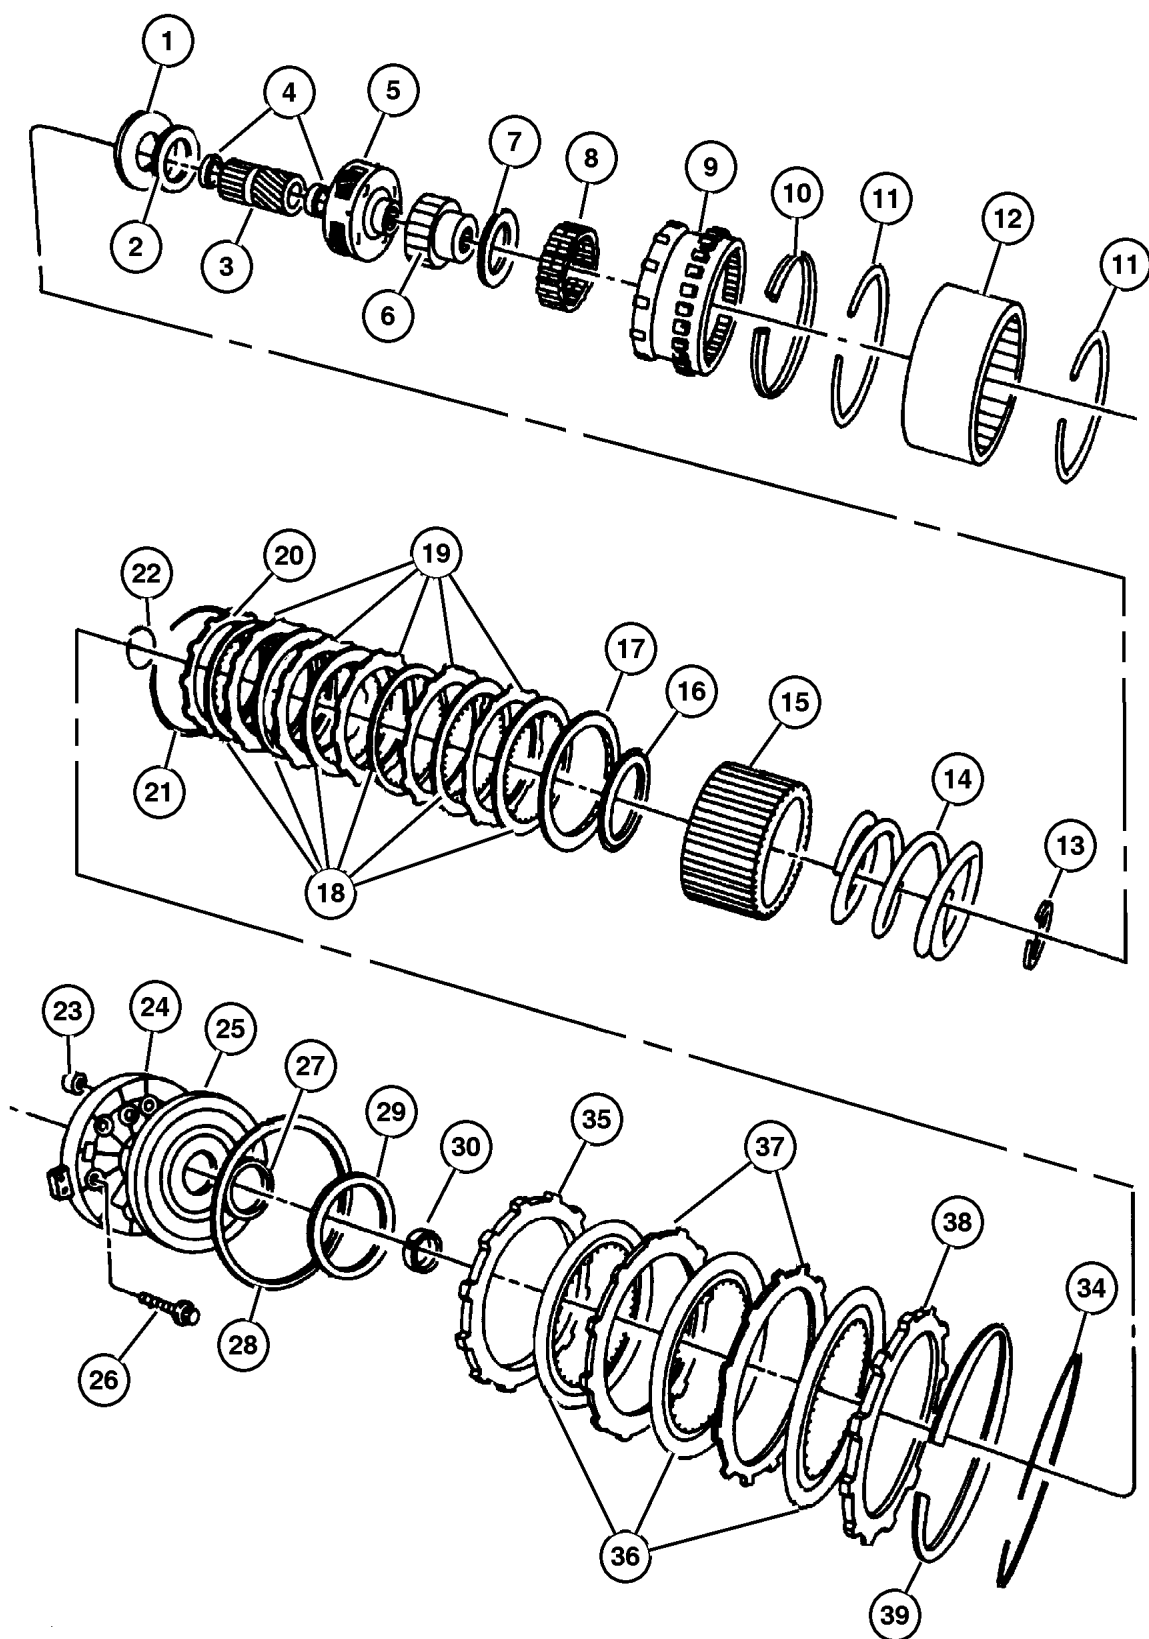Clutch, Overdrive with Gear train - 46RE [DGT]
Figure 46RE-1010




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
4431 731		1	6, 7, 8			EL0	DGT		.243-.245" Thick
		1	1, 2, 3			EM0	DGT		.243-.245" Thick
		1	6, 7, 8			EM0	DGT		.243-.245" Thick
		1	1, 2, 3			EL0	DGT		.138-.140" Thick
		1	6, 7, 8			EL0	DGT		.138-.140" Thick
4431 732		1	1, 2, 3			EM0	DGT		.138-.140" Thick
		1	6, 7, 8			EM0	DGT		.138-.140" Thick
		1	1, 2, 3			EL0	DGT		.168-.170" Thick
		1	6, 7, 8			EL0	DGT		.168-.170" Thick
4431 733		1	1, 2, 3			EM0	DGT		.168-.170" Thick
		1	6, 7, 8			EM0	DGT		.168-.170" Thick
		1	1, 2, 3			EL0	DGT		.198-.200" Thick
		1	6, 7, 8			EL0	DGT		.198-.200" Thick
4431 734		1	1, 2, 3			EM0	DGT		.198-.200" Thick
		1	6, 7, 8			EM0	DGT		.198-.200" Thick
		1	1, 2, 3			EL0	DGT		.228-.230" Thick
		1	6, 7, 8			EL0	DGT		.228-.230" Thick
4431 735		1	1, 2, 3			EM0	DGT		.228-.230" Thick
		1	6, 7, 8			EM0	DGT		.228-.230" Thick
		1	1, 2, 3			EL0	DGT		.108-.110" Thick
		1	6, 7, 8			EL0	DGT		.108-.110" Thick
30		1	1, 2, 3			EM0	DGT		.108-.110" Thick
		1	6, 7, 8			EM0	DGT		.108-.110" Thick SPACER, Intermediate Shaft, 1.58mm
4431 916		1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
-31									SPACER, Intermediate Shaft, .175
4431 917		1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
-32									SPACER, Intermediate Shaft, .193
4431 918		1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
-33									SPACER, Intermediate Shaft, .211

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

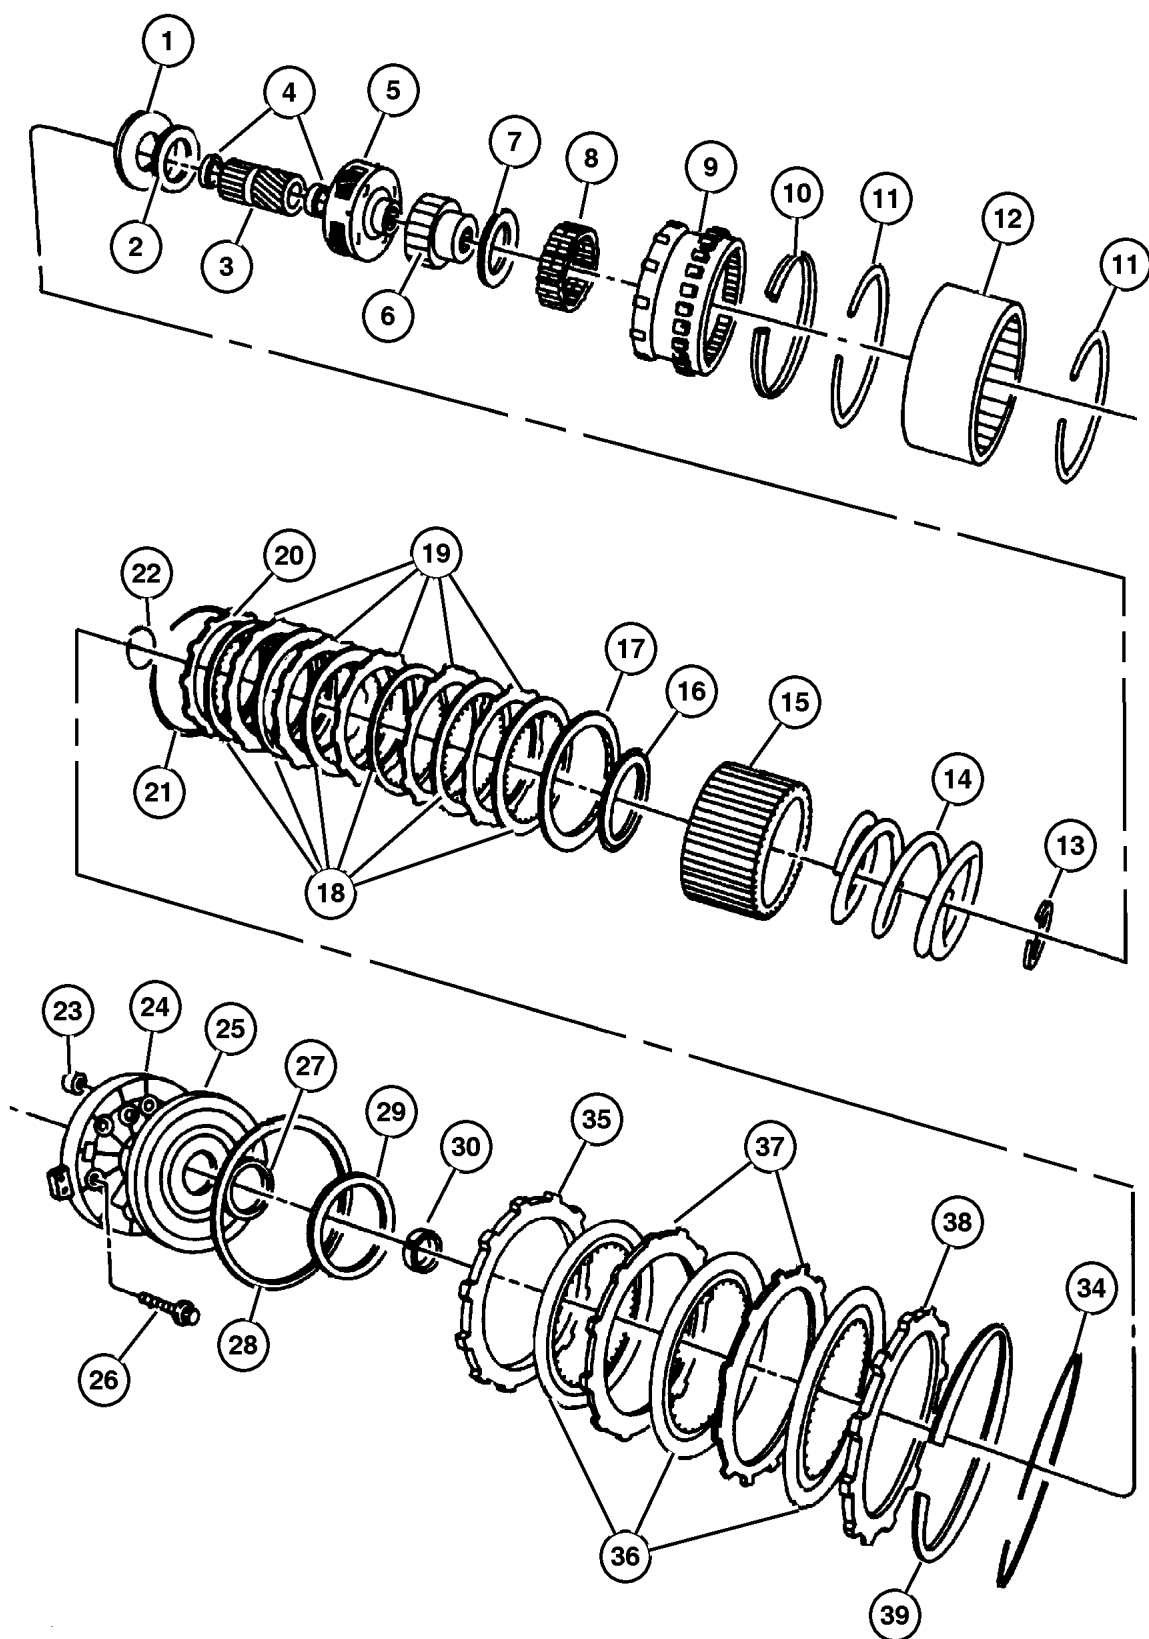
Clutch, Overdrive with Gear train - 46RE [DGT]
Figure 46RE-1010



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4431 919	1	1, 2, 3			EL0	DGT		
		1	6, 7, 8			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
		1	6, 7, 8			EM0	DGT		
34									SNAP RING, 6.50 OD
	4461 065	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		
35									PLATE, Transmission Clutch Reaction
	4461 033	2	1, 2, 3			EL0			
		2	1, 2, 3			EM0	DGT		
36									PLATE, Transmission Clutch Reaction
	4461 047	3	6, 7, 8			EL0	DGT		
		3	6, 7, 8			EM0	DGT		
		3	1, 2, 3			EL0			
		3	1, 2, 3			EM0	DGT		
37									DISC, Direct Clutch
	4461 181	4	6, 7, 8			EL0	DGT		
		4	6, 7, 8			EM0	DGT		
		4	1, 2, 3			EL0			
		4	1, 2, 3			EM0	DGT		
38									PLATE, Transmission Clutch Reaction
	4461 033	2	1, 2, 3			EL0			
		2	1, 2, 3			EM0	DGT		
39									SPRING, Overdrive Clutch
	4461 066	1	6, 7, 8			EL0	DGT		
		1	6, 7, 8			EM0	DGT		
		1	1, 2, 3			EL0	DGT		
		1	1, 2, 3			EM0	DGT		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

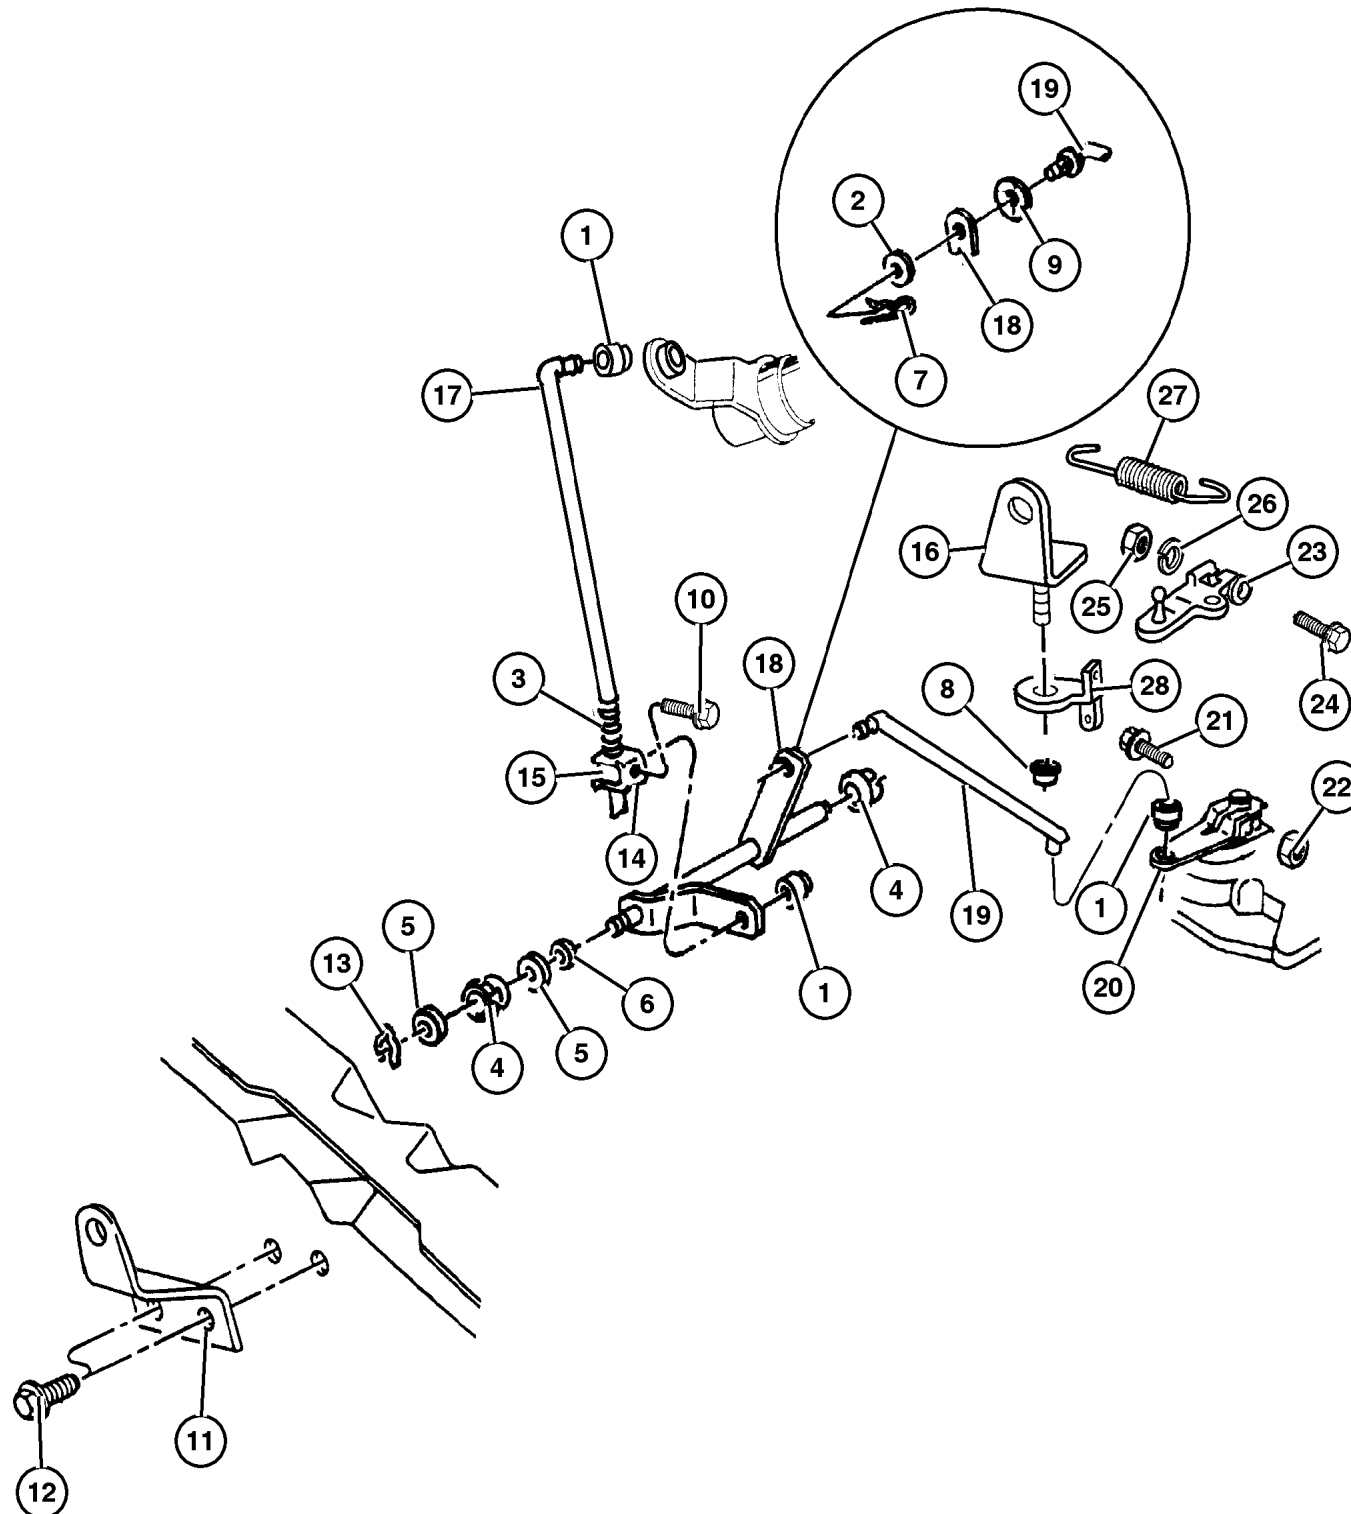Controls, Gearshift Lower - 46RE [DGT] Figure 46RE-1210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes									
[DGT] = 4 Speed Automatic Transmission 46RE									
[ELO] = All 5.2L 8 Cylinder Gas Engines									
[EM0] = All 5.9L 8 Cylinder Gas Engines									
1	3575 333	2					DG0		GROMMET, Control Rod Front
2	J012 0393	1					DGT		WASHER, Flat
3	3575 354	1					DG0		SPRING, Gearshift Control Rod
4	3467 800	2					DG0		BUSHING, Gearshift Torque Shaft
5	6504 763	2					DGT		WASHER, Flat, M13.5
6	6034 943	1					DGT		WASHER
7	J400 4295	1					DGT		PIN, Rod To Trans Shaft Lever
8	6028 114	1					DG0		NUT, Hex, .437-14
9	J012 0393	1					DGT		WASHER, Flat
10	0181 082	1					DG0		BOLT, Hex Head, 5/16-18x1/2
11	52077 802AD	1					DGT		BRACKET, Gearshift
12									SCREW, (NOT SERVICED) (Not Serviced)
13	6032 475	1					DGT		RING, Transmission Torque Shaft
14	5210 7734	1					DG0		CLAMP
15	3575 334	1					DG0		SWIVEL, Gearshift Control Rod
16	52107 806AA	1				ELO, EMO	DGT		BRACKET, Torque Shaft
17	52107 699AB	1					DG0		ROD, Gear Shift Control
18	52079 228AC	1					DGT		TORQUE SHAFT, Gearshift
19	52107 780AA	1					DGT		ROD, Gear Shift Control, Transmission
20	52107 825AA	1					DGP, DGT		LEVER, Manual Control
21	0180 034	1					DGP, DGT		SCREW AND WASHER, Hex Head, .25-20x1.50
22	0115 984	1					DGP, DGT		NUT, Brake Line
23	5207 9065	1					DG0		LEVER, Throttle Valve
24	0181 065	1					DG0		BOLT, Hex Head, .25-20x1.00
25	0115 984	1					DGP, DGT		NUT, Brake Line
26	0138 165	1					DG0		WASHER, Lock
27	5300 9055	1					DG0		SPRING, Throttle Valve Return
28	5207 8718	1					DG0		BRACKET, Throttle Valve Spring

DODGE RAM QUAD CAB/CLUB CAB (BE)


SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, ELO = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

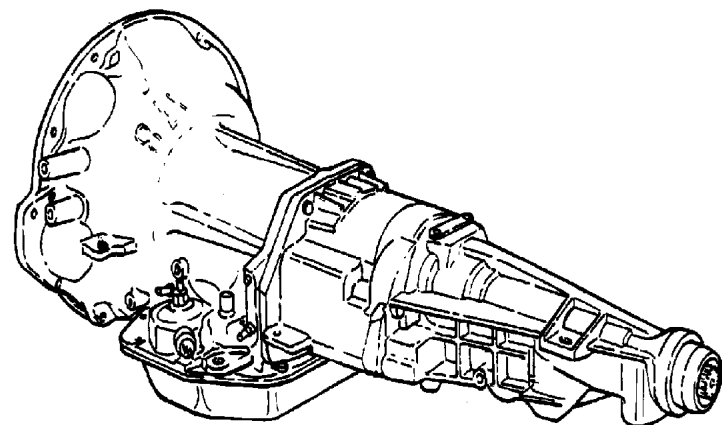September 16, 2005

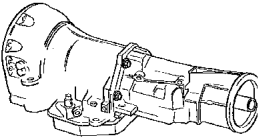
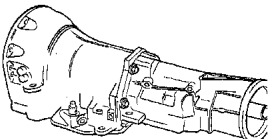

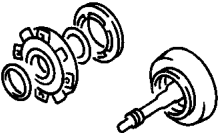
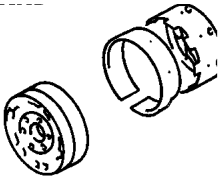
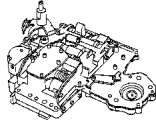
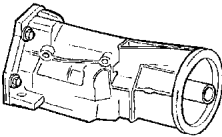

Group – 47RE

Automatic Transmission 4 Speed



GROUP 47RE - Automatic Transmission 4 Speed

Illustration Title	Group-Fig. No.
Transmission Assembly	
Transmission Assembly - 47RE [DGP]	Fig. 47RE-110
Case and Extension	
Case and Related parts - 47RE [DGP]	Fig. 47RE-210
Extension - 47RE [DGP]	Fig. 47RE-220
Oil Pump	
Pump, Oil With Reaction Shaft - 47RE [DGP]	Fig. 47RE-310
Gear Train	
Clutch, Front and Rear with Gear Train - 47RE [DGP]	Fig. 47RE-410
Gear Train and Intermediate Shaft - 47RE [DGP]	Fig. 47RE-420
Output Shaft - 47RE [DGP]	Fig. 47RE-430
Bands, Reverse and Kickdown	
Bands, Reverse and Kickdown with Linkage - 47RE [DGP]	Fig. 47RE-510
Valve Body	
Valve Body - 47RE [DGP]	Fig. 47RE-710
Servos, Accumulator Piston and Spring - 47RE [DGP]	Fig. 47RE-720
Overdrive Gear Train	
Clutch, Overdrive with Gear Train - 47RE [DGP]	Fig. 47RE-1010
Gearshift Controls	
Controls, Gearshift Lower - 47RE [DGP]	Fig. 47RE-1210

47RE-100 Transmission Assembly	47RE-200 Case and Extension	47RE-300 Oil Pump	47RE-400 Gear Train
			
47RE-500 Bands, Reverse and Kickdown	47RE-700 Valve Body	47RE-1000 Overdrive Gear Train	47RE-1200 Gearshift Controls
			

Transmission Assembly - 47RE [DGP]
Figure 47RE-110

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


NOTES; Sales Codes
[DGP] = 4 Speed Automatic Transmission 47RE
[ET0] = All 5.9L Diesel Engines
[EW0] = All 8.0L Gas Engines

1	TRANSMISSION PACKAGE								
	5014 773AA	1	1, 2, 3			ET0	DGP		52119850AA(Package Contains, 52119850AA Transmission, 52118868 Converter, K6033439 Bolts)
	5014 774AA	1	1, 2, 3			EW0	DGP		52119850AA(Package contains 52119850AA Transmission, 52118506 Convereter, K6033439 Bolts)
	5014 775AA	1	6, 7, 8			ET0	DGP		52119851AA(Package Contains 52119851AA Transmission, 52118868 Converter, K6033439 Bolts)
	5014 776AA	1	6, 7, 8			EW0	DGP		52119851AA(Pagakge Contains, 52119851AA Transmission, 52118506 Converter, K6033439 Bolts)
-2	5211 8158	1	6, 7, 8				DGP		OVERDRIVE
	5211 8786	1	1, 2, 3				DGP		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

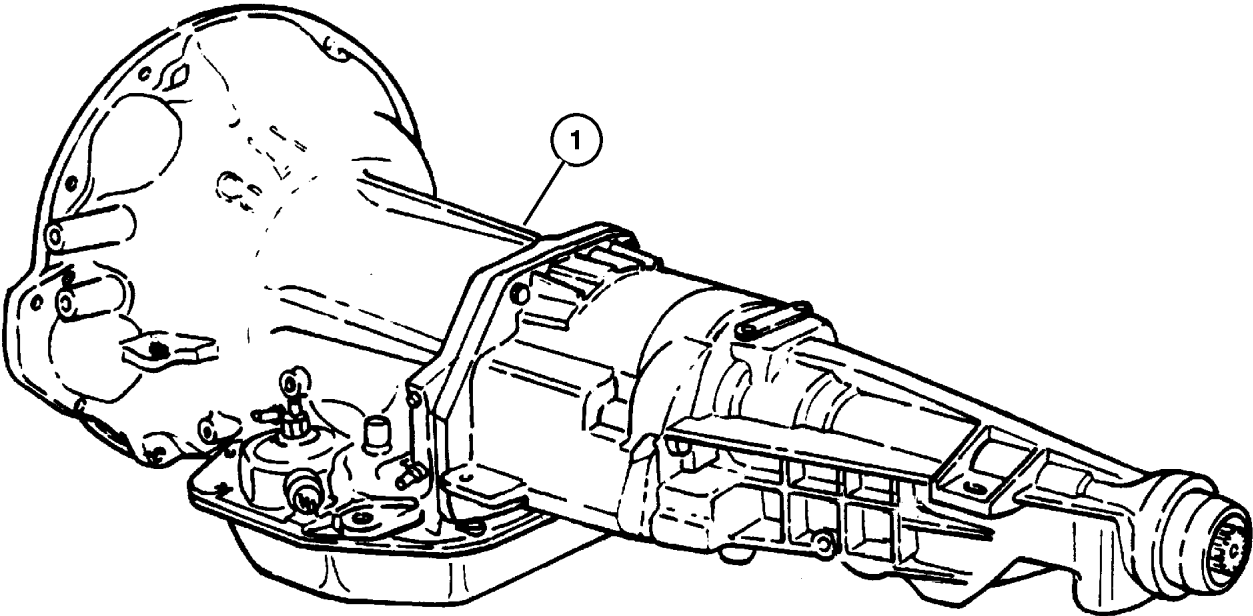September 16, 2005



Case and Related parts - 47RE [DGP] Figure 47RE-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES; Sales Codes

[DGP] = 4 Speed Automatic Transmission 47RE

[ET0] = All 5.9L Diesel Engines

[EW0] = All 8.0L Gas Engines

-1									SEAL AND GASKET PACKAGE, Transmission
	4863 884AF-	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
2	5211 7614	1				EW0	DBB		COVER, Transmission Case
3	5211 8621	1					DGP		TUBE, Transmission Oil Filler
4	52118 629AB	1					DG0		SEAL, Oil Filler Tube
5	52107 769AA	1					DGT		INDICATOR, Transmission Fluid Level
6									MAGNET, Transmission
	3681 601	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
7									GASKET, Oil Pan
	2464 324	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
8									PAN, Transmission Oil
	5211 8780	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
9									SCREW AND WASHER, Hex Head, .312-18x.625
	4723 548	12	1, 2, 3				DGP		
		12	6, 7, 8				DGP		
10	4428 472	1					DGP		COVER, Transmission Dust
11	6024 487	8				ET0	DGP		SCREW AND WASHER, Hex Head, .375-16x1.75
12	6024 473	2					DG0		SCREW AND WASHER, Hex Head, .437-14x2.00
13									SCREW
	6036 115AA	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
14									SWITCH, Neutral, Safety, Back Up
	56028 181AB	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
15									WASHER, Switch
	2408 143	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
16									PLUG, Pressure Check

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE

1, 6 = 1500

2, 7 = 2500

3, 8 = 3500

BODY

31 = Club Cab (138WB)

33 = QuadCab(138WB)

34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.

ETC, ET0, ETH = 5.9L 6 Cil.

EML, EMM,EM0 = 5.9L 8 Cil.

EWA, EW0 = 8.0L 10 Cyl.

EAA = All Engines

EAG = All Gas Engines

TRANSMISSION

DGP = 47RE 4 Speed Auto.

DGT, DG0 = 46RE 4 Speed Auto.

DDX, DDC = 5 Speed HD Manual

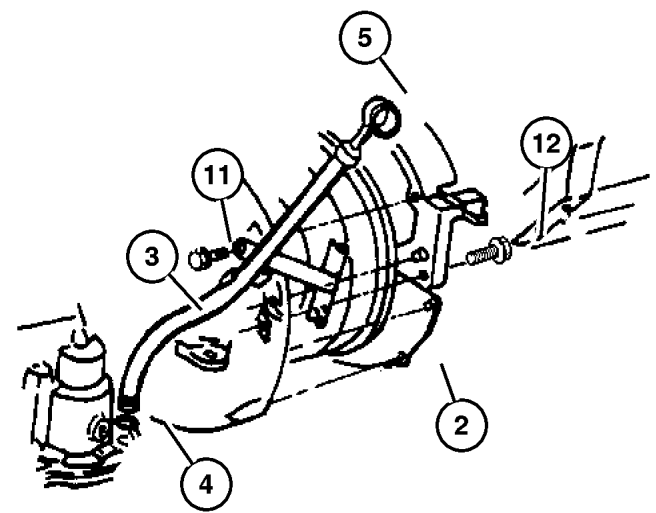
DDP, DD0 = 5 Speed Manual

DEE = 6 Speed HD Manual


AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Case and Related parts - 47RE [DGP]
Figure 47RE-210




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	6028 095	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
17	6022 266	4				EL0, EM0, EW0	DG0		SCREW, Hex Head, .375-16x1.5
18									CASE, Transmission
	5211 8758	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
19									CONNECTOR, Oil Cooler Tube
	52028 764AA	2	1, 2, 3				DGP		
		2	6, 7, 8				DGP		
-20									SENSOR, Transmission Output Speed
	4800 879	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		

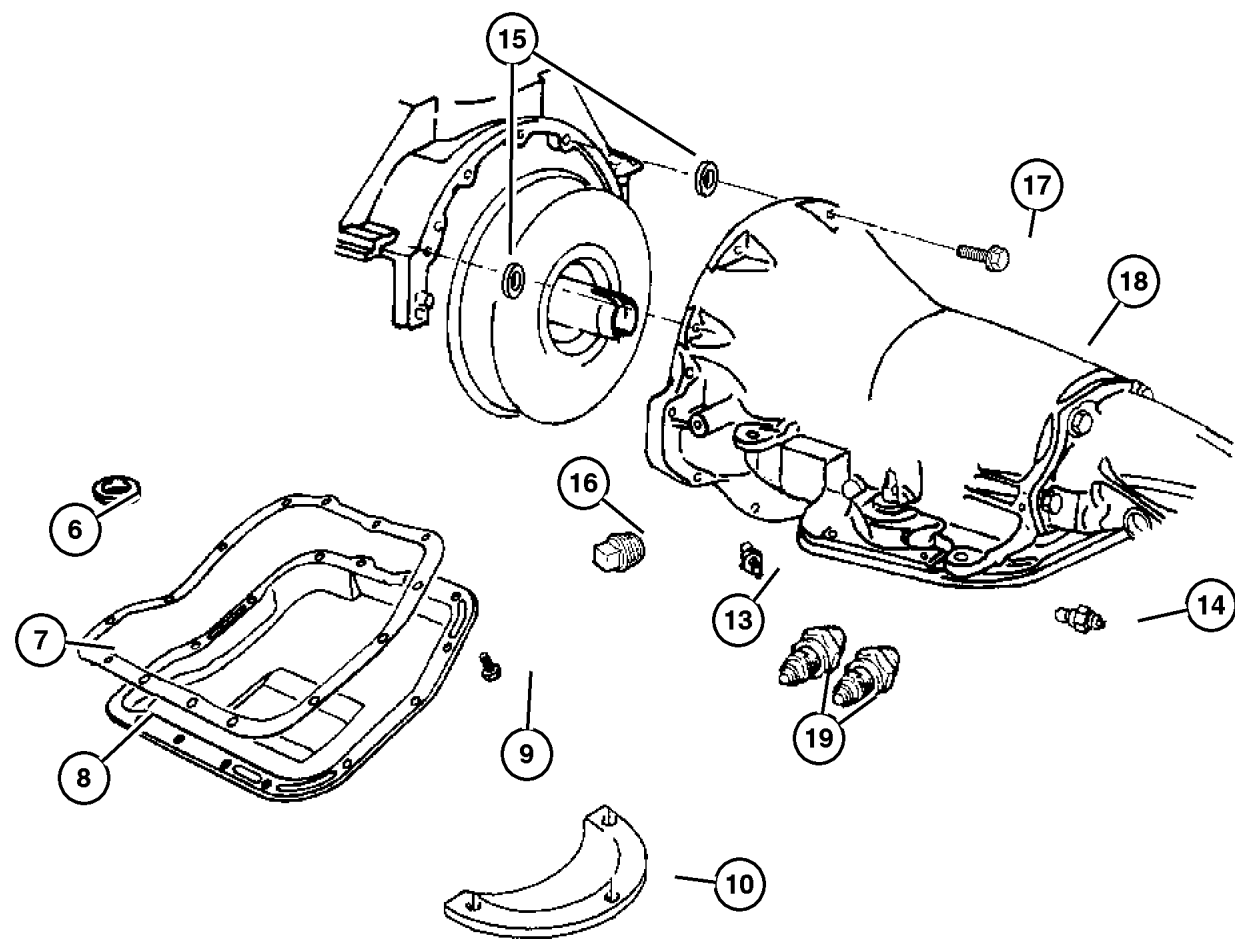

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

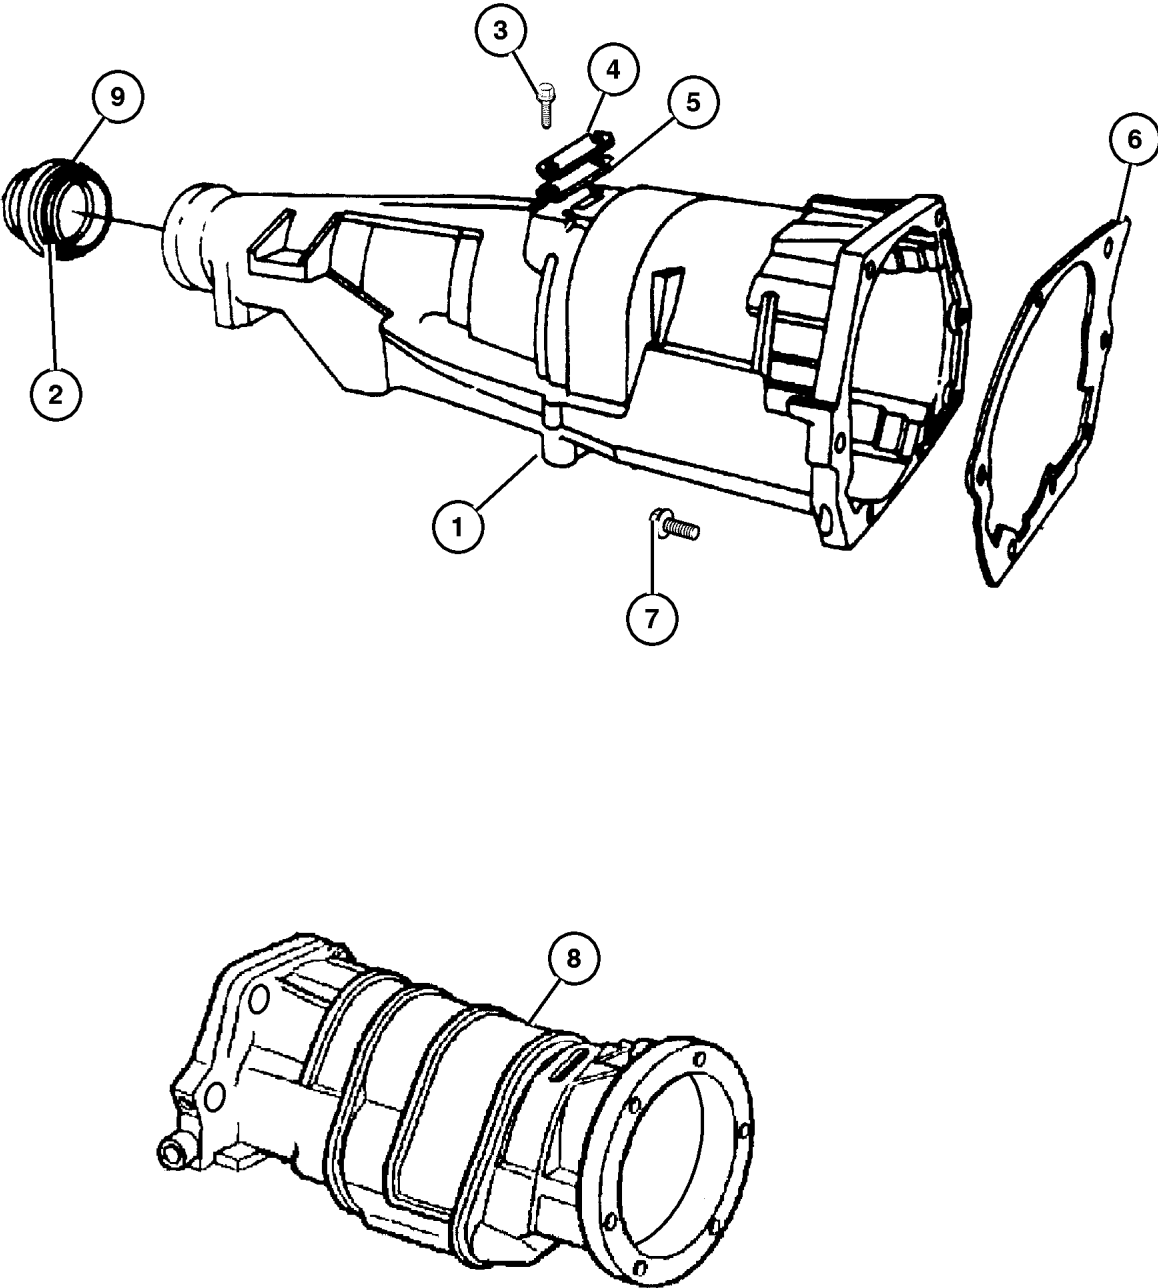Extension - 47RE [DGP]
Figure 47RE-220




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES; Sales Codes									
[DGP] = 4 Speed Automatic Transmission 47RE									
[ET0] = All 5.9L Diesel Engines									
[EW0] = All 8.0L Gas Engines									
1	5003 231AA	1	1, 2, 3				DGP		CASE, Transmission Rear
2	4531 216	1	1, 2, 3				DGP		SEAL, Extension Yoke
3									SCREW, (NOT SERVICED) (Not Serviced)
4									COVER, Transmission Converter
	2466 957	1	6, 7, 8				DGP		
		1	1, 2, 3				DGP		
5	2801 398	1	6, 7, 8				DGP		GASKET, Transmission
		1	1, 2, 3			ET0	DGP		
6	4471 565	1	1, 2, 3				DGP		GASKET, Overdrive Piston Retainer
		1	6, 7, 8				DGP		
7									SCREW, Hex Flange Head, .375-16x1.38
	6036 046AA	7	1, 2, 3				DGP		
		7	6, 7, 8				DGP		
8	4798 535	1	6, 7, 8				DGP		ADAPTER, Transfer Case
9	4269 956	1	6, 7, 8				DGP		SEAL, Adapter

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

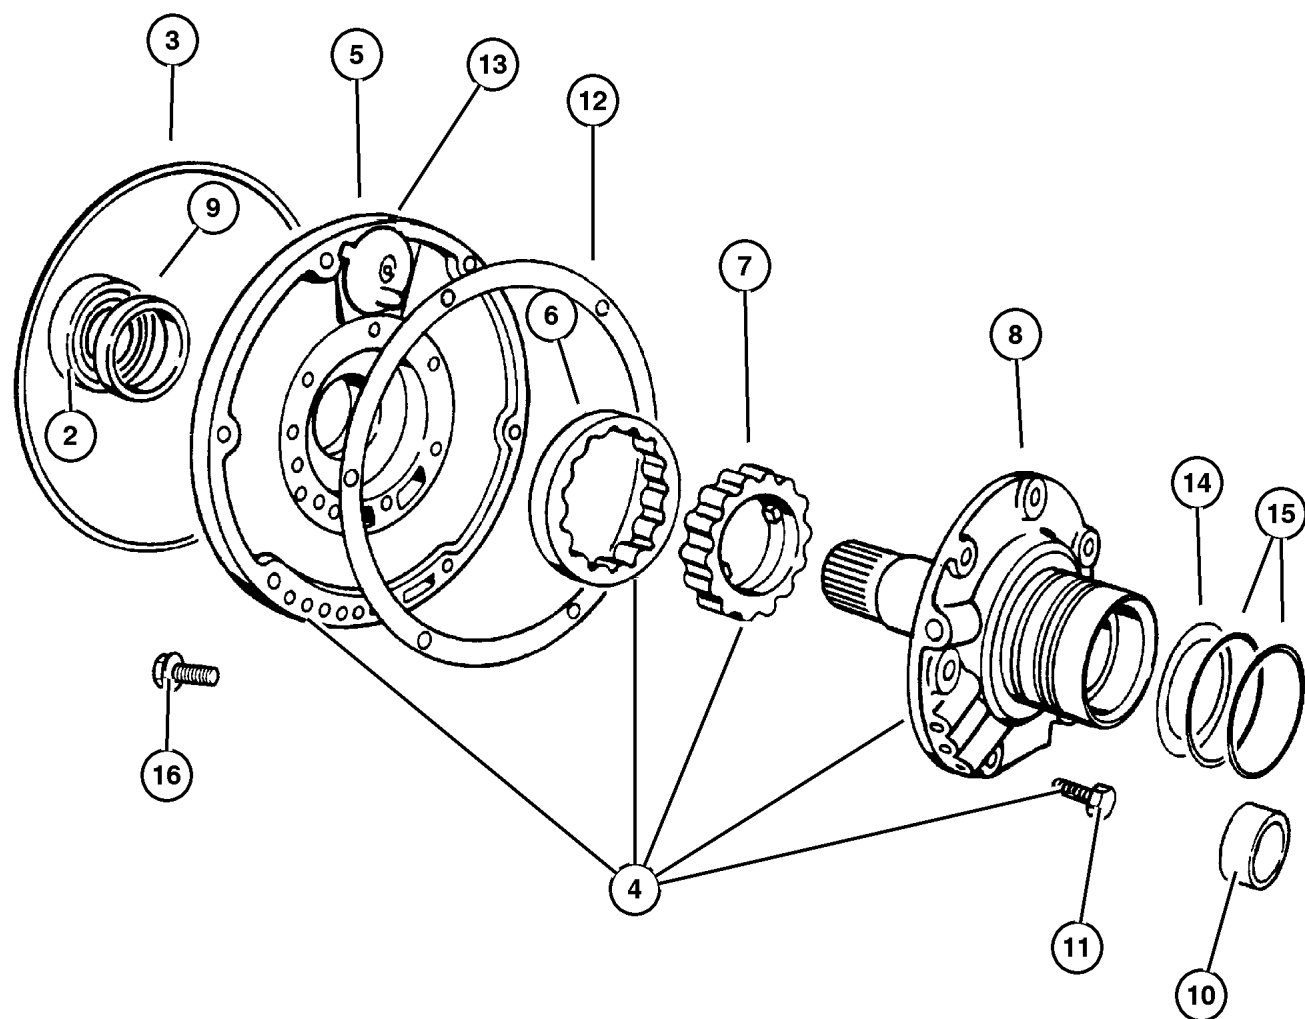Pump, Oil With Reaction Shaft - 47RE [DGP]
Figure 47RE-310



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES; Sales Codes									
[DGP] = 4 Speed Automatic Transmission 47RE									
-1									GASKET AND SEAL PACKAGE, Transmission Oil Pump
	4746 109AB-	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
2	4531 225	1	1, 2, 3				DGP		SEAL, Impeller Hub, 57.25mm OD
		1	6, 7, 8				DGP		
3	1942 021	1	1, 2, 3				DGP		SEAL, Front Pump Housing
		1	6, 7, 8				DGP		
4									PUMP PACKAGE, Transmission
	4796 467AB	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
5									HOUSING, Pump, (NOT SERVICED) (Not Serviced)
6									ROTOR, Oil Pump, (NOT SERVICED) (Not Serviced)
7									ROTOR, Oil Pump, (NOT SERVICED) (Not Serviced)
8									SHAFT, Oil Pump, (NOT SERVICED) (Not Serviced)
9									BUSHING, (NOT SERVICED) (Not Serviced)
10									BUSHING, (NOT SERVICED) (Not Serviced)
11	0179 815	6	1, 2, 3				DGP		SCREW, Hex Head, .312-18x.687
		6	6, 7, 8				DGP		
12	4028 377	1	1, 2, 3				DGP		GASKET, Transmission Oil Pump
		1	6, 7, 8				DGP		
13	3420 087	1	1, 2, 3				DGP		BAFFLE PACKAGE, Pump
		1	6, 7, 8				DGP		
14	4617 161	1	1, 2, 3				DGP		THRUST WASHER, Front Clutch
		1	6, 7, 8				DGP		
15									SEAL, Reaction Shaft

DODGE RAM QUAD CAB/CLUB CAB (BE)


SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Pump, Oil With Reaction Shaft - 47RE [DGP]
Figure 47RE-310

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	3743 689	2	1, 2, 3				DGP		
		2	6, 7, 8				DGP		
16									SCREW AND WASHER, Hex Flange Head, .312-18x1.375
	6023 943	7	1, 2, 3				DGP		
		7	6, 7, 8				DGP		

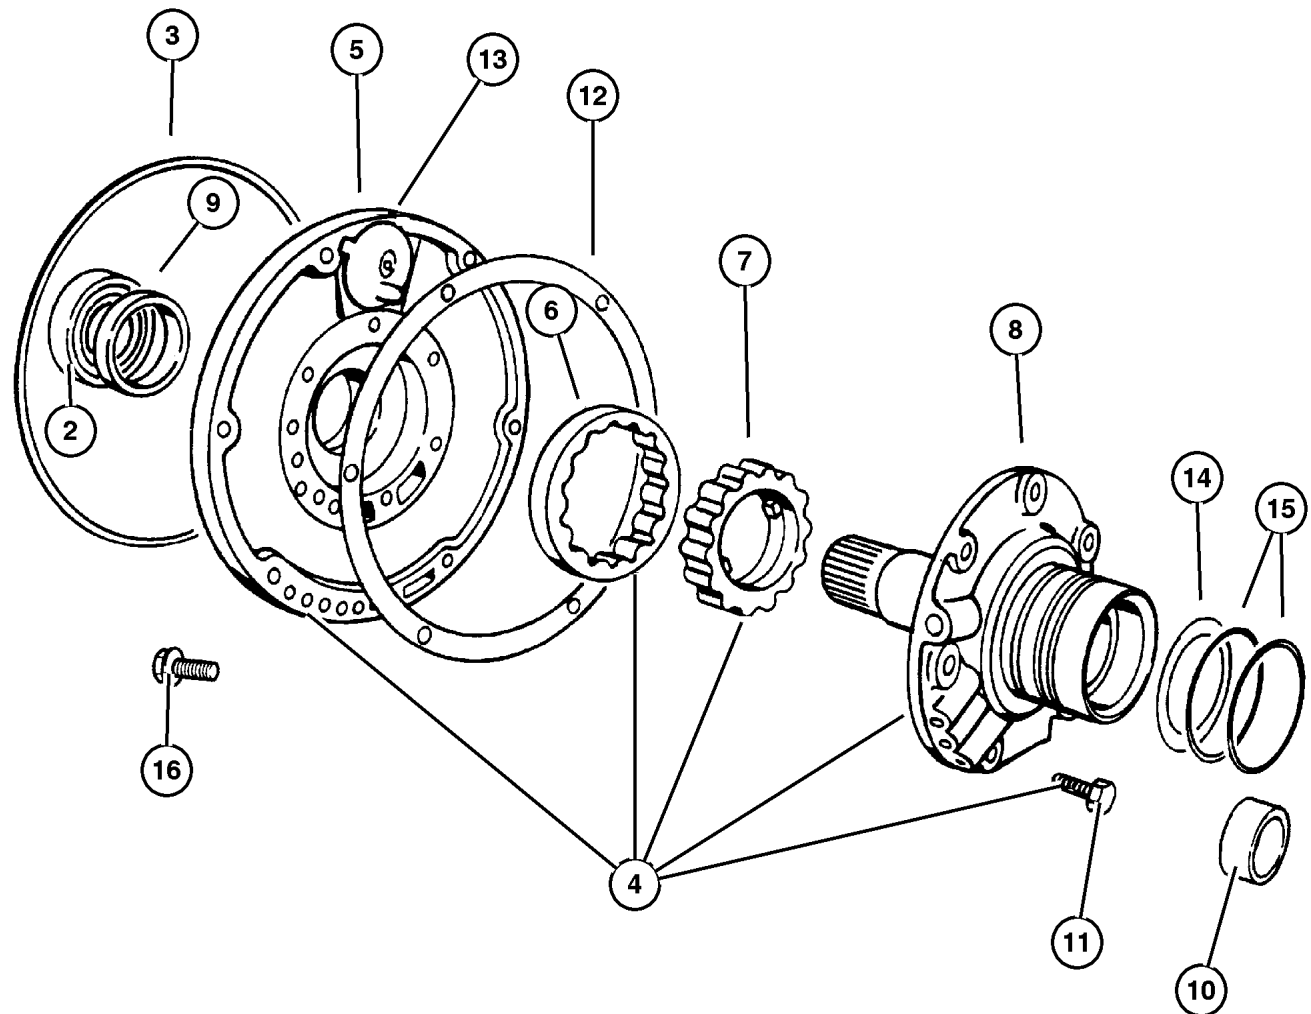


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

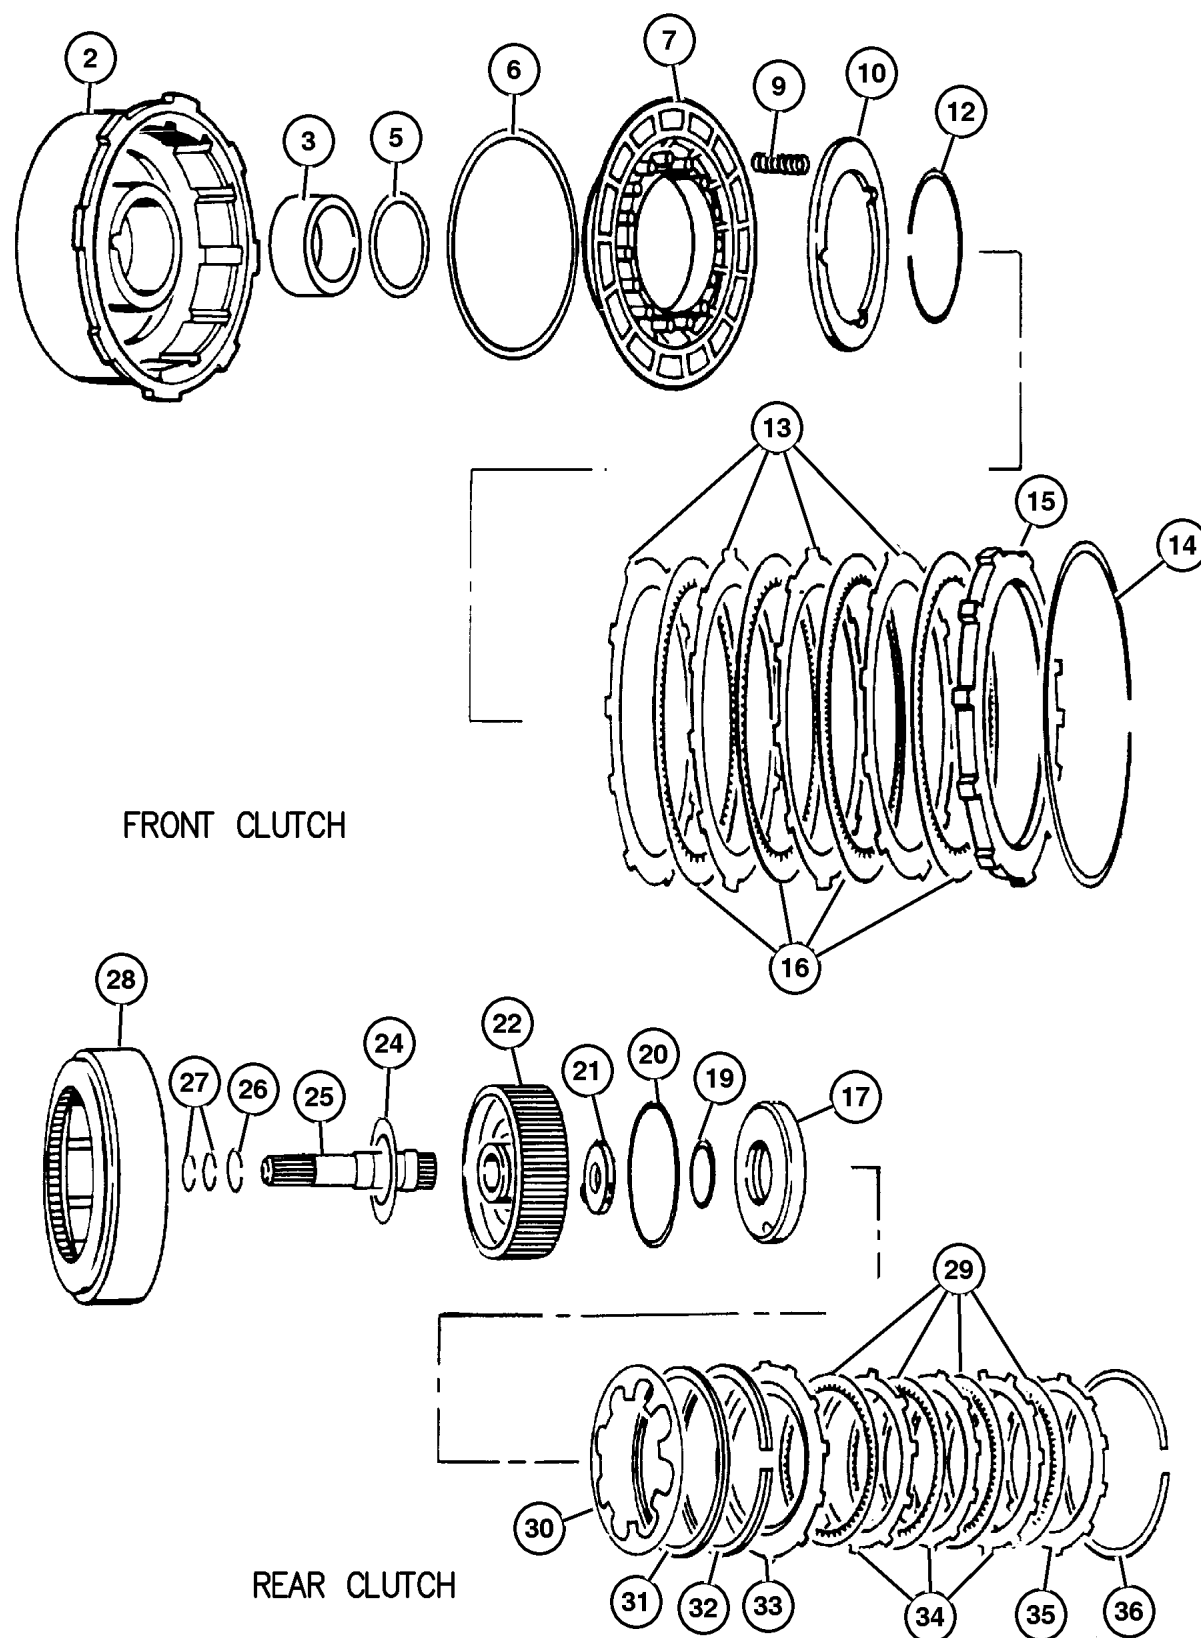Clutch, Front and Rear with Gear Train - 47RE [DGP] Figure 47RE-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES; Sales Codes									
[DGP] = 4 Speed Automatic Transmission 47RE									
[EM0] = All 5.9L 8 Cylinder Gas Engines									
-1									SEAL PACKAGE, Transmission Clutch
	4637 078	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
2	4058 648AB	1	1, 2, 3				DGP		RETAINER, Clutch
		1	6, 7, 8				DGP		
3	4058 647	1	1, 2, 3				DGP		BUSHING, Front Clutch
		1	6, 7, 8				DGP		
-4									CHECK BALL, Dia-.187
	0147 483	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
5									SEAL, Front Clutch Piston
	3410 226	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
6	4058 484	1	1, 2, 3				DGP		SEAL, Front Piston Clutch
		1	6, 7, 8				DGP		
7	2464 651AB	1	1, 2, 3				DGP		PISTON, Clutch
		1	6, 7, 8				DGP		
-8									CHECK BALL, Dia-.187
	0147 483	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
9									SPRING, Front Clutch
	2801 243	9	1, 2, 3				DGP		
		9	6, 7, 8				DGP		
10	2801 949	1	1, 2, 3				DGP		RETAINER, Transmission
		1	6, 7, 8				DGP		
-11									CHECK BALL, Dia-.187
	0147 483	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
12									SNAP RING
	2124 824	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
13									PLATE, Clutch Separator

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

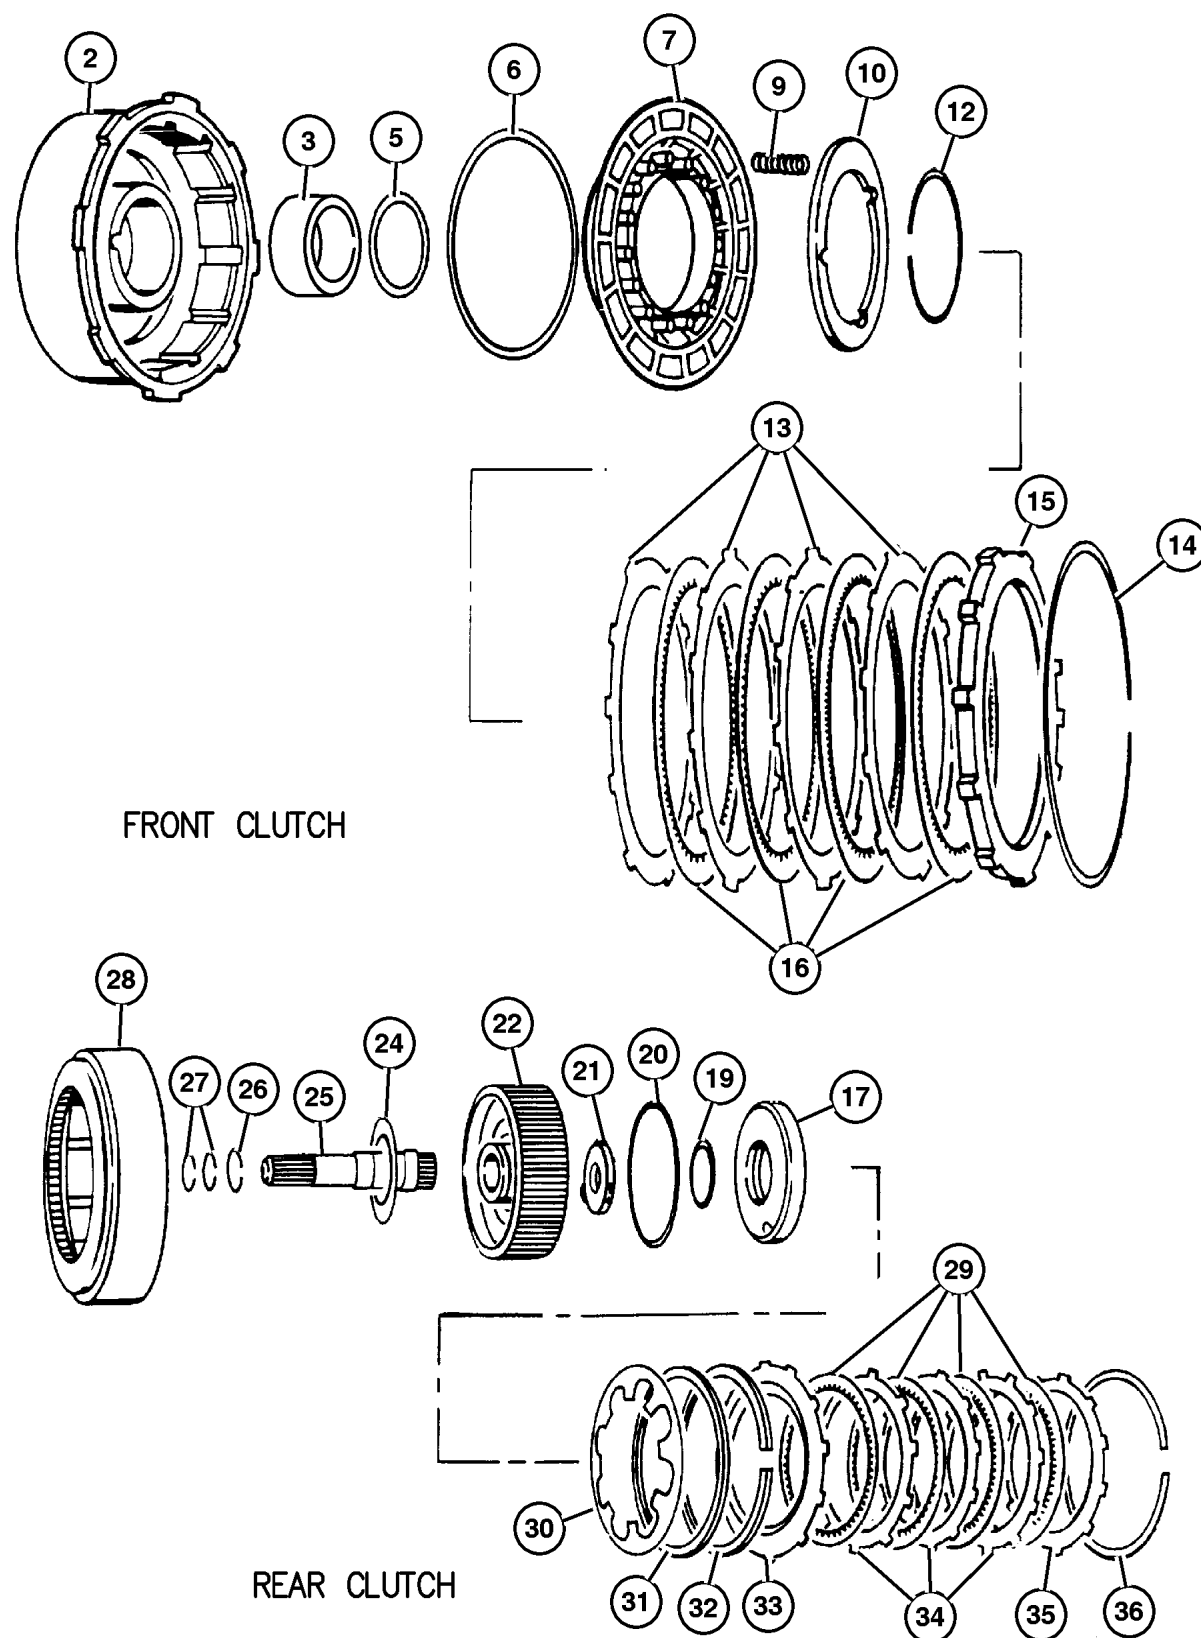
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Clutch, Front and Rear with Gear Train - 47RE [DGP]
Figure 47RE-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	2124 826AB	4	1, 2, 3				DGP		
		4	6, 7, 8				DGP		
14	3410 570	1	1, 2, 3				DGP		SNAP RING
		1	6, 7, 8				DGP		
15									PLATE, Transmission Clutch Reaction
	4617 567	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
16	4617 201AB	4	6, 7, 8				DGP		DISC, Direct Clutch
		3	6, 7, 8			EM0	DGT		
17									PISTON, Clutch
	3743 624AB	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
-18	0147 483	1	1, 2, 3				DGP		CHECK BALL, Dia-.187
		1	6, 7, 8				DGP		
19	1942 054	1	1, 2, 3				DGP		SEAL, Rear Clutch Piston
		1	6, 7, 8				DGP		
20	2124 835	1	1, 2, 3				DGP		SEAL, Rear Clutch Piston
		1	6, 7, 8				DGP		
21									THRUST WASHER, Output Shaft, Red .068
	4505 186	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
22									RETAINER, Transmission
	4617 855	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
-23	4058 443	1	1, 2, 3				DGP		SEAL, Rear Clutch Retainer
		1	6, 7, 8				DGP		
24	4617 161	1	1, 2, 3				DGP		THRUST WASHER, Front Clutch
		1	6, 7, 8				DGP		
25	4617 396	1	1, 2, 3				DGP		INPUT SHAFT, Transmission
		1	6, 7, 8				DGP		
26									SNAP RING

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

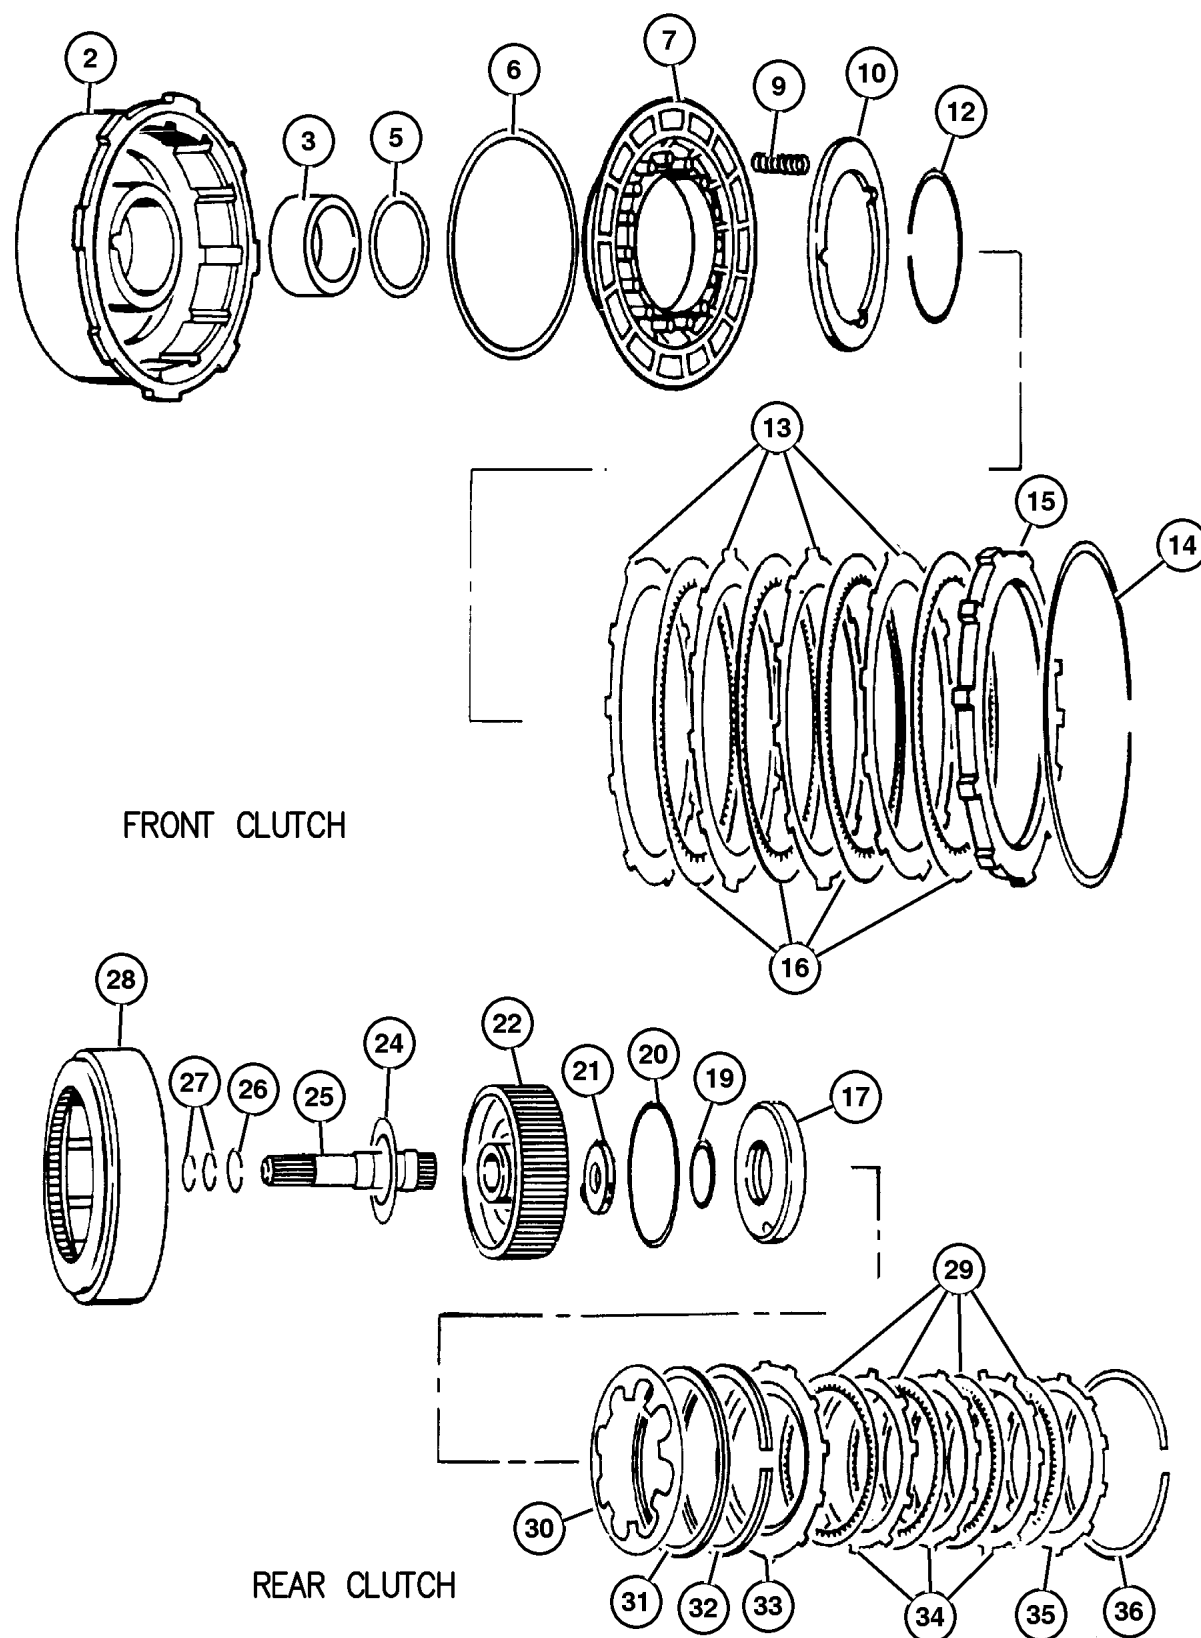
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Clutch, Front and Rear with Gear Train - 47RE [DGP] Figure 47RE-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	2124 872	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
27	4617 418AB	1	1, 2, 3				DGP		SEAL, Input Shaft
		1	6, 7, 8				DGP		
28	3743 622	1	1, 2, 3				DGP		RETAINER, Rear Clutch
		1	6, 7, 8				DGP		
29									DISC, Clutch
	2801 992AB	4	1, 2, 3				DGP		
		4	6, 7, 8				DGP		
30	3743 621AB	1	1, 2, 3				DGP		SPRING, Rear Clutch Piston
		1	6, 7, 8				DGP		
31	3515 077	1	1, 2, 3				DGP		SPACER, Rear Clutch Piston
		1	6, 7, 8				DGP		
32	2466 806	1	1, 2, 3				DGP		SPRING, Rear Clutch
		1	6, 7, 8				DGP		
33									PLATE, Clutch Pressure
	2466 803	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
34	52118 812AA	3	1, 2, 3				DGP		PLATE, Clutch Separator
		3	6, 7, 8				DGP		
35									PLATE, Transmission Clutch Reaction
	4617 567	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
36									SNAP RING
	1942 063	1	1, 2, 3				DGP		.060"-.062 Thick
		1	6, 7, 8				DGP		.060"-.062 Thick
	1942 063AB	1	1, 2, 3				DGP		.065"-.067" Thick
		1	6, 7, 8				DGP		.065"-.067" Thick
	1942 064	1	1, 2, 3				DGP		.074"-.076" Thick
		1	6, 7, 8				DGP		.074"-.076" Thick
	1942 064AB	1	1, 2, 3				DGP		.080"-.082" Thick
		1	6, 7, 8				DGP		.080"-.082" Thick
	1942 065	1	1, 2, 3				DGP		.088"-.090" Thick

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Figure 47RE-410




REAR CLUTCH

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

September 16, 2005

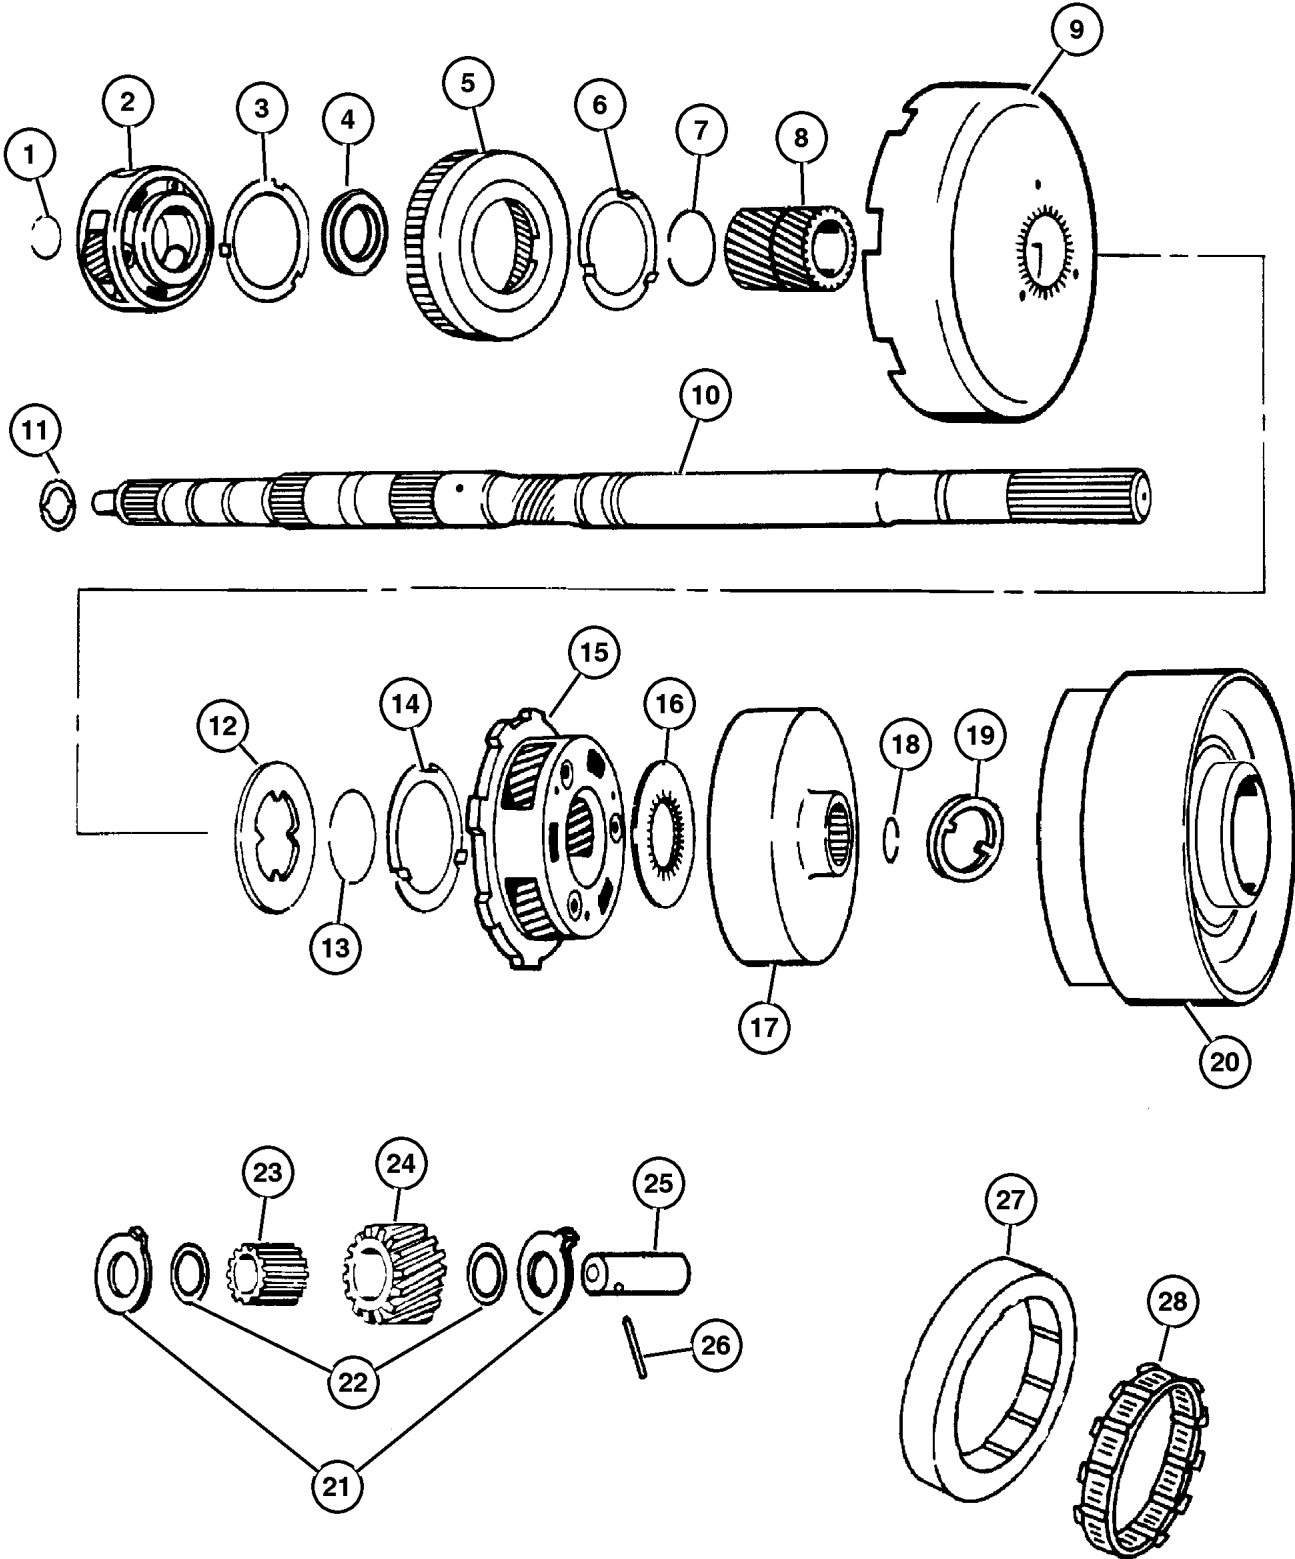Gear Train and Intermediate Shaft - 47RE [DGP]
Figure 47RE-420



FRONT & REAR PLANET PINION CARRIER GEARS

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES; Sales Codes

[DGP] = 4 Speed Automatic Transmission 47RE

1	6024 311	1	1, 2, 3				DGP		SNAP RING, 1.108 Free Diameter
		1	6, 7, 8				DGP		.055"-.059" Thick
	6024 312	1	1, 2, 3				DGP		.055"-.059" Thick
		1	6, 7, 8				DGP		.062"-.066" Thick
2	4617 998	1	1, 2, 3				DGP		CARRIER, Planetary Pinion
		1	6, 7, 8				DGP		.062"-.066" Thick
3	4539 129	1	1, 2, 3				DGP		THRUST WASHER, Planetary Carrier
		1	6, 7, 8				DGP		
4	4617 951	1	1, 2, 3				DGP		BUSHING, Support Case
		1	6, 7, 8				DGP		
5	2892 656	1	1, 2, 3				DGP		GEAR, Front Annulus
		1	6, 7, 8				DGP		
6	4618 000	1	1, 2, 3				DGP		WASHER
		1	6, 7, 8				DGP		
7	1736 521	1	1, 2, 3				DGP		SNAP RING, Sun Gear
		1	6, 7, 8				DGP		
8	2801 311	1	1, 2, 3				DGP		GEAR, Sun
		1	6, 7, 8				DGP		
9	4617 978	1	1, 2, 3				DGP		SHELL, Sun Gear
		1	6, 7, 8				DGP		
10	4617 611	1	1, 2, 3				DGP		INTERMEDIATE SHAFT, Transmission
		1	6, 7, 8				DGP		
11	4505 188	1	1, 2, 3				DGP		PLATE, Transmission Module
		1	6, 7, 8				DGP		
12									PLATE, Sun Gear Driving Shell


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

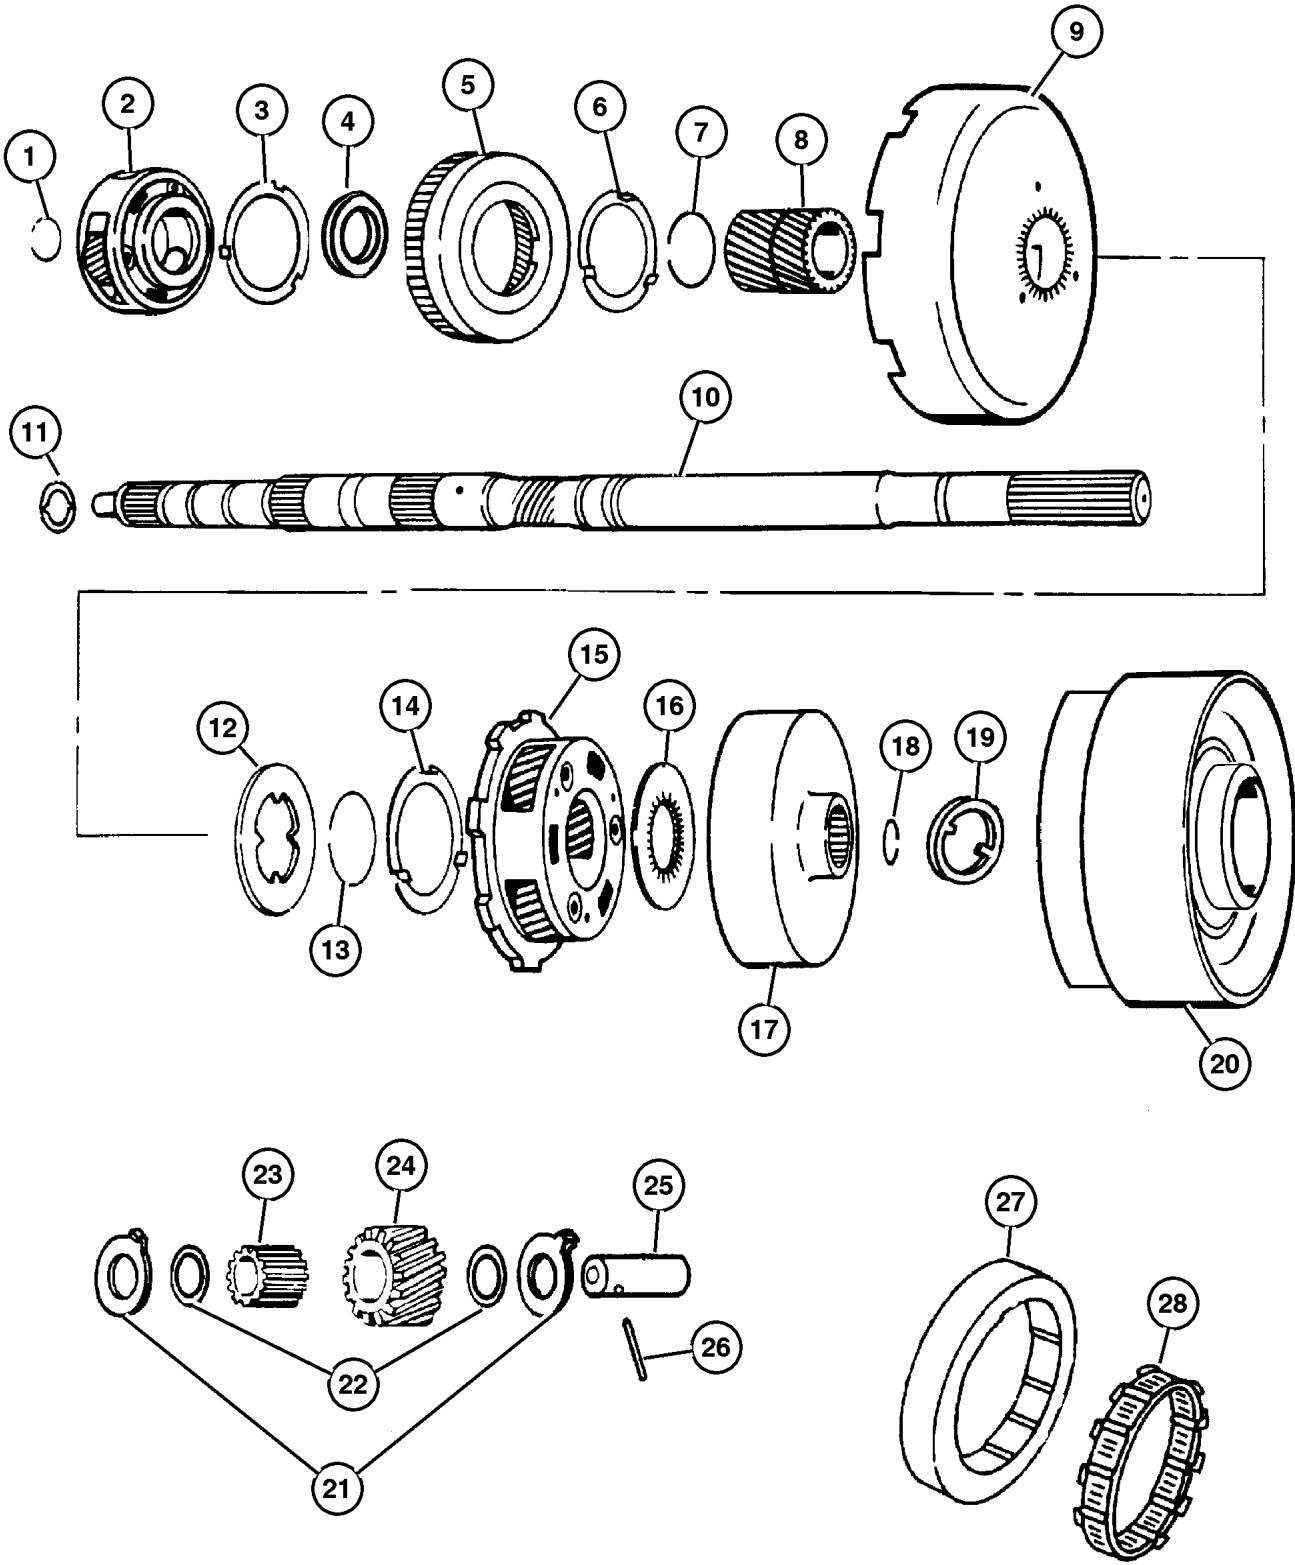Gear Train and Intermediate Shaft - 47RE [DGP]
Figure 47RE-420



FRONT & REAR PLANET PINION CARRIER GEARS

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	1942 080	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
13	1736 521	1	1, 2, 3				DGP		SNAP RING, Sun Gear
		1	6, 7, 8				DGP		
14									THRUST WASHER, Planetary Carrier
	4617 888	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
15									CARRIER, Planetary Pinion
	2801 061	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
16									PLATE, Annulus Gear Thrust
	2400 580	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
17									GEAR, Rear Annulus
	4810 002AB	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
18									SNAP RING
	6033 591	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
19									THRUST WASHER, Reverse Drum
	5211 8059	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
20									DRUM, Automatic Transmission
	5211 8057	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
21									THRUST WASHER, Planetary Carrier
	2801 315	8	1, 2, 3				DGP		Rear
		10	1, 2, 3				DGP		Front
		8	6, 7, 8				DGP		Rear
		10	6, 7, 8				DGP		Front
22									THRUST WASHER, Planet Pinion
	2204 649	8	1, 2, 3				DGP		Rear
		10	1, 2, 3				DGP		Front
		8	6, 7, 8				DGP		Rear
		10	6, 7, 8				DGP		Front
23									ROLLER, Front and Rear Pinion
	3743 664	92	1, 2, 3				DGP		Rear


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

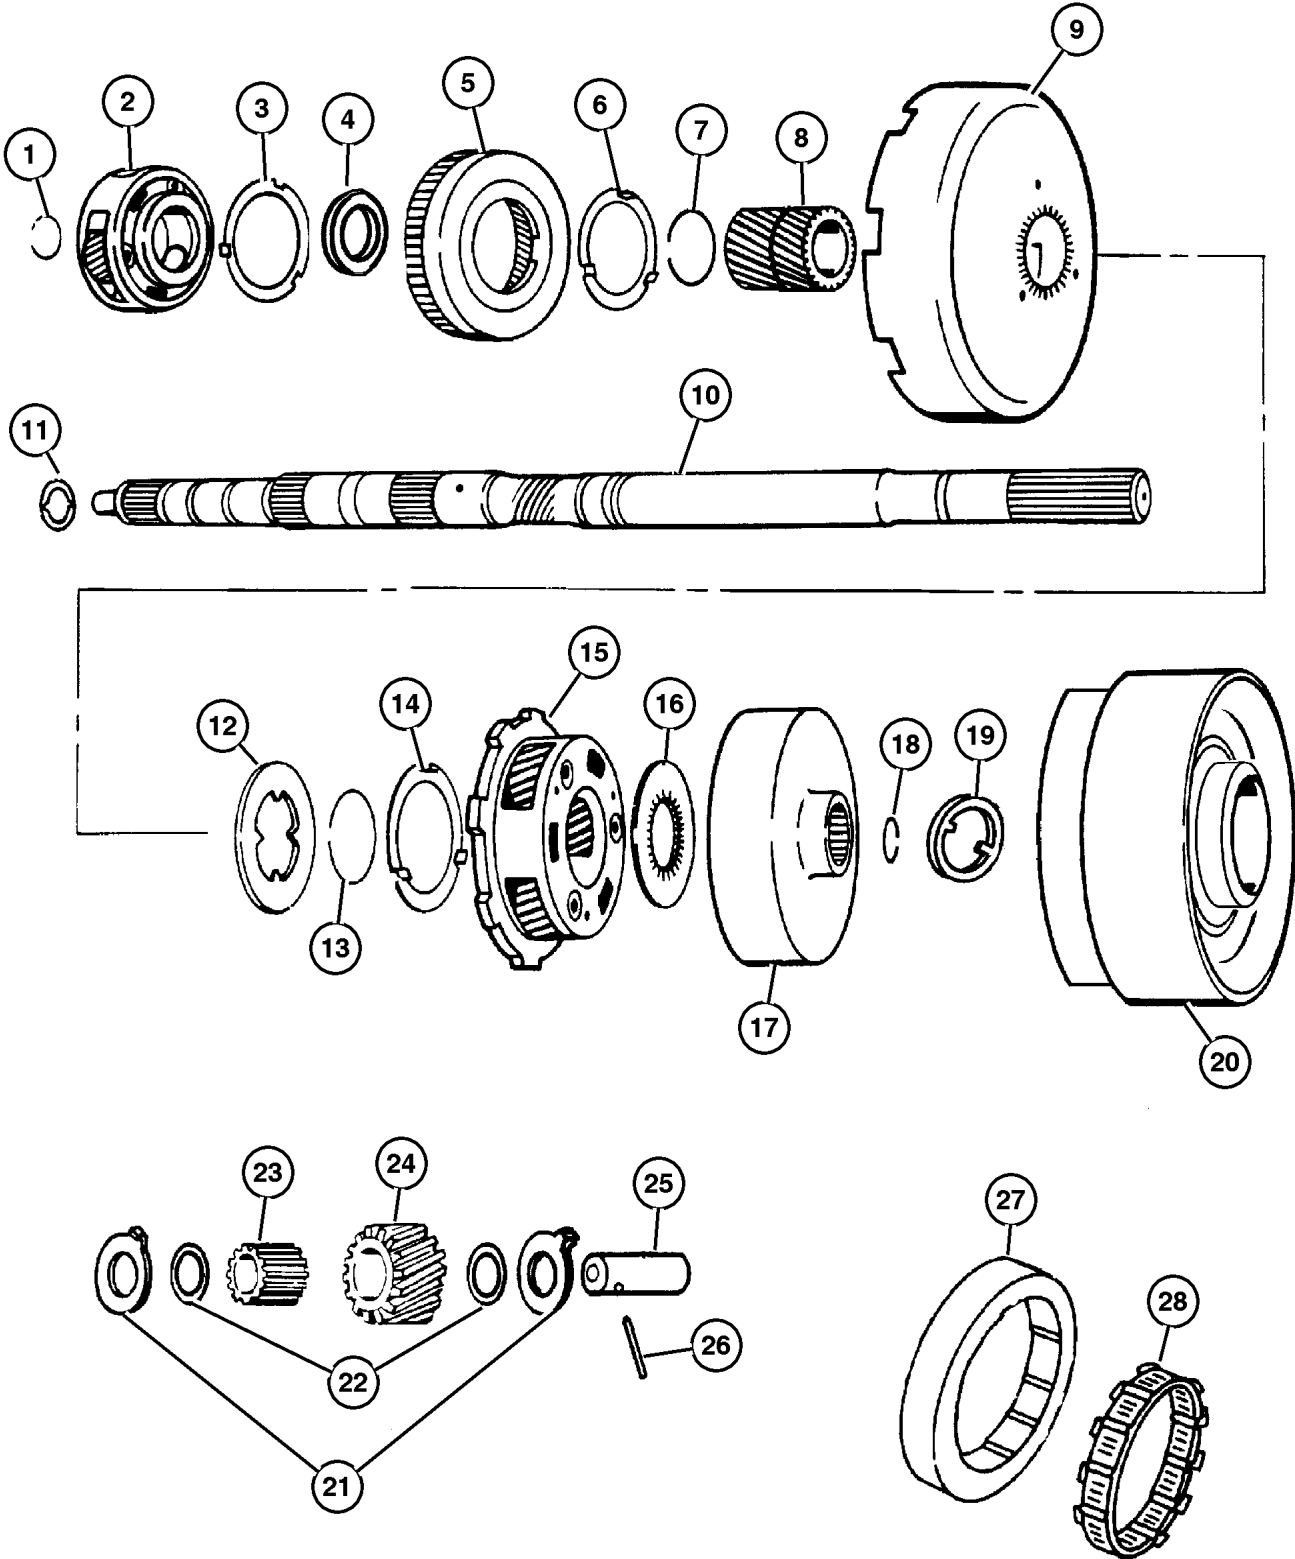Gear Train and Intermediate Shaft - 47RE [DGP]
Figure 47RE-420



FRONT & REAR PLANET PINION CARRIER GEARS


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		115	1, 2, 3				DGP		Front
		92	6, 7, 8				DGP		Rear
		115	6, 7, 8				DGP		Front
24	2400 667	4	1, 2, 3				DGP		PINION, Transmission Planetary
		5	1, 2, 3				DGP		Front
		4	6, 7, 8				DGP		Rear
		5	6, 7, 8				DGP		SHAFT, Planetary
25	4428 223	5	1, 2, 3				DGP		Front
		5	6, 7, 8				DGP		Front
		4	1, 2, 3				DGP		Rear
		4	6, 7, 8				DGP		Rear
26	6024 666	4	1, 2, 3				DGP		DOWEL, .108x1.00
		5	1, 2, 3				DGP		Rear
		4	6, 7, 8				DGP		Front
		5	6, 7, 8				DGP		Rear
27	4471 473	1	1, 2, 3				DGP		CAM, Overrunning Clutch
		1	6, 7, 8				DGP		
28	4617 199	1	1, 2, 3				DGP		CLUTCH, Overrunning
		1	6, 7, 8				DGP		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

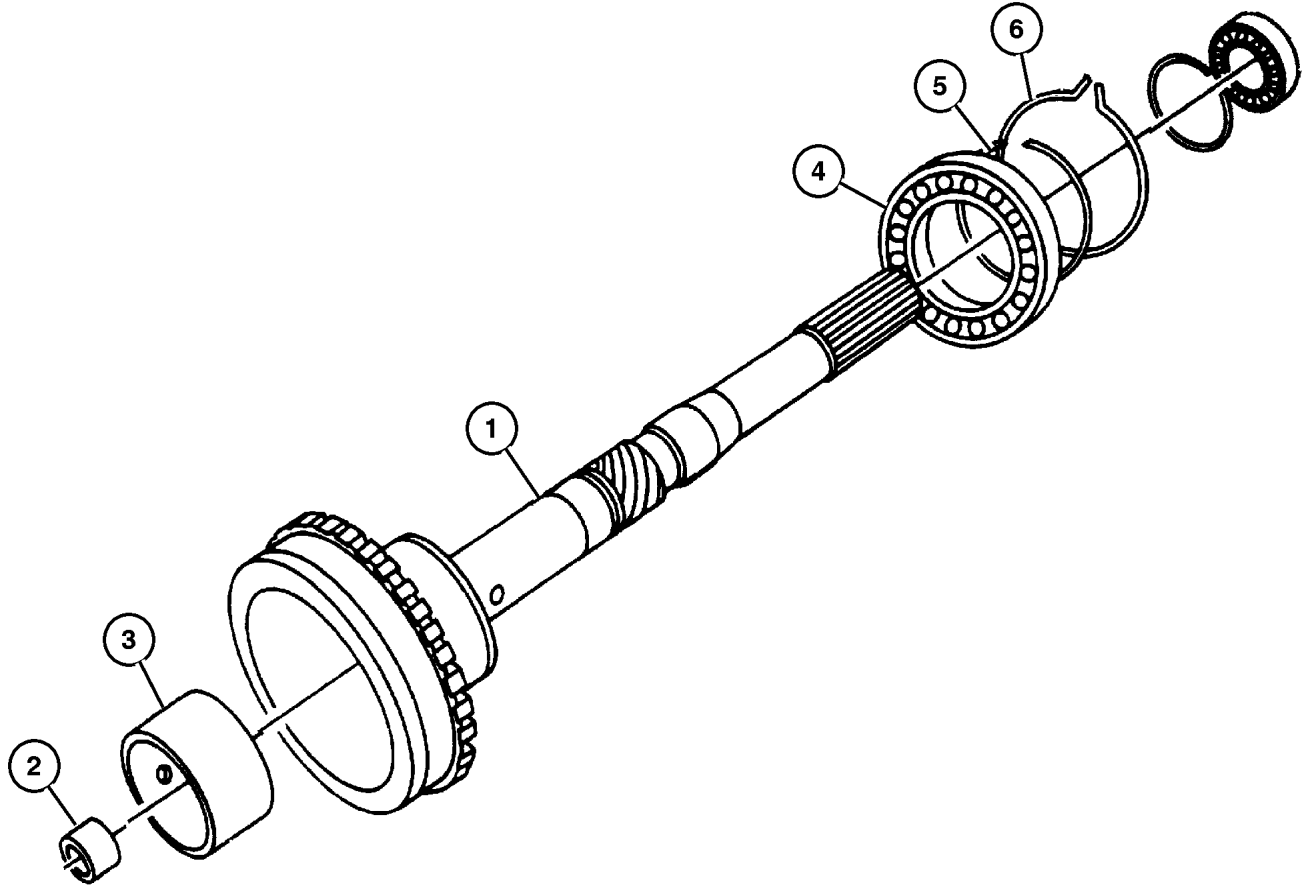Output Shaft - 47RE [DGP]
Figure 47RE-430



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES; Sales Codes

[DGP] = 4 Speed Automatic Transmission 47RE


1	4874 036	1	6, 7, 8				DGP		OUTPUT SHAFT, Transmission
2									BUSHING, (NOT SERVICED) (Not Serviced)
3									BUSHING, (NOT SERVICED) (Not Serviced)
4	4461 008	1	6, 7, 8				DGP		BEARING, Output Shaft
		1	1, 2, 3				DGP		
5	4461 068	1	6, 7, 8				DGP		SNAP RING
		1	1, 2, 3				DGP		
6	4461 057	1	6, 7, 8				DGP		SNAP RING
		1	1, 2, 3				DGP		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	


AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

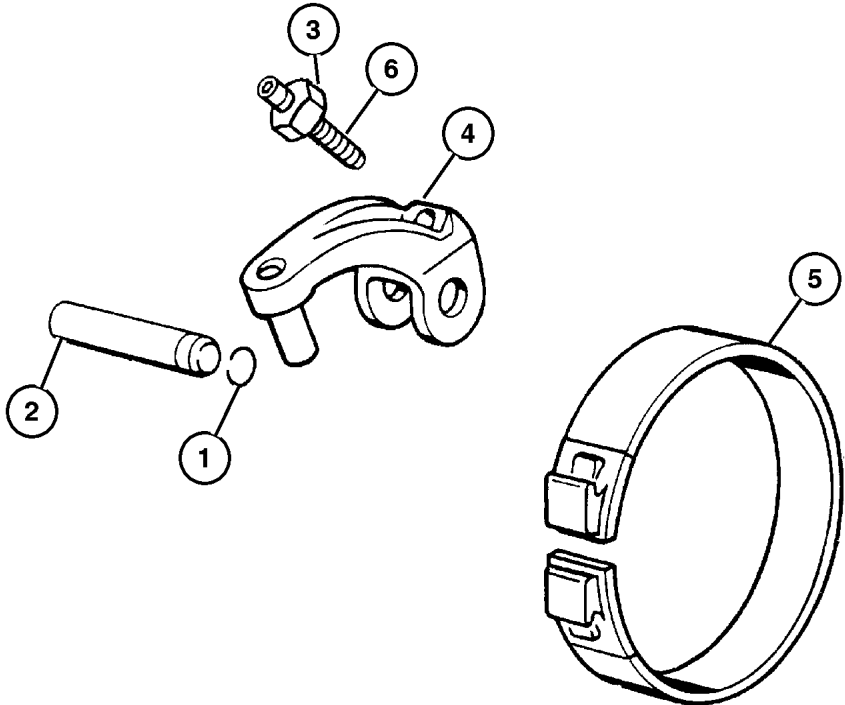Bands, Reverse and Kickdown with Linkage - 47RE [DGP]
Figure 47RE-510



REVERSE BAND

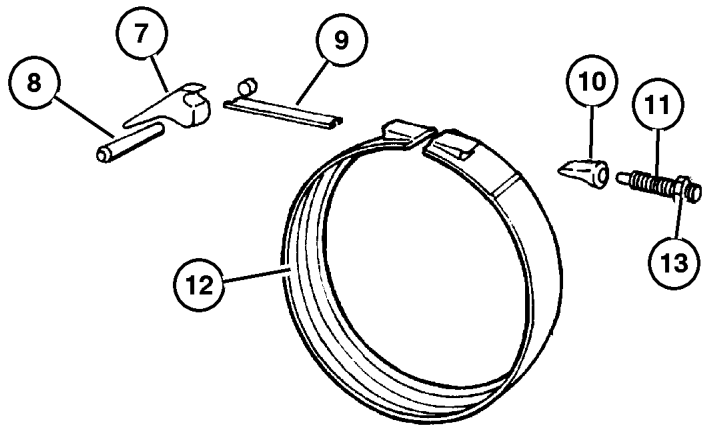

KICKDOWN BAND

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES; Sales Codes									
[DGP] = 4 Speed Automatic Transmission 47RE									
1	1556 385	2	1, 2, 3				DGP		O RING
		2	6, 7, 8				DGP		
2	4531 234	1	1, 2, 3				DGP		SHAFT, Band Lever
		1	6, 7, 8				DGP		
3	0103 026	1	1, 2, 3				DGP		NUT, Hex, .375-24
		1	6, 7, 8				DGP		
4	4531 226AB	1	1, 2, 3				DGP		LEVER, Reverse Band
		1	6, 7, 8				DGP		
5	4531 231	1	1, 2, 3				DGP		BAND, Reverse
		1	6, 7, 8				DGP		
6	2538 472	1	1, 2, 3				DGP		SCREW, Trans Reverse Band
		1	6, 7, 8				DGP		Adjusting, .375-24-1.88
7	2125 067	1	1, 2, 3				DGP		LEVER, Kickdown
		1	6, 7, 8				DGP		
8	4531 181	1	1, 2, 3				DGP		SHAFT, Band Lever
		1	6, 7, 8				DGP		
9	2124 848	1	1, 2, 3				DGP		STRUT, Kickdown Band
		1	6, 7, 8				DGP		
10	3743 338	1	1, 2, 3				DGP		ANCHOR, Kickdown Band
		1	6, 7, 8				DGP		
11	6036 115AA	1	1, 2, 3				DGP		SCREW
		1	6, 7, 8				DGP		
12	4329 853	1	1, 2, 3				DGP		BAND, Kickdown
		1	6, 7, 8				DGP		
13									NUT, Hex Jam, .50-20


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year


September 16, 2005

Bands, Reverse and Kickdown with Linkage - 47RE [DGP]
Figure 47RE-510

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	0124 934	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		

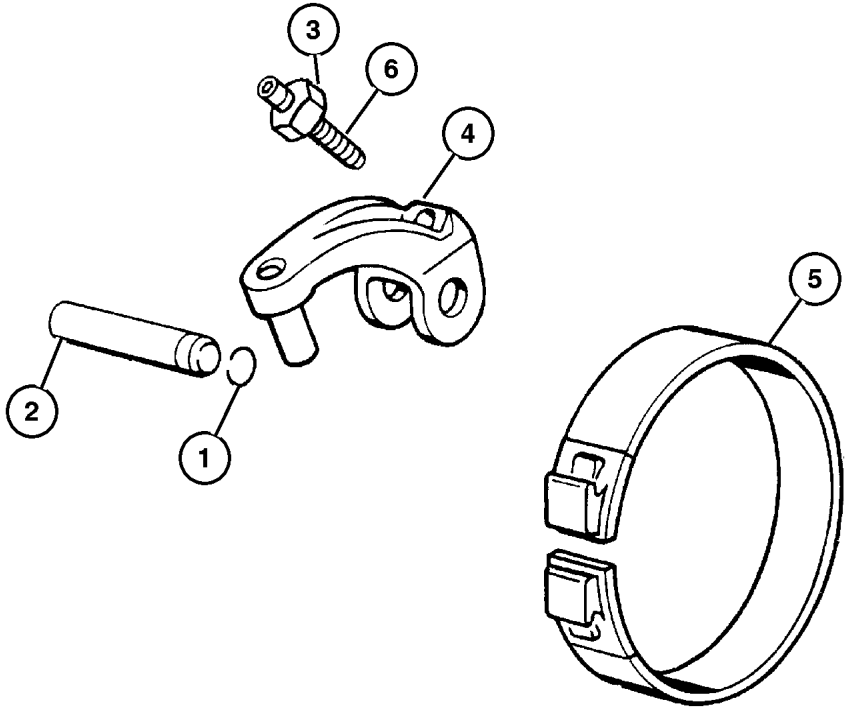

REVERSE BAND

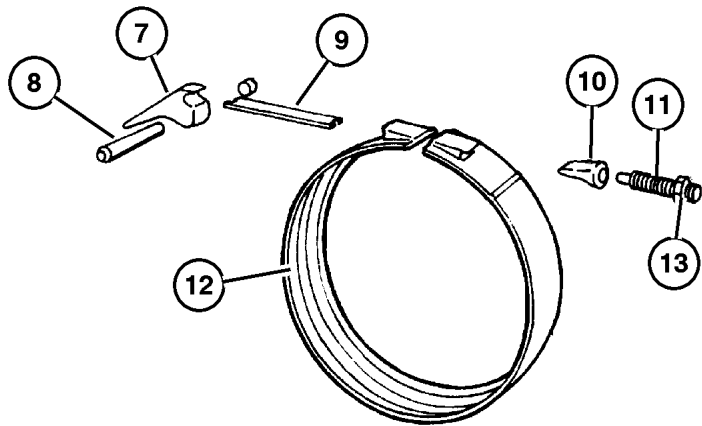


KICKDOWN BAND

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

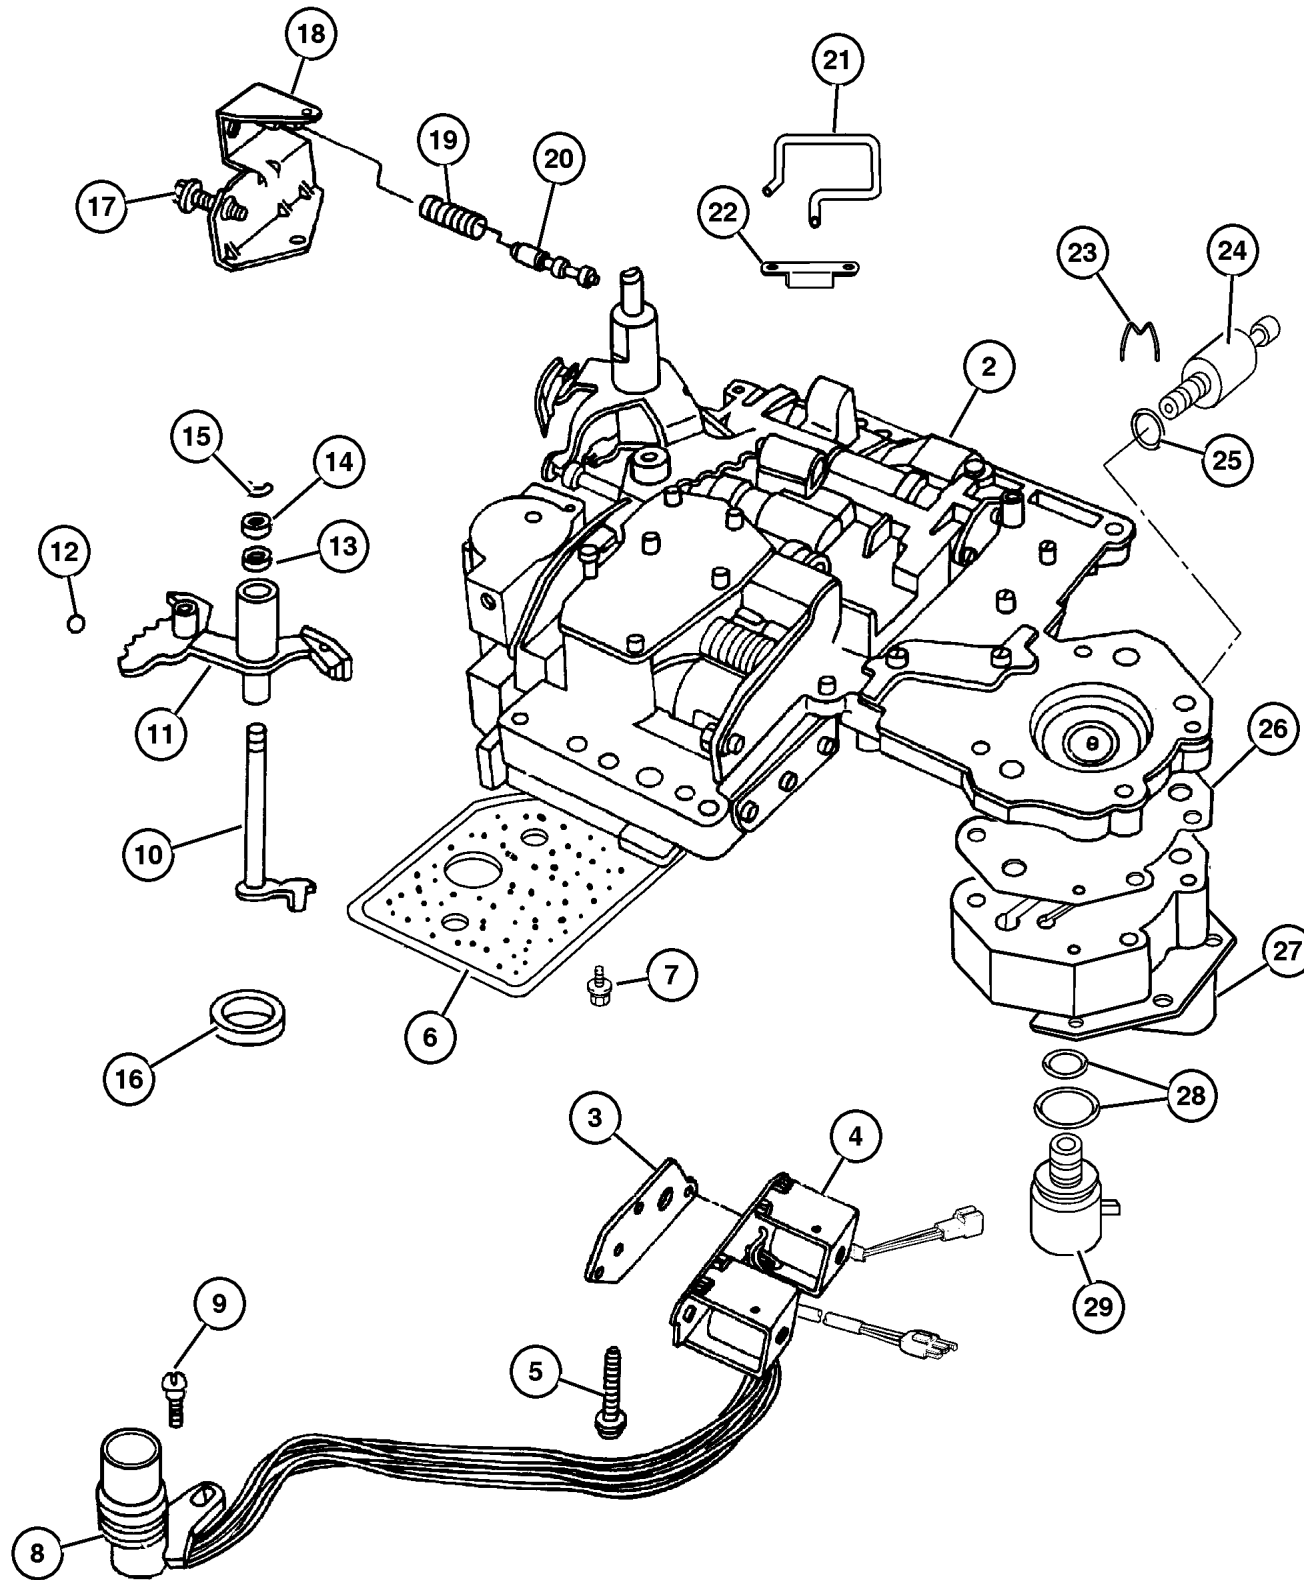Valve Body - 47RE [DGP] Figure 47RE-710



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES; Sales Codes									
[DGP] = 4 Speed Automatic Transmission 47RE									
-1									SEAL AND GASKET PACKAGE, Valve Body and Servo
	4863 892AC-	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
2	52118 796AB	1	1, 2, 3				DGP		BODY, Transfer Plate
		1	6, 7, 8				DGP		
3	5211 8510	1	1, 2, 3				DGP		GASKET, Transmission Solenoid
		1	6, 7, 8				DGP		
4									SOLENOID, Transmission Overdrive
	52118 500AB	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
5									BOLT, Valve Body, .25-20x1.75
	0181 071	3	1, 2, 3				DGP		
		3	6, 7, 8				DGP		
6									FILTER, Valve Body
	5211 8789	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
7									SCREW AND WASHER, Oil Filter Mounting, Fillester Head .190-24x2.500
	6033 826	3	1, 2, 3				DGP		
		3	6, 7, 8				DGP		
8									O RING, Solenoid Wiring, Transmission
	6034 748	2	1, 2, 3				DGP		
		2	6, 7, 8				DGP		
9									SCREW, Tapping, .19-24x.75
	6033 985	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
10									LEVER, Throttle Valve
	3681 227	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
11	4617 439	1	1, 2, 3				DGP		LEVER, Manual Valve
12									BALL, Manual Lever Detent, .343 Diameter
	0147 488	1	1, 2, 3				DGP		


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

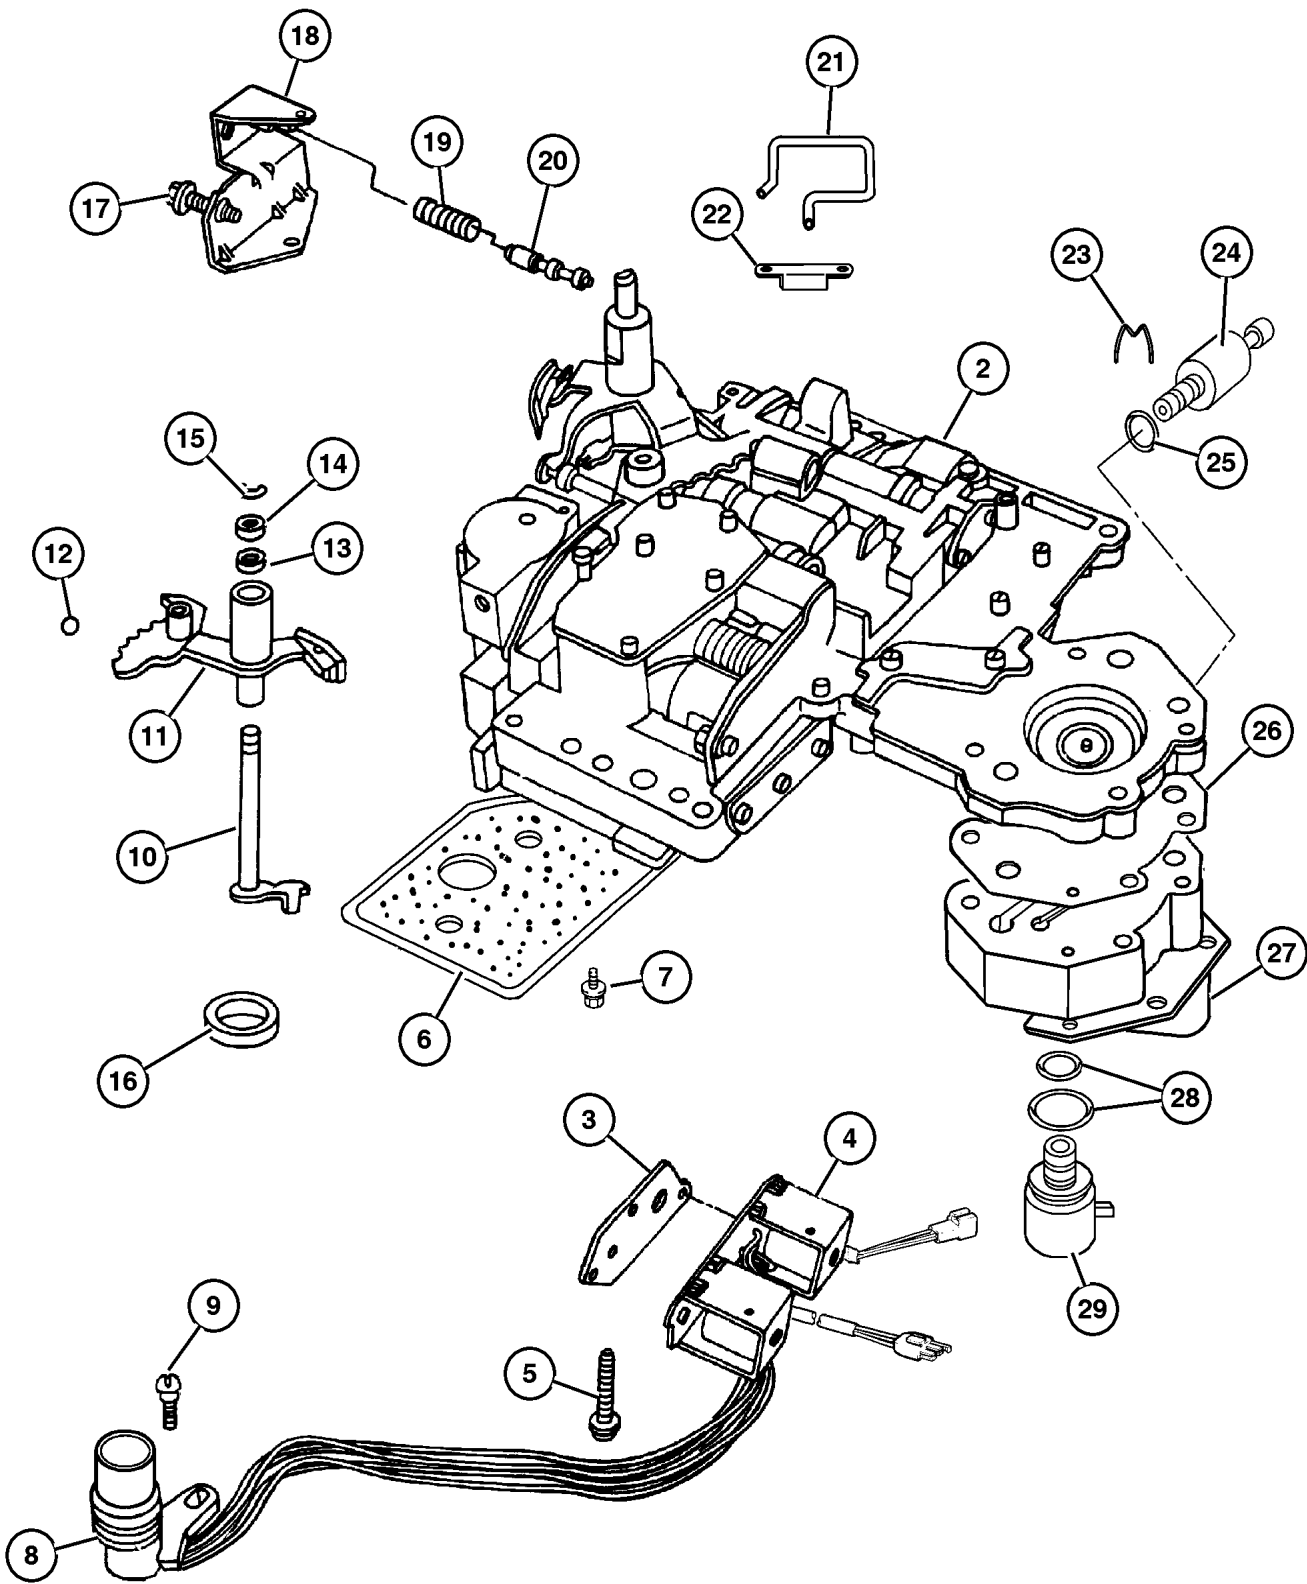Valve Body - 47RE [DGP]
Figure 47RE-710




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	6, 7, 8				DGP		
13	2466 548	1	1, 2, 3				DGP		SEAL, Valve Lever Shift
		1	6, 7, 8				DGP		
14	2538 062	1	1, 2, 3				DGP		WASHER, Manual Valve Lever
		1	6, 7, 8				DGP		
15	6035 208	2	1, 2, 3				DGP		SNAP RING
		2	6, 7, 8				DGP		
		1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
16	4505 098	1	1, 2, 3				DGP		SEAL, Manual Shift Valve, 1.25 OD
		1	6, 7, 8				DGP		
17	6030 609	1	1, 2, 3				DGP		SCREW, Cap Head Lock, .312-24x1.25
		1	6, 7, 8				DGP		
18	4617 010	1	1, 2, 3				DGP		BRACKET, Valve Body Switch
		1	6, 7, 8				DGP		
19	4130 492	1	1, 2, 3				DGP		SPRING, Switch Valve
		1	6, 7, 8				DGP		
20	4505 036	1	1, 2, 3				DGP		VALVE, Trans Lockup Switch
		1	6, 7, 8				DGP		
21	4617 008	1	1, 2, 3				DGP		TUBE, Boost Valve
		1	6, 7, 8				DGP		
22	5211 7958	1	1, 2, 3				DGP		RETAINER, Boost Valve Oil Supply Tube
		1	6, 7, 8				DGP		
23	4617 219	1	1, 2, 3				DGP		CLIP, Transmission Governor Transducer
		1	6, 7, 8				DGP		
24									TRANSDUCER, Pressure Sensor

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

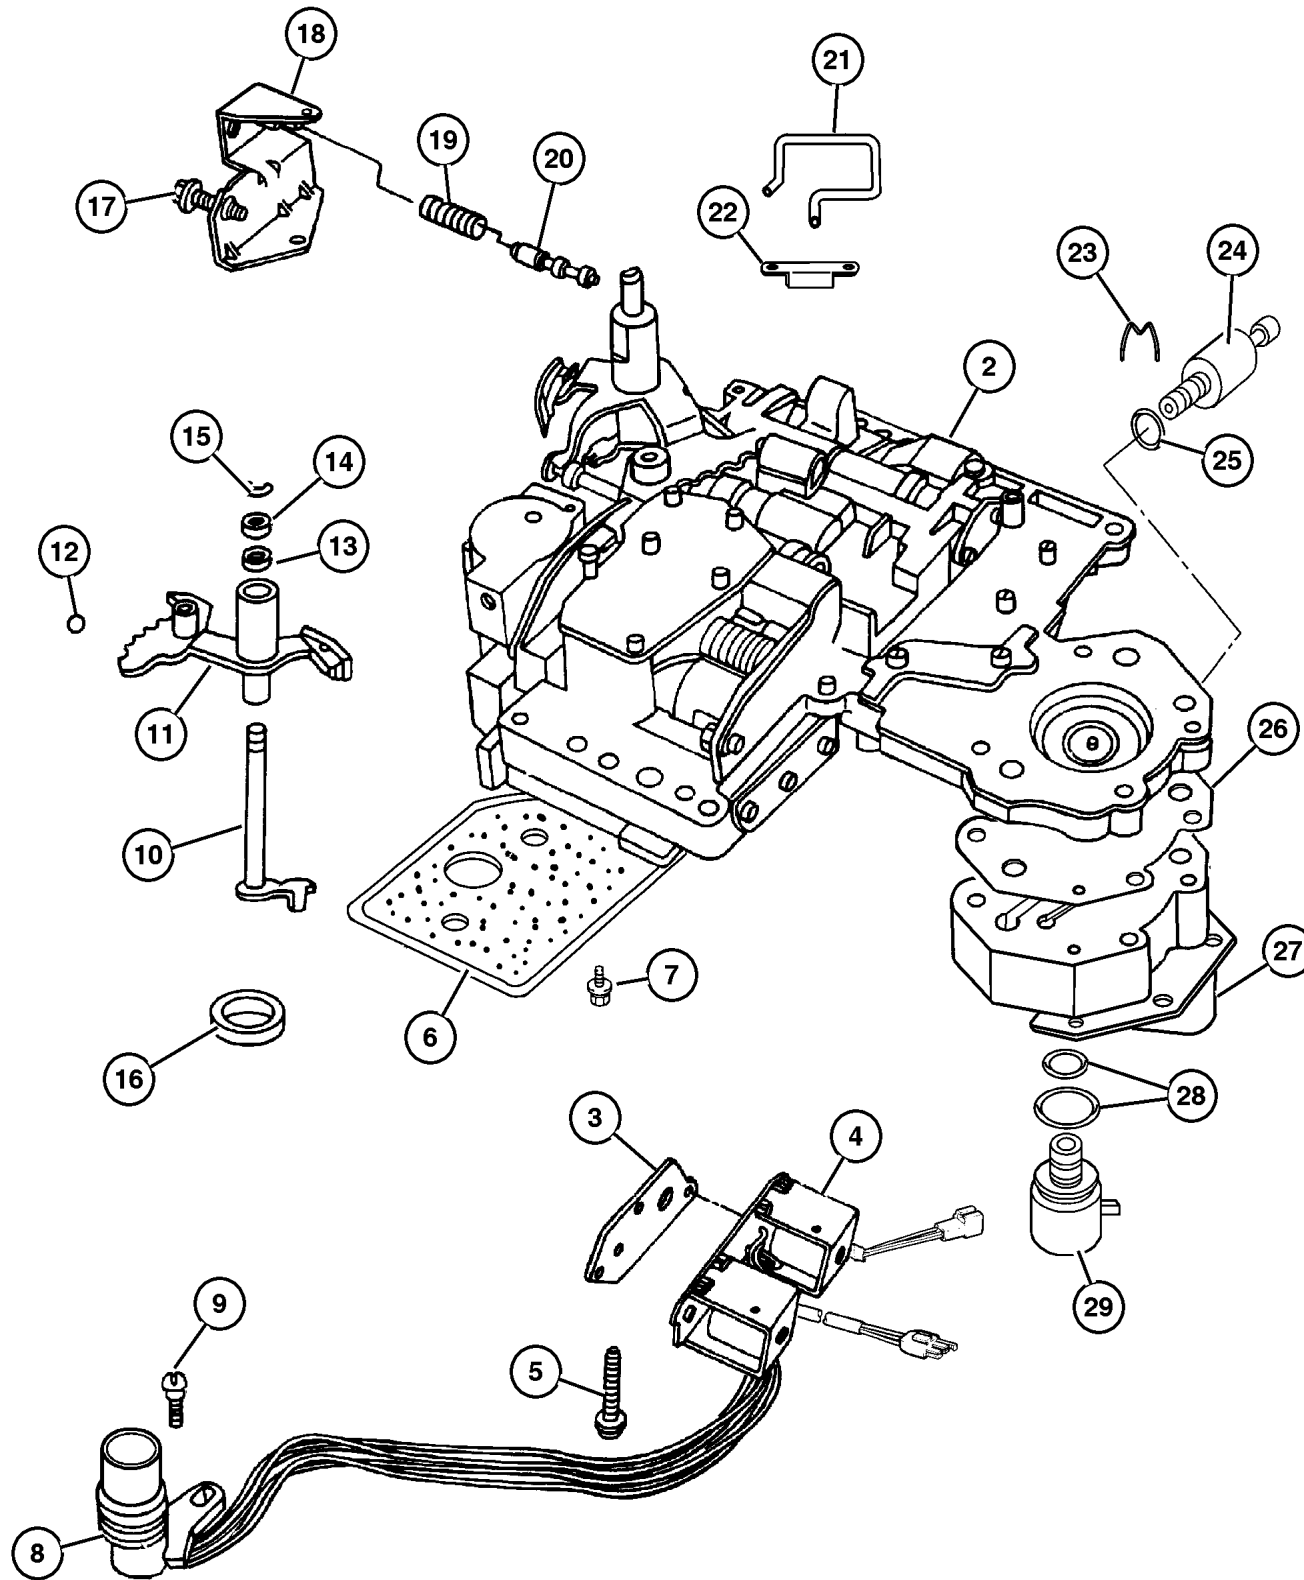Valve Body - 47RE [DGP] Figure 47RE-710



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	56028 196AA	1	1, 2, 3				DGP		
25		1	6, 7, 8				DGP		O RING, Pressure Switch
	6034 493	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
26									GASKET, Transmission Solenoid
	4617 216	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
27									RETAINER, Transmission Governor Solenoid
	4617 211AB	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
28									O RING PACKAGE, Valve Body, Transmission
	4723 549	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
29									SOLENOID, Transmission Governor
	4617 210	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
-30									SCREEN, Transmission Regulator Valve
	3878 313	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE

$$\begin{aligned} 1, 6 &= 1500 \\ 2, 7 &= 2500 \\ 3, 8 &= 3500 \end{aligned}$$

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, ELO = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

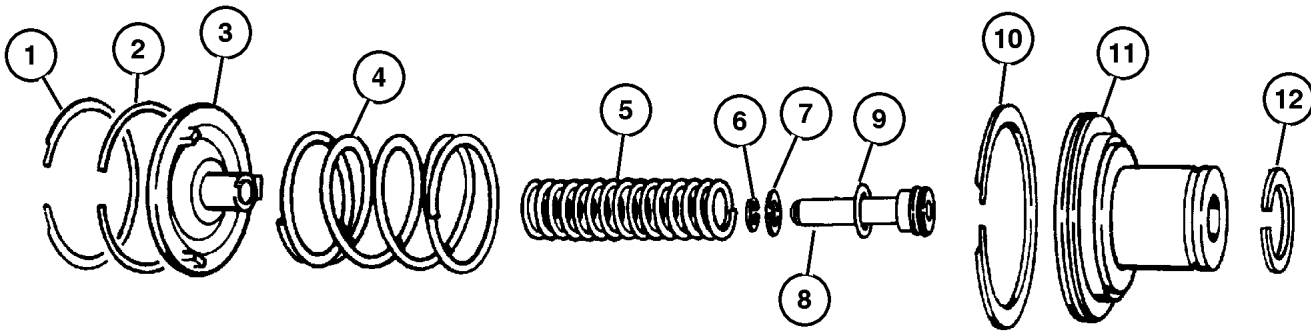
TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual


AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005


Servos, Accumulator Piston and Spring - 47RE [DGP]
Figure 47RE-720



KICKDOWN SERVO

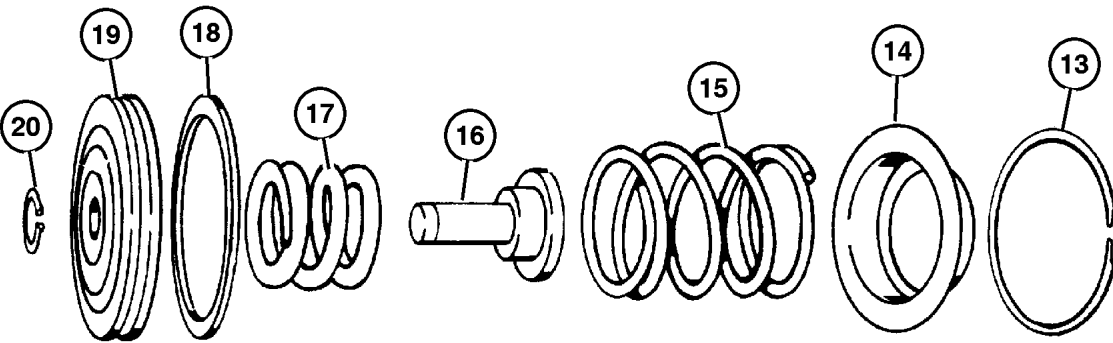

LOW AND REVERSE SERVO

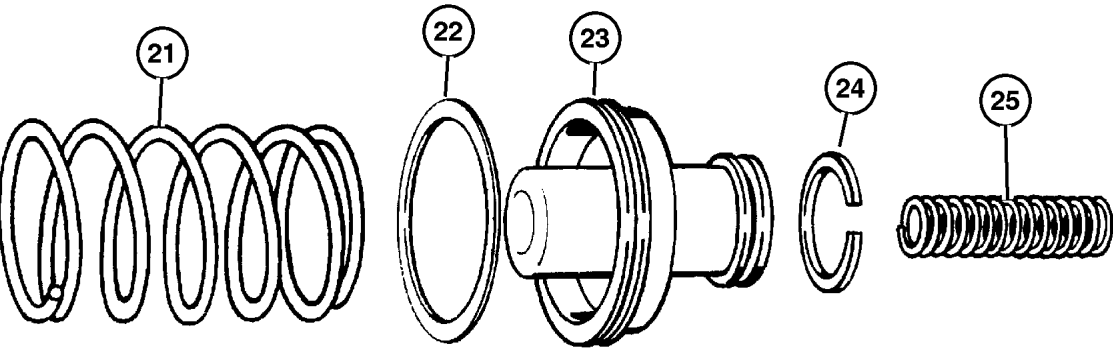

ACCUMULATOR PISTON AND SPRING


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES; Sales Codes									
[DGP] = 4 Speed Automatic Transmission 47RE									
1	1942 130	1	1, 2, 3				DGP		SNAP RING
		1	6, 7, 8				DGP		
2	1942 123	1	1, 2, 3				DGP		SEAL, Servo Piston
		1	6, 7, 8				DGP		
3	3410 441	1	1, 2, 3				DGP		GUIDE, Kickdown Servo
		1	6, 7, 8				DGP		
4	3410 444	1	1, 2, 3				DGP		SPRING, Kickdown Servo Piston
		1	6, 7, 8				DGP		
5	3410 444	1	1, 2, 3				DGP		SPRING, Kickdown Servo Piston
		1	6, 7, 8				DGP		
6	6031 392	1	1, 2, 3				DGP		SNAP RING, Brake Master Cylinder
		1	6, 7, 8				DGP		
7	3410 437	1	1, 2, 3				DGP		RETAINER, Kick Down
		1	6, 7, 8				DGP		
8	3410 445	1	1, 2, 3				DGP		PISTON, Kickdown Servo
		1	6, 7, 8				DGP		
9	6028 864	1	1, 2, 3				DGP		O RING, Kick Down Servo
		1	6, 7, 8				DGP		
10	1942 123	1	1, 2, 3				DGP		SEAL, Servo Piston
		1	6, 7, 8				DGP		
11	3410 440	1	1, 2, 3				DGP		PISTON, Kickdown Servo
		1	6, 7, 8				DGP		
12	4412 444	1	1, 2, 3				DGP		SEAL, Kickdown Servo
		1	6, 7, 8				DGP		
13	1942 130	1	1, 2, 3				DGP		SNAP RING

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	


AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

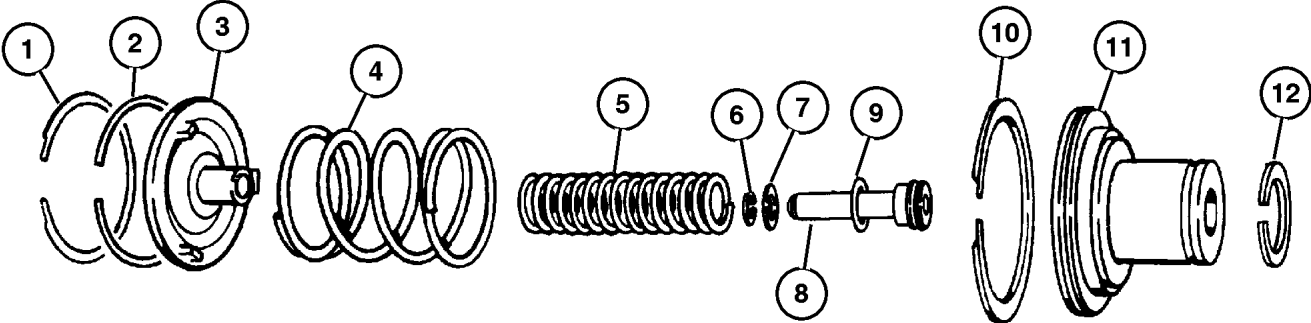
Servos, Accumulator Piston and Spring - 47RE [DGP]
Figure 47RE-720



KICKDOWN SERVO

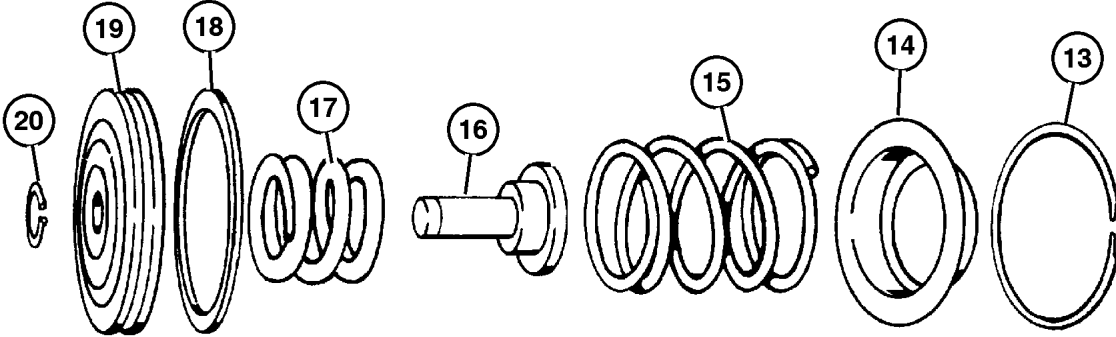

LOW AND REVERSE SERVO

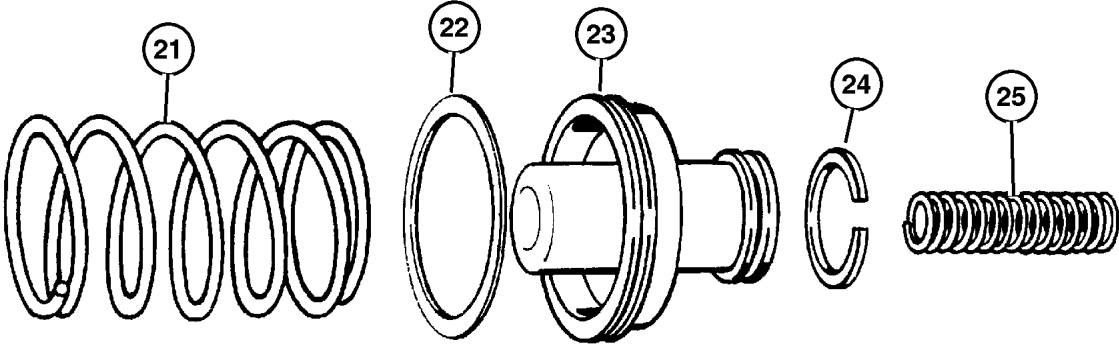

ACCUMULATOR PISTON AND SPRING


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	6, 7, 8						
14							DGP		RETAINER, Transmission Reverse Servo Piston Spring
		1	1, 2, 3						
		1	6, 7, 8						
15	5211 8342						DGP		SPRING, Reverse Servo Piston
		1	1, 2, 3						
		1	6, 7, 8						
16	4617 773						DGP		PLUG, Reverse Servo Piston
		1	1, 2, 3						
		1	6, 7, 8						
17	52118 742AB						DGP		SPRING, Accumulator Piston
		1	1, 2, 3						
		1	6, 7, 8						
18	3515 079						DGP		SEAL, Reverse Servo Piston
		1	1, 2, 3						
		1	6, 7, 8						
19	4531 233						DGP		PISTON, Reverse Servo
		1	1, 2, 3						
		1	6, 7, 8						
20	5211 8745						DGP		SNAP RING, .435 ID
		1	1, 2, 3						
		1	6, 7, 8						
21	6027 153						DGP		SPRING, Accumulator Piston
		1	1, 2, 3						
		1	6, 7, 8						
22	3515 079						DGP		SEAL, Piston Accumulator
		1	1, 2, 3						
		1	6, 7, 8						
23	3743 010						DGP		PISTON, Accumulator
		1	1, 2, 3						
		1	6, 7, 8						
24	3743 650						DGP		SEAL, Piston Accumulator
		1	1, 2, 3						
		1	6, 7, 8						
25	3743 010						DGP		SPRING, Accumulator Piston, (NOT REQUIRED)
		1	1, 2, 3						
		1	6, 7, 8						

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

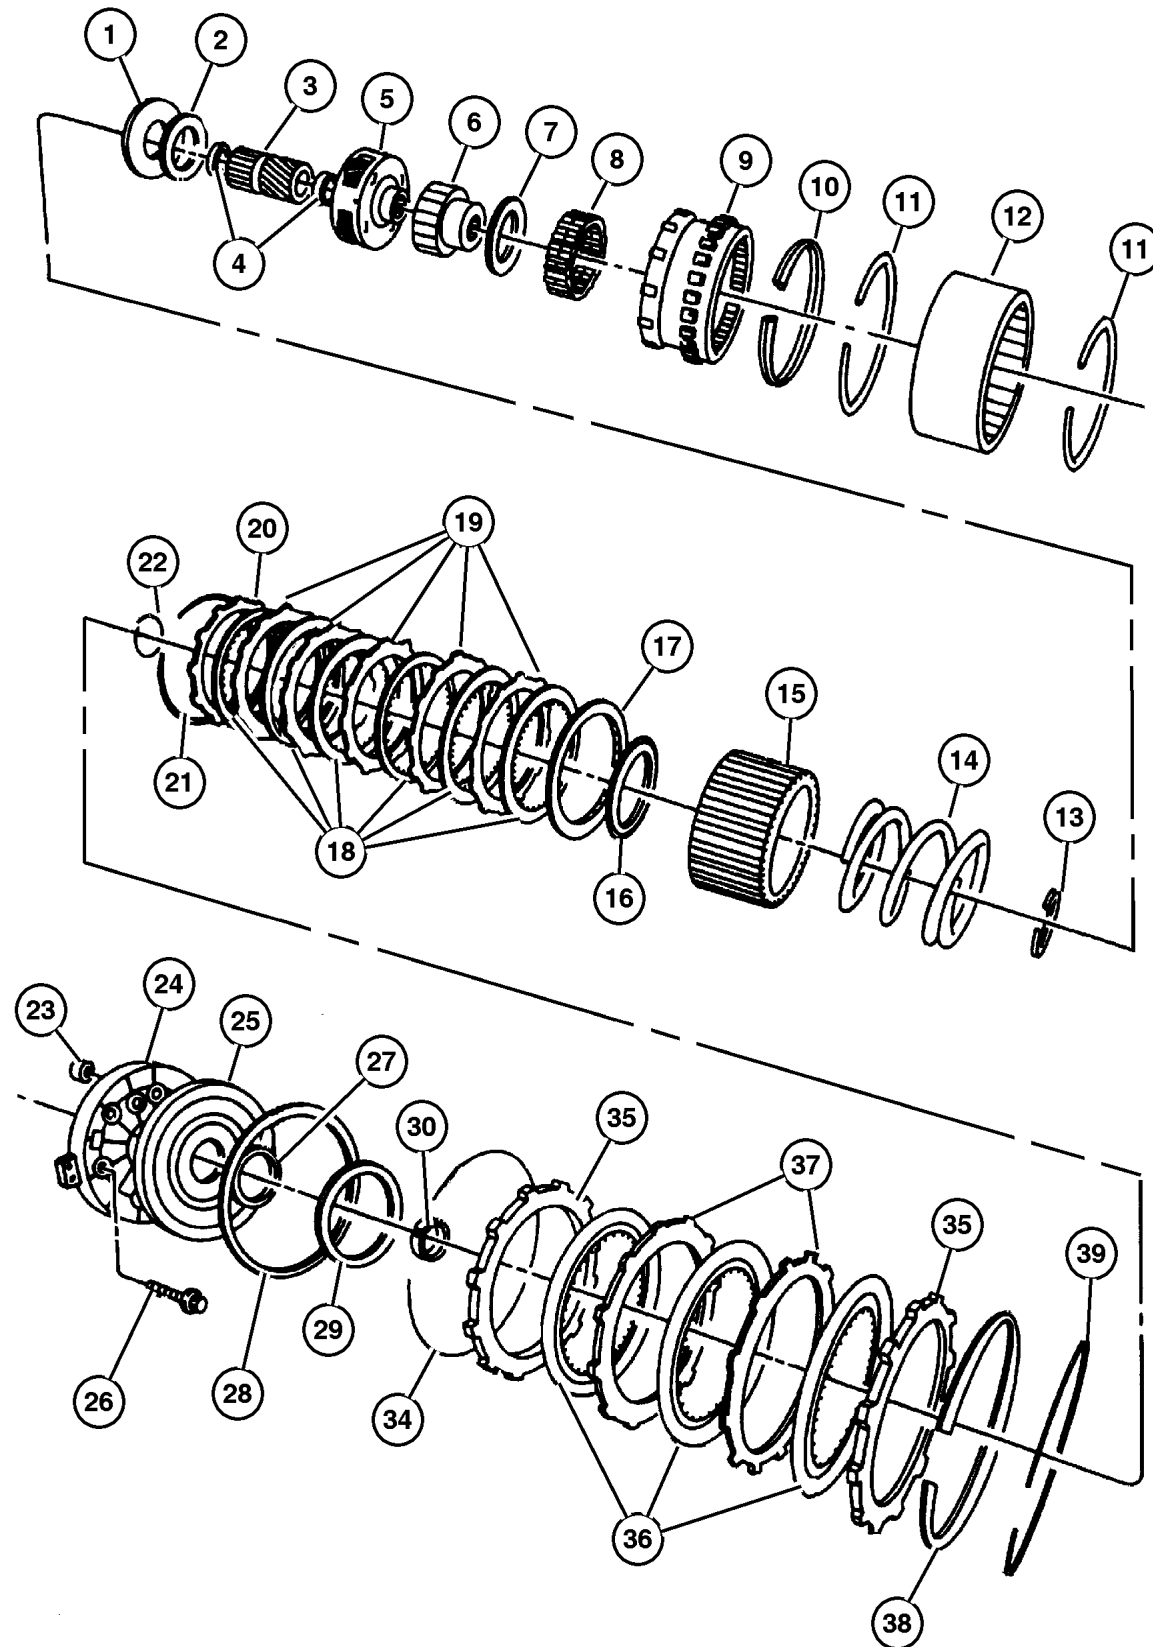Clutch, Overdrive with Gear Train - 47RE [DGP] Figure 47RE-1010



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES; Sales Codes									
[DGP] = 4 Speed Automatic Transmission 47RE									
[ET0] = All 5.9L Diesel Engines									
[EW0] = All 8.0L Gas Engines									
1									PLATE PACKAGE, Transmission Module
	4740 774	1	6, 7, 8				DGP		
		1	1, 2, 3				DGP		
2									BEARING, (NOT SERVICED) (Not Serviced)
3	5015 107AA	1	6, 7, 8				DGP		GEAR, Overdrive Sun
		1	1, 2, 3				DGP		
4									BUSHING, (NOT SERVICED) (Not Serviced)
5	4761 011	1	6, 7, 8				DGP		CARRIER, O/Drive Planet Pinion
		1	1, 2, 3				DGP		
6	4461 124	1	6, 7, 8				DGP		RACE, Overrunning Clutch
		1	1, 2, 3				DGP		
7	4461 014	1	6, 7, 8				DGP		THRUST BEARING, Ovedrive Third Position
		1	1, 2, 3				DGP		
8	4461 015	1	6, 7, 8				DGP		CLUTCH, Overdrive Overrunning
		1	1, 2, 3				DGP		
9	4761 010	1	6, 7, 8				DGP		GEAR, Overdrive Annulus
		1	1, 2, 3				DGP		
10	4461 059	1	6, 7, 8				DGP		SNAP RING, 5.25 OD
		1	1, 2, 3				DGP		
11	4461 060	2	1, 2, 3			ET0	DGP		SNAP RING, 6.00 OD
		2	1, 2, 3			EW0	DGP		
		2	6, 7, 8			ET0	DGP		
		2	6, 7, 8			EW0	DGP		
12									DRUM, Automatic Transmission

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

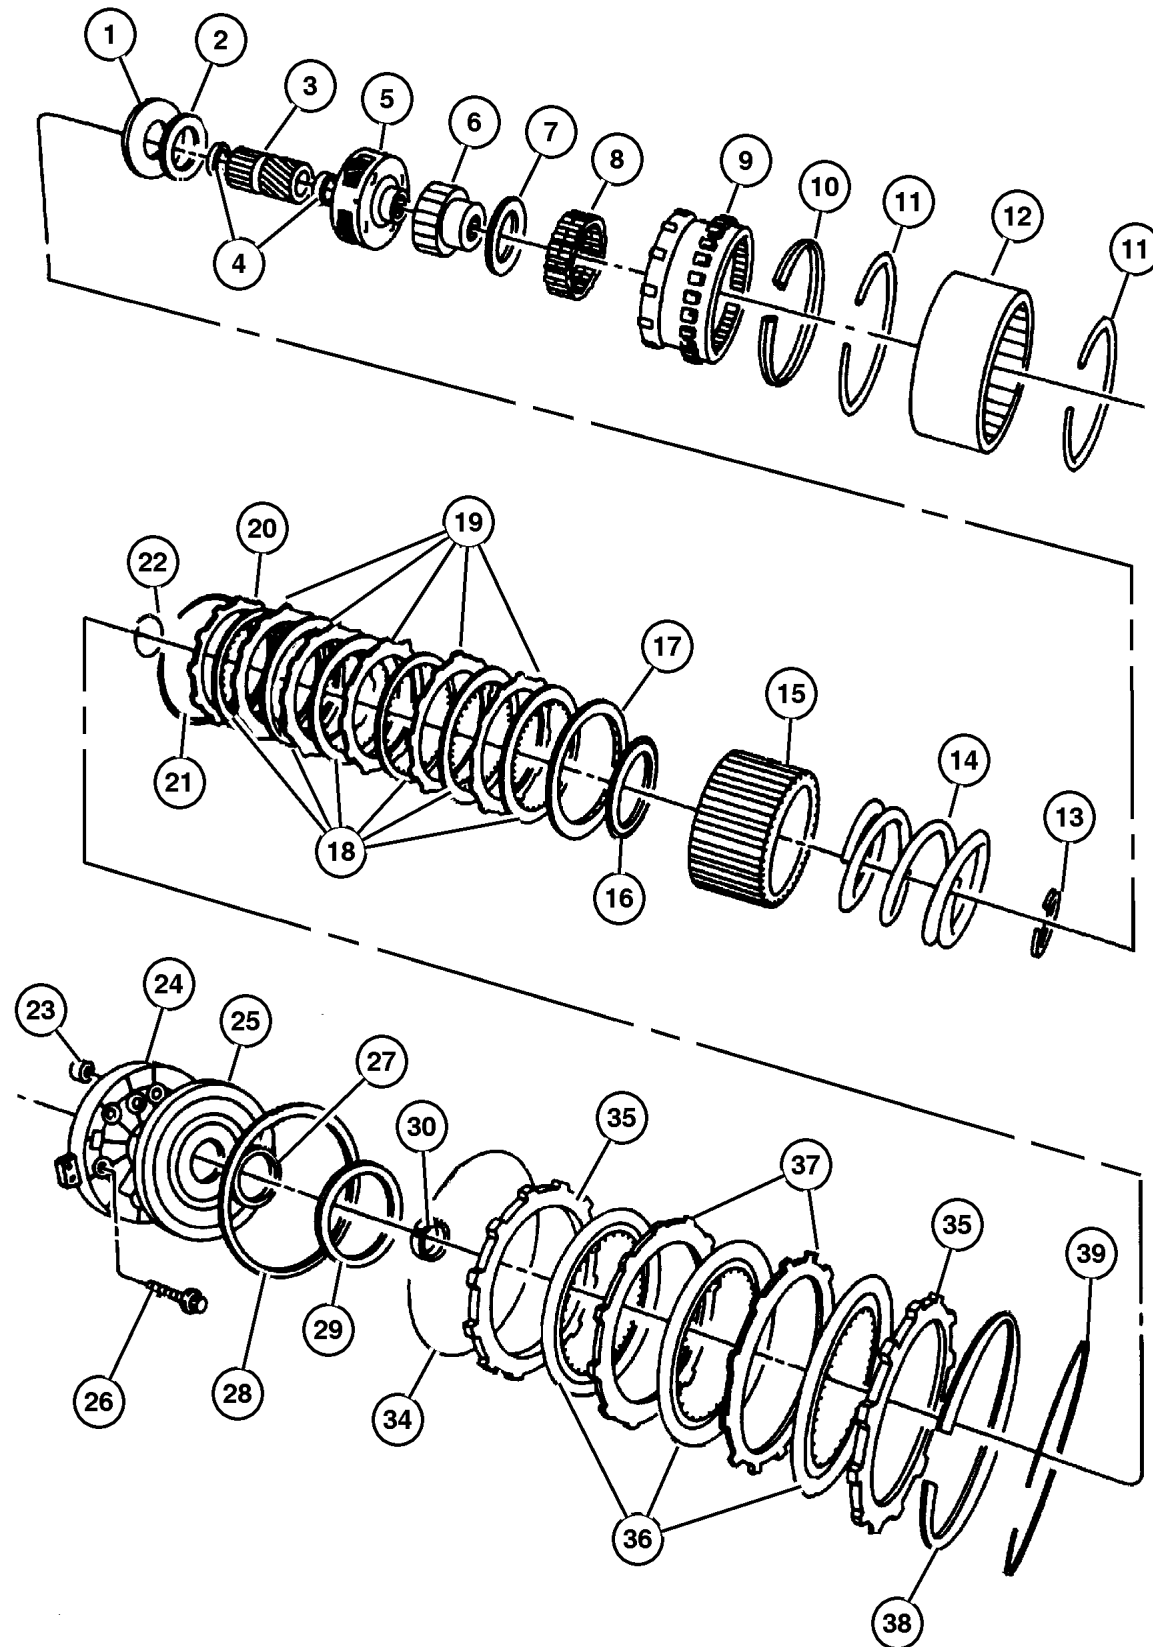
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Clutch, Overdrive with Gear Train - 47RE [DGP] Figure 47RE-1010



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4461 089	1	6, 7, 8				DGP		
		1	1, 2, 3				DGP		
13	4461 063	1	6, 7, 8				DGP		SNAP RING, 2.1875 OD
		1	1, 2, 3				DGP		
14	4461 027	1	6, 7, 8				DGP		SPRING, Direct Clutch
		1	1, 2, 3				DGP		
15	4461 072	1	6, 7, 8				DGP		HUB, Direct Clutch
		AR	1, 2, 3				DGP		
16	4446 724	1	1, 2, 3				DGP		THRUST BEARING, Overdrive
		1	6, 7, 8				DGP		
17									PLATE, Transmission Clutch Reaction
	4461 030	1	6, 7, 8				DGP		
		1	1, 2, 3				DGP		
18	4461 042	10	1, 2, 3			ET0	DGP		DISC, Direct Clutch
		10	1, 2, 3			EW0	DGP		
		10	6, 7, 8			ET0	DGP		
		10	6, 7, 8			EW0	DGP		
19	4864 053	9	6, 7, 8				DGP		PLATE, Transmission Valve Body
		9	1, 2, 3				DGP		
20	4461 183	1	6, 7, 8				DGP		PLATE, Pressure
		1	1, 2, 3				DGP		
21	4461 032	1	6, 7, 8				DGP		SPRING, Direct Clutch
		1	1, 2, 3				DGP		
22	4461 064	1	6, 7, 8				DGP		SNAP RING, 1.875" OD
		1	1, 2, 3				DGP		
23	4412 583	1	1, 2, 3				DGP		FILTER, Overdrive Clutch
		1	6, 7, 8				DGP		
24									RETAINER, Transmission O/Drive Clutch Piston

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE

1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

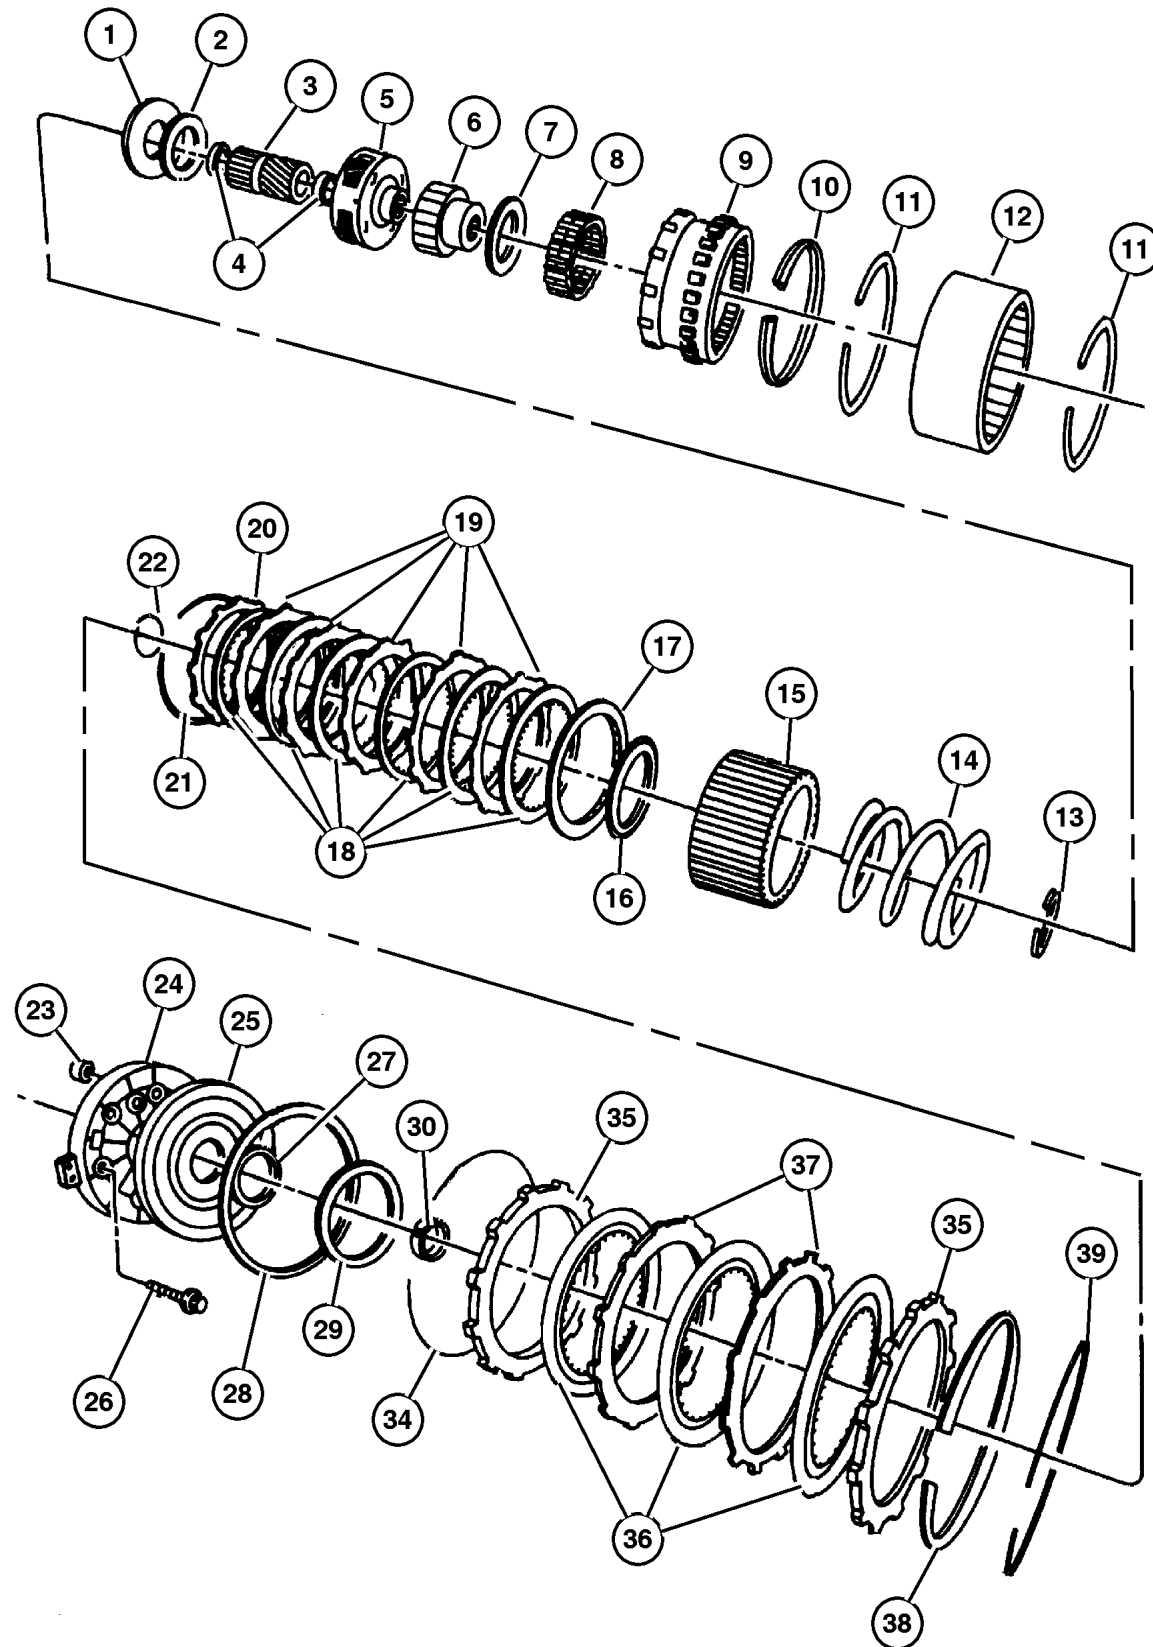
TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Clutch, Overdrive with Gear Train - 47RE [DGP] Figure 47RE-1010



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
25	5211 7975	1	1, 2, 3				DGP		PISTON, Overdrive Clutch
		1	6, 7, 8				DGP		
	5211 8599	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
26	0152 796	6	1, 2, 3				DGP		SCREW, .25-20
		6	6, 7, 8				DGP		
27	4431 697	1	1, 2, 3				DGP		SEAL, Overdrive Clutch Piston
		1	6, 7, 8				DGP		
28	4431 697	1	1, 2, 3				DGP		SEAL, Overdrive Clutch Piston Inner
		1	6, 7, 8				DGP		
		1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
29	4617 352	1	1, 2, 3				DGP		PLATE, Transmission O/Drive Clutch
		1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
		1	6, 7, 8				DGP		
	4431 585	1	1, 2, 3				DGP		.123"-.125" Thick
		1	6, 7, 8				DGP		
		1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
	4431 586	1	1, 2, 3				DGP		.153"-.155" Thick
		1	6, 7, 8				DGP		
		1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
	4431 587	1	1, 2, 3				DGP		.183"-.185" Thick
		1	6, 7, 8				DGP		
		1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
	4431 588	1	1, 2, 3				DGP		.213"-.215" Thick
		1	6, 7, 8				DGP		
		1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
	4431 590	1	1, 2, 3				DGP		.243"-.245" Thick
		1	6, 7, 8				DGP		
		1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
	4431 731	1	1, 2, 3				DGP		.138"-.140" Thick
		1	6, 7, 8				DGP		
		1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
	4431 732	1	1, 2, 3				DGP		.168"-.170" Thick
		1	6, 7, 8				DGP		
		1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
	4431 733	1	1, 2, 3				DGP		.198"-.200" Thick
		1	6, 7, 8				DGP		
		1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
	4431 734	1	1, 2, 3				DGP		.228"-.230" Thick
		1	6, 7, 8				DGP		
		1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
	4431 735	1	1, 2, 3				DGP		.108"-.110" Thick
		1	6, 7, 8				DGP		
		1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
30	4431 916	1	1, 2, 3				DGP		SPACER, Intermediate Shaft, 1.58mm
		1	1, 2, 3				DGP		


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM, EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

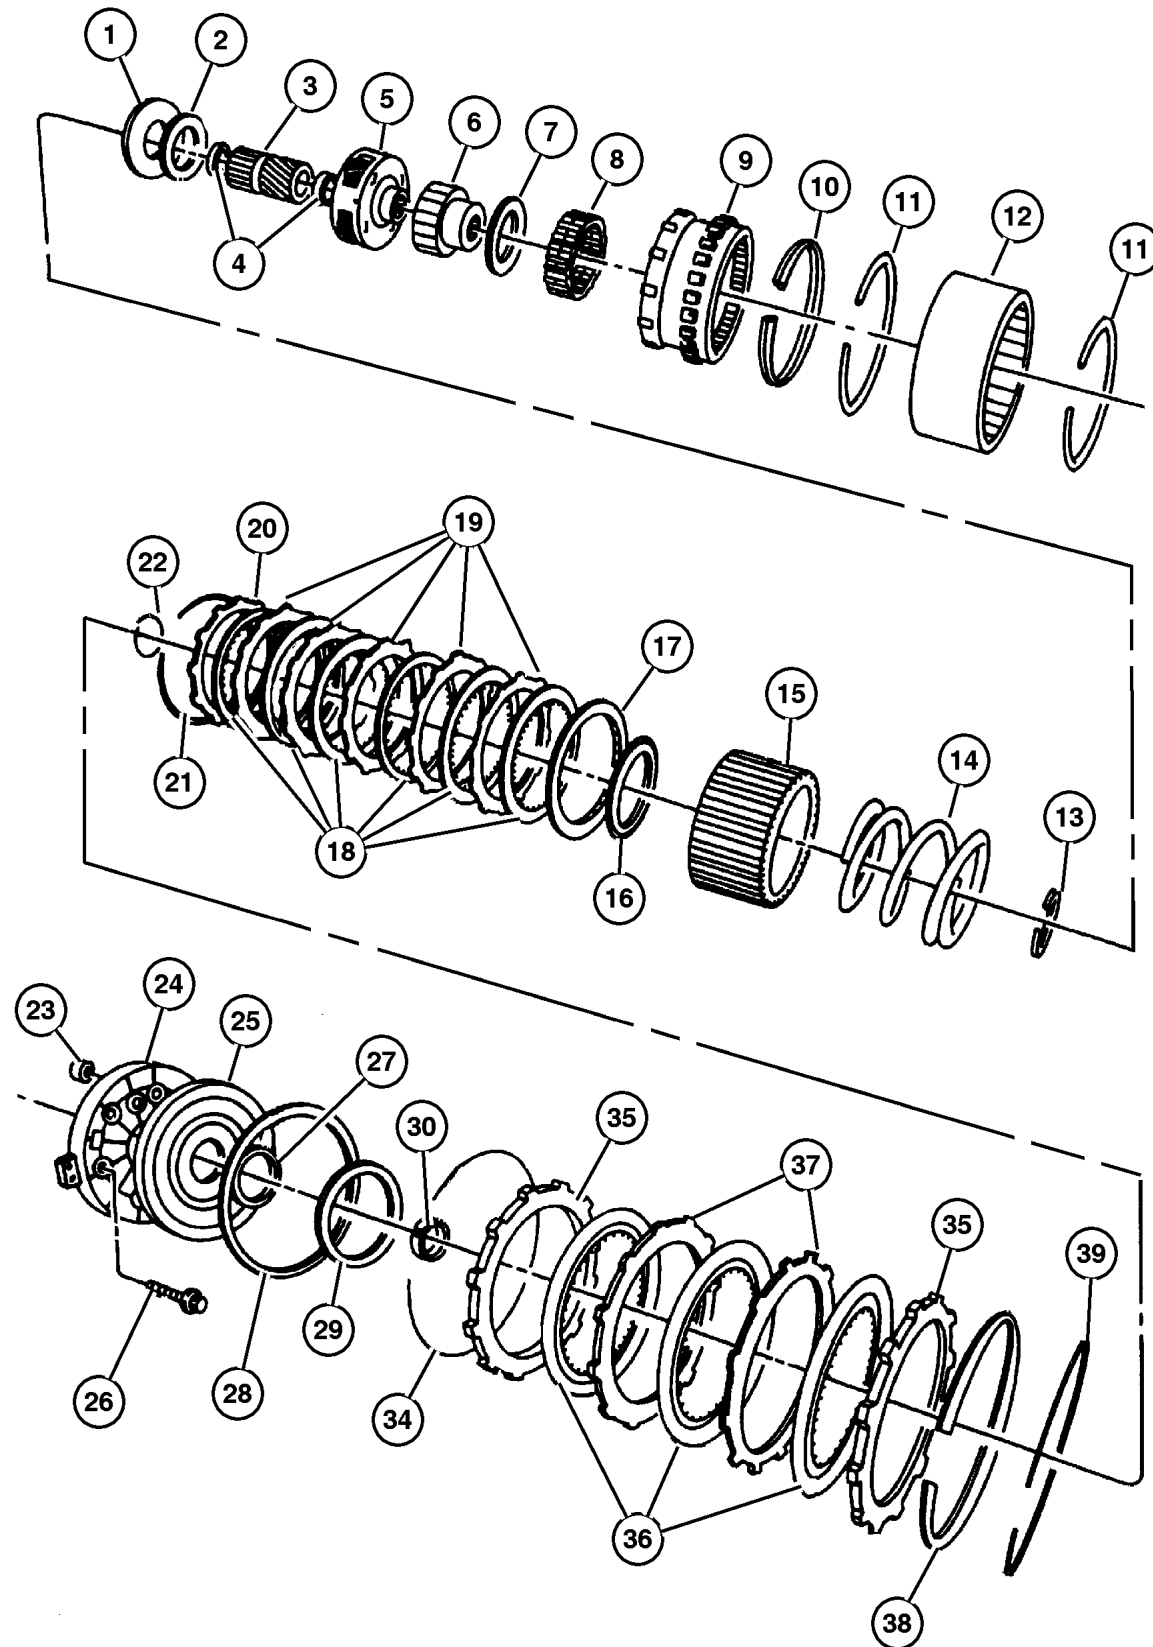Clutch, Overdrive with Gear Train - 47RE [DGP] Figure 47RE-1010



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-31		1	6, 7, 8				DGP		SPACER, Intermediate Shaft, .175
	4431 917	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
-32		1	1, 2, 3				DGP		SPACER, Intermediate Shaft, .193
	4431 918	1	6, 7, 8				DGP		
		1	6, 7, 8				DGP		
-33		1	1, 2, 3				DGP		SPACER, Intermediate Shaft, .211
	4431 919	1	6, 7, 8				DGP		
		1	6, 7, 8				DGP		
34		1	6, 7, 8				DGP		SNAP RING, Overdrive Clutch
	4461 082	1	1, 2, 3				DGP		
		1	1, 2, 3				DGP		
35									PLATE, Transmission Clutch Reaction
	4461 033	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
36									DISC, Direct Clutch
	4461 181	5	1, 2, 3				DGP		
		5	6, 7, 8				DGP		
37									PLATE, Transmission Clutch Reaction
	4461 047	5	1, 2, 3				DGP		
		5	6, 7, 8				DGP		
38									SPRING, Overdrive Clutch
	4461 066	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		
39									SNAP RING, 6.50 OD
	4461 065	1	1, 2, 3				DGP		
		1	6, 7, 8				DGP		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

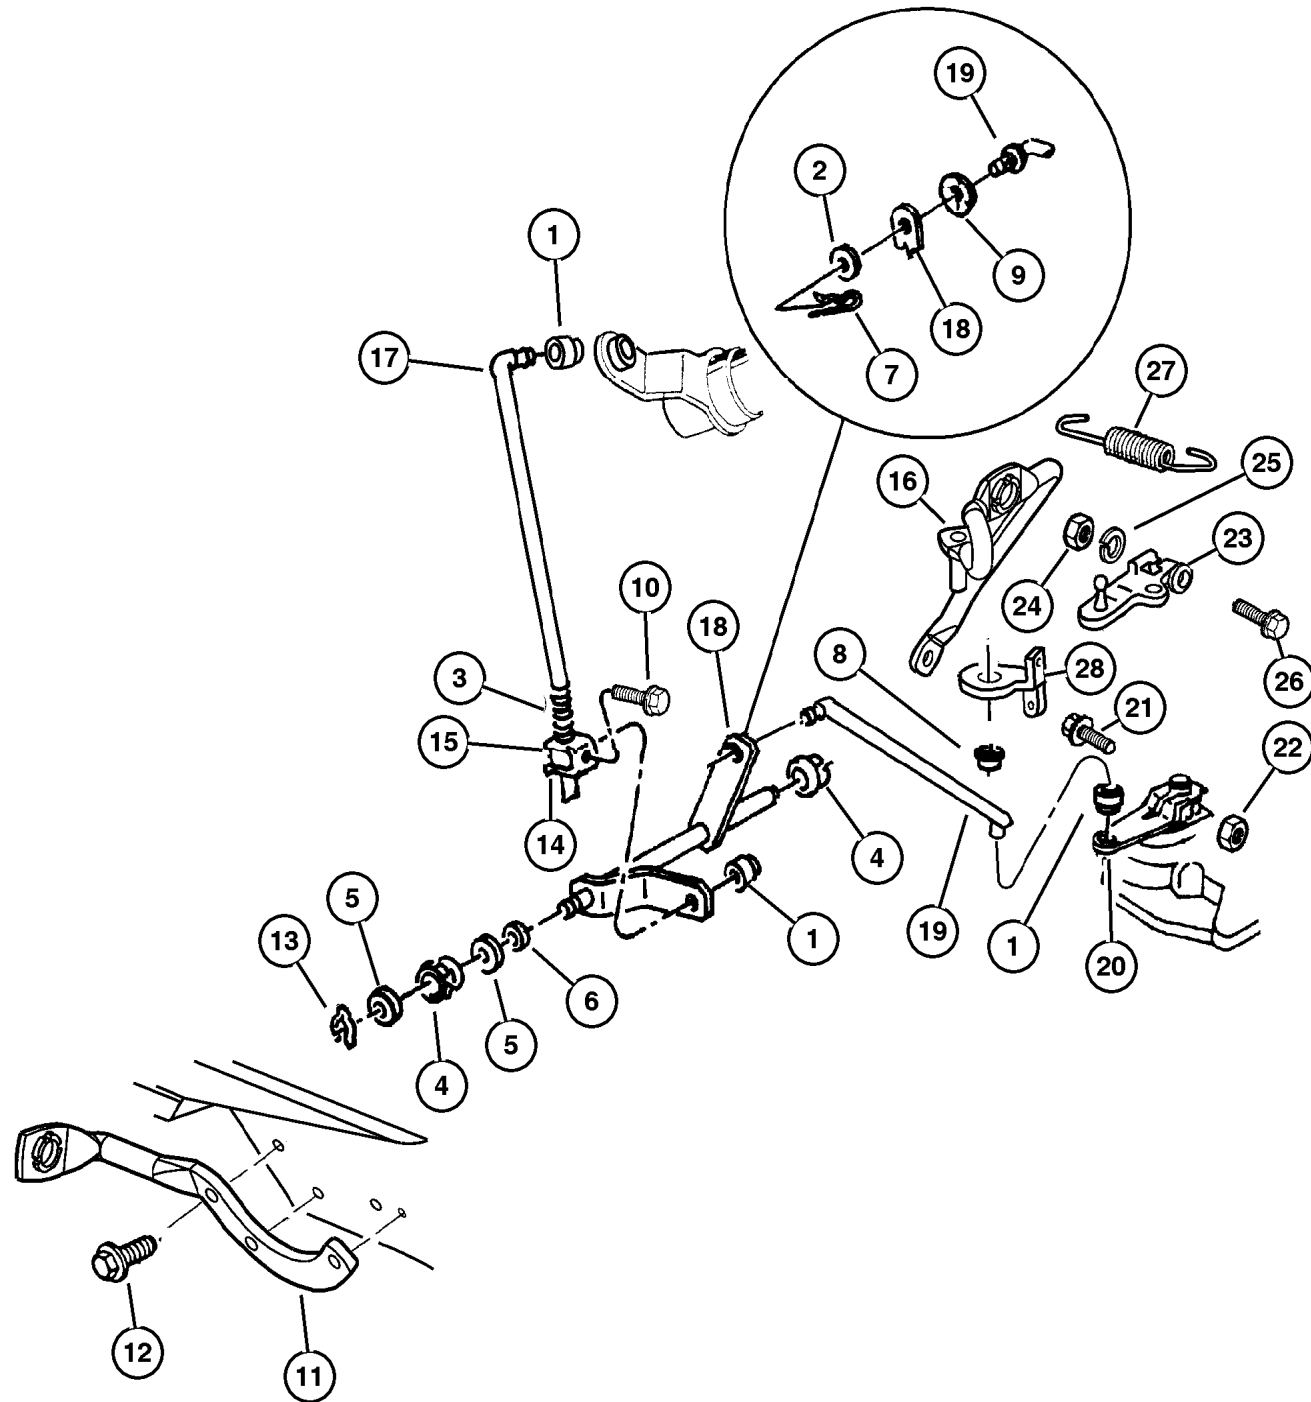
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Controls, Gearshift Lower - 47RE [DGP] Figure 47RE-1210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES; Sales Codes									
[DGP] = 47RE Automatic Transmission									
[DG0] = All Automatic Transmissions									
1	3575 333	2					DG0		GROMMET, Control Rod Front
2	J012 0393	1					DG0		WASHER, Flat
3	3575 354	1					DG0		SPRING, Gearshift Control Rod
4	3467 800	2					DG0		BUSHING, Gearshift Torque Shaft
5	6504 763	2					DG0		WASHER, Flat, M13.5
6	6034 943	1					DGP		WASHER
7	J400 4295	1					DGP		PIN, Rod To Trans Shaft Lever
8	6028 114	1					DG0		NUT, Hex, .437-14
9	J012 0393	1					DGP		WASHER, Flat
10	0181 082	1					DG0		BOLT, Hex Head, 5/16-18x1/2
11	52077 802AD	1					DGP		BRACKET, Gearshift
12									SCREW, (NOT SERVICED) (Not Serviced)
13	6032 475	1					DGP		RING, Transmission Torque Shaft
14	5210 7734	1					DG0		CLAMP
15	3575 334	1					DG0		SWIVEL, Gearshift Control Rod
16	52107 807AB	1					DGP		BRACKET, Torque Shaft
17	52107 699AB	1					DG0		ROD, Gear Shift Control
18	52079 228AC	1					DGP		TORQUE SHAFT, Gearshift
19	52077 630AB	1					DGP		ROD, Gear Shift Control, Transmission
20	52107 825AA	1					DGP,		LEVER, Manual Control
21	0180 034	1					DGT,		SCREW AND WASHER, Hex Head,
22	0115 984	1					DG0		.25-20x1.50
23	5207 9065	1					DG0		NUT, Brake Line
24	0115 984	1					DGP,		LEVER, Throttle Valve
25	0138 165	1					DG0		NUT, Brake Line
26	0181 065	1					DG0		WASHER, Lock
27	5300 9055	1					DG0		BOLT, Hex Head, .25-20x1.00
28	5207 8718	1					DG0		SPRING, Throttle Valve Return
									BRACKET, Throttle Valve Spring

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year


September 16, 2005






Group – 3500

Manual Transmission 5 Speed


GROUP 3500 - Manual Transmission 5 Speed

Illustration Title	Group-Fig. No.
Transmission Assembly	
Transmission - 3500 [DDC]	Fig. 3500-110
Case and Extension	
Case and Extension - 3500 [DDC]	Fig. 3500-210
Gear Train	
Gear Train - 3500 [DDC]	Fig. 3500-410
Fork and Rails	
Shift Forks And Rails - 3500 [DDC]	Fig. 3500-910
Gearshift Controls	
Gear Shift Controls - 3500 [DDC]	Fig. 3500-1210

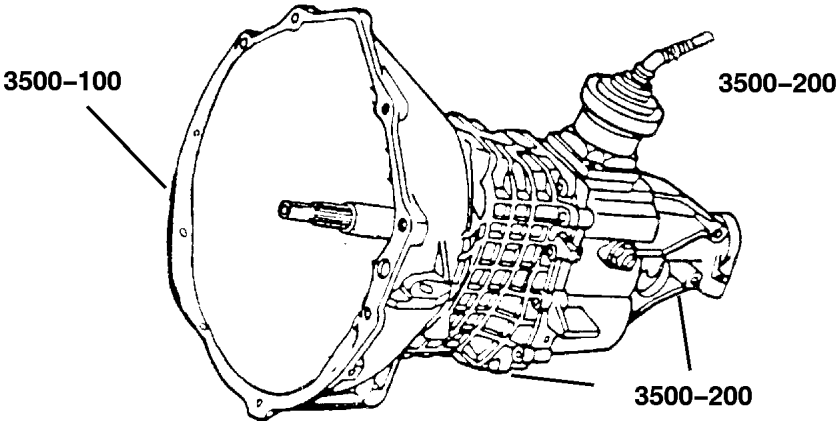
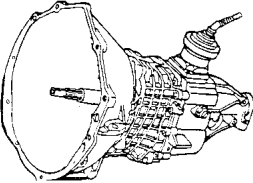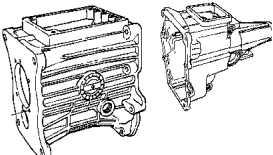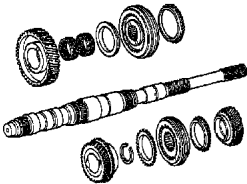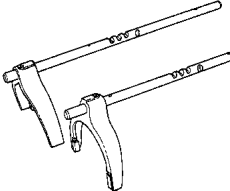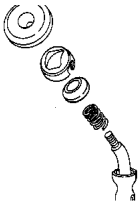
<div><div>3500-100</div><div>Transmission Assembly</div></div>	<div><div>3500-200</div><div>Case and Extension</div></div>	<div><div>3500-400</div><div>Gear Train</div></div>	<div><div>3500-900</div><div>Fork and Rails</div></div>
<div><div>3500-1200</div><div>Gearshift Controls</div></div>			

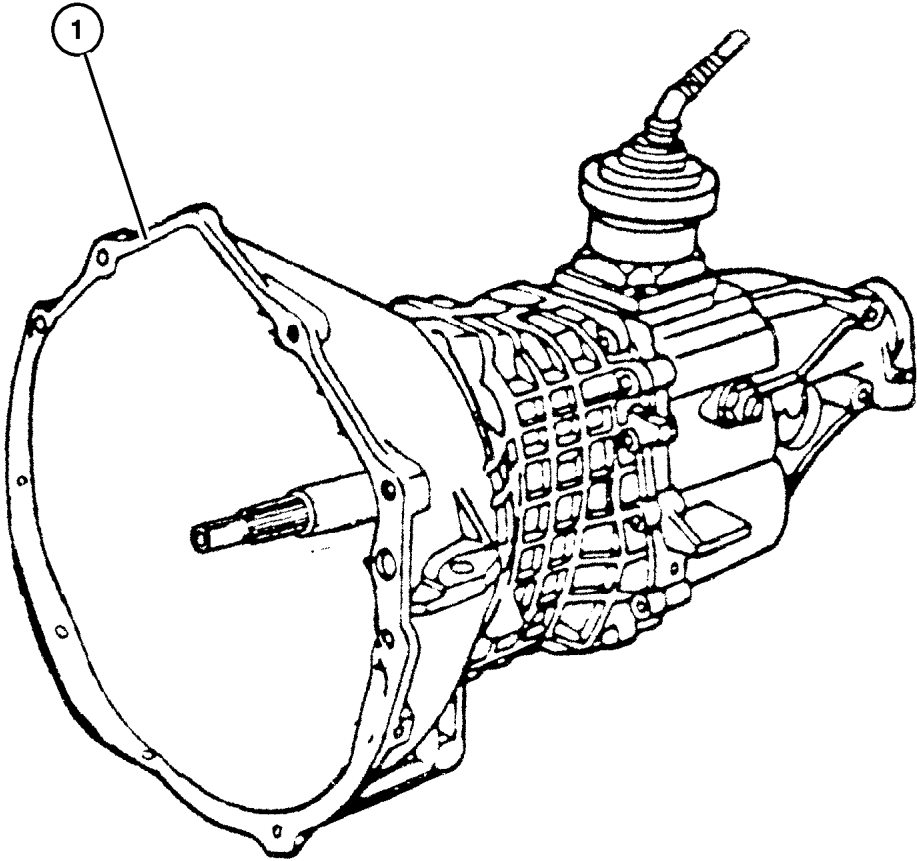Transmission - 3500 [DDC]
Figure 3500-110



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: Sales Codes
[DDC] = 5 Speed Heavy Duty Manual Transmission
[EL0] = All 5.2L 8 Cylinder Gas Engines
1 TRANSMISSION, 5 Speed

52108 100AA	1	1, 2, 3	EL0	DDC	
52108 101AA	1	6, 7, 8	EL0	DDC	

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	


Case and Extension - 3500 [DDC]
Figure 3500-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes									
[DDC] = 5 Speed Heavy Duty Manual Transmission									
[EL0] = All 5.2L 8 Cylinder Gas Engines									
1	5015 187AA	1	1, 2, 3			EL0	DDC		CASE, Transmission
		1	6, 7, 8			EL0	DDC		
2	5003 287AA	1	1, 2, 3			EL0	DDC		CASE, Transmission Rear
	5014 483AA	1	6, 7, 8			EL0	DDC		
3	4874 019	1	1, 2, 3			EL0	DDC		RETAINER, Shaft
		1	6, 7, 8			EL0	DDC		
4	4886 199AB	1	1, 2, 3			EL0	DDC		LEVER, Gearshift
		1	6, 7, 8			EL0	DDC		
5	4886 153AA	1	1, 2, 3			EL0	DDC		SEAL, Shift Lever
		1	6, 7, 8			EL0	DDC		
6	4741 313	1	1, 2, 3			EL0	DDC		BOLT, M8-1.25x70
		1	6, 7, 8			EL0	DDC		
7	4741 144	4	1, 2, 3			EL0	DDC		BOLT, Hex Head
		4	6, 7, 8			EL0	DDC		
8	4741 123	3	1, 2, 3			EL0	DDC		BOLT, Hex Head, M8x1.25x50
		11	6, 7, 8			EL0	DDC		
9	4741 115	1	1, 2, 3			EL0	DDC		BOLT, Hex
		1	6, 7, 8			EL0	DDC		
10	4741 122	2	1, 2, 3			EL0	DDC		PIN, Locating
		2	6, 7, 8			EL0	DDC		
11	4741 121	1	1, 2, 3			EL0	DDC		SWITCH, Back Up Lamp
		1	6, 7, 8			EL0	DDC		
12	4740 901	1	1, 2, 3			EL0	DDC		VENT, Transmission
		1	6, 7, 8			EL0	DDC		
13									PLUG, Oil Fill

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

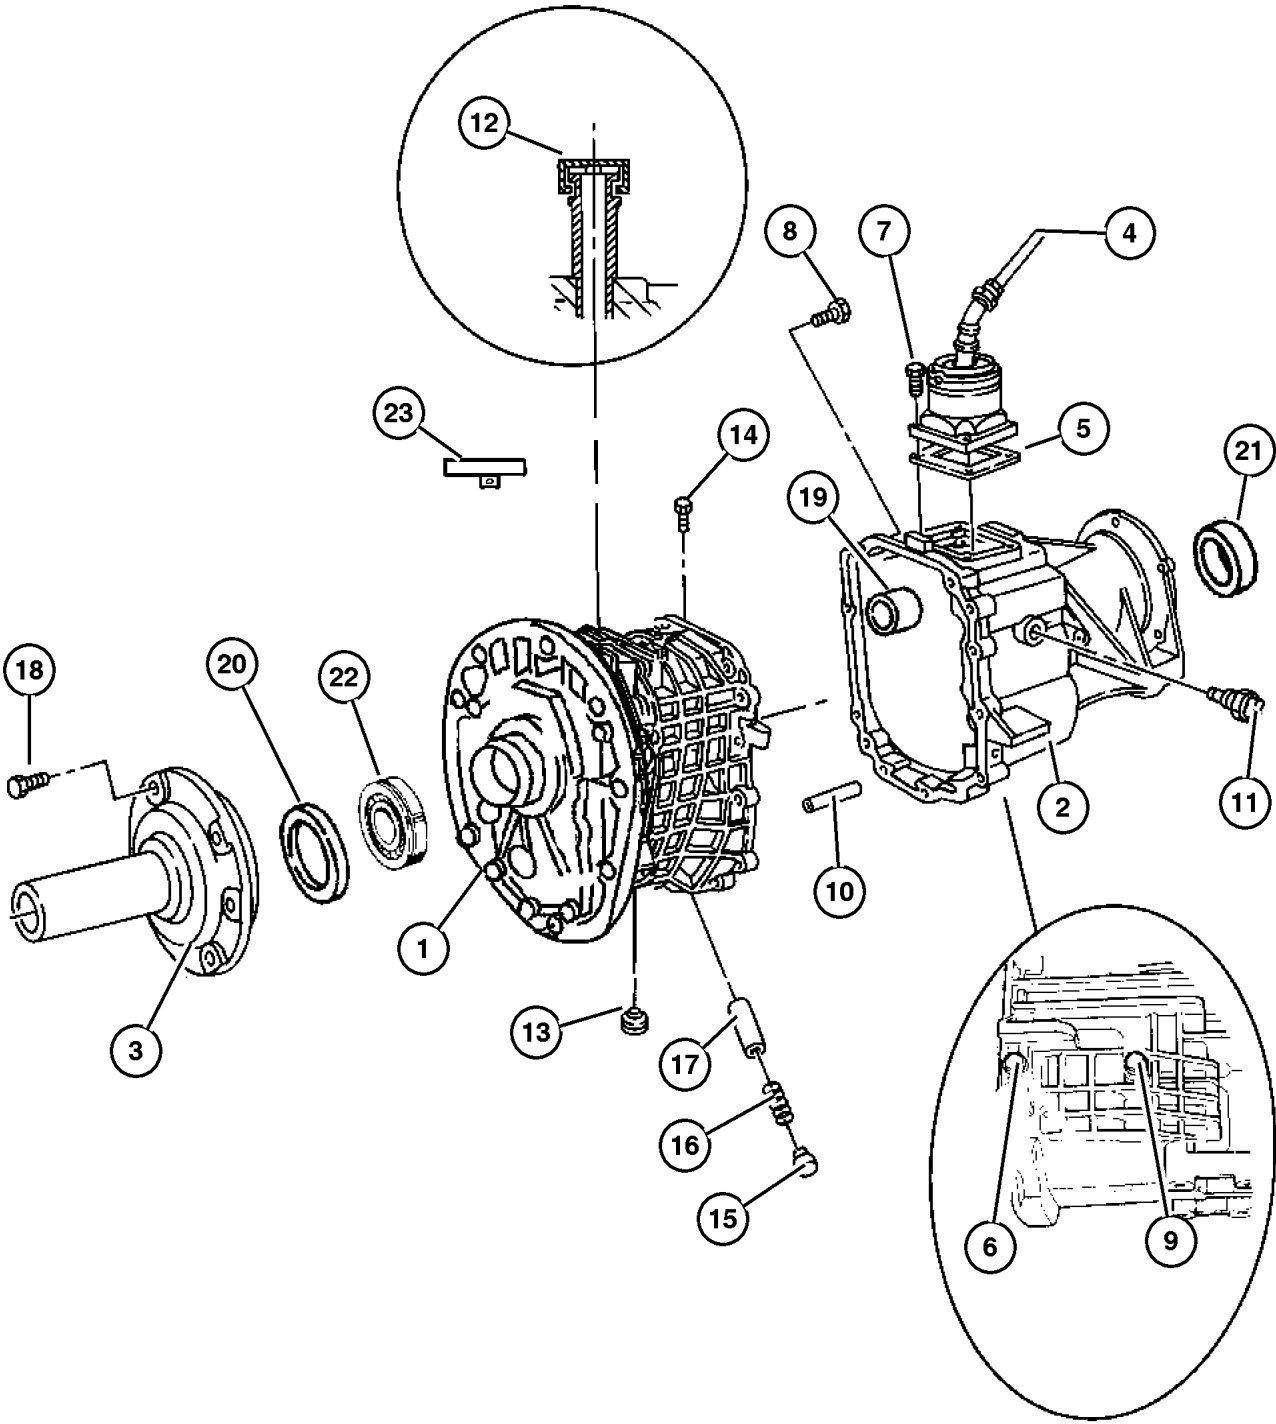September 16, 2005




Case and Extension - 3500 [DDC]
Figure 3500-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
14	4882 280	1	1, 2, 3			EL0	DDC		
		1	6, 7, 8			EL0	DDC		
	4740 904	1	1, 2, 3			EL0	DDC		PIN, Detent
		1	6, 7, 8			EL0	DDC		
15	4741 128	1	1, 2, 3			EL0	DDC		CAP, Detent
		1	6, 7, 8			EL0	DDC		
16	4773 182	1	1, 2, 3			EL0	DDC		SPRING, Shift Detent
		1	6, 7, 8			EL0	DDC		
17	5016 233AA	1	1, 2, 3			EL0	DDC		PLUNGER
		1	6, 7, 8			EL0	DDC		
18	4741 300	6	1, 2, 3			EL0	DDC		BOLT, Hex Head, M6x1.00x25
		6	6, 7, 8			EL0	DDC		
19	4741 112	1	1, 2, 3			EL0	DDC		BEARING, Ball
		1	6, 7, 8			EL0	DDC		
20	4741 296	1	1, 2, 3			EL0	DDC		SEAL, Input Shaft
		1	6, 7, 8			EL0	DDC		
21	4741 118	1	6, 7, 8			EL0	DDC		SEAL, Output Shaft
									BEARING, Input Shaft
23	4874 174	1	1, 2, 3			EL0	DDC		
		1	6, 7, 8			EL0	DDC		
	4740 902	1	1, 2, 3			EL0	DDC		VENT, Transmission
		1	6, 7, 8			EL0	DDC		


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

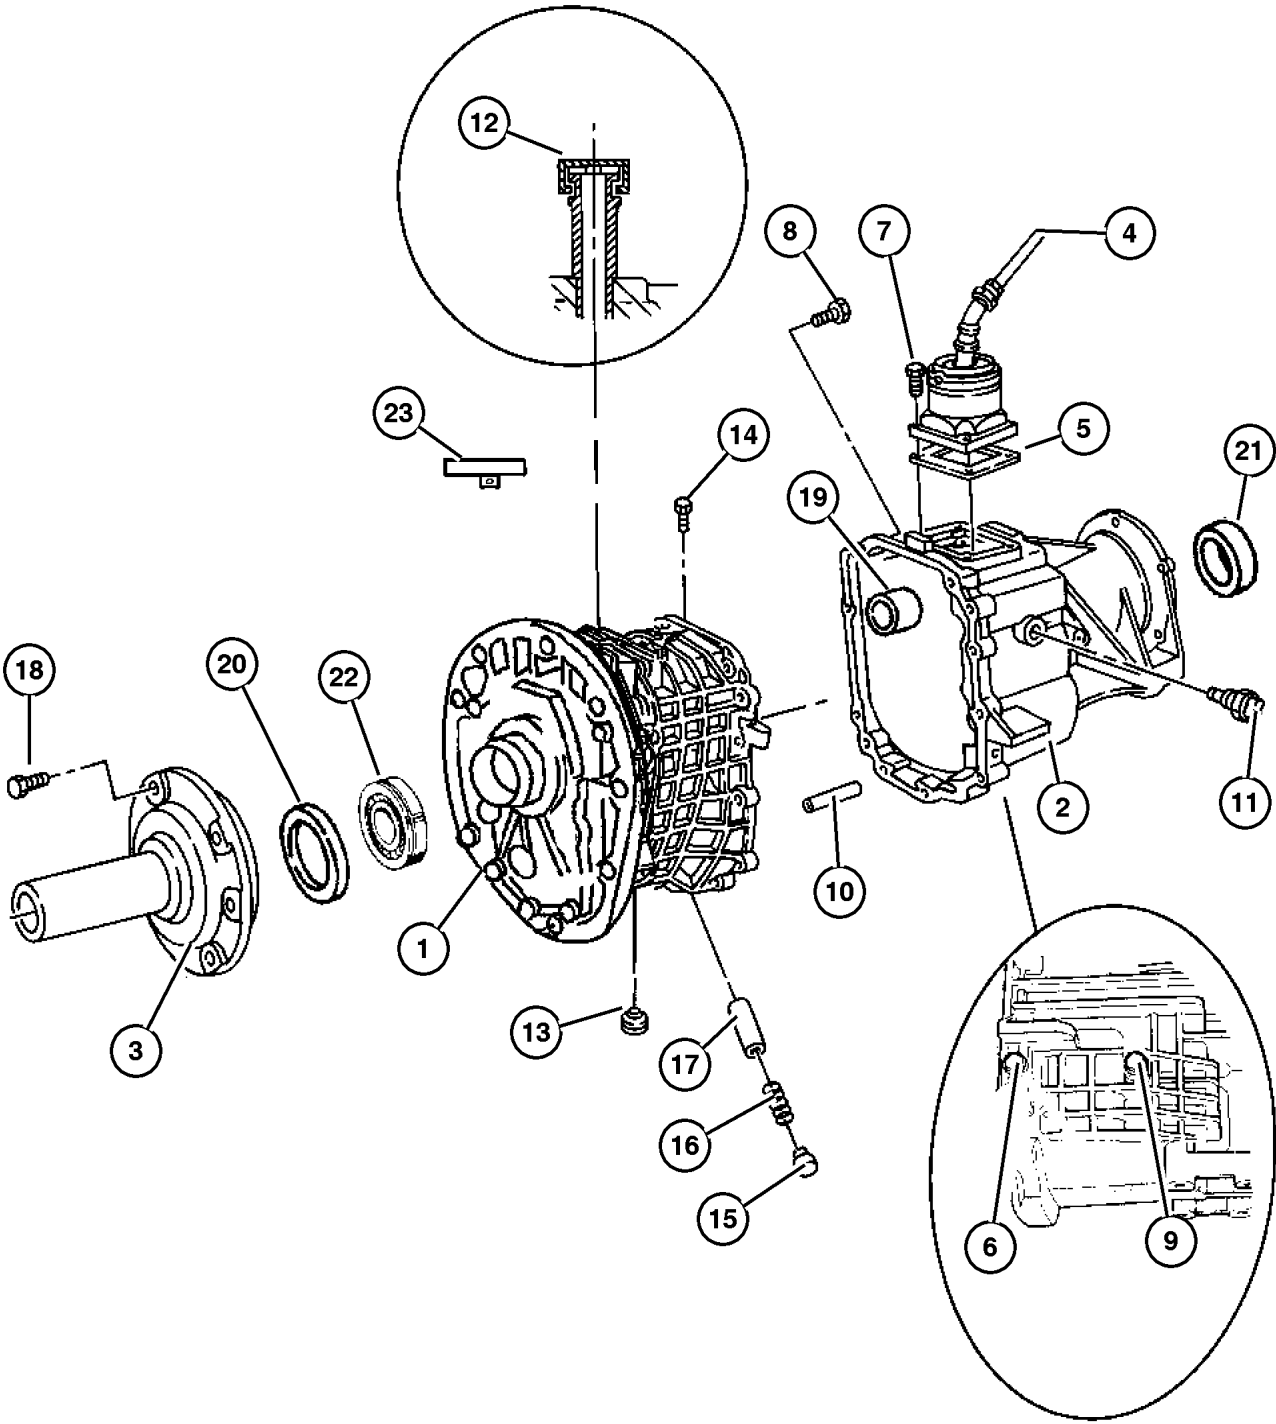September 16, 2005



Gear Train - 3500 [DDC]
Figure 3500-410

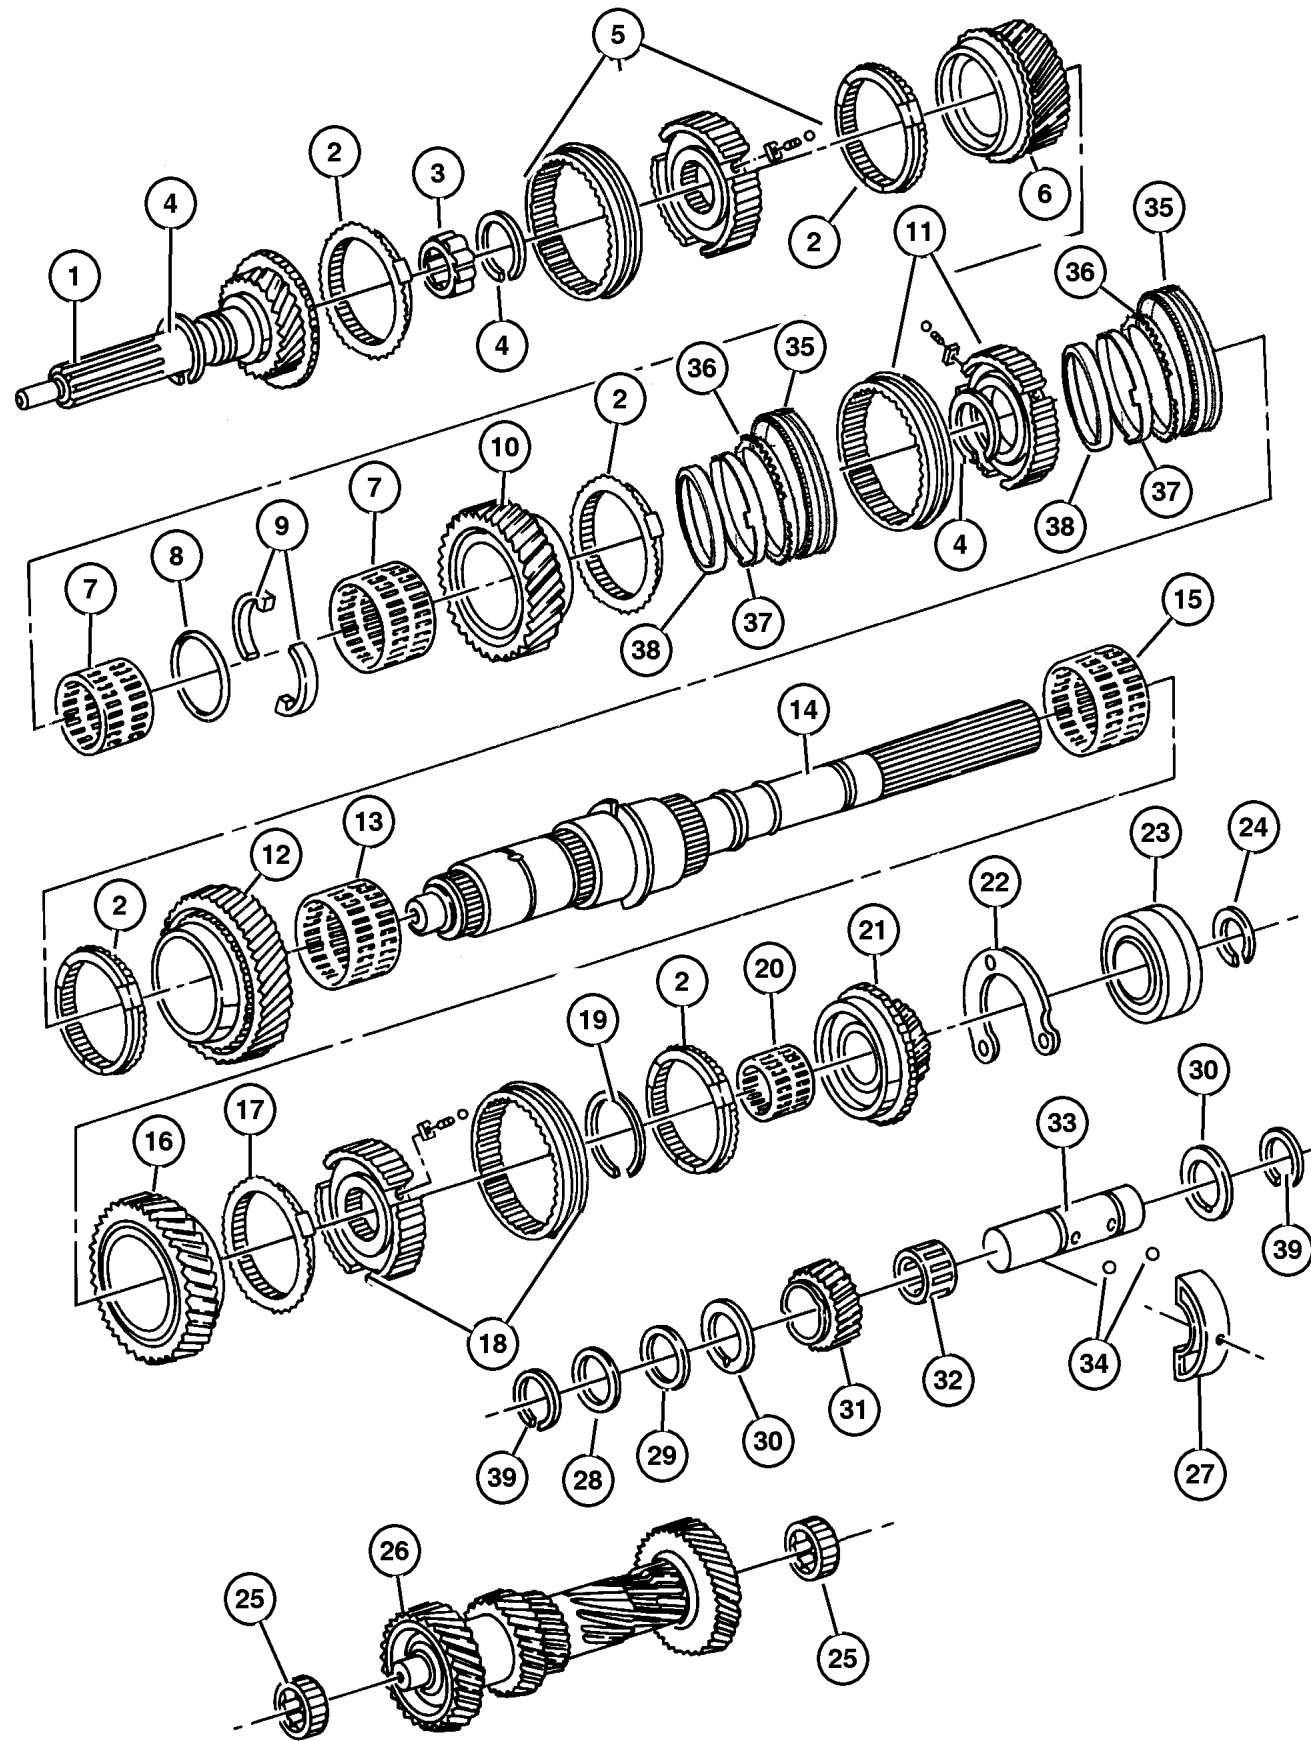

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes									
[DDC] = 5 Speed Heavy Duty Manual Transmission									
[EL0] = All 5.2L 8 Cylinder Gas Engines									
1	4741 294	1	1, 2, 3			EL0	DDC		INPUT SHAFT, Transmission
		1	6, 7, 8			EL0	DDC		
2	4741 277	2	1, 2, 3			EL0	DDC		STOP RING, Synchronizer
		2	6, 7, 8			EL0	DDC		
3	4741 878	1	1, 2, 3			EL0	DDC		NEEDLE BEARING, Input Shaft
		1	6, 7, 8			EL0	DDC		
4	4741 266	AR	1, 2, 3			EL0	DDC		SNAP RING, Output Shaft Bearing
		AR	6, 7, 8			EL0	DDC		
5	4741 293	1	1, 2, 3			EL0	DDC		SYNCHRONIZER, Third and Fourth
		1	6, 7, 8			EL0	DDC		
6	4883 718AA	1	1, 2, 3			EL0	DDC		GEAR, Third
		1	6, 7, 8			EL0	DDC		
7	4741 874	1	1, 2, 3			EL0	DDC		NEEDLE BEARING, Second Gear
		1	6, 7, 8			EL0	DDC		
8	4897 922AA	1	1, 2, 3			EL0	DDC		SNAP RING
		1	6, 7, 8			EL0	DDC		
9	4746 070	2	1, 2, 3			EL0	DDC		THRUST WASHER, Second And Third Gear
		2	6, 7, 8			EL0	DDC		
10	4874 358	1	1, 2, 3			EL0	DDC		GEAR, Second
		1	6, 7, 8			EL0	DDC		
11	4874 356	1	1, 2, 3			EL0	DDC		SYNCHRONIZER, First and Second
		1	6, 7, 8			EL0	DDC		
12	4874 355	1	1, 2, 3			EL0	DDC		GEAR, First
		1	6, 7, 8			EL0	DDC		
13									NEEDLE BEARING, Transmission

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

Gear Train - 3500 [DDC]
Figure 3500-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
14	4741 871	1	1, 2, 3			EL0	DDC		SHAFT, Output
		1	6, 7, 8			EL0	DDC		
	5003 288AA	1	1, 2, 3			EL0	DDC		
	5003 289AA	1	6, 7, 8			EL0	DDC		
15	4741 871	1	1, 2, 3			EL0	DDC		NEEDLE BEARING, Transmission
		1	6, 7, 8			EL0	DDC		
16									GEAR, Reverse
	4741 284	1	1, 2, 3			EL0	DDC		
17									STOP RING, Synchronizer
	4741 285	1	1, 2, 3			EL0	DDC		
18									SYNCHRONIZER, Fifth And Reverse
	4741 278	1	1, 2, 3			EL0	DDC		
19									RING, Transmission
	4741 805	1	1, 2, 3			EL0	DDC		
20									BEARING, Needle
		1	6, 7, 8			EL0	DDC		
21	4741 273	1	1, 2, 3			EL0	DDC		GEAR, Fifth
		1	6, 7, 8			EL0	DDC		
22	4883 300	1	1, 2, 3			EL0	DDC		RETAINER, Transmission Output Shaft Bearing
		1	6, 7, 8			EL0	DDC		
23	4741 114	1	6, 7, 8			EL0	DDC		BEARING, Output Shaft
	4741 116	1	1, 2, 3			EL0	DDC		
24	4741 866	1	6, 7, 8			EL0	DDC		SNAP RING, Output Shaft Bearing
		1	1, 2, 3			EL0	DDC		
25	4741 266	AR	1, 2, 3			EL0	DDC		BEARING, Countershaft
		AR	6, 7, 8			EL0	DDC		
26	4740 900	AR	1, 2, 3			EL0	DDC		SHAFT, Counter
		AR	6, 7, 8			EL0	DDC		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	


Gear Train - 3500 [DDC]
Figure 3500-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
27	4741 299	1	1, 2, 3			EL0	DDC		SUPPORT, Segment Idler Shaft
		1	6, 7, 8			EL0	DDC		
	4741 312	1	1, 2, 3			EL0	DDC		
		1	6, 7, 8			EL0	DDC		
28	4741 310	1	1, 2, 3			EL0	DDC		WASHER, Flat
		1	6, 7, 8			EL0	DDC		
29	4741 309	1	1, 2, 3			EL0	DDC		WASHER, Idler Gear
		1	6, 7, 8			EL0	DDC		
30	4741 307	2	1, 2, 3			EL0	DDC		THRUST WASHER, Reverse Idler
		2	6, 7, 8			EL0	DDC		
	4741 306	1	1, 2, 3			EL0	DDC		
		1	6, 7, 8			EL0	DDC		
32	4874 359	1	1, 2, 3			EL0	DDC		BEARING, Idler
		1	6, 7, 8			EL0	DDC		
33	4741 303	1	1, 2, 3			EL0	DDC		IDLER SHAFT, Transmission
		1	6, 7, 8			EL0	DDC		
34	4741 891	2	1, 2, 3			EL0	DDC		BALL, Check, 4 mm
		2	6, 7, 8			EL0	DDC		
35	4874 403	2	1, 2, 3			EL0	DDC		RING
		2	6, 7, 8			EL0	DDC		
36	4874 363	2	1, 2, 3			EL0	DDC		RING, Synchronizer Blocker
		2	6, 7, 8			EL0	DDC		
37	4874 405	2	1, 2, 3			EL0	DDC		CONE, Synchronizer
		2	6, 7, 8			EL0	DDC		
38	4874 404	2	1, 2, 3			EL0	DDC		RING
		2	6, 7, 8			EL0	DDC		
39	4741 311	2	1, 2, 3			EL0	DDC		SNAP RING
		2	1, 2, 3			EL0	DDC		


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

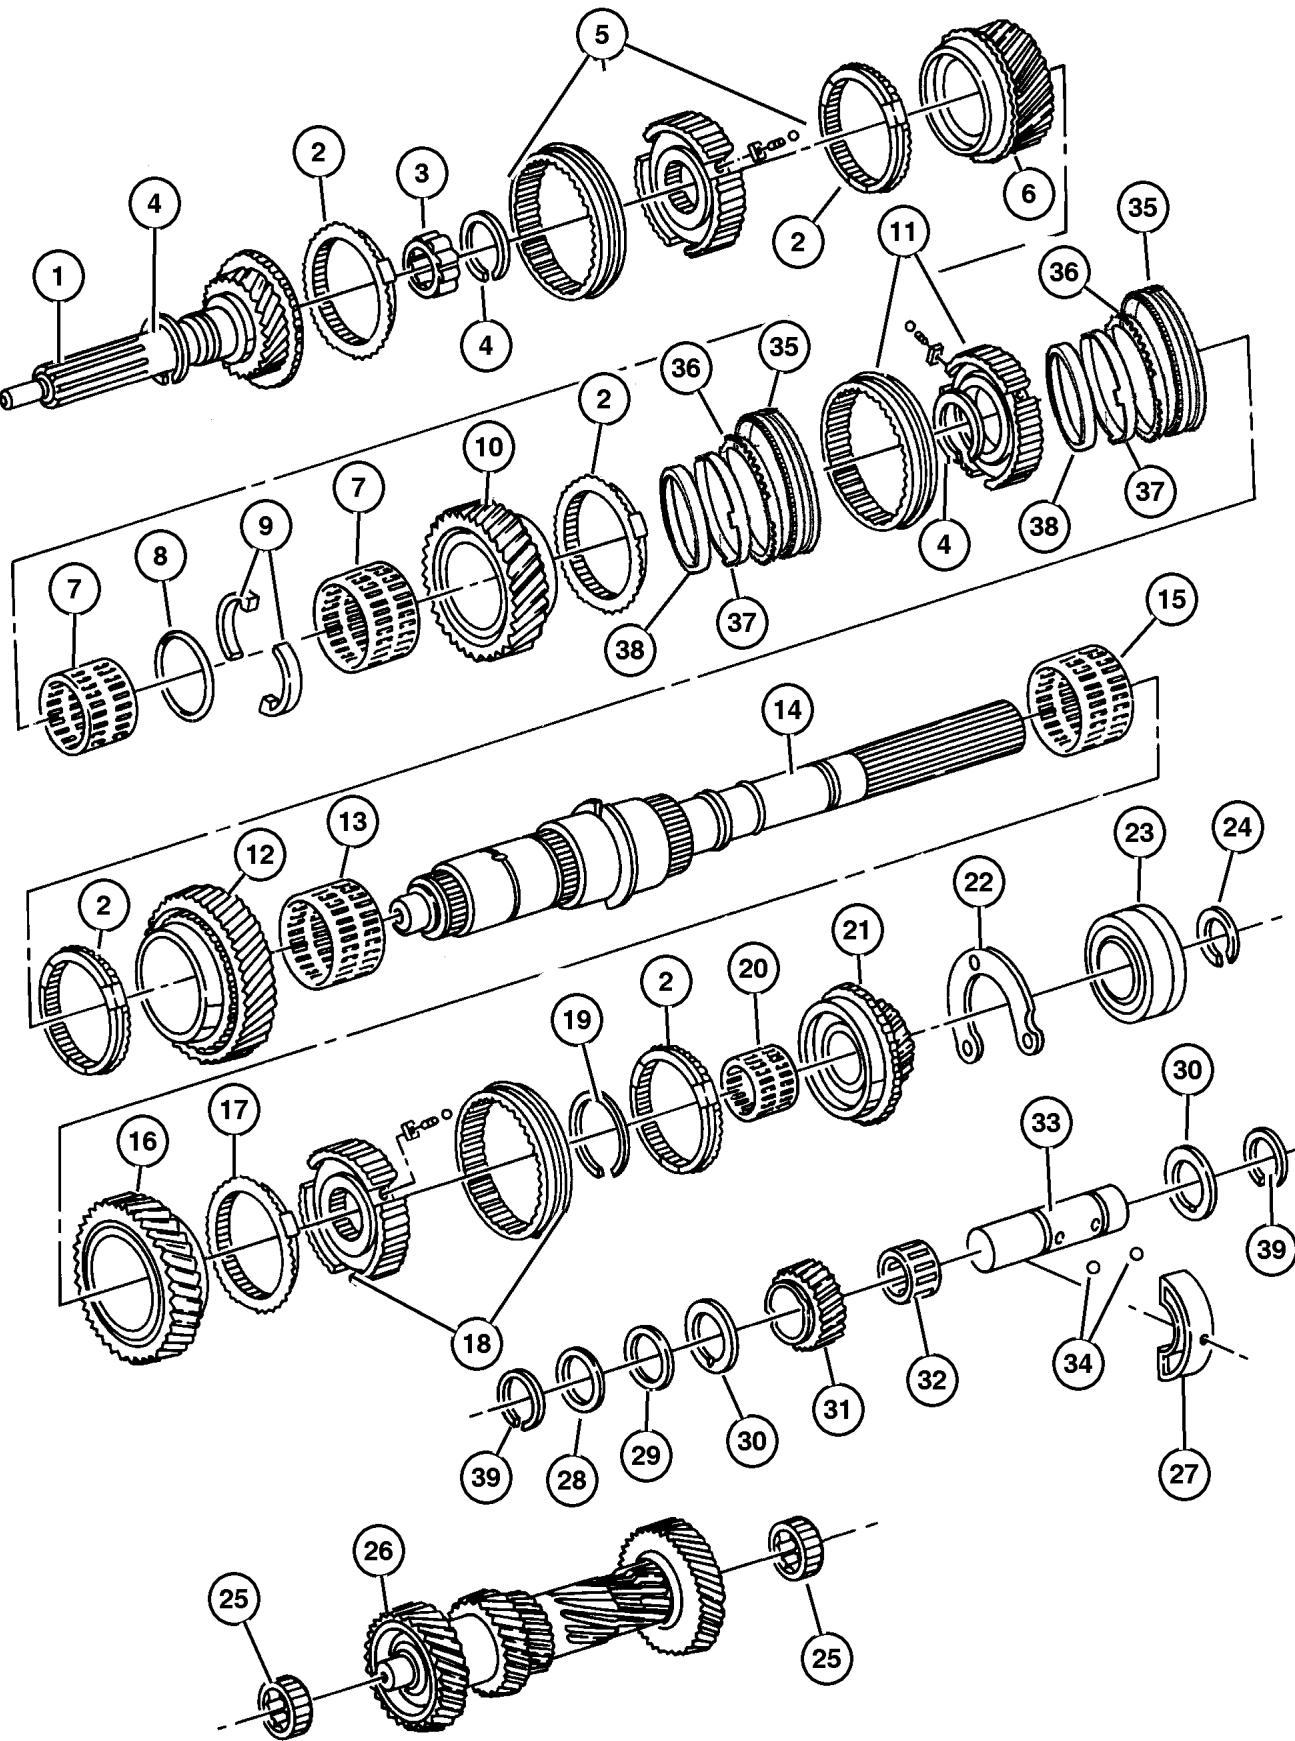September 16, 2005



Gear Train - 3500 [DDC] Figure 3500-410

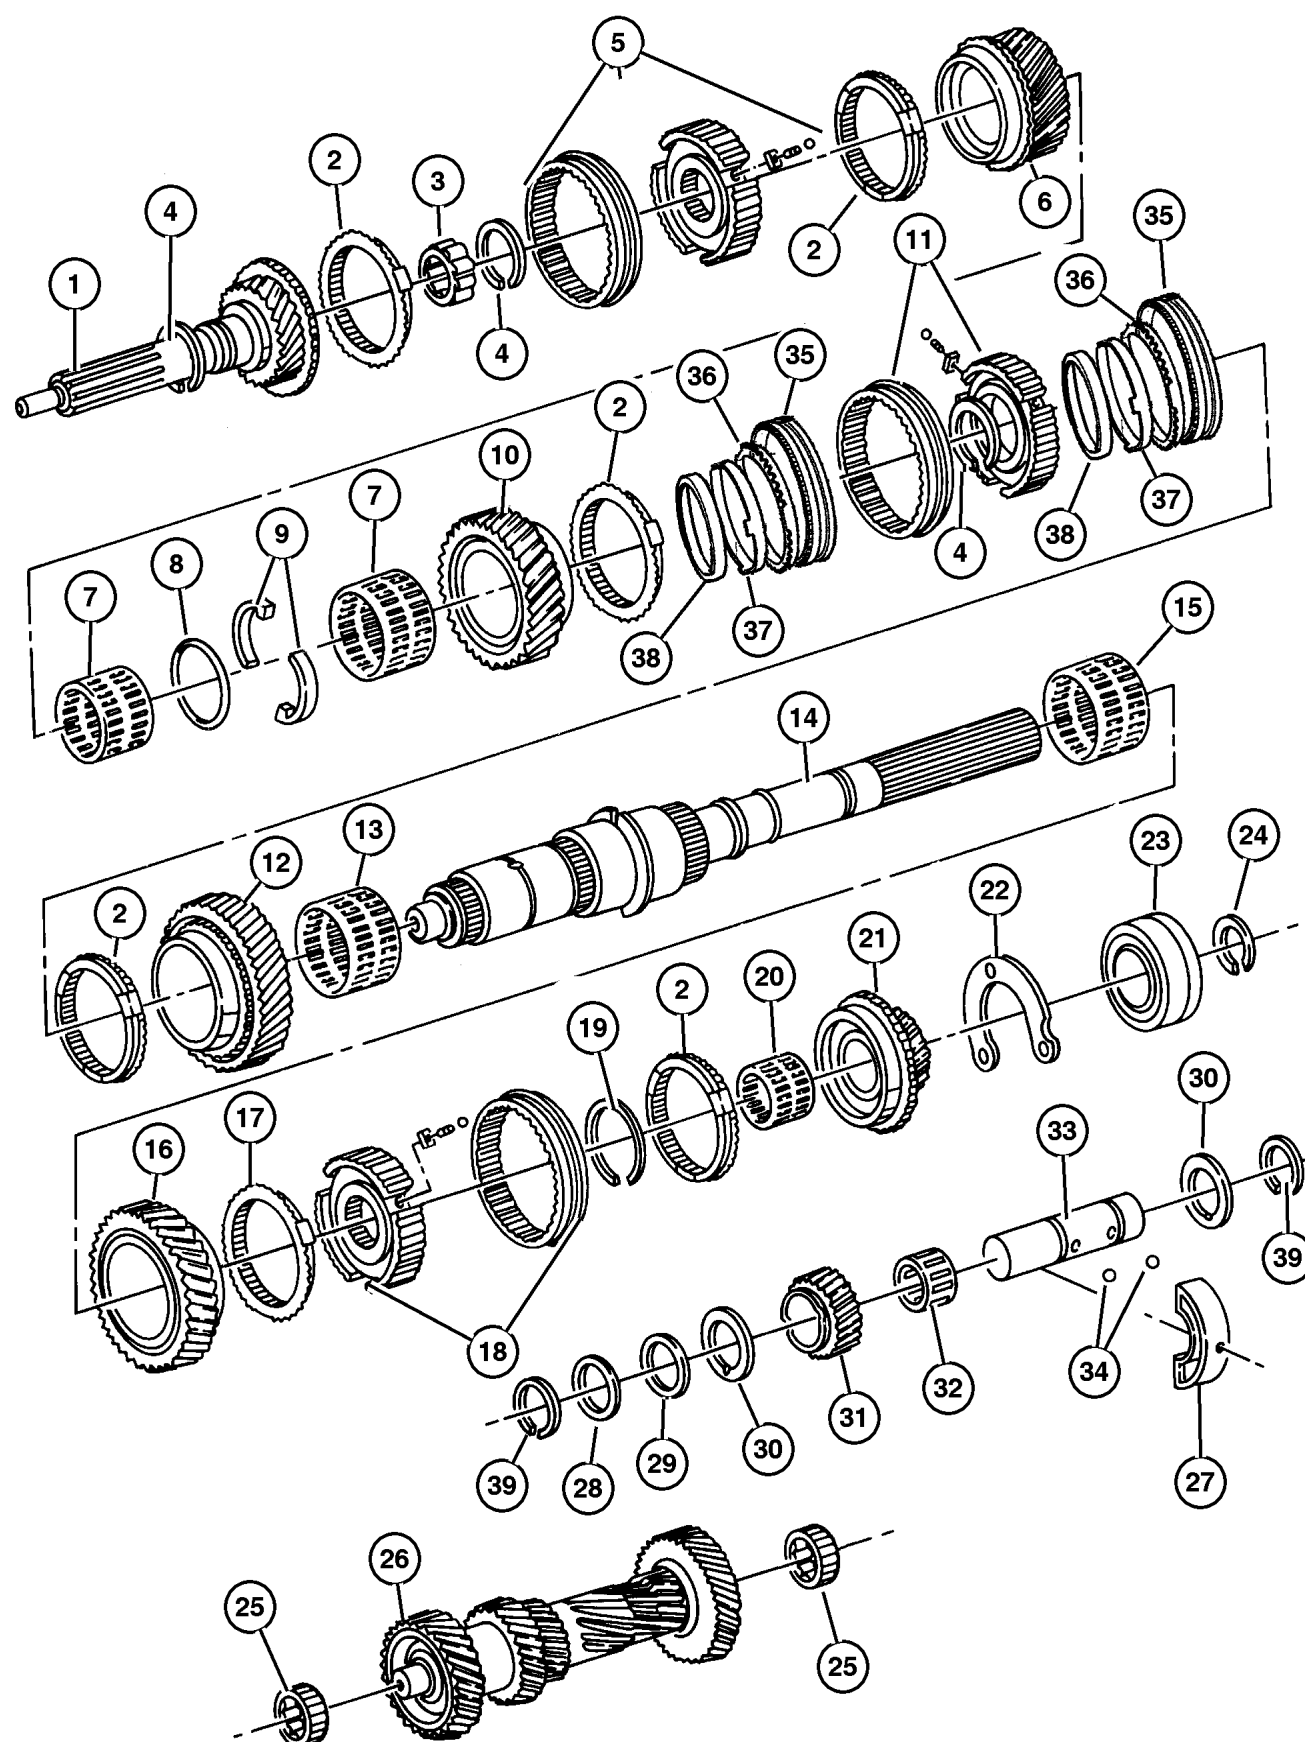

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

2	6, 7, 8	EL0	DDC
---	---------	-----	-----

DODGE RAM QUAD CAB/CHASSIS CAB (BL)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION

L = Rain Truck (All) 1, 6 = 1500 31 = Club Cab (138WB) EEP, EE0 = 5.2E 8 Cil. DGP = 47RE 4 Speed Auto.
2, 7 = 2500 33 = QuadCab(138WB) ETC, ET0, ETH = 5.9L 6 Cil. DGT, DG0 = 46RE 4 Speed Auto.

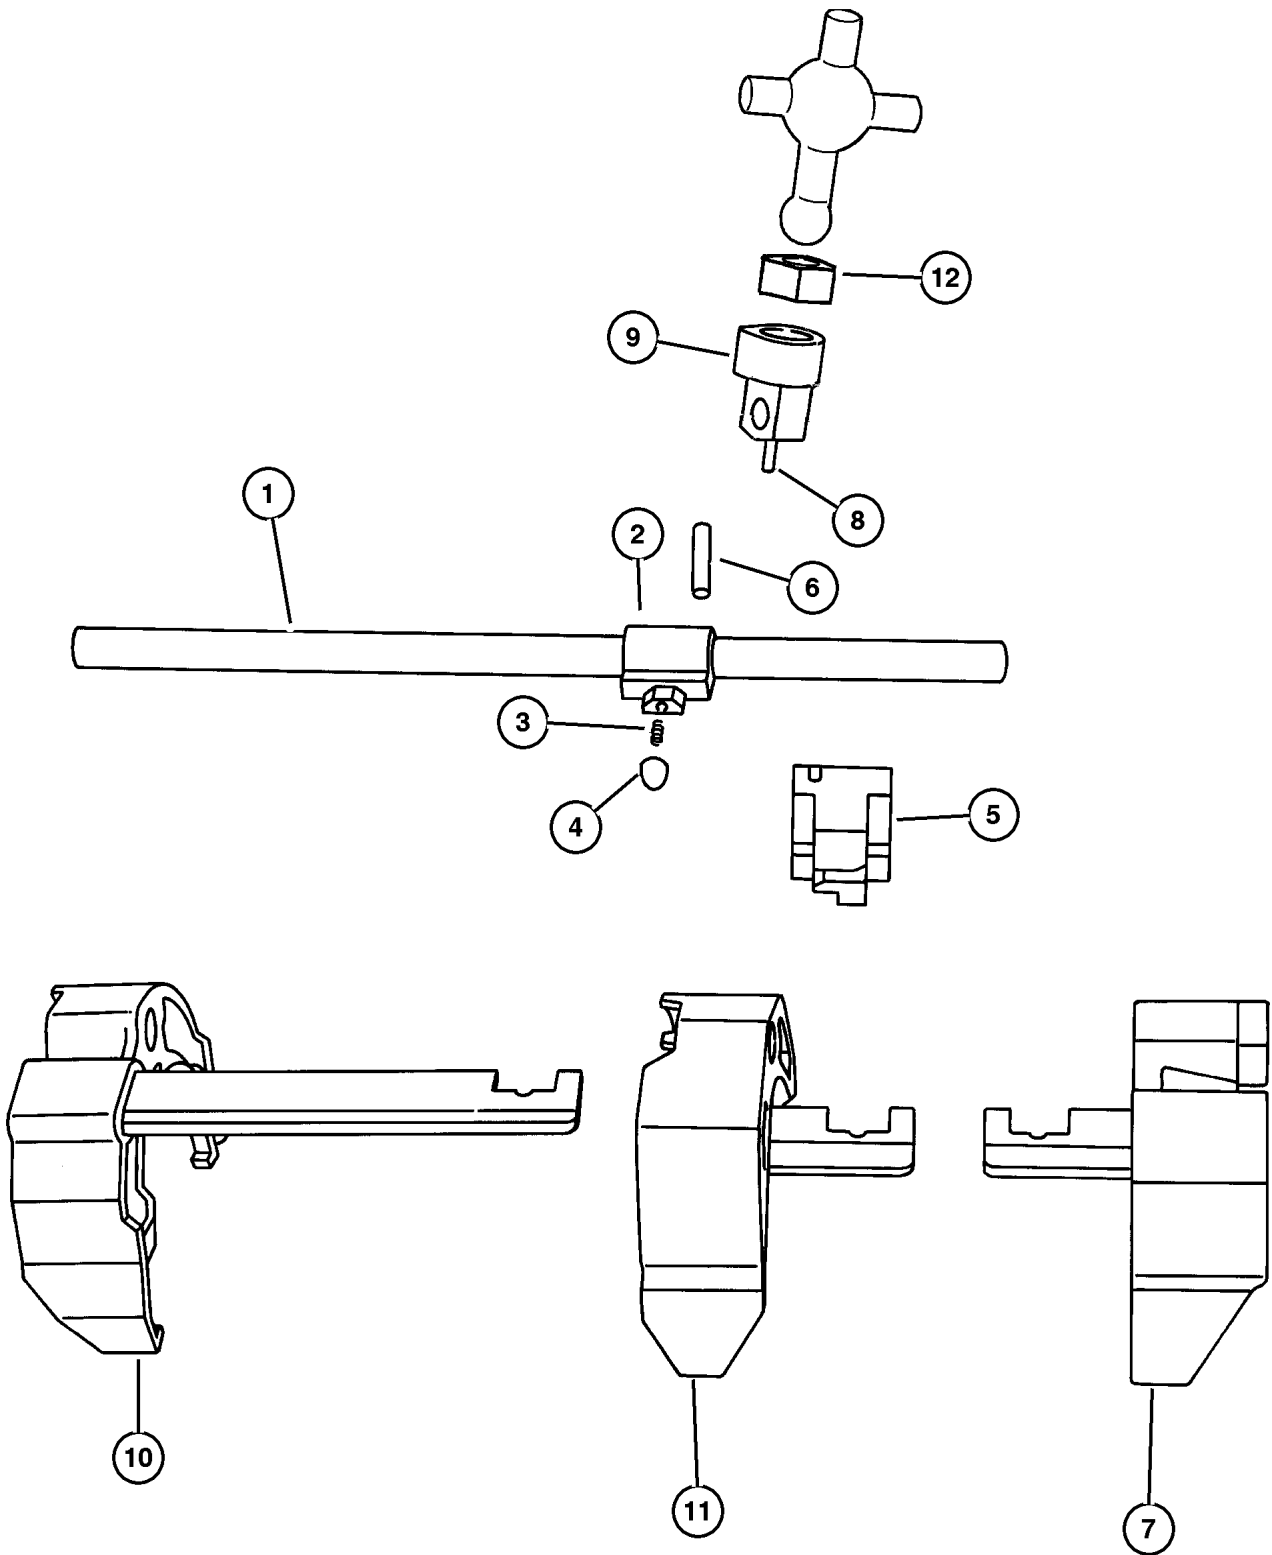
3, 8 = 3500 34 = Quad Cab (154 WB) EML, EMM, EM0 = 5.9L 8 Cyl. BDX, DDC = 5 Speed HD Manual
EWA, EW0 = 8.0L 10 Cyl. DDP, DD0 = 5 Speed Manual

EAA = All Engines
EAG = All Gas Engines
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Shift Forks And Rails - 3500 [DDC]
Figure 3500-910



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes									
[DDC] = 5 Speed Heavy Duty Manual Transmission									
[EL0] = All 5.2L 8 Cylinder Gas Engines									
1	5014 501AA	1	1, 2, 3			EL0	DDC		SHAFT, Selector
	5014 502AA	1	6, 7, 8			EL0	DDC		
2	5014 109AA	1	1, 2, 3			EL0	DDC		LEVER, Shift Shaft
		1	6, 7, 8			EL0	DDC		
3	4741 137	AR	1, 2, 3			EL0	DDC		SPRING, Lever
		AR	6, 7, 8			EL0	DDC		
4									PLUNGER
	5016 233AA	1	1, 2, 3			EL0	DDC		
		1	6, 7, 8			EL0	DDC		
5	5012 337AA	1	1, 2, 3			EL0	DDC		BUSHING, Transmission
		1	6, 7, 8			EL0	DDC		
6	4741 138	1	1, 2, 3			EL0	DDC		PIN, Shift Shaft
		1	6, 7, 8			EL0	DDC		
7	4886 076AA	1	1, 2, 3			EL0	DDC		FORK, Third and Fourth
		1	6, 7, 8			EL0	DDC		
8	4741 139	1	1, 2, 3			EL0	DDC		PIN, Shift Shaft
		1	6, 7, 8			EL0	DDC		
9	4874 352	1	1, 2, 3			EL0	DDC		SOCKET, Shift Shaft
		1	6, 7, 8			EL0	DDC		
10	4773 564	1	1, 2, 3			EL0	DDC		FORK, Transmission
		1	6, 7, 8			EL0	DDC		
11	4886 077AA	1	1, 2, 3			EL0	DDC		FORK, First and Second
		1	6, 7, 8			EL0	DDC		
12	5012 020AA	1	1, 2, 3			EL0	DDC		ISOLATOR, Shift Lever
		1	6, 7, 8			EL0	DDC		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Gear Shift Controls - 3500 [DDC]
Figure 3500-1210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: Sales Codes

[DDC] = 5 Speed Heavy Duty Manual Transmission

[ELO] = All 5.2L 8 Cylinder Gas Engines

1	4446 921	1					DD0		INSERT, Transmission Shift Knob
2	6502 556	1					DBB		NUT, Hex, M10-1.5
3	5210 4174	1					DBB		KNOB, Gearshift
4	52107 614AB	1					DBB		BOOT, Gear Shift Lever
5	6101 946	6	1, 2, 3				DBB		SCREW, Tapping
6	5210 7612	1					DBB		LEVER, Gearshift
7									CONSOLE, Floor
	5EZ5 4LAZ	1					DBB		AGATE
	5EZ5 4RC8	1					DBB		DARK CIRRUS
	5EZ5 4VK9	1					DBB		DARK SUEDE
8	52107 613AB	1					DBB		BOOT, Gear Shift Lever
9	6101 946	6	1, 2, 3				DBB		SCREW, Tapping

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, ELO = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Group – 4500

Manual Transmission 5 Speed

GROUP 4500 - Manual Transmission 5 Speed

Illustration Title Group-Fig. No.

Transmission Assembly

Transmission 5 Speed - 4500 [DDP][DDX] Fig. 4500-110

Case and Extension

Case 5 Speed - 4500 [DDP][DDX] Fig. 4500-210

Gear Train

Gear Train 5 Speed - 4500 [DDP][DDX] Fig. 4500-410

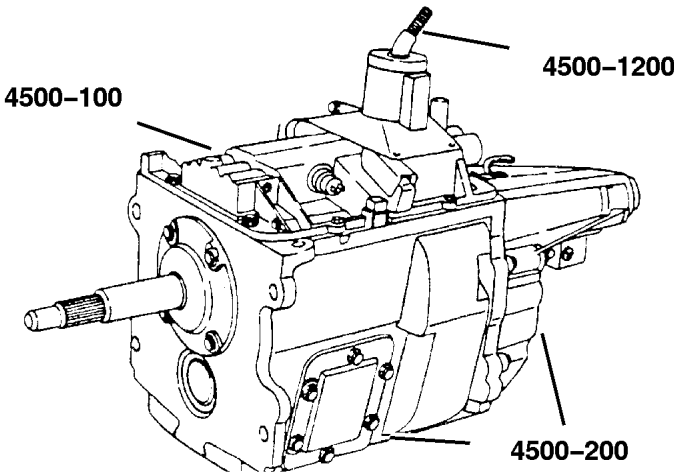
Gear Train 5 Speed - 4500 [DDP][DDX] Fig. 4500-420

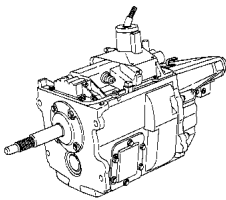
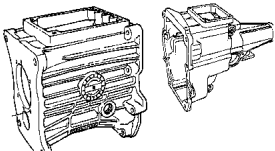
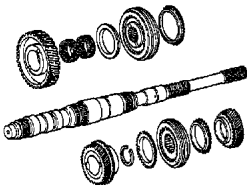
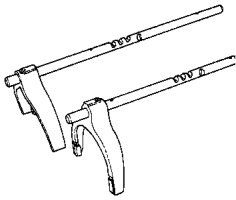
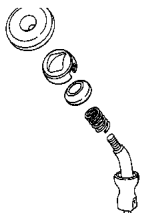
Fork and Rails

Forks And Controls 5 Speed - 4500 [DDP][DDX] Fig. 4500-910


Gearshift Controls

Gear Shift Controls 5 Speed - 4500 [DDP][DDX] Fig. 4500-1210



4500-100 Transmission Assembly	4500-200 Case and Extension	4500-400 Gear Train	4500-900 Fork and Rails
			
4500-1200 Gearshift Controls			
			

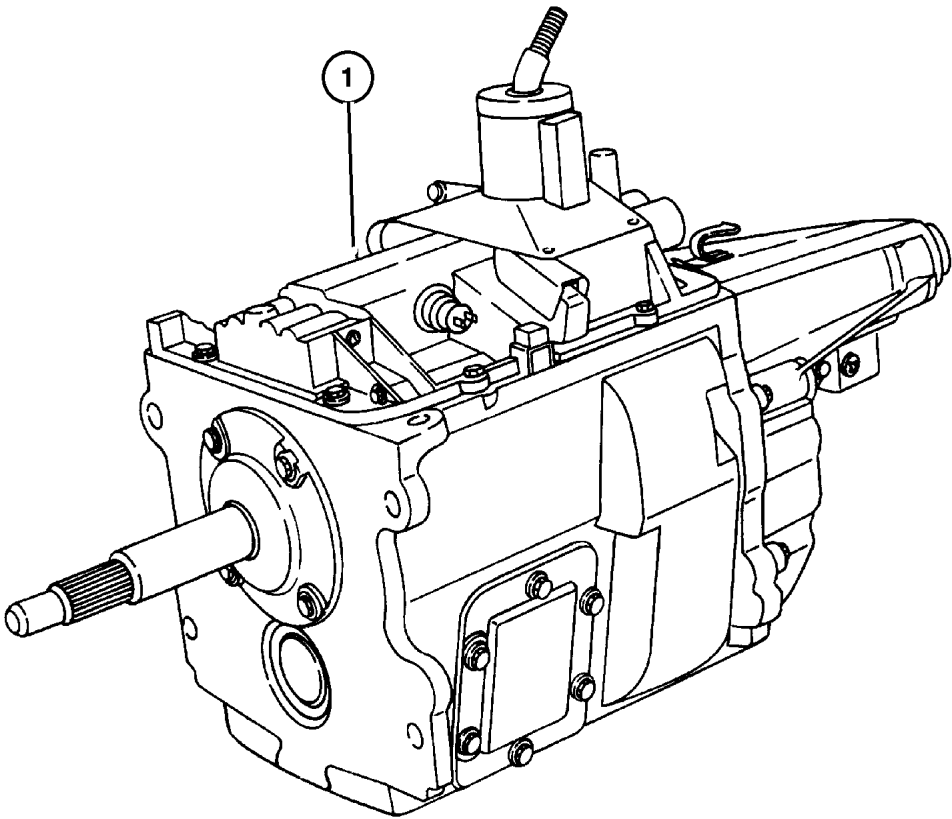Transmission 5 Speed - 4500 [DDP][DDX]
Figure 4500-110



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: Sales Codes
[DDP] = 5 Speed Manual Transmission
[DDX] = 5 Speed Heavy Duty Manual Transmission
[EL0] = All 5.2L 8 Cylinder Gas Engines
[EM0] = All 5.9L 8 Cylinder Gas Engines
[ET0] = All 5.9L Turbo Diesels
[EW0] = All 8.0L Gas Engines


1							TRANSMISSION, 5 Speed		
	52108 128AD	1	1, 2, 3			EL0,	DDP		
	52108 129AD	1	6, 7, 8			EM0			
						EL0,	DDP		
						EM0			
	52108 130AD	1	1, 2, 3			ET0,	DDX		
						EW0			
	52108 131AD	1	6, 7, 8			ET0,	DDX		
						EW0			

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

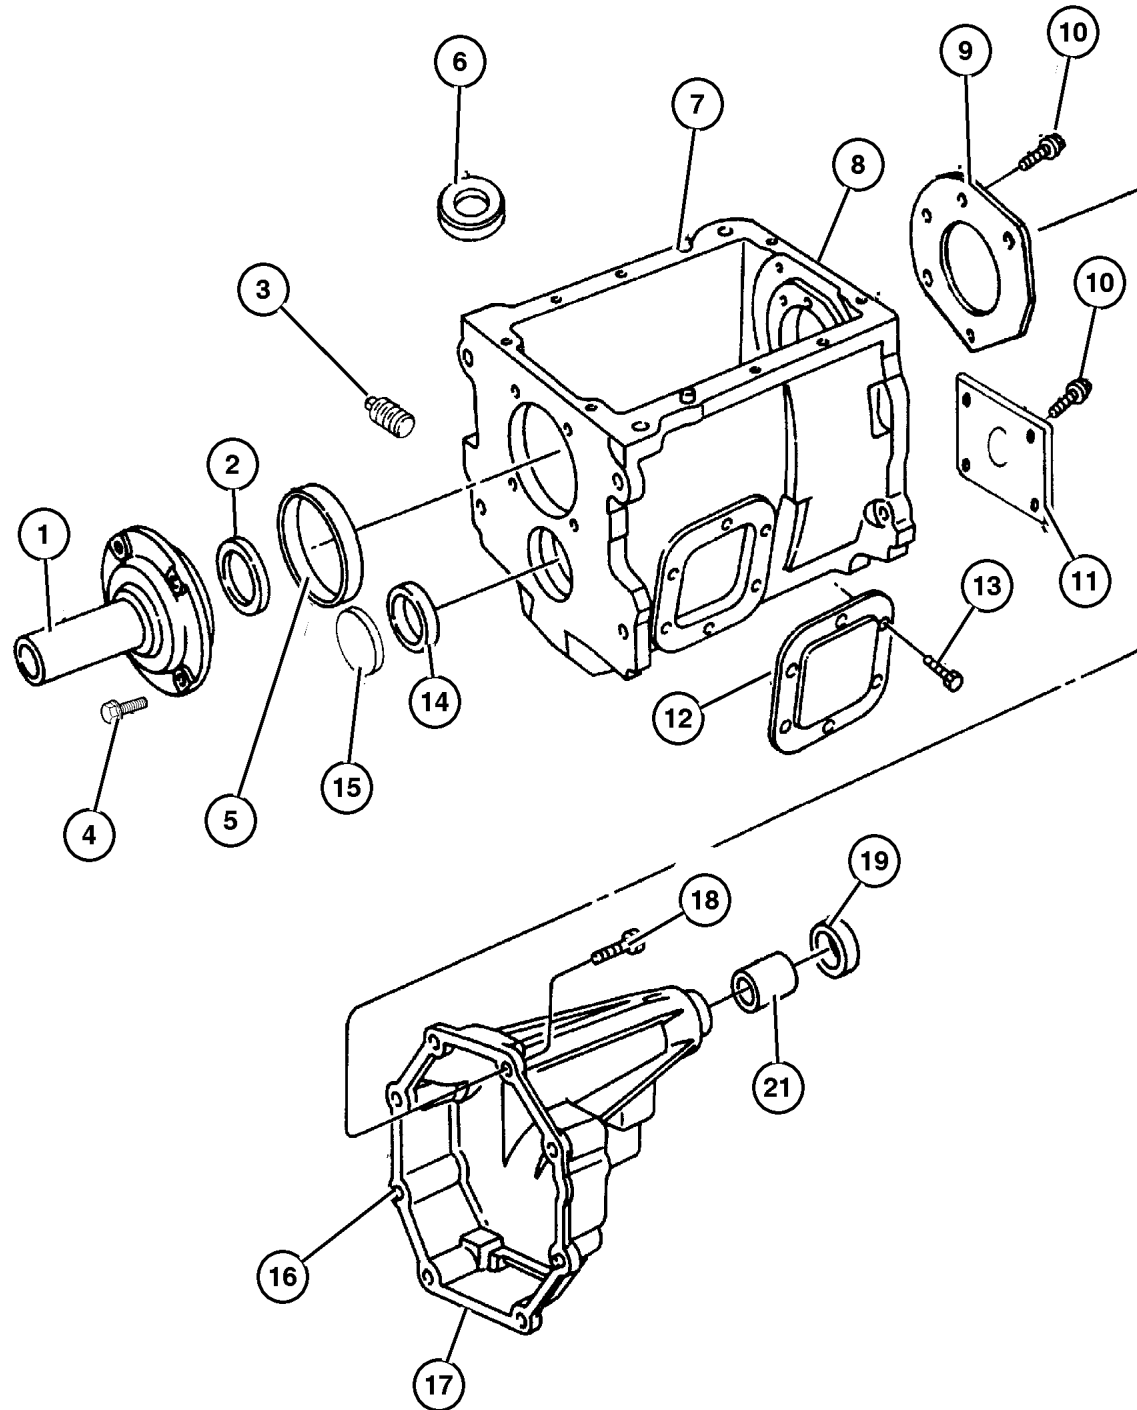Case 5 Speed - 4500 [DDP][DDX]
Figure 4500-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes									
[DDP] = 5 Speed Manual Transmission									
[DDX] = 5 Speed Heavy Duty Manual Transmission									
[EL0] = All 5.2L 8 Cylinder Gas Engines									
[EM0] = All 5.9L 8 Cylinder Gas Engines									
[ET0] = All 5.9L Turbo Diesels									
[EW0] = All 8.0L Gas Engines									
1									RETAINER, Transmission Drive Gear
	4741 542	1	1, 2, 3			EL0,	DDP		
		1	6, 7, 8			EM0			
						EL0,	DDP		
	4741 543	1	1, 2, 3			EM0			
						ET0,	DDX		
		1	6, 7, 8			EW0			
						ET0,	DDX		
						EW0			
2									SEAL, Input
	5012 115AA	1	1, 2, 3			EL0,	DDP		
		1	6, 7, 8			EM0			
						EL0,	DDP		
						EM0			
		1	1, 2, 3			ET0,	DDX		
						EW0			
		1	6, 7, 8			ET0,	DDX		
						EW0			
3									PLUG, Oil Fill
	4637 849	1	1, 2, 3			EL0,	DDP		
						EM0			
		1	6, 7, 8			EL0,	DDP		
						EM0			
		1	1, 2, 3			ET0,	DDX		
						EW0			
		1	6, 7, 8			ET0,	DDX		
						EW0			
4									SCREW, Drive Gear
	4637 777	4	1, 2, 3			EL0,	DDP		
						EM0			
		4	6, 7, 8			EL0,	DDP		
						EM0			


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM, EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

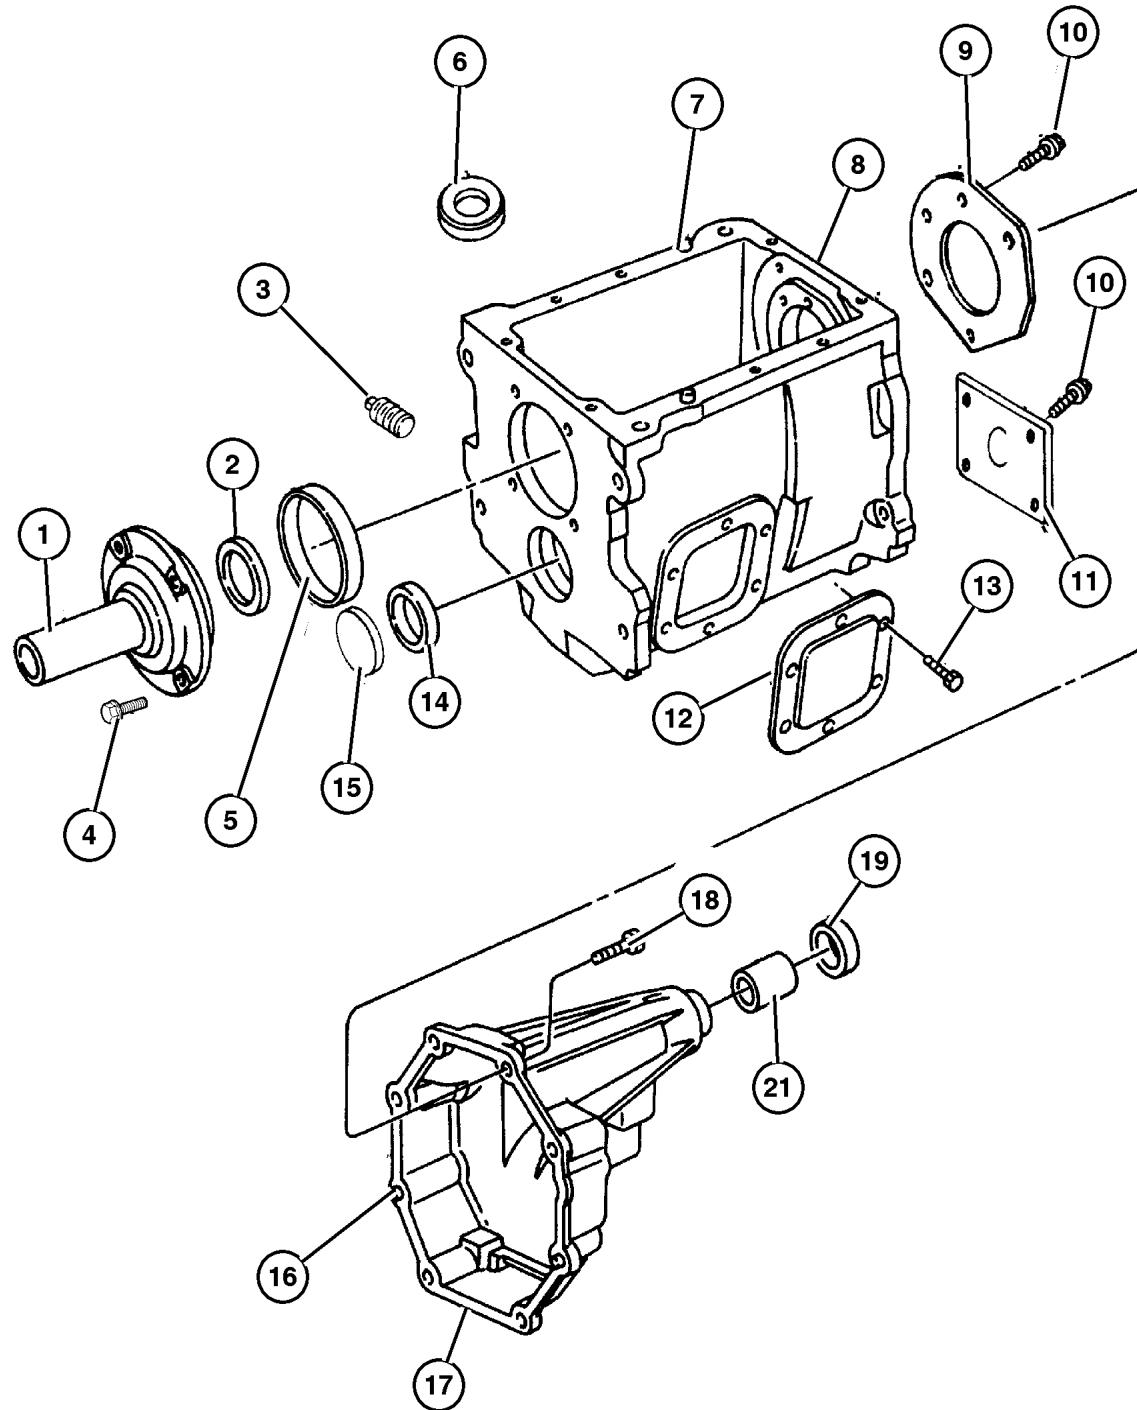Case 5 Speed - 4500 [DDP][DDX]
Figure 4500-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
5		4	1, 2, 3			ET0, EW0	DDX		CUP, Transmission Drive Gear Bearing
		4	6, 7, 8			ET0, EW0	DDX		
	4741 544	1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
6		1	1, 2, 3			ET0, EW0	DDX		MAGNET, Transmission
		1	6, 7, 8			ET0, EW0	DDX		
	4773 012	1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
7		1	1, 2, 3			ET0, EW0	DDX		DOWEL, Gear Shift Cover
		1	6, 7, 8			ET0, EW0	DDX		
	4637 847	2	1, 2, 3			EL0, EM0	DDP		
		2	6, 7, 8			EL0, EM0	DDP		
8		2	1, 2, 3			ET0, EW0	DDX		CASE, Transmission
		2	6, 7, 8			ET0, EW0	DDX		
	5016 379AA	1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

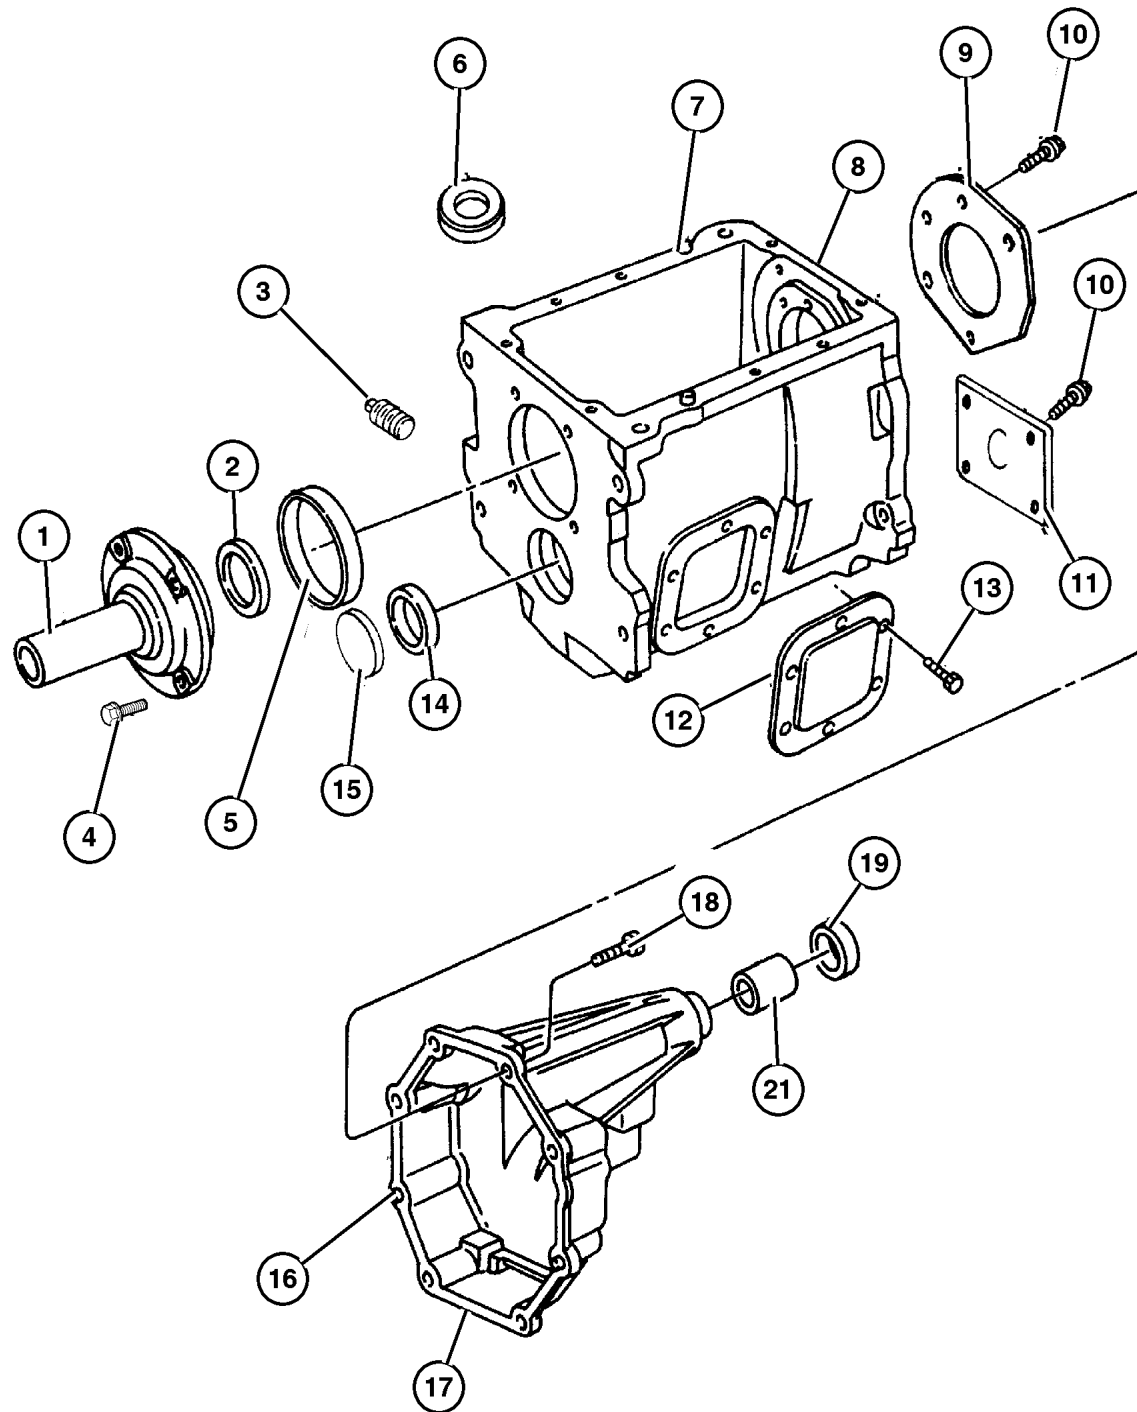
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Case 5 Speed - 4500 [DDP][DDX]
Figure 4500-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
9	5014 100AA	1	6, 7, 8			ET0, EW0	DDX		PLATE, Transmission Module
			1, 2, 3			EL0, EM0	DDP		
			6, 7, 8			EL0, EM0	DDP		
			1, 2, 3			ET0, EW0	DDX		
10	0181 088	10	6, 7, 8			ET0, EW0	DDX		BOLT, Hex Head, .312-18x1.00
			1, 2, 3			EL0, EM0	DDP		
			6, 7, 8			EL0, EM0	DDP		
			1, 2, 3			ET0, EW0	DDX		
11	4637 785	1	6, 7, 8			ET0, EW0	DDX		PLATE, Transmission Module
			1, 2, 3			EL0, EM0	DDP		
			6, 7, 8			EL0, EM0	DDP		
			1, 2, 3			ET0, EW0	DDX		
12	0556 875	2	6, 7, 8			ET0, EW0	DDX		COVER, Power Take Off
			1, 2, 3			EL0, EM0	DDP		
			6, 7, 8			EL0, EM0	DDP		
			1, 2, 3			ET0, EW0	DDX		
13			6, 7, 8			ET0, EW0	DDX		BOLT, Transfer Case

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

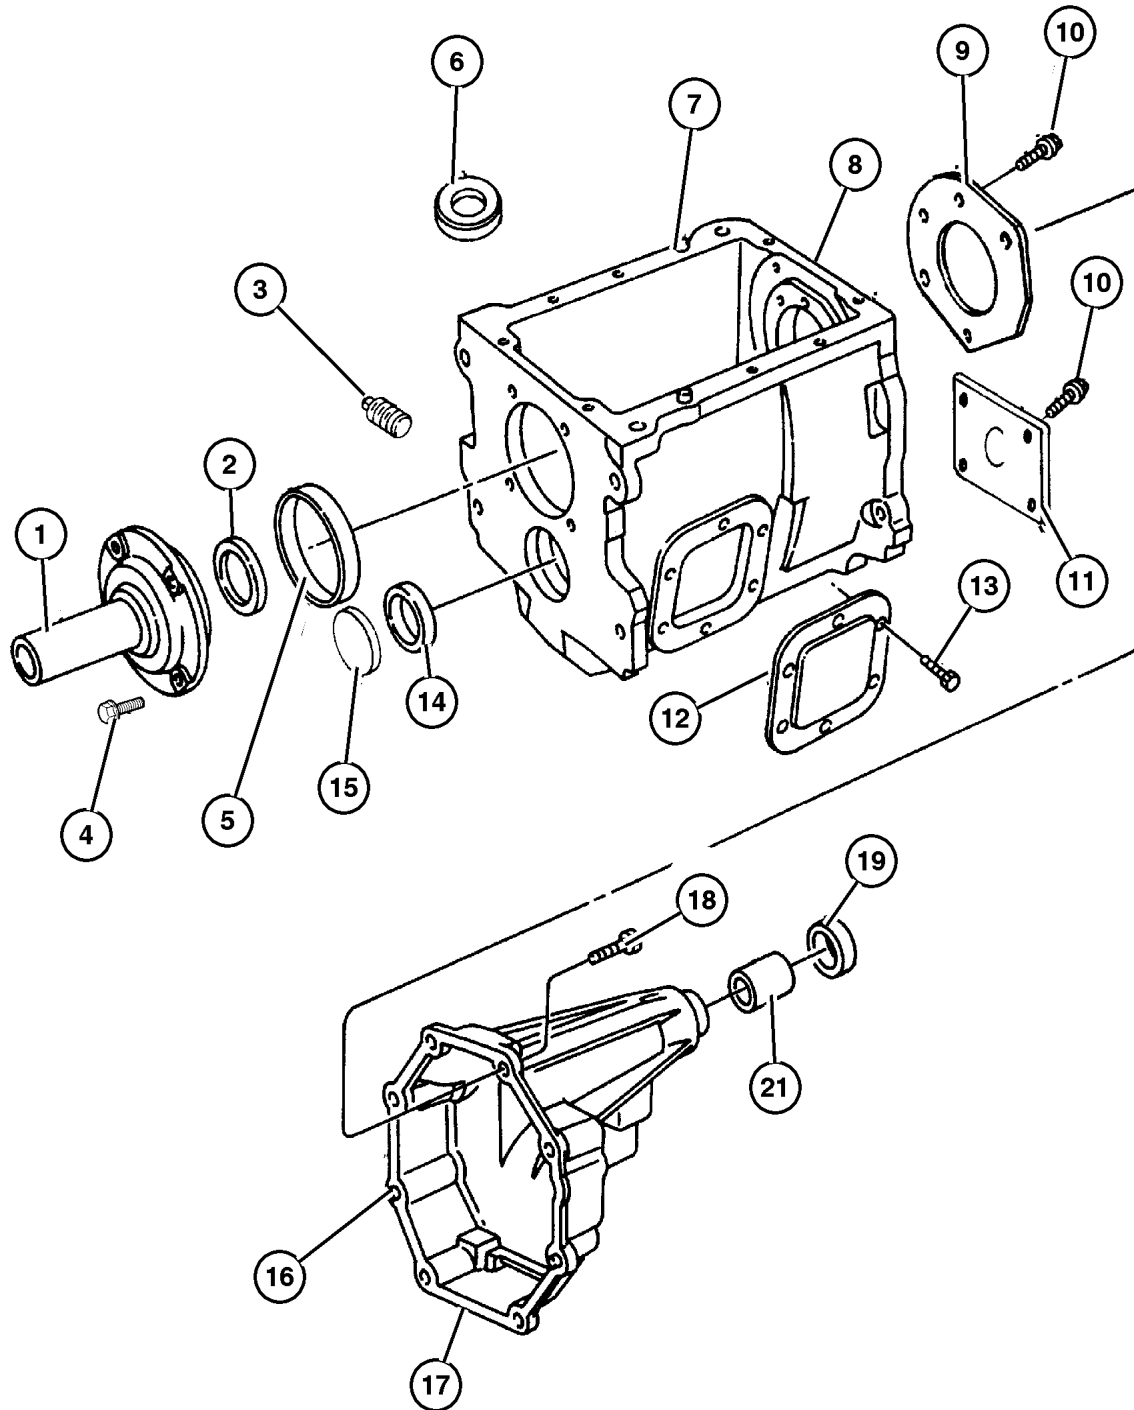
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Case 5 Speed - 4500 [DDP][DDX]
Figure 4500-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4637 851	1	6, 7, 8			ET0, EW0	DDX, DEE		
		6	6, 7, 8			ET0, EW0	DDX, DEE		
14									BEARING CUP, Intermediate Shaft
	4637 691	1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
15									PLUG, Countershaft
	4637 689	1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
16									DOWEL, Transmission Case
	4637 804	2	1, 2, 3			EL0, EM0	DDP		
		2	6, 7, 8			EL0, EM0	DDP		
		2	1, 2, 3			ET0, EW0	DDX		
		2	6, 7, 8			ET0, EW0	DDX		
17									RETAINER, Transmission Case Rear
	5003 034AA	1	1, 2, 3			EL0, EM0	DDP		
	5003 035AA	1	1, 2, 3			ET0, EW0	DDX		
	5014 479AA	1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX		
18									SCREW, Hex Head


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

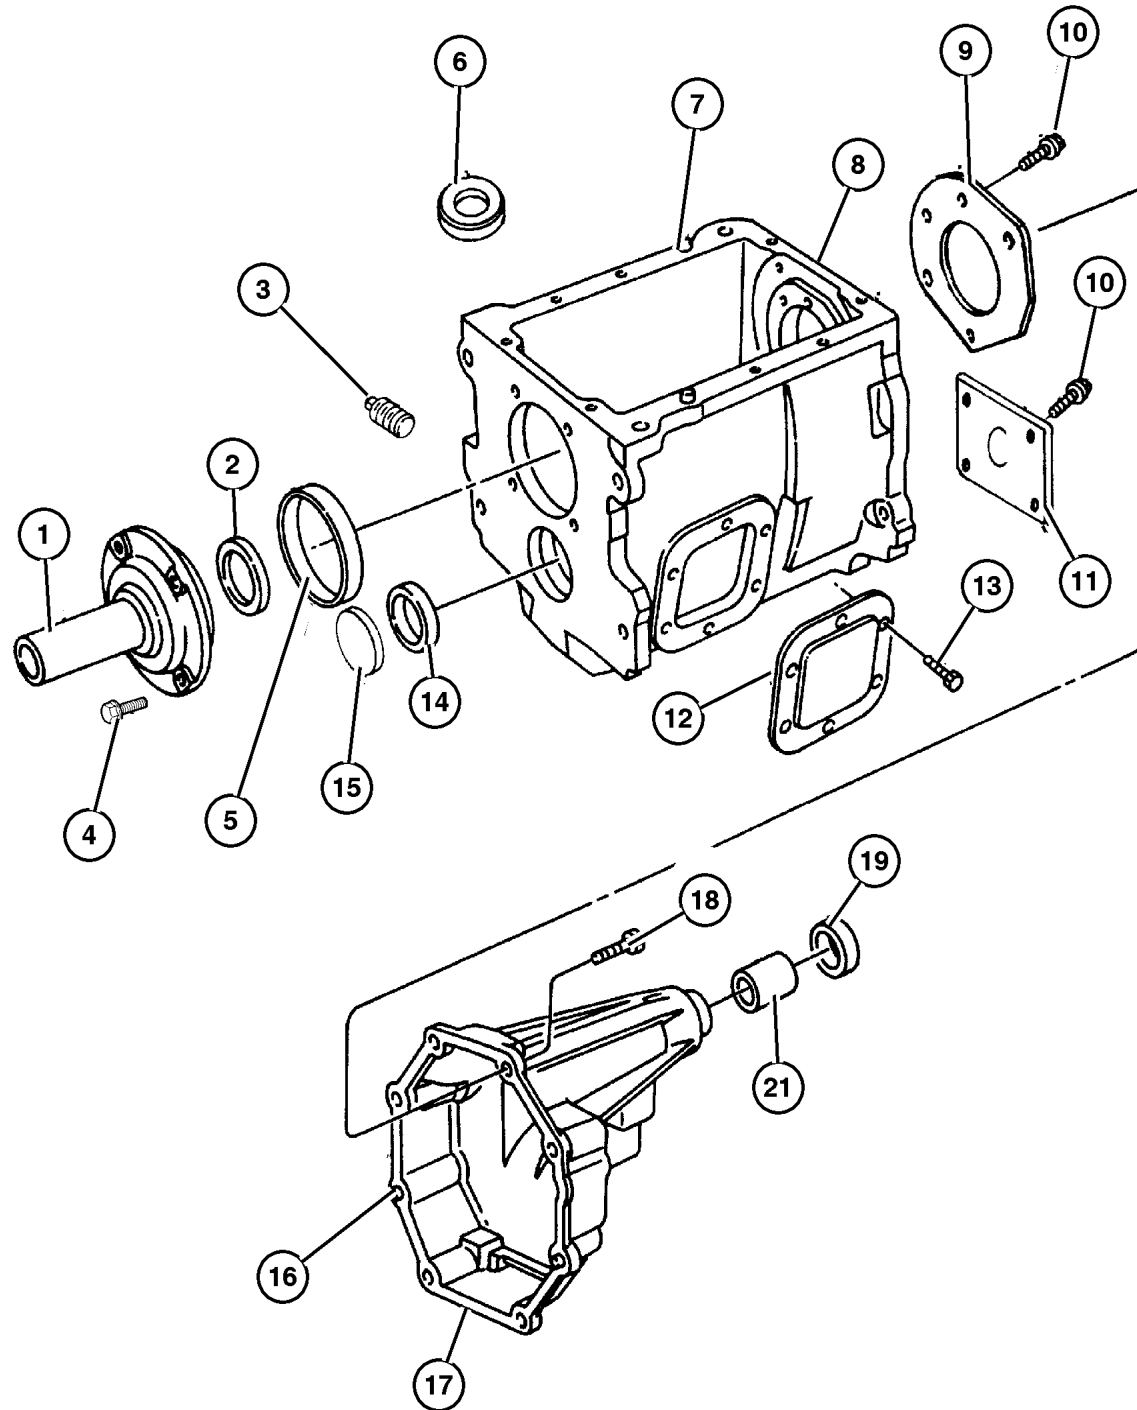Case 5 Speed - 4500 [DDP][DDX]
Figure 4500-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4637 805	8	1, 2, 3			EL0,	DDP		
		8	6, 7, 8			EM0			
		8	1, 2, 3			EL0,	DDP		
		8	1, 2, 3			EM0			
		8	1, 2, 3			ET0,	DDX		
		8	6, 7, 8			EW0			
		8	6, 7, 8			ET0,	DDX		
		8	6, 7, 8			EW0			
19									SEAL, Adapter
	4269 956	1	6, 7, 8			EL0,	DDP		
		1	6, 7, 8			EM0			
		1	6, 7, 8			ET0,	DDX		
		1	6, 7, 8			EW0			
	4741 920	1	1, 2, 3			ET0,	DDX		
		1	1, 2, 3			EW0			
-20	4531 216	1	1, 2, 3			EL0,	DDP		SEAL, Extension Yoke
		1	1, 2, 3			EM0			
21									BUSHING, Extension Housing
	2801 724	1	1, 2, 3			EL0,	DDP		
		1	1, 2, 3			EM0			
	5003 210AA	1	1, 2, 3			ET0,	DDX		
		1	1, 2, 3			EW0			


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

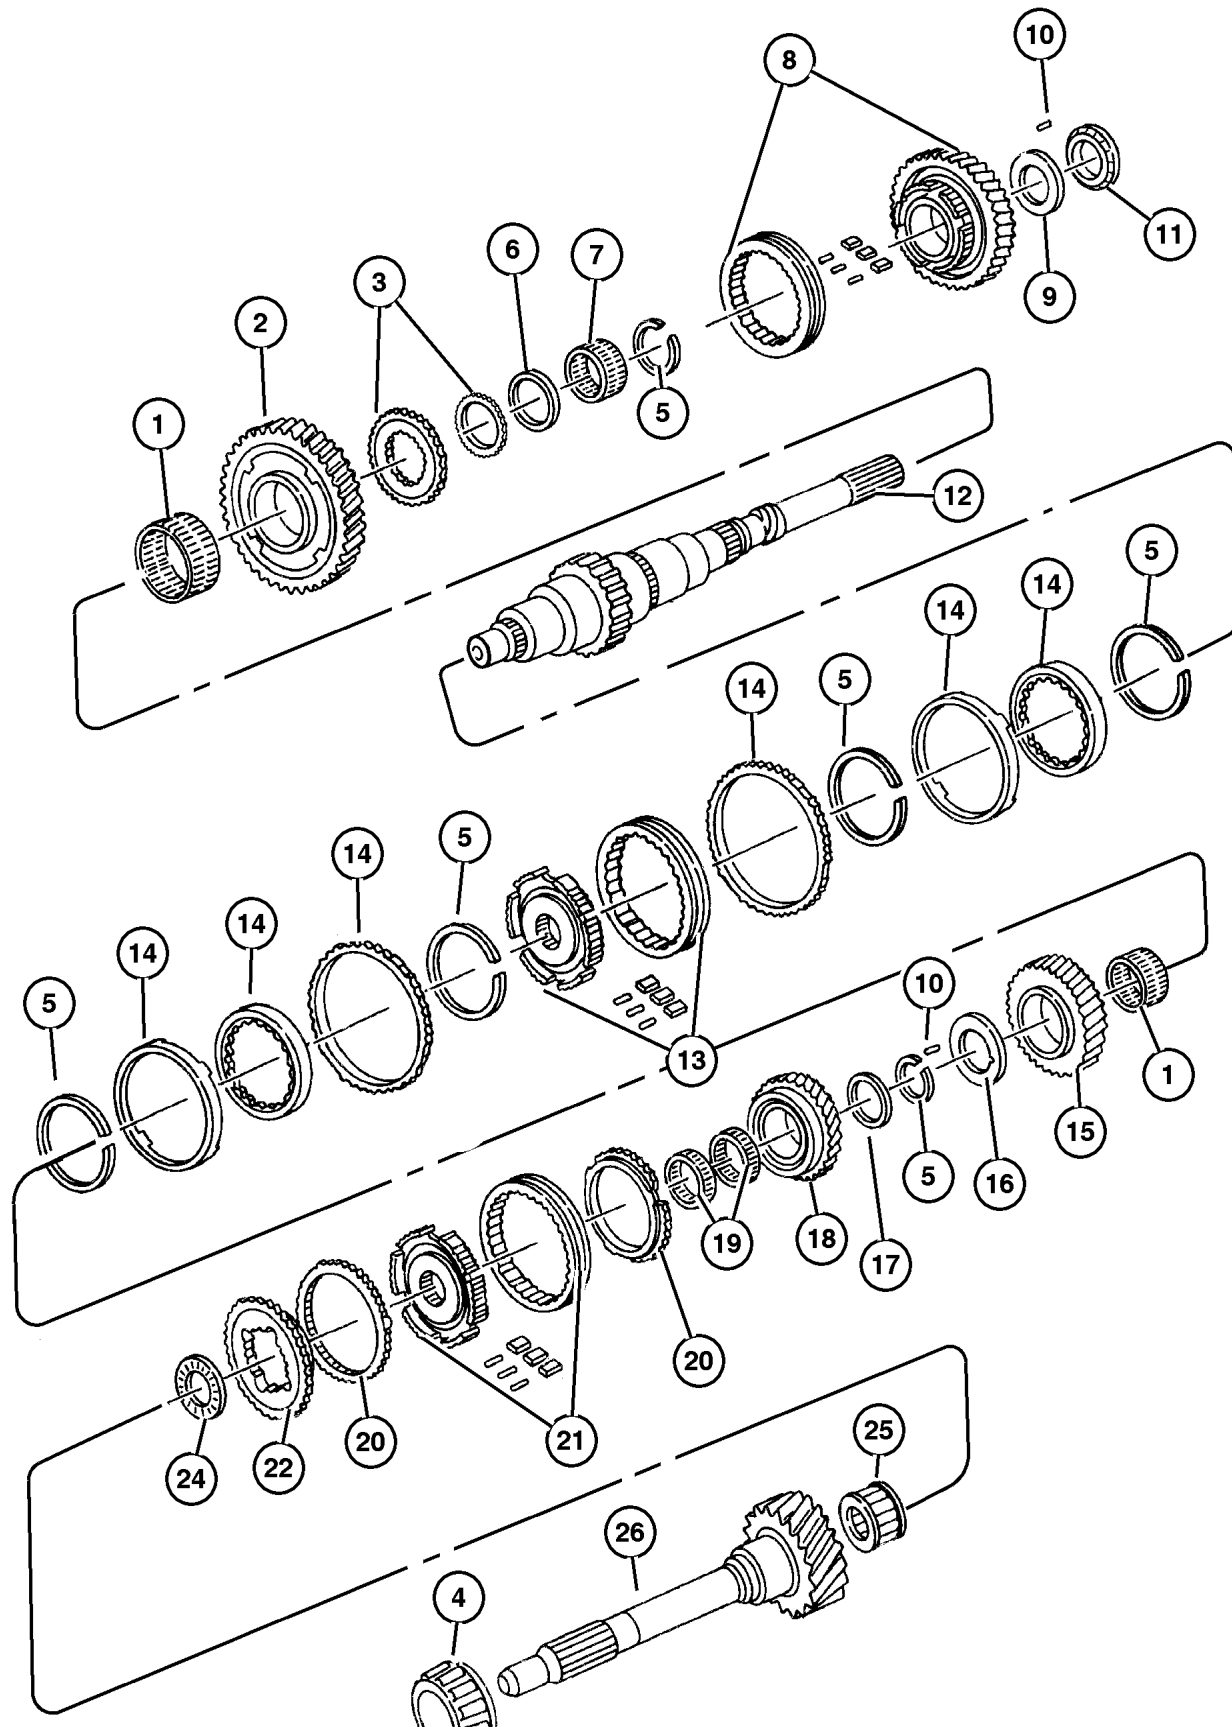Gear Train 5 Speed - 4500 [DDP][DDX] Figure 4500-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes [DDP] = 5 Speed Manual Transmission [DDX] = 5 Speed Heavy Duty Manual Transmission [EL0] = All 5.2L 8 Cylinder Gas Engines [EM0] = All 5.9L 8 Cylinder Gas Engines [ET0] = All 5.9L Turbo Diesels [EW0] = All 8.0L Gas Engines									
1	4798 769	2	1, 2, 3			EL0, EM0 ET0, EW0	DDP		BEARING, First Gear
		2	6, 7, 8			EL0, EM0	DDP		
		2	1, 2, 3			ET0, EW0	DDX		
		2	6, 7, 8			ET0, EW0	DDX		
2	4637 728	1	1, 2, 3			EL0, EM0	DDP		GEAR, First
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
3	5003 055AA	1	1, 2, 3			EL0, EM0	DDP		GEAR PACKAGE, Reverse Clutch
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
4	4723 145	1	1, 2, 3			EL0, EM0	DDP		BEARING, Drive Gear
		1	6, 7, 8			EL0, EM0	DDP		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

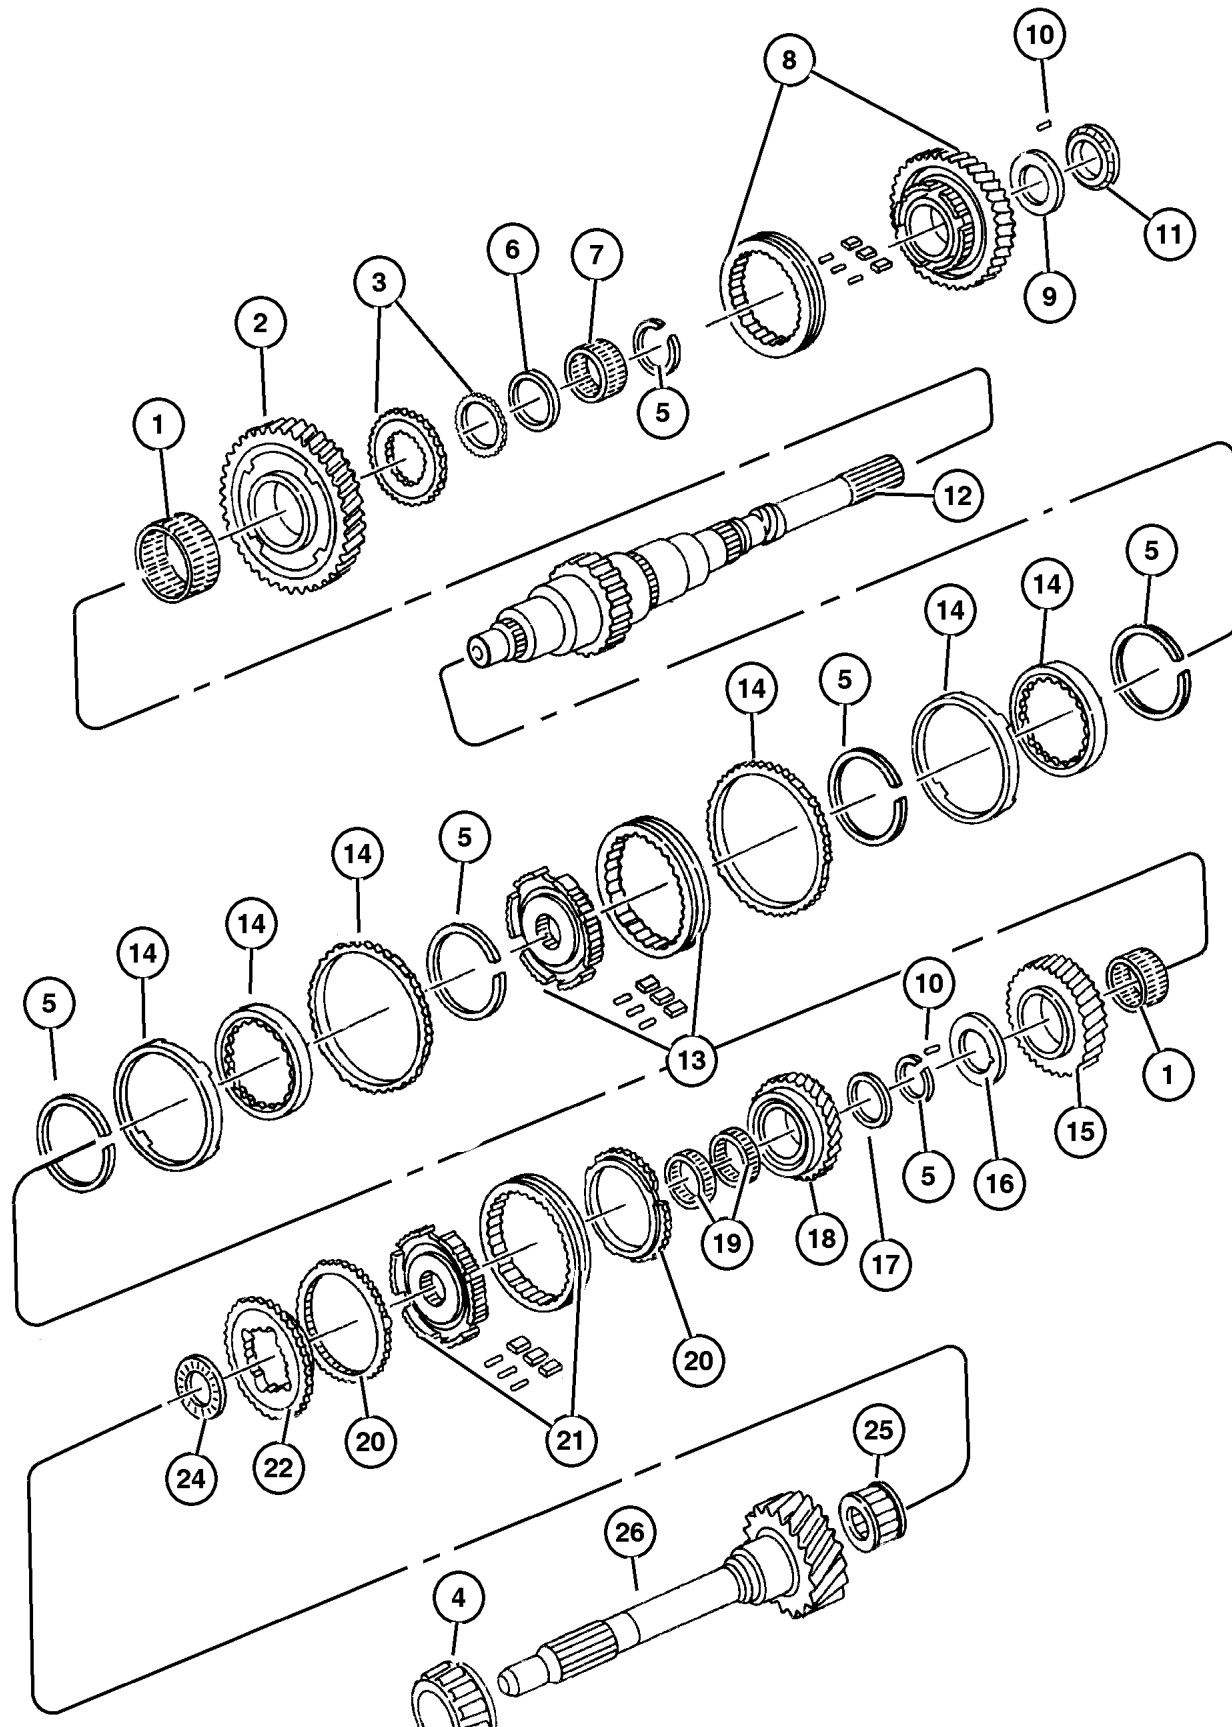
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

**Gear Train 5 Speed - 4500 [DDP][DDX]
Figure 4500-410**



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
5		1	1, 2, 3			ET0, EW0	DDX		SNAP RING PACKAGE, Transmission
		1	6, 7, 8			ET0, EW0	DDX		
	5003 056AA	1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
6		1	6, 7, 8			ET0, EW0	DDX		SPACER, Reverse Synchronizer
	4882 542	1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
7		1	1, 2, 3			EL0, EM0	DDP		BEARING, Reverse Synchronizer
	4637 761	1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
		1	1, 2, 3			EL0, EM0	DDP		
8		1	6, 7, 8			ET0, EW0	DDX		SYNCHRONIZER, Reverse
	5014 478AA	1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

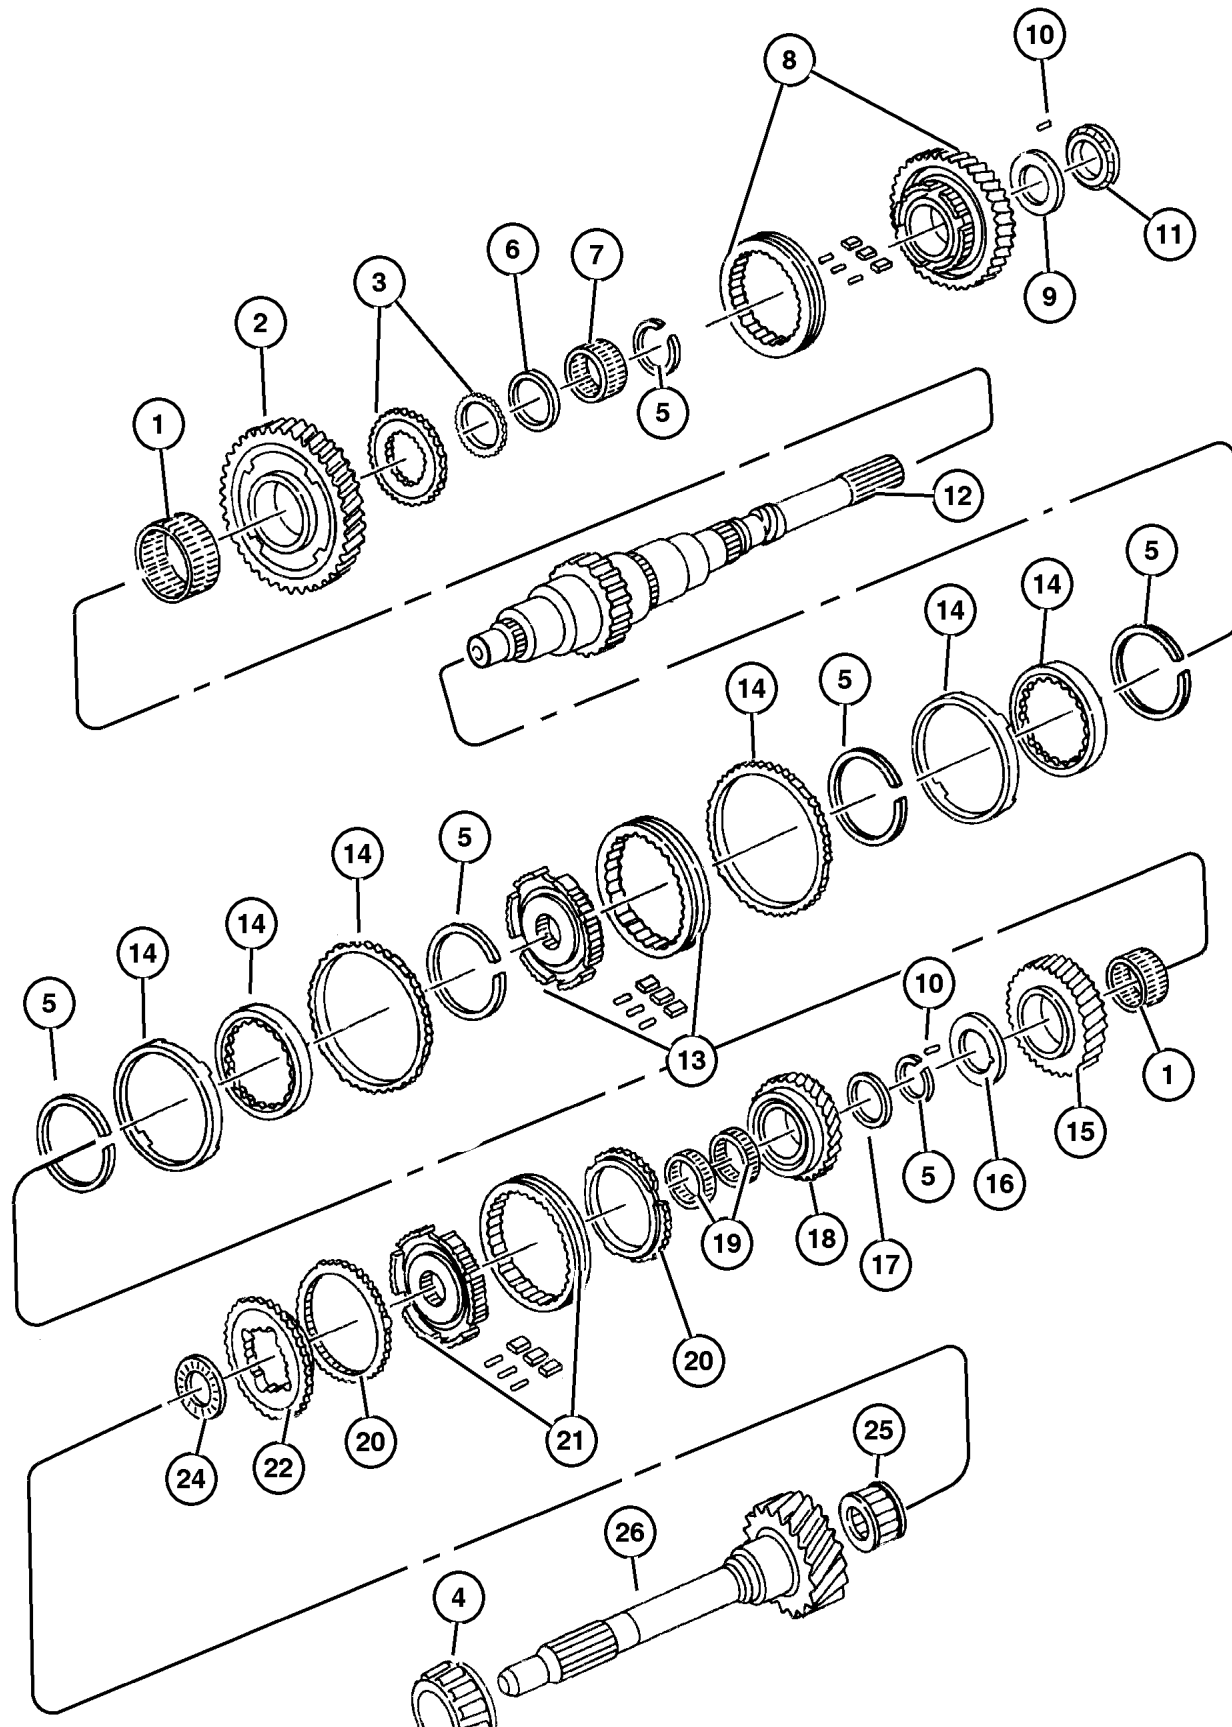
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Gear Train 5 Speed - 4500 [DDP][DDX] Figure 4500-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
9	4637 763	1	6, 7, 8			ET0, EW0	DDX		THRUST WASHER, Reverse Gear
		1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
10	4773 176	1	6, 7, 8			ET0, EW0	DDX		PIN, Split Thrust Washer
		2	1, 2, 3			EL0, EM0	DDP		
		2	6, 7, 8			EL0, EM0	DDP		
		2	1, 2, 3			ET0, EW0	DDX		
11	4637 771	2	6, 7, 8			ET0, EW0	DDX		BEARING CONE, Main Shaft
		1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
12	5016 383AA 5016 384AA 5016 385AA 5016 386AA	1	1, 2, 3			ET0, EW0	DDX		MAINSHAFT, Transmission
		1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX		
13						EW0			SYNCHRONIZER, First and Second

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

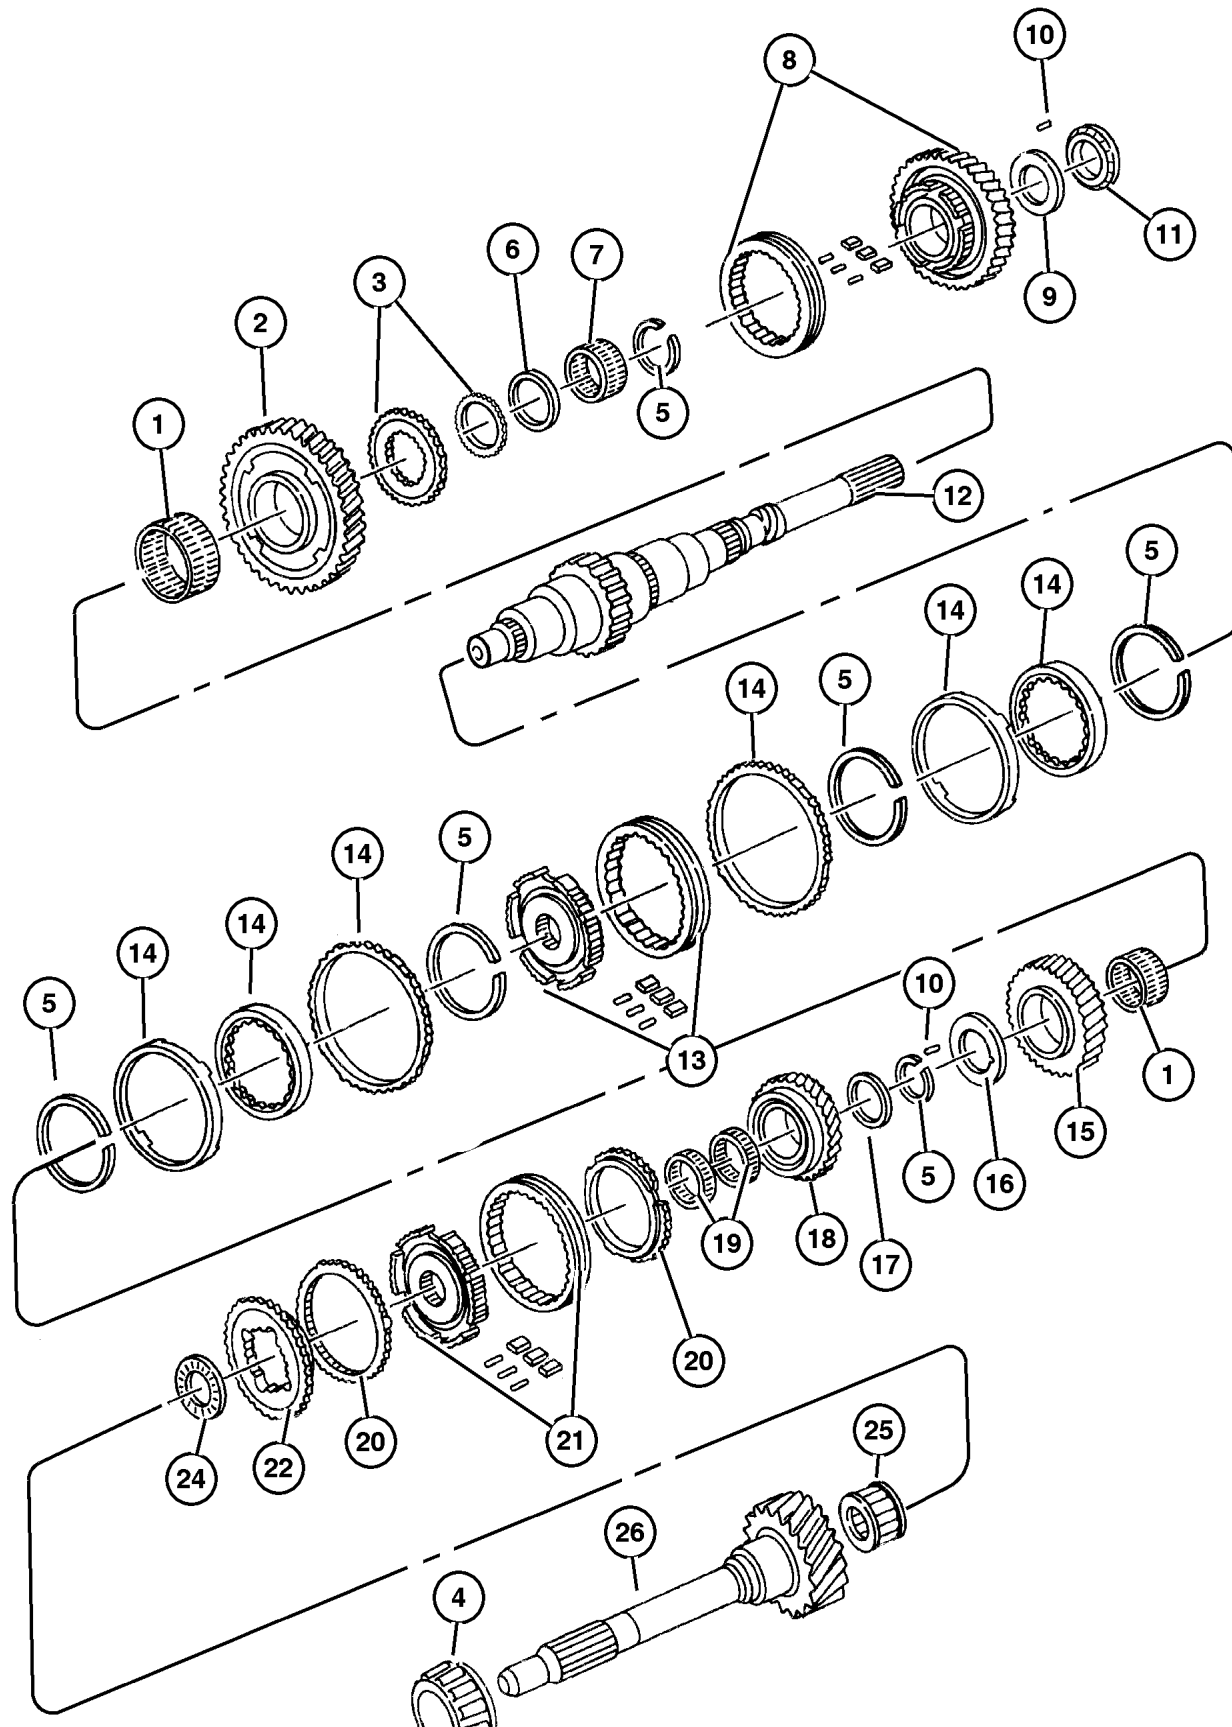
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Gear Train 5 Speed - 4500 [DDP][DDX] Figure 4500-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4796 270	1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
14									STOP RING PACKAGE, Synchronizer
	4637 726	1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
15									GEAR, Second
	4637 730	1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
16									THRUST WASHER, Third Gear
	4637 732	1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
17									SPACER, Third Gear
	4882 540	1	1, 2, 3			EL0, EM0	DDP		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

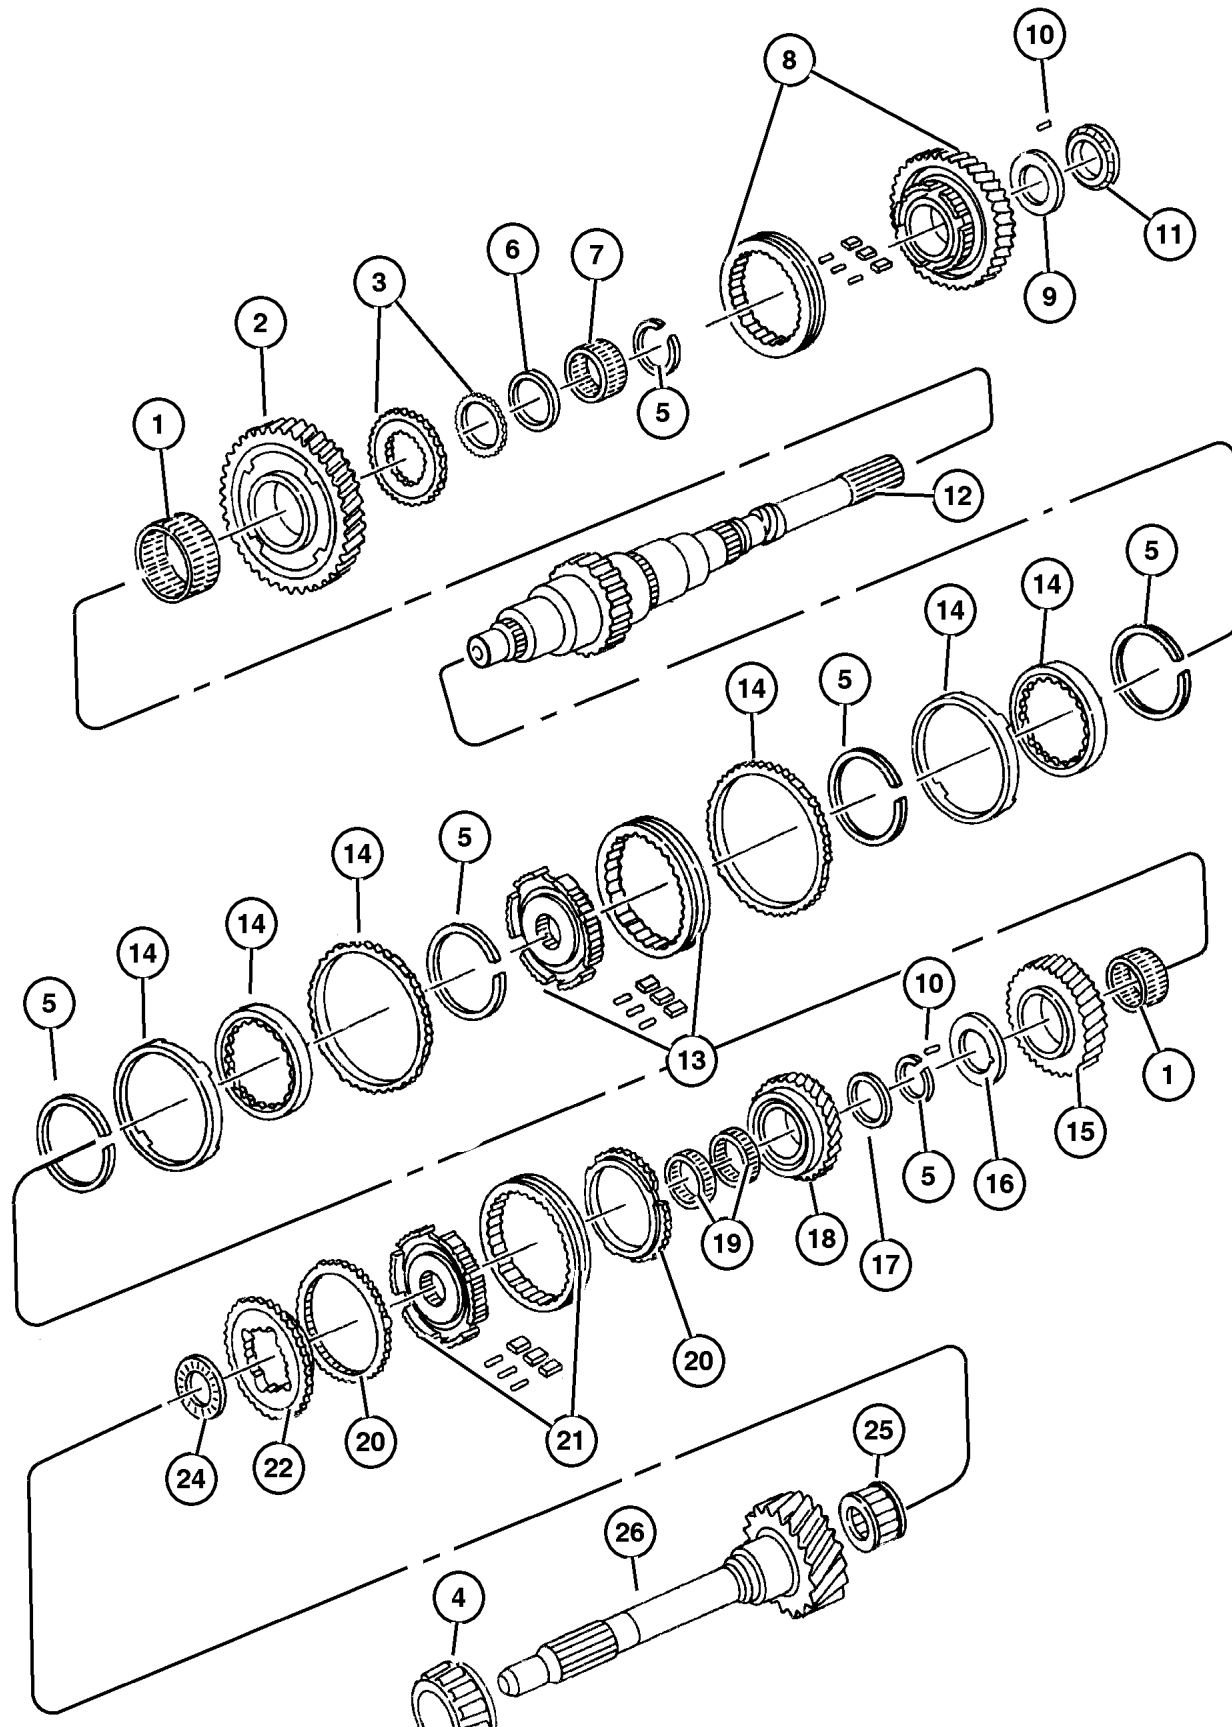
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Gear Train 5 Speed - 4500 [DDP][DDX] Figure 4500-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
18	4874 369	1	1, 2, 3			EL0, EM0	DDP		GEAR, Third
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
19	4798 768	2	1, 2, 3			EL0, EM0	DDP		BEARING, Third Gear
		2	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
20	4897 883AA	2	1, 2, 3			EL0, EM0	DDP		RING, Blocker
		2	6, 7, 8			EL0, EM0	DDP		
		2	1, 2, 3			ET0, EW0	DDX		
		2	6, 7, 8			ET0, EW0	DDX		
21	4740 824	1	1, 2, 3			EL0, EM0	DDP		SYNCHRONIZER, Third and Fourth
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

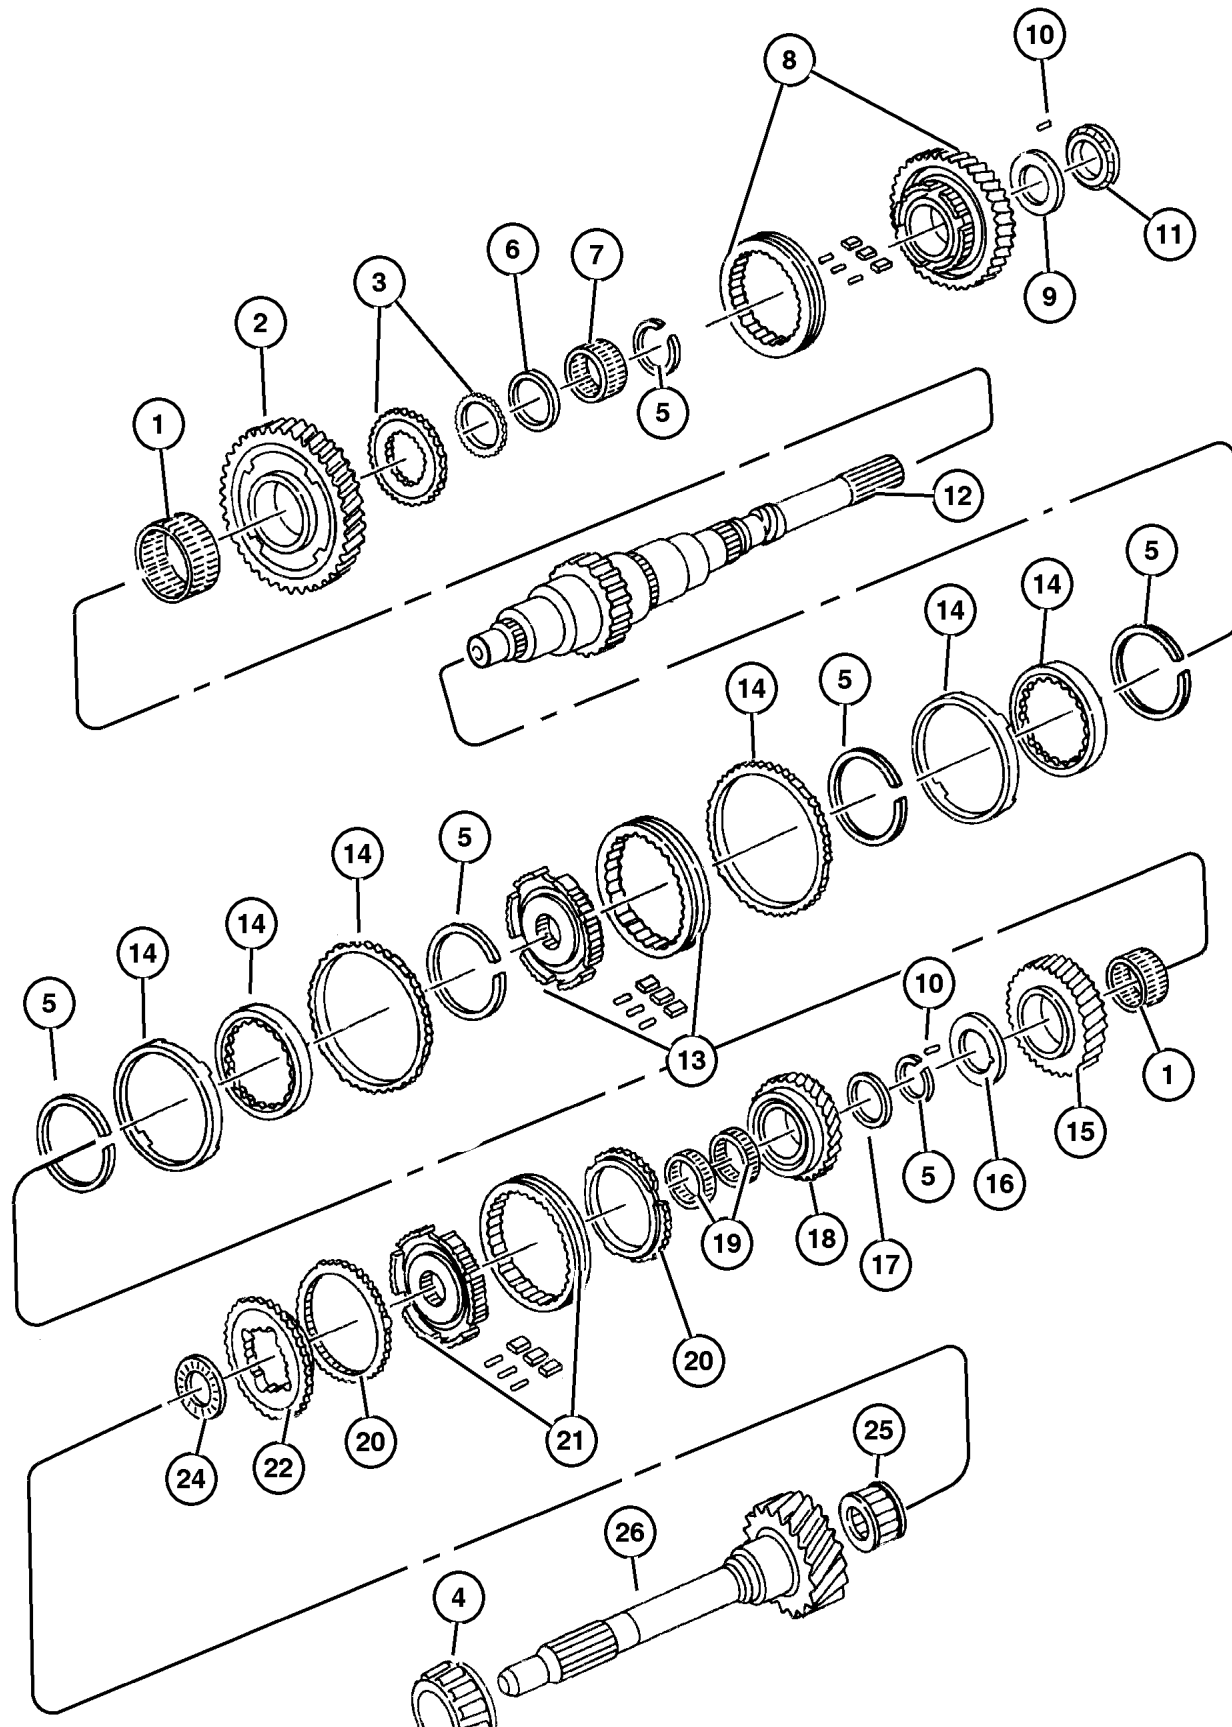
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Gear Train 5 Speed - 4500 [DDP][DDX] Figure 4500-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
22	4874 370	1	6, 7, 8			ET0, EW0	DDX		GEAR, Clutch Drive
		1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
-23	4897 883AA-	1	6, 7, 8			ET0, EW0	DDX		RING, Blocker
		2	1, 2, 3			EL0, EM0	DDP		
		2	1, 2, 3			ET0, EW0	DDX		
		2	6, 7, 8			EL0, EM0	DDP		
24	4637 755	2	6, 7, 8			ET0, EW0	DDX		THRUST BEARING, Drive Gear
		1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
25	4637 774	1	6, 7, 8			ET0, EW0	DDX		NEEDLE BEARING, Input Shaft
		1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
26		1	6, 7, 8			ET0, EW0	DDX		SHAFT, Input
		1	6, 7, 8			ET0, EW0	DDX		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)


ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

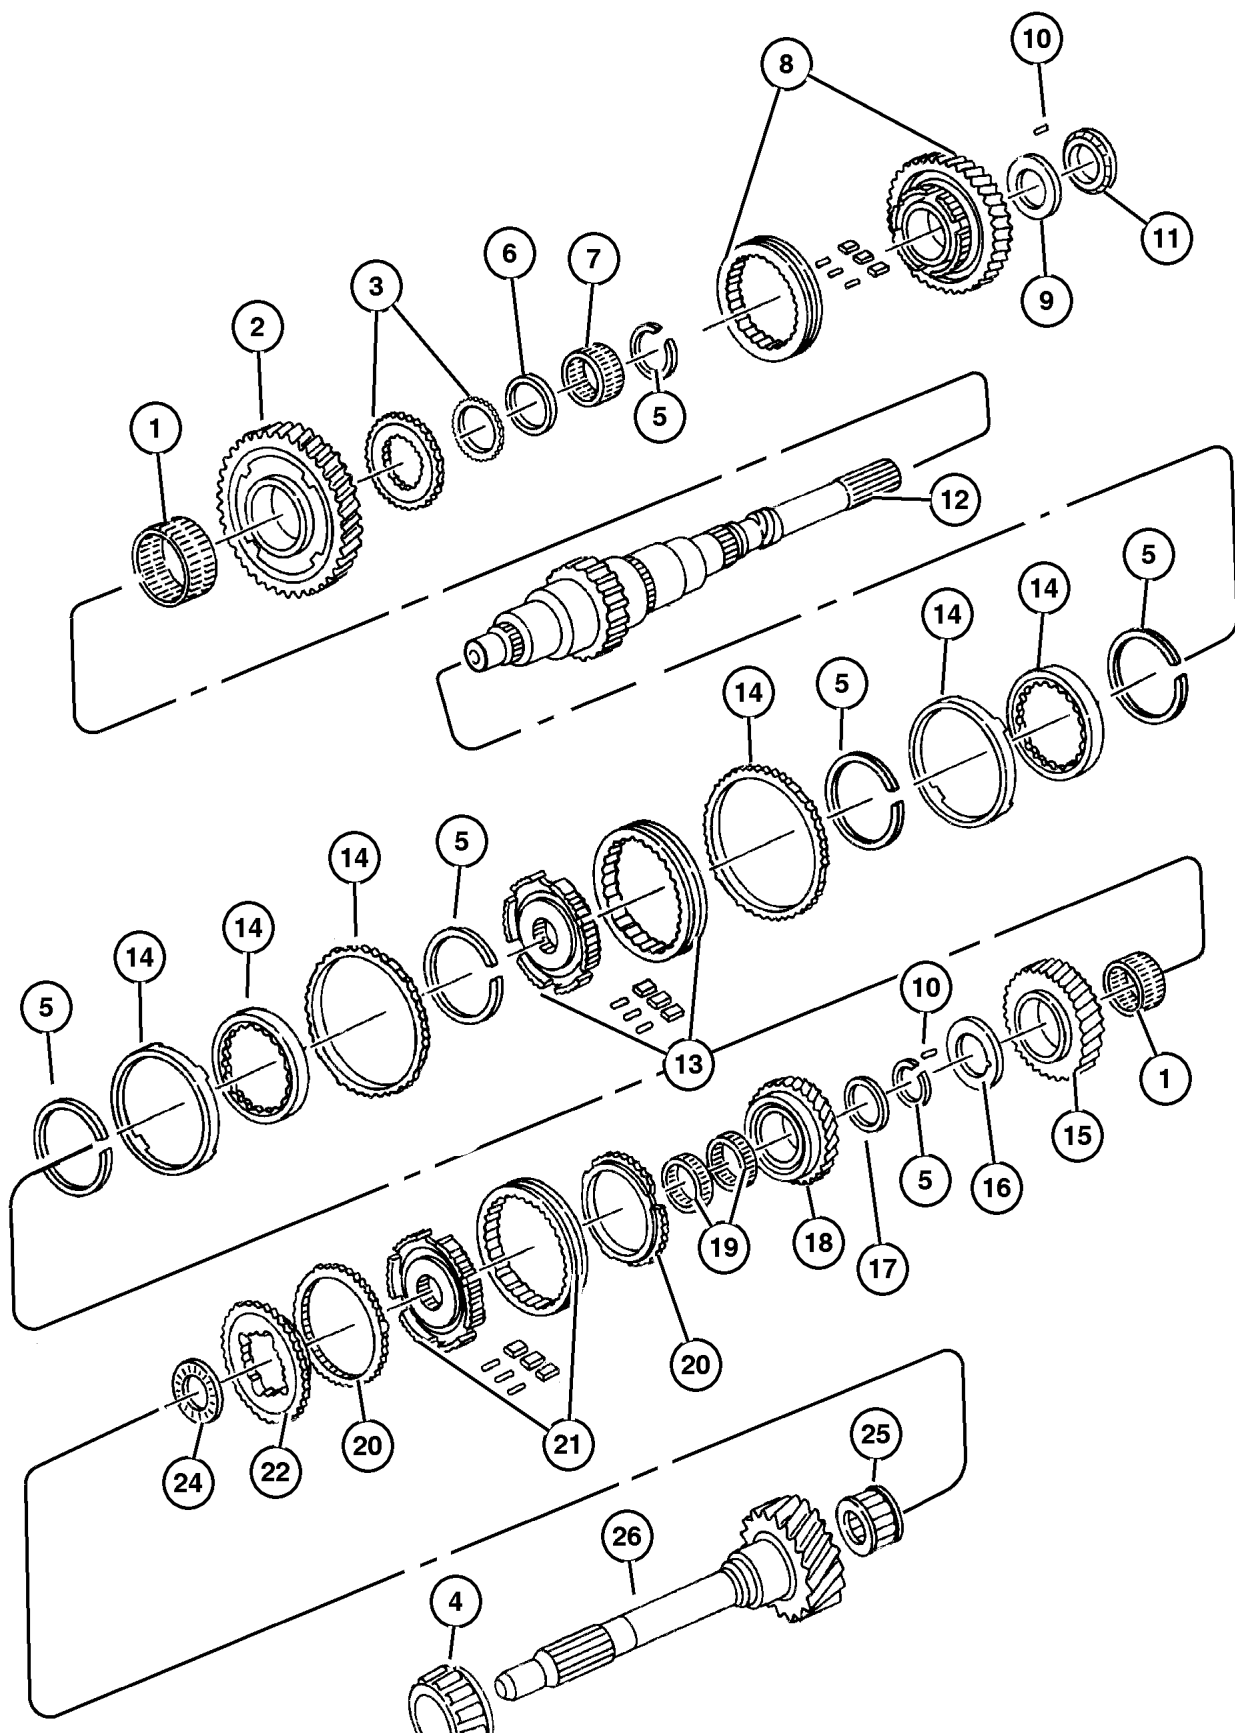Figure 4500-410




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4882 357	1	1, 2, 3			EL0,	DDP		
		1	6, 7, 8			EM0 EL0,	DDP		
	4882 358	1	1, 2, 3			EM0 ET0,	DDX		
		1	6, 7, 8			EW0 ET0, EW0	DDX		

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

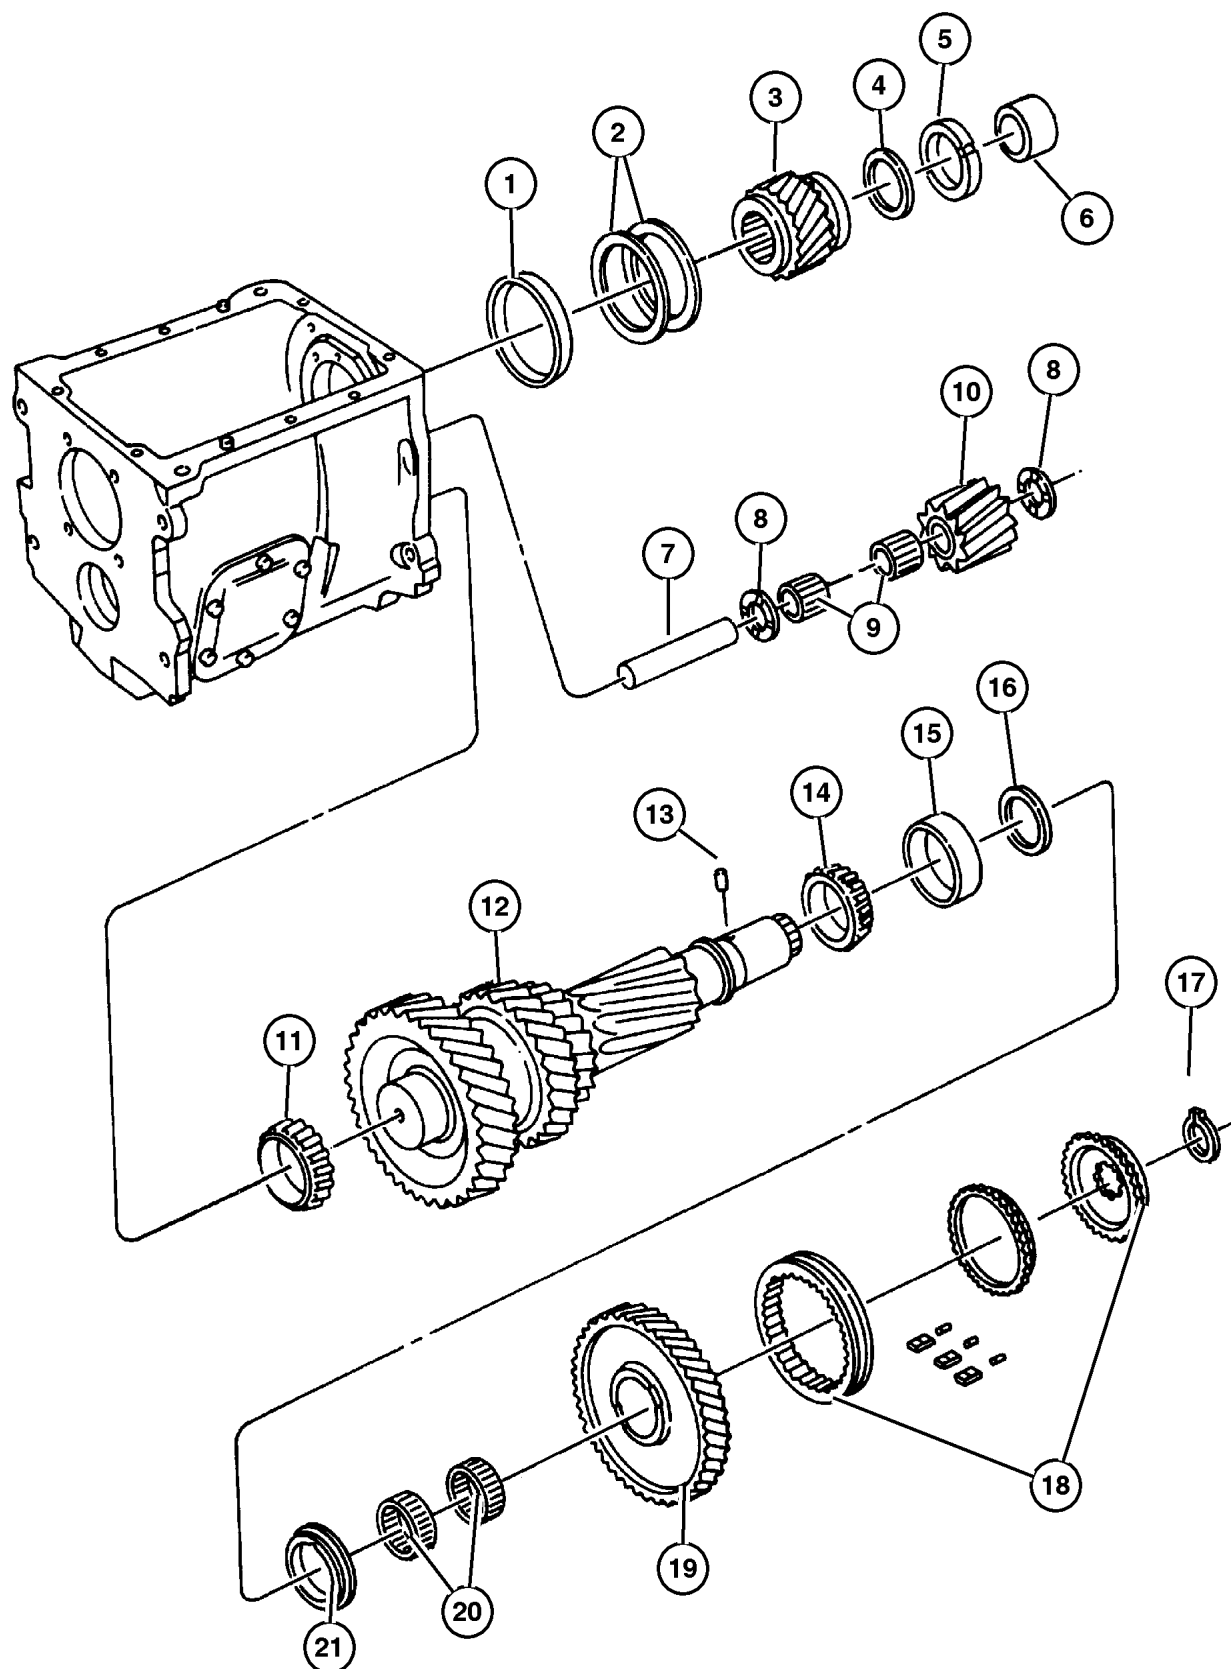Gear Train 5 Speed - 4500 [DDP][DDX] Figure 4500-420



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes [DDP] = 5 Speed Manual Transmission [DDX] = 5 Speed Heavy Duty Manual Transmission [EL0] = All 5.2L 8 Cylinder Gas Engines [EM0] = All 5.9L 8 Cylinder Gas Engines [ET0] = All 5.9L Turbo Diesels [EW0] = All 8.0L Gas Engines									
1	4637 782	1	1, 2, 3			EL0, EM0 EL0, EM0 ET0, EW0	DDP		BEARING CUP, Main Shaft
2	4864 284	1	1, 2, 3			EL0, EM0 EL0, EM0 ET0, EW0	DDP		SHIM PACKAGE, Rear Mainshaft Bearing
3	4637 798	1	1, 2, 3			EL0, EM0 EL0, EM0 ET0, EW0	DDP		GEAR, Overdrive Mainshaft
4	4637 801	1	1, 2, 3			EL0, EM0 EL0, EM0 ET0, EW0	DDP		WASHER, Overdrive Gear

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE

1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Gear Train 5 Speed - 4500 [DDP][DDX]
Figure 4500-420

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4741 552	1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
5	5013 887AA	1	1, 2, 3			ET0, EW0	DDX		NUT AND WASHER PACKAGE
		1	6, 7, 8			ET0, EW0	DDX		
6	4269 956	1	6, 7, 8			EL0, EM0	DDP		SEAL, Adapter
		1	6, 7, 8			ET0, EW0	DDX		
7	4882 366	1	1, 2, 3			EL0, EM0	DDP		SHAFT, Idler
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
8	4882 538	2	1, 2, 3			EL0, EM0	DDP		WASHER, Reverse Idler
		2	6, 7, 8			EL0, EM0	DDP		
		2	1, 2, 3			ET0, EW0	DDX		
		2	6, 7, 8			ET0, EW0	DDX		
9	4882 365	2	1, 2, 3			EL0, EM0	DDP		BEARING, Idler Gear
		2	1, 2, 3			ET0, EW0	DDX		
		2	6, 7, 8			EL0, EM0	DDP		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005


Gear Train 5 Speed - 4500 [DDP][DDX]
Figure 4500-420

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
10	4882 364	2	6, 7, 8			ET0, EW0	DDX		GEAR, Reverse Idler
		1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
11	4637 705	1	6, 7, 8			ET0, EW0	DDX		BEARING CONE, Cluster Gear
		1	1, 2, 3			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			EL0, EM0	DDP		
12	4882 367	1	6, 7, 8			ET0, EW0	DDX		COUNTERSHAFT
		1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
13	4773 176	2	1, 2, 3			ET0, EW0	DDX		PIN, Split Thrust Washer
		2	6, 7, 8			ET0, EW0	DDX		
		2	1, 2, 3			EL0, EM0	DDP		
		2	6, 7, 8			EL0, EM0	DDP		
14		2	1, 2, 3			ET0, EW0	DDX		BEARING CONE, Cluster Gear
		2	6, 7, 8			ET0, EW0	DDX		


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

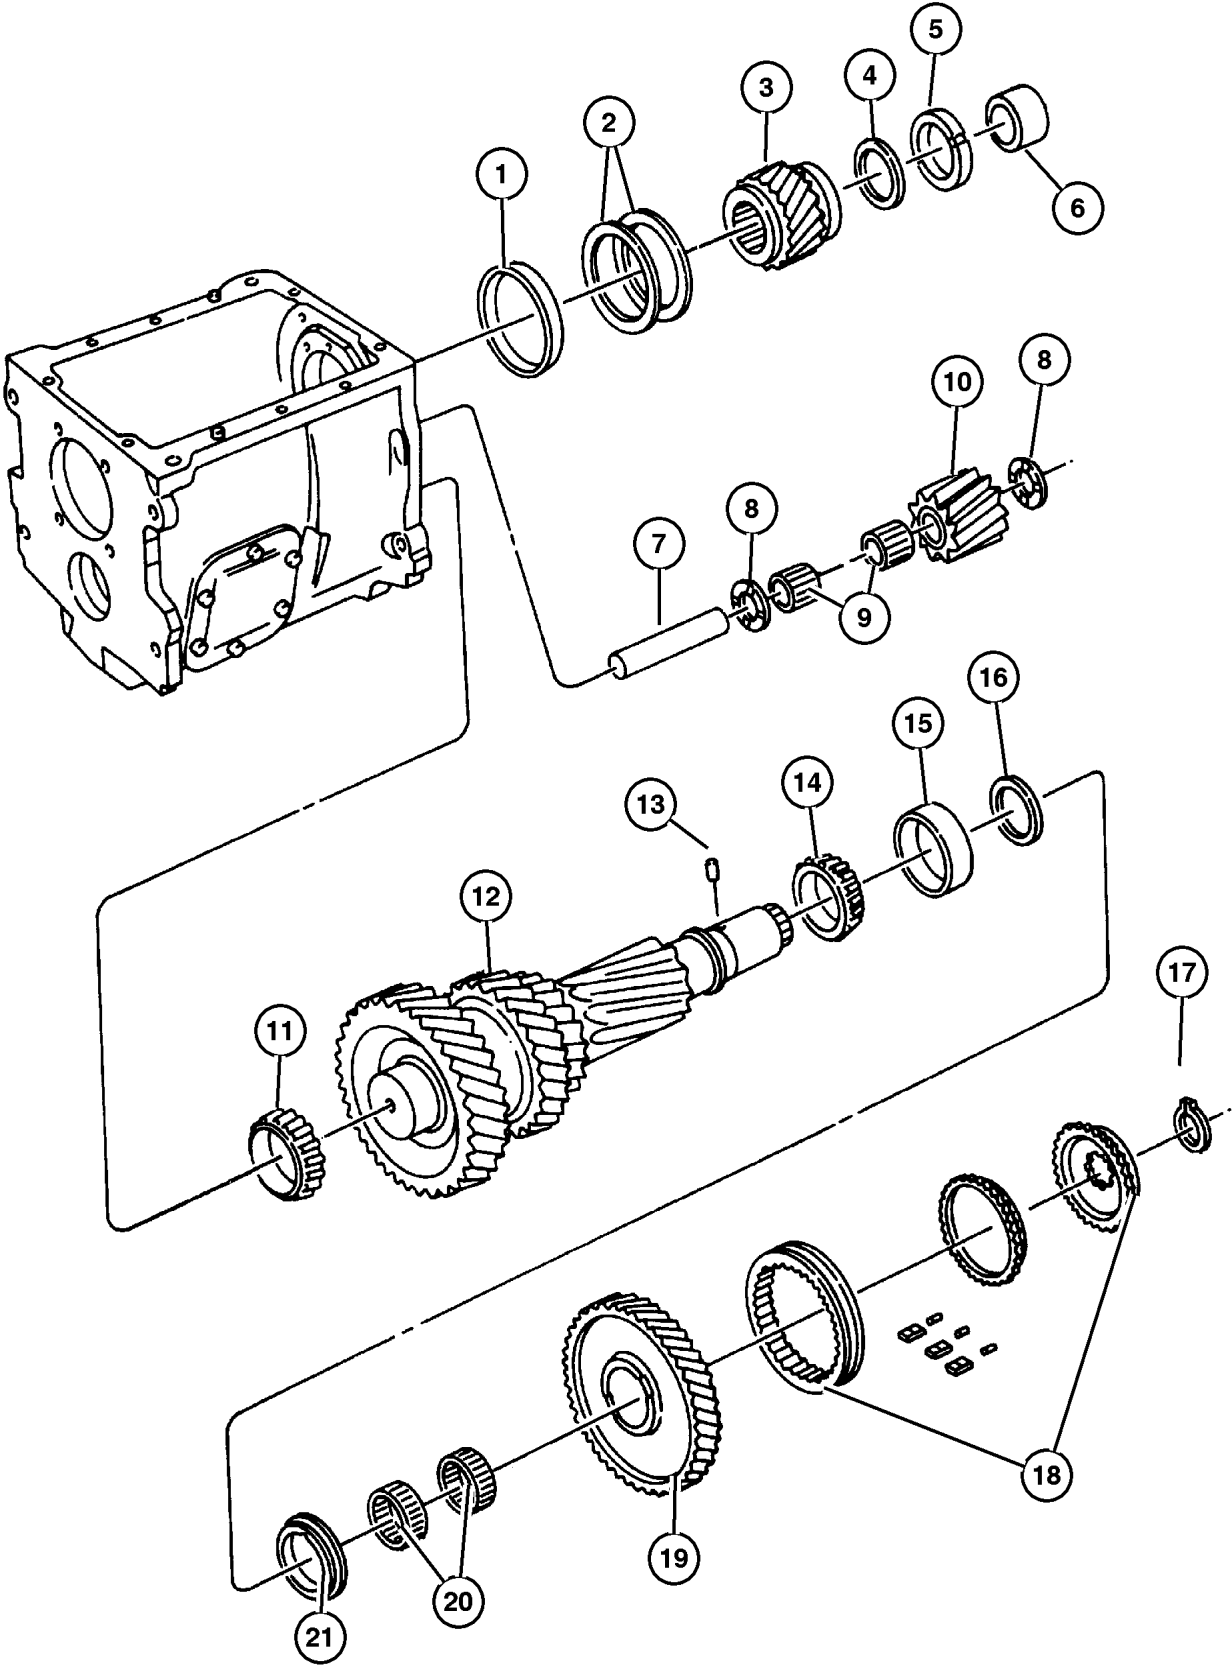September 16, 2005



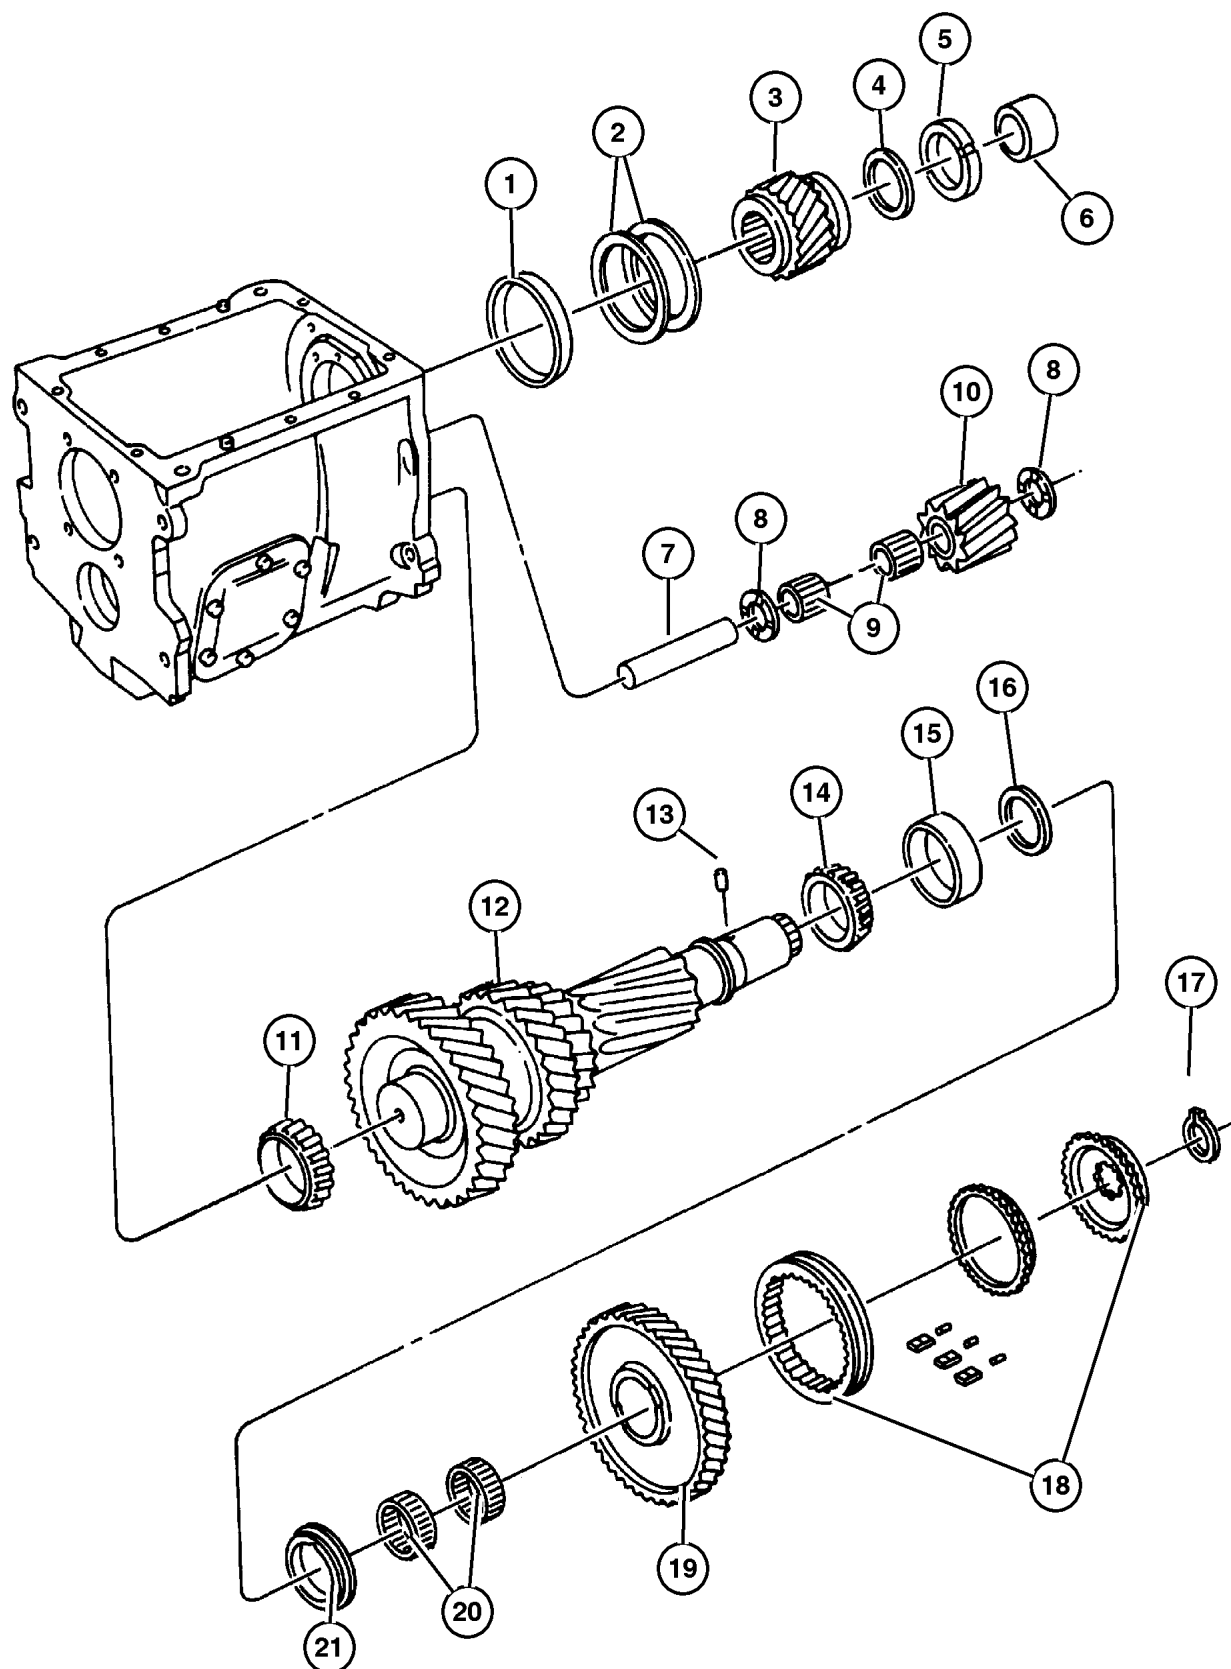Gear Train 5 Speed - 4500 [DDP][DDX] Figure 4500-420



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4637 708	1	1, 2, 3			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX		
15									BEARING CUP, Cluster Gear
	4637 707	1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
16									SHIM PACKAGE, Countershaft
	4637 780	1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
17									SNAP RING PACKAGE, Transmission
	5003 056AA	1	1, 2, 3			EL0, EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
18									SYNCHRONIZER PACKAGE, Overdrive
	5003 156AA	1	1, 2, 3			EL0, EM0	DDP		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE

1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005


Gear Train 5 Speed - 4500 [DDP][DDX]
Figure 4500-420

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
19	4637 786	1	1, 2, 3			EL0, EM0	DDP		GEAR, Countershaft
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
20	4882 541	1	1, 2, 3			ET0, EW0	DDX		BEARING, Overdrive
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
21	4637 778	1	1, 2, 3			EL0, EM0	DDP		THRUST WASHER, Countershaft
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

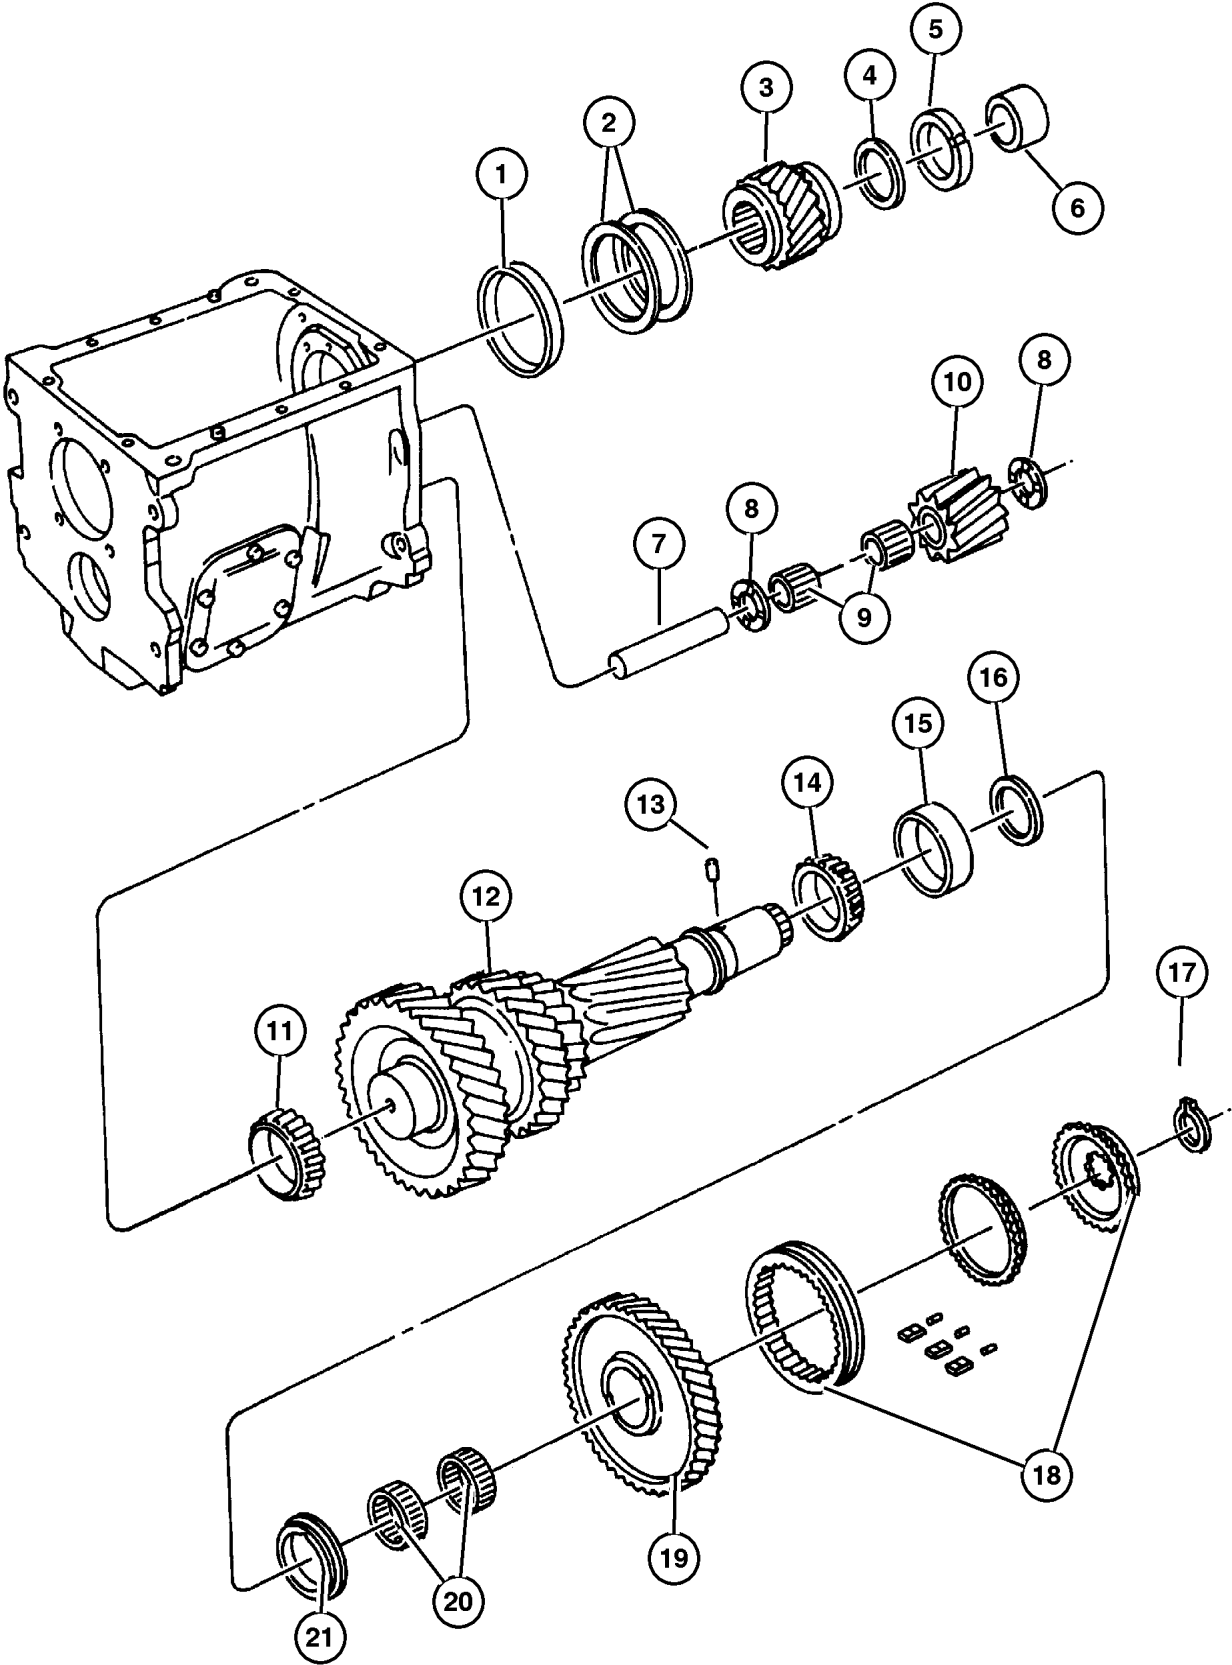September 16, 2005



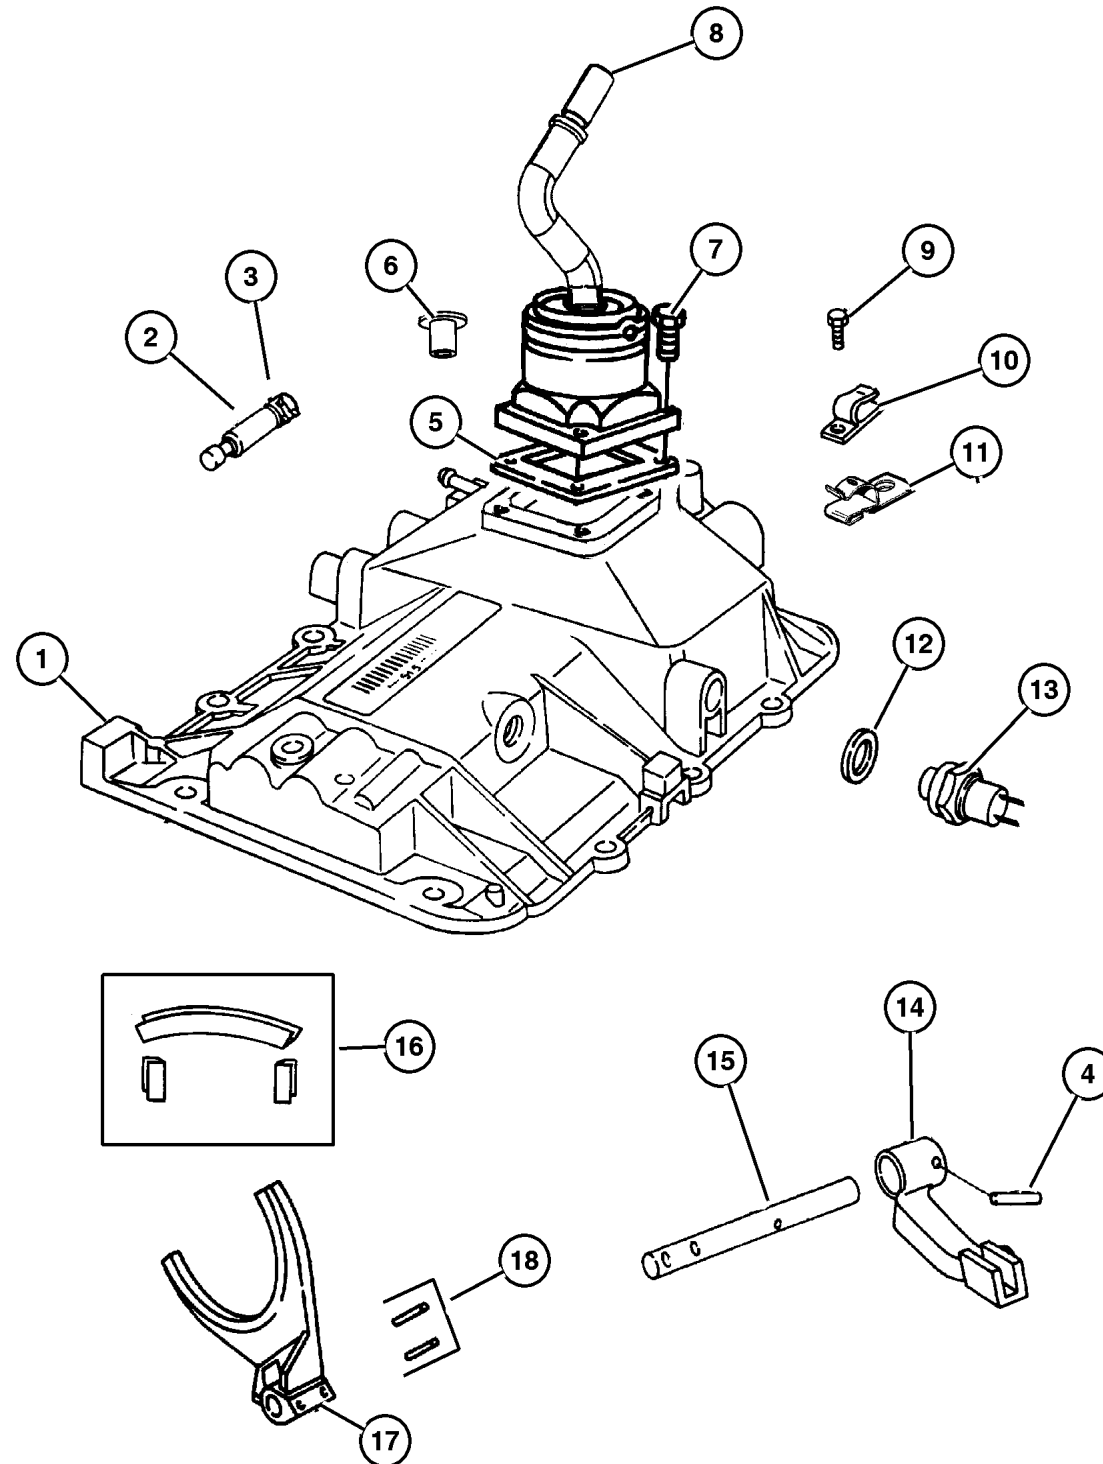Forks And Controls 5 Speed - 4500 [DDP][DDX] Figure 4500-910



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes									
[DDP] = 5 Speed Manual Transmission									
[DDX] = 5 Speed Heavy Duty Manual Transmission									
[EL0] = All 5.2L 8 Cylinder Gas Engines									
[EM0] = All 5.9L 8 Cylinder Gas Engines									
[ET0] = All 5.9L Turbo Diesels									
[EW0] = All 8.0L Gas Engines									
1	5003 036AA	1	1, 2, 3			EL0, EM0	DDP		HOUSING, Shift Lever
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
2	4741 660	1	1, 2, 3			EL0, EM0	DDP		VENT, Transmission
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
3	4638 633	1	1, 2, 3			EL0, EM0	DDP		CLIP, Vent Tube
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
4	1664 355	2	1, 2, 3			EL0, EM0	DDP		PIN, Shift Fork
		2	6, 7, 8			EL0, EM0	DDP		


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM, EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

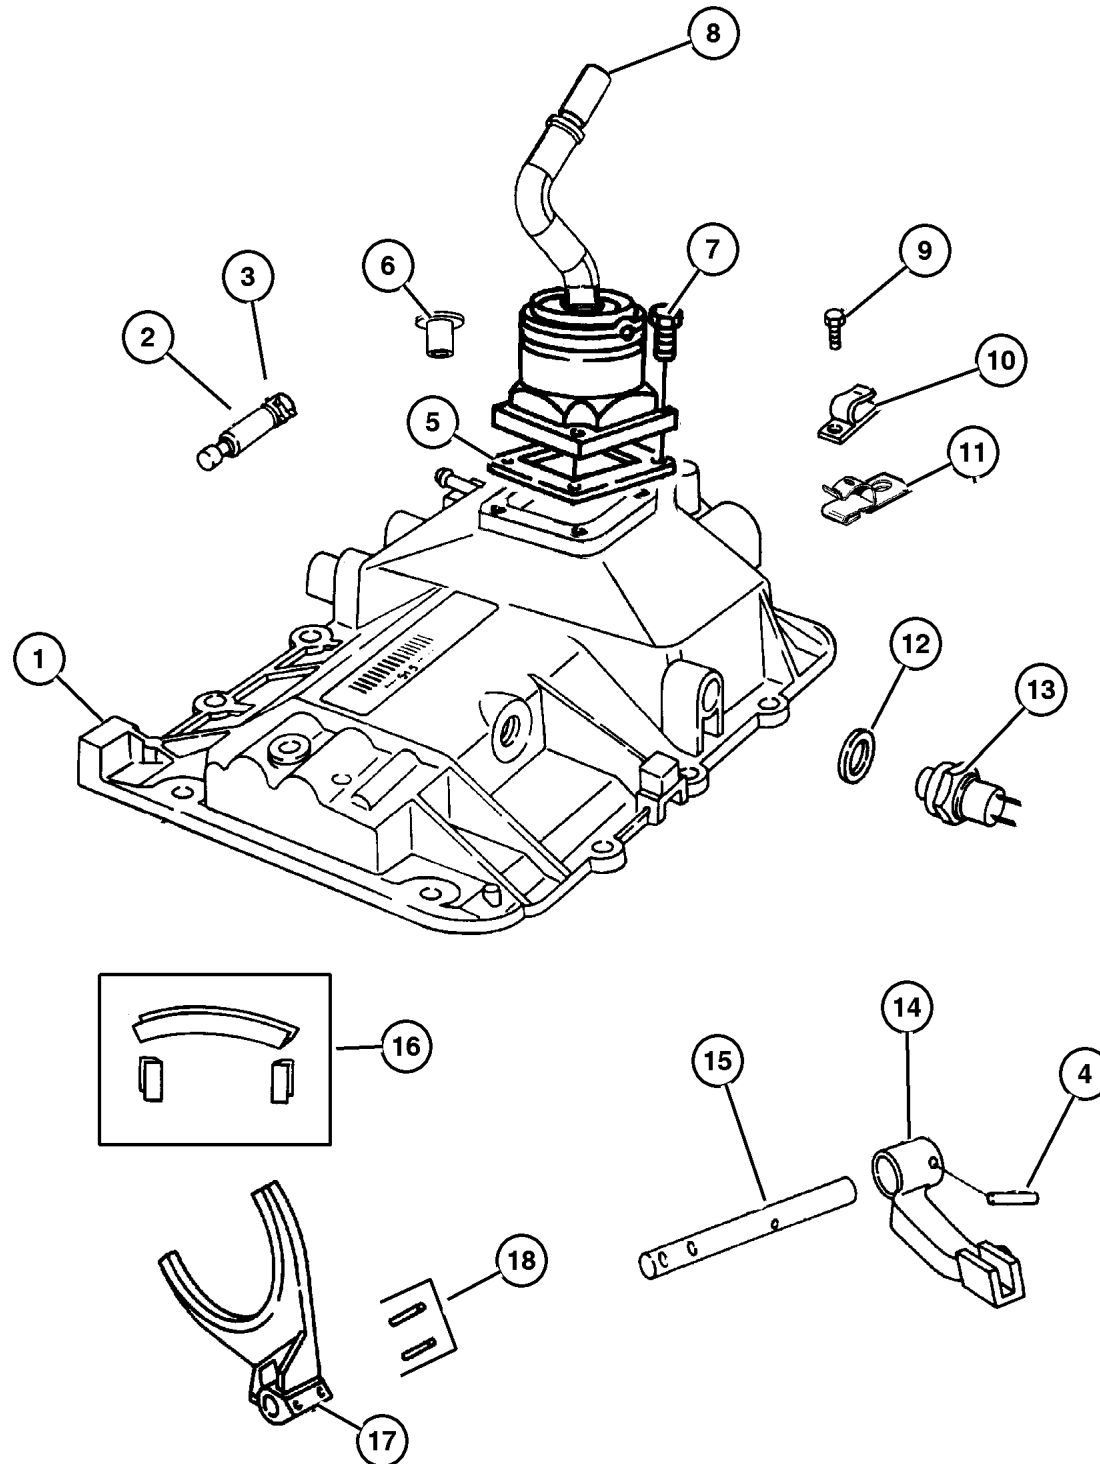Forks And Controls 5 Speed - 4500 [DDP][DDX] Figure 4500-910



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		2	1, 2, 3			ET0, EW0	DDX		
		2	6, 7, 8			ET0, EW0	DDX		
5	5003 214AA	1	1, 2, 3			EL0, EM0	DDP		SPACER, Shift Tower
		1	6, 7, 8			EL0, EM0	DDP		
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			ET0, EW0	DDX		
6	5003 212AA	4	1, 2, 3			EL0, EM0	DDP		BUSHING, Gearshift Lever
		4	6, 7, 8			EL0, EM0	DDP		
		4	1, 2, 3			ET0, EW0	DDX		
		4	6, 7, 8			ET0, EW0	DDX		
7	5003 213AA	4	1, 2, 3			EL0, EM0	DDP		BOLT
		4	6, 7, 8			EL0, EM0	DDP		
		4	1, 2, 3			ET0, EW0	DDX		
		4	6, 7, 8			ET0, EW0	DDX		
8	5003 211AA	1	1, 2, 3			EL0, EM0	DDP		LEVER, Gearshift
		1	1, 2, 3			ET0, EW0	DDX		
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX		
9									BOLT, Hex Head, .312-18x1.00

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

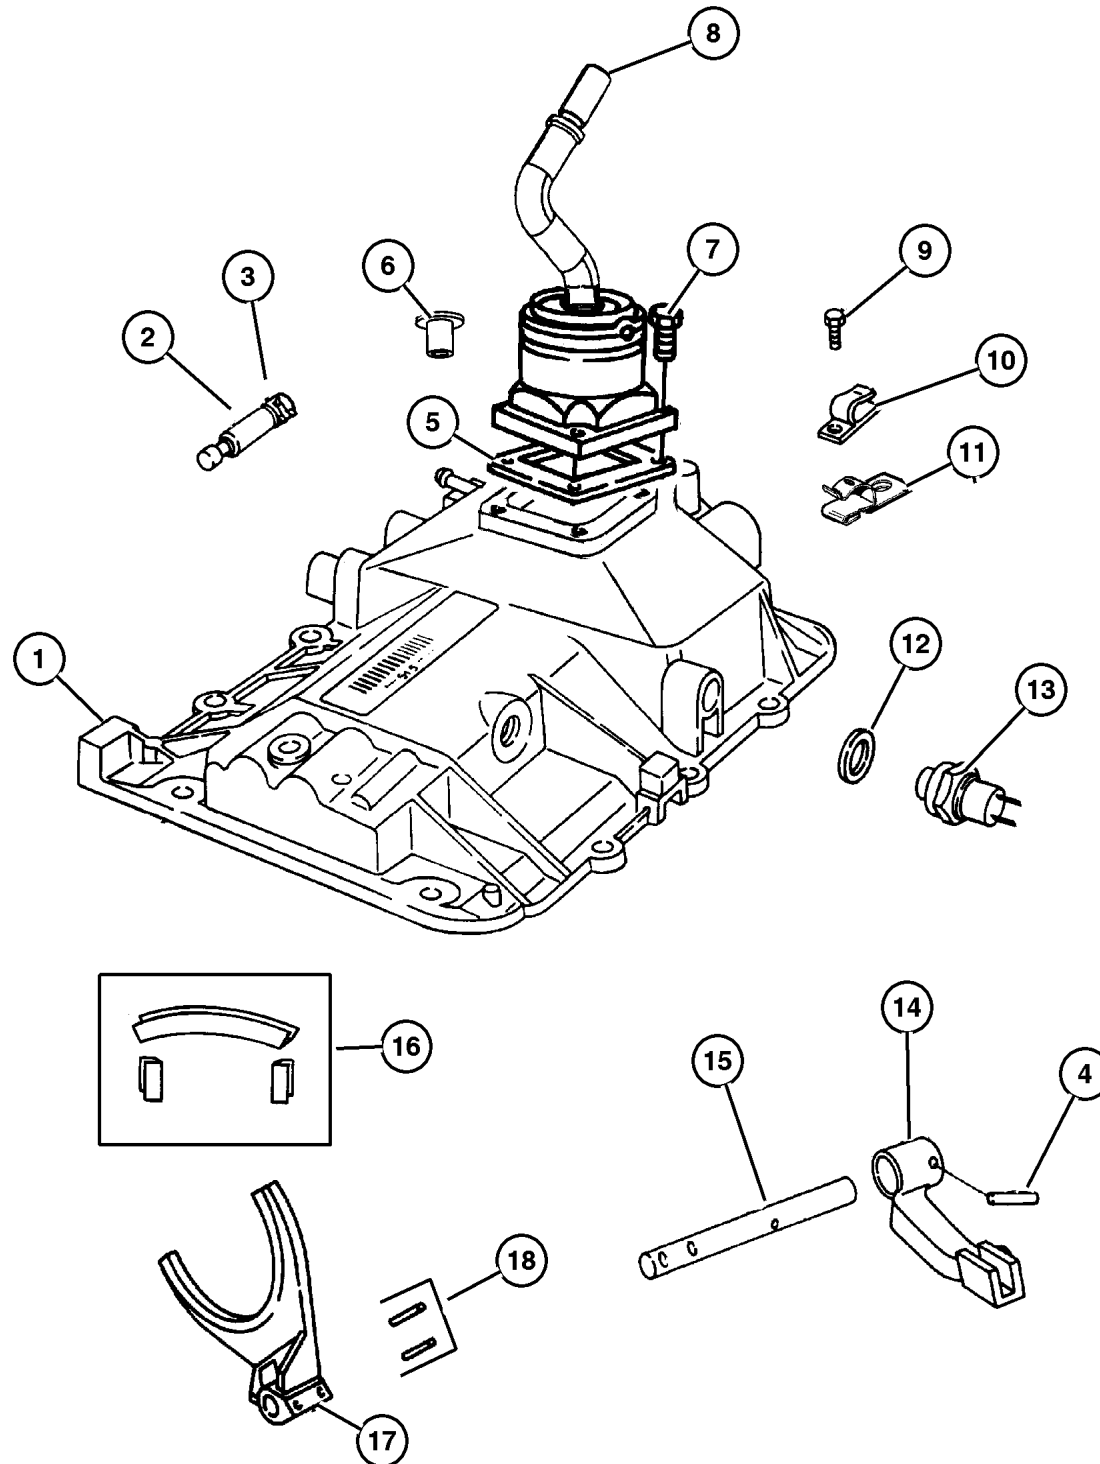
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Forks And Controls 5 Speed - 4500 [DDP][DDX] Figure 4500-910



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
10	0181 088	10	1, 2, 3			EL0,	DDP		
		10	6, 7, 8			EM0			
		10	1, 2, 3			EL0,	DDP		
		10	6, 7, 8			EM0			
11	5211 8181	5	1, 2, 3			ET0,	DDX		
		5	6, 7, 8			EW0			
		5	1, 2, 3			ET0,	DDX		
		5	6, 7, 8			EW0			
12	6016 203	1	6, 7, 8			EL0,	DDP		CLIP
		1	6, 7, 8			EM0			
		1	6, 7, 8			ET0,	DDX		
		1	6, 7, 8			EW0			
13	1302 807	1	1, 2, 3			EL0,	DDP		GASKET, Back Up Lamp Switch
		1	6, 7, 8			EM0			
		1	1, 2, 3			ET0,	DDX		
		1	6, 7, 8			EW0			
14	4741 630	1	1, 2, 3			EL0,	DDP		SWITCH, Back Up Lamp
		1	6, 7, 8			EM0			
		1	1, 2, 3			EL0,	DDP		
		1	6, 7, 8			EM0			
15		1	1, 2, 3			ET0,	DDX		
		1	6, 7, 8			EW0			
		1	1, 2, 3			ET0,	DDX		
		1	6, 7, 8			EW0			
16		1	1, 2, 3			ET0,	DDX		
		1	6, 7, 8			EW0			
		1	1, 2, 3			ET0,	DDX		
		1	6, 7, 8			EW0			
17		1	1, 2, 3			ET0,	DDX		
		1	6, 7, 8			EW0			
		1	1, 2, 3			ET0,	DDX		
		1	6, 7, 8			EW0			
18		1	1, 2, 3			ET0,	DDX		
		1	6, 7, 8			EW0			
		1	1, 2, 3			ET0,	DDX		
		1	6, 7, 8			EW0			


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

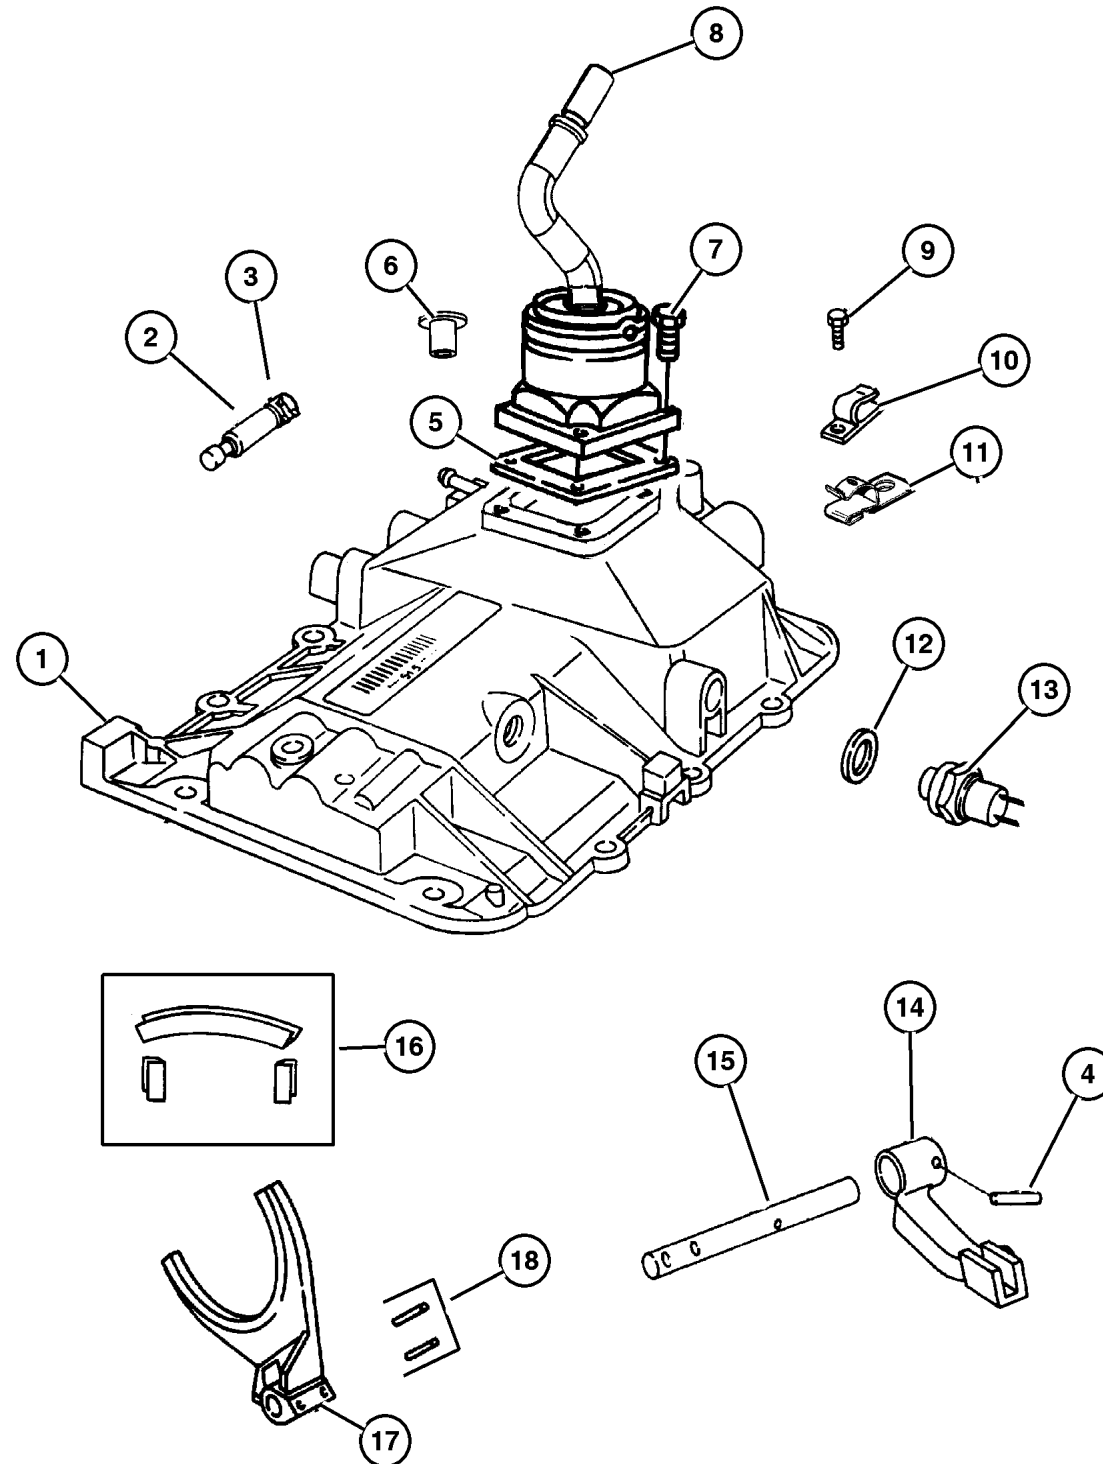Forks And Controls 5 Speed - 4500 [DDP][DDX] Figure 4500-910



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4637 692	1	1, 2, 3			EL0,	DDP		
		1	6, 7, 8			EM0	DDP		
		1	1, 2, 3			ET0,	DDX		
		1	6, 7, 8			EW0	DDX		
15						ET0,			RAIL, Over Drive Lug
	4778 216	1	1, 2, 3			EL0,	DDP		
		1	6, 7, 8			EM0	DDP		
		1	1, 2, 3			ET0,	DDX		
		1	6, 7, 8			EW0	DDX		
16						ET0,			PAD PACKAGE, Shift Fork
	5012 019AA	1	1, 2, 3			EL0,	DDP		
		1	6, 7, 8			EM0	DDP		
		1	1, 2, 3			ET0,	DDX		
		1	6, 7, 8			EW0	DDX		
17						ET0,			FORK, Transmission
	4773 178	1	1, 2, 3			EL0,	DDP		
		1	6, 7, 8			EM0	DDP		
		1	1, 2, 3			ET0,	DDX		
		1	6, 7, 8			EW0	DDX		
18						ET0,			PIN, Shift Fork
	1664 355	2	1, 2, 3			EL0,	DDP		
		2	6, 7, 8			EM0	DDP		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE

1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

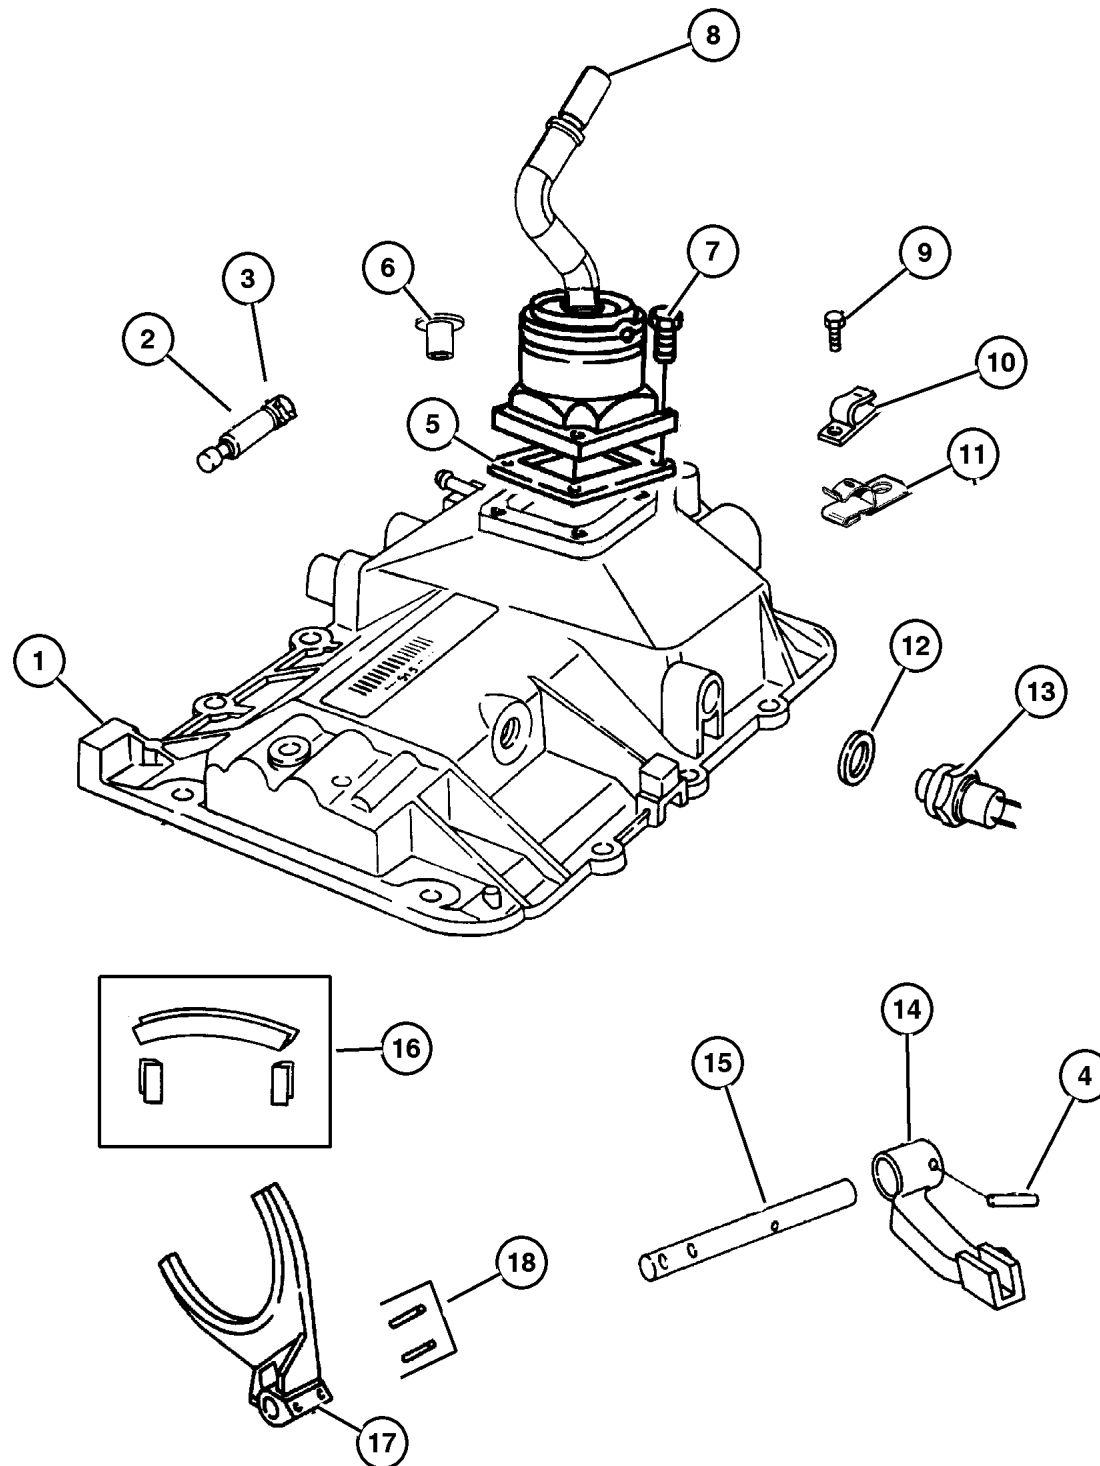
TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Forks And Controls 5 Speed - 4500 [DDP][DDX]
Figure 4500-910

[illegible]

DODGE RAM QUAD CAB/CLUB CAB (BE)

L = Ram Truck (All)

LINE

1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Gear Shift Controls 5 Speed - 4500 [DDP][DDX]
Figure 4500-1210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: Sales Codes									
[DDP] = 5 Speed Manual Transmission									
[DDX] = 5 Speed Heavy Duty Manual Transmission									
[EL0] = All 5.2L 8 Cylinder Gas Engines									
[EM0] = All 5.9L 8 Cylinder Gas Engines									
[ET0] = All 5.9L Turbo Diesels									
[EW0] = All 8.0L Gas Engines									
1	4446 921	1					DD0		INSERT, Transmission Shift Knob
2	6502 556	1					DBB		NUT, Hex, M10-1.5
3	5210 4174	1					DBB		KNOB, Gearshift
4	52107 614AB	1					DBB		BOOT, Gear Shift Lever
5	6101 946	6	1, 2, 3				DBB		SCREW, Tapping
6	5210 7612	1					DBB		LEVER, Gearshift
7	5EZ5 4LAZ	1					DBB		CONSOLE, Floor
	5EZ5 4RC8	1					DBB		AGATE
	5EZ5 4VK9	1					DBB		DARK CIRRUS
									DARK SUEDE
8	52107 613AB	1					DBB		BOOT, Gear Shift Lever
9	6101 946	6	1, 2, 3				DBB		SCREW, Tapping

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

Group – 5600

Manual Transmission 6 Speed

GROUP 5600 - Manual Transmission 6 Speed

Illustration Title Group-Fig. No.

Transmission Assembly

Transmission - 5600 6 Speed [DEE] Fig. 5600-110

Case and Extension

Case and Related Parts - 5600 6 Speed [DEE] Fig. 5600-210

Gear Train

Gear Train - 5600 6 Speed [DEE] Main Shaft Fig. 5600-410

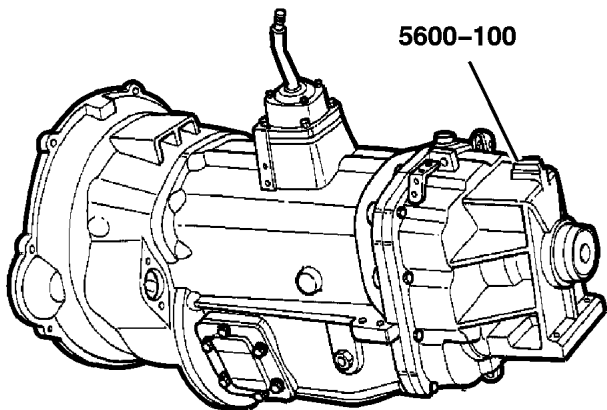
Gear Train - 5600 6 Speed [DEE] Counter Shaft Fig. 5600-420

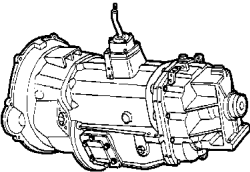
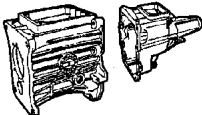
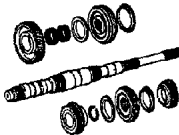
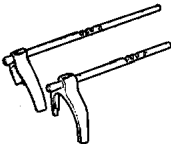

Fork and Rails

Fork and Rails - 5600 6 Speed [DEE] Fig. 5600-910

Gear Shift Controls

Controls, Gearshift - 5600 6 Speed [DEE] Fig. 5600-1210




5600-100 Transmission Assembly	5600-200 Case and Extension	5600-400 Gear Train	5600-900 Fork and Rails
			
5600-1200 Gear Shift Controls			
			

Transmission - 5600 6 Speed [DEE]
Figure 5600-110

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: Sales Codes
[DEE] = 6 Speed Heavy Duty Manual Transmission
[ETC] = 5.9L Cummins 24V Diesel
[ETH] = 5.9L Cummins Turbo Diesel

1							TRANSMISSION, 6 speed		
	5210 8401	1	1, 2, 3			ETC	DEE		
	5210 8402	1	6, 7, 8			ETC	DEE		
	52108 501AA	1	1, 2, 3			ETH	DEE		
	52108 502AA	1	6, 7, 8			ETH	DEE		

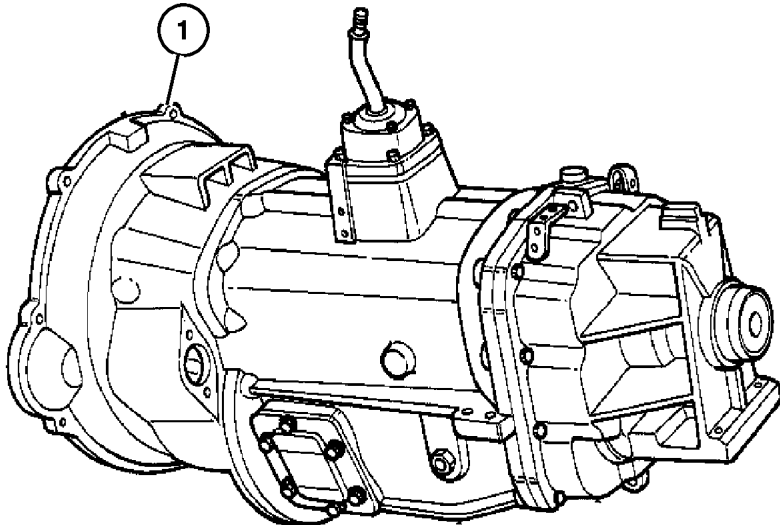

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Case and Related Parts - 5600 6 Speed [DEE]
Figure 5600-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES; Sales Codes

[DEE] = 6 Speed Heavy Duty Manual Transmission

[ETC] = 5.9L Cummins 24V Diesel

[ETH] = 5.9L HO Cummins Turbo Diesel

[ET0] = All 5.9L Diesel Engines

[EW0] = All 8.0L Gas Engines

1	5003 578AA	1	1, 2, 3			ETC	DEE		CASE, Transmission
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
-2	4882 280	1	1, 2, 3			ETC	DEE		PLUG, Oil Fill
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
-3	5003 579AA-	6	1, 2, 3			ETC	DEE		BUSHING, Shift Rail
		6	6, 7, 8			ETC	DEE		
		6	1, 2, 3			ETH	DEE		
		6	6, 7, 8			ETH	DEE		
-4	4761 099	AR	1, 2, 3			ETC	DEE		PIN, Locating
		AR	6, 7, 8			ETC	DEE		
		AR	1, 2, 3			ETH	DEE		
		2	6, 7, 8			ETC	DEE		
5	0556 875	2	1, 2, 3			ETC	DEE		COVER, Power Take Off
		2	6, 7, 8			ETC	DEE		
		2	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
6	5016 174AA	1	1, 2, 3			ETC	DEE		LABEL, Equipment Identification
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
7	5015 221AA	12	1, 2, 3			ETC	DEE		SCREW
		12	6, 7, 8			ETC	DEE		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE

1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

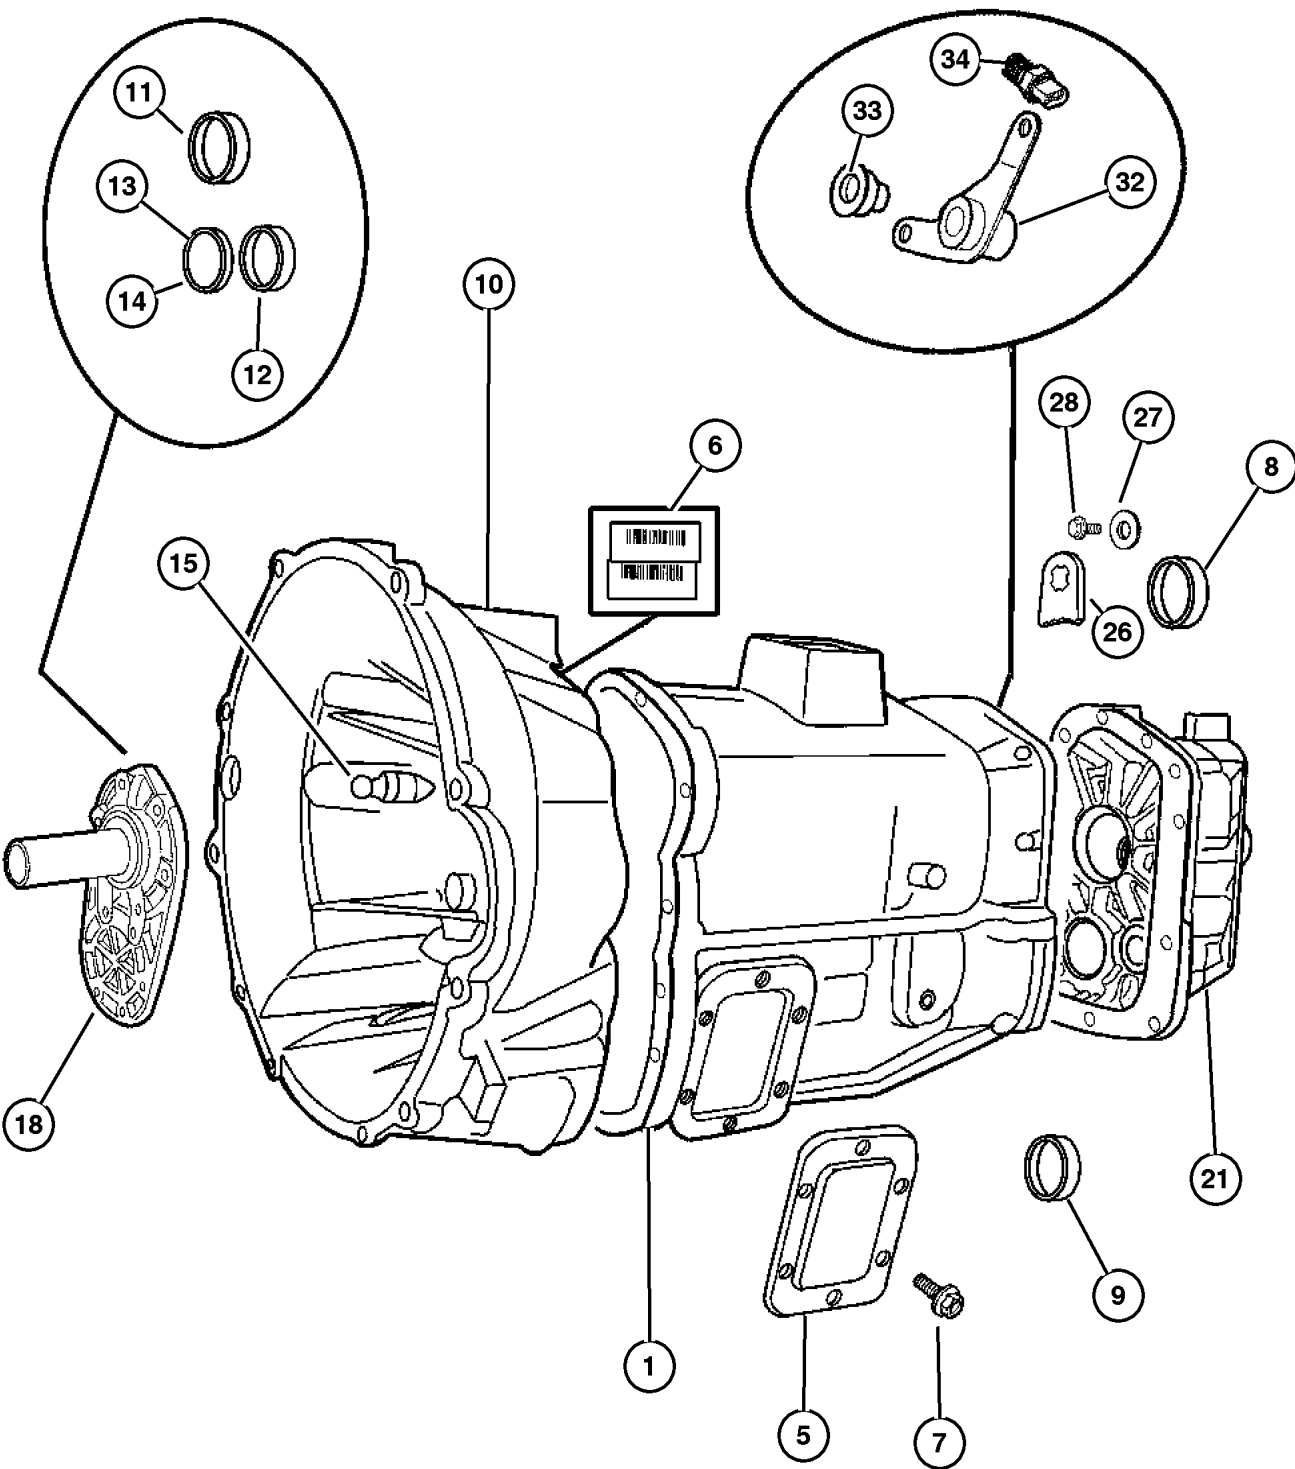
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005



Case and Related Parts - 5600 6 Speed [DEE]
Figure 5600-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
8	5003 580AA	12	1, 2, 3			ETH	DEE		BEARING CUP, Output Shaft
		12	6, 7, 8			ETH	DEE		
		1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
9	5012 134AA	1	1, 2, 3			ETH	DEE		CUP, Bearing Inner [Timken# 554241]
		1	6, 7, 8			ETH	DEE		
		1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
10	5003 582AA	1	1, 2, 3			ETC	DEE		HOUSING, Clutch
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
11	5003 583AA	1	1, 2, 3			ETC	DEE		BEARING CUP, Input Shaft
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
12	5003 584AA	1	1, 2, 3			ETC	DEE		BEARING CUP, Output Shaft
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
13	5010 048AA	1	1, 2, 3			ETC	DEE		GUIDE, Oil
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
14	5012 112AA	1	1, 2, 3			ETH	DEE		GUIDE, Oil
		1	6, 7, 8			ETH	DEE		
		1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
15	5208 7542	1	1, 2, 3			ETC	DEE		PIVOT, Clutch Release
		1	6, 7, 8			ETC	DEE		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

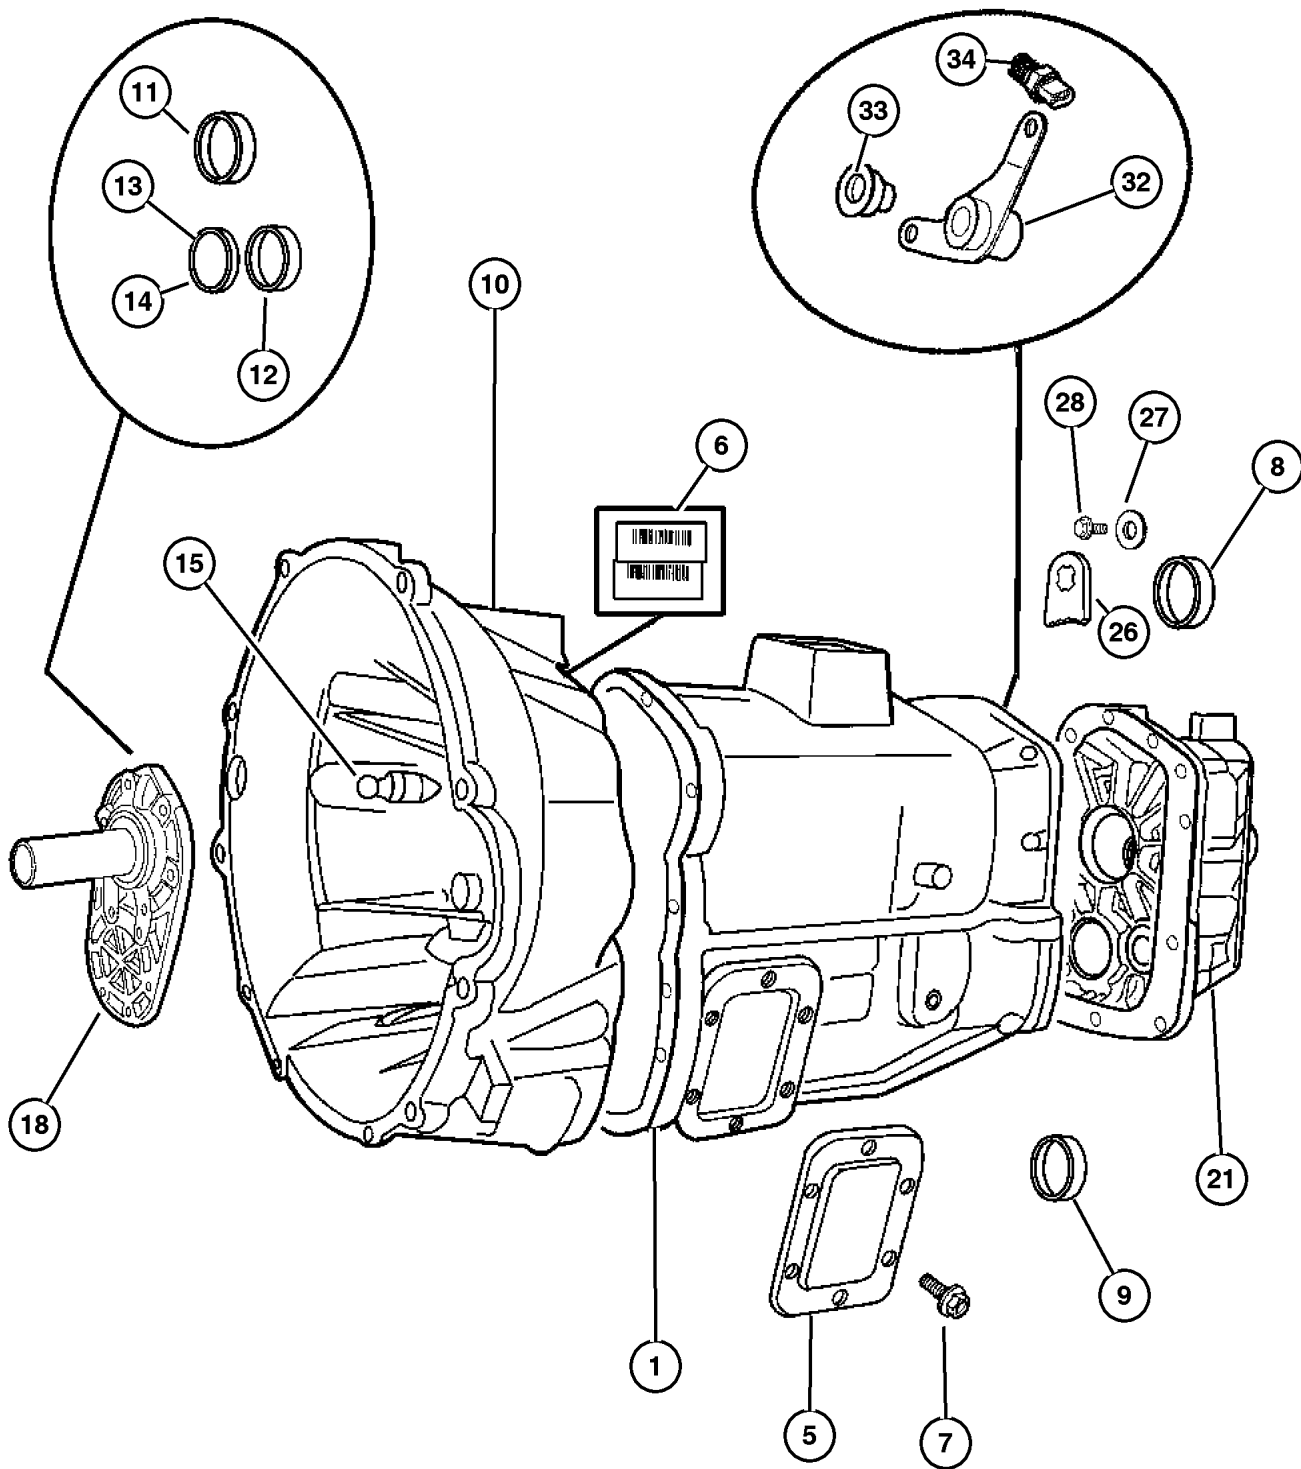
BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005



Case and Related Parts - 5600 6 Speed [DEE]
Figure 5600-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-16	6022 190	1	1, 2, 3			ETH	DEE		WASHER, Clutch Pivot
		1	6, 7, 8			ETH	DEE		
		1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
-17	5222 757	1	1, 2, 3			ETH	DEE		DOWEL
		1	6, 7, 8			ETH	DEE		
		2	1, 2, 3			ETC	DEE		
		2	6, 7, 8			ETC	DEE		
18	5012 114AA	1	1, 2, 3			ETC	DEE		RETAINER, Transmission Input Shaft
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
-19	5012 113AA-	1	1, 2, 3			ETC	DEE		GUIDE, Oil
		1	6, 7, 8			ETC	DEE		
-20	5012 115AA-	1	1, 2, 3			ETC	DEE		SEAL, Input
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
21	5003 585AA	1	1, 2, 3			ETC	DEE		HOUSING, Transmission Rear Extension
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
-22	4740 901	1	1, 2, 3			ETC	DEE		VENT, Transmission
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
-23	5003 587AA-	1	1, 2, 3			ETC	DEE		BUSHING, Crossover Shaft
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

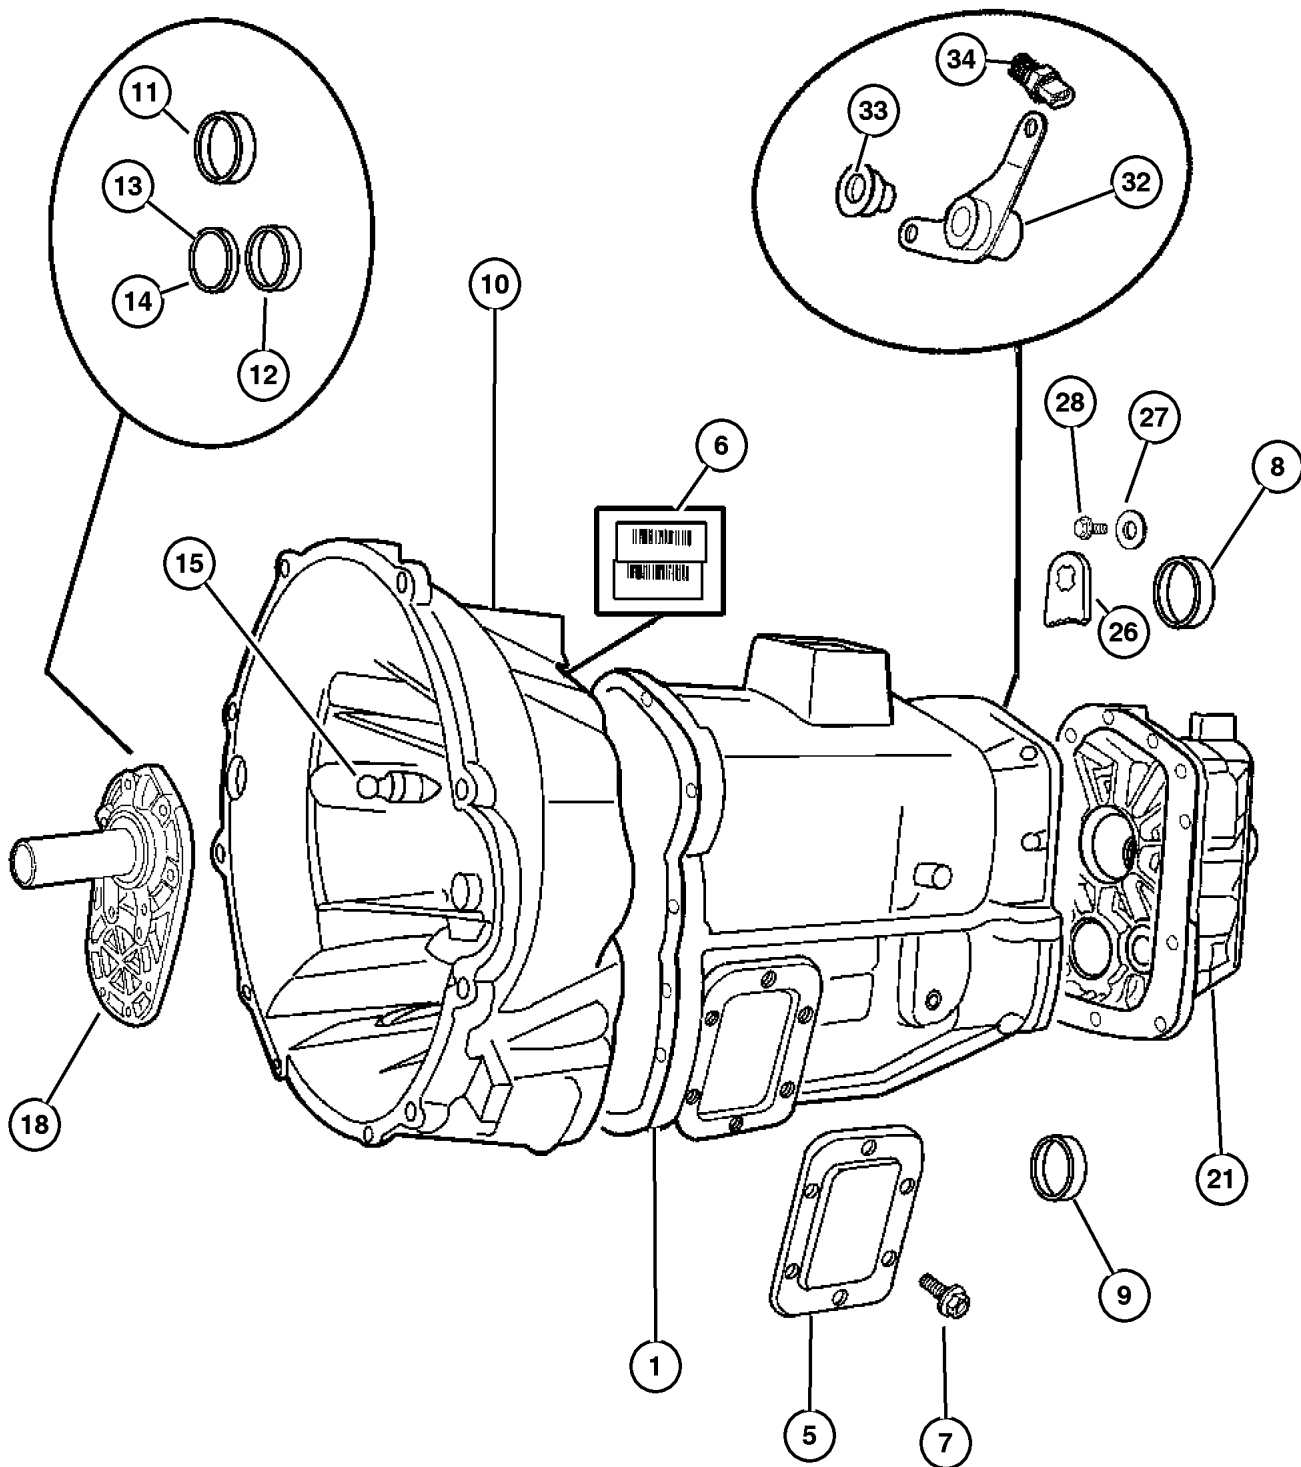
BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005



Case and Related Parts - 5600 6 Speed [DEE]
Figure 5600-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	6, 7, 8			ETH	DEE		
-24									SEAL, Adapter
	4741 920	1	1, 2, 3			ETC	DEE		
	4269 956	1	6, 7, 8			ETC	DEE		
	4741 920	1	1, 2, 3			ETH	DEE		
	4269 956	1	6, 7, 8			ETH	DEE		
-25									BUSHING, Extension Housing
	5003 210AA-	1	1, 2, 3			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
26									CAM, Alignment
	5011 966AA	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
27									WASHER
	6100 880	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
28									BOLT, Hex Head, M8x1.25x16
	6501 474	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
-29									PLUNGER
	5003 589AA-	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
-30									SPRING, Crossover Lever
	5011 967AB-	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
-31									PLUG, Oil Fill, Plug w/Washer Detent
	4210 616	AR	1, 2, 3			ETC	DEE		
		AR	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
32									BRACKET, Exhaust Pipe to T/Case

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

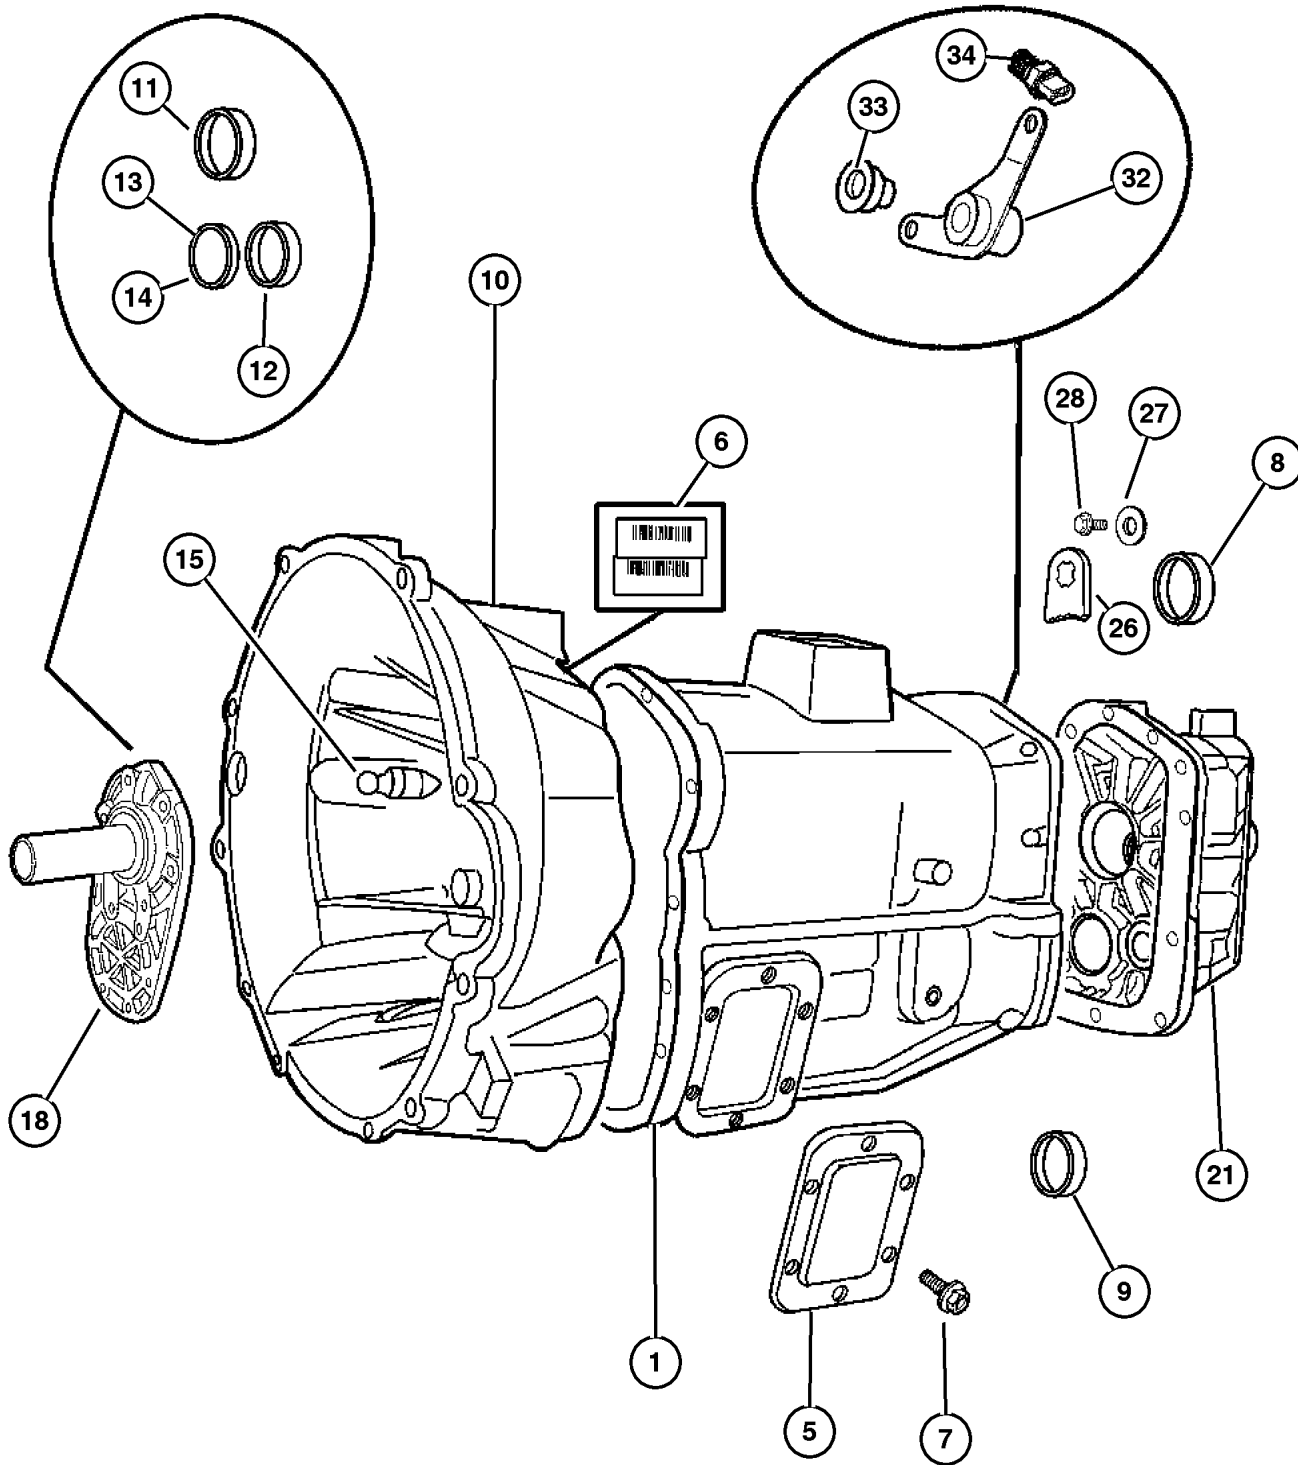
BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005




Case and Related Parts - 5600 6 Speed [DEE]
Figure 5600-210

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5210 3101	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
33									BUSHING, Exhaust Hanger
	5208 5085	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
34									SWITCH, Back Up Lamp
	5600 7270	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
-35									GASKET, Back Up Lamp Switch
	5012 138AA-	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
-36									CLIP
	5300 8550	2	1, 2, 3			ETC	DEE		
		2	6, 7, 8			ETC	DEE		
		2	1, 2, 3			ETH	DEE		
-37									CLIP, Wiring
	5012 136AA-	AR	1, 2, 3			ETC	DEE		
		AR	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

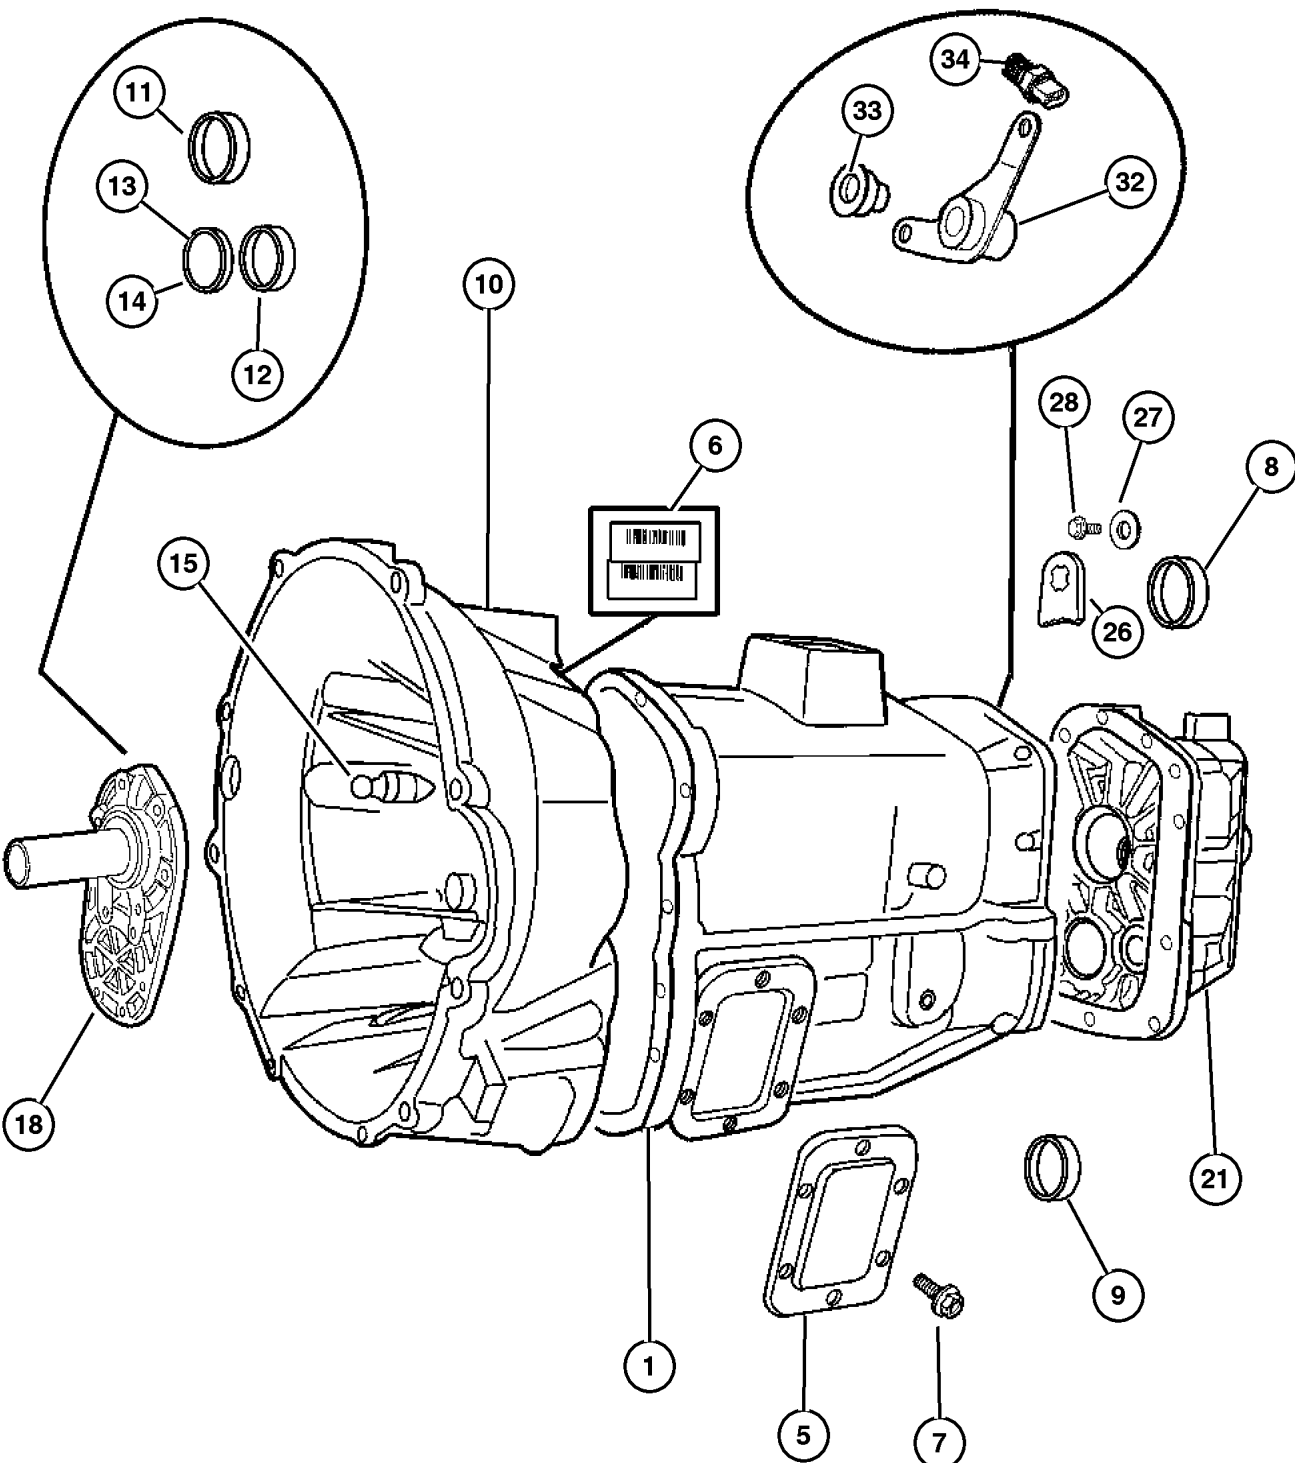September 16, 2005



Gear Train - 5600 6 Speed [DEE] Main Shaft
Figure 5600-410

ILLUSTRATION NOT AVAILABLE AT TIME OF PUBLICATION

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES; Sales Codes									
[DEE] = 6 Speed Heavy Duty Manual Transmission									
[ETC] = 5.9L Cummins 24V Diesel									
[ETH] = 5.9L HO Cummins Turbo Diesel									
1									BEARING CONE, Input Shaft
	5010 047AA	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
2									SHAFT, Input
	5010 045AA	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
	5015 204AA	1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
3									BEARING CUP, Input Shaft
	5010 046AA	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
4									CONE, Input Shaft
	5019 886AA	6	6, 7, 8			ETH	DEE		
		4	1, 2, 3			ETH	DEE		
	5010 053AA	AR	1, 2, 3			ETC	DEE		
		AR	6, 7, 8			ETC	DEE		
5									RING, Blocker
	5010 054AA	AR	1, 2, 3			ETC	DEE		
		AR	6, 7, 8			ETC	DEE		
		AR	1, 2, 3			ETH	DEE		
		AR	6, 7, 8			ETH	DEE		
6									RETAINING RING, Bearing
	5010 058AA	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
7									BEARING CONE, Output Shaft
	5010 057AA	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
-8									SHIM PACKAGE, Drive Pinion Bearing

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Gear Train - 5600 6 Speed [DEE] Main Shaft
Figure 5600-410

ILLUSTRATION NOT AVAILABLE AT TIME OF PUBLICATION

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
9	5011 376AA-	1	1, 2, 3			ETH	DEE		SYNCHRONIZER, Fifth
		1	6, 7, 8			ETH	DEE		
		1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
10	5010 055AA	1	1, 2, 3			ETC	DEE		SPRING, Synchronizer
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
11	5012 350AA	3	1, 2, 3			ETC	DEE		KEY, Synchronizer
		AR	6, 7, 8			ETC	DEE		
		AR	1, 2, 3			ETH	DEE		
		AR	6, 7, 8			ETH	DEE		
12	5010 056AA	AR	1, 2, 3			ETC	DEE		BALL, Shift Lever, M5
		AR	6, 7, 8			ETC	DEE		
		AR	1, 2, 3			ETH	DEE		
		AR	6, 7, 8			ETH	DEE		
13	4741 136	AR	1, 2, 3			ETC	DEE		GEAR, Sixth
		AR	6, 7, 8			ETC	DEE		
		AR	1, 2, 3			ETH	DEE		
		AR	6, 7, 8			ETH	DEE		
-14	5010 052AA	1	1, 2, 3			ETC	DEE		BEARING, Sixth Gear
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
15	5010 051AA-	1	1, 2, 3			ETC	DEE		SHAFT, Output
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
16	5010 049AA	1	1, 2, 3			ETC	DEE		SLEEVE, First Gear
	5010 050AA	1	6, 7, 8			ETC	DEE		
	5010 049AA	1	1, 2, 3			ETH	DEE		
	5010 050AA	1	6, 7, 8			ETH	DEE		
16	5010 077AA	1	1, 2, 3			ETC	DEE		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Gear Train - 5600 6 Speed [DEE] Main Shaft
Figure 5600-410

ILLUSTRATION NOT AVAILABLE AT TIME OF PUBLICATION

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
17	5010 059AA	1	6, 7, 8			ETC	DEE		BEARING
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
		AR	1, 2, 3			ETC	DEE		
		AR	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
18	5010 060AA	1	6, 7, 8			ETH	DEE		GEAR, Second
		1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
19	5010 061AA	1	6, 7, 8			ETH	DEE		RING, Blocker
		AR	1, 2, 3			ETC	DEE		
		AR	6, 7, 8			ETC	DEE		
		AR	1, 2, 3			ETH	DEE		
20	5010 062AA	1	6, 7, 8			ETH	DEE		SYNCHRONIZER, First and Second
		AR	1, 2, 3			ETH	DEE		
		1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
21	5010 063AA	1	1, 2, 3			ETH	DEE		GEAR, First
		1	6, 7, 8			ETH	DEE		
		1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
-22	5010 064AA-	1	1, 2, 3			ETH	DEE		THRUST WASHER, First Gear
		1	6, 7, 8			ETH	DEE		
		1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
23	5012 128AA	1	1, 2, 3			ETH	DEE		FORK, Transmission, Reverse
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
24	5012 127AA	1	1, 2, 3			ETC	DEE		RING
		1	6, 7, 8			ETH	DEE		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Gear Train - 5600 6 Speed [DEE] Main Shaft
Figure 5600-410

ILLUSTRATION NOT AVAILABLE AT TIME OF PUBLICATION

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
25	5012 125AA	1	6, 7, 8			ETC	DEE		SYNCHRONIZER, Reverse
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
		1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
-26	5010 064AA-	1	6, 7, 8			ETH	DEE		THRUST WASHER, First Gear
		1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	6, 7, 8			ETH	DEE		
27	5012 130AA	1	1, 2, 3			ETC	DEE		GEAR, Reverse
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
28	4637 761	1	1, 2, 3			ETC	DEE		BEARING, Reverse Synchronizer
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
29	5012 129AA	1	1, 2, 3			ETC	DEE		SLEEVE, Reverse
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
30	5012 131AA	1	1, 2, 3			ETC	DEE		WASHER, Reverse Thrust
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
31	5003 580AA	1	1, 2, 3			ETH	DEE		BEARING CUP, Output Shaft
		1	6, 7, 8			ETH	DEE		
		1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
32	5010 065AA	1	1, 2, 3			ETC	DEE		BEARING CONE, Output Shaft
		1	1, 2, 3			ETC	DEE		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Gear Train - 5600 6 Speed [DEE] Main Shaft
Figure 5600-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
-33	5011 352AA-	1	1, 2, 3			ETH	DEE		SNAP RING PACKAGE, Mainshaft
		1	6, 7, 8			ETH	DEE		
		1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
34									NUT, Locking
	5012 133AA	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		

ILLUSTRATION NOT AVAILABLE AT TIME OF PUBLICATION

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

Gear Train - 5600 6 Speed [DEE] Counter Shaft
Figure 5600-420

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES; Sales Codes

[DEE] = 6 Speed Heavy Duty Manual Transmission

[ETC] = 5.9L Cummins 24V Diesel

[ETH] = 5.9L HO Cummins Turbo Diesel


1									CONE ASSEMBLY, Countershaft
	5012 124AA	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
2									GEAR, Countershaft, Reverse
	5012 122AA	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
3									SLEEVE, Reverse
	5012 123AA	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
4									BEARING CUP, Output Shaft [Timken#NP882000]
	5003 581AA	1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		[Timken#NP882000]
		1	1, 2, 3			ETC	DEE		[Timken#NP882000]
		1	6, 7, 8			ETC	DEE		[Timken#NP882000]
5									CONE ASSEMBLY, Countershaft
	5010 076AA	1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
		1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
6									COUNTERSHAFT, Serviced w/ Bearing
	5010 066AA	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
7									BEARING, First Gear
	4798 769	AR	1, 2, 3			ETC	DEE		
		AR	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

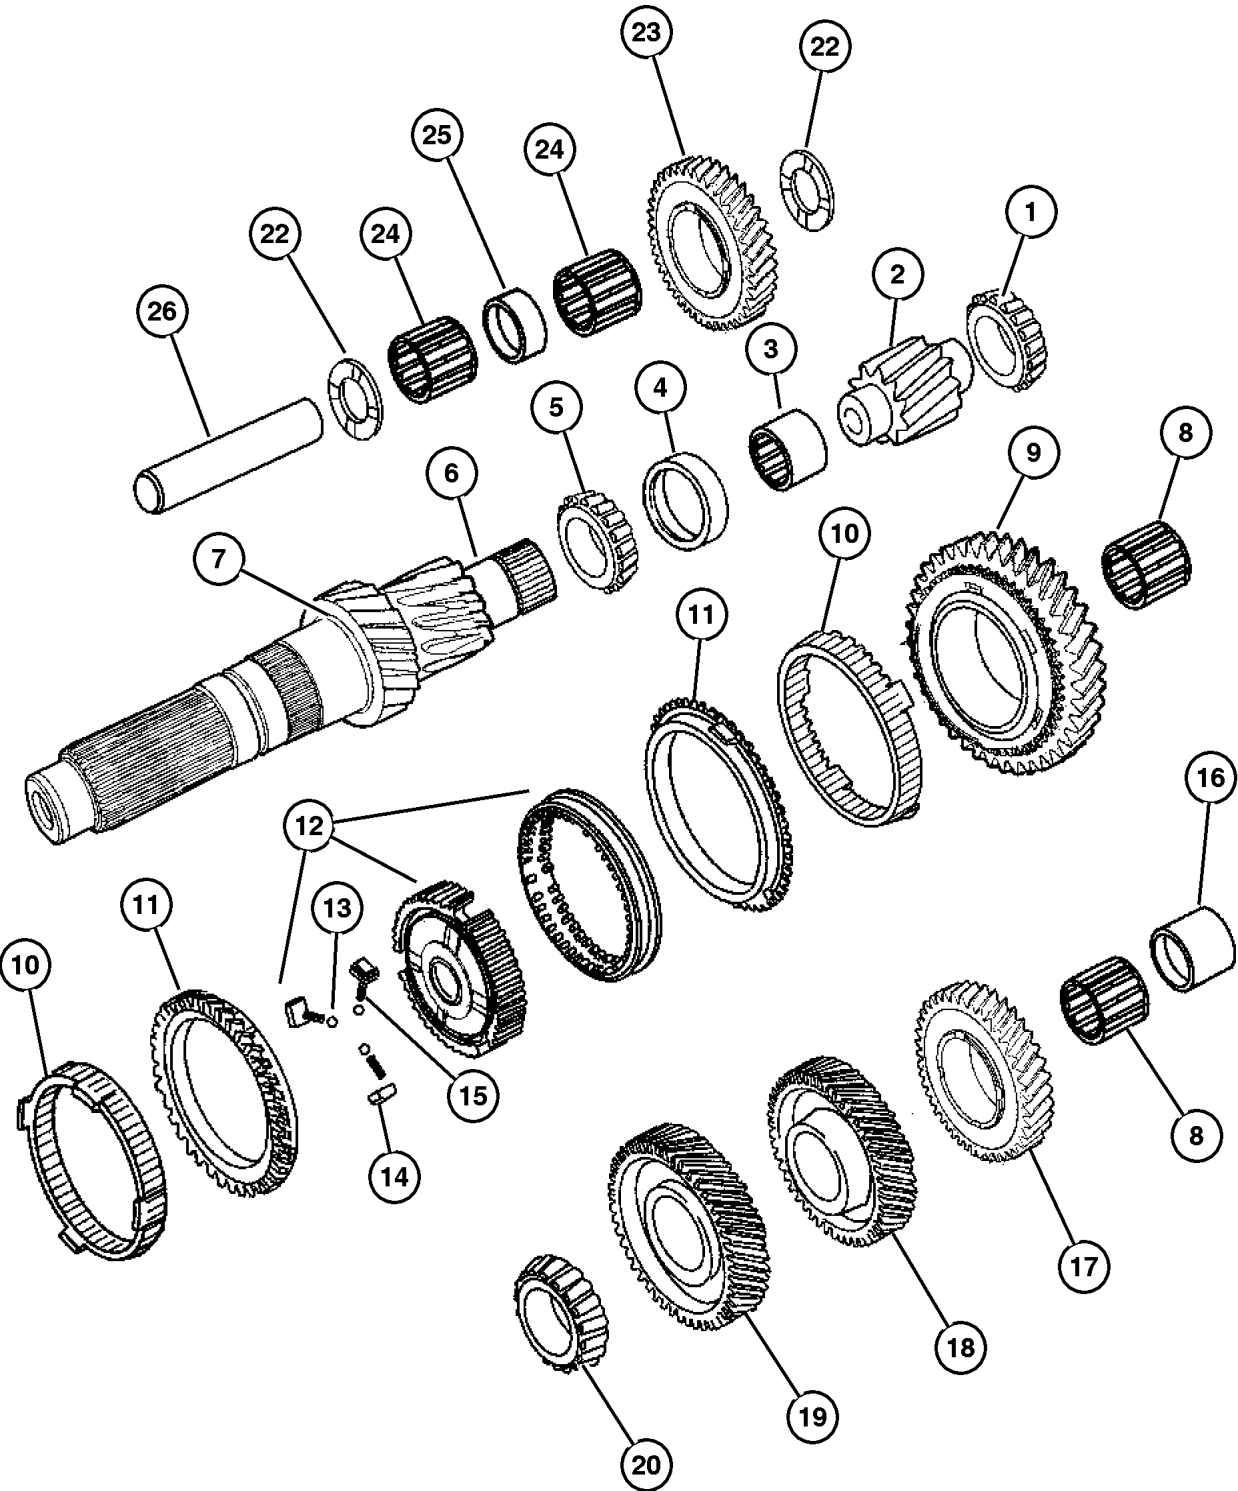September 16, 2005




Gear Train - 5600 6 Speed [DEE] Counter Shaft
Figure 5600-420

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
8	5010 068AA	1	1, 2, 3			ETC	DEE		THRUST WASHER, Second And Third Gear
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
9	5010 069AA	1	1, 2, 3			ETC	DEE		GEAR, Third
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
10	5010 053AA	AR	1, 2, 3			ETC	DEE		CONE, Input Shaft
		AR	6, 7, 8			ETC	DEE		
		AR	1, 2, 3			ETH	DEE		
		AR	6, 7, 8			ETH	DEE		
11	5010 054AA	AR	1, 2, 3			ETC	DEE		RING, Blocker
		AR	6, 7, 8			ETC	DEE		
		AR	1, 2, 3			ETH	DEE		
		AR	6, 7, 8			ETH	DEE		
12	5010 070AA	1	1, 2, 3			ETC	DEE		SYNCHRONIZER, Third and Fourth
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
13	4741 136	AR	1, 2, 3			ETC	DEE		BALL, Shift Lever, M5
		AR	6, 7, 8			ETC	DEE		
		AR	1, 2, 3			ETH	DEE		
		AR	6, 7, 8			ETH	DEE		
14	5010 056AA	AR	1, 2, 3			ETC	DEE		KEY, Synchronizer
		AR	6, 7, 8			ETC	DEE		
		AR	1, 2, 3			ETH	DEE		
		AR	6, 7, 8			ETH	DEE		
15	5012 350AA	AR	1, 2, 3			ETC	DEE		SPRING, Synchronizer
		AR	6, 7, 8			ETC	DEE		
		AR	1, 2, 3			ETH	DEE		

DODGE RAM QUAD CAB/CLUB CAB (BE)									
SERIES	LINE	BODY	ENGINE	TRANSMISSION					
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual					

AR = Use as required - = Non illustrated part # = New this model year

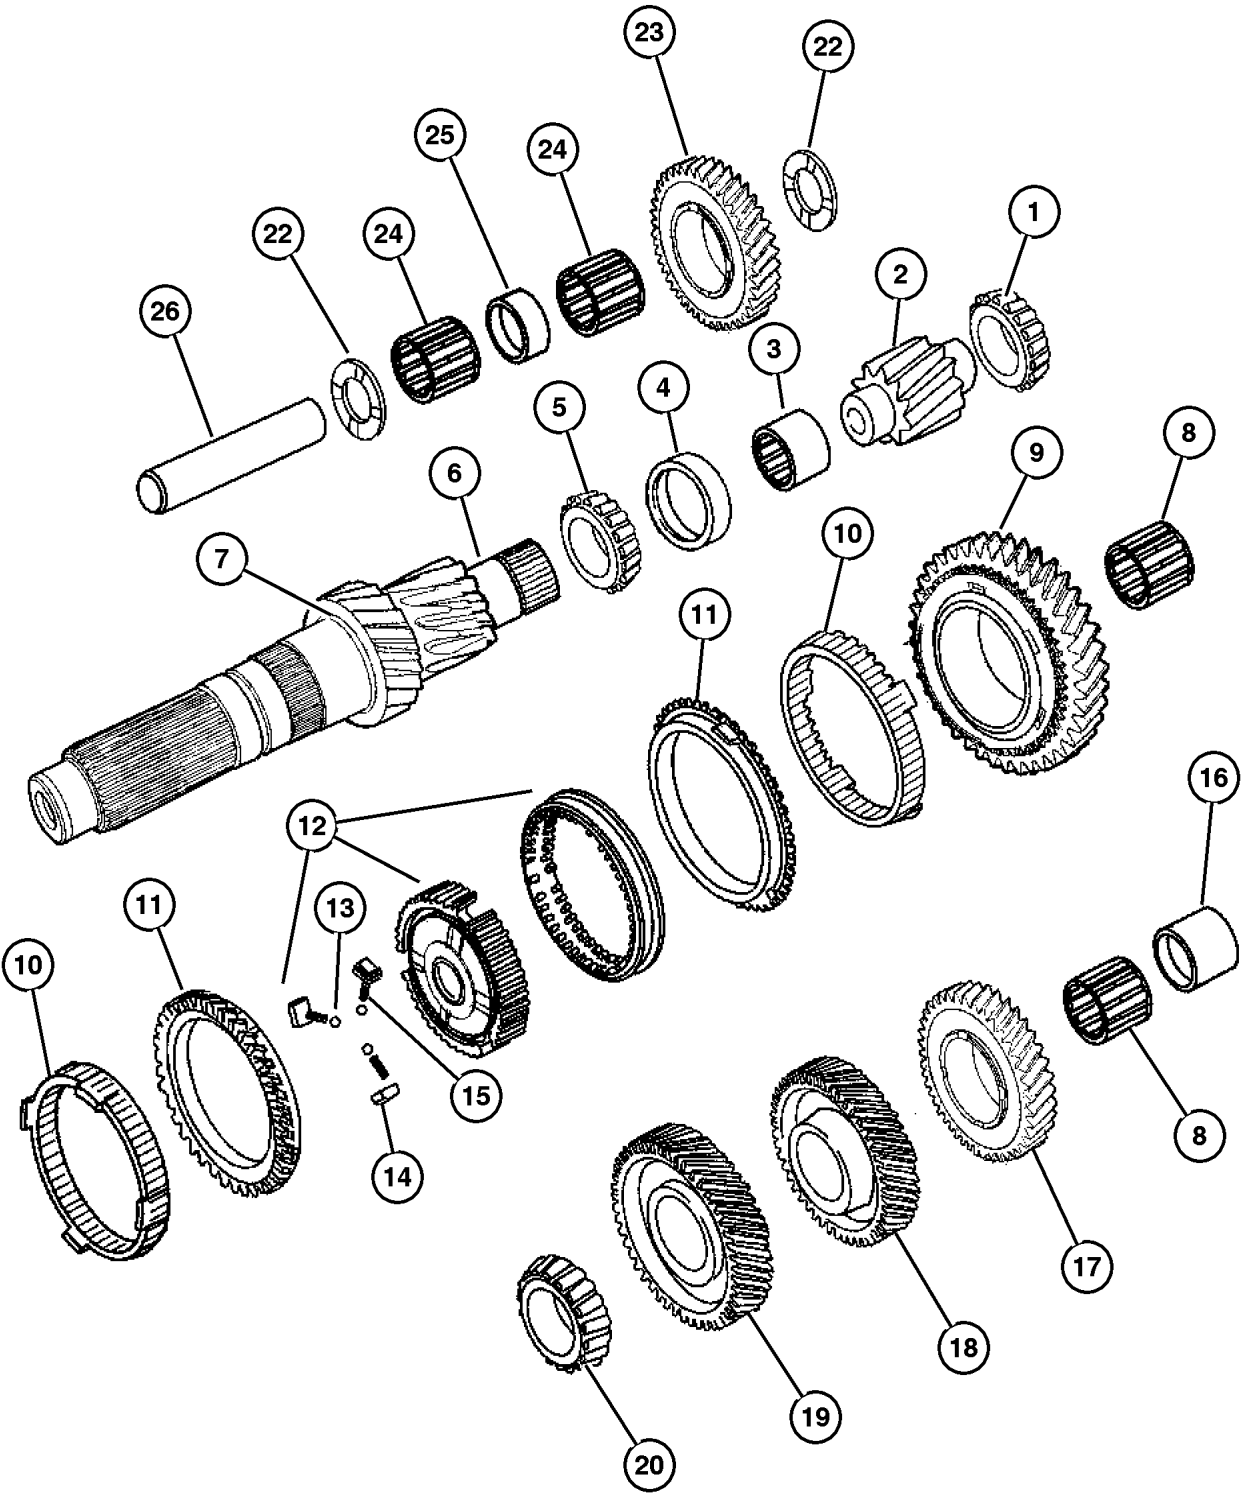September 16, 2005




Gear Train - 5600 6 Speed [DEE] Counter Shaft
Figure 5600-420

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		AR	6, 7, 8			ETH	DEE		
16	5010 071AA	1	1, 2, 3			ETC	DEE		SLEEVE, Fourth Gear
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
17	5010 072AA	1	1, 2, 3			ETC	DEE		GEAR, Fourth
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
18	5010 074AA	1	1, 2, 3			ETC	DEE		GEAR, Countershaft, Sixth
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
19	5010 073AA	1	1, 2, 3			ETC	DEE		GEAR, Countershaft, Input
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
20	5010 075AA	1	1, 2, 3			ETC	DEE		CONE ASSEMBLY, Countershaft, Front
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
-21	5011 358AA-	1	1, 2, 3			ETC	DEE		SNAP RING PACKAGE, Countershaft
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
22	5012 118AA	2	1, 2, 3			ETC	DEE		WASHER, Idler Gear
		2	6, 7, 8			ETC	DEE		
		2	1, 2, 3			ETH	DEE		
		2	6, 7, 8			ETH	DEE		
23	5012 121AA	1	1, 2, 3			ETC	DEE		GEAR, Idler

DODGE RAM QUAD CAB/CLUB CAB (BE)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.	
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.	
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual	
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual	
			EAA = All Engines	DEE = 6 Speed HD Manual	
			EAG = All Gas Engines		

AR = Use as required - = Non illustrated part # = New this model year

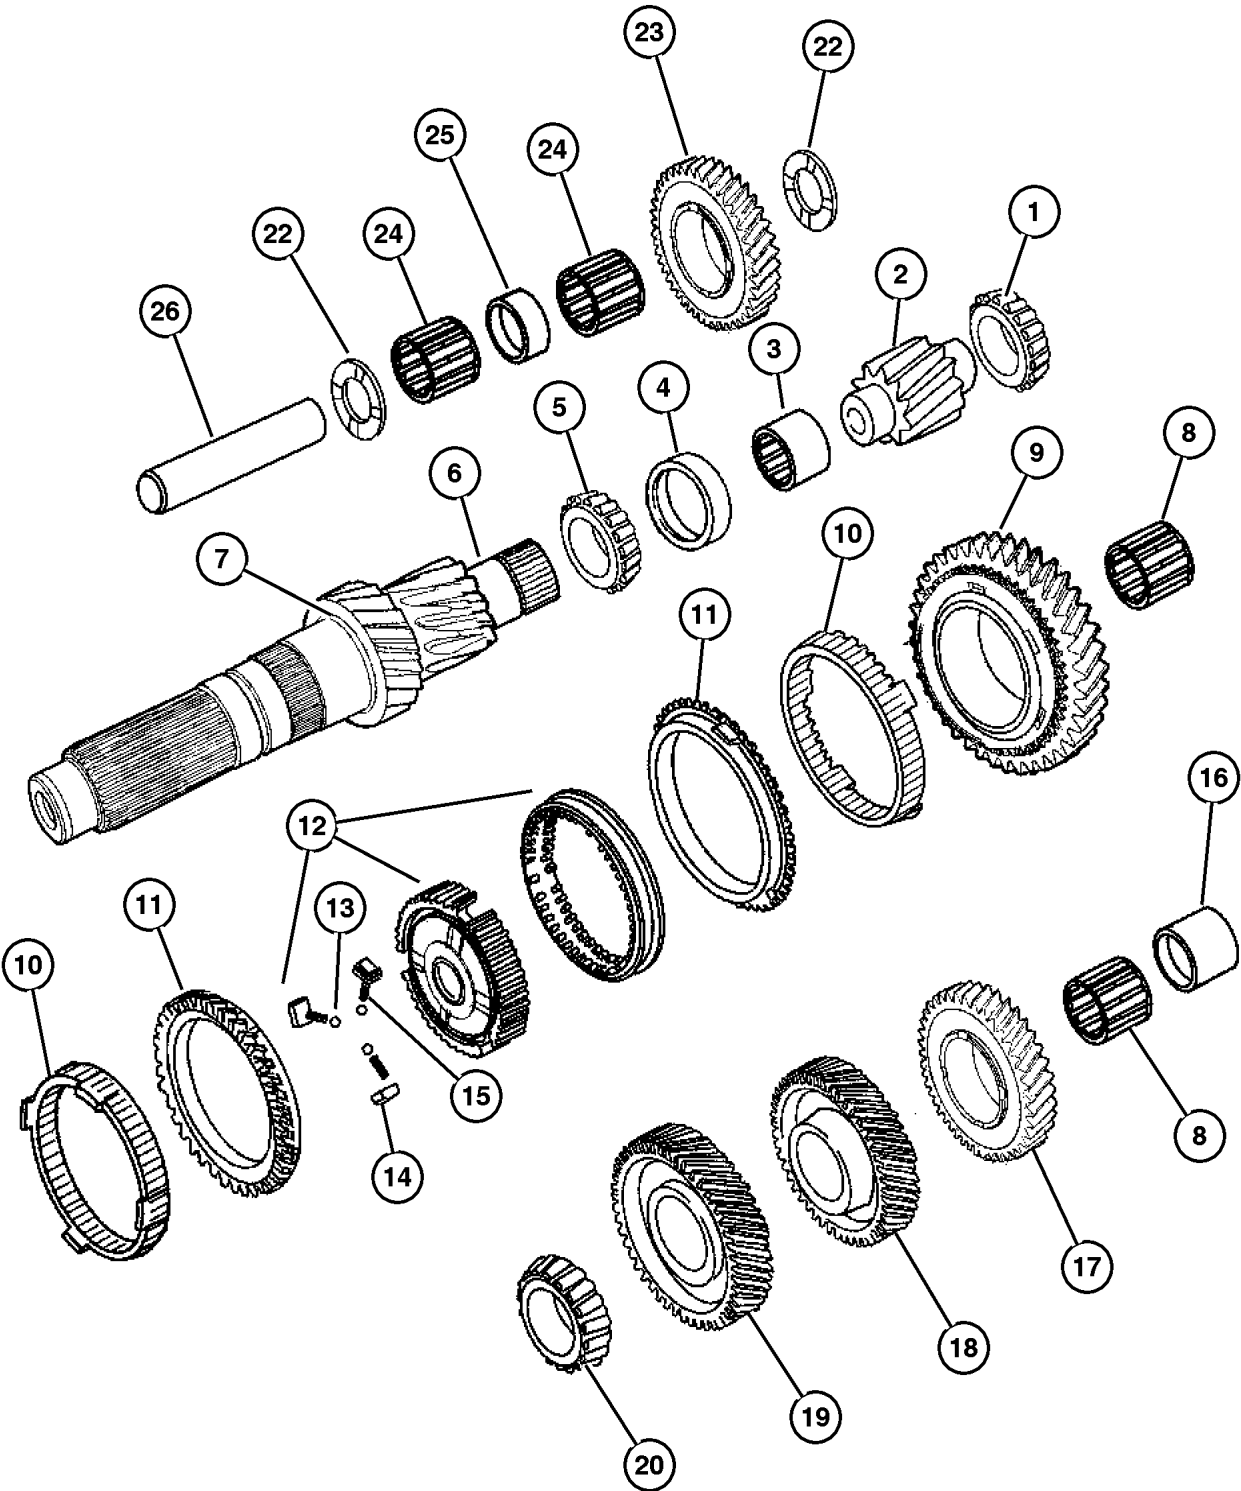September 16, 2005



Gear Train - 5600 6 Speed [DEE] Counter Shaft
Figure 5600-420


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
24	5012 119AA	2	1, 2, 3			ETC	DEE		BEARING, Idler
		2	6, 7, 8			ETC	DEE		
		2	1, 2, 3			ETH	DEE		
		2	6, 7, 8			ETH	DEE		
25	5012 120AA	1	1, 2, 3			ETC	DEE		SPACER, Idler
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
26	5012 117AA	1	1, 2, 3			ETC	DEE		SHAFT, Idler
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		

DODGE RAM QUAD CAB/CLUB CAB (BE)								
SERIES	LINE	BODY	ENGINE	TRANSMISSION				
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.				
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.				
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual				
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual				
			EAA = All Engines	DEE = 6 Speed HD Manual				
			EAG = All Gas Engines					

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

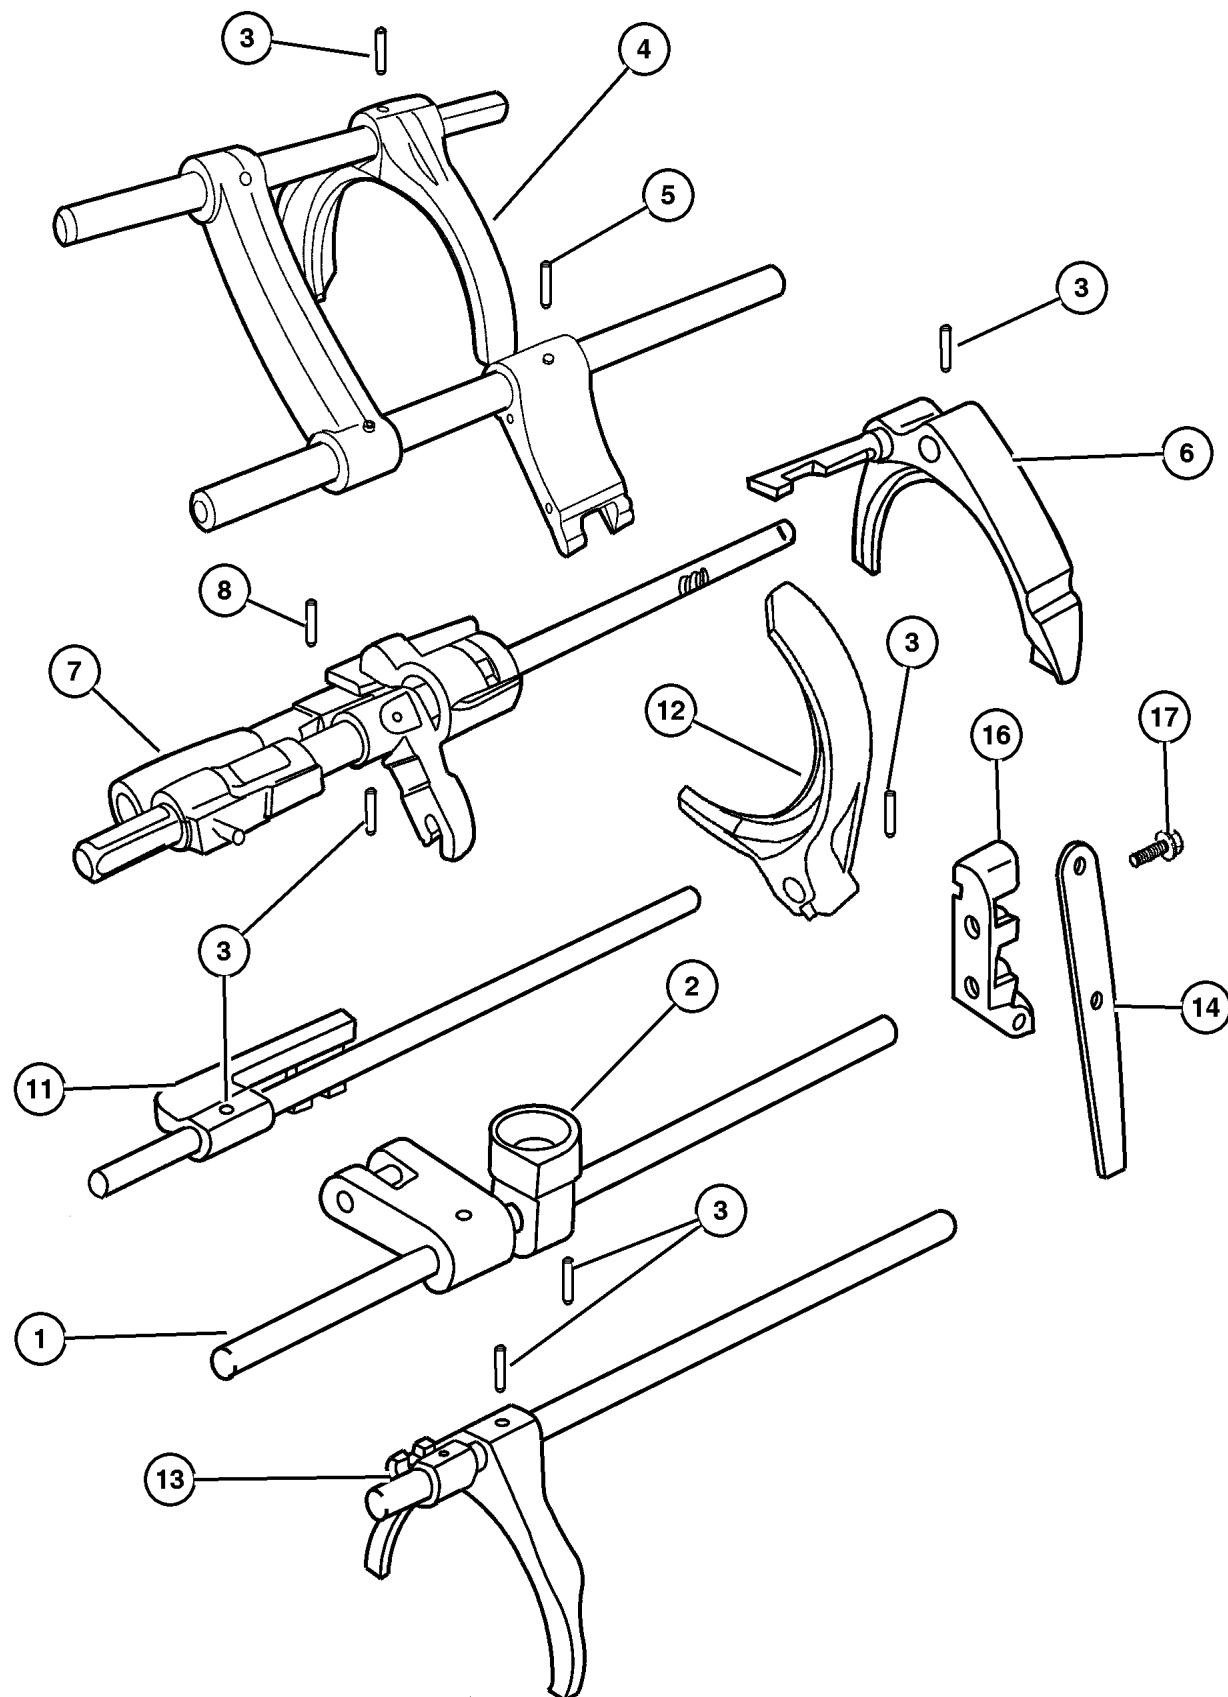Fork and Rails - 5600 6 Speed [DEE] Figure 5600-910



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES; Sales Codes									
[DEE] = 6 Speed Heavy Duty Manual Transmission									
[ETC] = 5.9L Cummins 24V Diesel									
[ETH] = 5.9L HO Cummins Turbo Diesel									
1									RAIL, Shift
	5010 078AA	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
2									SOCKET, Shift Shaft
	5010 086AA	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
3									PIN, Shift Shaft
	4741 139	AR	1, 2, 3			ETC	DEE		
		AR	6, 7, 8			ETC	DEE		
		AR	1, 2, 3			ETH	DEE		
4									FORK, Third and Fourth
	5010 090AA	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
5									PIN, Roll
	5010 083AA	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
6									FORK, First and Second
	5010 091AA	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
7									RAIL, Shift
	5010 079AA	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
8									PIN, Roll
	5010 082AA	1	1, 2, 3			ETC	DEE		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

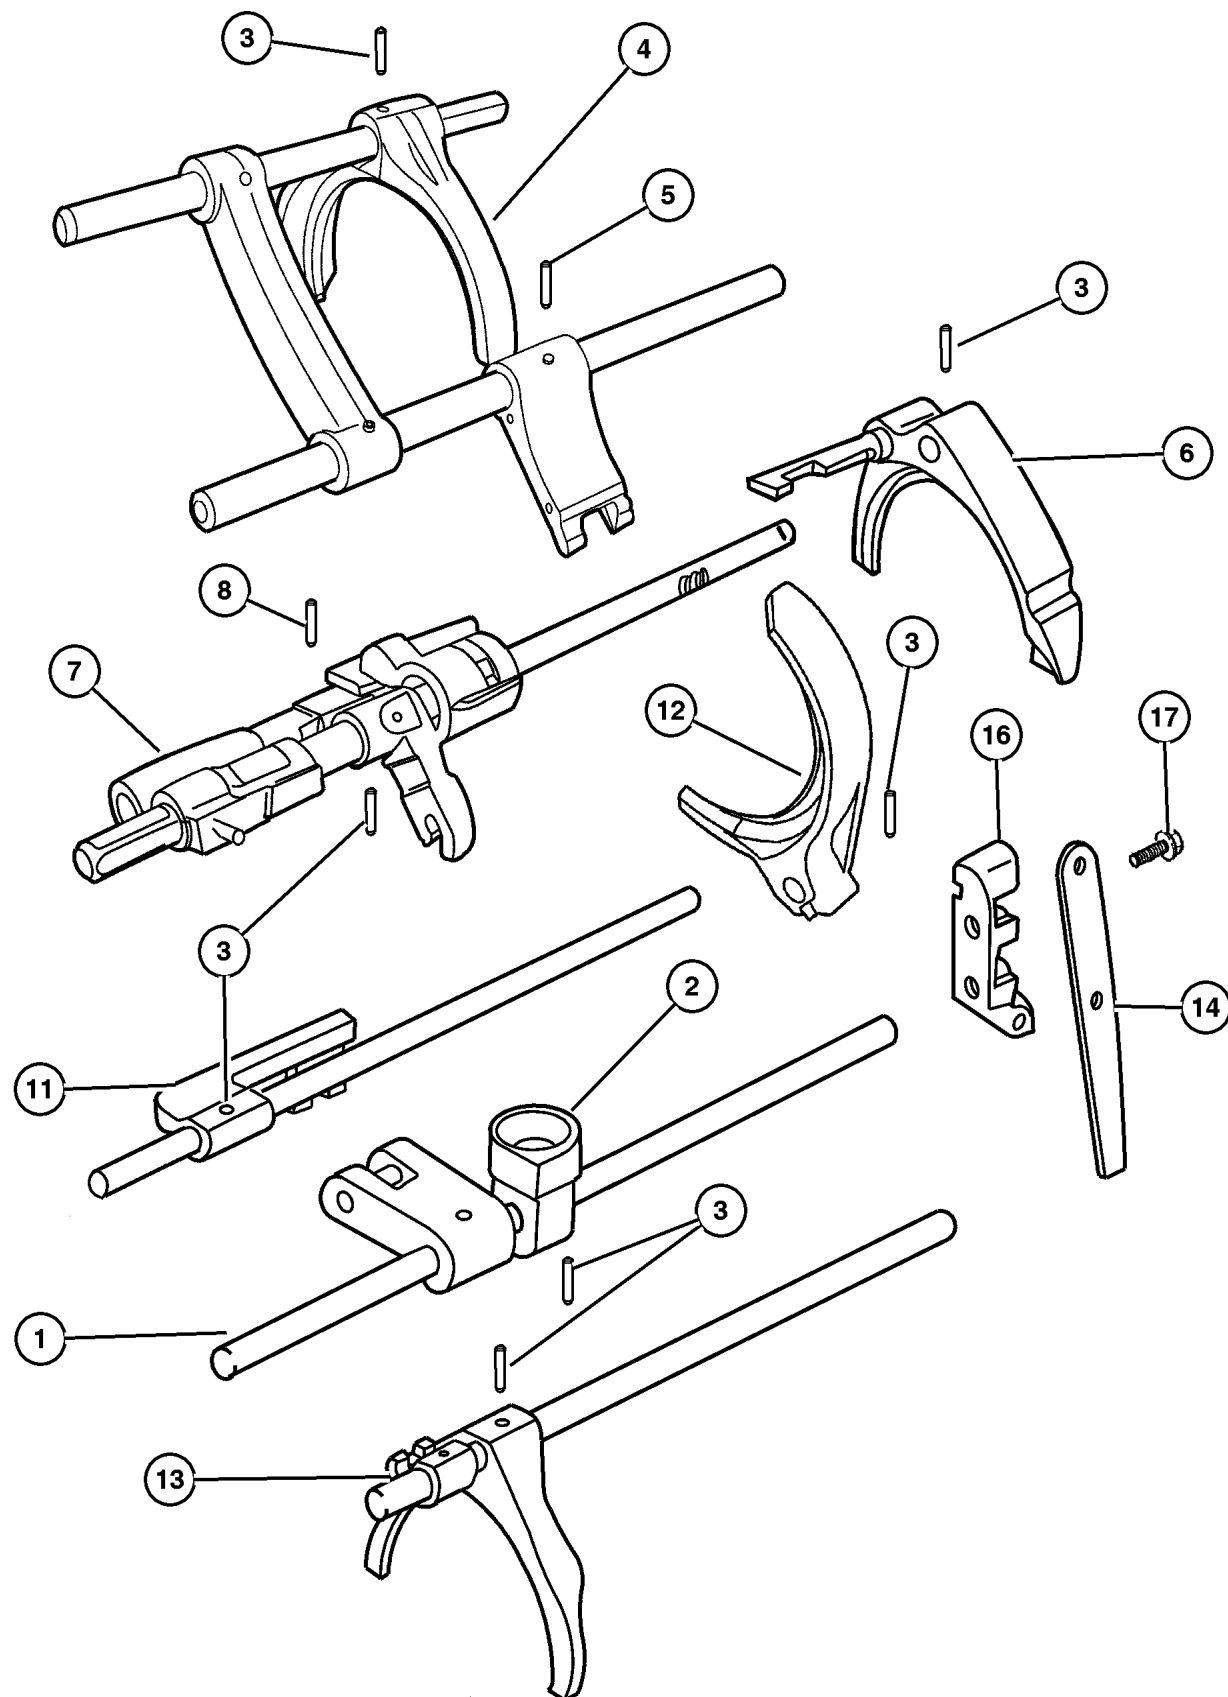
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Fork and Rails - 5600 6 Speed [DEE] Figure 5600-910



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	6, 7, 8			ETC	DEE		BLOCKER, Shift
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
-9	5010 088AA-	1	1, 2, 3			ETC	DEE		GATE, Gearshift Rod
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		GATE, Gearshift Rod
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
-10	5010 089AA-	1	1, 2, 3			ETC	DEE		GATE, Gearshift Rod
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		GATE, Gearshift Rod
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
11									RAIL, Reverse Shift, Rail and Gate Serviced in Assembly
	5010 097AA	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		FORK, Transmission, Reverse
		1	6, 7, 8			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
12	5012 128AA	1	6, 7, 8			ETC	DEE		FORK, Transmission, Reverse
		1	1, 2, 3			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		FORK, Fifth Shift
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
13	5010 093AA	1	1, 2, 3			ETC	DEE		FORK, Fifth Shift
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		FORK, Fifth Shift
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
14	5016 173AA	1	1, 2, 3			ETC	DEE		ARM, Transmission Shift
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		ARM, Transmission Shift
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
-15	5010 084AA-	1	1, 2, 3			ETC	DEE		PIN, Shift Shaft
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		PIN, Shift Shaft
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
16									BRACKET, Shift Fork

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE

1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year


September 16, 2005

Fork and Rails - 5600 6 Speed [DEE]
Figure 5600-910

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5010 095AA	1	1, 2, 3			ETC	DEE		
		1	6, 7, 8			ETC	DEE		
		1	1, 2, 3			ETH	DEE		
		1	6, 7, 8			ETH	DEE		
17									BOLT, M8
	5010 096AA	2	1, 2, 3			ETC	DEE		M8x1.25x40
		2	6, 7, 8			ETC	DEE		
		2	1, 2, 3			ETH	DEE		
		2	6, 7, 8			ETH	DEE		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

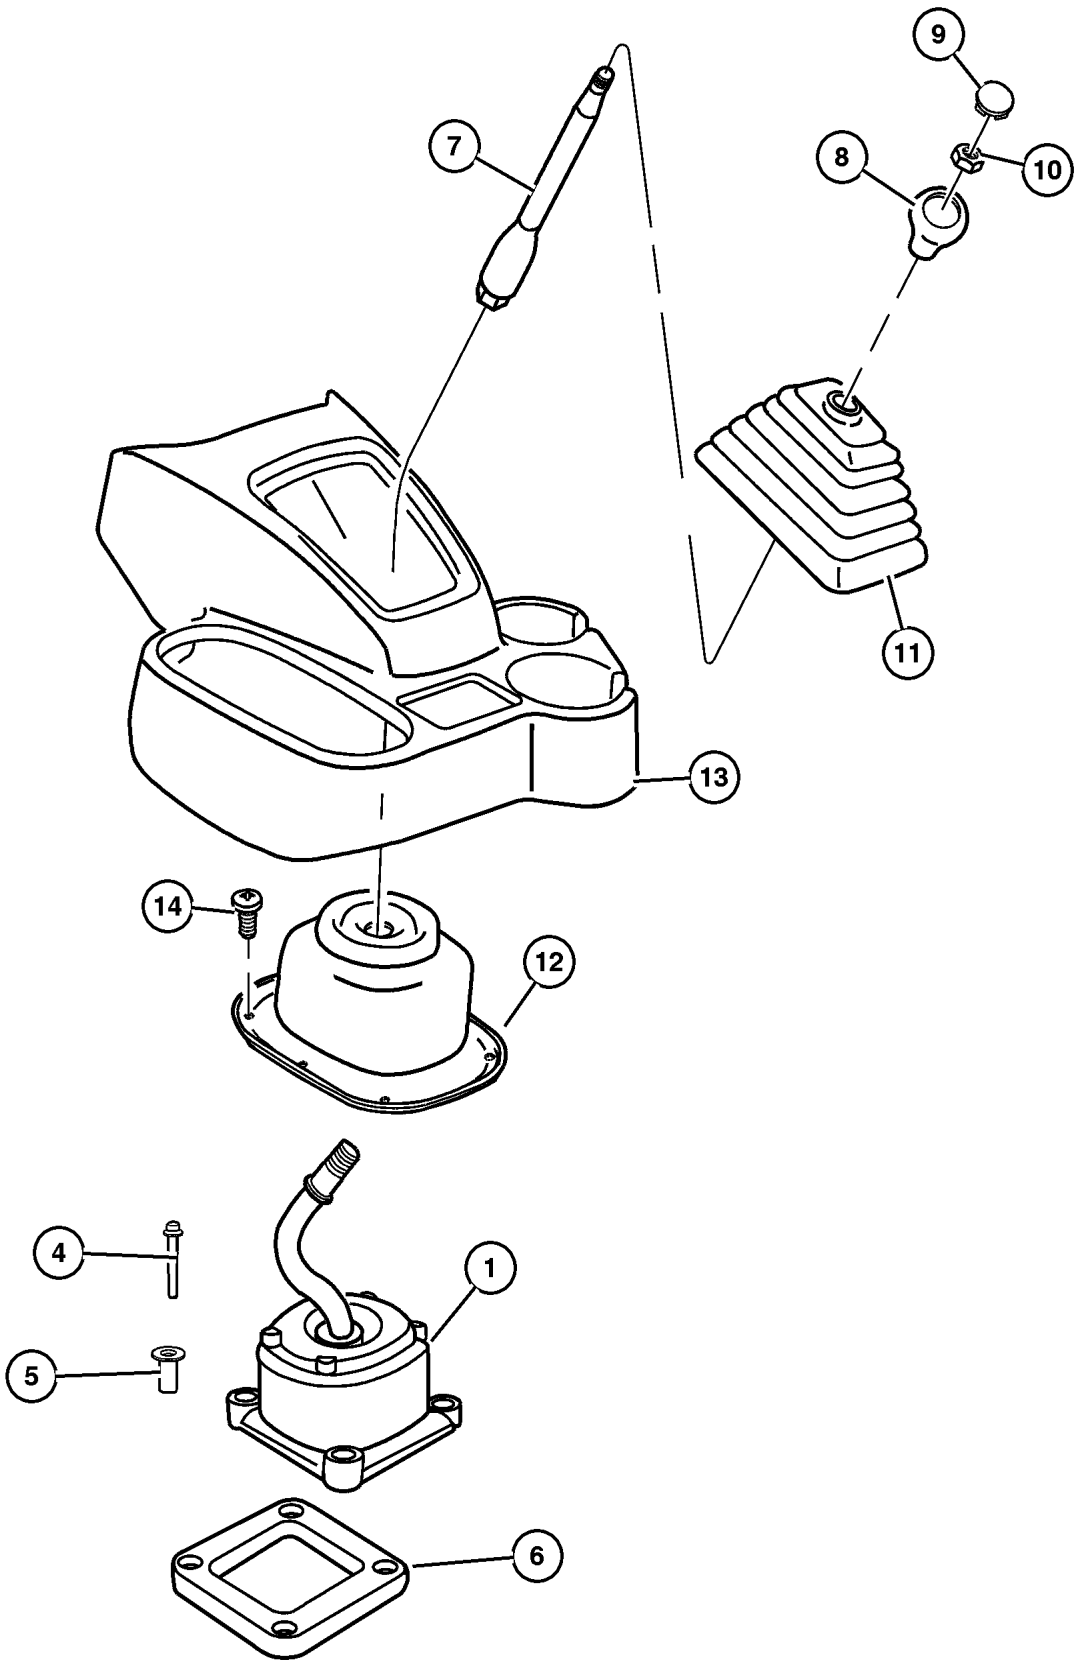Controls, Gearshift - 5600 6 Speed [DEE]
Figure 5600-1210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes									
[DBB] = All Manual Transmissions									
[DEE] = 6 Speed Heavy Duty Manual Transmission									
[ETH] = 5.9L Cummins Turbo Diesel Engine									
[ET0] = All 5.9L Turbo Diesel Engines									
1	5012 139AA	1	1, 2, 3			ETH	DEE		LEVER, Gearshift
		1	6, 7, 8			ETH	DEE		
		1	1, 2, 3			ETC	DEE		
-2	5210 8192	1	6, 7, 8			ETC	DEE		INSERT, Transmission Shift Knob
-3	5012 139AA-	1	1, 2, 3			ETH	DEE		LEVER, Gearshift
		1	6, 7, 8			ETH	DEE		Stub Shaft
4	5003 213AA	4	1, 2, 3			ETH	DEE		Stub Shaft
		4	6, 7, 8			ETH	DEE		BOLT
5	5003 212AA	4	1, 2, 3			ETH	DEE		BUSHING, Gearshift Lever
		4	6, 7, 8			ETH	DEE		
6	5003 214AA	1	1, 2, 3			ETH	DEE		SPACER, Shift Tower
		1	6, 7, 8			ETH	DEE		
7	5210 7612	1					DBB		LEVER, Gearshift
8	5210 4174	1	6, 7, 8						KNOB, Gearshift
9	5210 8192	1				ET0	DEE		INSERT, Transmission Shift Knob
10	6502 556	1	6, 7, 8						NUT, Hex, M10-1.5
11	52107 614AB	1					DBB		BOOT, Gear Shift Lever
12	52107 613AB	1					DBB		BOOT, Gear Shift Lever
13	5EZ5 4LAZ	1					DBB		CONSOLE, Floor
	5EZ5 4RC8	1					DBB		[AGate]
	5EZ5 4VK9	1					DBB		[Dark Mist Gray]
14									[Dark Tan]
									SCREW, (NOT SERVICED) (Not Serviced)


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Group – 231

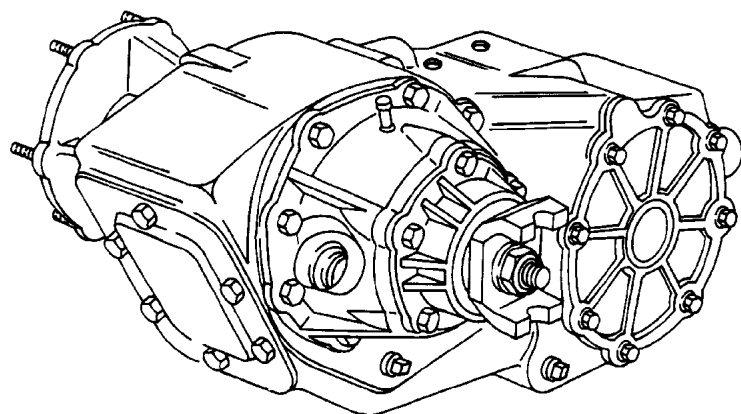Transfer Case Model 231 [DHJ, DHK, DHN]



GROUP 231 - Transfer Case Model 231 [DHJ, DHK, DHN]

Illustration Title

Group-Fig. No.

Transfer Case Assembly

Transfer Case Assembly [DHK] Shift on the Fly Fig. 231-110

Case and Related Parts

Case and Related Parts [DHK] Shift on the Fly Fig. 231-210

Gear Train

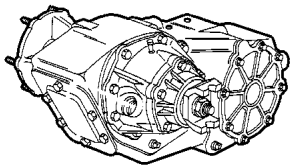
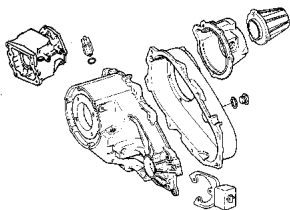
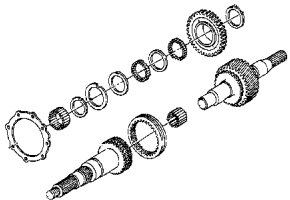
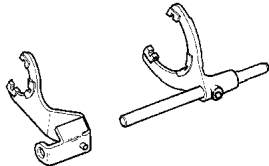

Gear Train [DHK] Shift on the Fly Fig. 231-410

Fork and Rails


Forks, Rails Miscellaneous Parts [DHK] Shift on the Fly Fig. 231-910

Gearshift Controls

Controls, Transfer Case [DHK] Shift on the Fly Fig. 231-1210

231-100 Transfer Case Assembly 	231-200 Case and Related Parts 	231-400 Gear Train 	231-900 Fork and Rails 
231-1200 Gearshift Controls 			

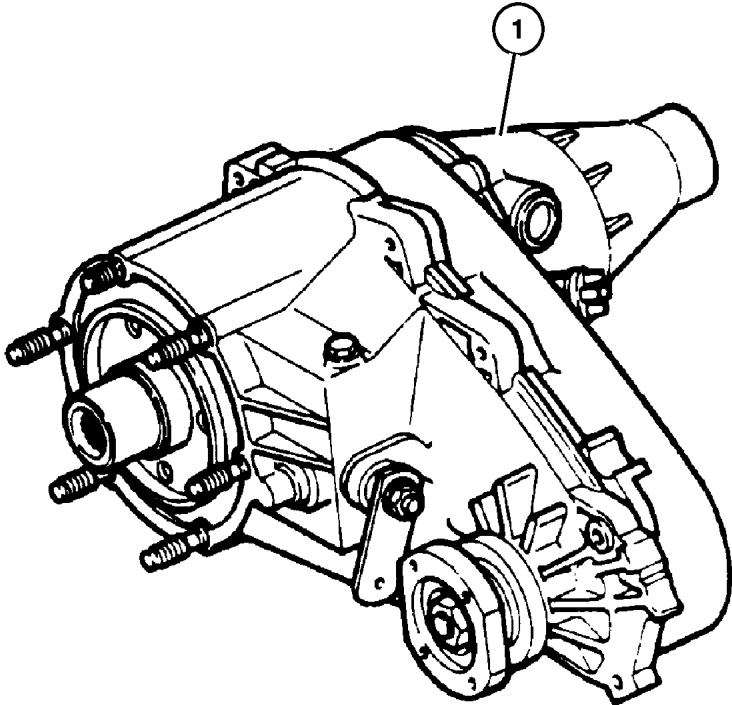Transfer Case Assembly [DHK] Shift on the Fly
Figure 231-110



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: Sales Codes
[DDC] = 5 Speed Heavy Duty Manual Transmission
[DG0] = All Automatic Transmissions
[EL0] = All 5.2L 8 Cylinder Gas Engines
[EM0] = All 5.9L 8 Cylinder Gas Engines


1									TRANSFER CASE, NP231 HD
	52105 021AB	1	6, 7, 8			EL0, EM0	DDC		
	52105 022AB	1	6, 7, 8			EL0, EM0	DG0		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

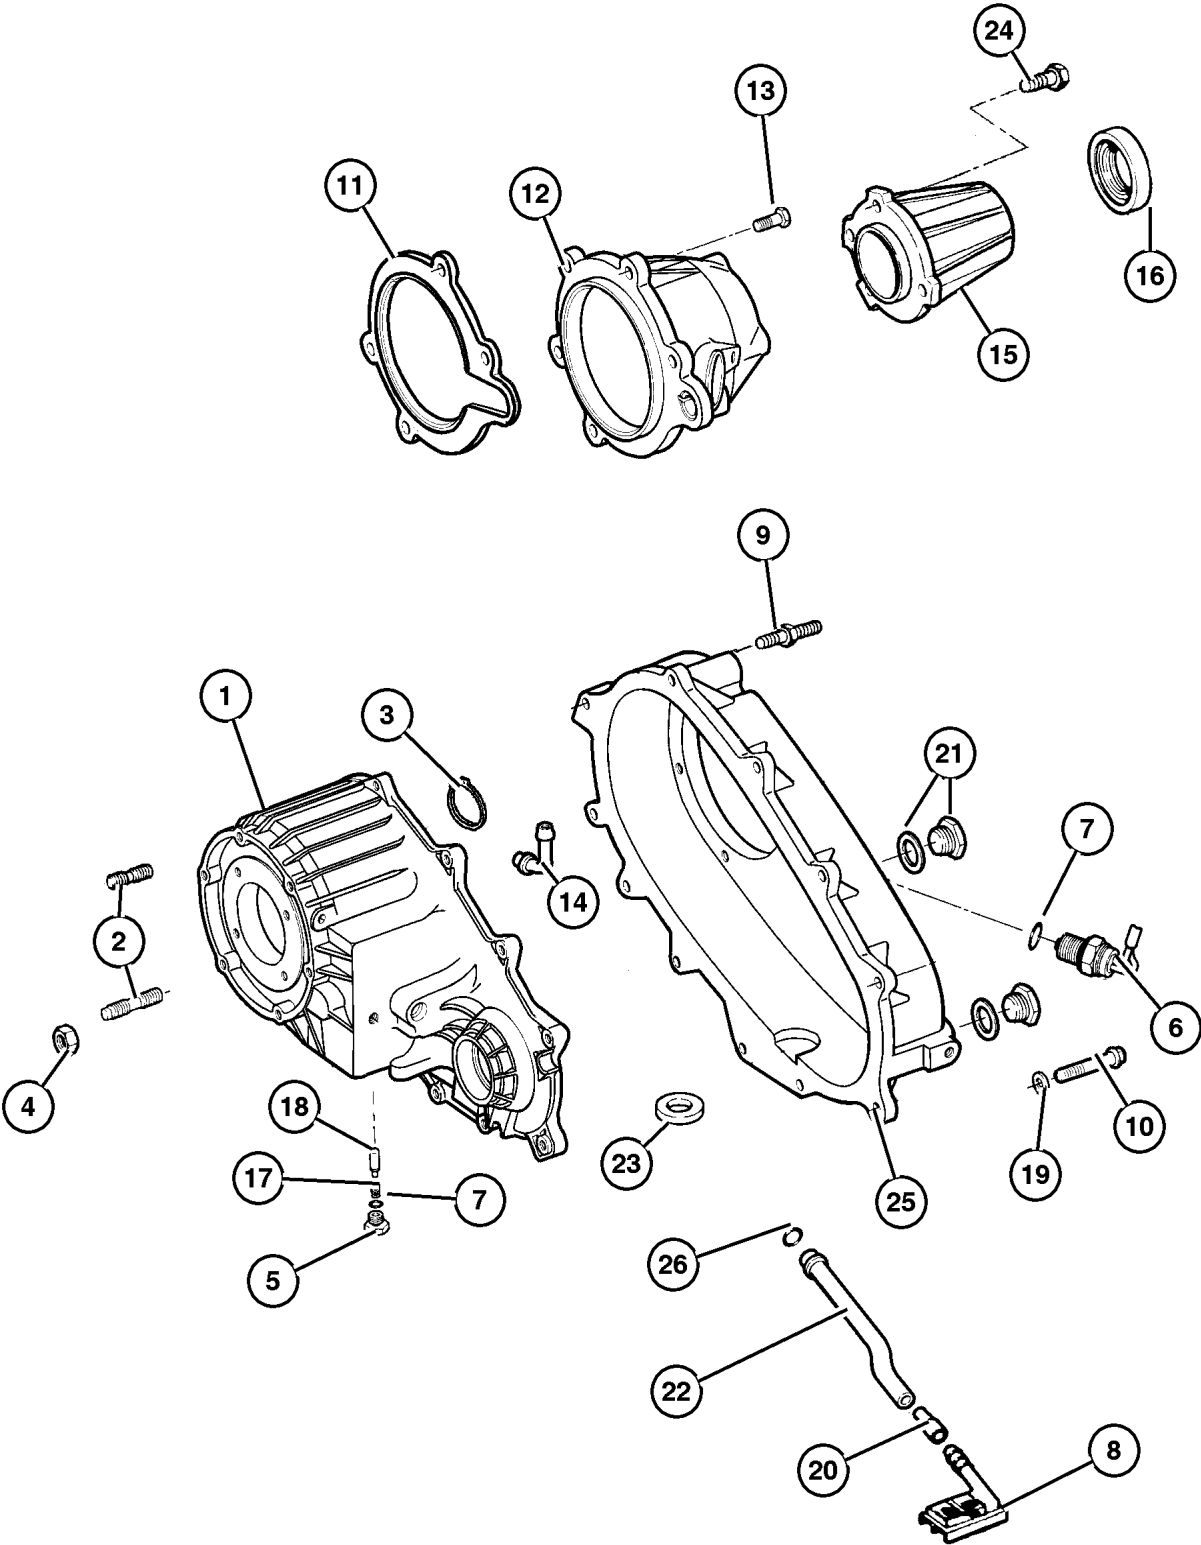Case and Related Parts [DHK] Shift on the Fly
Figure 231-210




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes									
[DDC] = 5 Speed Heavy Duty Manual Transmission									
[DG0] = All Automatic Transmissions									
[EL0] = All 5.2L 8 Cylinder Gas Engines									
[EM0] = All 5.9L 8 Cylinder Gas Engines									
1	5015 430AA	1	6, 7, 8			EL0, EM0	DDC		CASE, Transfer Front
		1	6, 7, 8			EL0, EM0	DG0		
2	4505 365	6	6, 7, 8			EL0, EM0	DDC		STUD
		6	6, 7, 8			EL0, EM0	DG0		
3	4219 065	1	6, 7, 8			EL0, EM0	DG0		SNAP RING, Annulus Gear
		1	6, 7, 8			EL0, EM0	DDC		
4	6033 172	6							NUT AND WASHER, Hex, .375-24
5	4886 473AA	1	6, 7, 8			EL0, EM0	DG0		SCREW
		1	6, 7, 8			EL0, EM0	DDC		
6	5300 1101	1	6, 7, 8			EL0, EM0	DG0		SWITCH, Transfer Case
		1	6, 7, 8			EL0, EM0	DDC		
7	4338 956	2	6, 7, 8			EL0, EM0	DDC		SEAL, Vacuum Switch
		2	6, 7, 8			EL0, EM0	DG0		
8	4338 943	1	6, 7, 8			EL0, EM0	DG0		FILTER, Transfer Case Oil

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

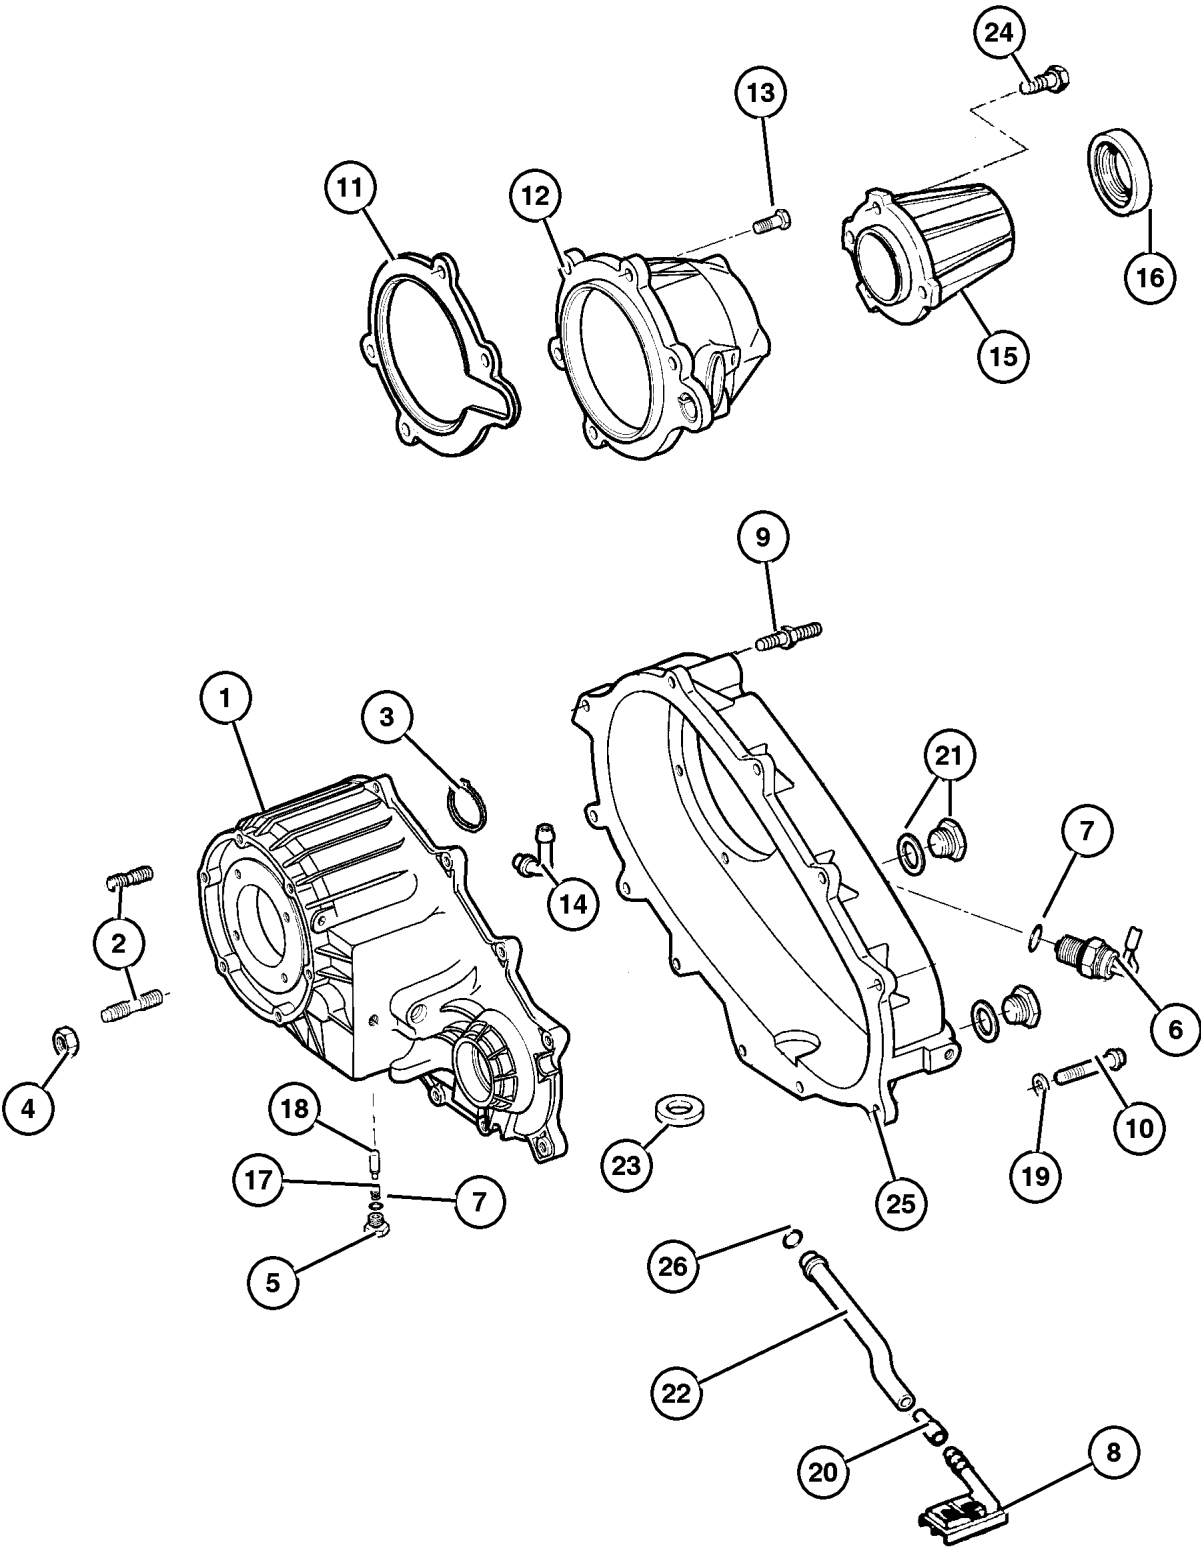Case and Related Parts [DHK] Shift on the Fly
Figure 231-210




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
9	4210 617	1	6, 7, 8			EL0, EMO	DDC		BOLT, Transfer Case
		4	6, 7, 8			EL0, EMO	DDC		
10	4210 614	4	6, 7, 8			EL0, EMO	DG0		BOLT, Hex Flange Head
		2	6, 7, 8			EL0, EMO	DG0		
11	4897 958AA	2	6, 7, 8			EM0	DDC		GASKET, Transfer Case
		1	6, 7, 8			EL0, EMO	DG0		
12	4897 956AA	1	6, 7, 8			EL0, EMO	DDC		RETAINER, Transfer Case Rear
		1	6, 7, 8			EL0, EMO	DDC		
13	6500 318	4	6, 7, 8			EM0			BOLT
		4	6, 7, 8			EL0, EMO	DG0		
14	4796 910	1	6, 7, 8			EL0, EMO	DDC		VENT, Transfer Case
		1	6, 7, 8			EL0, EMO	DG0		
15	4746 150	1	6, 7, 8			EM0	DDC		EXTENSION, Transfer Case
		1	6, 7, 8			EL0, EMO	DG0		
16	4746 258	1	6, 7, 8			EL0, EMO	DDC		SEAL, Output Shaft
		1	6, 7, 8			EL0, EMO	DG0		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

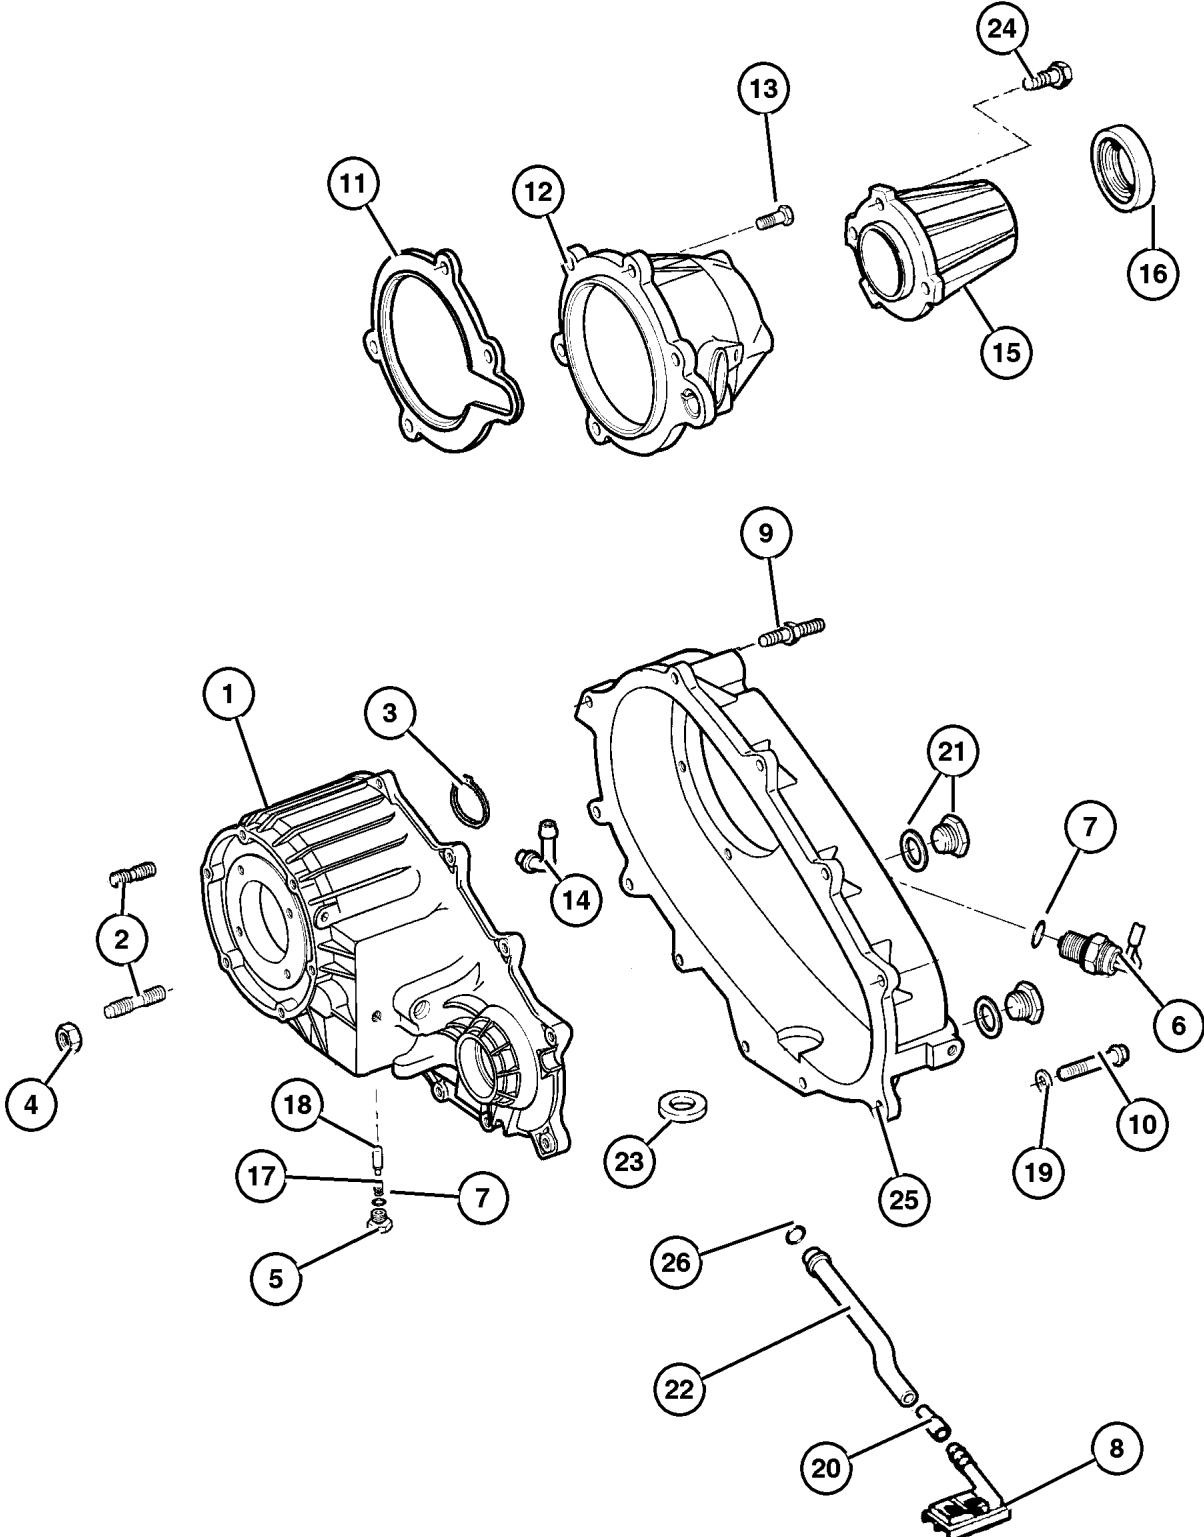Case and Related Parts [DHK] Shift on the Fly
Figure 231-210




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
17	4798 257	1	6, 7, 8			EL0, EM0	DDC		SPRING, Poppet
						EL0, EM0	DG0		
18	5300 8217	1	6, 7, 8			EL0, EM0	DDC		PLUNGER
						EL0, EM0	DG0		
19	4210 983	2	6, 7, 8			EL0, EM0	DDC		WASHER, Flat
						EL0, EM0	DG0		
20	4338 944	1	6, 7, 8			EL0, EM0	DDC		CONNECTOR, Oil Tube Pickup
						EL0, EM0	DG0		
21	4856 641	2	6, 7, 8			EL0, EM0	DDC		PLUG, Oil Fill
						EL0, EM0	DG0		
22	4338 941	1	6, 7, 8			EL0, EM0	DDC		TUBE, Oil Pickup
						EL0, EM0	DG0		
23	3681 601	1	6, 7, 8			EL0, EM0	DDC		MAGNET, Transmission
						EL0, EM0	DG0		
24	4210 617	4	6, 7, 8			EL0, EM0	DDC		BOLT, Transfer Case
						EL0, EM0	DG0		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

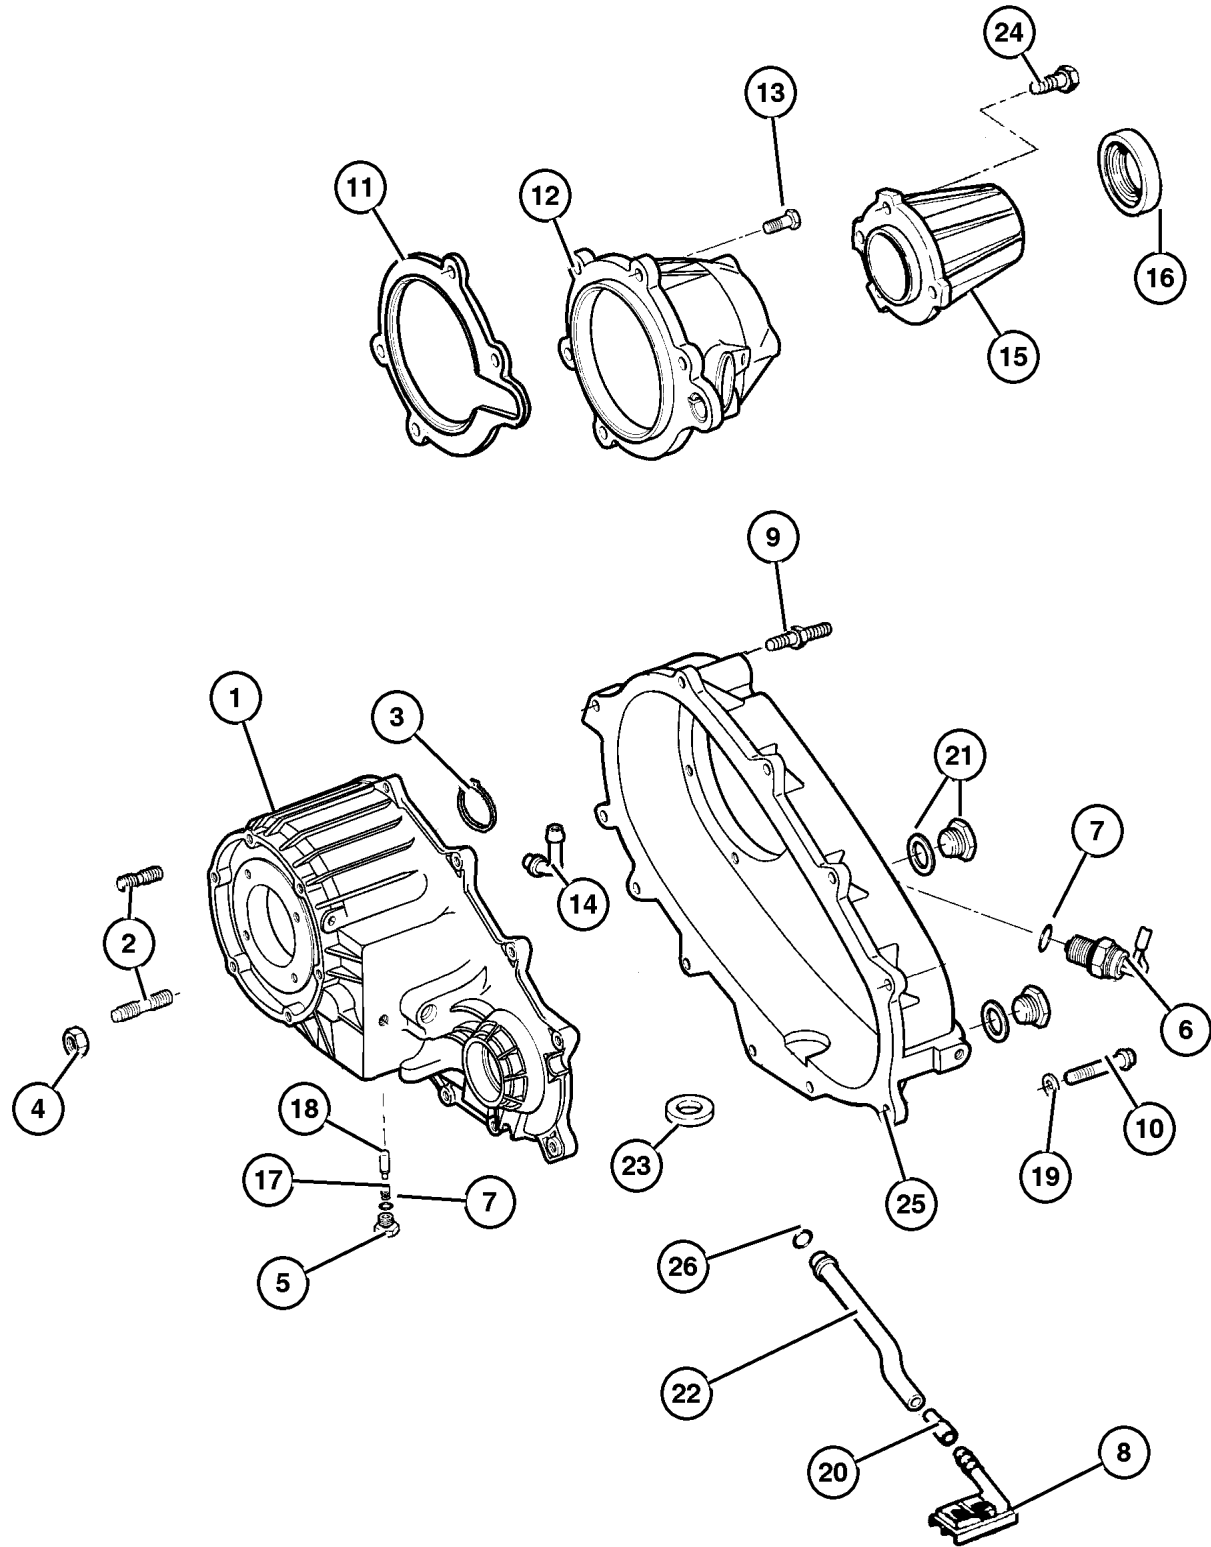Figure 231-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
25	4741 242	4	6, 7, 8			EL0, EM0	DG0		CASE, Transfer Rear
		1	6, 7, 8			EL0, EM0	DG0		
26	4338 942	1	6, 7, 8			EL0, EM0	DDC		SEAL, Oil
		1	6, 7, 8			EL0, EM0	DG0		
		1	6, 7, 8			EL0, EM0	DDC		

DODGE RAM QUAD CAB/CLUB CAB (BE)

L = Ram Truck (All)

LINE

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Gear Train [DHK] Shift on the Fly
Figure 231-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: Sales Codes

[DDC] = 5 Speed Heavy Duty Manual Transmission

[DG0] = All Automatic Transmissions

[EL0] = All 5.2L 8 Cylinder Gas Engines

[EM0] = All 5.9L 8 Cylinder Gas Engines


1	4797 022	1	6, 7, 8			EL0, EM0	DG0		MAINSHAFT, Transfer Case
2	4167 929	1	6, 7, 8			EL0, EM0	DG0		SEAL, Input Gear
3	4338 973	1	6, 7, 8			EL0, EM0	DDC		RETAINER
4	4210 603	1	6, 7, 8			EL0, EM0	DG0		SEAL, Main Shaft
5	4338 936	1	6, 7, 8			EL0, EM0	DG0		PUMP, Transfer Case Oil
6	4897 981AA	1	6, 7, 8			EL0, EM0	DG0		BEARING, Output Shaft
7	6025 755	1	6, 7, 8			EL0, EM0	DG0		SNAP RING, 1.28 ID
8		1	6, 7, 8			EL0, EM0	DDC		BEARING, Input Gear

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

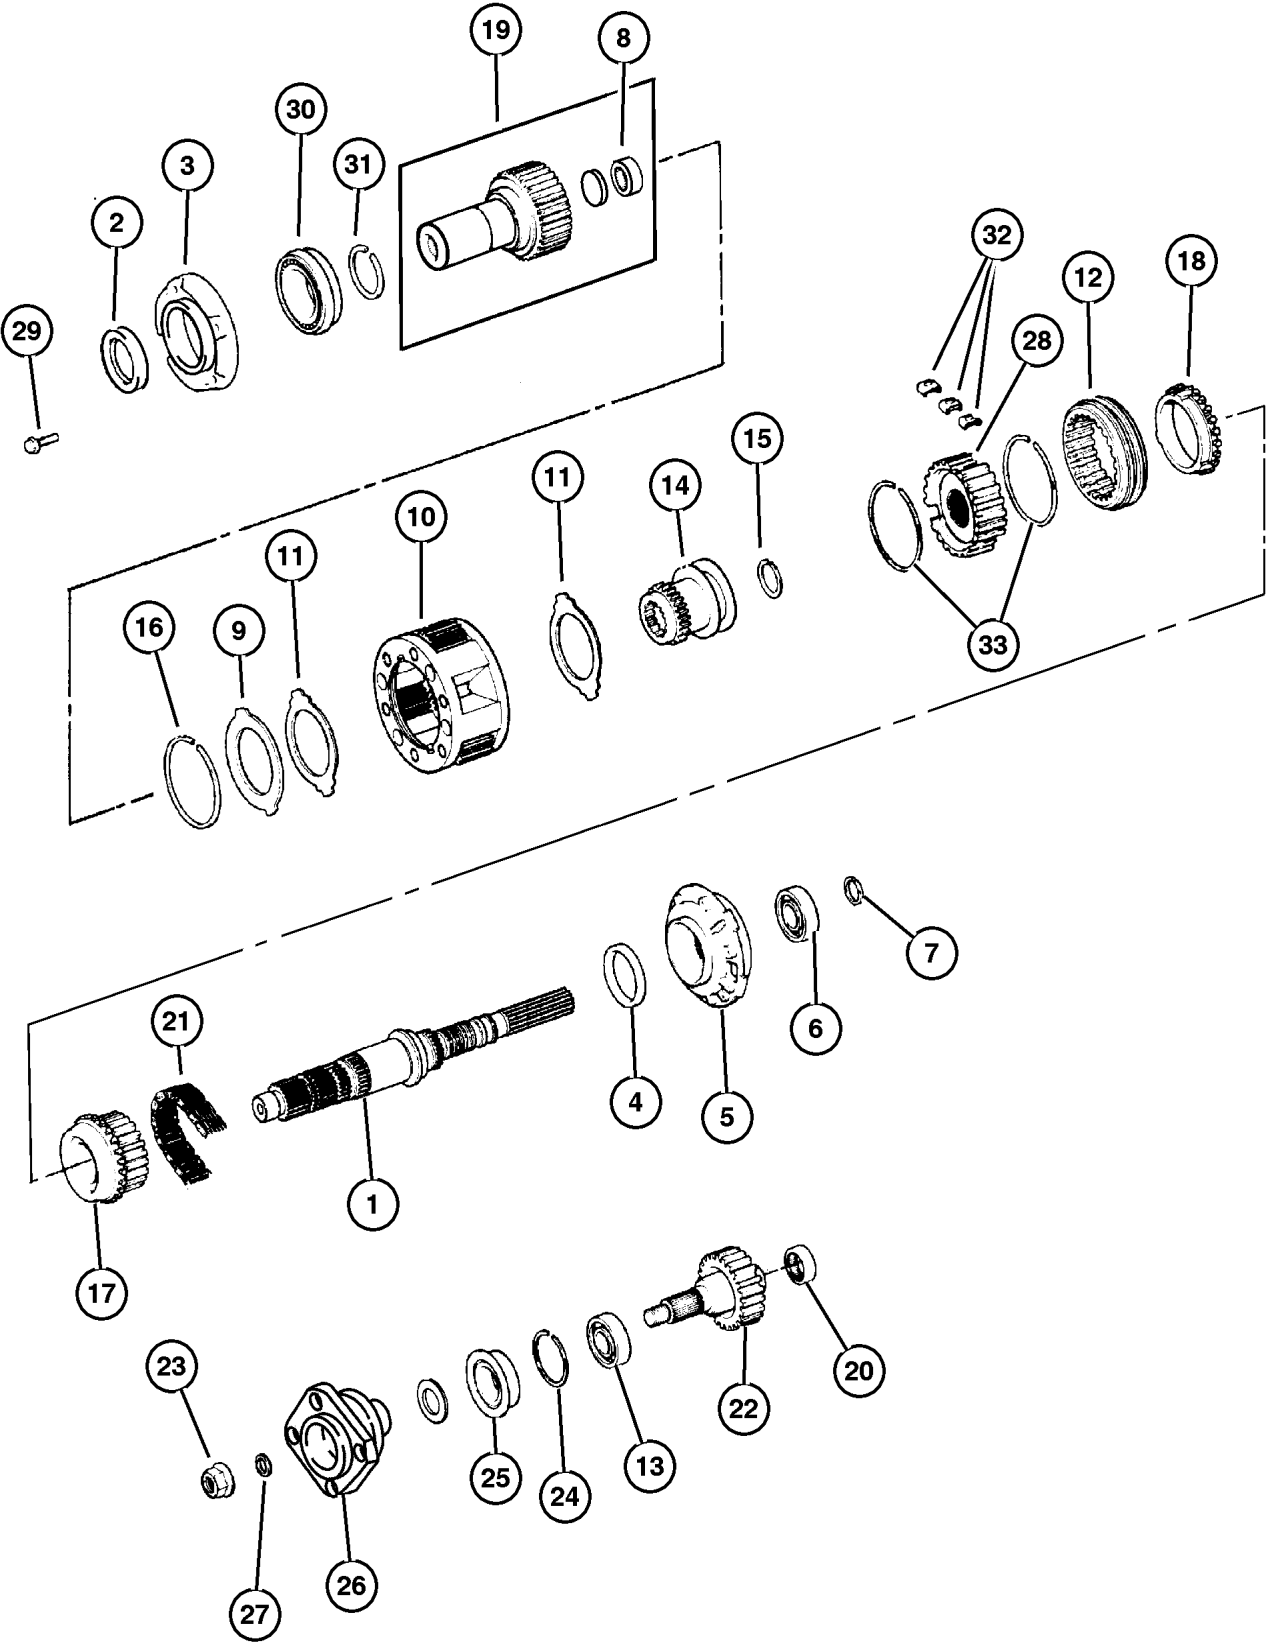September 16, 2005



Gear Train [DHK] Shift on the Fly
Figure 231-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4338 891	1	6, 7, 8			EL0, EM0	DG0		RING
		1	6, 7, 8			EL0, EM0	DDC		
9	4338 909	1	6, 7, 8			EL0, EM0	DG0		PLANETARY, Transfer Case
		1	6, 7, 8			EL0, EM0	DDC		
10	4796 903	1	6, 7, 8			EL0, EM0	DG0		THRUST WASHER, Planetary Carrier
		1	6, 7, 8			EL0, EM0	DDC		
11	4338 908	2	6, 7, 8			EL0, EM0	DG0		SLEEVE, Synchronizer
		2	6, 7, 8			EL0, EM0	DDC		
12	4746 144	1	6, 7, 8			EL0, EM0	DG0		BEARING
		1	6, 7, 8			EL0, EM0	DDC		
13	4338 892	1	6, 7, 8			EL0, EM0	DG0		SLEEVE, Range Fork
		1	6, 7, 8			EL0, EM0	DDC		
14	4797 013	1	6, 7, 8			EL0, EM0	DDC		SNAP RING
	4897 955AA	1	6, 7, 8			EL0, EM0	DG0		
15	4338 933	1	6, 7, 8			EL0, EM0	DG0		SNAP RING
		1	6, 7, 8			EL0, EM0	DDC		
16									SNAP RING

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Gear Train [DHK] Shift on the Fly
Figure 231-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4338 910	1	6, 7, 8			EL0, EM0	DG0		
		1	6, 7, 8			EL0, EM0	DDC		
17									SPROCKET, Transfer Case
	4797 023	1	6, 7, 8			EL0, EM0	DG0		
		1	6, 7, 8			EL0, EM0	DDC		
18									RING, Blocker
	4746 139	1	6, 7, 8			EL0, EM0	DG0		
		1	6, 7, 8			EL0, EM0	DDC		
19									GEAR, Input
	5015 432AA	1	6, 7, 8			EL0, EM0	DG0		
	5015 441AA	1	6, 7, 8			EL0, EM0	DDC		
20									BEARING, Output Shaft
	4269 189	1	6, 7, 8			EL0, EM0	DG0		
		1	6, 7, 8			EL0, EM0	DDC		
21									CHAIN, Transfer Case
	4636 961	1	6, 7, 8			EL0, EM0	DG0		
		1	6, 7, 8			EL0, EM0	DDC		
22									OUTPUT SHAFT, Transfer Case
	4636 965	1	6, 7, 8			EL0, EM0	DG0		
		1	6, 7, 8			EL0, EM0	DDC		
23									NUT, Hex Flange
	4446 488	1	6, 7, 8			EL0, EM0	DG0		
		1	6, 7, 8			EL0, EM0	DDC		
24									SNAP RING, Bearing

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Gear Train [DHK] Shift on the Fly
Figure 231-410


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4338 894	1	6, 7, 8			EL0, EM0	DG0		
		1	6, 7, 8			EL0, EM0	DDC		
25									SEAL
	4798 112	1	6, 7, 8			EL0, EM0	DDC		
		1	6, 7, 8			EL0, EM0	DG0		
26									YOKE, Transfer Case
	4897 960AA	1	6, 7, 8			EL0, EM0	DG0		
		1	6, 7, 8			EL0, EM0	DDC		
27									WASHER, Flat
	4446 487	1	6, 7, 8			EL0, EM0	DG0		
		1	6, 7, 8			EL0, EM0	DDC		
28									HUB, Synchronizer
	4746 143	1	6, 7, 8			EL0, EM0	DG0		
		1	6, 7, 8			EL0, EM0	DDC		
29									BOLT
	6500 318	5	6, 7, 8			EL0, EM0	DDC		
		5	6, 7, 8			EL0, EM0	DG0		
30									BEARING, Input Gear
	4338 891	1	6, 7, 8			EL0, EM0	DG0		
		1	6, 7, 8			EL0, EM0	DDC		
31									SNAP RING
	3821 558	1	6, 7, 8			EL0, EM0	DG0		
		1	6, 7, 8			EL0, EM0	DDC		
32									KEY, Synchronizer

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

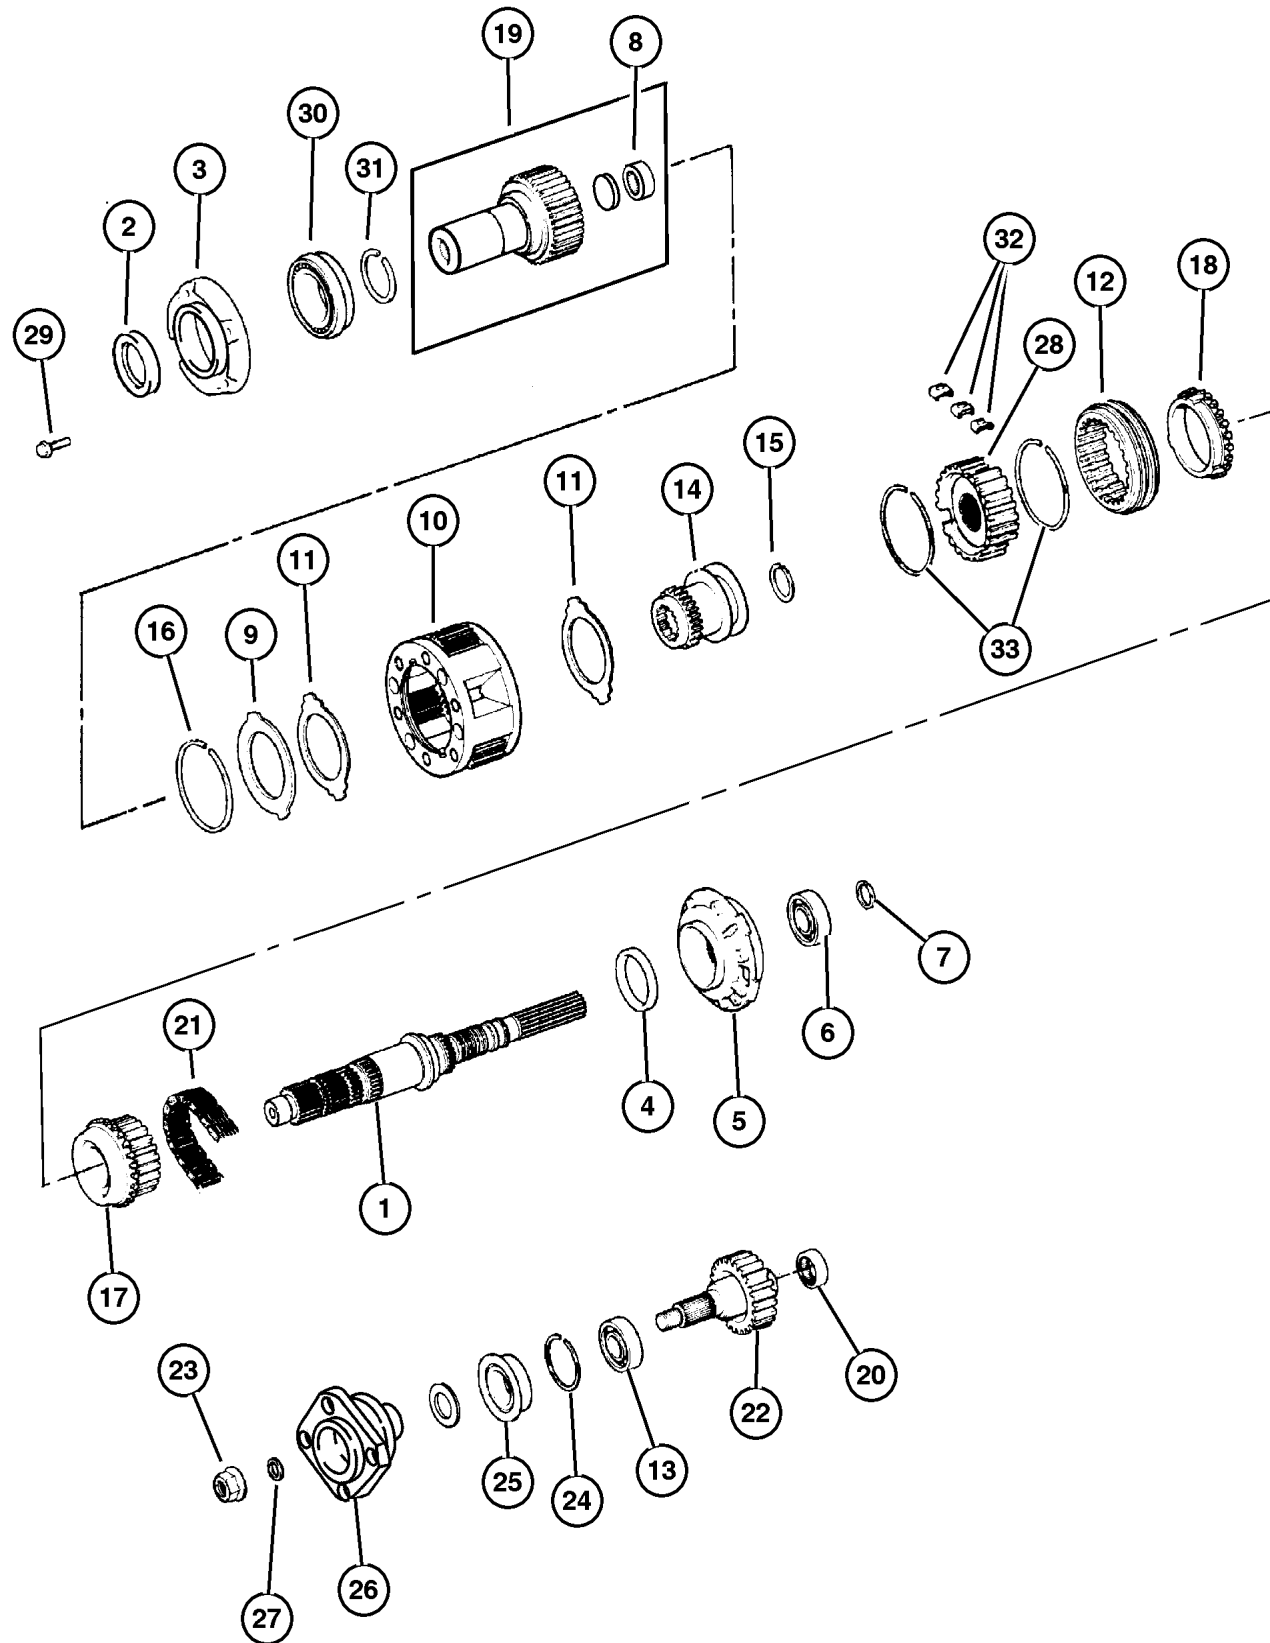Gear Train [DHK] Shift on the Fly Figure 231-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4746 137	3	6, 7, 8			EL0,	DG0		
		3	6, 7, 8			EM0 EL0, EM0	DDC		
33									SPRING, Synchronizer
	4746 138	2	6, 7, 8			EL0, EM0	DG0		
		2	6, 7, 8			EL0, EM0	DDC		

DODGE RAM QUAD CAB/CLUB CAB (BE)

**DODGE RAM TRUCK
SERIES**
L = Ram Truck (All)

LINE

$$\begin{aligned} 1, 6 &= 1500 \\ 2, 7 &= 2500 \\ 3, 8 &= 3500 \end{aligned}$$

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

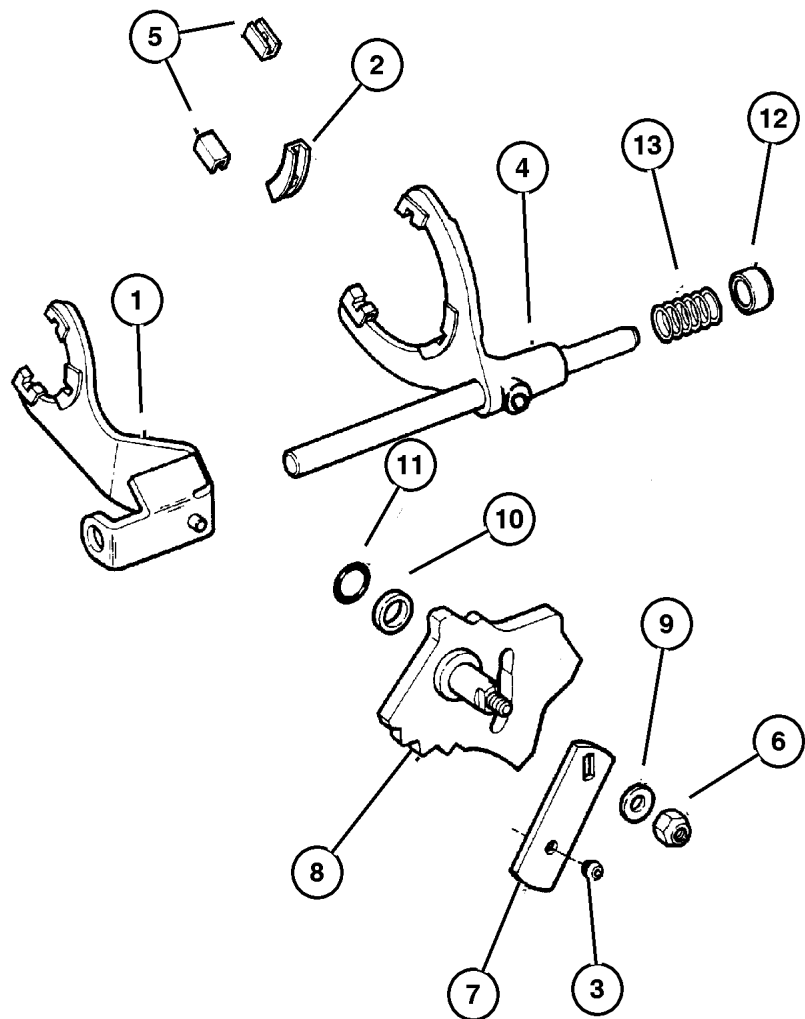
TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Forks, Rails Miscellaneous Parts [DHK] Shift on the Fly
Figure 231-910



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: Sales Codes

[DDC] = 5 Speed Heavy Duty Manual Transmission

[DG0] = All Automatic Transmissions

[EL0] = All 5.2L 8 Cylinder Gas Engines

[EM0] = All 5.9L 8 Cylinder Gas Engines


1	4798 136	1	6, 7, 8			EL0, EM0	DG0		FORK, Range
		1	6, 7, 8			EL0, EM0	DDC		
2	4746 140	1	6, 7, 8			EL0, EM0	DDC		PAD, Shift Fork
		1	6, 7, 8			EL0, EM0	DG0		
3	3467 791	1	6, 7, 8			EL0, EM0	DG0		GROMMET, Shift Lever
		1	6, 7, 8			EL0, EM0	DDC		
4	4746 136	1	6, 7, 8			EL0, EM0	DG0		FORK, Mode
		1	6, 7, 8			EL0, EM0	DDC		
5	4167 969	2	6, 7, 8			EL0, EM0	DDC		PAD, Shift Fork
		2	6, 7, 8			EL0, EM0	DG0		
6	0152 345	1	6, 7, 8			EL0, EM0	DDC		NUT, Hex Flange Lock
		1	6, 7, 8			EL0, EM0	DG0		
7	4897 959AA	1	6, 7, 8			EL0, EM0	DG0		LEVER, Transfer Case
		1	6, 7, 8			EL0, EM0	DDC		
8									SECTOR, Transfer Case

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

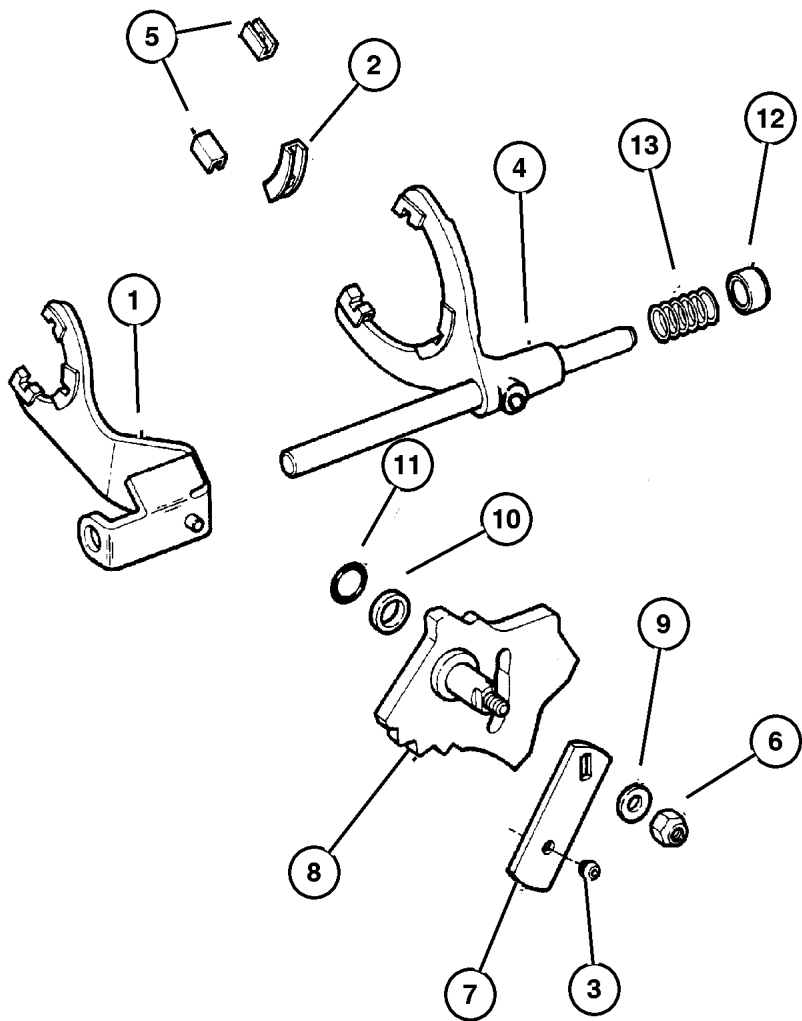Forks, Rails Miscellaneous Parts [DHK] Shift on the Fly
Figure 231-910




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4897 952AA	1	6, 7, 8			EL0, EM0	DG0		
		1	6, 7, 8			EL0, EM0	DDC		
9									WASHER, Flat
	S243 6163	1	6, 7, 8			EL0, EM0	DDC		
		1	6, 7, 8			EL0, EM0	DG0		
10									RETAINER, Rear Clutch
	4167 964	1	6, 7, 8			EL0, EM0	DDC		
		1	6, 7, 8			EL0, EM0	DG0		
11									SEAL, O-Ring
	4167 963	1	6, 7, 8			EL0, EM0	DG0		
		1	6, 7, 8			EL0, EM0	DDC		
12									CUP, Shift Fork Spring
	8350 3515	1	6, 7, 8			EL0, EM0	DG0		
		1	6, 7, 8			EL0, EM0	DDC		
13									SPRING, Mode Fork
	0013 816	1	6, 7, 8			EL0, EM0	DG0		
		1	6, 7, 8			EL0, EM0	DDC		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

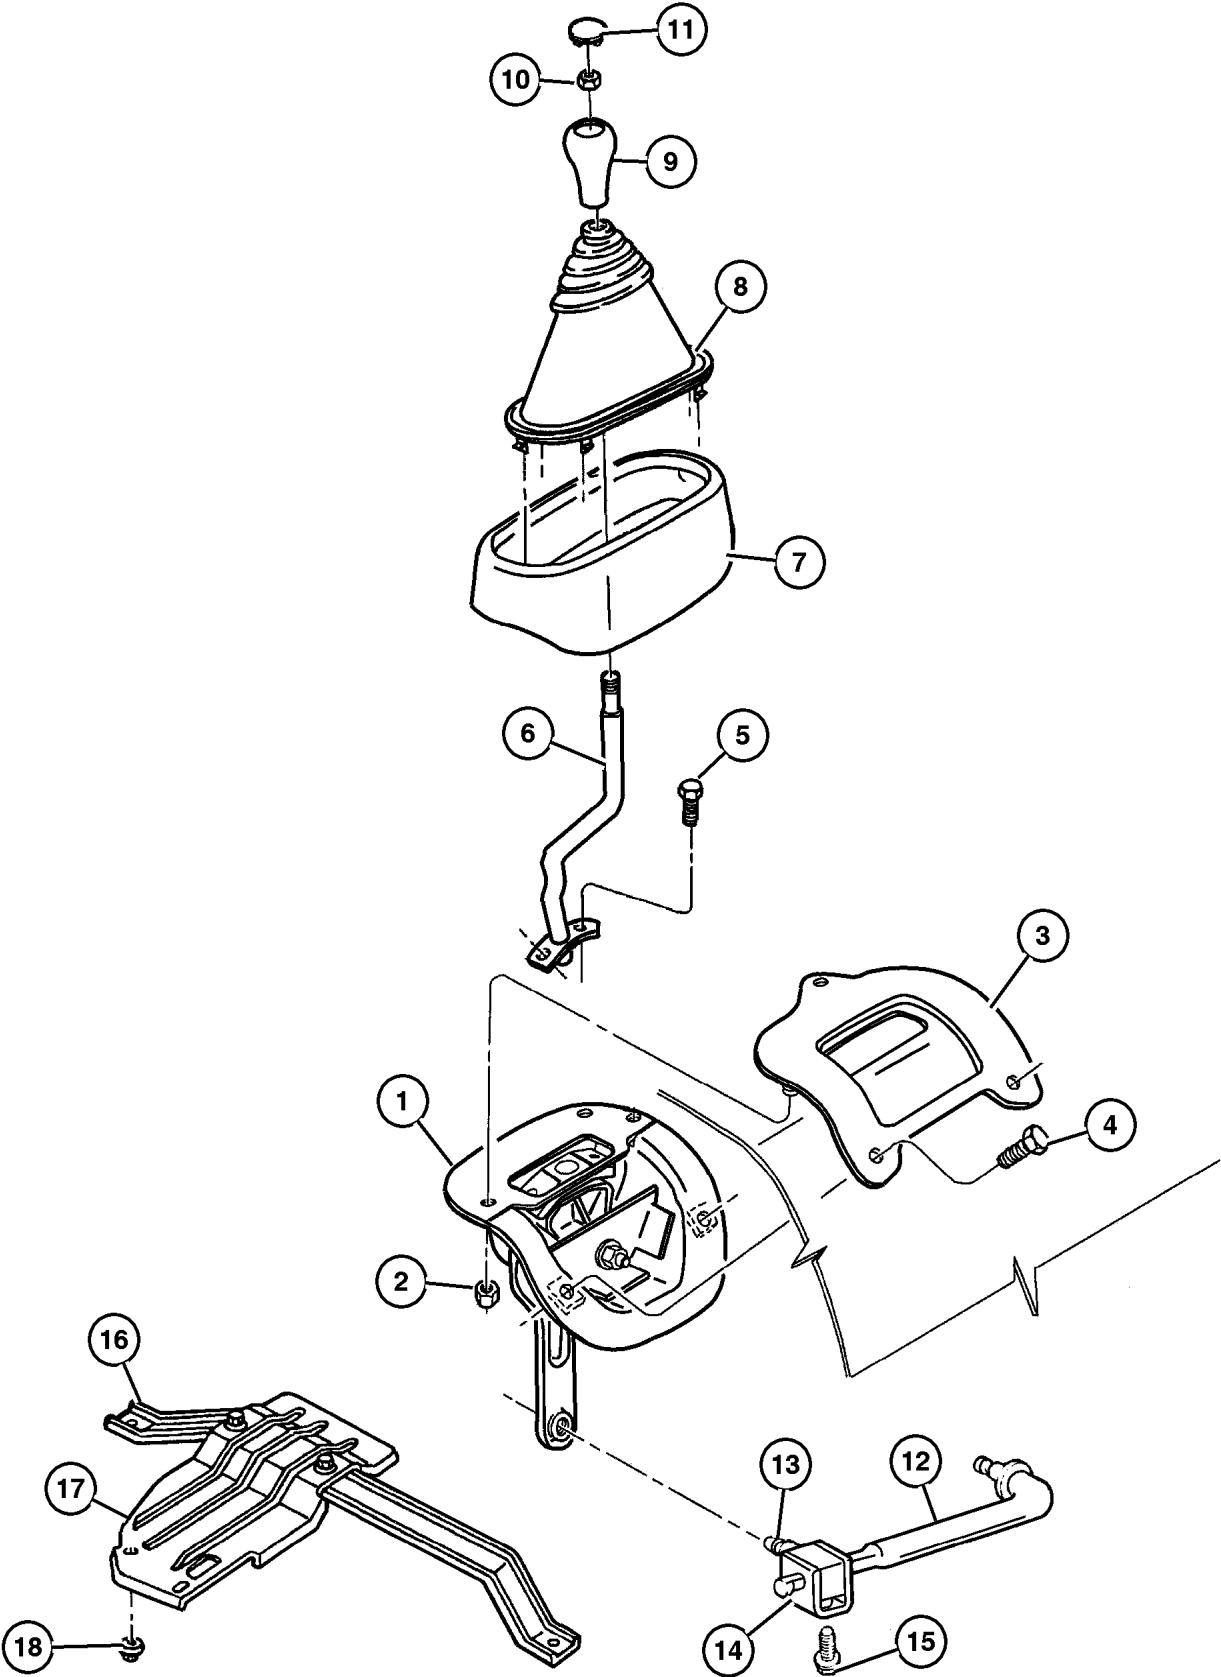Controls, Transfer Case [DHK] Shift on the Fly
Figure 231-1210




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes									
[DDC] = 5 Speed Heavy Duty Manual Transmission									
[DG0] = All Automatic Transmissions									
[EL0] = All 5.2L 8 Cylinder Gas Engines									
[EM0] = All 5.9L 8 Cylinder Gas Engines									
1	52105 214AE	1	6, 7, 8						SHIFTER, Transfer Case
2	6101 467	1	6, 7, 8						NUT, Hex Flange, M8x1.25
3	52105 216AB	1	6, 7, 8						RING
4	6502 064	2	6, 7, 8						SCREW, Tapping, M6x1x20
5	6101 727	2	6, 7, 8						BOLT, Hex Head
6	4897 959AA	1	6, 7, 8			EL0, EM0	DG0		LEVER, Transfer Case
		1	6, 7, 8			EL0, EM0	DDC		
7	5FB39 LAZAB	1	6, 7, 8				DG0		BEZEL, Transfer Case
	5FB39 RC8AB	1	6, 7, 8				DG0		AGATE
	5FB39 VK9AB	1	6, 7, 8				DG0		DARK CIRRUS
8	52105 059AB	1	6, 7, 8						DARK SUEDE
9	5210 4174	1	6, 7, 8						BOOT, Gearshift
10	6502 556	1	6, 7, 8						NOB, Gearshift
11	5210 5001	1							NUT, Hex, M10-1.5
12									INSERT, Gearshift Knob
	5210 5006	1					DDC, DG0 DDP, DDX		ROD, Gear Shift Control, Transfer Case
13	3467 790	1					DDC, DG0 DDP, DDX		SWIVEL, Gearshift Control Rod
14	4377 309	1					DDC, DG0 DDP, DDX		CLAMP, Shift Rod
15	0181 086	1					DDC, DG0 DDP, DDX		BOLT, Hex Head, .312-18x.75

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

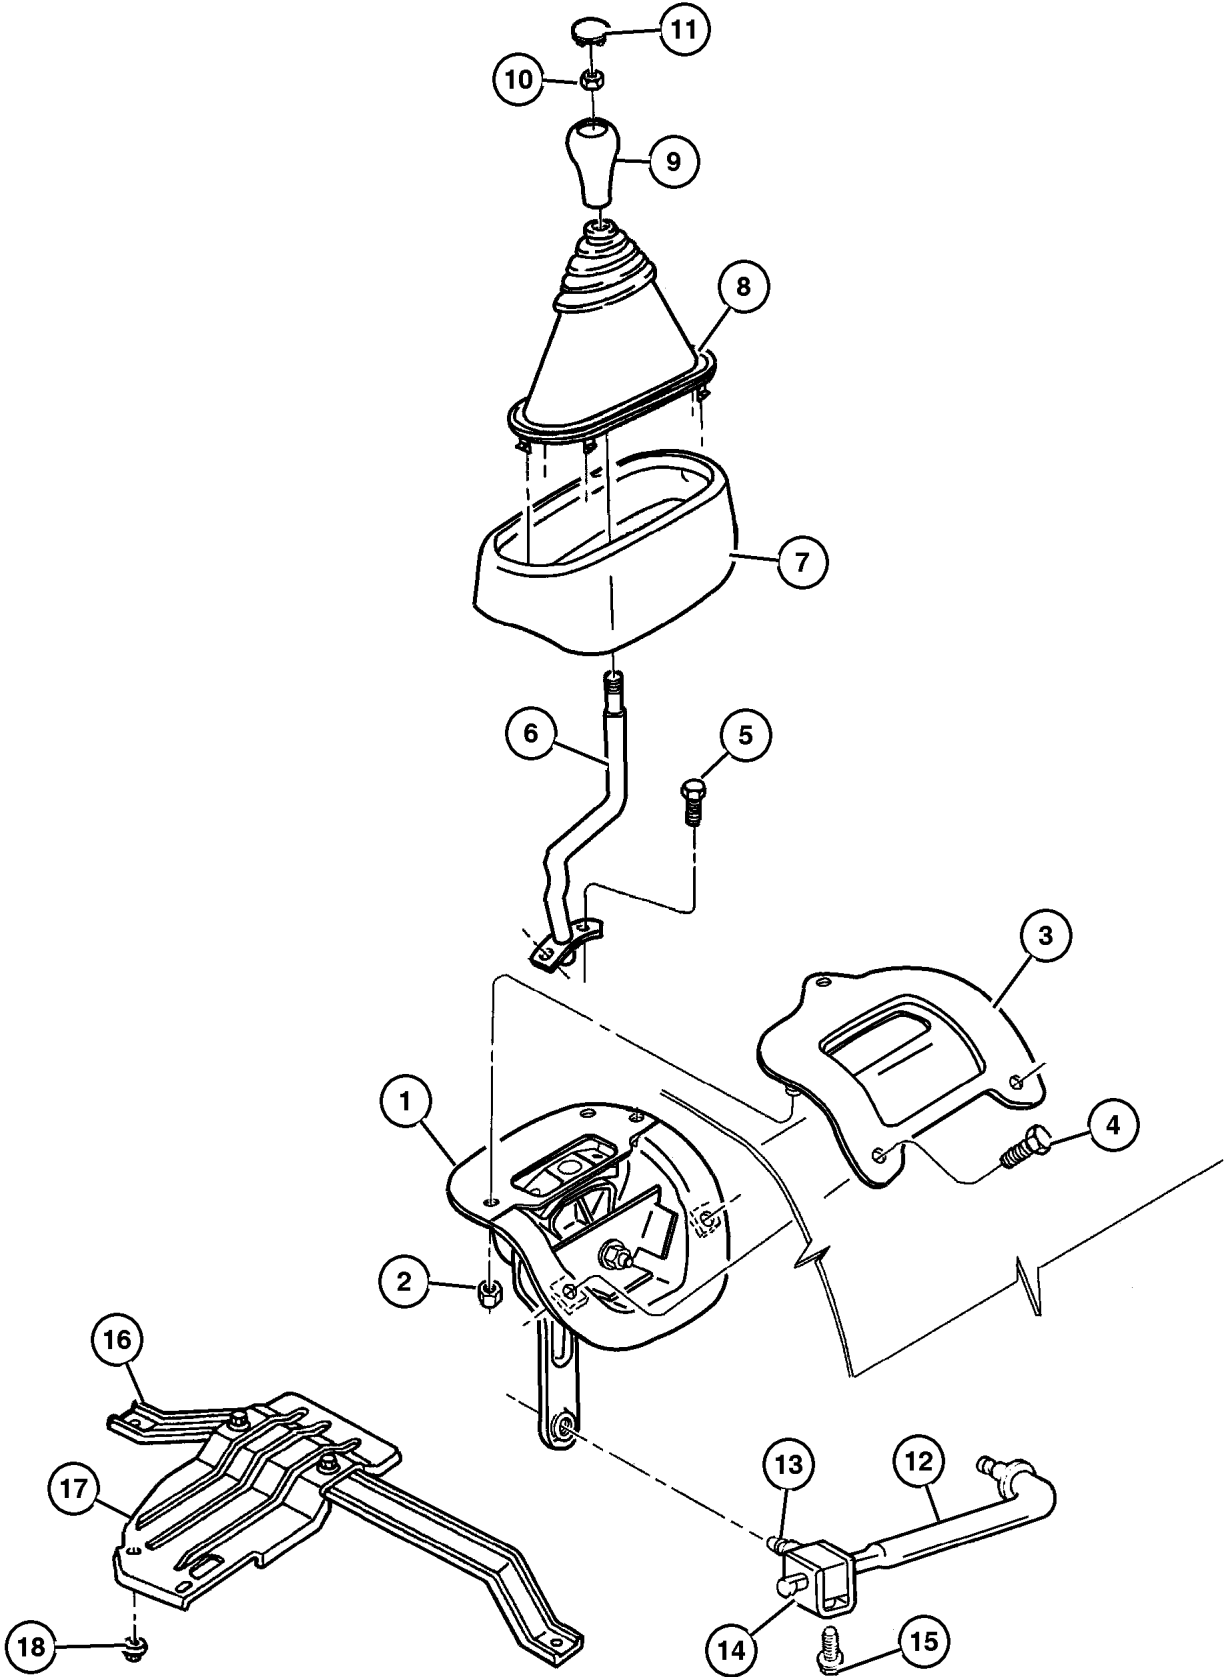Controls, Transfer Case [DHK] Shift on the Fly
Figure 231-1210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
16	52020 357AA	1	6, 7, 8						CROSSMEMBER, Skid Plate
17	52058 674AC	1	6, 7, 8						SKID PLATE, Front
18	6101 340	2	6, 7, 8						U-NUT, M10-1.50

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Group – 241

Transfer Case Model 241 [DHE, DHG, DHH]

GROUP 241 - Transfer Case Model 241 [DHE, DHG, DHH]

Illustration Title

Group-Fig. No.

Transfer Case Assembly

Transfer Case [DHH][DHG] Shift on the Fly

Fig. 241-110

Case and Related Parts

Case and Related Parts [DHH][DHG] Shift on the Fly

Fig. 241-210

Gear Train

Gear Train [DHH][DHG] Shift on the Fly

Fig. 241-410

Fork and Rails


Forks [DHH][DHG] Shift on the Fly

Fig. 241-910

Gearshift Controls


Controls [DHH][DHG] Shift on the Fly

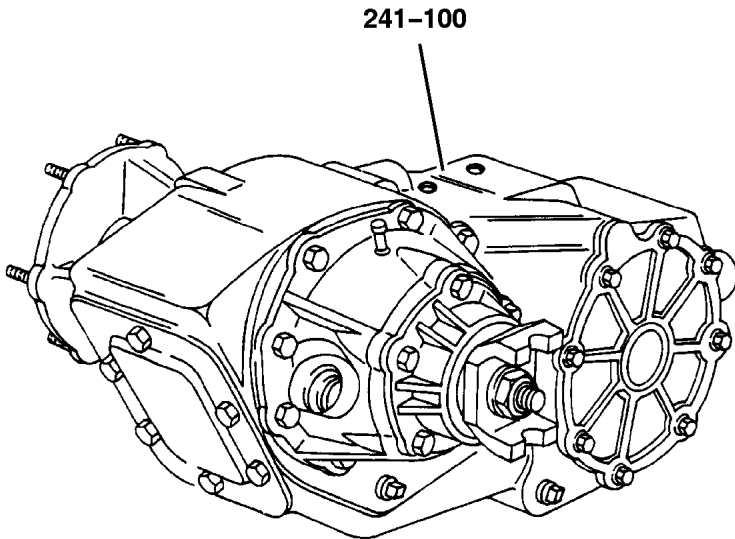Fig. 241-1210



<div><div>241-100</div><div>Transfer Case Assembly</div><div></div></div>	<div><div>241-200</div><div>Case and Related Parts</div><div></div></div>	<div><div>241-400</div><div>Gear Train</div><div></div></div>	<div><div>241-900</div><div>Fork and Rails</div><div></div></div>
<div><div>241-1200</div><div>Gearshift Controls</div><div></div></div>			

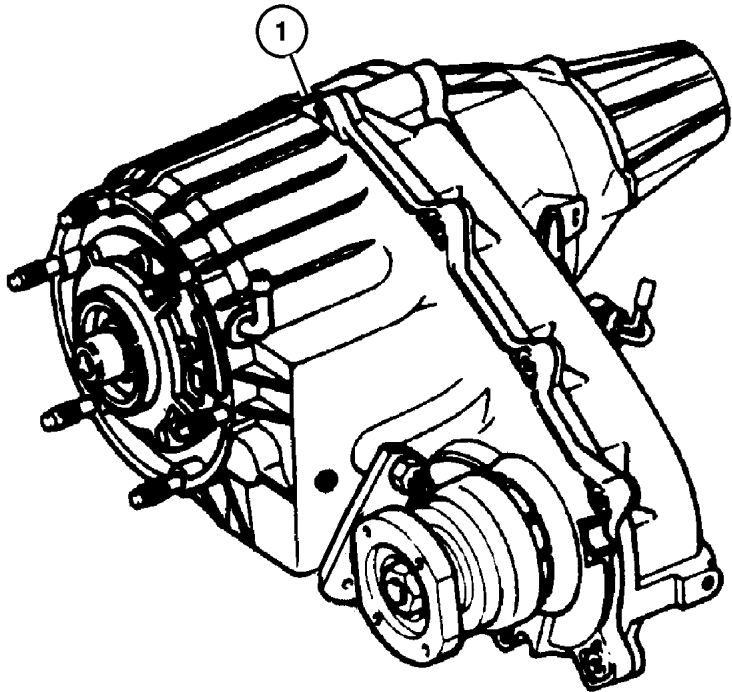Transfer Case [DHH][DHG] Shift on the Fly
Figure 241-110



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: Sales Codes
[DDP] = 5 Speed Manual Transmission
[DDX] = 5 Speed Heavy Duty Manual Transmission
[DEE] = 6 Speed Heavy Duty Manual Transmission
[DG0] = All Automatic Transmissions
[EL0] = All 5.2L 8 Cylinder Gas Engines
[EM0] = All 5.9L 8 Cylinder Gas Engines
[ET0] = All 5.9L Turbo Diesels
[EW0] = All 8.0L Gas Engines


1									TRANSFER CASE, NP241
	52105 023AB	1	6, 7, 8			EL0, EM0	DDP		
	52105 024AB	1	6, 7, 8			ET0, EW0	DDX, DEE DG0		
-2									TRANSFER CASE, NP241 HD
	52105 026AB-	1	6, 7, 8			EM0	DDP		
	52105 027AB-	1	6, 7, 8			ET0, EW0	DDX, DEE		
	52105 028AB-	1	6, 7, 8			EM0, ET0, EW0	DG0		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

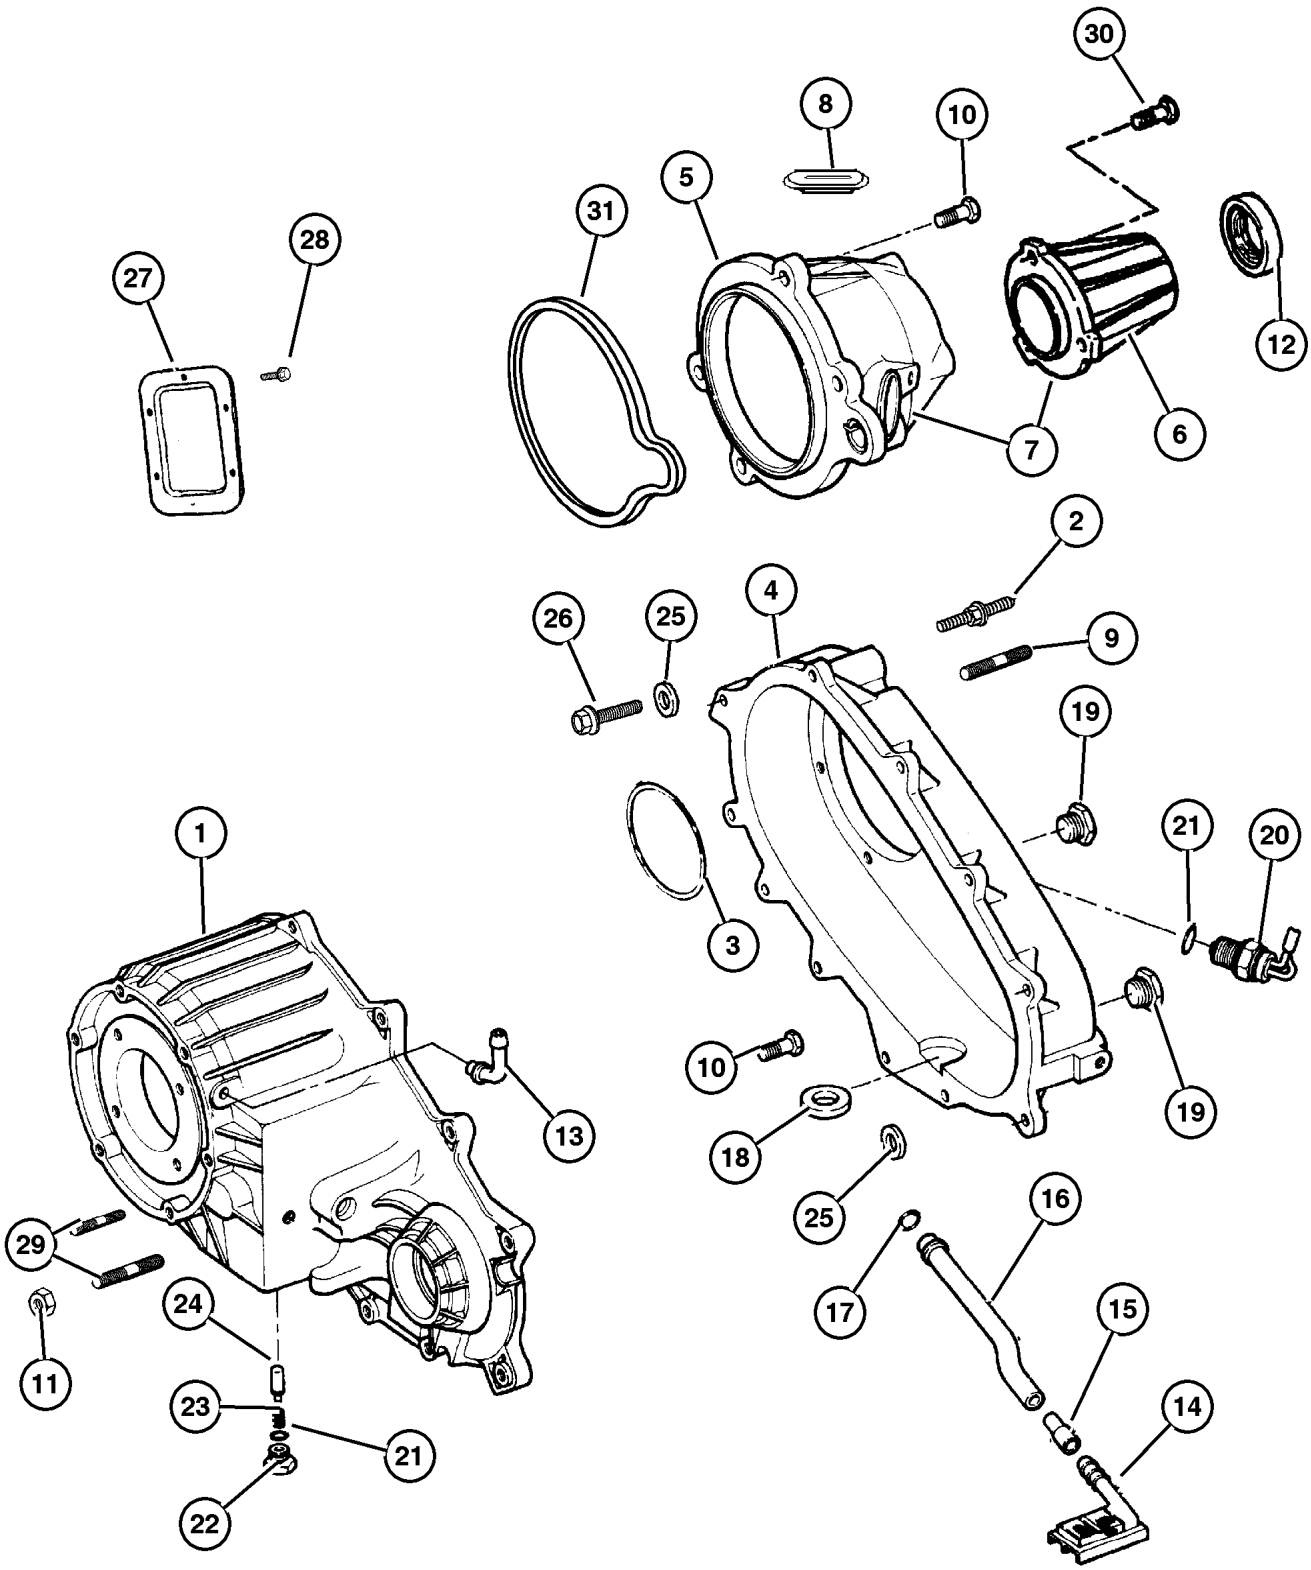Case and Related Parts [DHH][DHG] Shift on the Fly
Figure 241-210




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: Sales Codes
[DDP] = 5 Speed Manual Transmission
[DDX] = 5 Speed Heavy Duty Manual Transmission
[DEE] = 6 Speed Heavy Duty Manual Transmission
[DG0] = All Automatic Transmissions
[EL0] = All 5.2L 8 Cylinder Gas Engines
[EM0] = All 5.9L 8 Cylinder Gas Engines
[ET0] = All 5.9L Turbo Diesels
[EW0] = All 8.0L Gas Engines

1	5015 446AA	1	6, 7, 8			EM0, ET0, EW0	DG0		CASE, Transfer Front
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
	5015 449AA	1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8				DG0		
2	6501 289	2	6, 7, 8			EM0, ET0, EW0	DG0		STUD
		2	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		2	6, 7, 8			EM0	DDP		
		2	6, 7, 8			EL0, EM0	DDP		
		2	6, 7, 8			ET0, EW0	DDX, DEE		
		2	6, 7, 8				DG0		
3	4219 065	1	6, 7, 8			EM0, ET0, EW0	DG0		SNAP RING, Annulus Gear
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		

DODGE RAM QUAD CAB/CLUB CAB (BE)									
SERIES	LINE	BODY	ENGINE	TRANSMISSION					
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.					
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.					
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM, EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual					
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual					
			EAA = All Engines	DEE = 6 Speed HD Manual					
			EAG = All Gas Engines						

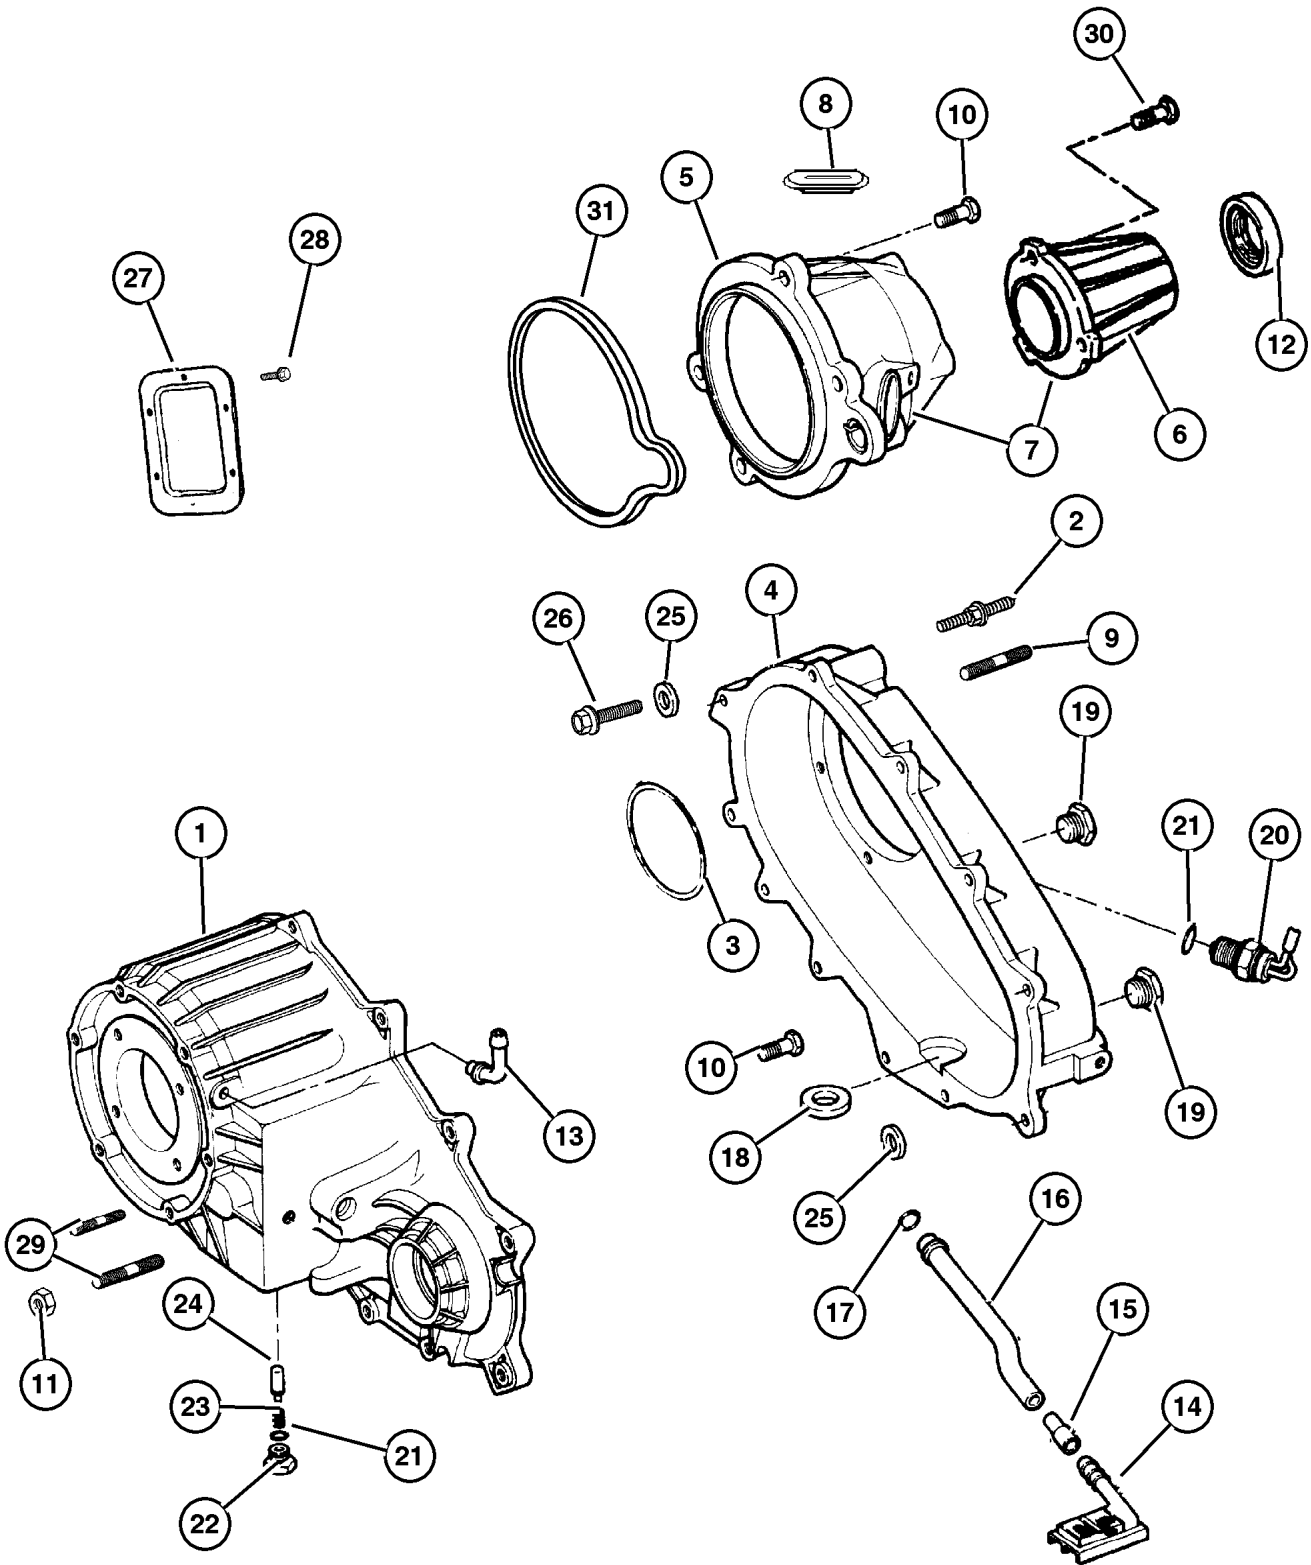Case and Related Parts [DHH][DHG] Shift on the Fly
Figure 241-210




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE DG0		
4	4797 550	1	6, 7, 8			EM0, ET0, EW0	DG0		CASE, Transfer Rear
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0,	DDP		
		1	6, 7, 8			EM0 ET0, EW0	DDX, DEE DG0		
5	4897 980AA	1	6, 7, 8			EL0, EM0	DDP		EXTENSION, Transfer Case
		1	6, 7, 8			ET0,	DDX,		Heavy duty
		1	6, 7, 8			EW0	DEE DG0		
6	4798 002	1	6, 7, 8			EL0,	DDP		EXTENSION, Transfer Case
		1	6, 7, 8			EM0 ET0, EW0	DDX, DEE DG0		
7	4897 996AA	1	6, 7, 8			EM0, ET0, EW0	DG0		RETAINER, Transfer Case Rear
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8			EM0	DDP		
8	5010 123AA	1	6, 7, 8			EM0, ET0, EW0	DG0		PLUG

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

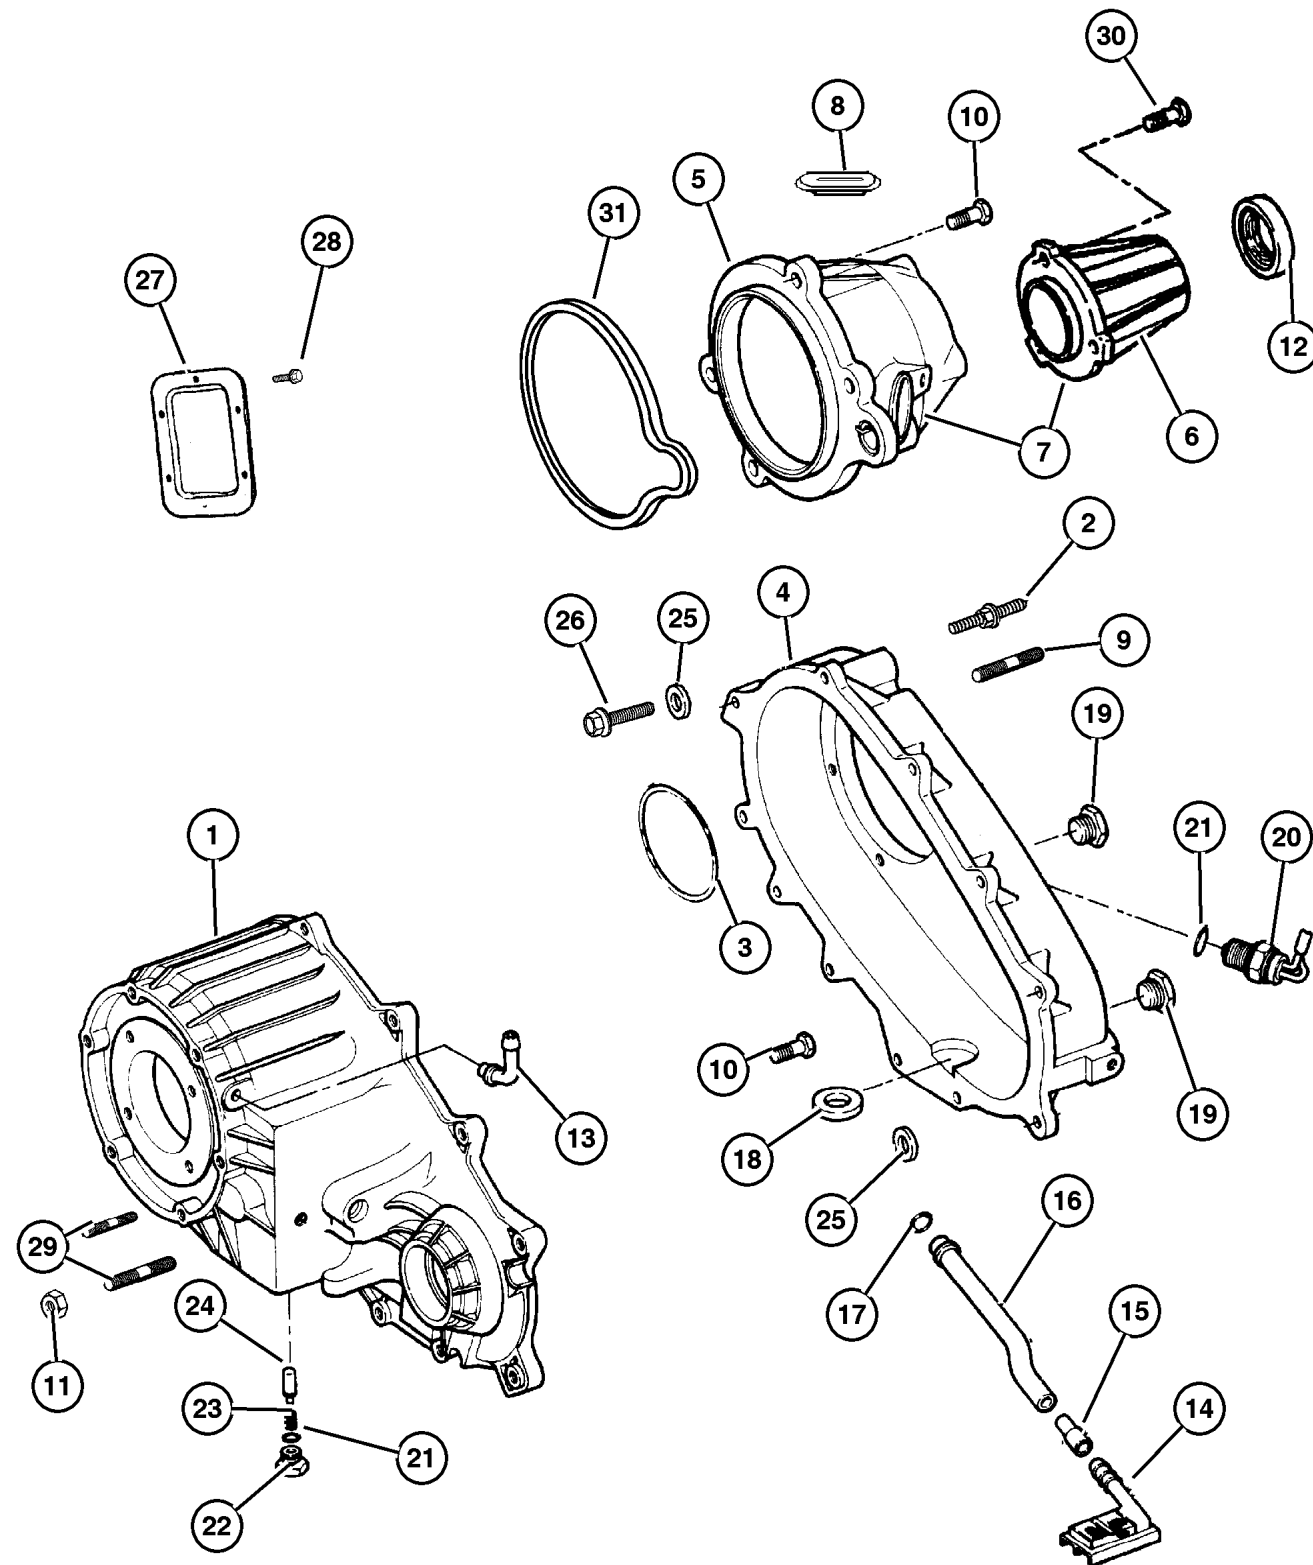Case and Related Parts [DHH][DHG] Shift on the Fly Figure 241-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
9	4210 617	1	6, 7, 8			ET0,	DDX,		BOLT, Transfer Case
		1	6, 7, 8			EW0	DEE		
						EM0	DDP		
		7	6, 7, 8			EM0,	DG0		
		7	6, 7, 8			ET0,			
						EW0			
						EM0	DDP		
7	6, 7, 8				DG0				
10	6501 371	7	6, 7, 8			ET0,	DDX,		Heavy Duty
		4	6, 7, 8			EW0	DEE		BOLT, Retainer
						EM0,	DG0		
		4	6, 7, 8			ET0,			Heavy Duty
						EW0	DDX,	DEE	
		4	6, 7, 8			EM0	DDP		
		4	6, 7, 8			EL0,	DDP		
11 12	6033 172	4	6, 7, 8			EM0			NUT AND WASHER, Hex, .375-24 SEAL, Output Shaft
		6				EL0,	DDP		
						EM0			
		4	6, 7, 8			ET0,	DDX,		
						EW0	DEE		
13	4741 920	1	6, 7, 8			EM0,	DG0		VENT, Transfer Case
		1	6, 7, 8			ET0,			
						EW0	DDX,	DEE	
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0,	DDP		
						EM0			
		1	6, 7, 8			ET0,	DDX,		
				EW0	DEE				
		1	6, 7, 8				DG0		


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

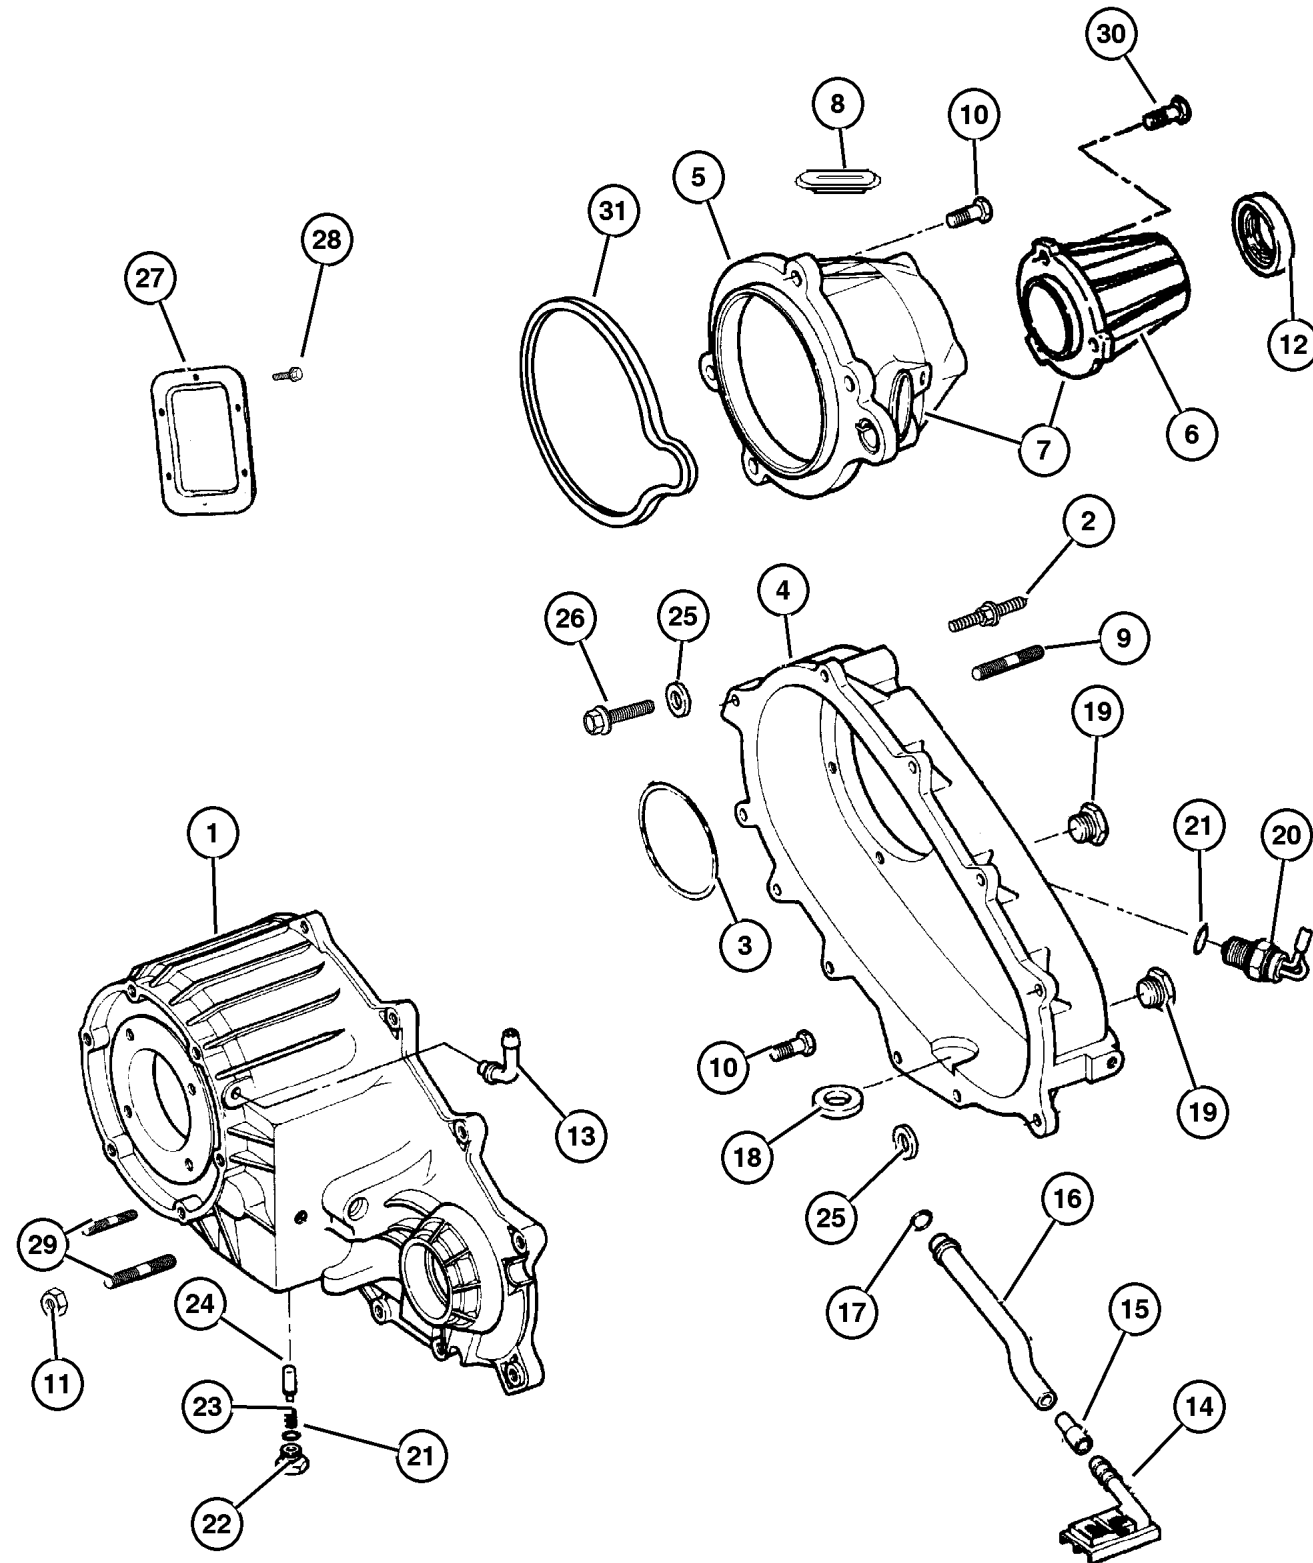Case and Related Parts [DHH][DHG] Shift on the Fly Figure 241-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4796 910	1	6, 7, 8			EM0, ET0, EW0	DG0		
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
14		1	6, 7, 8				DG0		FILTER, Transfer Case Oil
	4338 943	1	6, 7, 8			EM0, ET0, EW0	DG0		
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
15		1	6, 7, 8				DG0		CONNECTOR, Oil Tube Pickup
	4338 944	1	6, 7, 8			EM0, ET0, EW0	DG0		
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
16		1	6, 7, 8				DG0		TUBE, Oil Pickup
	8350 3523	1	6, 7, 8			EM0, ET0, EW0	DG0		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

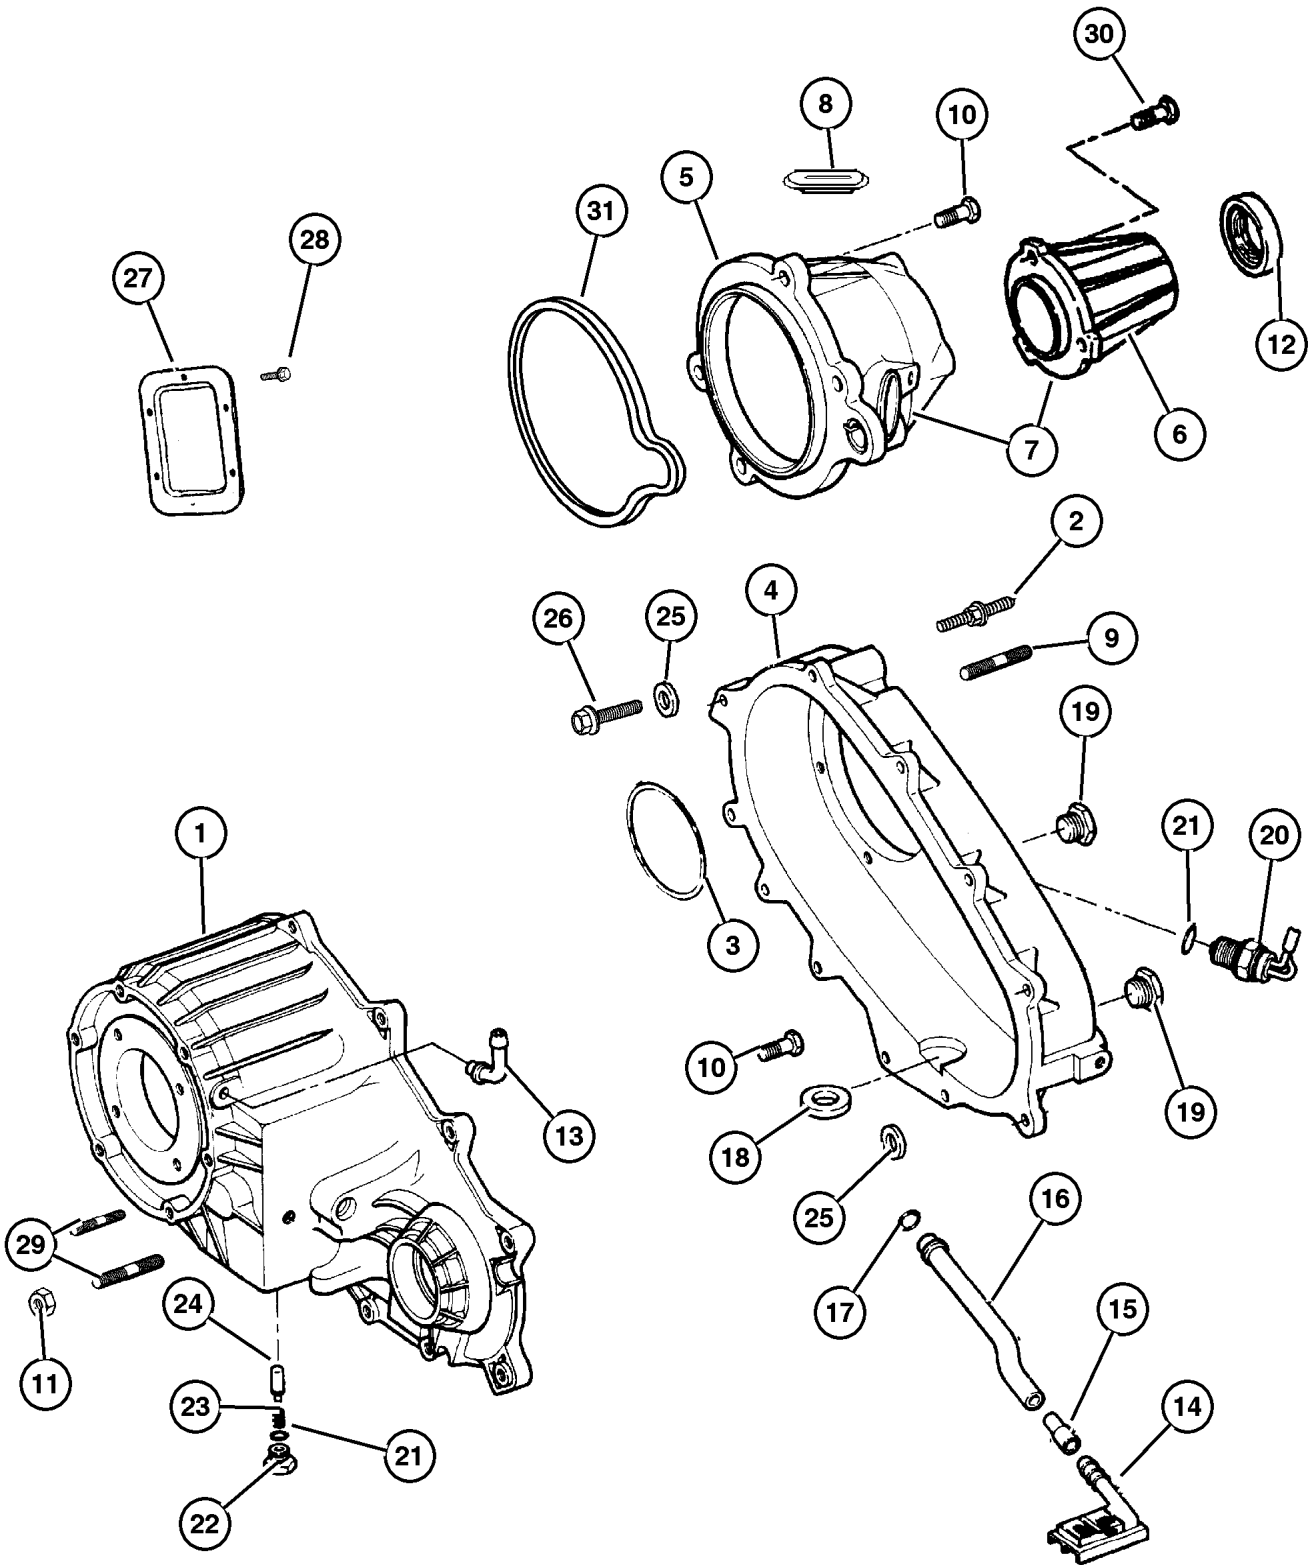
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Case and Related Parts [DHH][DHG] Shift on the Fly
Figure 241-210




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8				DG0		
17	4338 942	1	6, 7, 8			EM0, ET0, EW0	DG0		SEAL, Oil
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8				DG0		
18	3681 601	1	6, 7, 8			EM0, ET0, EW0	DG0		MAGNET, Transmission
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8				DG0		
19	4856 641	2	6, 7, 8			EM0, ET0, EW0	DG0		PLUG, Oil Fill
		2	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		2	6, 7, 8			EM0	DDP		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES L = Ram Truck (All)	LINE 1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	BODY 31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ENGINE ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	TRANSMISSION DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual
-------------------------------	---	--	--	---

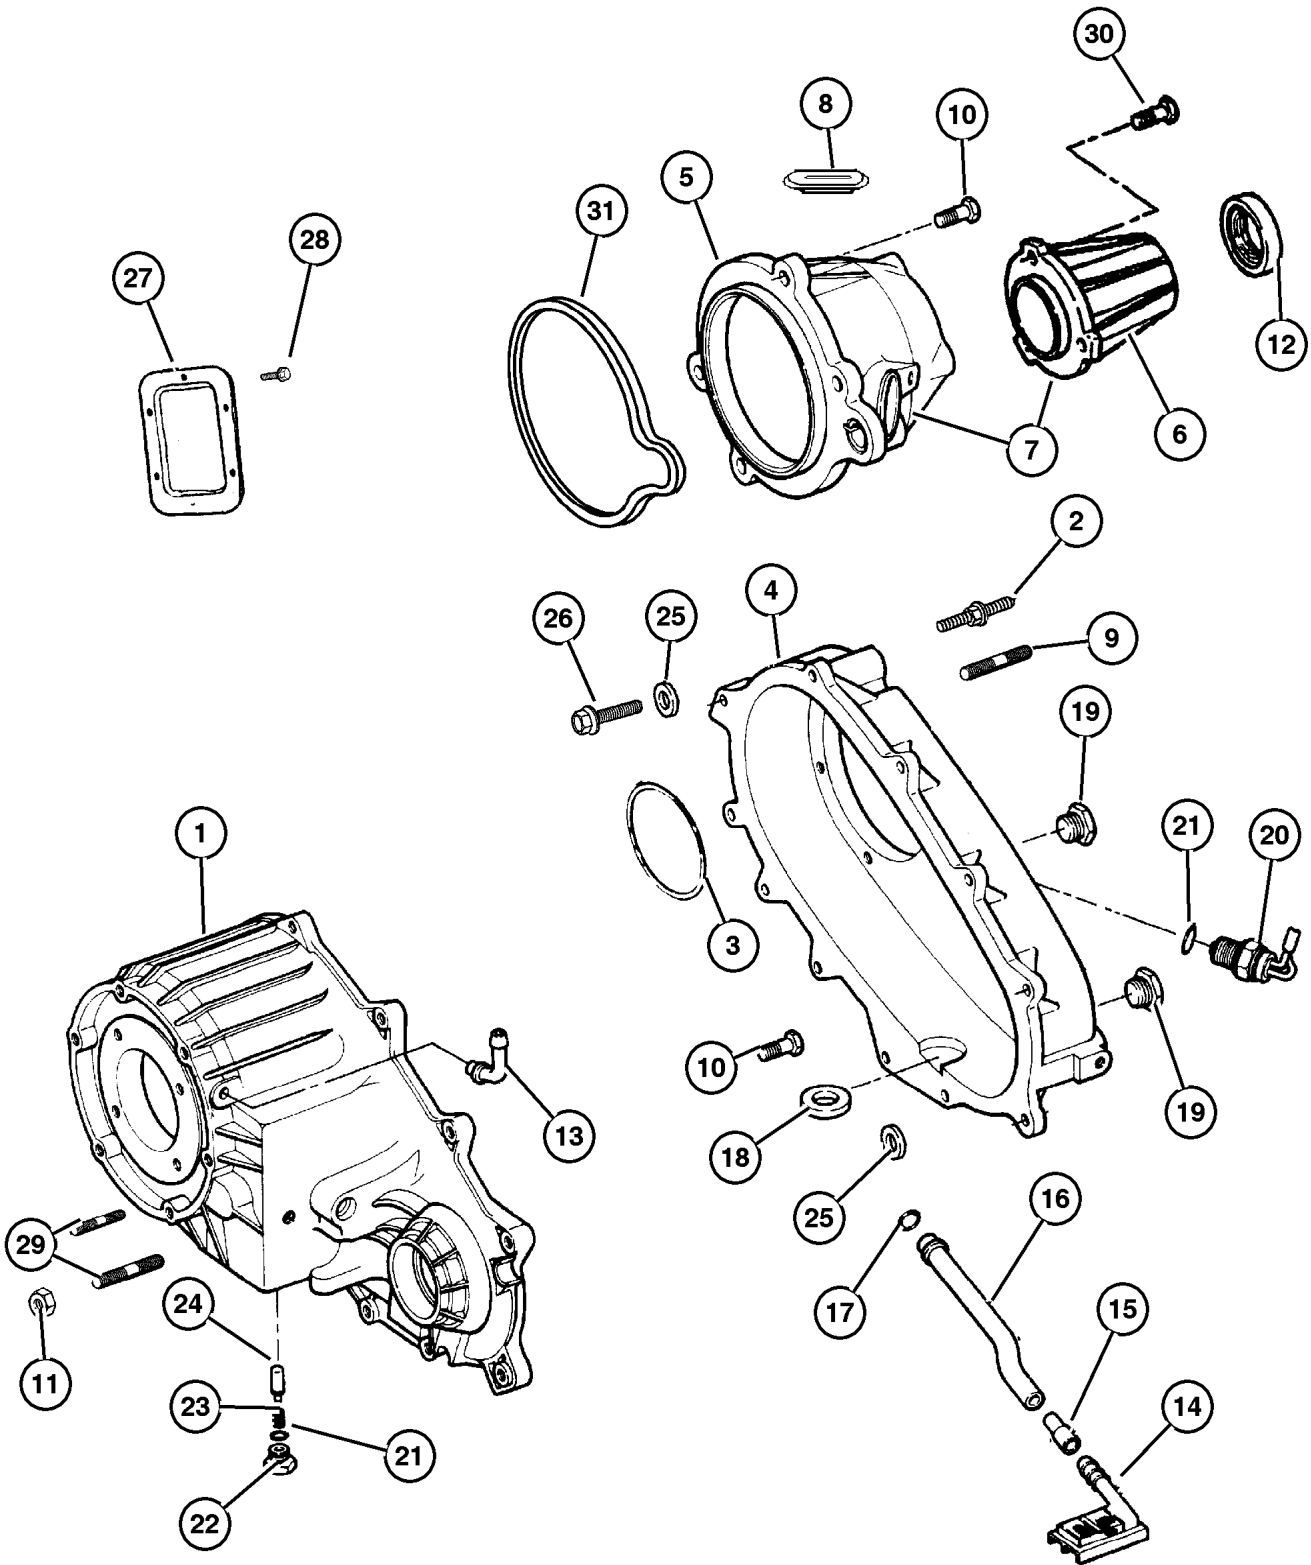Case and Related Parts [DHH][DHG] Shift on the Fly
Figure 241-210




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE DG0		
20	5300 1101	1	6, 7, 8			EM0, ET0, EW0	DG0		SWITCH, Transfer Case
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0,	DDP		
		1	6, 7, 8			EM0 ET0, EW0	DDX, DEE DG0		
21	4338 956	2	6, 7, 8			EM0, ET0, EW0	DG0		SEAL, Vacuum Switch
		2	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		2	6, 7, 8			EM0	DDP		
		2	6, 7, 8			EL0,	DDP		
		2	6, 7, 8			EM0 ET0, EW0	DDX, DEE DG0		
22	4886 473AA	1	6, 7, 8			EM0, ET0, EW0	DG0		SCREW
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0,	DDP		
		1	6, 7, 8			EM0 ET0, EW0	DDX, DEE		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

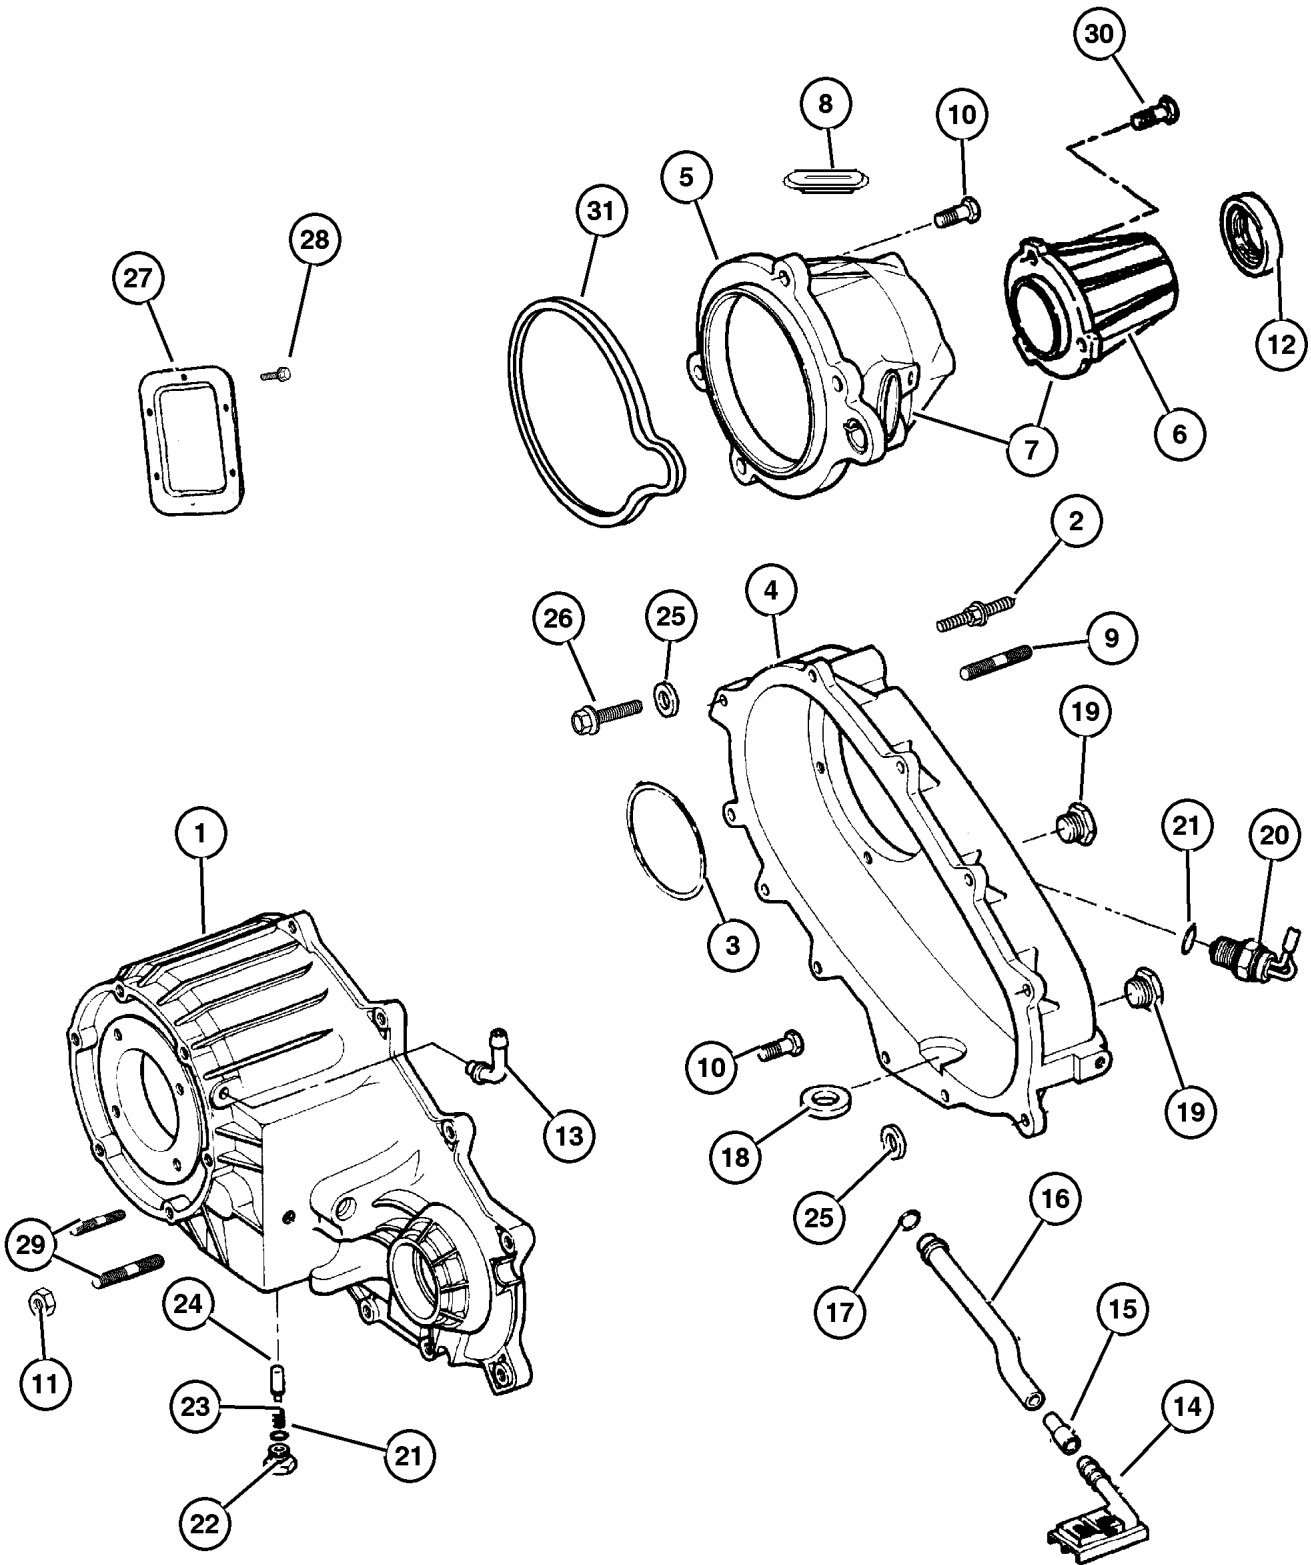
Case and Related Parts [DHH][DHG] Shift on the Fly
Figure 241-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
23	4798 257	1	6, 7, 8				DG0		SPRING, Poppet
		1	6, 7, 8			EM0, ET0, EW0	DG0		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0, EW0	DDP		
24	5300 8217	1	6, 7, 8			EM0 ET0, EW0	DDX, DEE DG0		PLUNGER
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0, EW0	DDP		
		1	6, 7, 8			EM0 ET0, EW0	DDX, DEE DG0		
25	4210 983	2	6, 7, 8			EM0, ET0, EW0	DG0		WASHER, Flat
		2	6, 7, 8			ET0, EW0	DDX, DEE		
		2	6, 7, 8			EM0	DDP		
		2	6, 7, 8			EL0, EW0	DDP		
		2	6, 7, 8			EM0 ET0, EW0	DDX, DEE DG0		
26		2	6, 7, 8						BOLT, Hex Flange Head
		2	6, 7, 8						

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

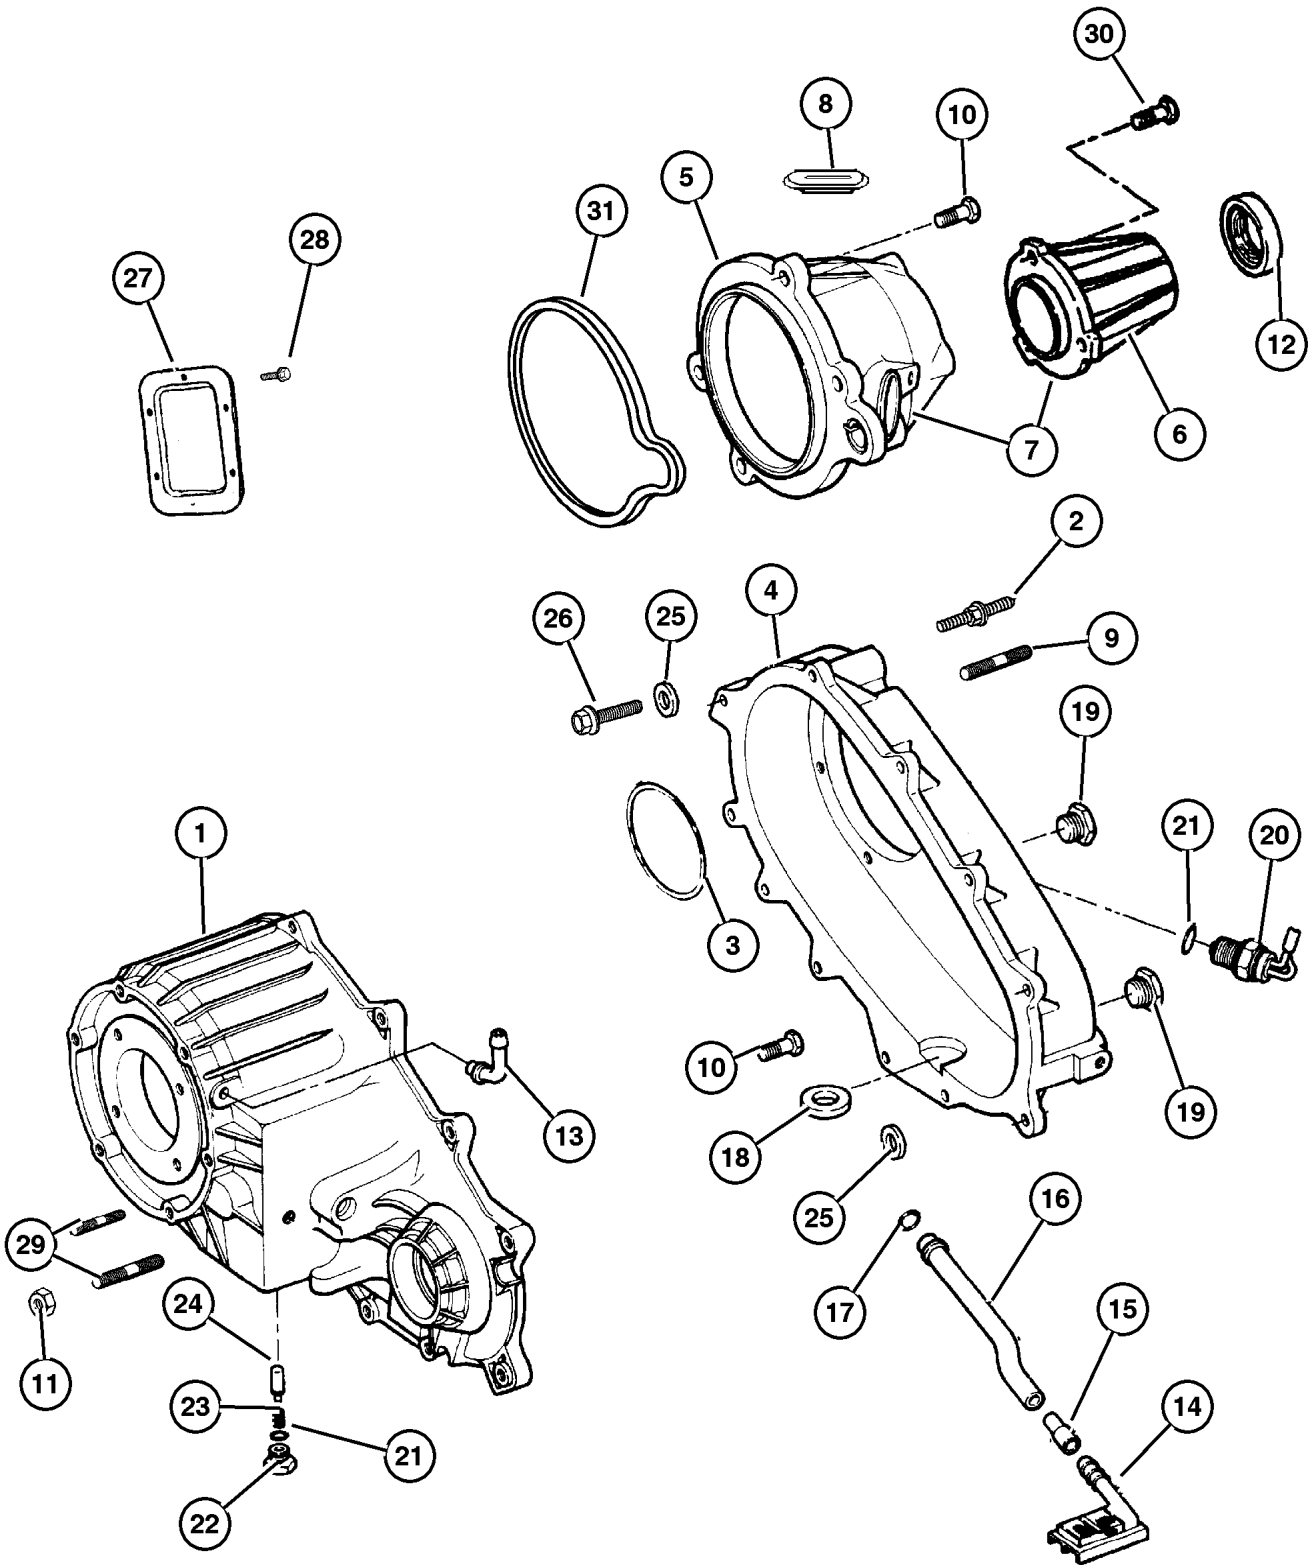Case and Related Parts [DHH][DHG] Shift on the Fly
Figure 241-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4210 614	1	6, 7, 8			EM0, ET0, EW0	DG0		
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
27		1	6, 7, 8				DG0		COVER, Power Take Off
	0556 875	1	6, 7, 8			EM0, ET0, EW0	DG0		
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		
28									BOLT, Transfer Case
	4637 851	6	6, 7, 8			EM0, ET0, EW0	DG0		
		6	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		6	6, 7, 8			EM0	DDP		
29									STUD
	4746 253	6	6, 7, 8			EM0, ET0, EW0	DG0		
		6	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		6	6, 7, 8			EM0	DDP		
		6	6, 7, 8			EL0, EM0	DDP		
		6	6, 7, 8			ET0, EW0	DDX, DEE		
		6	6, 7, 8				DG0		
30									BOLT, Transfer Case
	4210 617	4	6, 7, 8			EL0, EM0	DDP		


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES L = Ram Truck (All)	LINE 1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	BODY 31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ENGINE ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	TRANSMISSION DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual
-------------------------------	---	--	--	---

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

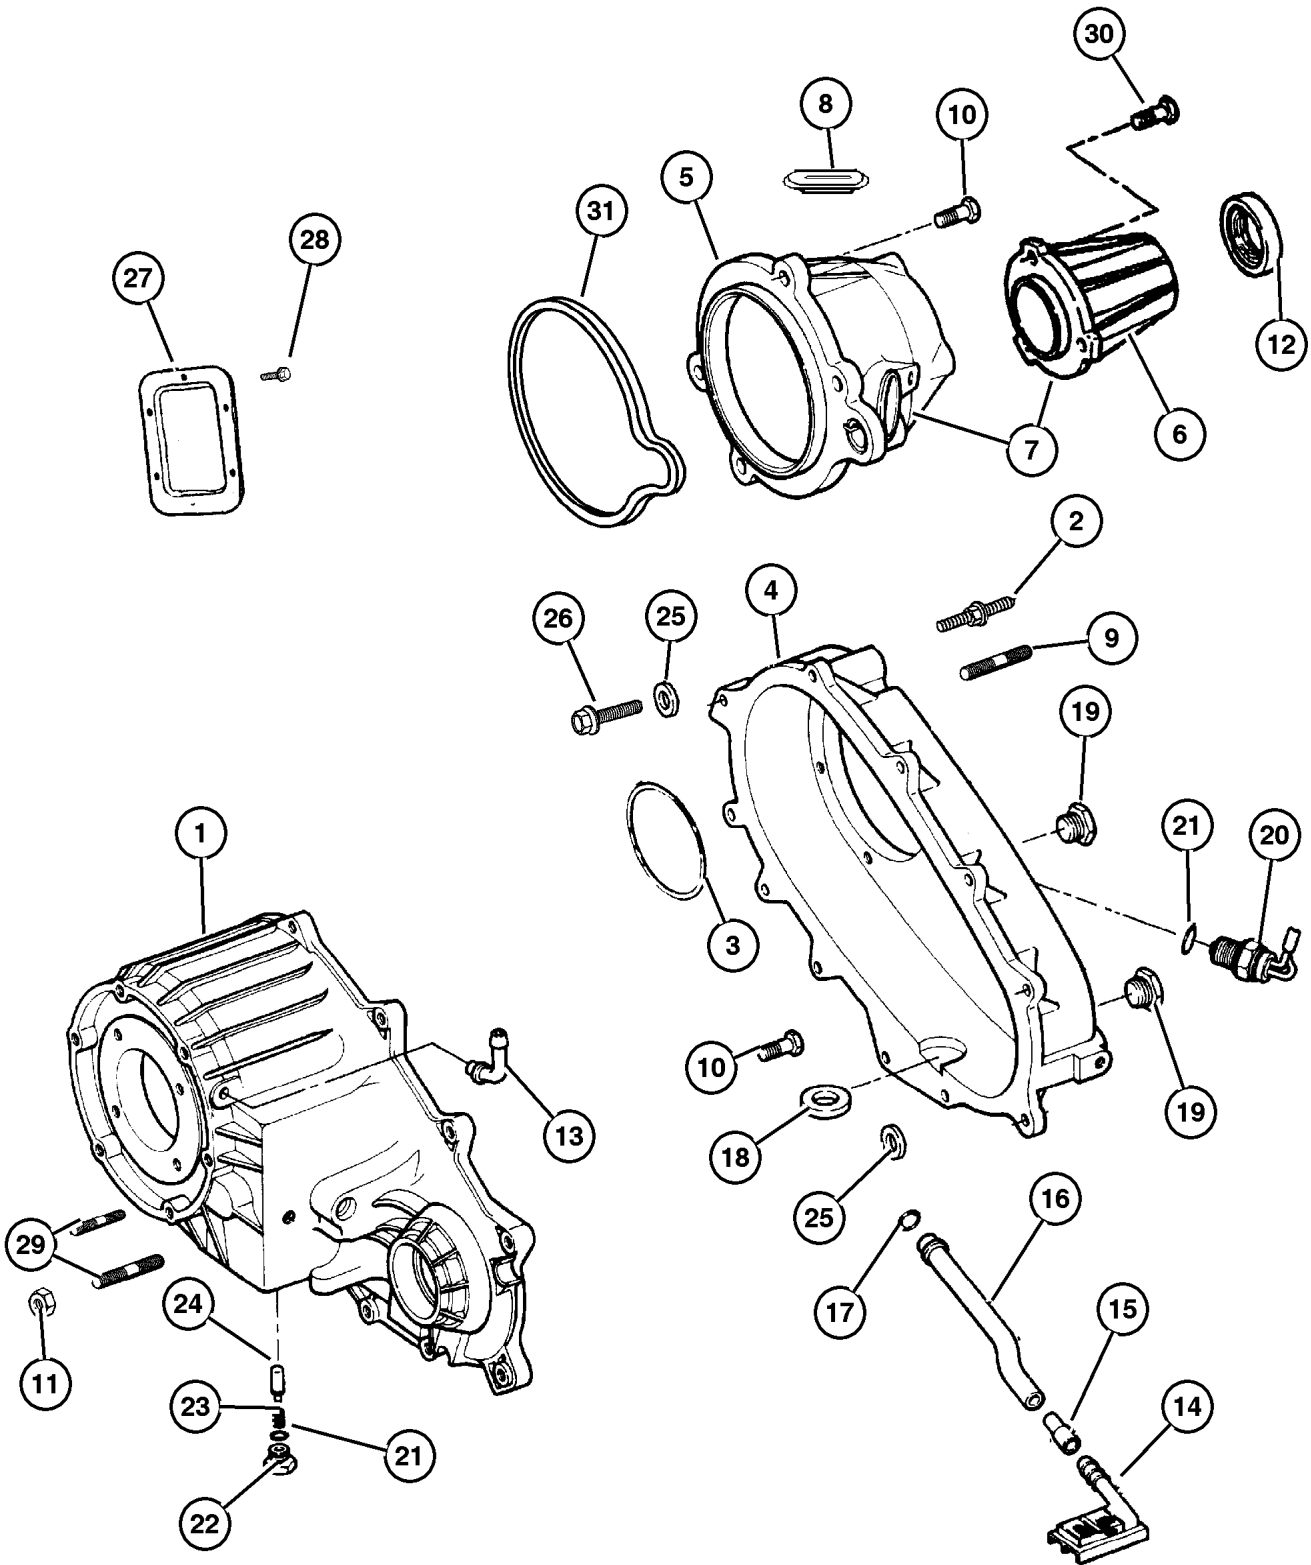
Case and Related Parts [DHH][DHG] Shift on the Fly
Figure 241-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
31	4856 645	4	6, 7, 8			ET0, EW0	DDX, DEE DG0		GASKET, Rear Oil Seal Retainer
		1	6, 7, 8			EM0, ET0, EW0	DG0		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE DG0		
		1	6, 7, 8						
		1	6, 7, 8						
		1	6, 7, 8						
		1	6, 7, 8						

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

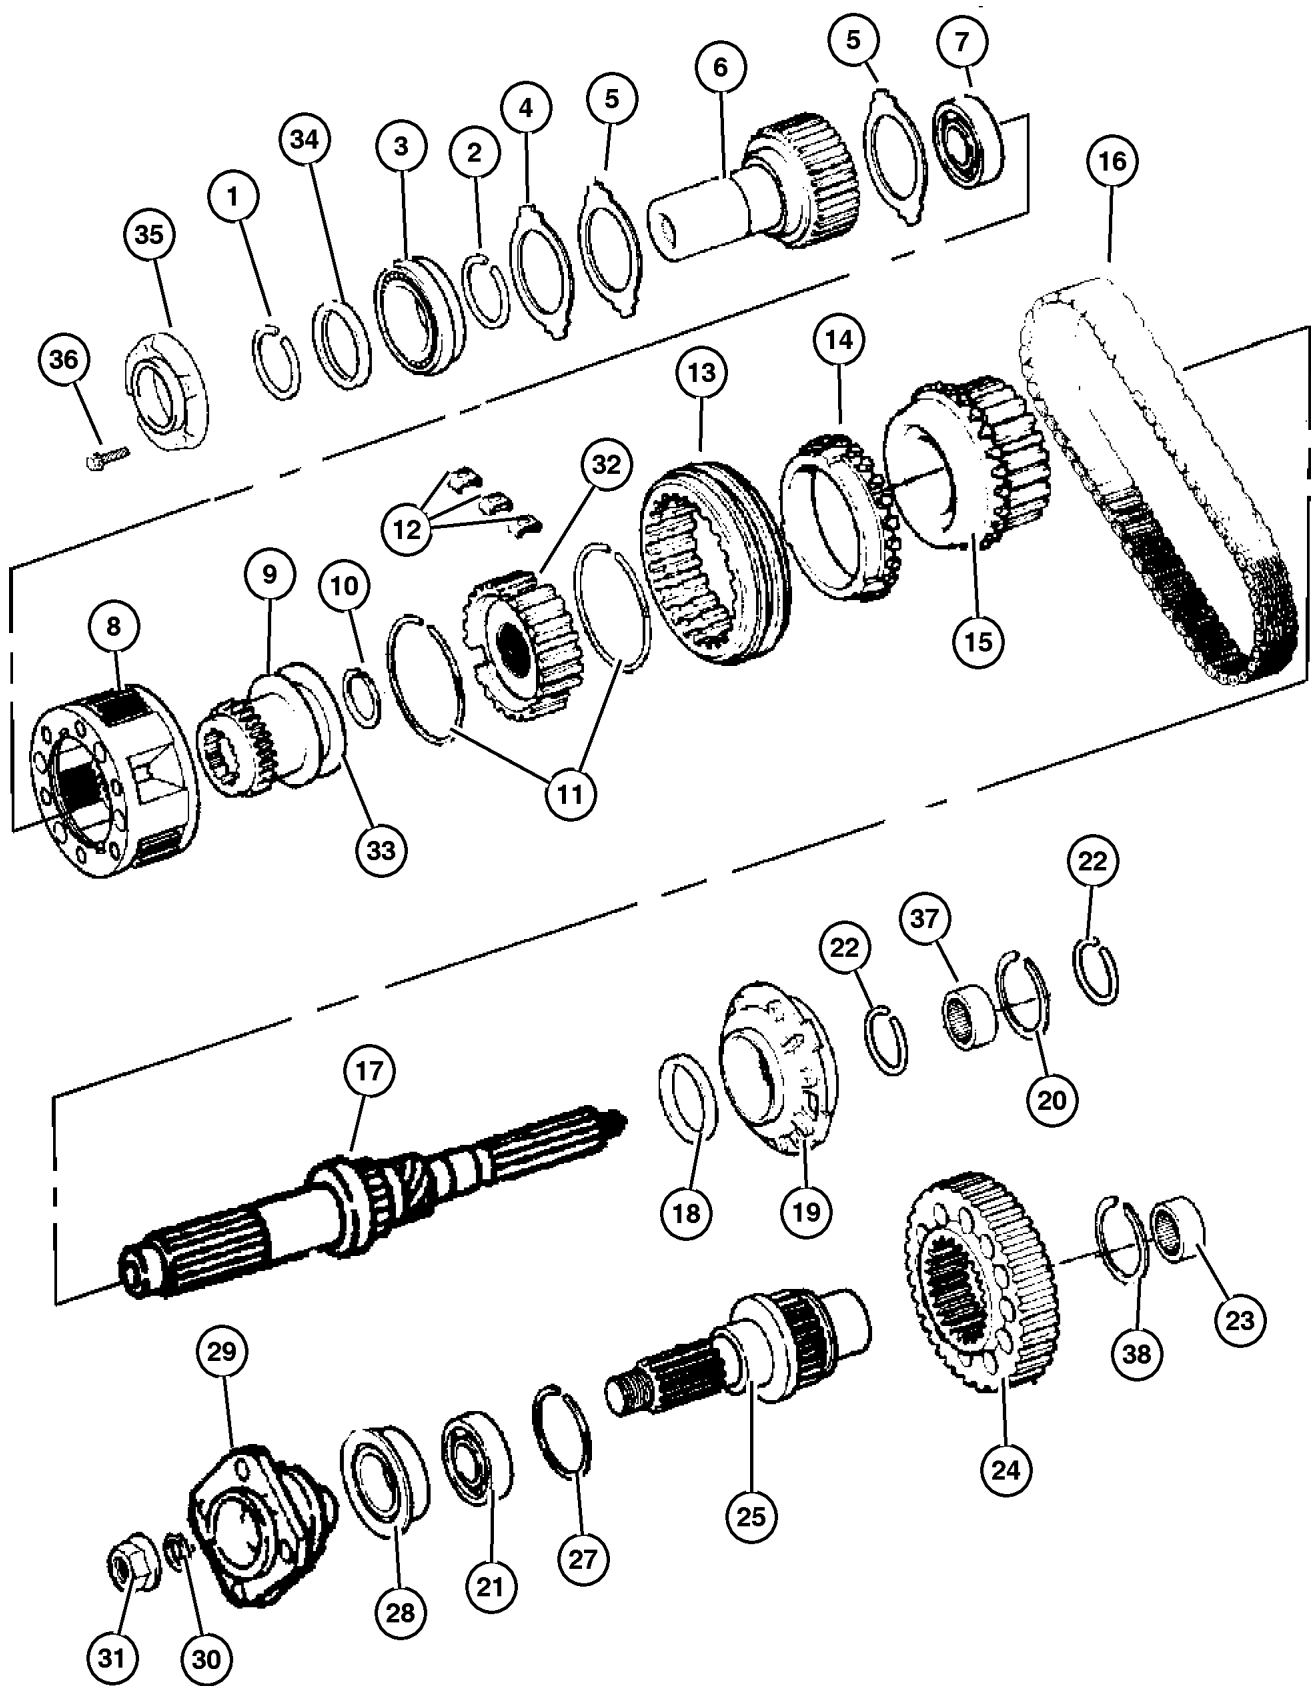Gear Train [DHH][DHG] Shift on the Fly
Figure 241-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: Sales Codes

[DDP] = 5 Speed Manual Transmission
[DDX] = 5 Speed Heavy Duty Manual Transmission
[DEE] = 6 Speed Heavy Duty Manual Transmission
[DG0] = All Automatic Transmissions
[EL0] = All 5.2L 8 Cylinder Gas Engines
[EM0] = All 5.9L 8 Cylinder Gas Engines
[ET0] = All 5.9L Turbo Diesels
[EW0] = All 8.0L Gas Engines

1	3821 558	1	6, 7, 8			EM0, ET0, EW0	DG0		SNAP RING Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		Heavy Duty
		1	6, 7, 8			EL0,	DDP		
		1	6, 7, 8			EM0	DDX, DEE		
		1	6, 7, 8			EW0	DG0		
2	4338 910	1	6, 7, 8			EM0, ET0, EW0	DG0		SNAP RING Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		Heavy Duty
		1	6, 7, 8			EL0,	DDP		
		1	6, 7, 8			EM0	DDX, DEE		
		1	6, 7, 8			EW0	DG0		
3	4338 891	1	6, 7, 8			EM0, ET0, EW0	DG0		BEARING, Input Gear Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		Heavy Duty

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Gear Train [DHH][DHG] Shift on the Fly
Figure 241-410


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE DG0		
4	4338 909	1	6, 7, 8			EM0, ET0, EW0	DG0		RING Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		Heavy Duty
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE DG0		
5	4338 908	2	6, 7, 8			EM0, ET0, EW0	DG0		THRUST WASHER, Planetary Carrier Heavy Duty
		2	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		2	6, 7, 8			EM0	DDP		Heavy Duty
		2	6, 7, 8			EL0, EM0	DDP		
		2	6, 7, 8			ET0, EW0			
6	4797 028	1	6, 7, 8			EM0	DDP		GEAR, Input Heavy Duty
		1	6, 7, 8			EL0, EM0	DDP		
	4797 029	1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

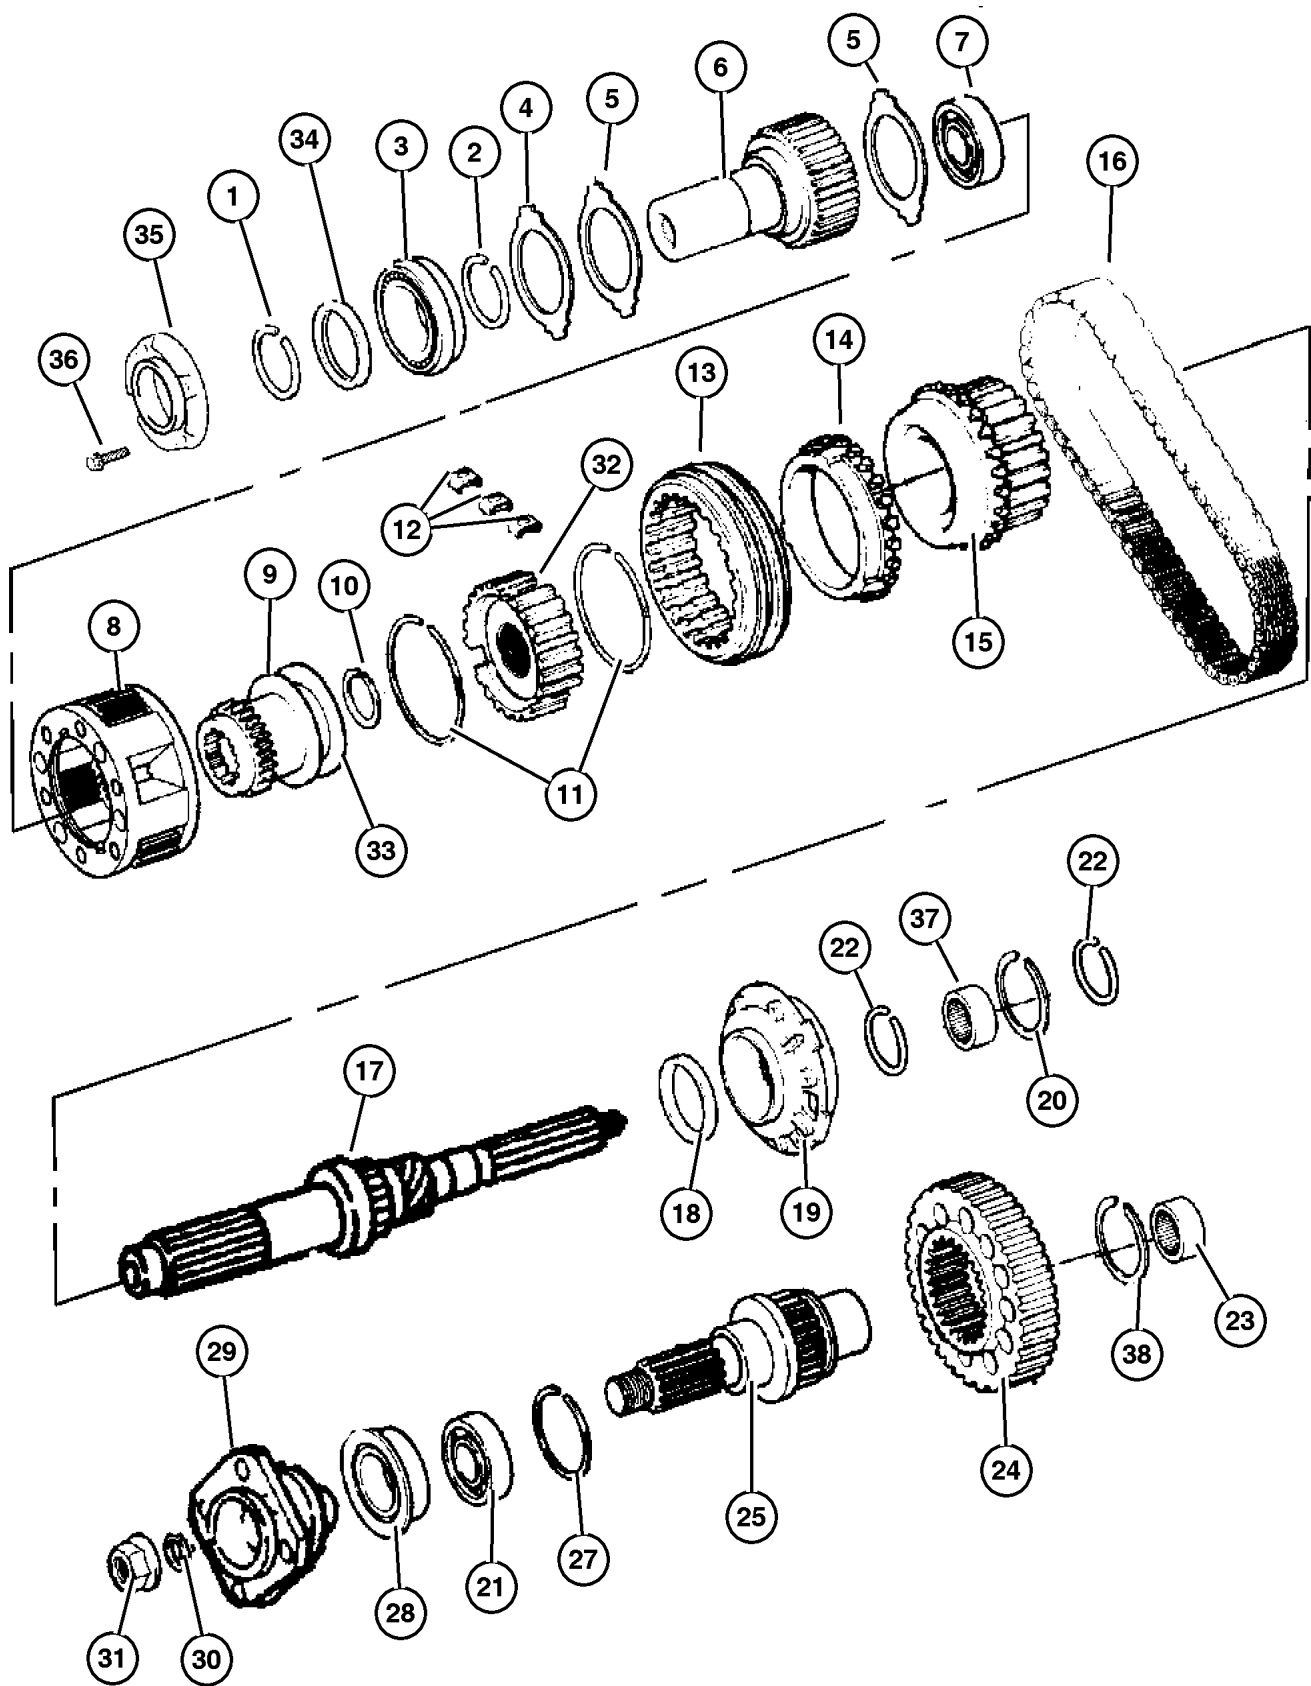Gear Train [DHH][DHG] Shift on the Fly
Figure 241-410




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
7	5015 447AA	1	6, 7, 8			EM0, ET0, EW0	DG0		Heavy Duty
		1	6, 7, 8				DG0		BEARING, Input Shaft
	4746 127	1	6, 7, 8			EM0, ET0, EW0	DG0		Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
8		1	6, 7, 8			EM0 EL0, EM0	DDP		Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE DG0		PLANETARY, Transfer Case
	4797 030	1	6, 7, 8				DG0		
		1	6, 7, 8			EL0, EM0 ET0,	DDP		
9		1	6, 7, 8			EW0 ET0, EW0	DDX, DEE		Heavy Duty
	4797 032	1	6, 7, 8			EM0 EM0, ET0,	DDP DG0		Heavy Duty
		1	6, 7, 8			EW0 ET0, EW0	DDX, DEE		Heavy Duty
	4746 129	1	6, 7, 8			ET0, EW0	DDX, DEE		SLEEVE, Range Fork
10		1	6, 7, 8			EM0 ET0, EW0	DDP		Heavy Duty
	4797 013	1	6, 7, 8			EL0, DDP			
		1	6, 7, 8			EM0 ET0, EW0	DDX, DEE DG0		
	4897 955AA	1	6, 7, 8				DG0		Heavy Duty
10	4897 994AA	1	6, 7, 8			EM0, ET0, EW0	DG0		Heavy Duty
									SNAP RING, Mainshaft

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

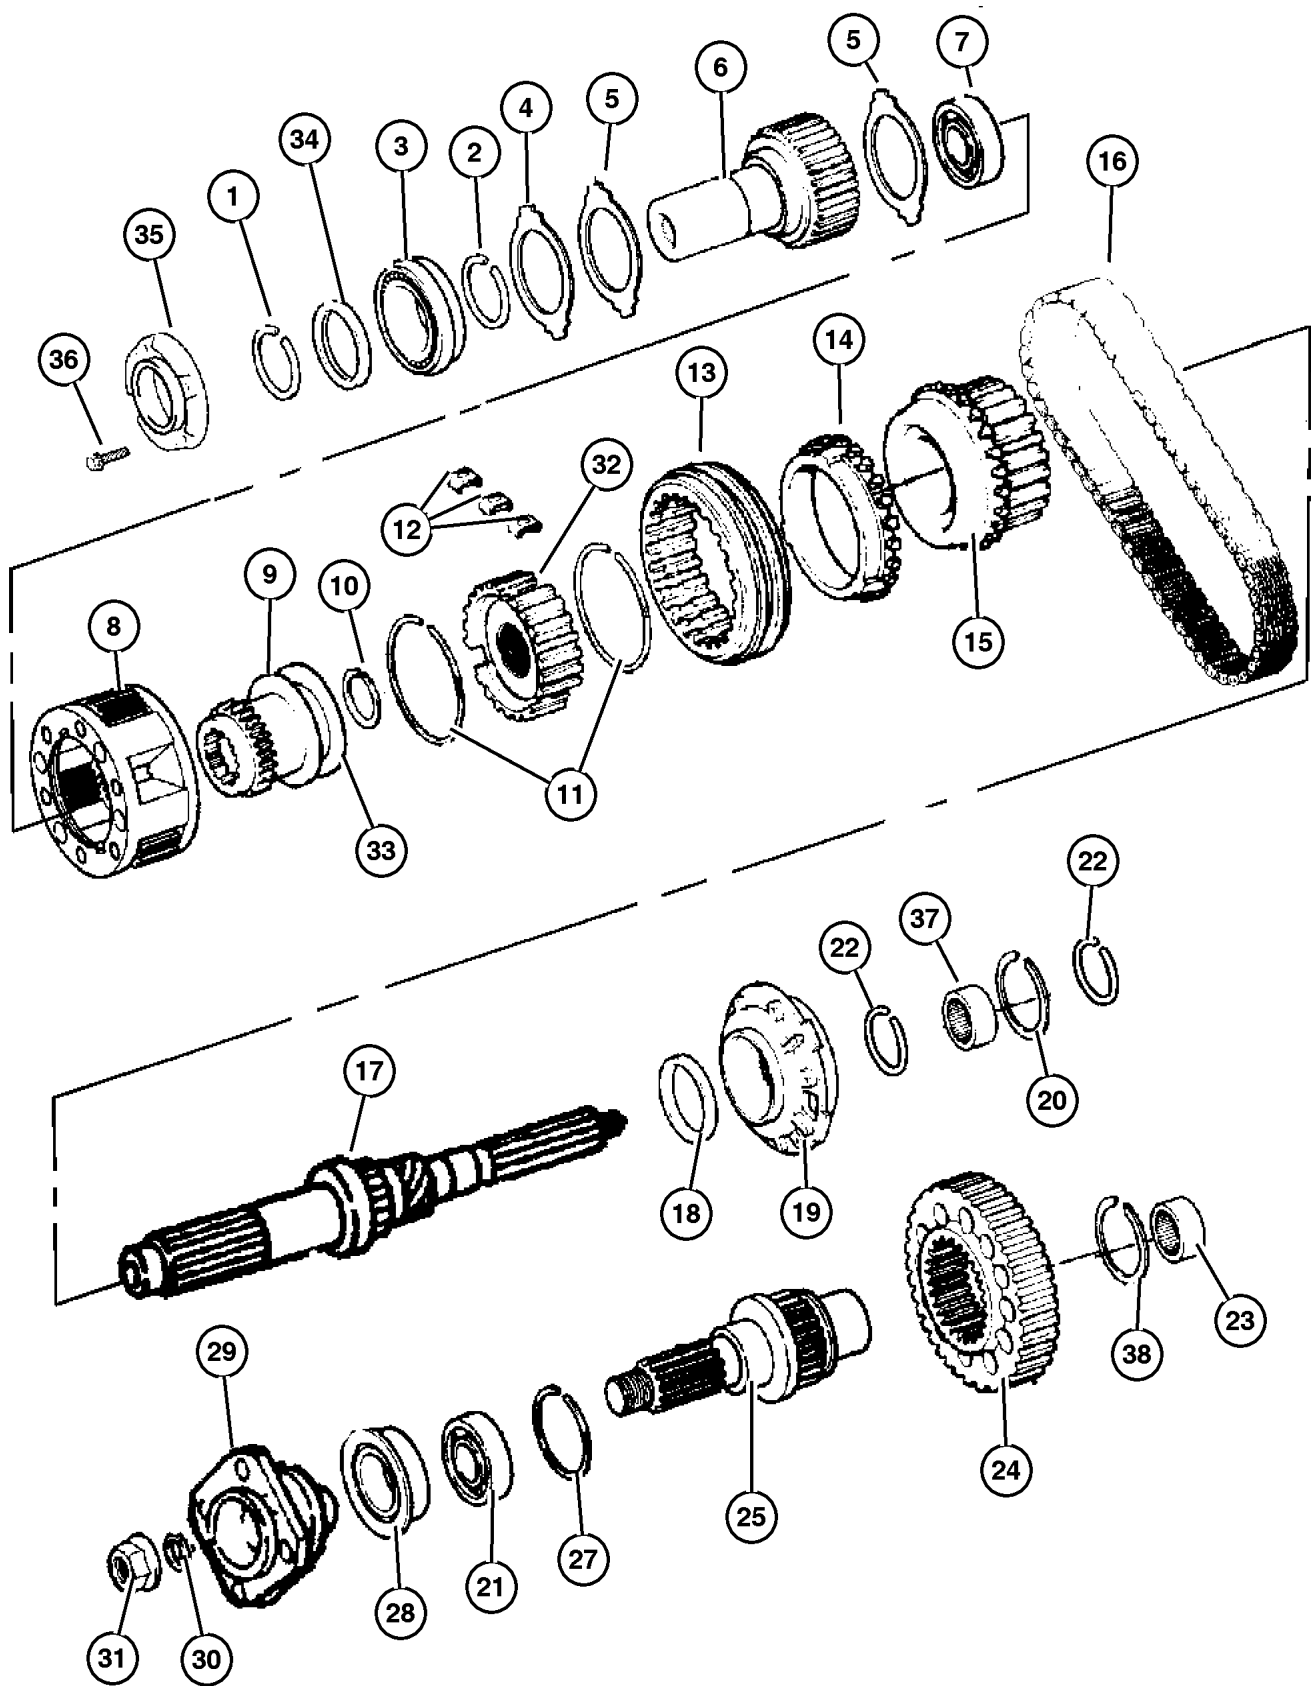Gear Train [DHH][DHG] Shift on the Fly
Figure 241-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4746 128	1	6, 7, 8			EM0	DDP		Heavy Duty
		1	6, 7, 8			EM0, ET0, EW0	DG0		Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
11	4746 138	2	6, 7, 8			EM0, ET0, EW0	DG0		SPRING, Synchronizer Heavy Duty
		2	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		2	6, 7, 8			EM0	DDP		Heavy Duty
		2	6, 7, 8			EL0, EM0, ET0, EW0	DDP		
		2	6, 7, 8				DG0		
12	4746 137	3	6, 7, 8			EL0, EM0	DDP		KEY, Synchronizer
		3	6, 7, 8			ET0, EW0	DDX, DEE, DG0		
		3	6, 7, 8			EM0	DDP		Heavy Duty
		3	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		3	6, 7, 8			EM0, ET0, EW0	DG0		Heavy Duty
13	4746 144	1	6, 7, 8			EM0, ET0, EW0	DG0		SLEEVE, Synchronizer Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		Heavy Duty
		1	6, 7, 8			EL0, EM0	DDP		

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM, EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	


Gear Train [DHH][DHG] Shift on the Fly
Figure 241-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
14	4746 139	1	6, 7, 8			ET0, EW0	DDX, DEE DG0		RING, Blocker Heavy Duty
		1	6, 7, 8			EM0, DG0			
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0 EL0, EM0	DDP		Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE DG0		SPROCKET, Transfer Case Heavy Duty
15	4746 142	1	6, 7, 8			EM0 ET0, EW0	DDP DG0		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8			EW0 EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE DG0		CHAIN, Transfer Case Heavy Duty
		1	6, 7, 8			ET0, EW0	DDP		
16	4746 147	1	6, 7, 8			EM0 ET0, EW0	DG0		
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EW0 EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE DG0		
		1	6, 7, 8			EL0, EM0	DDP		MAINSHAFT, Transfer Case
17		1	6, 7, 8			ET0, EW0	DDX, DEE		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

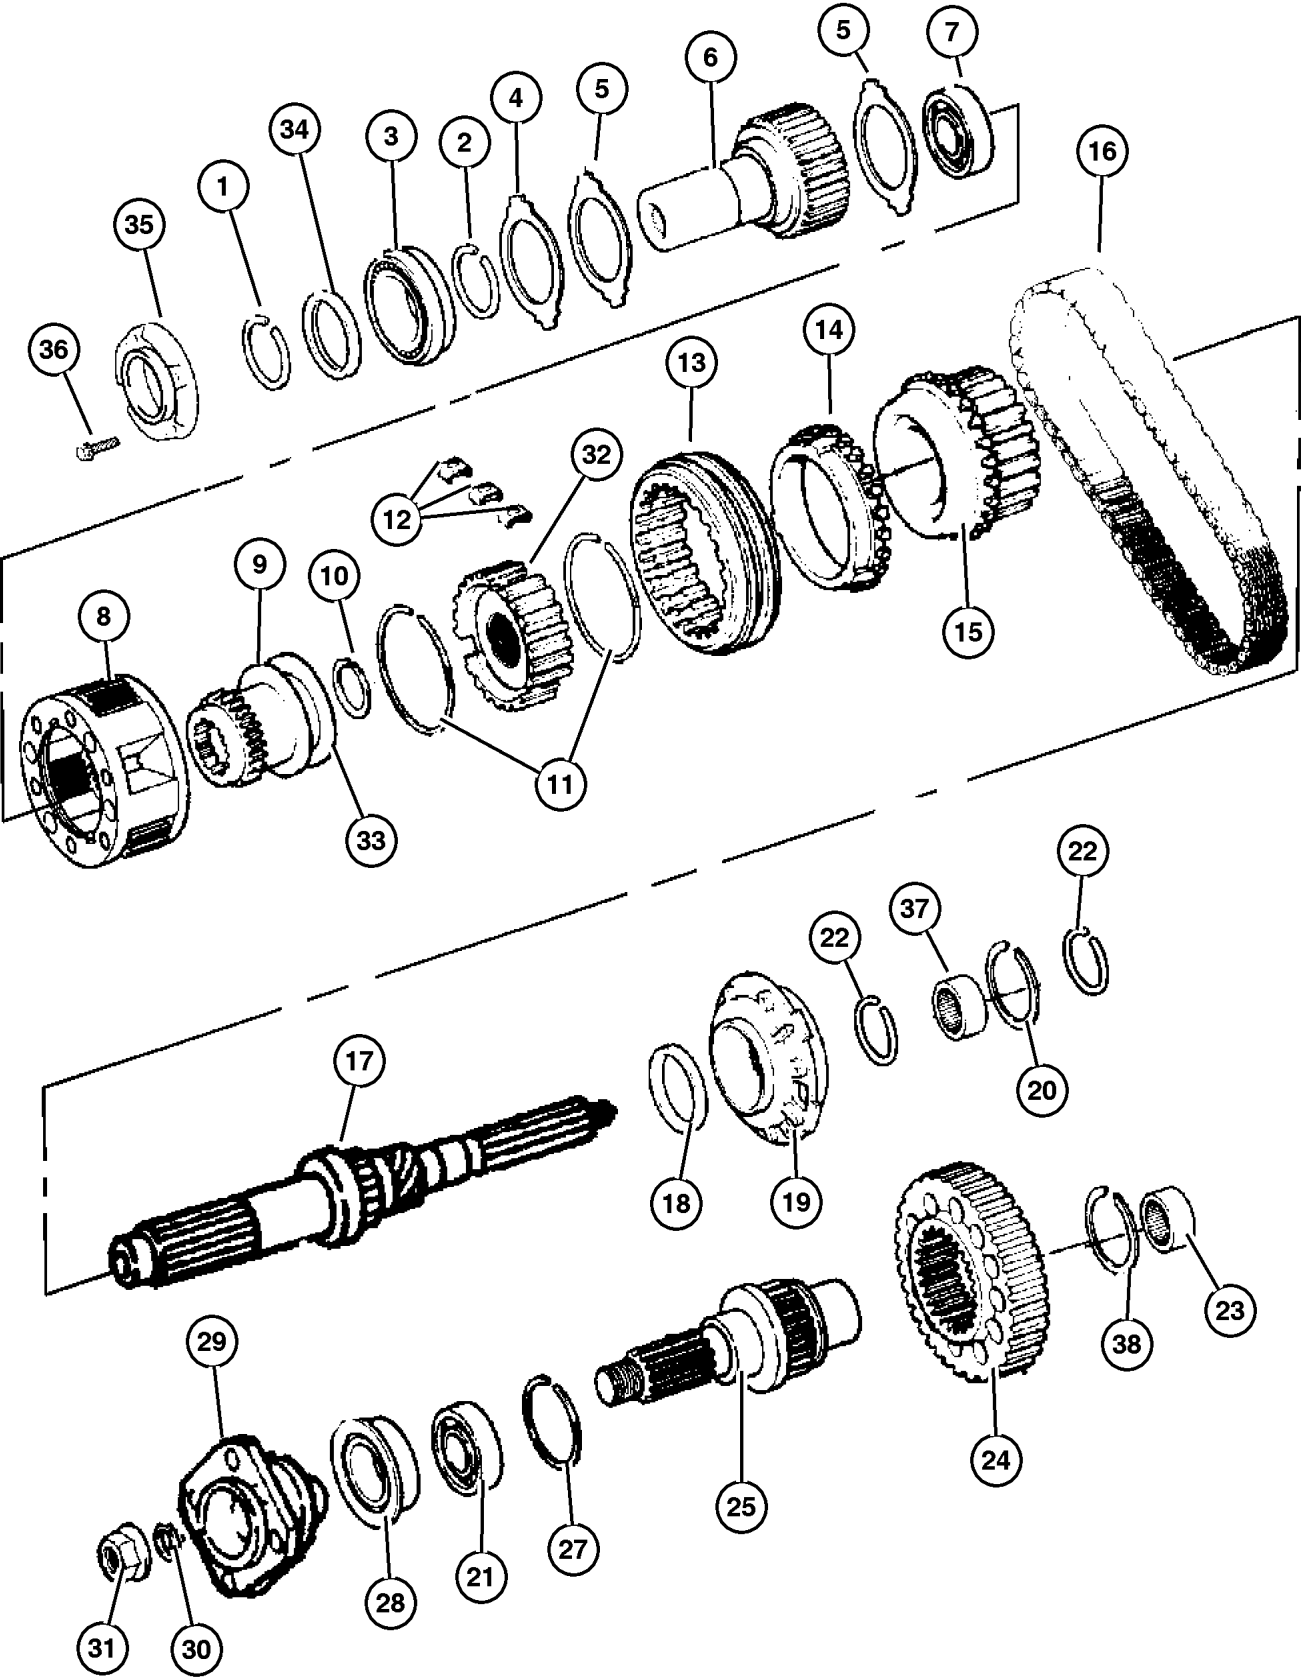September 16, 2005




Gear Train [DHH][DHG] Shift on the Fly
Figure 241-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4778 949	1	6, 7, 8				DG0		
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
	5086 052AA	1	6, 7, 8			EM0, ET0, EW0	DG0		Heavy Duty
		1	6, 7, 8			EM0	DDP		Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
18	4210 603	1	6, 7, 8				DG0		SEAL, Main Shaft
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
19	4338 936	1	6, 7, 8				DG0		PUMP, Transfer Case Oil
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
	4883 596AA	1	6, 7, 8			EM0	DDP		Heavy Duty
		1	6, 7, 8			EM0, ET0, EW0	DG0		Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
20	4856 643	1	6, 7, 8			EM0, ET0, EW0	DG0		SNAP RING, Output Bearing Heavy Duty Only
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty Only
		1	6, 7, 8			EM0	DDP		Heavy Duty Only
21	2466 224	1	6, 7, 8			EM0, ET0, EW0	DG0		BEARING, Output Shaft Heavy Duty


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

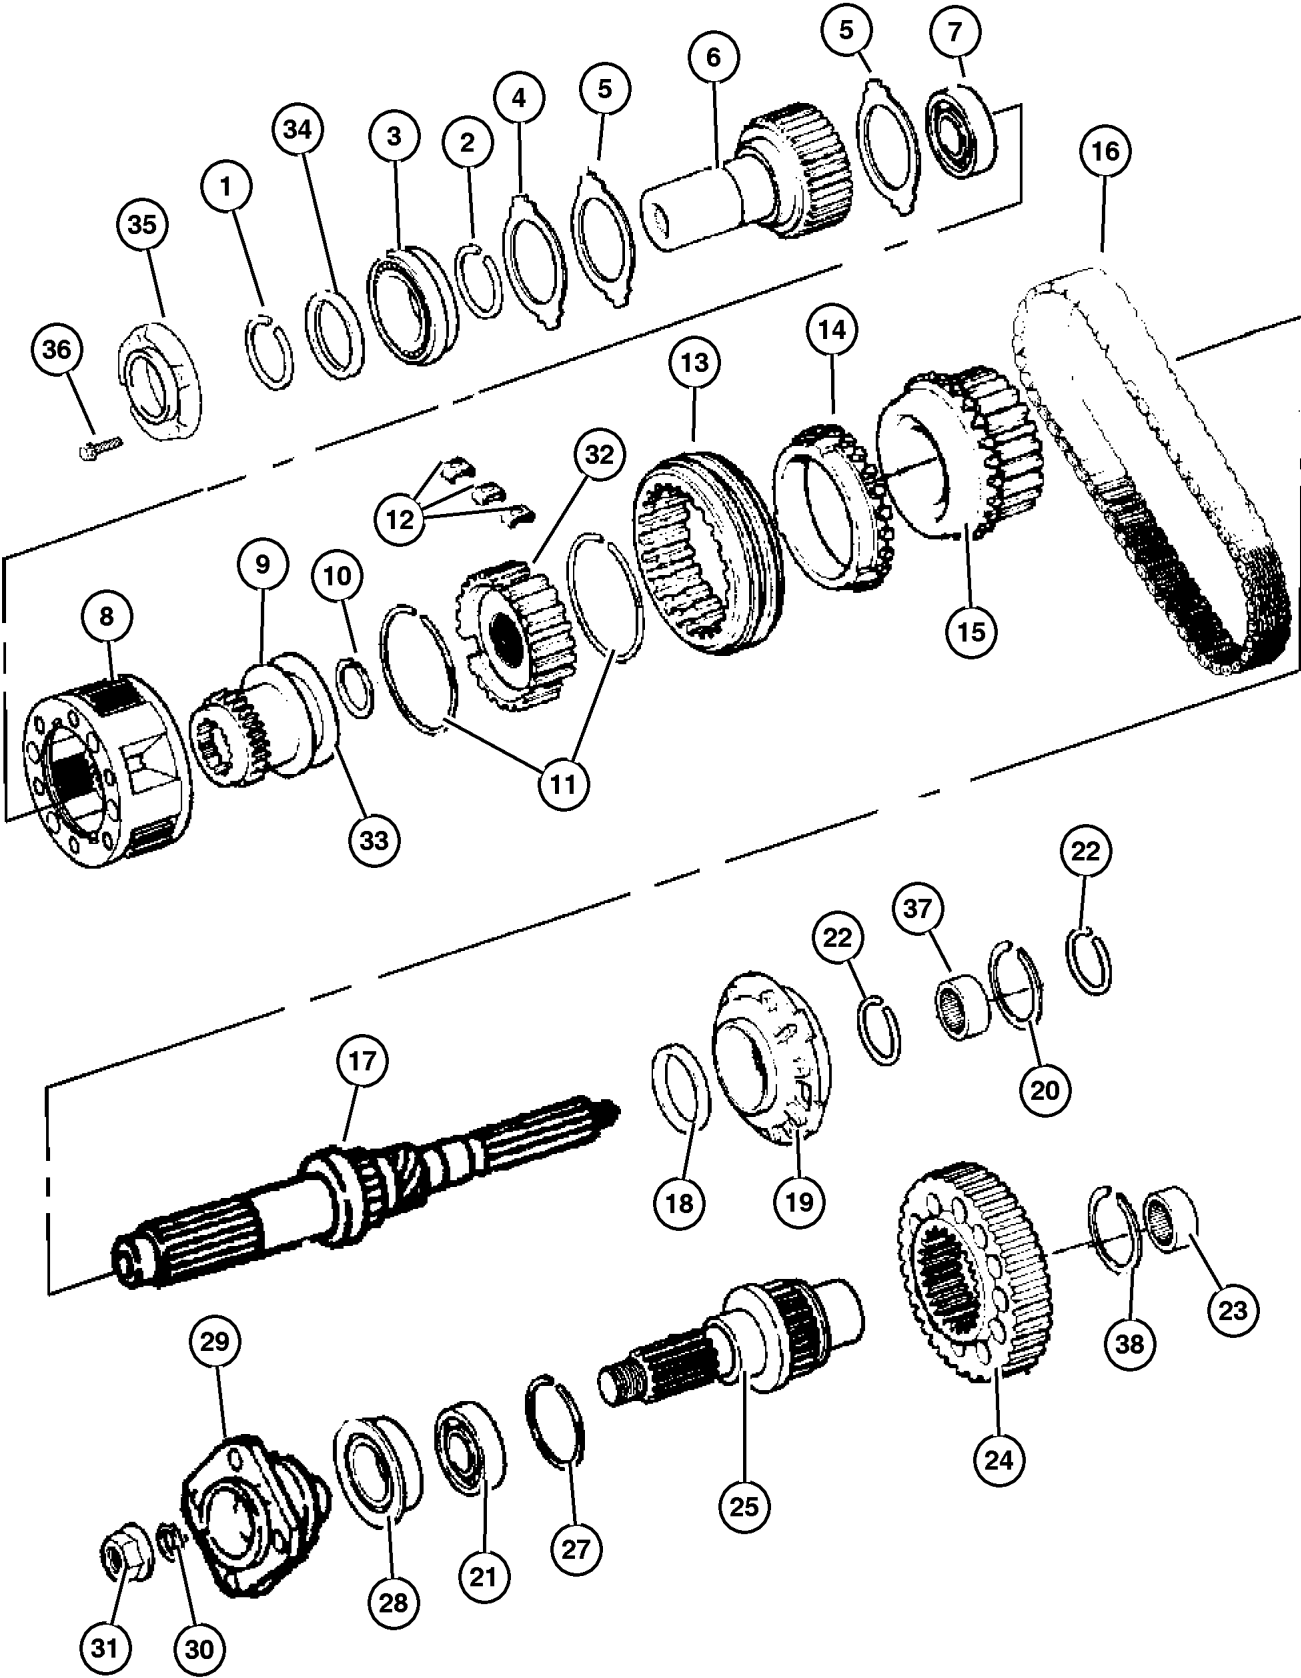September 16, 2005



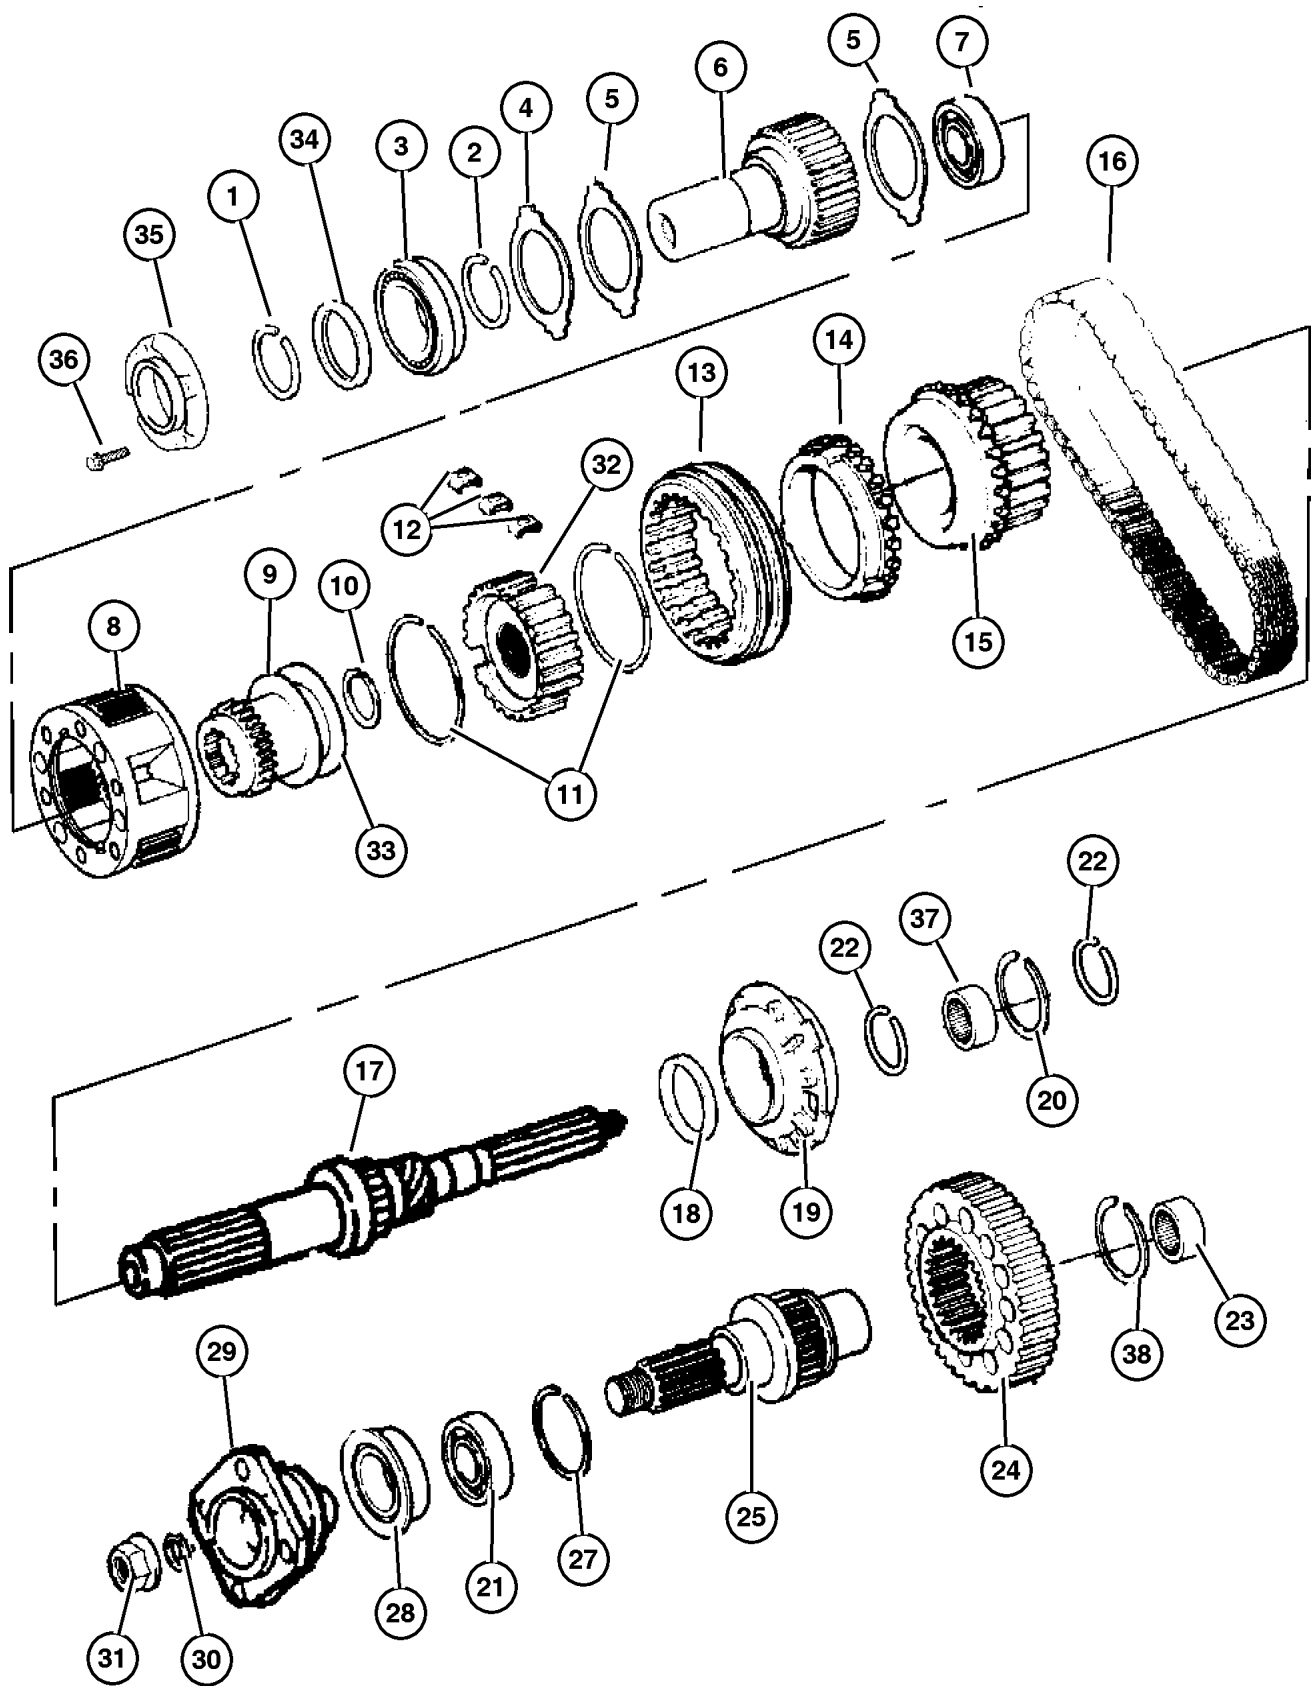Gear Train [DHH][DHG] Shift on the Fly
Figure 241-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0, EL0, EM0	DDP		Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE, DG0		
22		1	6, 7, 8						SNAP RING
	4883 597AA	2	6, 7, 8			EM0, ET0, EW0	DG0		Heavy Duty
		2	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
	4897 982AA	2	6, 7, 8			EM0, EL0, EM0	DDP		Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE, DG0		
23		1	6, 7, 8						BEARING, Output Shaft
	4269 189	1	6, 7, 8			EM0, ET0, EW0	DG0		Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0, EL0, EM0	DDP		Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE, DG0		
24		1	6, 7, 8						SPROCKET, Driven
	4746 145	1	6, 7, 8			EM0, ET0, EW0	DG0		Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		Heavy Duty

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

Gear Train [DHH][DHG] Shift on the Fly
Figure 241-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4746 259	1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE DG0		
25	8350 3517	1	6, 7, 8			EL0, EM0	DDP		OUTPUT SHAFT, Transfer Case
		1	6, 7, 8			ET0, EW0	DDX, DEE DG0		
-26	4746 146	1	6, 7, 8			EM0, ET0, EW0	DG0		SHAFT, Output Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
27	4167 991	1	6, 7, 8			EM0	DDP		Heavy Duty SNAP RING, Bearing Heavy Duty
		1	6, 7, 8			EM0, ET0, EW0	DG0		
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		Heavy Duty
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
28	4798 125	1	6, 7, 8			EM0, ET0, EW0	DG0		SEAL, Output Shaft Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE DG0		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Gear Train [DHH][DHG] Shift on the Fly
Figure 241-410

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
29	4897 983AA	1	6, 7, 8			EL0, EM0	DDP		YOKE, Transfer Case Output Heavy Duty
		1	6, 7, 8			EM0, ET0, EW0	DG0		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8			EM0	DDP		Heavy Duty
		1	6, 7, 8			EL0, EM0	DDP		Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE		
30	4210 973	1	6, 7, 8				DG0		WASHER, Transfer Case Yoke Heavy Duty
		1	6, 7, 8			EM0, ET0, EW0	DG0		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8			EM0	DDP		Heavy Duty
		1	6, 7, 8			EL0, EM0	DDP		Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE		
31	4167 924	1	6, 7, 8				DG0		NUT, Transfer Case Yoke Heavy Duty
		1	6, 7, 8			EM0, ET0, EW0	DG0		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8			EM0	DDP		Heavy Duty
		1	6, 7, 8			EL0, EM0	DDP		Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE		
32		1	6, 7, 8				DG0		HUB, Synchronizer
		1	6, 7, 8						

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Gear Train [DHH][DHG] Shift on the Fly
Figure 241-410


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4746 143	1	6, 7, 8			EM0, ET0, EW0	DG0		Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0 EL0, EM0	DDP		Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE DG0		
33	4746 129	1	6, 7, 8			ET0, EW0	DDX, DEE		SLEEVE, Range Fork Heavy Duty
	4797 013	1	6, 7, 8			EM0 EL0, EM0	DDP		Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE DG0		
	4897 955AA 4897 994AA	1 1	6, 7, 8 6, 7, 8			EM0, EM0	DG0		Heavy Duty
						ET0, EW0			
34	4167 929	1	6, 7, 8			EM0, ET0, EW0	DG0		SEAL, Input Gear Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1 1	6, 7, 8 6, 7, 8			EM0 EL0, EM0	DDP		Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE DG0		
35	4338 973	1	6, 7, 8			EM0, ET0, EW0	DG0		EXTENSION, Transfer Case Heavy Duty

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

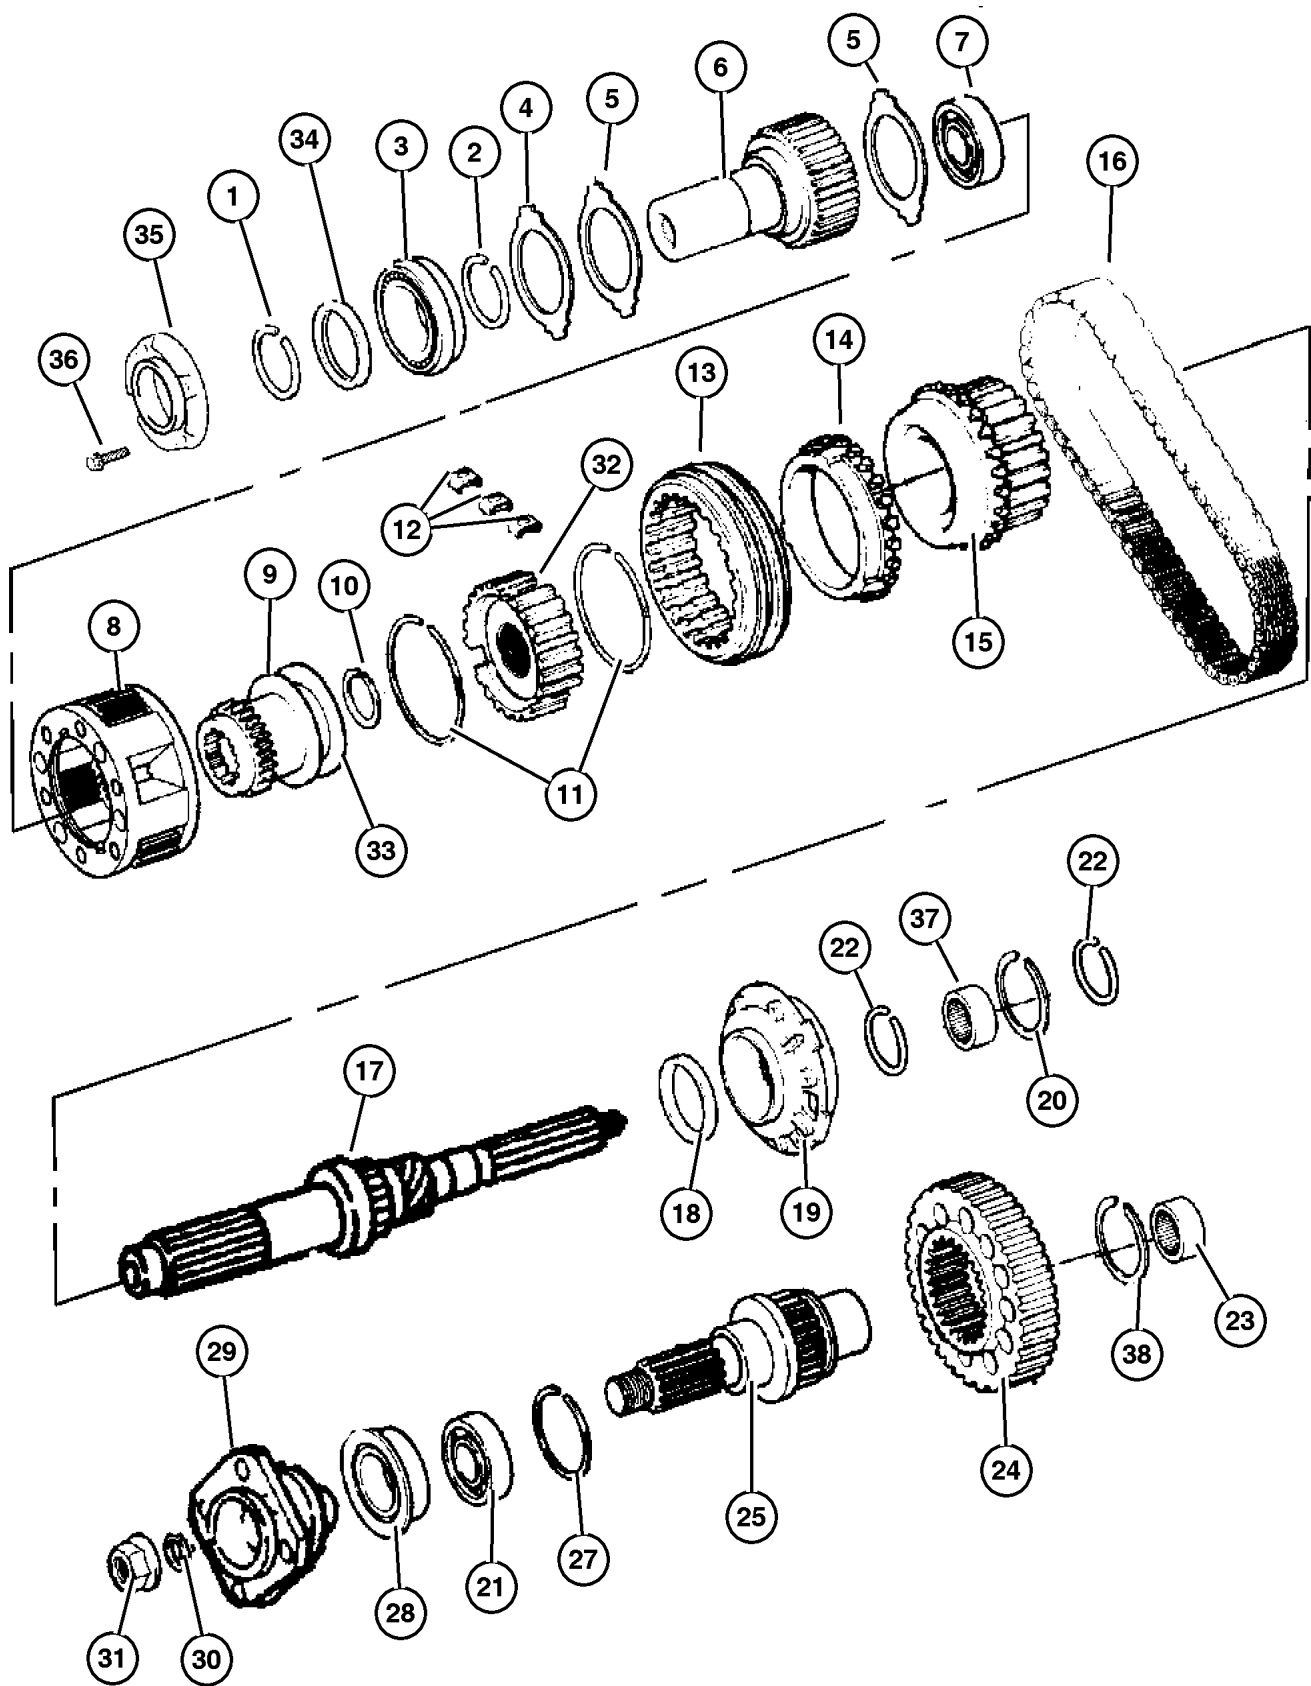Gear Train [DHH][DHG] Shift on the Fly
Figure 241-410




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		Heavy Duty
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8				DG0		
36	6500 318	4	6, 7, 8			EM0, ET0, EW0	DG0		BOLT Heavy Duty
		4	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		4	6, 7, 8			EM0 EL0, EM0	DDP DDP		Heavy Duty
		4	6, 7, 8			ET0, EW0			
		4	6, 7, 8				DG0		
37	4883 601AA	1	6, 7, 8			EM0, ET0, EW0	DG0		BEARING, Output Shaft Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
	4897 981AA	1	6, 7, 8			EM0 EL0, EM0	DDP DDP		Heavy Duty
		1	6, 7, 8				DG0		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
38	4167 991	1	6, 7, 8			EM0, ET0, EW0	DG0		SNAP RING, Bearing Heavy Duty
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		Heavy Duty

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

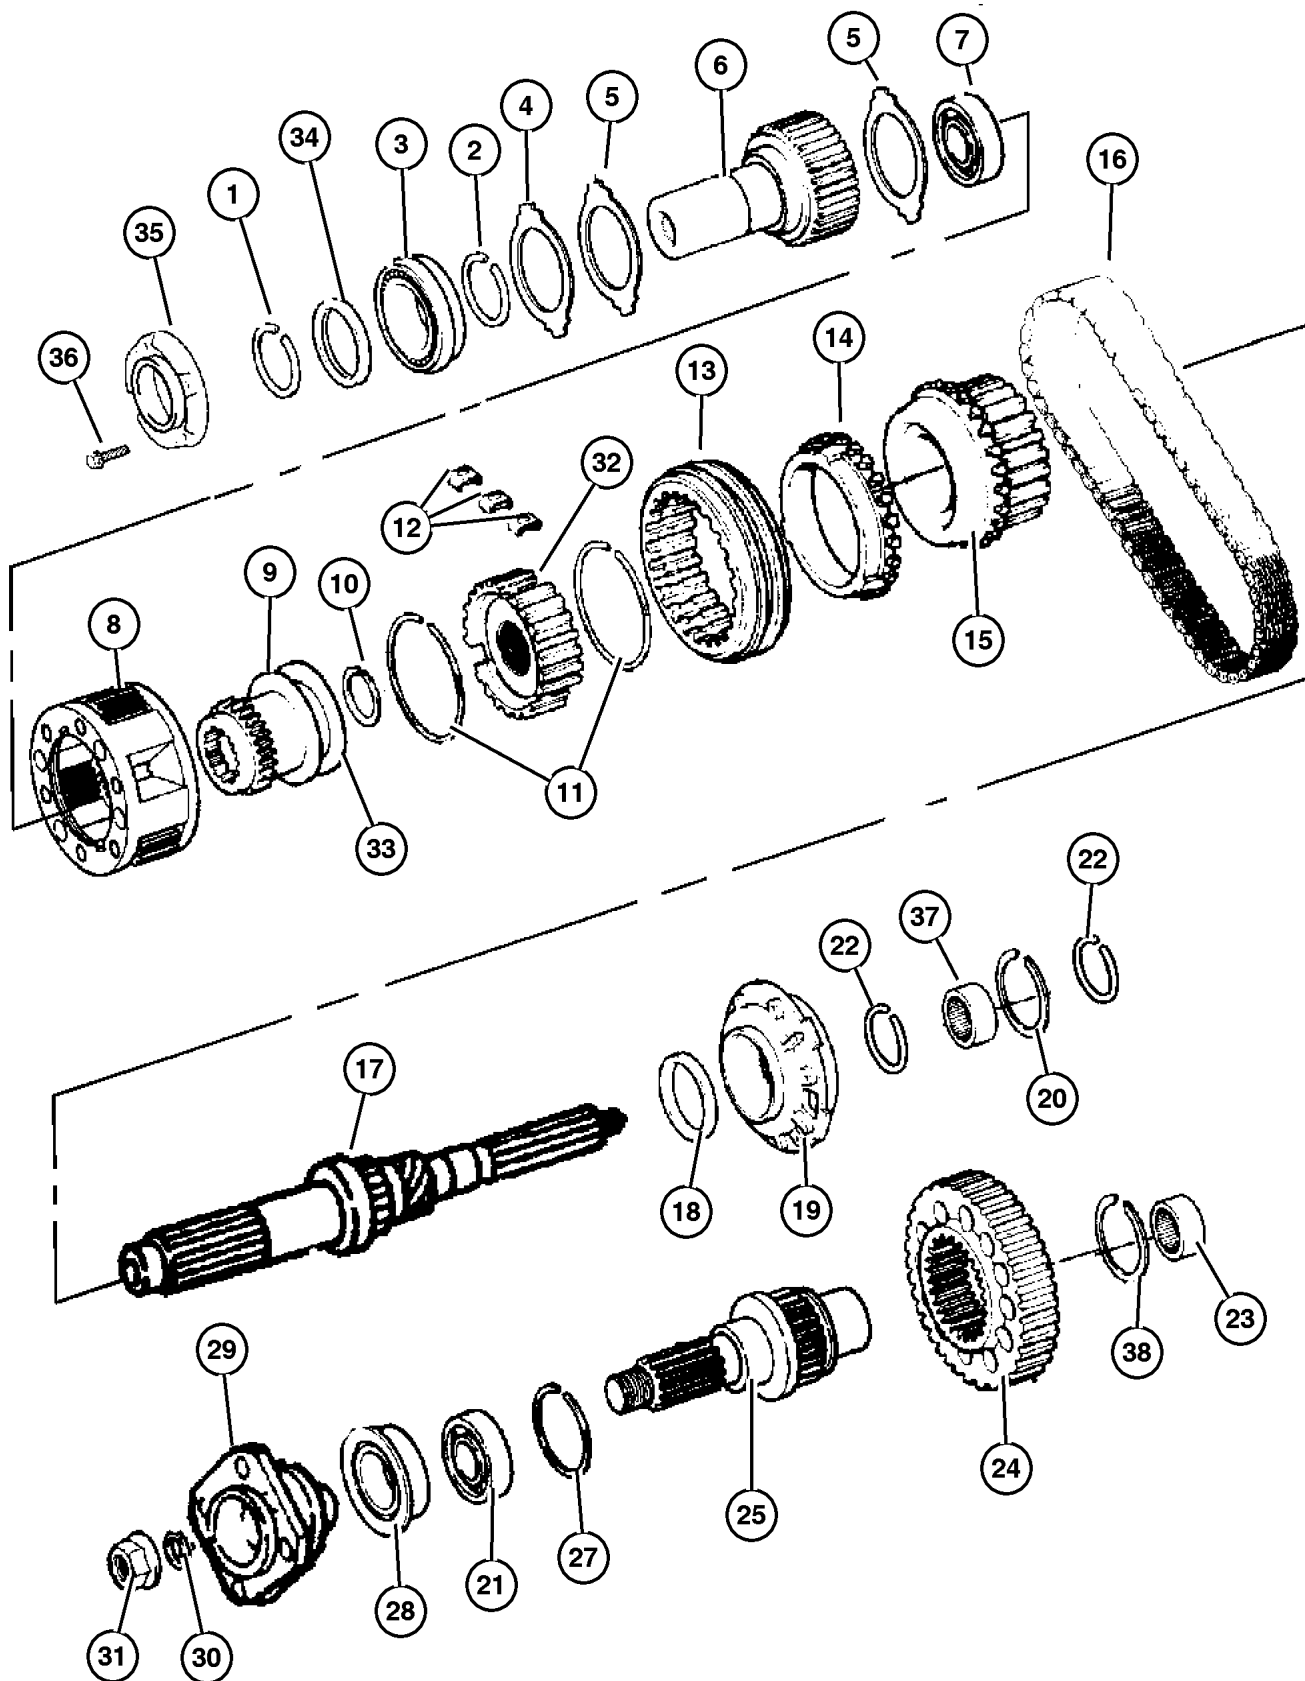Figure 241-410




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	6, 7, 8			EL0,	DDP		
						EM0			
		1	6, 7, 8			ET0,	DDX,		
						EW0	DEE		
		1	6, 7, 8				DG0		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

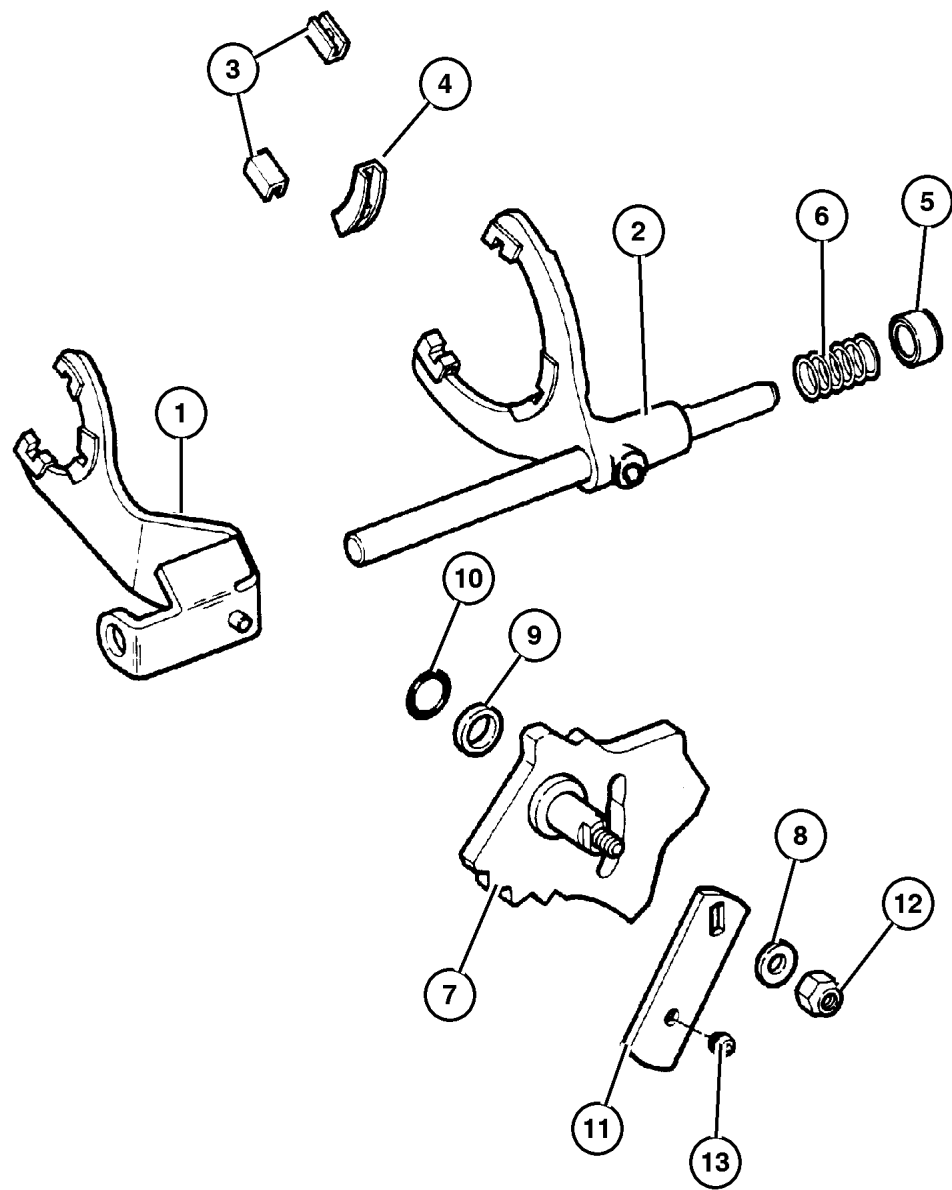Forks [DHH][DHG] Shift on the Fly
Figure 241-910



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

NOTES: Sales Codes
[DDP] = 5 Speed Manual Transmission
[DDX] = 5 Speed Heavy Duty Manual Transmission
[DEE] = 6 Speed Heavy Duty Manual Transmission
[DG0] = All Automatic Transmissions
[EL0] = All 5.2L 8 Cylinder Gas Engines
[EM0] = All 5.9L 8 Cylinder Gas Engines
[ET0] = All 5.9L Turbo Diesels
[EW0] = All 8.0L Gas Engines


1	4798 136	1	6, 7, 8			EM0, ET0, EW0	DG0		FORK, Range
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0,	DDP		
		1	6, 7, 8			EM0 ET0, EW0	DDX, DEE		
		1	6, 7, 8				DG0		
2	4746 136	1	6, 7, 8			EM0, ET0, EW0	DG0		FORK, Mode
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0,	DDP		
		1	6, 7, 8			EM0 ET0, EW0	DDX, DEE		
		1	6, 7, 8				DG0		
3	4167 969	2	6, 7, 8			EM0, ET0, EW0	DG0		PAD, Shift Fork
		2	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		2	6, 7, 8			EM0	DDP		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

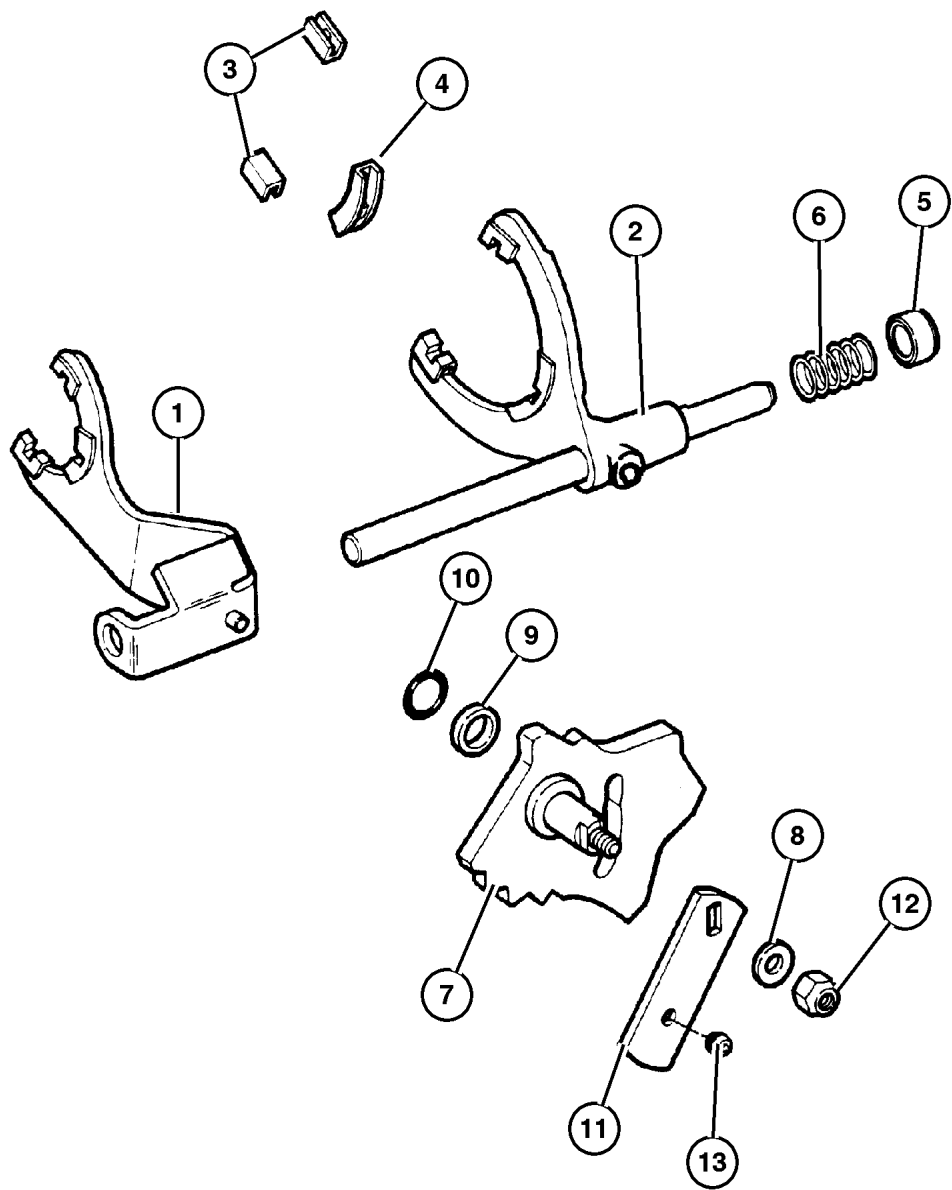Forks [DHH][DHG] Shift on the Fly
Figure 241-910




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		2	6, 7, 8			EL0,	DDP		
		2	6, 7, 8			EM0 ET0, EW0			
		2	6, 7, 8				DG0		
4	4746 140	1	6, 7, 8			EM0, ET0, EW0	DG0		PAD, Shift Fork
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0,	DDP		
		1	6, 7, 8			EM0 ET0, EW0	DDX, DEE		
		1	6, 7, 8				DG0		
5	8350 3515	1	6, 7, 8			EM0, ET0, EW0	DG0		CUP, Shift Fork Spring
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0,	DDP		
		1	6, 7, 8			EM0 ET0, EW0	DDX, DEE		
		1	6, 7, 8				DG0		
6	0013 816	1	6, 7, 8			EM0, ET0, EW0	DG0		SPRING, Mode Fork
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8				DG0		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

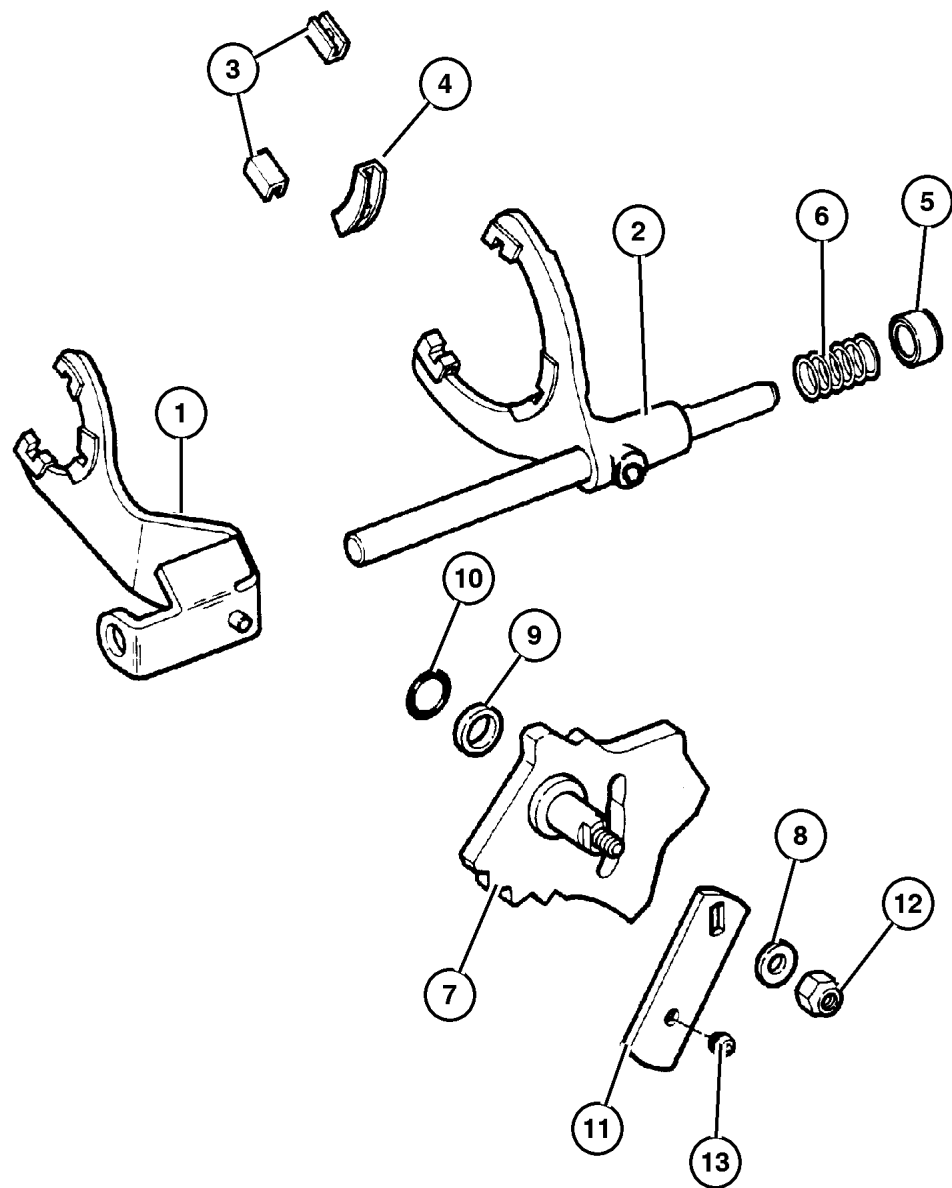Forks [DHH][DHG] Shift on the Fly
Figure 241-910




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
7	4897 962AA	1	6, 7, 8			EM0	DDP		SECTOR, Transfer Case
		1	6, 7, 8			EM0, ET0, EW0	DG0		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8			EW0	DG0		
8									WASHER, (NOT SERVICED) (Not Serviced)
9	4167 964	1	6, 7, 8			EM0, ET0, EW0	DG0		SEAL, O-Ring
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8			EW0	DG0		
		1	6, 7, 8			EM0, ET0, EW0	DG0		
10	4167 963	1	6, 7, 8			ET0, EW0	DDX, DEE		SEAL, O-Ring
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8			EW0	DG0		
		1	6, 7, 8			EM0, ET0, EW0	DG0		
11		1	6, 7, 8			ET0, EW0	DDX, DEE		LEVER, Transfer Case
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8			EW0	DG0		
		1	6, 7, 8			EM0, ET0, EW0	DG0		
		1	6, 7, 8			ET0, EW0	DDX, DEE		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

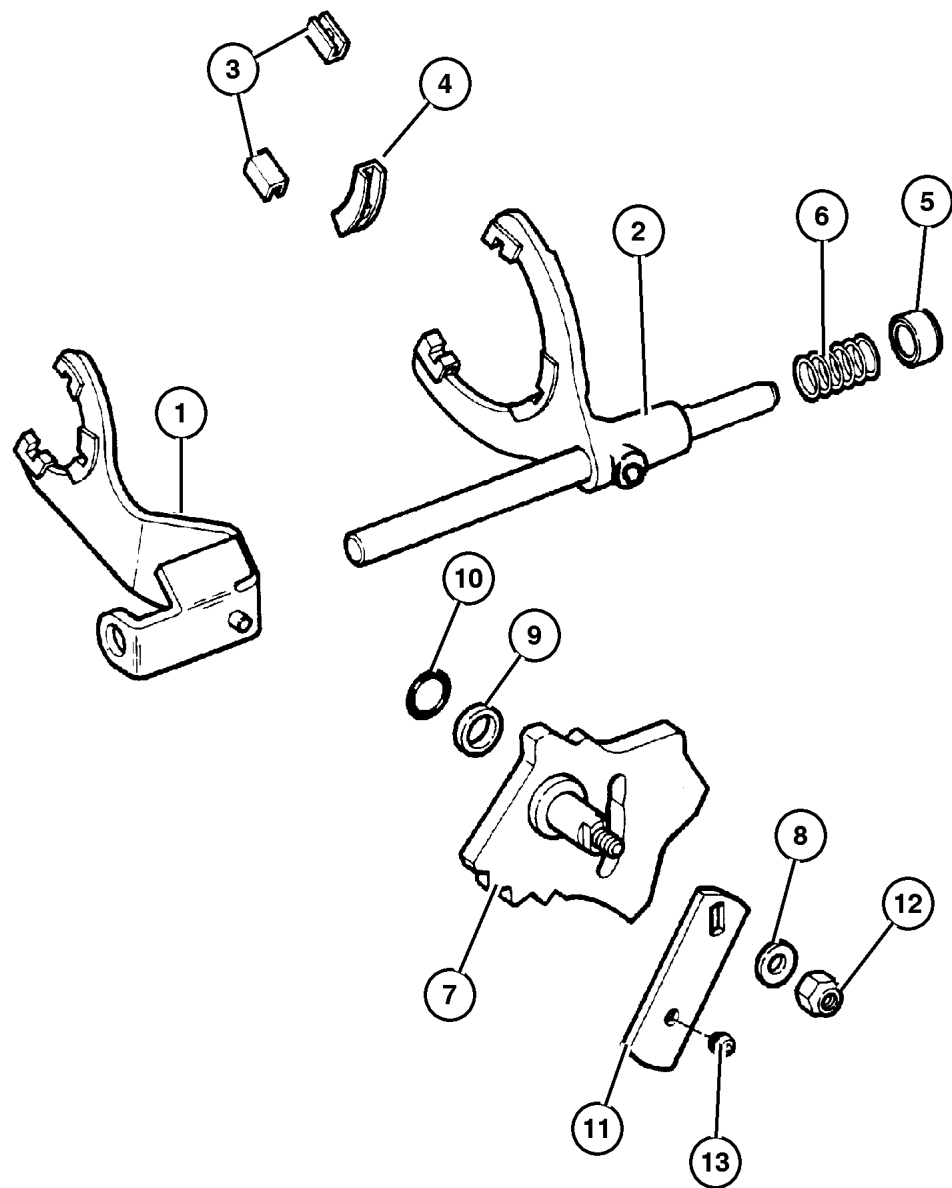Forks [DHH][DHG] Shift on the Fly
Figure 241-910




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4897 959AA	1	6, 7, 8			EM0,	DG0		
		1	6, 7, 8			ET0, EW0			
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
12		1	6, 7, 8				DG0		NUT
	0152 345	1	6, 7, 8			EM0,	DG0		
		1	6, 7, 8			ET0, EW0			
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
13		1	6, 7, 8				DG0		GROMMET, Shift Lever
	3467 791	1	6, 7, 8			EM0,	DG0		
		1	6, 7, 8			ET0, EW0			
		1	6, 7, 8			ET0, EW0	DDX, DEE		Heavy Duty
		1	6, 7, 8			EM0	DDP		
		1	6, 7, 8			EL0, EM0	DDP		
		1	6, 7, 8			ET0, EW0	DDX, DEE		
		1	6, 7, 8				DG0		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

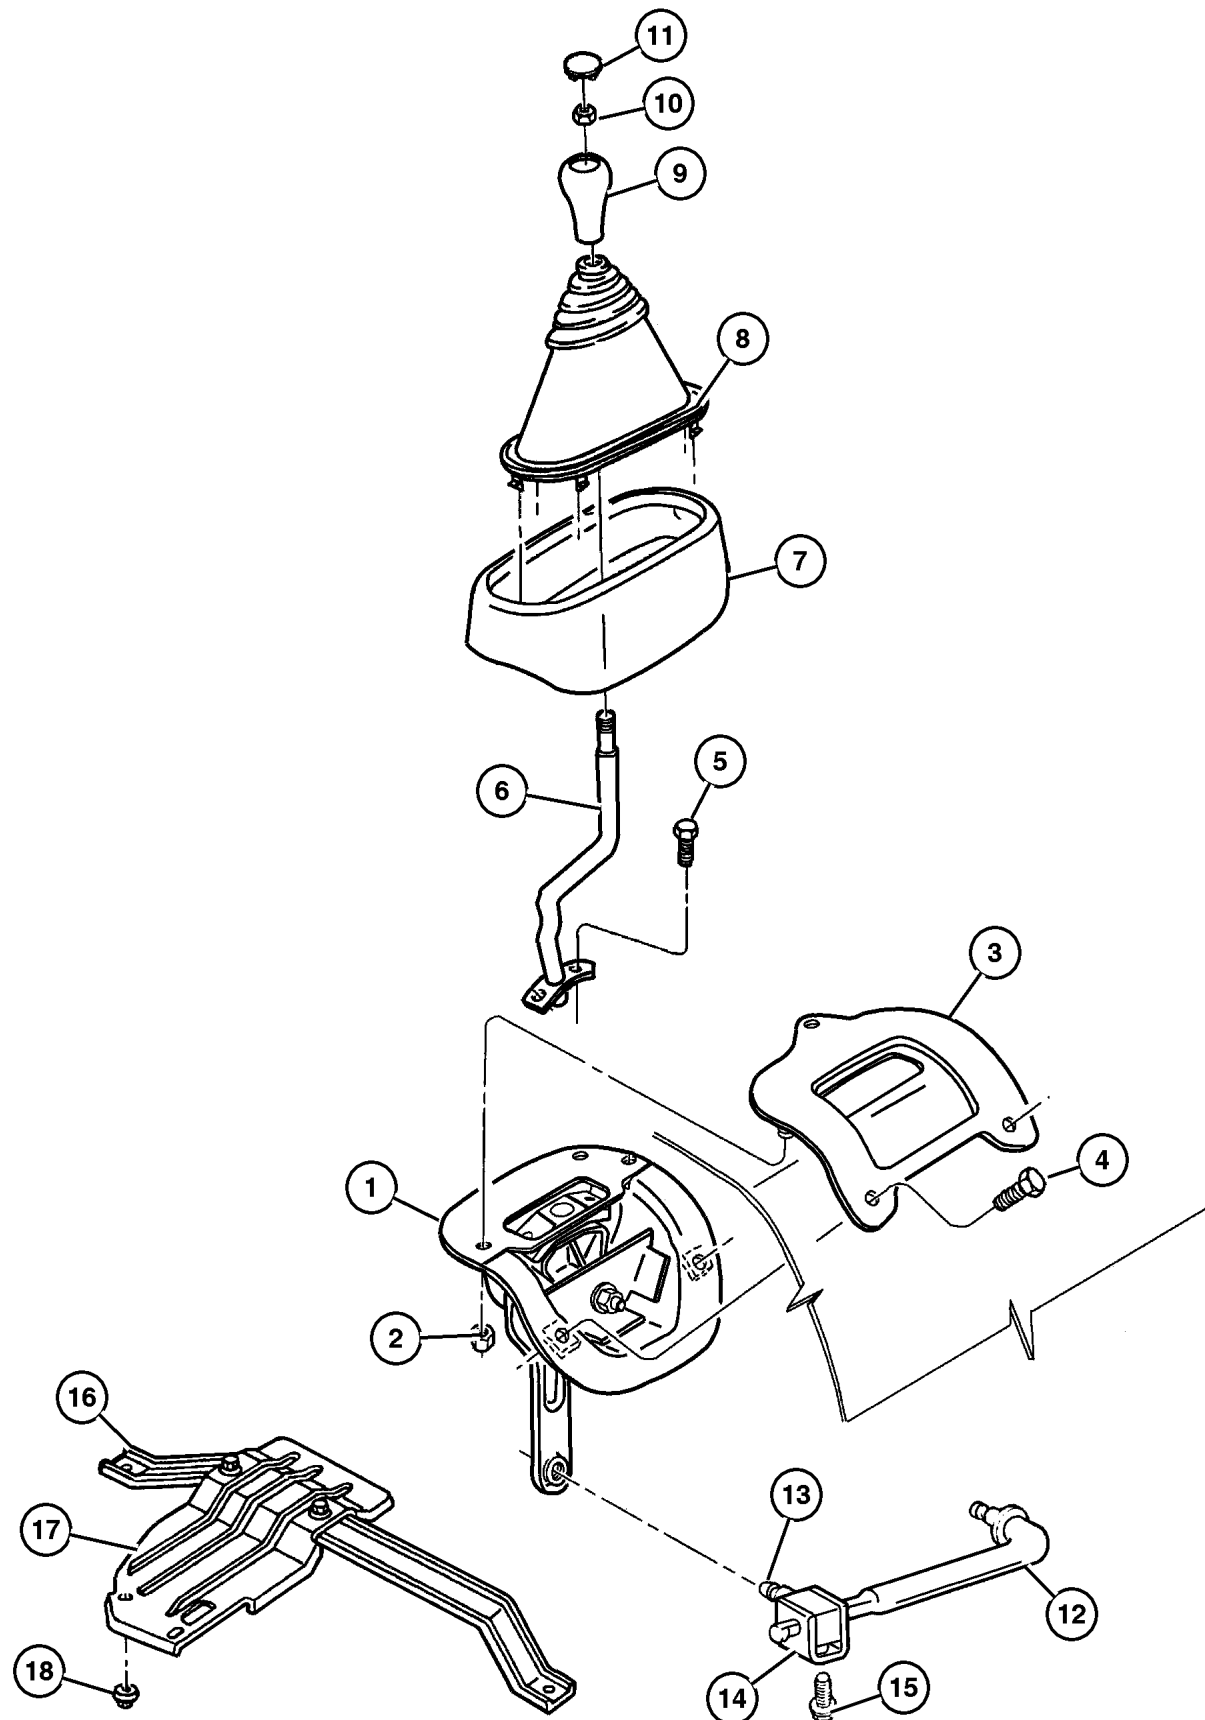Controls [DHH][DHG] Shift on the Fly Figure 241-1210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTES: Sales Codes									
[DDP] = 5 Speed Manual Transmission									
[DDX] = 5 Speed Heavy Duty Manual Transmission									
[DEE] = 6 Speed Heavy Duty Manual Transmission									
[DG0] = All Automatic Transmissions									
[EL0] = All 5.2L 8 Cylinder Gas Engines									
[EM0] = All 5.9L 8 Cylinder Gas Engines									
[ET0] = All 5.9L Turbo Diesels									
[EW0] = All 8.0L Gas Engines									
1	52105 214AE	1	6, 7, 8						SHIFTER, Transfer Case
2	6101 467	1	6, 7, 8						NUT, Hex Flange, M8x1.25
3	52105 216AB	1	6, 7, 8						RING
4	6502 064	2	6, 7, 8						SCREW, Tapping, M6x1x20
5	6101 727	2	6, 7, 8						BOLT, Hex Head
6	5210 5005	1	6, 7, 8						LEVER, Transfer Case
7									BEZEL, Transfer Case
	5FB39 LAZAB	1	6, 7, 8				DG0		AGATE
	5FB39 RC8AB	1	6, 7, 8				DG0		DARK CIRUS
	5FB39 VK9AB	1	6, 7, 8				DG0		DARK SUEDE
8	52105 059AB	1	6, 7, 8						BOOT, Gearshift
9	5210 4174	1	6, 7, 8						KNOB, Gearshift
10	6502 556	1					DBB		NUT, Hex, M10-1.5
11	5210 5001	1							INSERT, Gearshift Knob
12									ROD, Gear Shift Control, Transfer Case
	5210 5006	1					DDC, DG0		
	5210 5213	1					DEE		
13	3467 790	1					DDC, DG0		SWIVEL, Gearshift Control Rod
14	4377 309	1					DDC, DG0		CLAMP, Shift Rod
15	0181 086	1							BOLT, Hex Head, .312-18x.75
16	52020 357AA	1	6, 7, 8						CROSSMEMBER, Skid Plate
17	52058 674AC	1	6, 7, 8						SKID PLATE, Front
18	6101 340	2	6, 7, 8						U-NUT, M10-1.50

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Group – 022

Wheels, Covers and Jacks

GROUP 22 - Wheels, Covers and Jacks

Illustration Title

Group-Fig. No.

Wheels and Hardware

Wheels And Hardware

Wheel Covers and Center Caps

Caps And Covers, Wheel

Jack Stowage

Jack And Stowage

Spare Tire Stowage

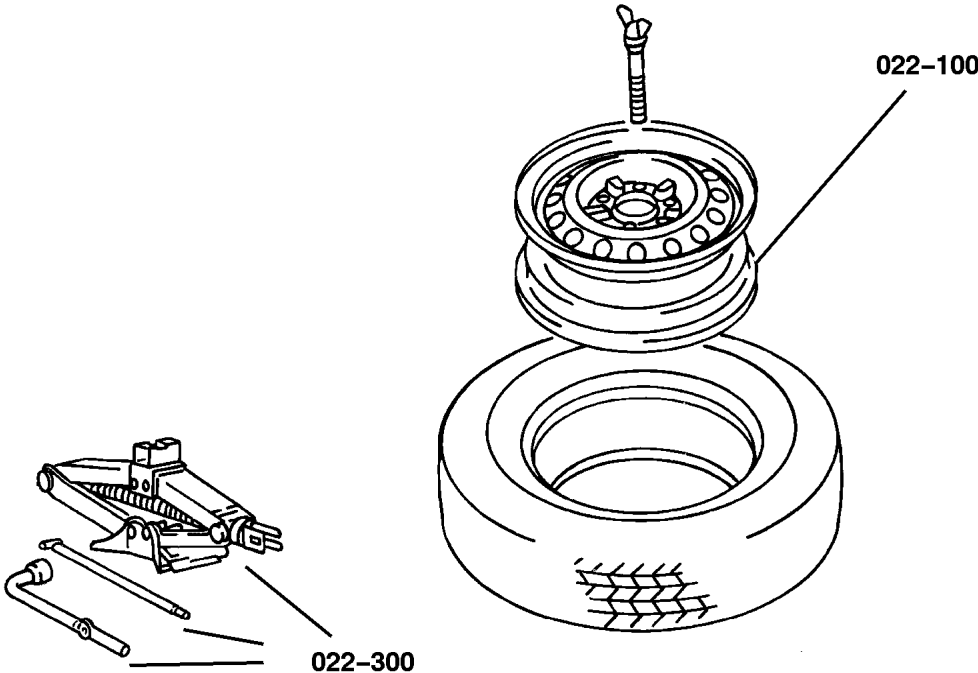
Wheel, Spare Underslung Mounting


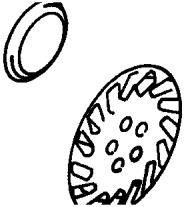
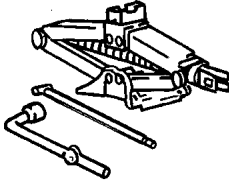
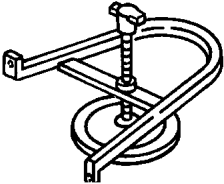
Fig. 022-130

Fig. 022-230


Fig. 022-340

Fig. 022-430



<div>022-100</div> <div>Wheels and Hardware</div> <div></div>	<div>022-200</div> <div>Wheel Covers and Center Caps</div> <div></div>	<div>022-300</div> <div>Jack Stowage</div> <div></div>	<div>022-400</div> <div>Spare Tire Stowage</div> <div></div>
--	---	--	---

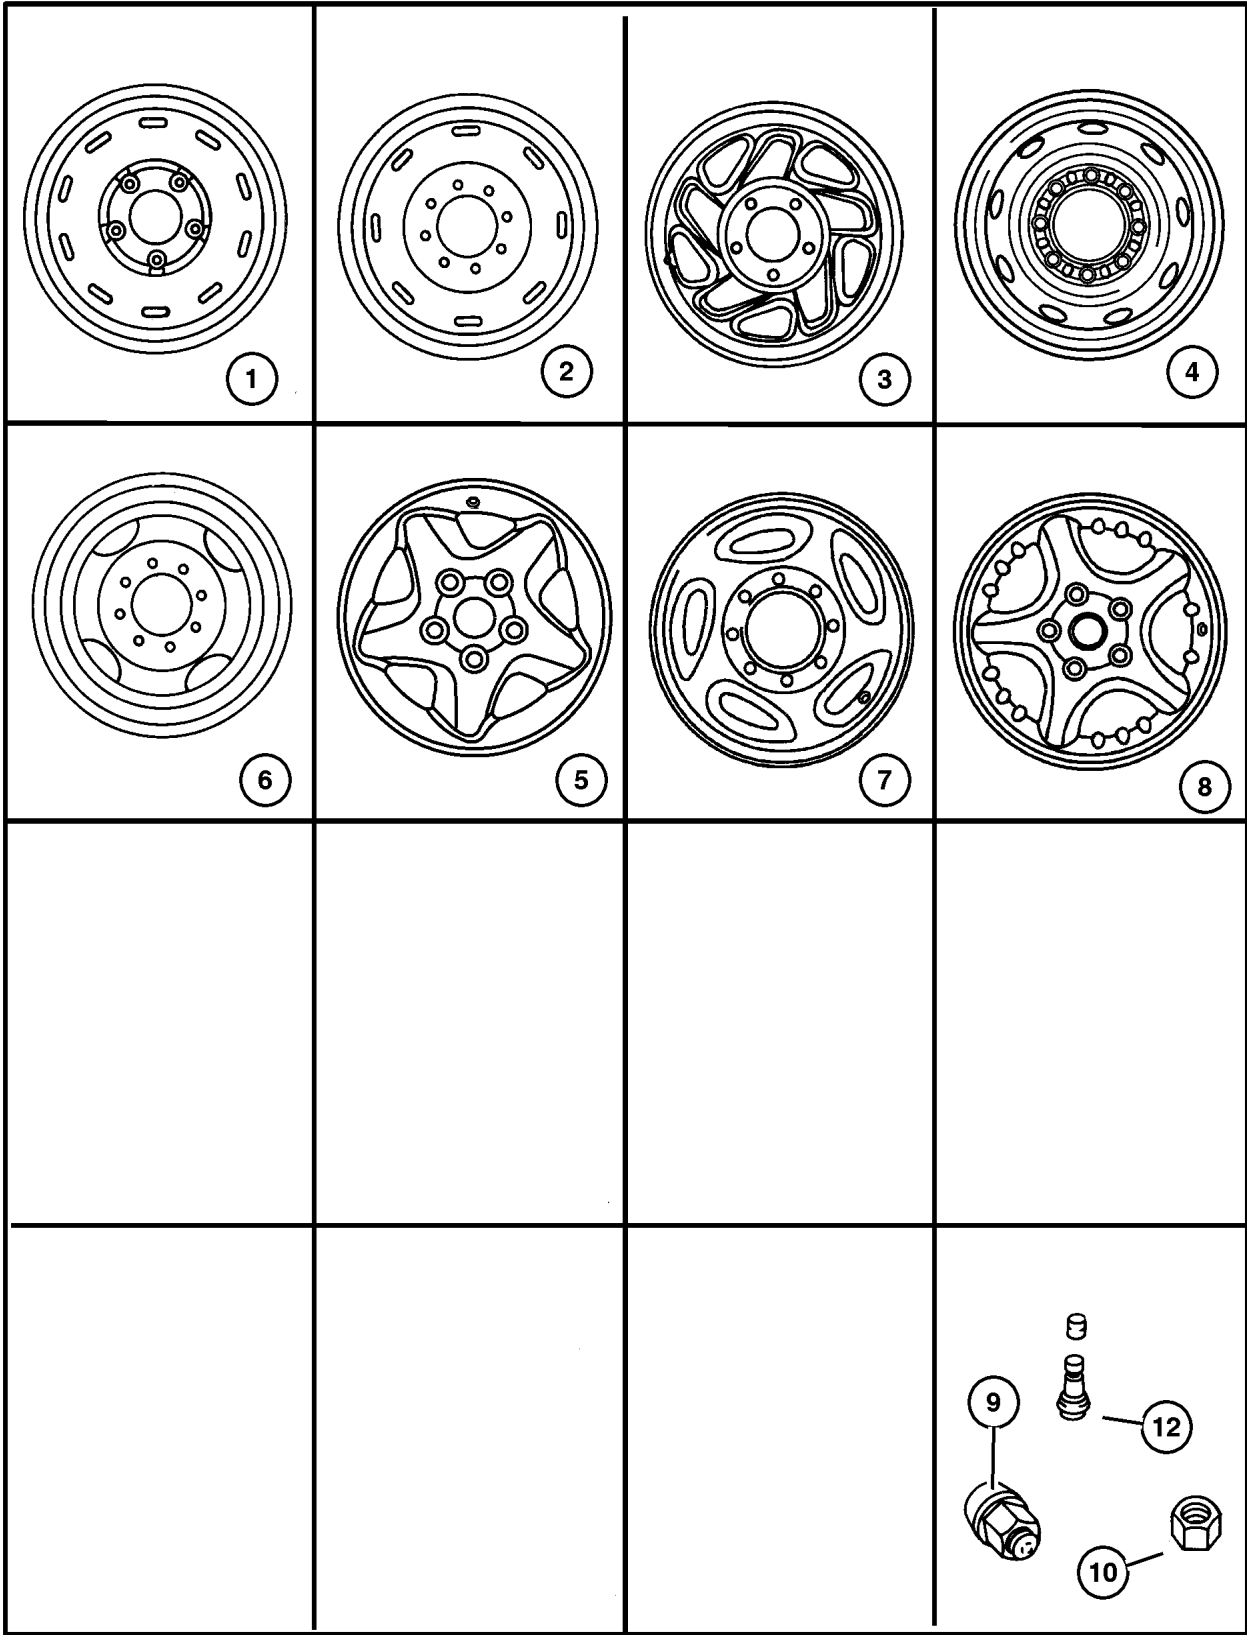Wheels And Hardware
Figure 022-130




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
WDK = Wheels - 16 x 7 Steel/Bright Trim Ring									
WDV = Wheels - 16 x 7.5 Steel, 8 Lug									
WDZ = Wheels - 16 x 8.0 Forged Aluminum									
WD5 = Wheels - 16 x 7.0 Cast Aluminum									
WV = Wheels - 17 x 8.0 Aluminum									
WND = Wheels - 16 x 7.0 Cast Aluminum									
1	5FS04 S4AAC	4	1, 6						WHEEL, Steel, 16x7, WDK
2	52113 156AA	1	3, 8		34				WHEEL, Steel, WDW, Spare
3	52057 938AB	4	1, 6						WHEEL, Steel, WDB, 16x7, Chrome
4	5GE66 S4AAA	4	2, 7		33, 34				WHEEL, Steel, WDV, 16x7.5, Argent
5	5EK53 PAKAC	4	1, 6						WHEEL, Aluminum, WND, 16x7, Cast Aluminum
6	5HC75 PAKAA	4	1, 6						WHEEL, Aluminum, WD5, 16x7, Cast Aluminum
7	52106 367AA	4	2, 7						WHEEL, Aluminum, WDZ, 16x8, Forged Aluminum
8	5GL88 PAKAA	4	6						WHEEL, Aluminum, WV, 17x8, Cast Aluminum
9	J400 6956	20	1, 6						NUT, Wheel, .50x20
10	6034 726	32	3, 8		34				NUT, Hex Flange, .56-18, with WDW wheel
-11	6034 727	32	2, 7						NUT, Hex, .516-18, with WDV,WDZ
12	2073 355	4	1, 6						STEM, Wheel Valve
		4	1, 6						1.25
	2530 153	2	3, 8		34				1.50
	52057 949AB	4	2, 3, 7, 8		33, 34				
		2	3, 8		34				

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

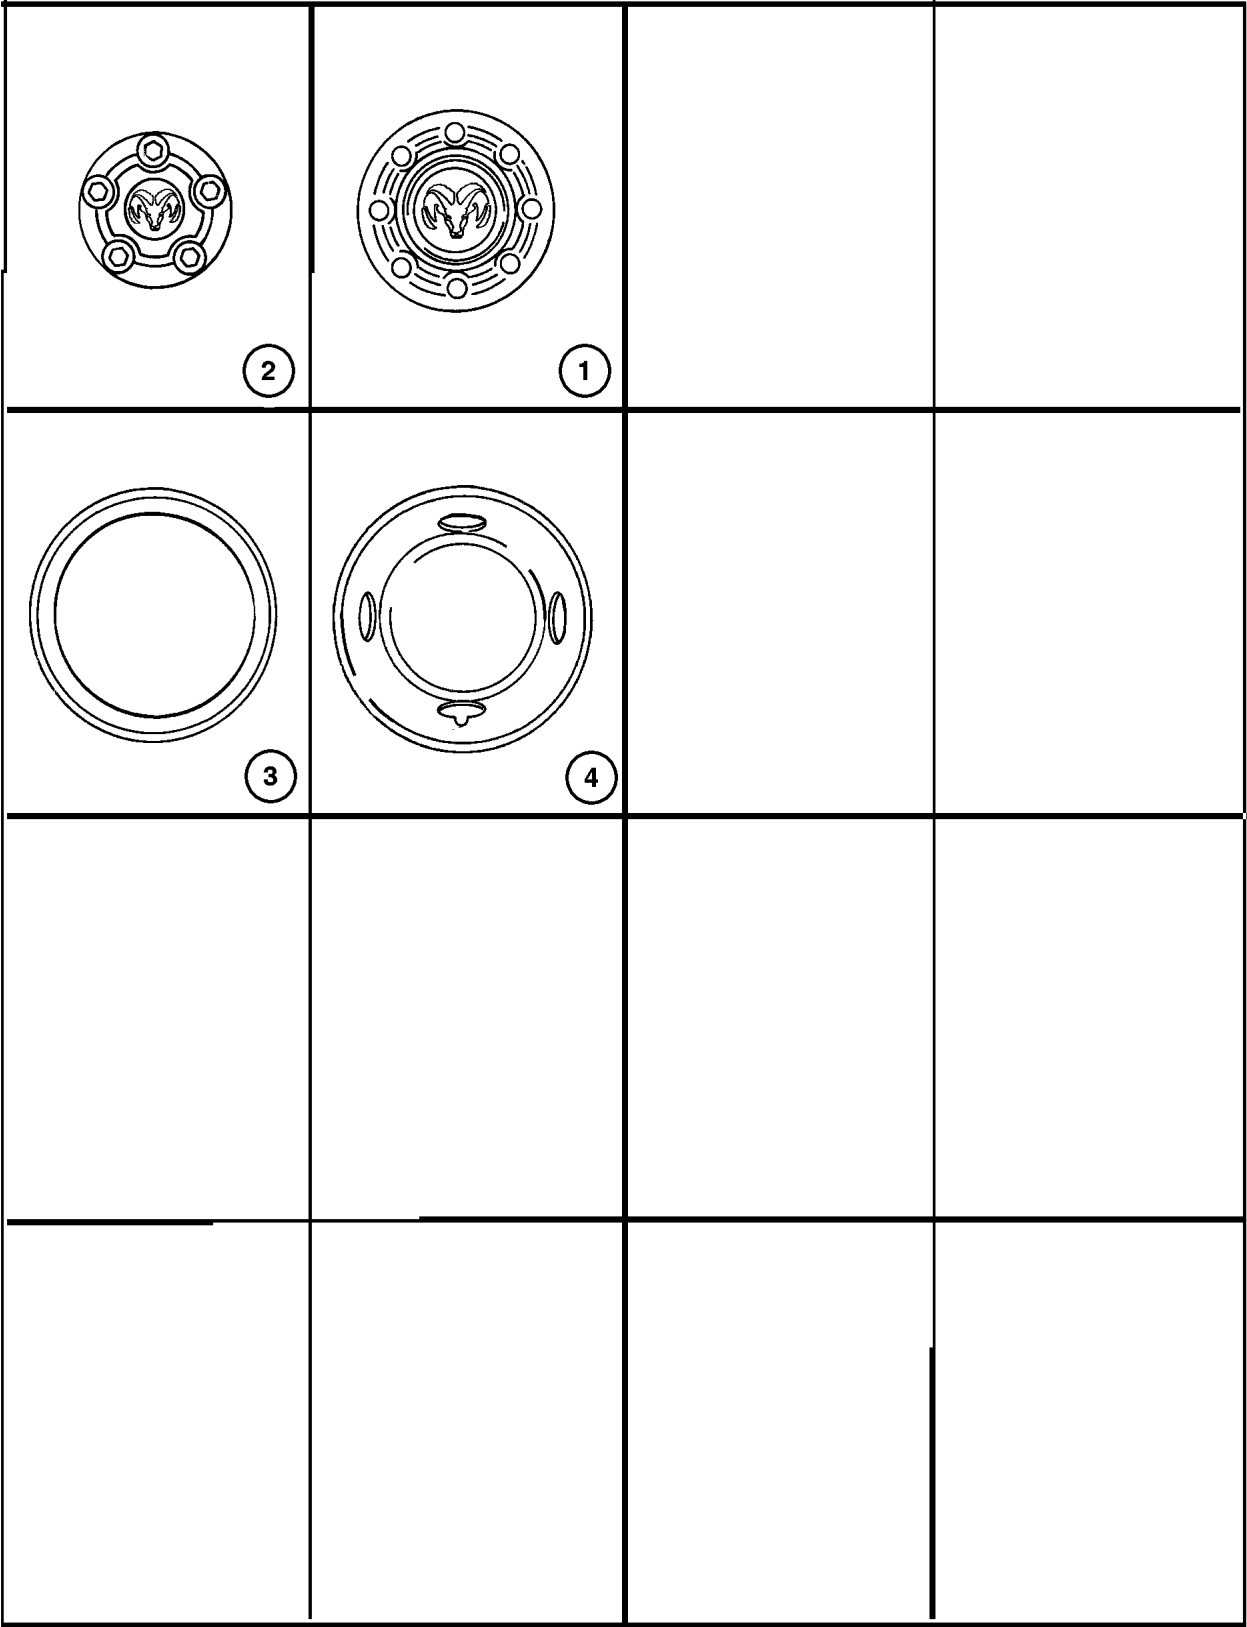Caps And Covers, Wheel
Figure 022-230



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

WDS = Wheels - 16 x 7.0 Forged Aluminum

WDZ = Wheels - 16 x 8.0 Forged Aluminum

WMC = Trim Rings - Bright

WND = Wheels - 16 x 7.0 Cast Aluminum

1	4753 123	4	1, 6						CAP, Wheel Center [WND,WFV]
	5203 9098	1	2, 7		33, 34				[WDZ]
		4	2, 7		33, 34				[WMJ]
	5203 8267	4	1, 6						[WMJ,WDB]
2	5203 8915	4	1, 6						CAP, Wheel Center, Chrome [WDS,WDX]
		4	1, 6						[WD5,WMJ]
3	5205 8200	4	1, 2, 6, 7						RING, Wheel Trim, 16", [WMC]
4	52106 448AB	2	3, 8		34				COVER, Wheel, 16" Front
	52106 449AA	2	3, 8		34				Rear
-5									CAP, Wheel Center, Chrome, with Dual Wheels
	52106 863AA-	2	3, 8		34				[WDW,WMG,WMJ], Front
	52106 866AA-	2	3, 8		34				[WDW,WMG,WMJ], Rear
	52106 283AA-	4	2, 7		33, 34				[WMJ,WDV]


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

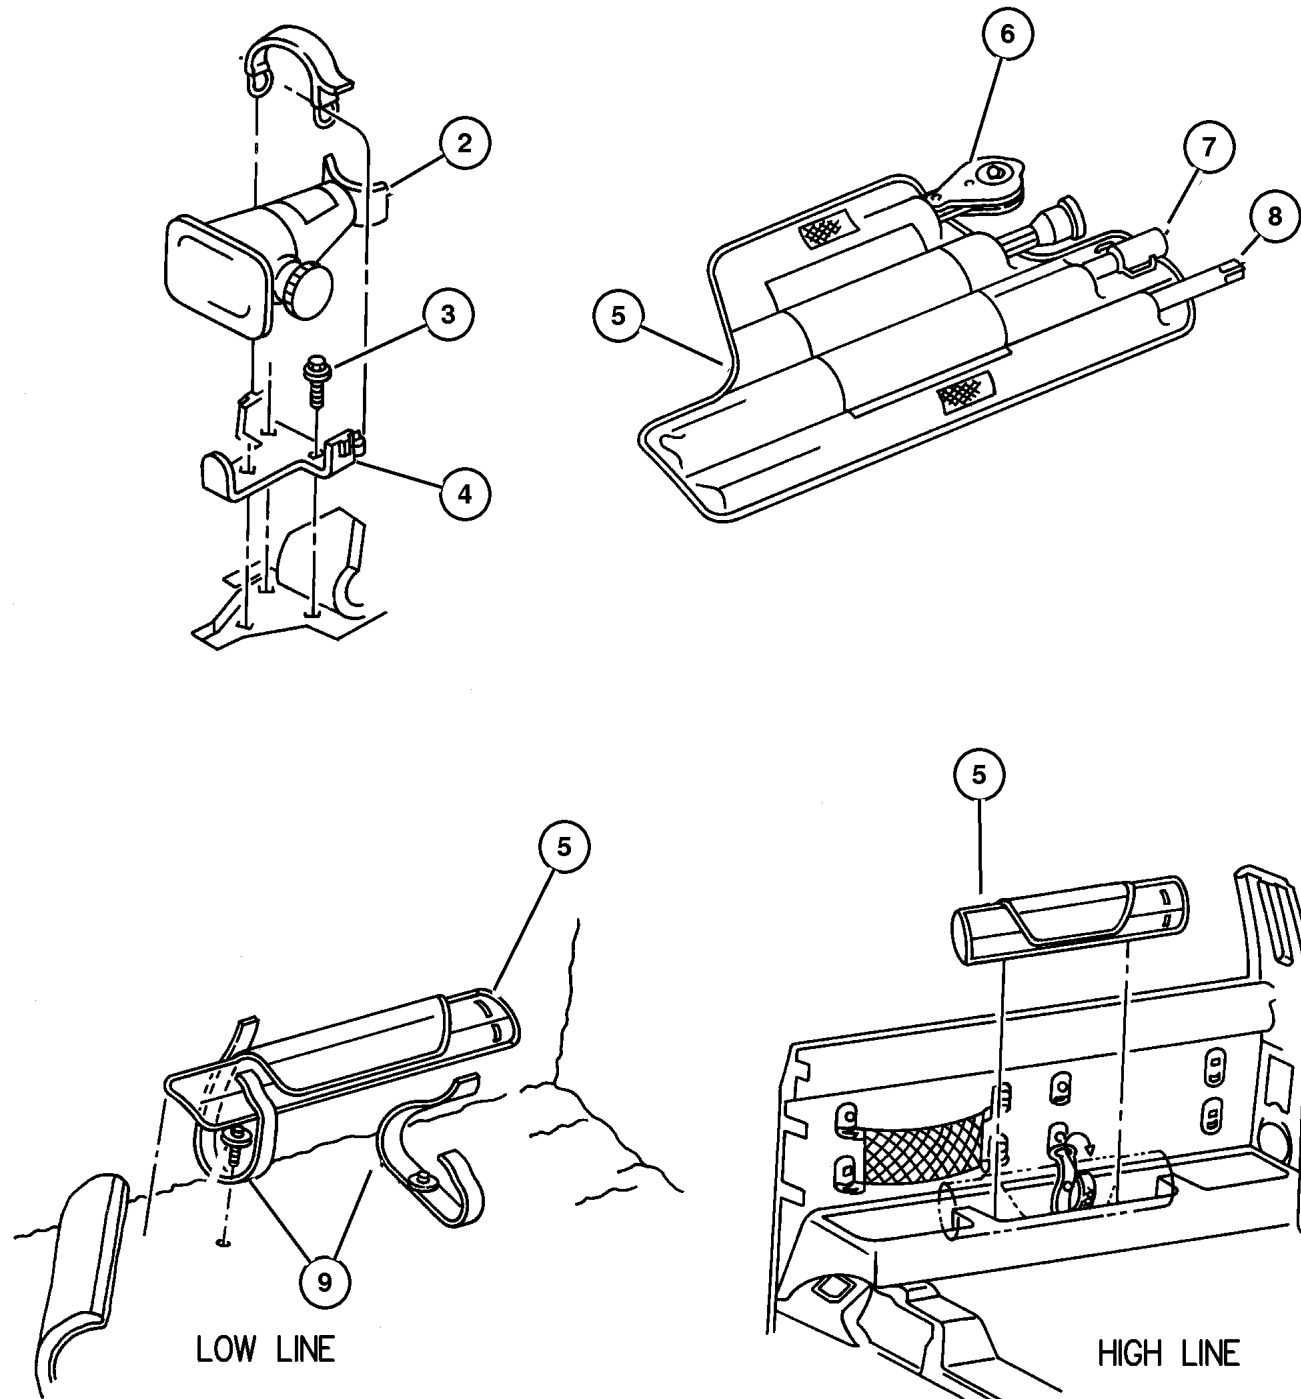Jack And Stowage Figure 022-340

[illegible]

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE

$$\begin{aligned} 1, 6 &= 1500 \\ 2, 7 &= 2500 \\ 3, 8 &= 3500 \end{aligned}$$

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines


TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

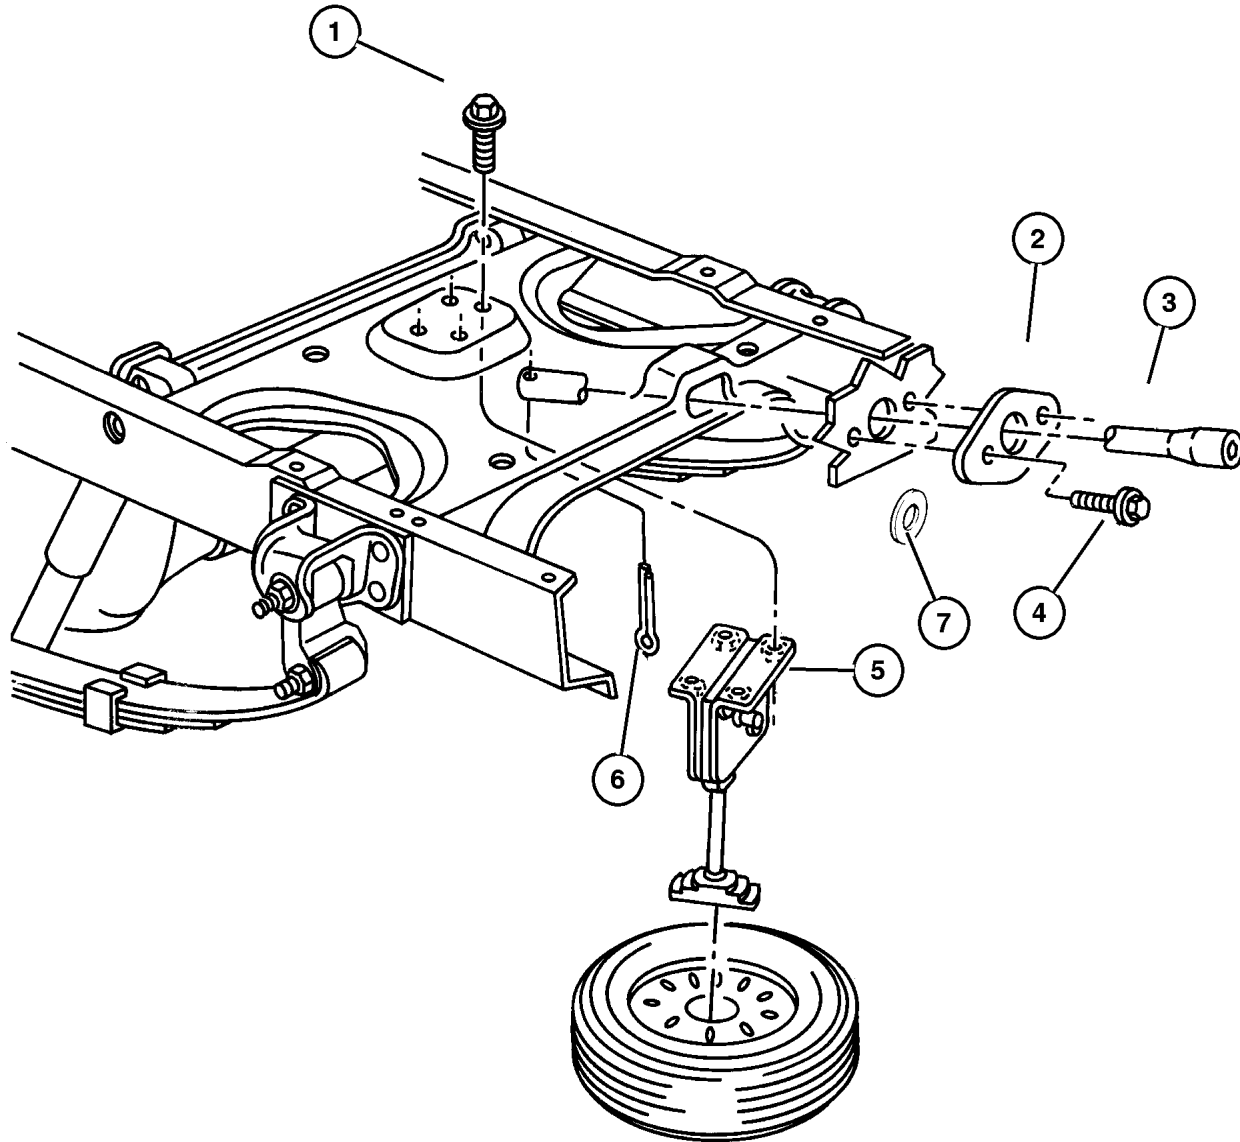Figure 022-430



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	6100 295	4							SCREW AND WASHER, Hex Head, M8x1.25x20
2									GROMMET, Spare Tire Winch Tube w/Tire Carrier Winch
	5201 9948	1							w/o Tire Carrier Winch
	5205 8402	1							
3									TUBE, Winch Actuator w/Tire Carrier Winch
	5201 9996	1			34				w/Tire Carrier Winch
	52019 997AB	1	1, 2, 6, 7		31, 33				w/Tire Carrier Winch
4									SCREW, Pan Head, .164-18x.50, (NOT SERVICED) (Not Serviced)
5	5205 8707	1							WINCH, Spare Tire Carrier
6									PIN, Cotter, (NOT SERVICED) (Not Serviced)
7									GROMMET, Spare Tire Winch Tube w/Tire Carrier Winch
	5201 9948	1							w/o Tire Carrier Winch
	5205 8402	1							

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year


September 16, 2005



Group – 23D

Wiper/Lock Cylinder and Keys


GROUP 23D - Wiper/Lock Cylinder and Keys

Illustration Title	Group-Fig. No.
Lock Cylinders and Keys	
Lock Cylinders and Components	Fig. 23D-110
Windshield Wiper and Washer Systems	
Windshield Wiper and Washer	Fig. 23D-230

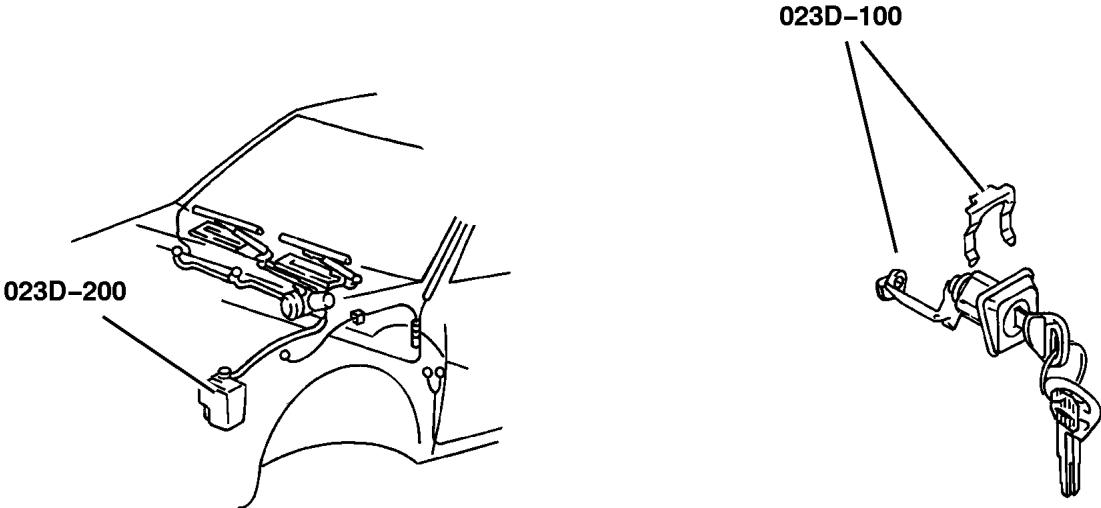
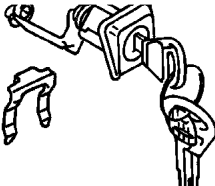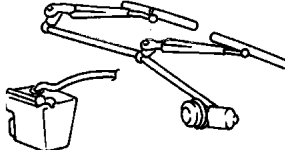
<div>23D-100</div> <div>Lock Cylinders and Keys</div> <div></div>	<div>23D-200</div> <div>Windshield Wiper and Washer Systems</div> <div></div>		
--	--	--	--

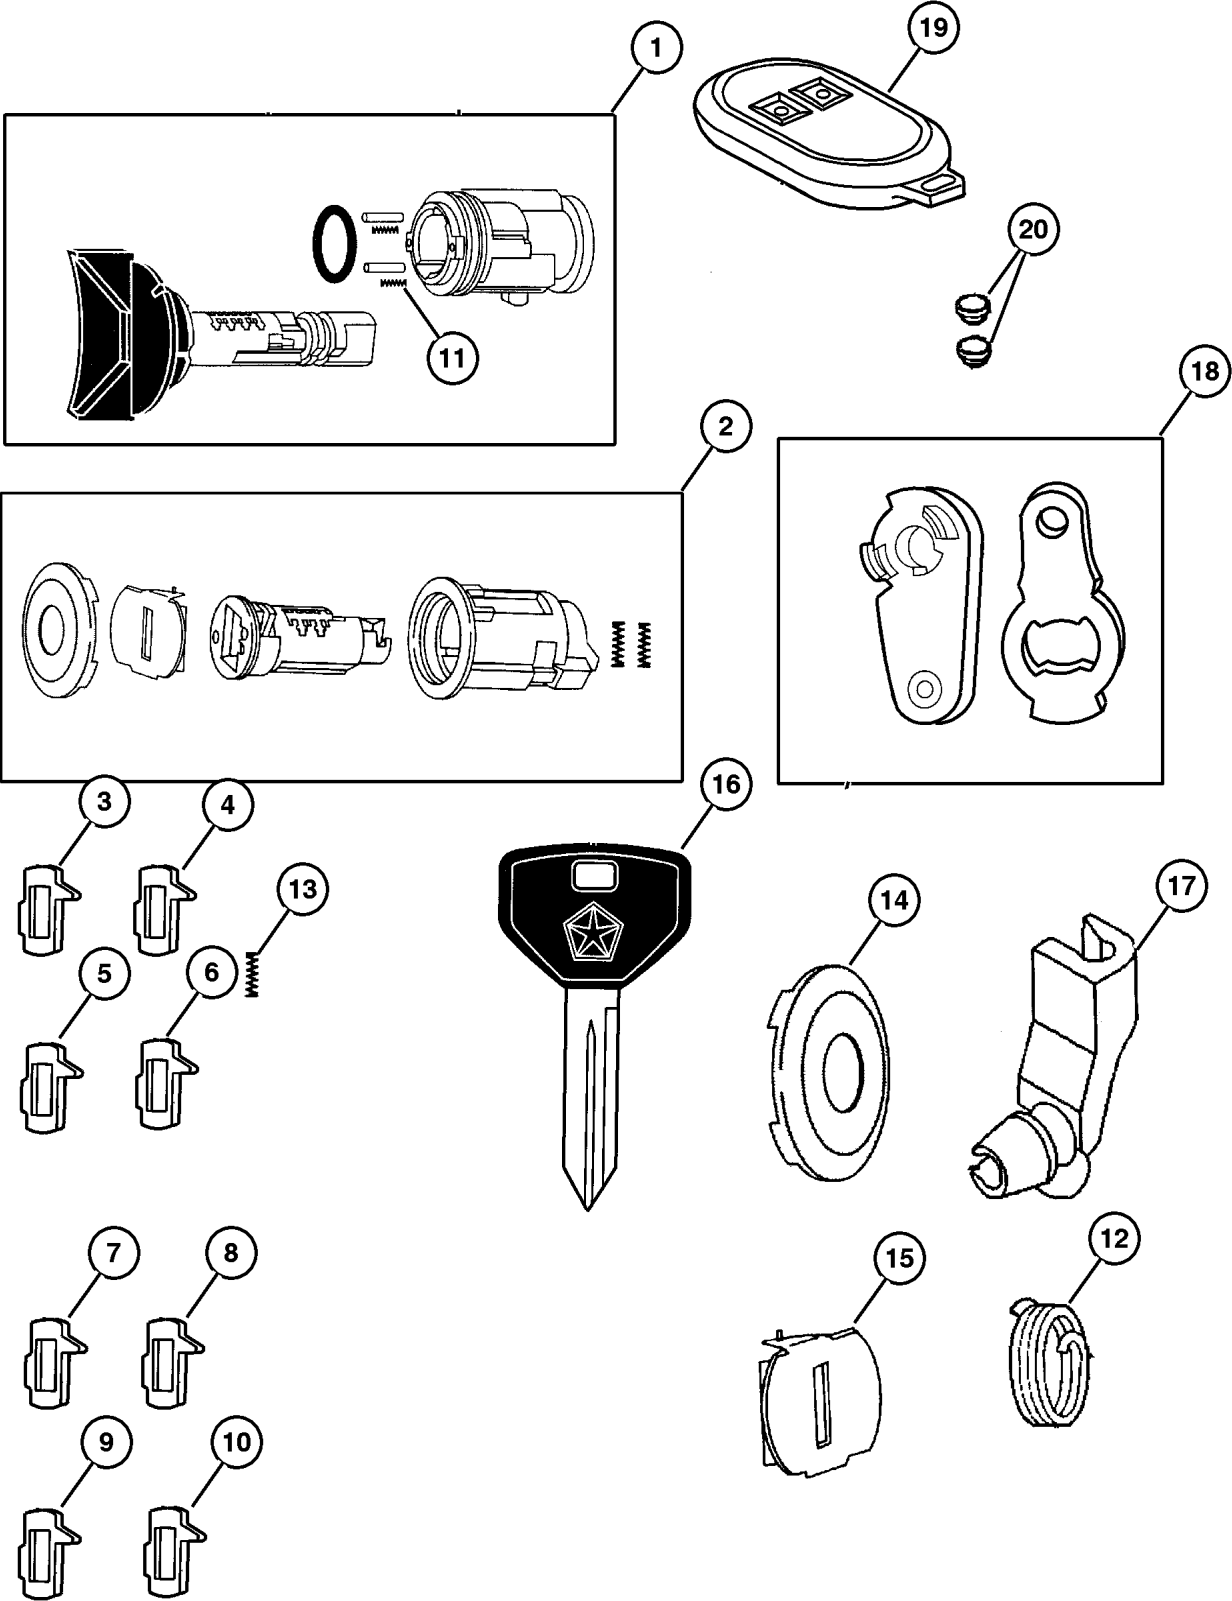Lock Cylinders and Components
Figure 23D-110




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	5003 845AA	1							CYLINDER, Ignition Lock
2	4778 125	1							LOCK CYLINDER, Door (Bright)/ Liftgate
3	4778 117	1							TUMBLER, Door and Deck Number 1, Wide
4	4778 118	1							TUMBLER, Door and Deck Number 2, Wide
5	4778 119	1							TUMBLER, Door and Deck Number 3, Wide
6	4778 120	1							TUMBLER, Door and Deck Number 4, Wide
7	5010 879AA	1							TUMBLER, Ignition Number 1, Sidebar
8	5010 880AA	1							TUMBLER, Ignition Number 2, Sidebar
9	5010 881AA	1							TUMBLER, Ignition Number 3, Sidebar
10	5010 882AA	1							TUMBLER, Ignition Number 4, Sidebar
11	5010 883AA	1							SPRING, Ignition Tumbler, Sidebar
12	4378 793	1							SPRING, Cylinder Return
13	4778 121	1							SPRING, Door and Deck Tumbler
14	4778 149	1							CAP, Door Lock Cylinder, Bright
15	4778 150	1							SHUTTER, Door, Deck and Liftgate, Bright
16	4796 386	1							KEY, Blank
17	6026 125	1							CLIP, Retainer
18	5507 5824	1							LEVER, Door Lock Cylinder
19	56045 497AB	2							TRANSMITTER, Keyless Entry
20	8350 4802	2							BATTERY, Transmitter

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

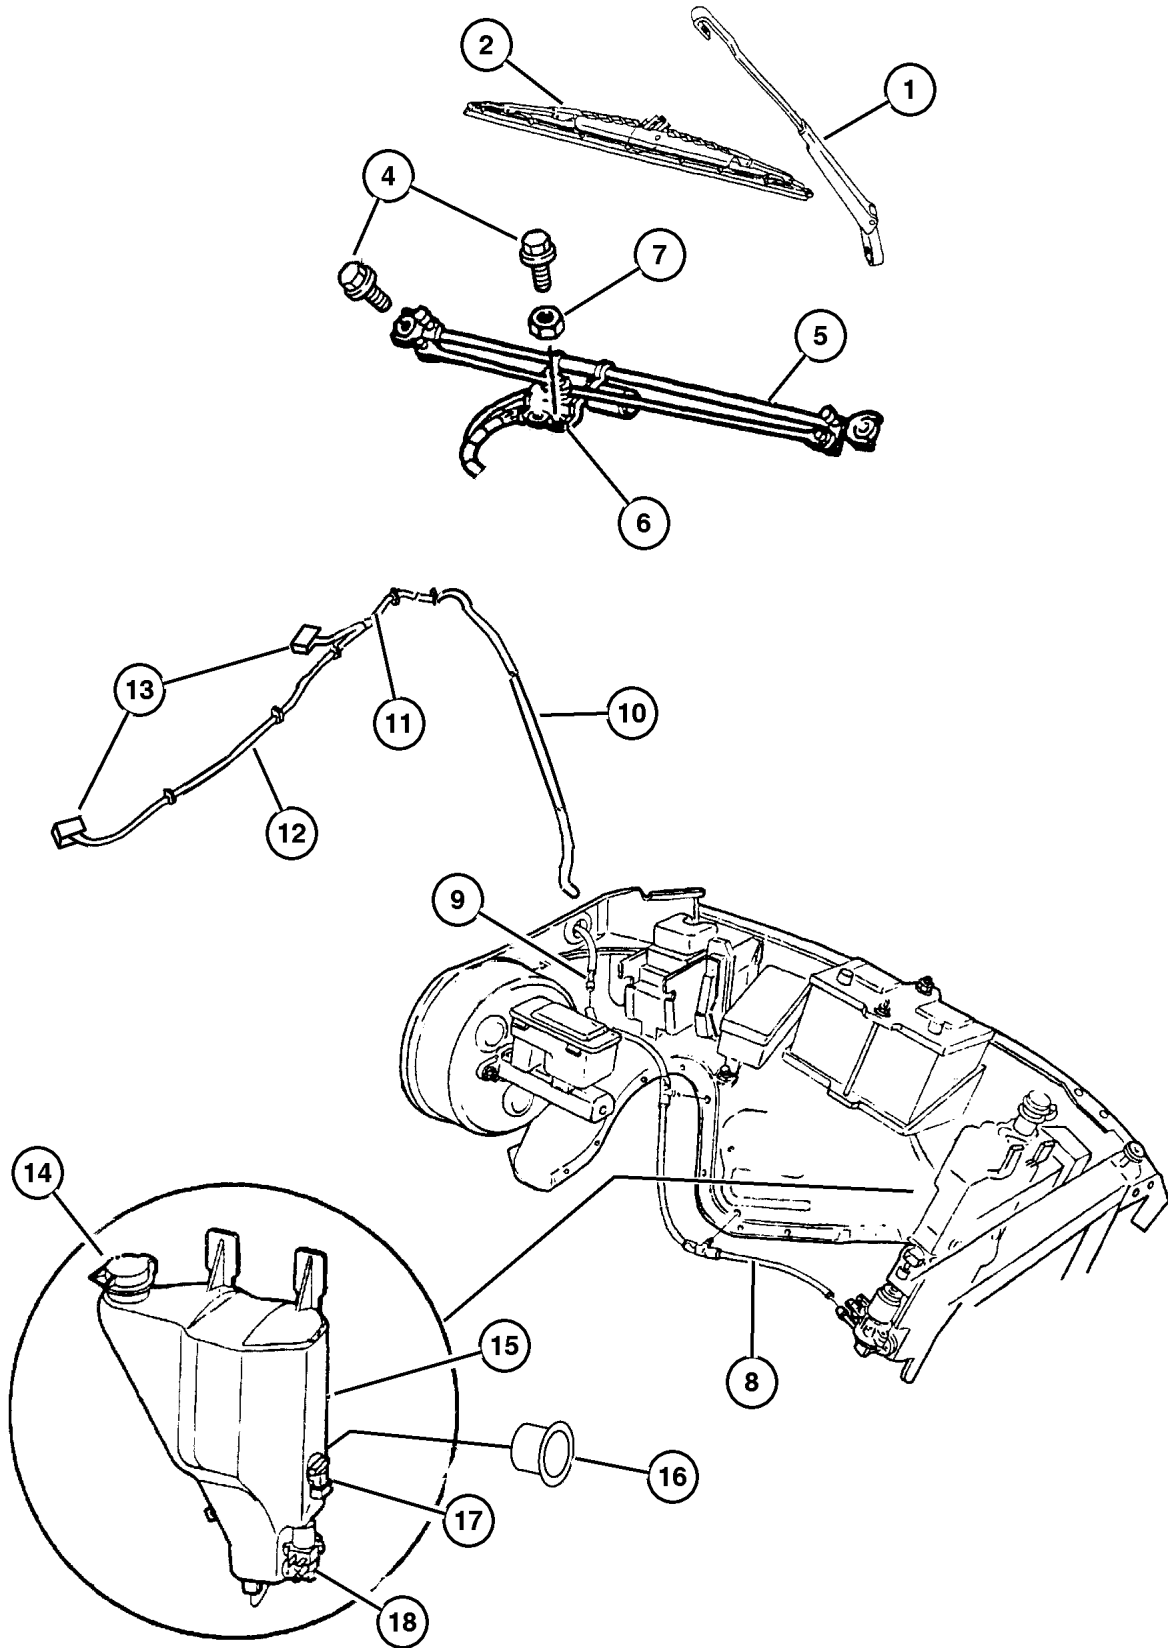Windshield Wiper and Washer
Figure 23D-230



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	55154 582AC	2							ARM, Wiper
2	55076 910AA	2							BLADE, Wiper, w/Refill
-3	4897 022AA-	2							REFILL, Wiper Blade
4	6100 568	1							BOLT AND WASHER, Implement Attaching
5	55076 549AG	1							MODULE, Wiper
6									MOTOR, Wiper, Serviced w/Wiper Module Assembly, (NOT SERVICED) (Not Serviced)
7									NUT, (NOT SERVICED) (Not Serviced)
8	5515 4999	1							HOSE, Windshield Washer
9	4334 799	1							CONNECTOR, Washer Hose, In Line, 3/16
10	5515 4703	1							HOSE, Windshield Washer
11	J323 6813	1							CONNECTOR, Washer Hose, Y, 3/16
12	5515 4781	1							HOSE, Windshield Washer
13	5600 5414	2							NOZZLE, Washer, Windshield
14	4756 656	1							CAP, Washer Reservoir
15	5515 4852	1							RESERVOIR, Washer, w/Sensor
16	4334 568	2							GROMMET, Washer Reservoir
17	5515 5039	1							SENSOR, Washer Fluid Level
18	5515 4758	1							PUMP, Washer, Windshield

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Group – 024
Air Conditioning & Heater

GROUP 24 - Air Conditioning & Heater

Illustration Title Group-Fig. No.

Air Conditioner and Heater Units

Air Conditioner And Heater Unit Fig. 024-160

Air Conditioner and Heater Plumbing

Plumbing Air Conditioning Fig. 024-220

Plumbing, Heater 3.9L/5.2L And 5.9L Engine Fig. 024-260

Plumbing, Heater 8.0L Engine Fig. 024-265

Plumbing, Heater Diesel Engine Fig. 024-267

Plumbing, Cabin Heater Diesel Engine Fig. 024-269

Plumbing, Air Conditioning Diesel Engine Fig. 024-280

Air Conditioner and Heater Controls

Controls Heater and Air Conditioning Fig. 024-310

Control, Air Conditioning Fig. 024-350

Air Conditioning Compressor

Compressor Fig. 024-410

Compressor, Air Conditioning Diesel Engine Fig. 024-440

Air Conditioning Compressor Mounting

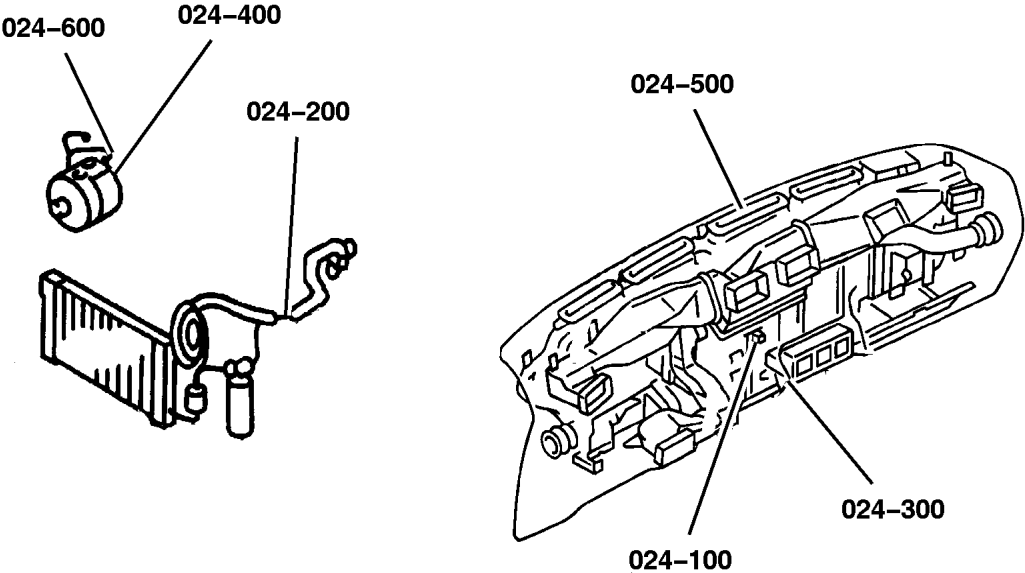
Mounting, Compressor 3.9L/5.2L/5.9L Engine Fig. 024-520

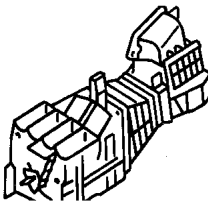
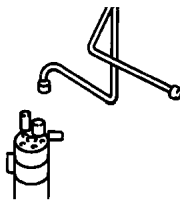
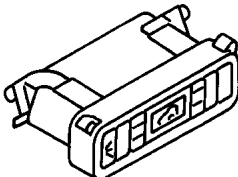
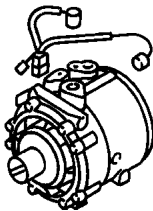
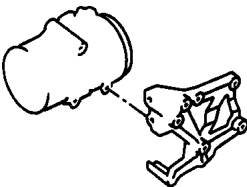
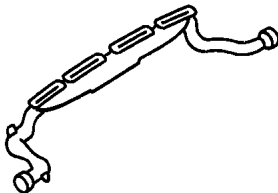
Mounting, Air Conditioning Compressor 8.0L Engine Fig. 024-525

Mounting, Compressor Diesel Engine Fig. 024-530

Air Ducts and Outlets


Air Ducts Fig. 024-630



024-100 Air Conditioner and Heater Units 	024-200 Air Conditioner and Heater Plumbing 	024-300 Air Conditioner and Heater Controls 	024-400 Air Conditioning Compressor 
024-500 Air Conditioning Compressor Mounting 	024-600 Air Ducts and Outlets 		

Air Conditioner And Heater Unit

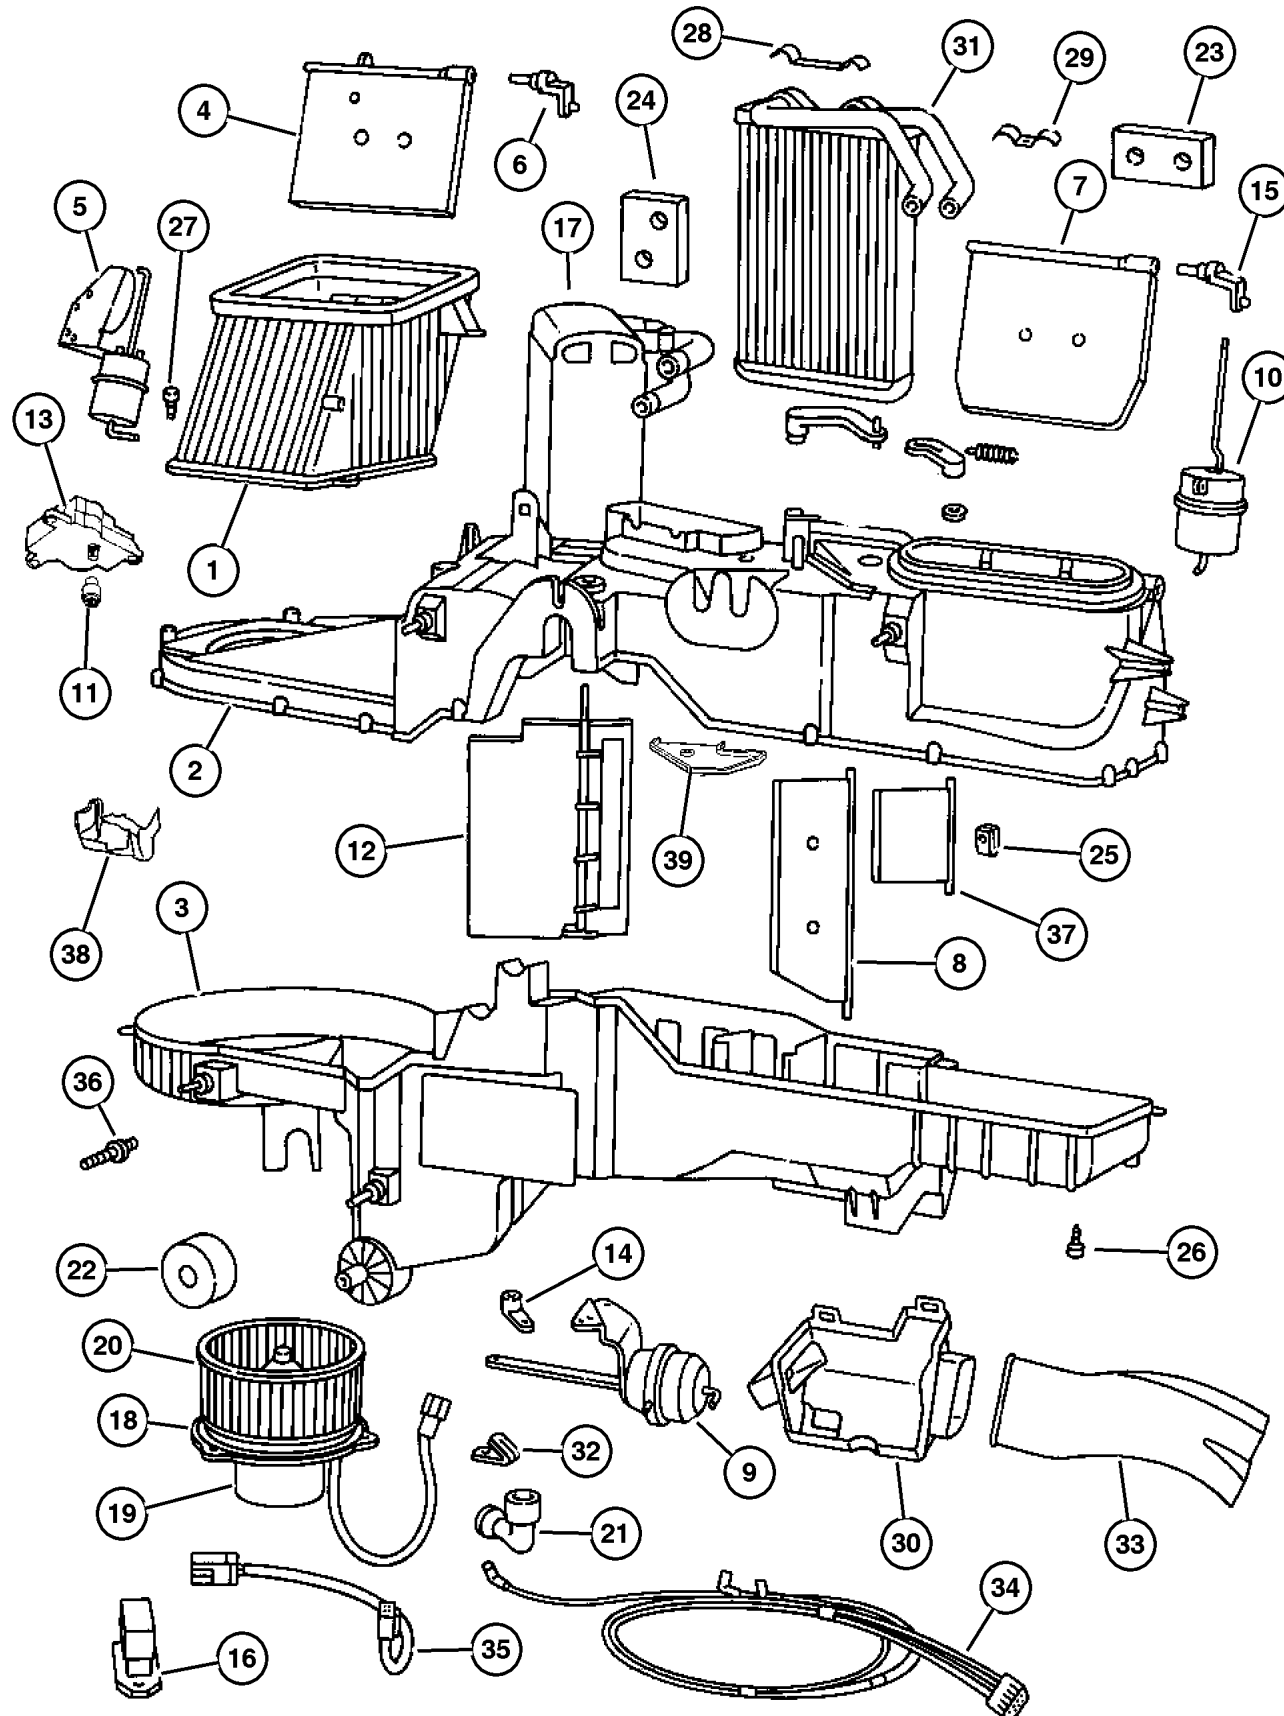Figure 024-160



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
ELO = All 5.2L 8 Cyl Gas Engines									
EM0 = All 5.9L 8 Cyl Gas Engines									
ET0 = All 5.9L Turbo Diesel Engines									
EW0 = All 8.0L Gas Engines									
1	4886 383AA	1							HOUSING, Air Recirculating
2	5012 919AB	1							CASE, Heater And A/C Unit
3	5012 920AB	1							CASE, Heater And A/C Unit
4	4720 026	1							DOOR, Fresh Air
5	4886 070AB	1							ACTUATOR, Fresh Air Door
6	4720 029	1							CLIP, Fresh Air Door
7	4720 023	1							DOOR, Vent
8	4778 420	1							DOOR, Floor Defroster Duct
9	4882 286	1							ACTUATOR, Heater Door
10	4720 279AB	1							ACTUATOR, Heater
11	5012 923AB	1							COUPLING, Servo
12	5012 922AA	1							DOOR, A/C Temperature
13	5012 924AA	1							SERVO, A/C Temperature Door
14	4720 347	1							LEVER, A/C Floor Door Duct
15	4720 348	1							LEVER, A/C Vent Defrost Door
16	4720 278	1							RESISTOR, Blower Motor
17	5011 167AA	1							EVAPORATOR, Air Conditioning
18	4720 039	1							SEAL, Blower Motor
19	5012 833AA	1							MOTOR, Blower
20	4720 009	1							BLOWER
21	5210 066	1							TUBE, A/C Motor Cooling
22	4720 037	1							SEAL, Evaporator Drain
23	4720 033	1							SEAL, Heater Tubes
24	4720 034	1							SEAL, Evaporator Tubes
25									U-NUT, Implement Mounting, (NOT SERVICED) (Not Serviced)
26	4720 533	20							SCREW, Heater Housing
27	4720 534	12							SCREW, Pan Head
28	4720 555	1							CLAMP, Heater Core
29	4720 028	1							CLIP, Heater Core
30	5011 724AA	1							COVER, A/C and Heater
31	4720 008	1							CORE, Heater
32	4720 031	2							RETAINER, Wiring Harness
33	5011 713AA	1							DUCT, A/C And Heater
34	4746 208	1							HARNESS, A/C And Heater Vacuum
35	5012 921AA	1							WIRING, Resistor Block Jumper


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, ELO = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM, EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

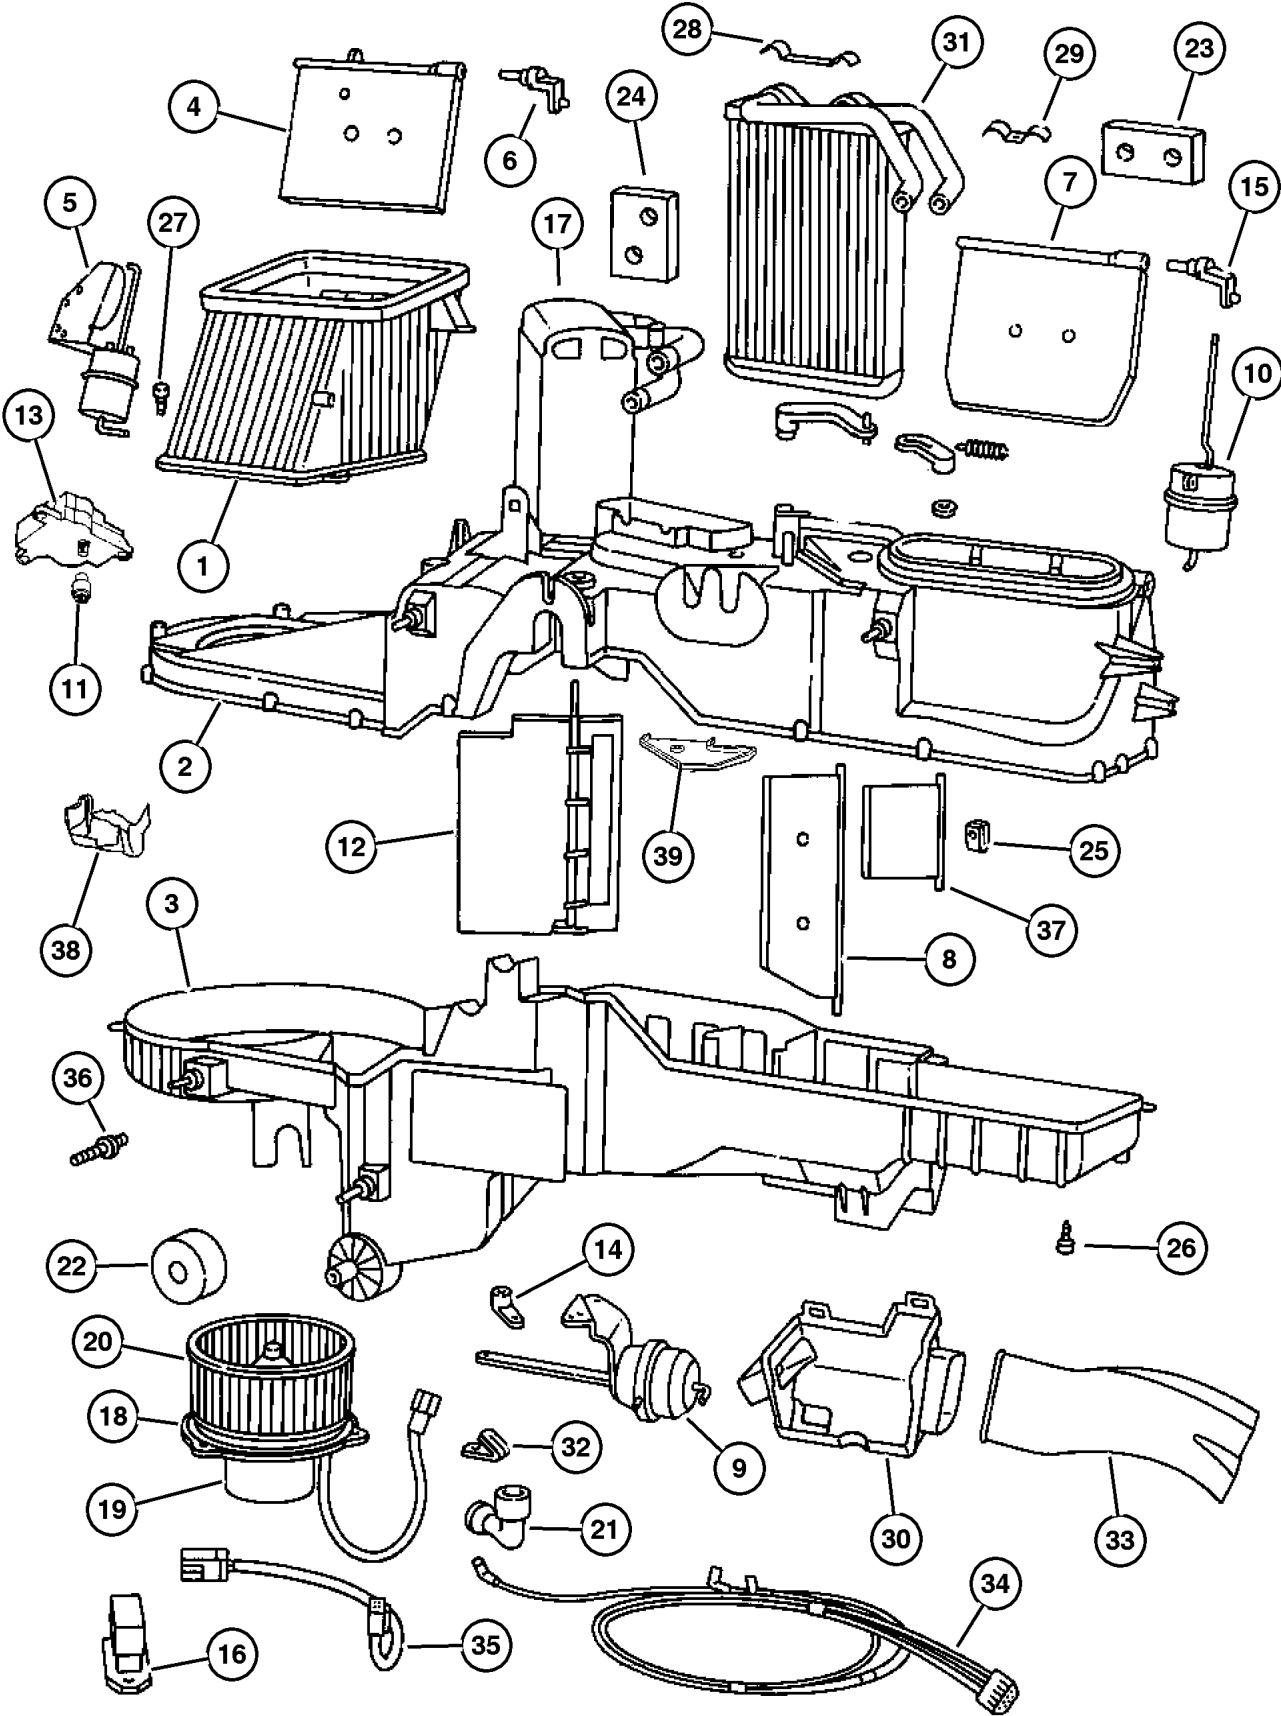Air Conditioner And Heater Unit
Figure 024-160




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
36	4720 032	4							STUD, A/C Heater Housing
37	4778 421	1							DOOR, Floor Defroster Duct
38	4778 415	1							INSULATOR, Air Conditioning
39	4746 884	1							BAFFLE, Air Inlet, without Air Conditioning
-40	55056 421AA-	1				ET0			HARNESS, Vacuum
-41	5503 6098	1				EL0, EM0			HARNESS ASSEMBLY, vacuum
	55055 705AB-	1				EL0, EM0, EW0			
-42	5013 495AB-	1							COVER, Blower Motor

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

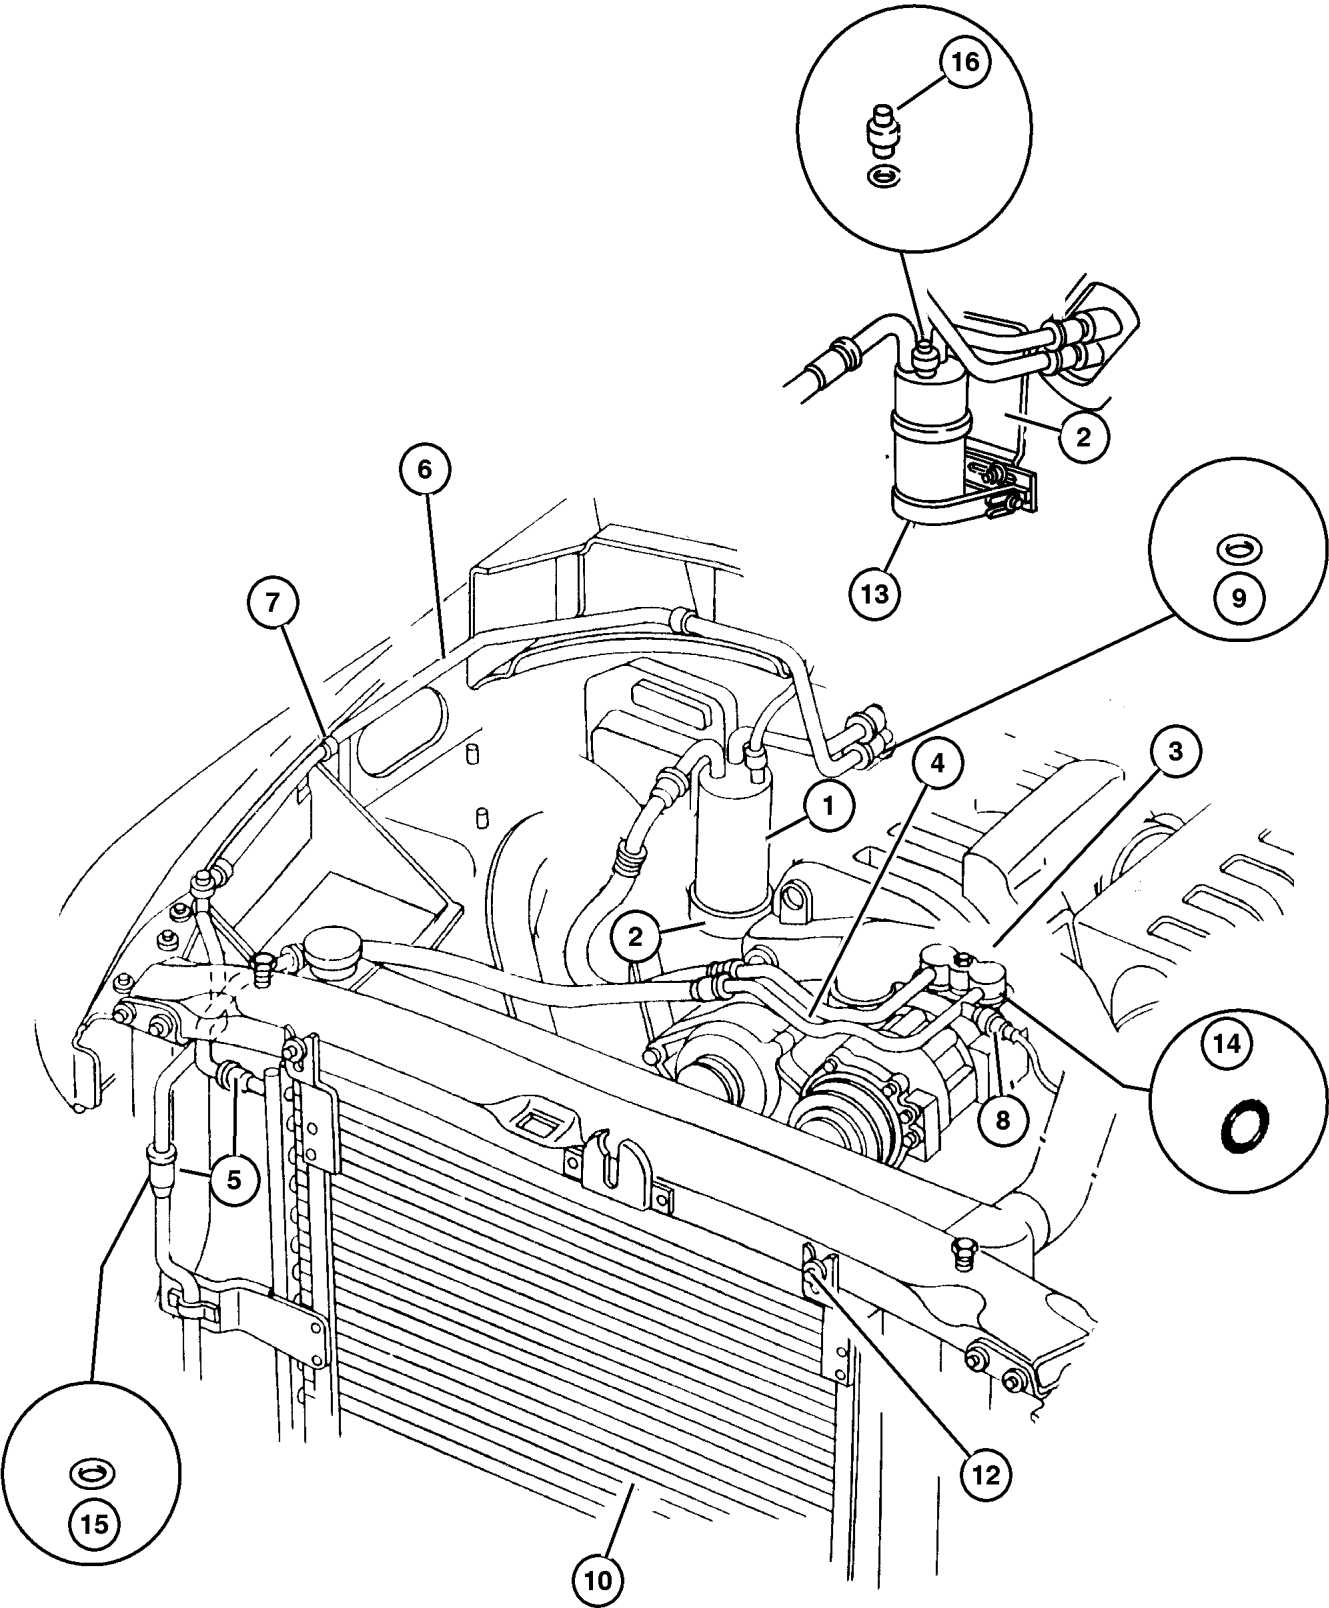Plumbing Air Conditioning
Figure 024-220



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Sales Code EML,EMM,EM0 = 5.9L Gas Engine									
Sales Code EWA,EW0 = 8.0L Gas Engine									
Sales Code ETC,ET0 = 5.9L Diesel Engine									
Sales Code ELF,EL0 = 5.2L Gas Engine									
1	55055 838AB	1							ACCUMULATOR, Suction and Discharge Line
2	5503 5607	1							BRACKET, Accumulator
3	55055 830AA	1				EL0, EM0, EW0			LINE, A/C Suction & Discharge
4	55055 832AA	1				EL0, EM0			BRACKET, A/C Line
5	5010 432AA	1				EL0, EM0, EW0			CLIP, A/C Quick Disconnect
6	4596 152	2				EL0, EM0, EW0			LINE, A/C Liquid
7	55055 835AA	1				EL0, EM0, EW0			CLIP, A/C Liquid Line
8	5503 6022	1	6, 7, 8						SWITCH, A/C High Pressure Cut Off
9	4897 617AA	1				EW0, EL0, EM0			O RING, High Pressure
10	5015 805AA	1				EL0, EM0, EW0			CONDENSER, Air Conditioning
11	55055 824AA	1				EL0, EM0, EW0			SHROUD, Condenser
12	5010 429AA-	1				EL0, EM0, EW0			SCREW, (NOT SERVICED) (Not Serviced)
13	55036 206AC	1							BAND, Accumulator Retaining
14	4761 737	AR							O RING, A/C Suction Line
15	4728 705	1							O RING, Low Pressure Cutout Switc
16	4897 615AA	1							SWITCH, A/C Cycling
17	5503 6209	1							LABEL, Air Conditioning System
18									ISOLATOR, A/C Condenser


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Plumbing Air Conditioning

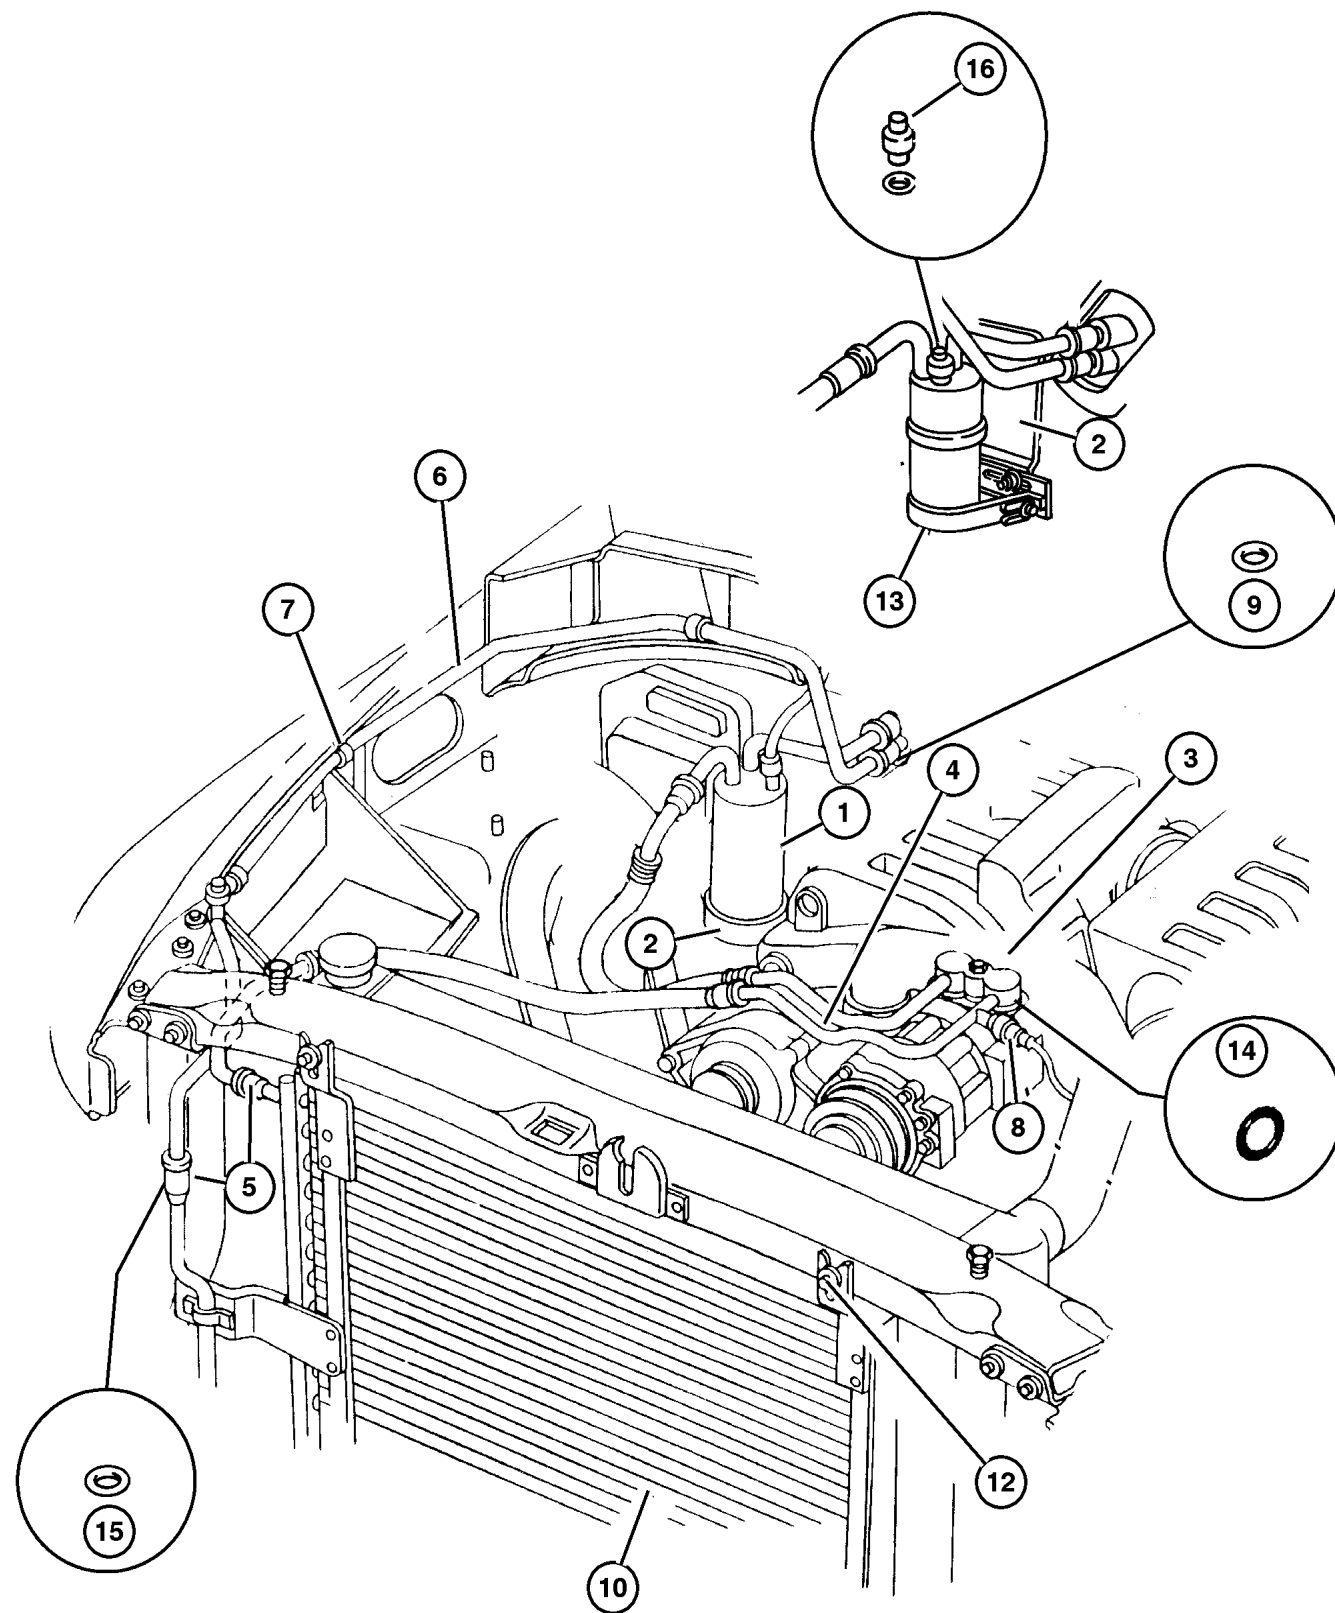Figure 024-220

[illegible]

DODGE RAM QUAD CAB/CLUB CAB (BE)

L = Ram Truck (All)

LINE

$$\begin{aligned} 1, 6 &= 1500 \\ 2, 7 &= 2500 \\ 3, 8 &= 3500 \end{aligned}$$

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

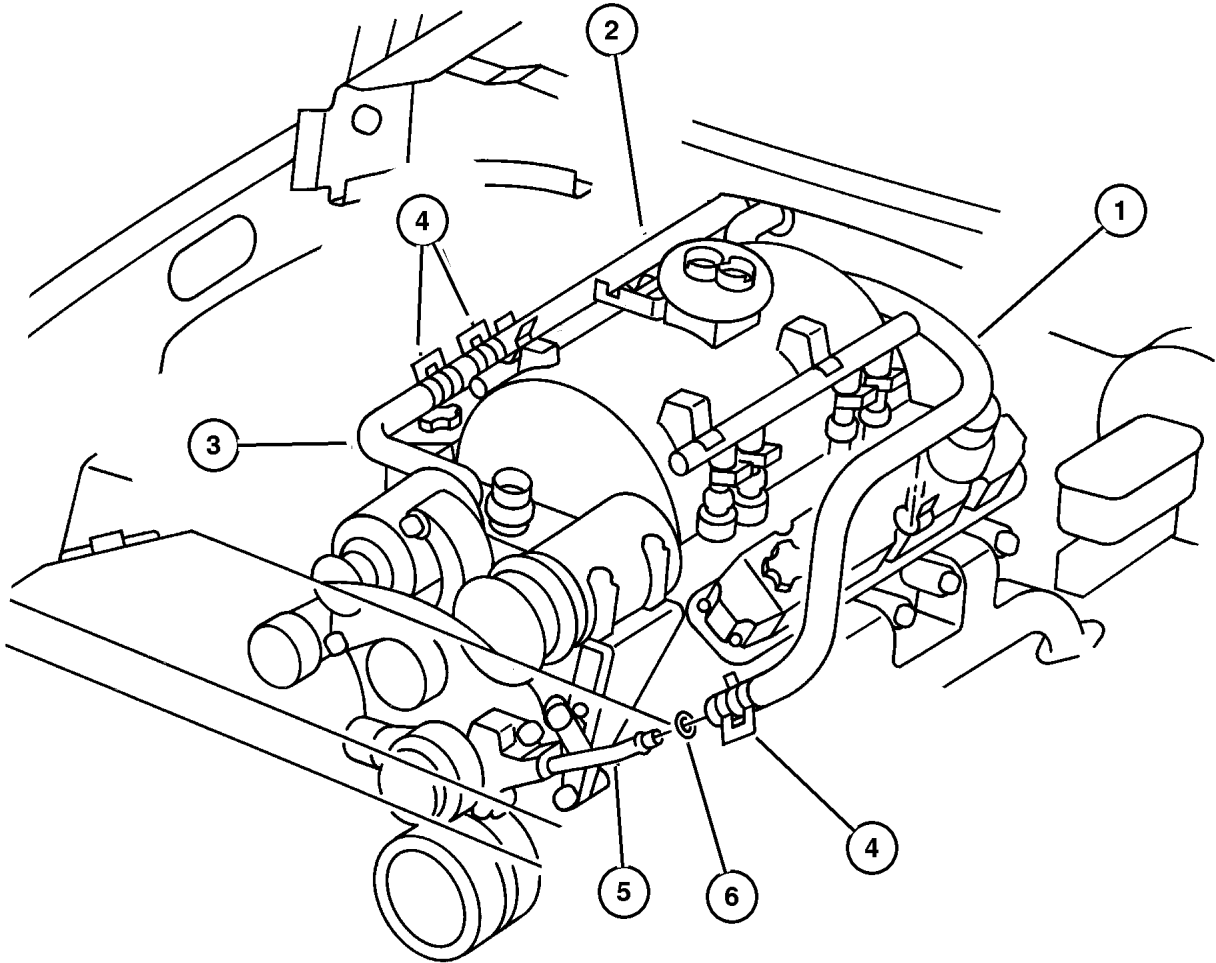
TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Plumbing, Heater 3.9L/5.2L And 5.9L Engine
 Figure 024-260



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note: Sales Code EH0 = 3.9L Gas Engine
 Note: Sales Code ELF = Magnum 5.2L SMPI V8 Engine
 Note: Sales Code EL0 = 5.2L Gas Engine
 Note: Sales Code EM0 = 5.9L Gas Engine


1	4741 932	1				EL0,			HOSE, 5/8" I.D. 50 Foot Roll
2	55036 503AB	1				EM0			
3	55036 413AB	1				ELF,			HOSE, Heater
4	6502 017	6				EM0			
5	5503 6160	1				ELF,			CLAMP, Heater Hose
6	4740 906	1				EM0			
7	55056 105AA-	1				EL0,			TUBE, Water Pump Inlet
						EM0			
						ELF,			O RING, Tube Assy, Heater Return
						EM0			
						ELF,			CLIP, Heater Hose
						EM0			

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

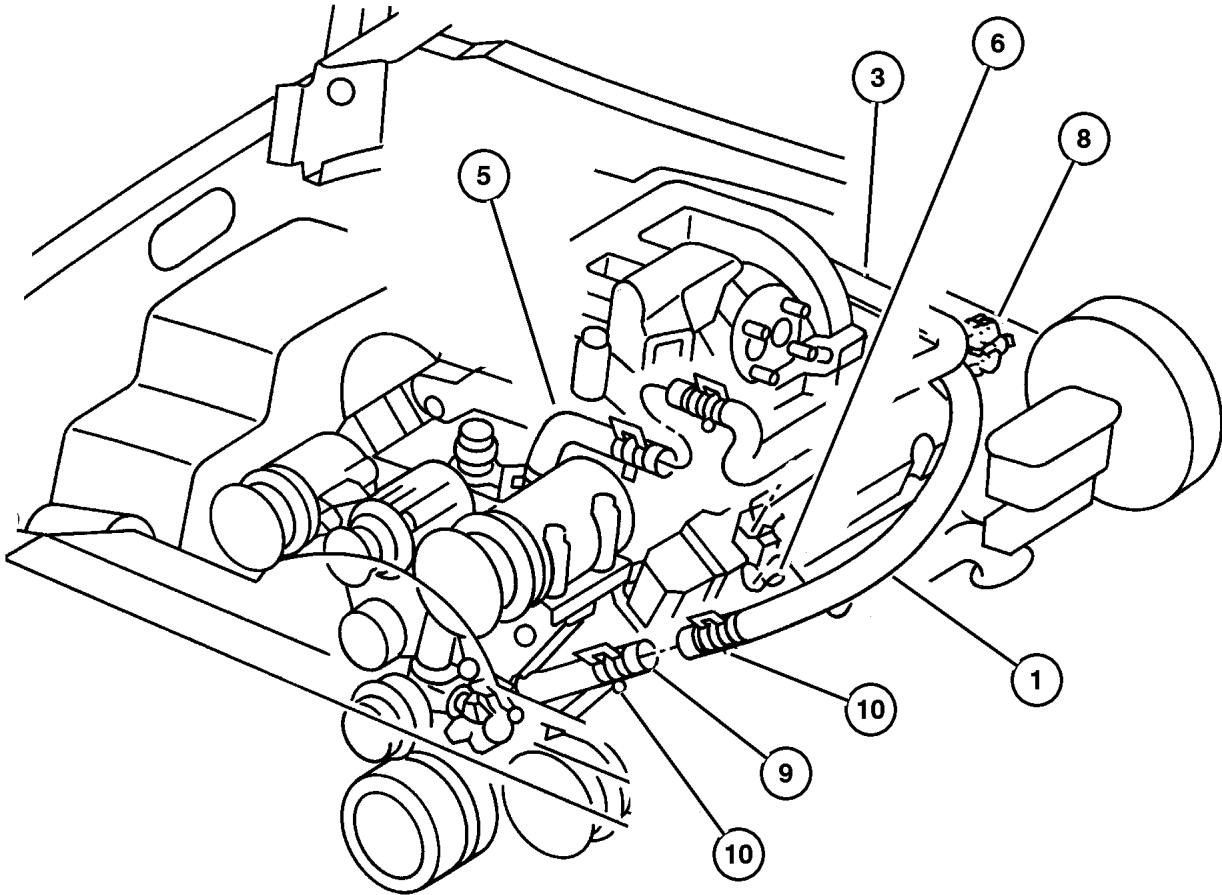Plumbing, Heater 8.0L Engine
Figure 024-265



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note: Sales Code EW0 = 8.0L Gas Engine


1	5503 6776	1				EW0			HOSE, Heater Return
-2	4637 938	1				EW0			SLEEVE, Heater Hose
3	5503 6777	1				EW0			HOSE, Heater Supply
-4	4637 938	1				EW0			SLEEVE, Heater Hose
5	5503 6415	1				EW0			HOSE AND TUBE, Thermostat
6	5503 6056	1				EW0			CLIP, Heater Hose
-7	6032 878	2							STUD, .312-18x2.00
8	5503 6735	1				EW0			CLIP, Heater Hose
9	5505 5328	1				EW0			HOSE, Heater
10	6502 017	8				EW0			CLAMP, Heater Hose

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

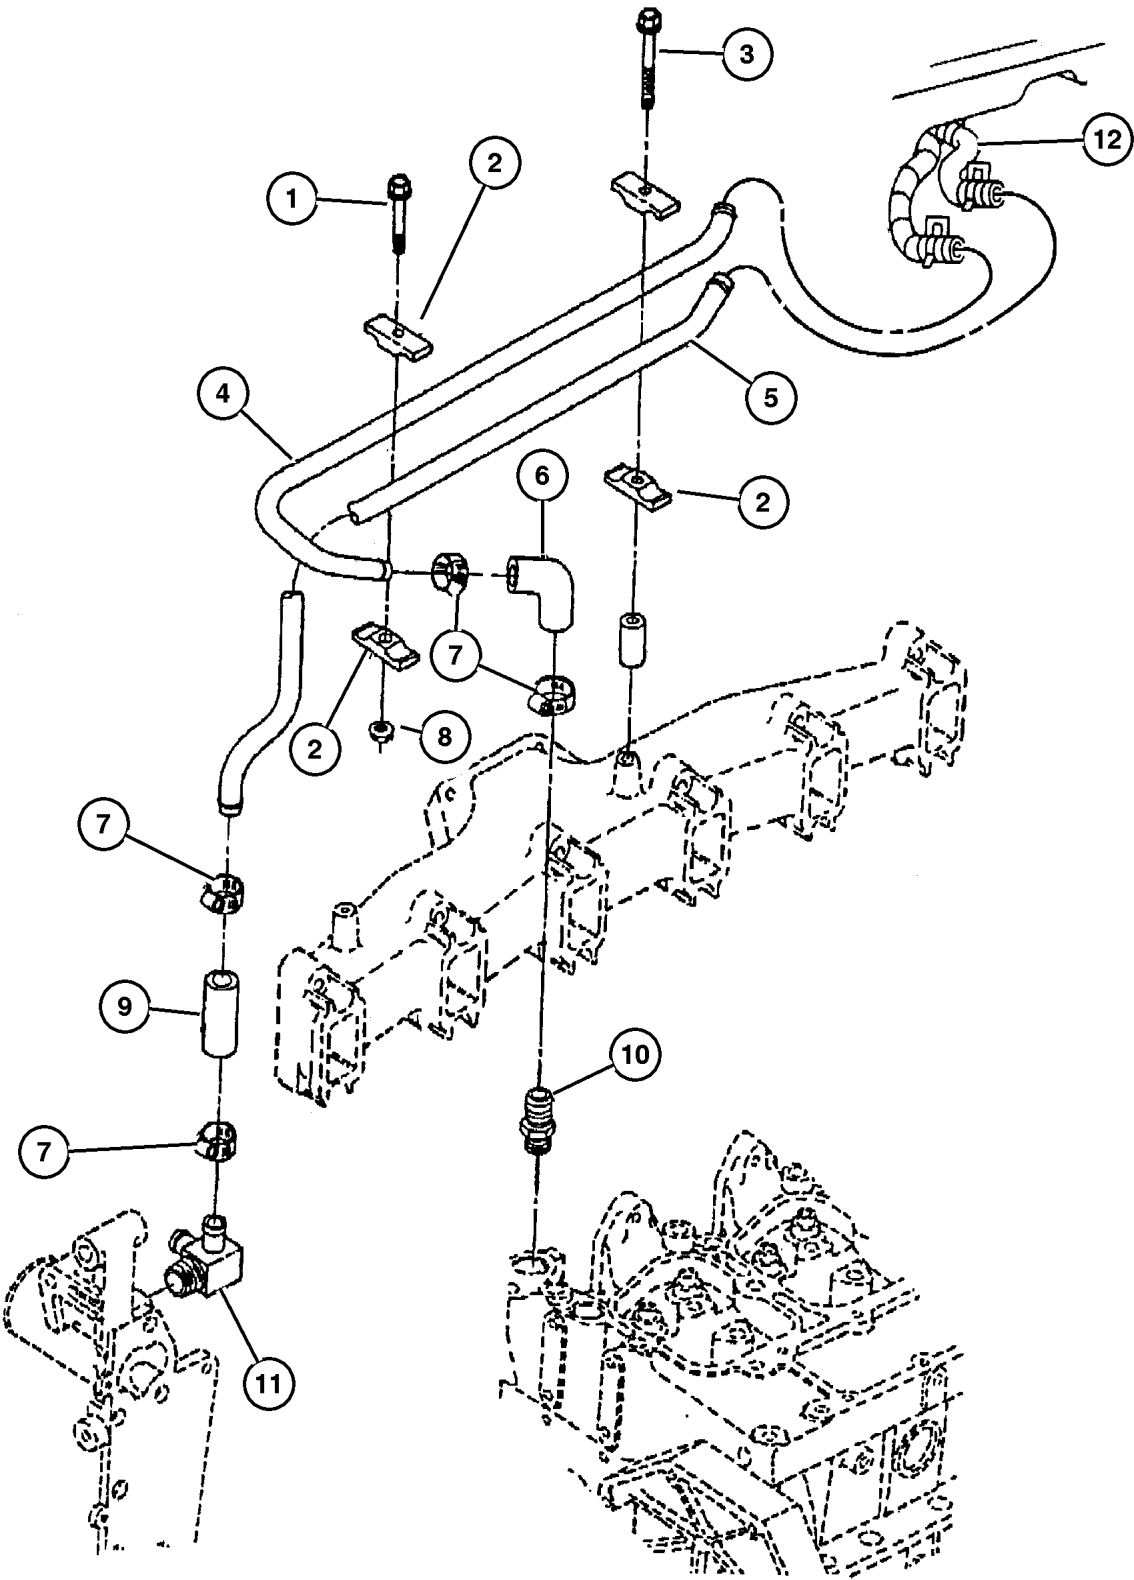Plumbing, Heater Diesel Engine
Figure 024-267



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note: Sales Code

ETC = 5.9L Cummins 24V Diesel Engine

ETH = 5.9L HO Cummins Turbo Diesel

ET0 = All 5.9L Turbo Diesel Engines

EW0 = All 8.0L Gas Engines

1									SCREW, Hex Flange Head
	4429 114	3				ETC			
		3				ETH			
2	4429 089	2				ETC			CLAMP, Tube Retaining
3									SCREW, Hex Head
	4429 631	6				ETC			
		6				ETH			
4									TUBE, Heater
	5014 191AA	1				ETC			
		1				ETH			
5	5014 191AA	1				ETC			TUBE, Heater
6	5011 901AA	1				ETC			COUPLING, Hose
7									CLAMP, Oil Cooler, (NOT SERVICED) (Not Serviced)
8	4429 689	1				ETC			NUT, Hex Flange
9									HOSE, Transmission Oil Cooler, 04638704, (NOT SERVICED) (Not Serviced)
10									COUPLING, Hose
	5011 901AA	1				ETC			
		1				ETH			
11	4429 812	1				ETC			ELBOW, Oil Cooler Hose
12	55036 506AB	1				ET0			HOSE, Heater


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

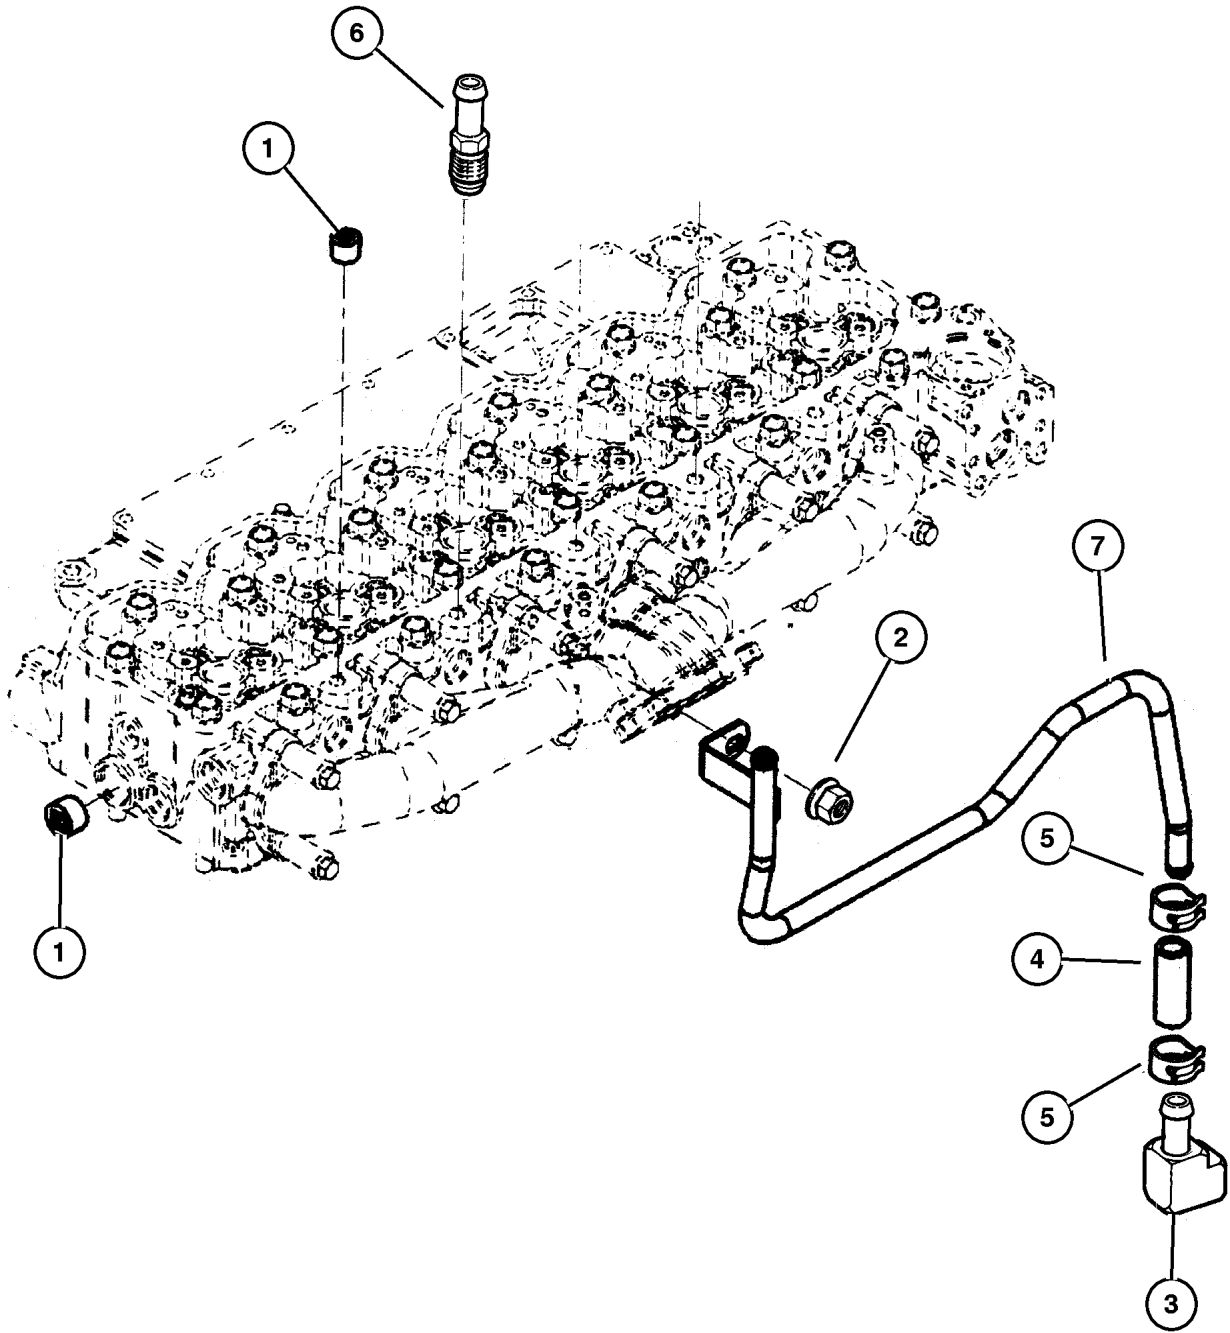Plumbing, Cabin Heater Diesel Engine
 Figure 024-269



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

ETC = 5.9L Cummins 24V Diesel Engine

ETH = 5.9L HO Cummins Turbo Diesel

ET0 = All 5.9L Turbo Diesel Engines

1									PLUG, Pipe
	4429 369	2				ETC			
		1				ETH			
2	4429 862	4				ETC			NUT, Hex Flange, M10x1.5
		4				ETH			
3	4429 976	1				ETC			COUPLING, Elbow Hose
		1				ETH			
4	5011 409AA	1				ETC			HOSE, Oil Cooler
		1				ETH			
5	5011 900AA	2				ETC			CLAMP, Heater
		2				ETH			
6	5011 901AA	1				ETC			COUPLING, Hose
		1				ETH			
7	5014 191AA	1				ETC			TUBE, Heater
		1				ETH			

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Plumbing, Air Conditioning Diesel Engine
 Figure 024-280


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: Sales Code ET0 = 5.9L Diesel Engine									
1	55055 838AB	1							ACCUMULATOR, Suction and Discharge Line
2	5503 5607	1							BRACKET, Accumulator
3	55055 833AB	1				ET0			LINE, A/C Suction & Discharge
-4	4897 617AA-	1				ET0			SWITCH, A/C High Pressure Cut Off
-5	4728 705	1							O RING, Low Pressure Cutout Switc
6	55055 834AA	1				ET0			LINE, A/C Liquid
7	5503 6022	1	6, 7, 8						CLIP, A/C Liquid Line
8	55055 825AB	1				ET0			CONDENSER, Air Conditioning
9	6502 885	1				ET0			SCREW AND WASHER, Hex Head, M6x1x18.5
10	6100 048	2				ET0			NUT, Hex, M6x1.00
11	55036 206AB	1							BAND, Accumulator Retaining
12	4761 737	2				ET0			O RING, A/C Suction Line
13	4741 705	4				ET0			O RING, A/C and Heater
14	4741 705	4				ET0			O RING, A/C and Heater
15	4897 615AA	1							SWITCH, A/C Cycling
16	4728 705	1							O RING, Low Pressure Cutout Switc

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

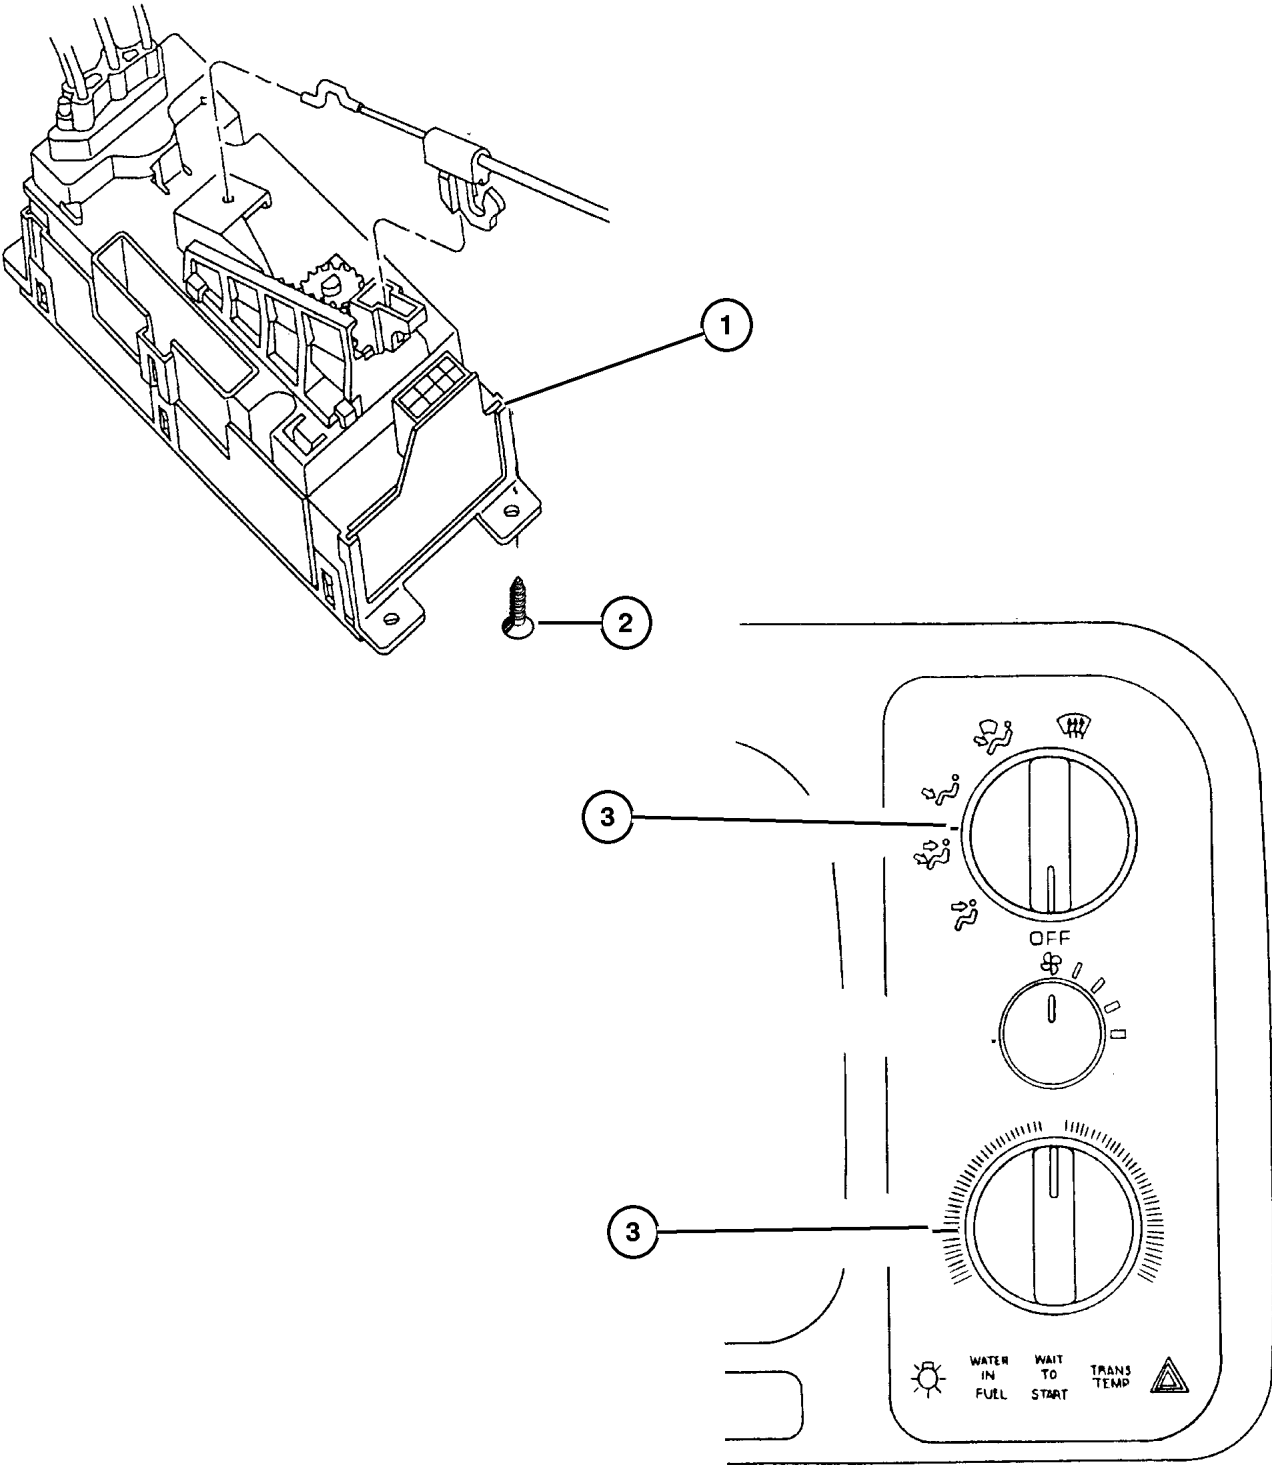Controls Heater and Air Conditioning
Figure 024-310




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									CONTROL, Heater
	5015 735AA	1							without Power Mirrors
	5015 737AA	1							with Power Mirrors
2									SCREW, Self Tapping, M4.2x1. 69x19.05, (NOT SERVICED) (Not Serviced)
3	5003 986AB	3							KNOB, A/C And Heater Control - Rotary
-4	5003 281AA-	1							BULB, Heater and A/C Control

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

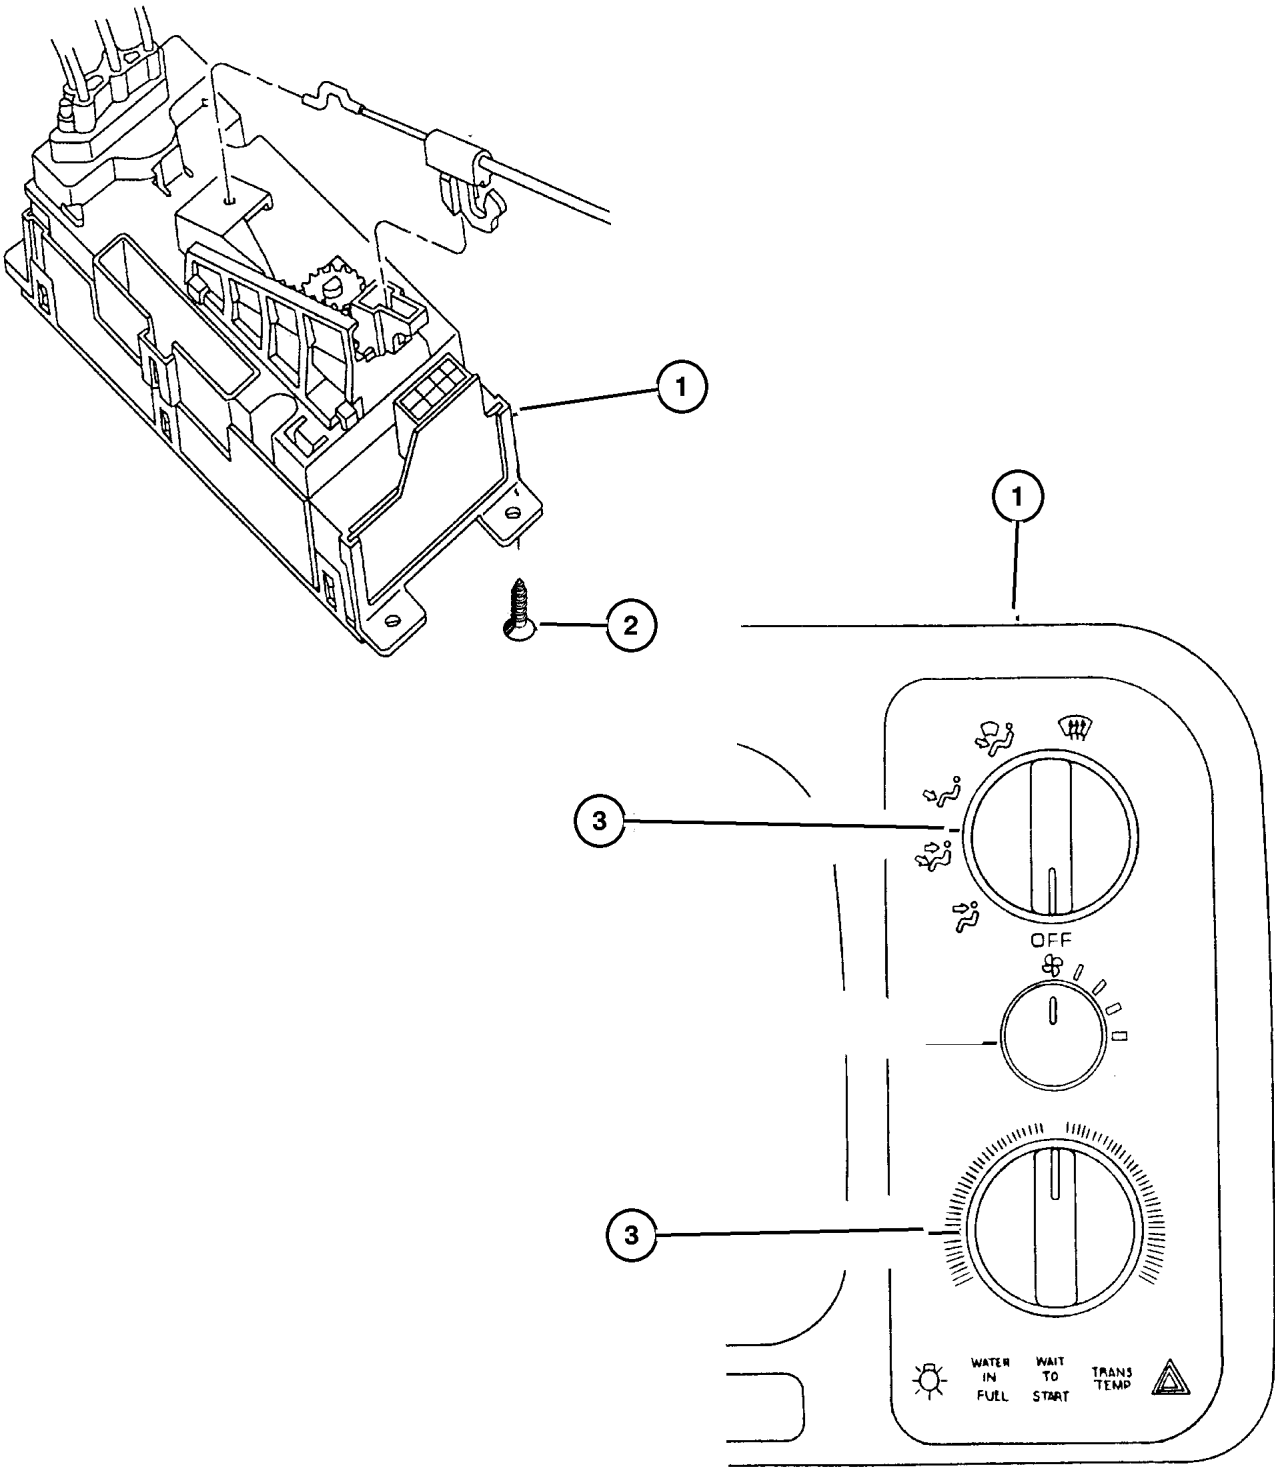Control, Air Conditioning
Figure 024-350





ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	5015 734AA	1							CONTROL, A/C And Heater without Power Mirrors
	5015 736AA	1							with Power Mirrors
2	6032 723	2							SCREW, Self Tapping, M4.2x1. 69x19.05
3	5003 986AB	3							KNOB, A/C And Heater Control - Rotary
-4	5003 281AA-	1							BULB, Heater and A/C Control
-5	5013 680AB-	1							HARNESS, A/C And Heater Vacuum

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

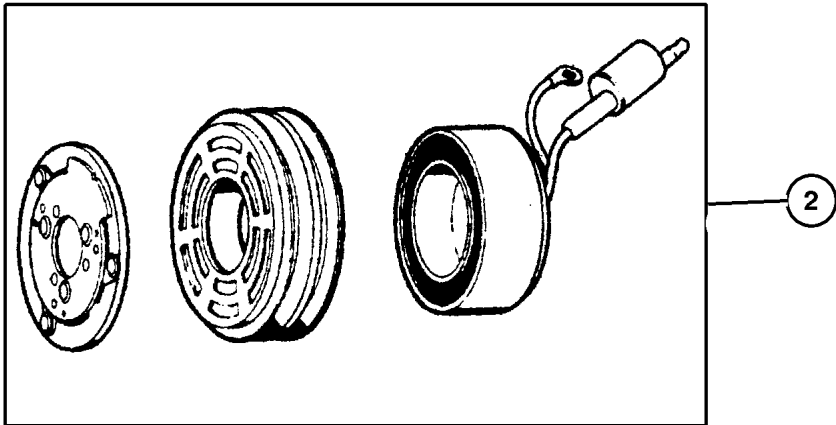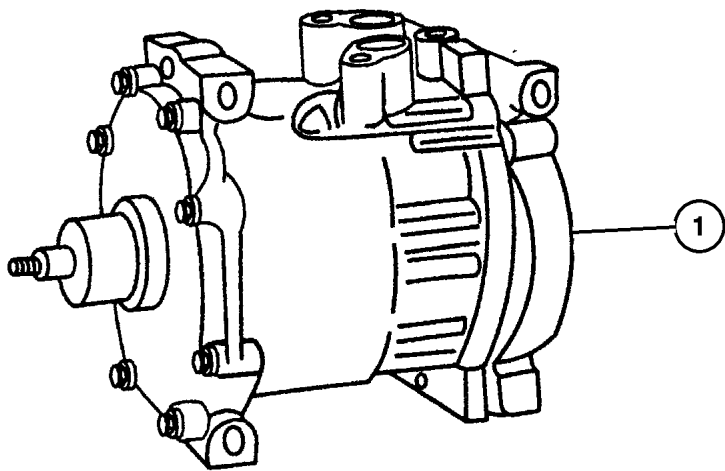Compressor
Figure 024-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


Note:									
EL0 = All 5.2L 8 Cyl Gas Engines									
EM0 = All 5.9L 8 Cyl Gas Engines									
EW0 = All 8.0L Gas Engines									
1	55055 540AF	1				EL0,			COMPRESSOR, Air Conditioning
						EM0,			
						EW0			
2	4882 008	1				EL0,			CLUTCH, A/C Compressor
						EM0,			
						EW0			

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

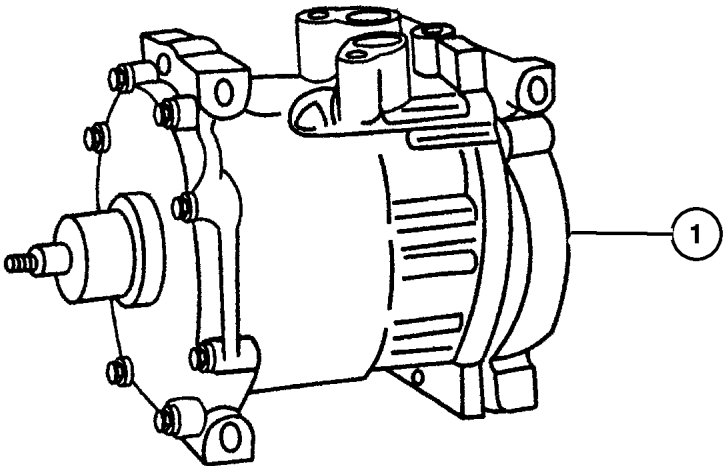Compressor, Air Conditioning Diesel Engine
Figure 024-440



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note: Sales Code ET0 = 5.9L Diesel Engine


1	55055 339AD	1				ET0			COMPRESSOR, Air Conditioning
-2	5016 127AA-	1				ET0			CLUTCH, A/C Compressor

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

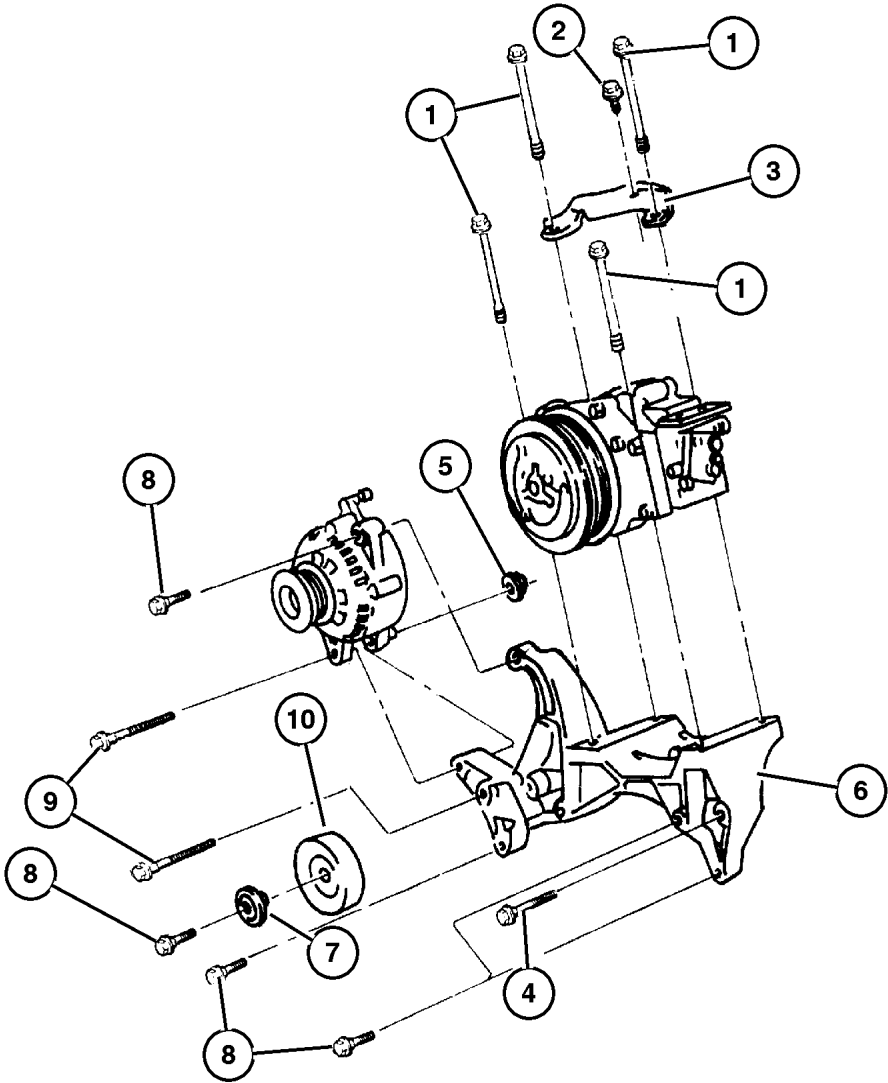Mounting, Compressor 3.9L/5.2L/5.9L Engine
Figure 024-520



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

EL0 = All 5.2L 8 Cyl Gas Engines
EMM = Magnum 5.9L SMPI V8 Engine
EM0 = All 5.9L 8 Cyl Gas Engines
EW0 = All 8.0L Gas Engines

1									BOLT, (NOT SERVICED) (Not Serviced)
2									BOLT, (NOT SERVICED) (Not Serviced)
3	5301 0014	1				EW0			BRACE, A/C Compressor
	5301 0252	1				EL0, EM0			
4	6034 246	1				EL0, EM0			BOLT, Hex Head, .375-16x.75
		3				EMM			
5									NUT, Lock, (NOT SERVICED) (Not Serviced)
6	5300 8614	1				EL0, EM0			BRACKET, Alternator And Compressor
7	3300 2201	1				EL0, EM0			BUSHING, Idler Pulley
		1				EW0			
8									BOLT, (NOT SERVICED) (Not Serviced)
9	6034 247	1				EL0, EM0			BOLT, Hex Head, .375-16x.25
		1				EW0			
10	5300 9508	1				EL0, EM0			PULLEY, Idler
		1				EW0			


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

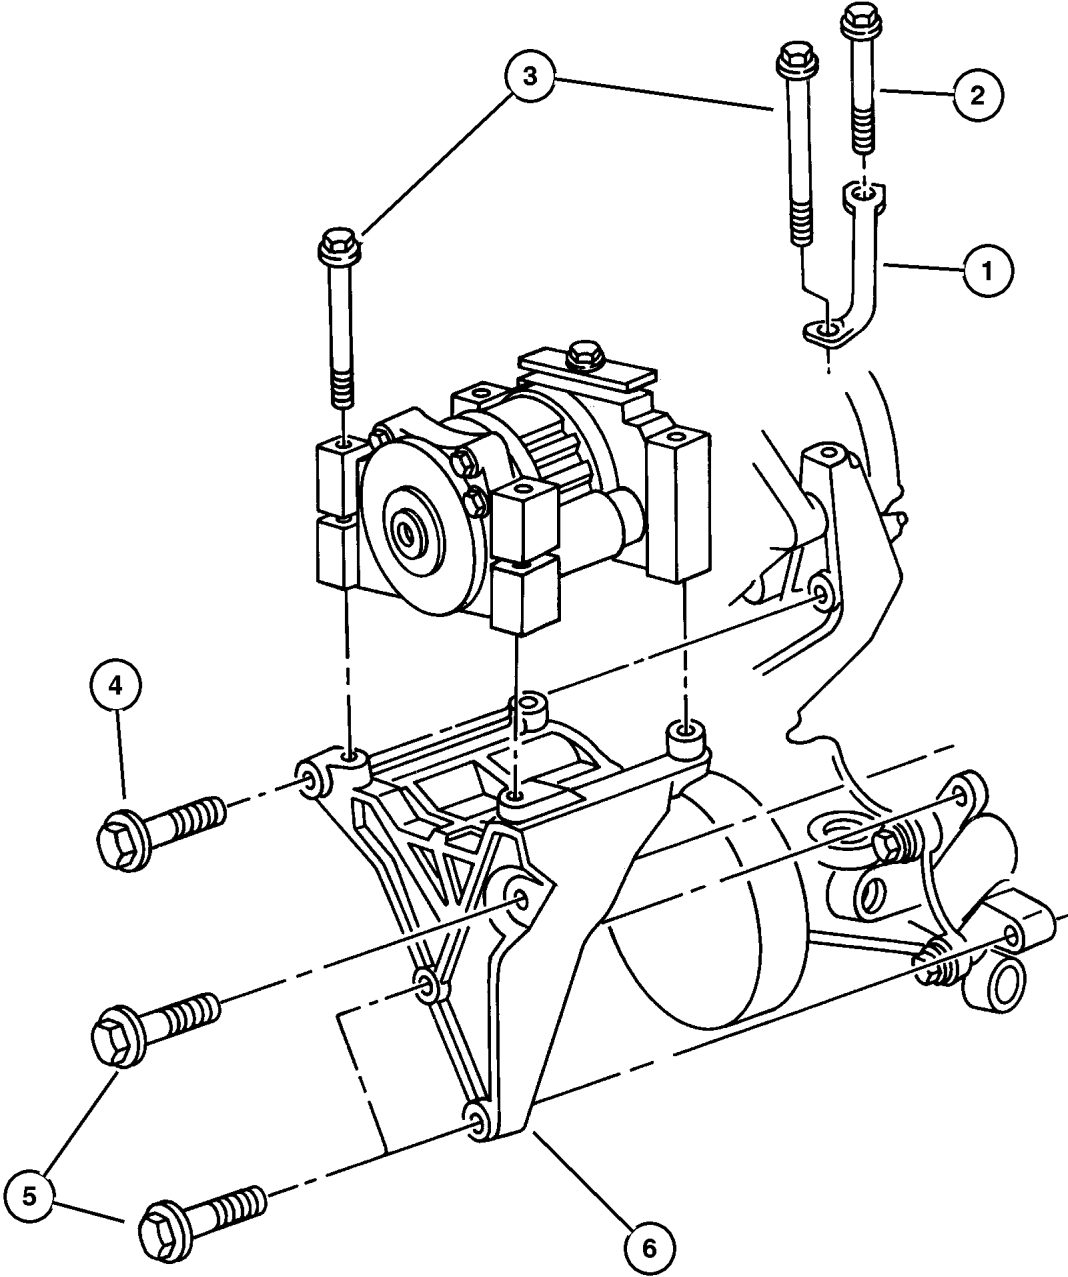Mounting, Air Conditioning Compressor 8.0L Engine
Figure 024-525



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

EL0 = All 5.2L 8 Cyl Gas Engines

EM0 = All 5.9L 8 Cyl Gas Engines

EW0 = All 8.0L Gas Engines

1									BRACE, A/C Compressor
	5301 0014	1				EW0			
	5301 0252	1				EL0, EM0			
2									SCREW, (NOT SERVICED) (Not Serviced)
3									SCREW, (NOT SERVICED) (Not Serviced)
4									SCREW, (NOT SERVICED) (Not Serviced)
5									SCREW, (NOT SERVICED) (Not Serviced)
6	5300 5619	1				EW0			BRACKET, A/C Compressor


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

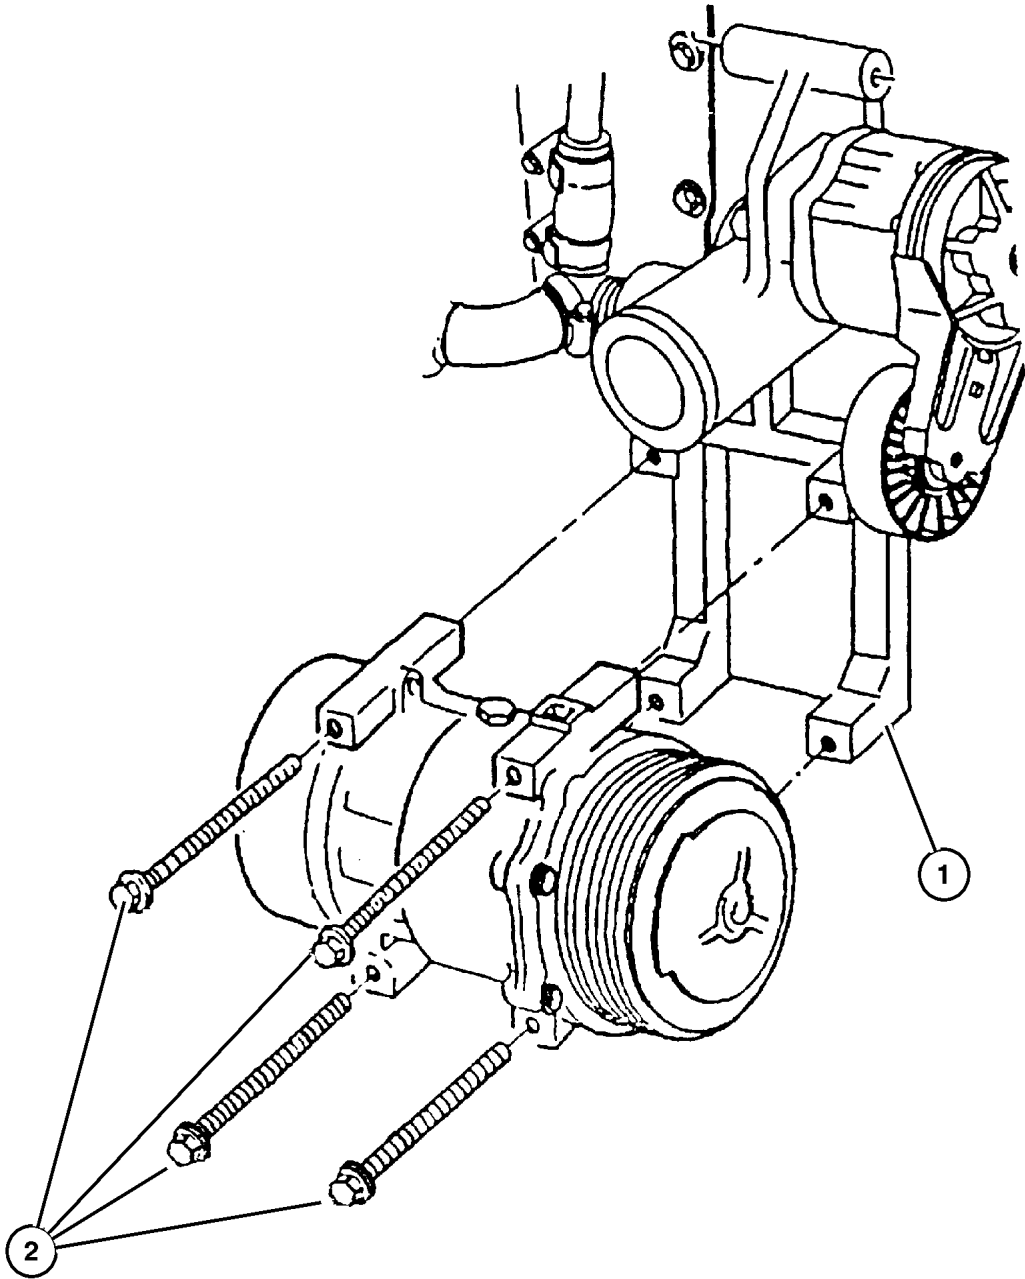Mounting, Compressor Diesel Engine
Figure 024-530



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:
ETC = 5.9L Cummins 24V Diesel Engine
ETH = 5.9L HO Cummins Turbo Diesel
ET0 = All 5.9L Turbo Diesel Engines

1	5011 928AA	1				ETC			CONNECTOR, Water Inlet
2									SCREW, (M8x1.25x100, (NOT SERVICED) (Not Serviced)


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

Air Ducts
Figure 024-630

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note: All other distribution ducts are serviced in instrument panel.

1	5505 5442	1							ADAPTER, Defroster Duct
2	5503 6517	1							BAFFLE, Air Intake
3	55115 857AC	1							DUCT, Air Distribution

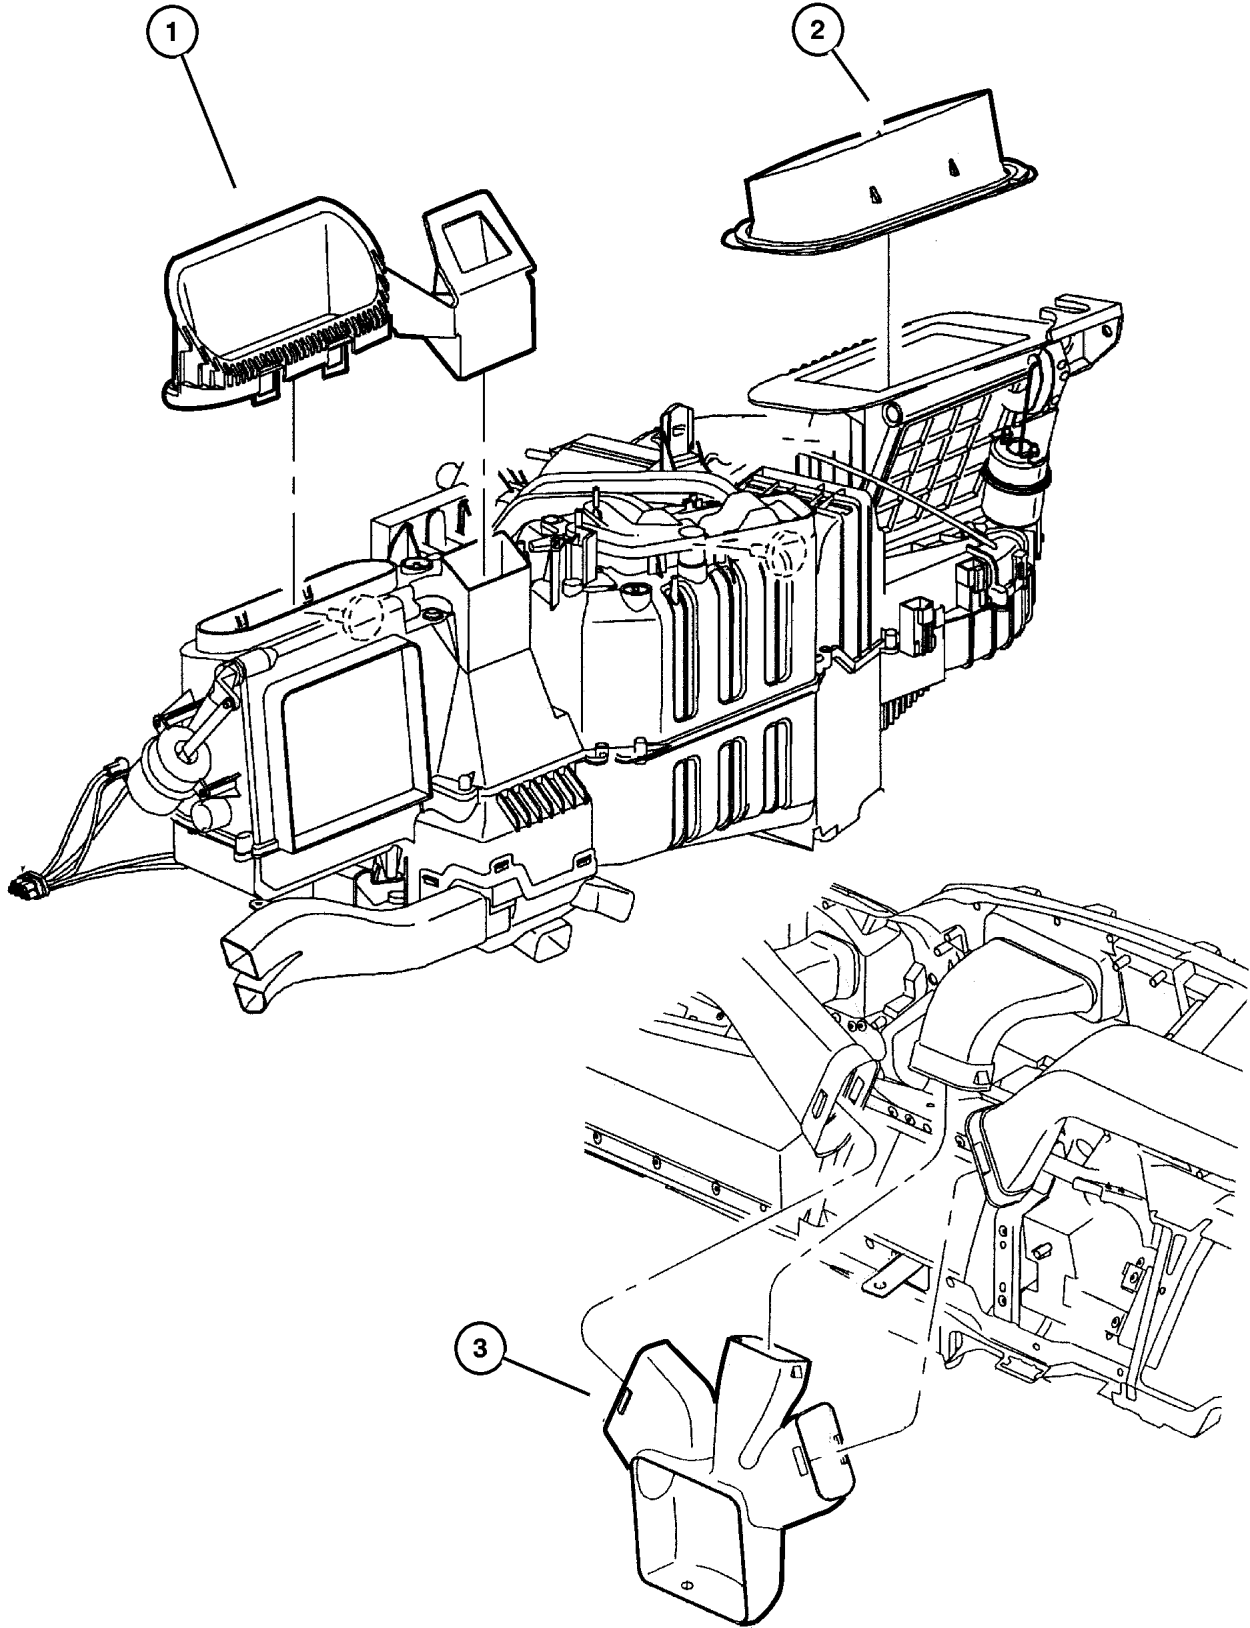

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Group – 025

Emission Systems

GROUP 25 - Emission Systems

Illustration Title Group-Fig. No.

Emission Labels

Emission Labels 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 8.0L (EWA) Engine Fig. 025-140

Vacuum Canister

Vacuum Canister 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine Fig. 025-340

Emission Harness

Emission Control Vacuum Harness 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 8.0L (EWA) Engine Fig. 025-440

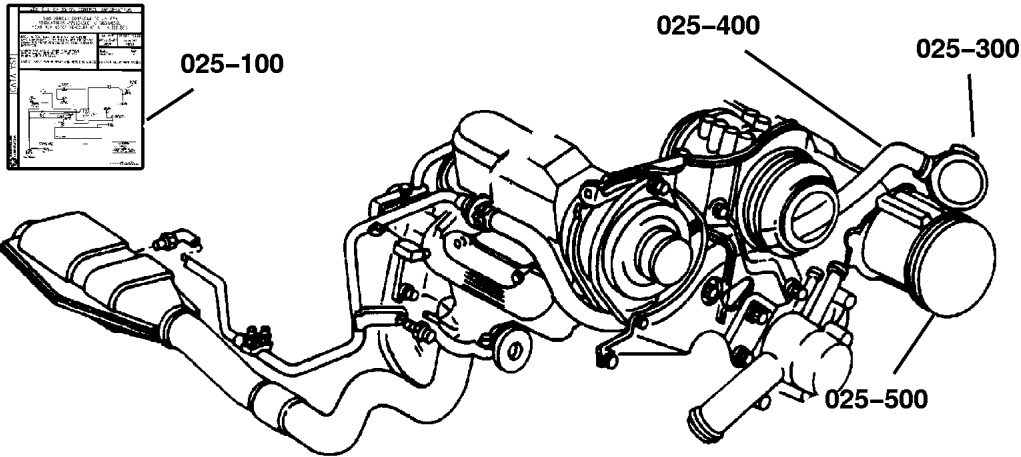
Leak Detection Pump 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 8.0L (EWA) Engine Fig. 025-450

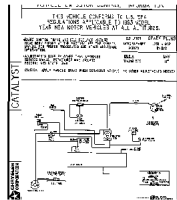
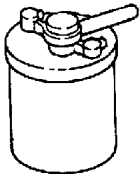
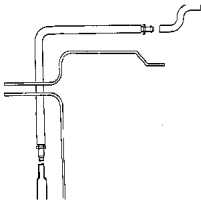
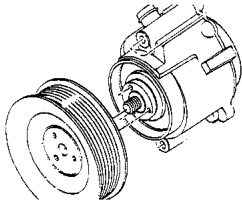
Vacuum Pump 5.9L (ETC,ETH) Diesel Engine Fig. 025-470

Air Pumps

Air Pump 5.9L (EMM), 8.0L (EWA) Engine Fig. 025-510

Air Injection Plumbing 8.0L (EWA) Engine Fig. 025-520



025-100 Emission Labels	025-300 Vacuum Canister	025-400 Emission Harness	025-500 Air Pumps
			

Emission Labels 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 8.0L (EWA) Engine
Figure 025-140

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

DBB = All Manual Transmissions

DG0 = All Automatic Transmissions

ELF = Magnum 5.2L SMPI V8 Engine

EML = Magnum 5.9L SMPI V8 Engine

EWA = Magnum 8.0L V10 MPI Engine

1									LABEL, Emission
53032 282AA	1	1			31, 33	ELF			Federal, Export
53032 283AA	1	1			31, 33	ELF			Canada
53032 286AA	1	6			31, 33	ELF			Federal, Export
53032 287AA	1	6			31, 33	ELF			Canada
53032 288AA	1	1, 6			34	ELF			Federal, Export
53032 289AA	1	1, 6			34	ELF			Canada
53032 290AA	1	1			31, 33	ELF	DBB		California
53032 291AA	1	1			31, 33	ELF	DG0		California
53032 294AA	1	6			31, 33	ELF	DBB		California
53032 295AA	1	6			31, 33	ELF	DG0		California
53032 296AA	1	1, 6			34	ELF	DBB		California
53032 297AA	1	1, 6			34	ELF	DG0		California
53032 298AA	1	1			31, 33	EML	DG0		Federal, Export
53032 299AA	1	1			31, 33	EML	DG0		Canada
53032 302AA	1	6			31, 33	EML	DG0		Federal, Export
53032 303AA	1	6			31, 33	EML	DG0		Canada
53032 304AA	1	1, 6			34	EML	DG0		Federal, Export
53032 309AA	1	1, 6			34	EML	DG0		Canada
53032 310AA	1	2, 7			33, 34	EML			Federal, Export
53032 311AA	1	2, 7			33, 34	EML			Canada
53032 312AA	1	1			31, 33	EML			California
53032 314AA	1	2, 3, 7, 8			33, 34	EML	DBB		California
53032 317AA	1	6			31, 33	EML	DG0		California
53032 318AA	1	1, 6, 7			34	EML	DG0		California
53032 319AA	1	2, 3, 7, 8			33, 34	EML	DG0		California
53032 329AA	1	2, 3, 7			33, 34	EWA			California
53032 331AA	1	8			34	EWA			California
53032 321AA	1	3, 8			34	EMM			Federal, Export, Engine Information
53032 322AA	1	3, 8			34	EMM			Canada, Engine Information
53032 323AA	1	3, 8			34	EMM			Federal, Export, Body Information
53032 324AA	1	3, 8			34	EMM			Canada, Body Information
53032 325AA	1	2, 3, 7, 8			33, 34	EWA			Federal, Export, Engine Information
53032 326AA	1	2, 3, 7, 8			33, 34	EWA			Canada, Engine Information

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

CATALYST

CHRYSLER CORPORATION

IMPORTANT VEHICLE INFORMATION

THIS VEHICLE CONFORMS TO U.S. EPA REGULATIONS APPLICABLE TO 19XX MODEL YEAR NEW LIGHT-DUTY TRUCKS WITH A CURB WEIGHT GREATER THAN POUNDS AT ALL ALTITUDES.

* BASIC IGNITION TIMING AND IDLE FUEL/AIR MIXTURE HAVE BEEN PRESET AT THE FACTORY. SEE THE SERVICE MANUAL FOR PROPER PROCEDURES AND OTHER ADDITIONAL INFORMATION.

◦ ADJUSTMENTS MADE BY OTHER THAN APPROVED SERVICE MANUAL PROCEDURES MAY VIOLATE FEDERAL AND STATE LAWS.

CAUTION : APPLY PARKING BRAKE WHEN SERVICING VEHICLE.

XX LITER
NCR5.2T5FEX3
NCRTG

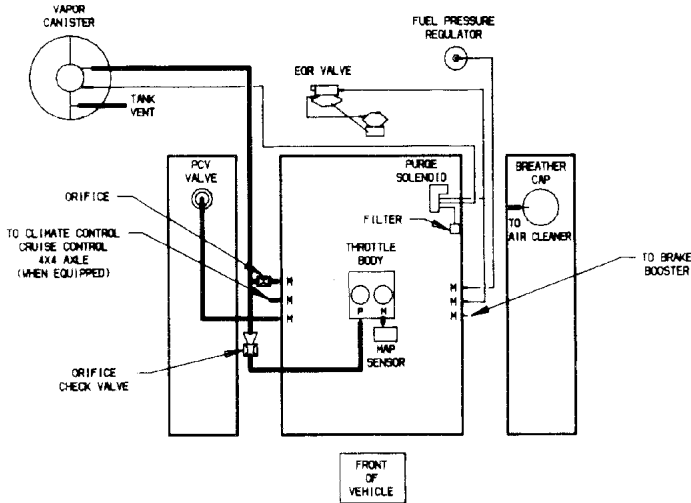
SPARK PLUGS

IDLE *
TIMING BTC

MAN
X

AUTO
X

NO OTHER ADJUSTMENTS NEEDED



Emission Labels 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 8.0L (EWA) Engine
Figure 025-140

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

53032	327AA	1	2, 3, 7, 8		33, 34	EWA			Federal, Export, Body Information
53032	328AA	1	2, 3, 7, 8		33, 34	EWA			Canada, Body Information
52102	734AA	1	2, 3, 7		33, 34	EWA			

1

IMPORTANT VEHICLE INFORMATION

THIS VEHICLE CONFORMS TO U.S. EPA REGULATIONS APPLICABLE TO 19XX MODEL YEAR NEW LIGHT-DUTY TRUCKS WITH A CURB WEIGHT GREATER THAN POUNDS AT ALL ALTITUDES.

CATALYST

* BASIC IGNITION TIMING AND IDLE FUEL/AIR MIXTURE HAVE BEEN PRESET AT THE FACTORY. SEE THE SERVICE MANUAL FOR PROPER PROCEDURES AND OTHER ADDITIONAL INFORMATION.

◦ ADJUSTMENTS MADE BY OTHER THAN APPROVED SERVICE MANUAL PROCEDURES MAY VIOLATE FEDERAL AND STATE LAWS.

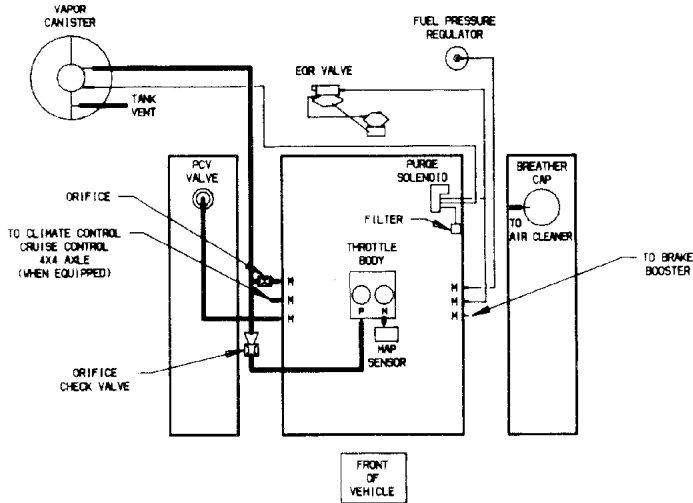
CAUTION : APPLY PARKING BRAKE WHEN SERVICING VEHICLE.

XX LITER
NCR5.2T5FEX3
NCRTG

SPARK PLUGS

IDLE * MAN AUTO
TIMING BTC X X

NO OTHER ADJUSTMENTS NEEDED




DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

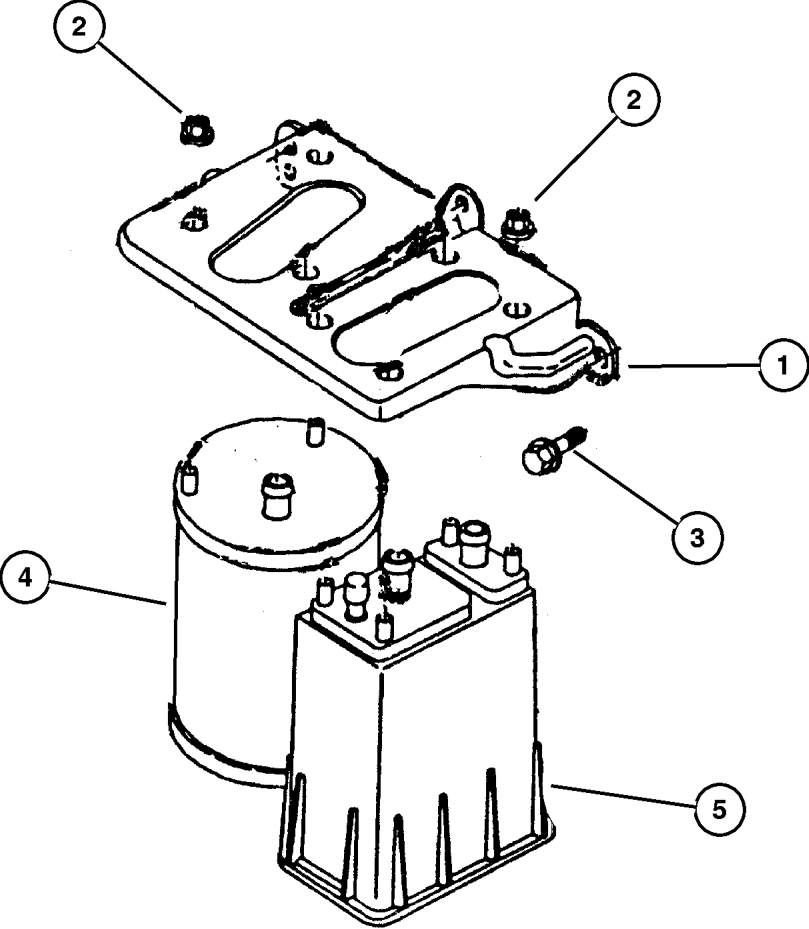Vacuum Canister 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 5.9L (ETC,ETH), 8.0L (EWA) Engine
Figure 025-340



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:
DG0 = All Automatic Transmissions
EL0 = All 5.2L 8 Cyl Gas Engines
EM0 = All 5.9L 8 Cyl Gas Engines
EW0 = All 8.0L Gas Engines

1	53030 893AB	1				EL0, EM0, EW0			BRACKET, Vapor Canister
2	6500 284	4				EL0, EM0, EW0			NUT, Hex, M6x1.00
		3				EL0, EM0, EW0			
3		2				ET0	DG0		BOLT, M8x1.25x13.00, (NOT SERVICED) (Not Serviced)
4	53031 584AC	1				EL0, EM0, EW0			CANISTER, Fuel Vapor
5	5303 0837	1				EL0, EM0, EW0			CANISTER, Vapor

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Emission Control Vacuum Harness 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 8.0L (EWA) Engine
Figure 025-440


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: EL0 = All 5.2L 8 Cyl Gas Engines EM0 = All 5.9L 8 Cyl Gas Engines EW0 = All 8.0L Gas Engines									
1									HARNESS, Vacuum Canister Purge
	53032 155AC	1				EL0, EM0, EW0			Federal, Canada Emissions - Federal
	53032 156AC	1				EL0, EM0, EW0			California - 2001 Emissions Tracking
2						EL0, EM0			HARNESS, Emission Control [With S/C XCJ]
	5303 2153	1				EW0			
	5303 2154	1				EW0			
3	6503 159	1				EW0			STUD, Double Ended, M6x1.0x38
4	4669 475AB	1				EL0, EM0, EW0			SOLENOID, Duty Cycle Purge
5	4865 228AA	1				EL0, EM0, EW0			SOLENOID, Duty Cycle Purge, Federal, Canada
-6	4897 709AA-	1				EL0, EM0, EW0			BRACKET PACKAGE, LDP/DCP And Filter, California
7	6035 956AA	1				EL0, EM0, EW0			SCREW, .250-14X1.500
-8	6101 839	3				EL0, EM0, EW0			SCREW AND WASHER, Hex Head, M8x1.25x40
9	53031 611AC	1				EL0, EM0, EW0			HOSE, Carbon Canister
-10									HARNESS, Emission Control Vacumn
	5304 1076	1				EW0			
	5503 6098	1				EL0, EM0			

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

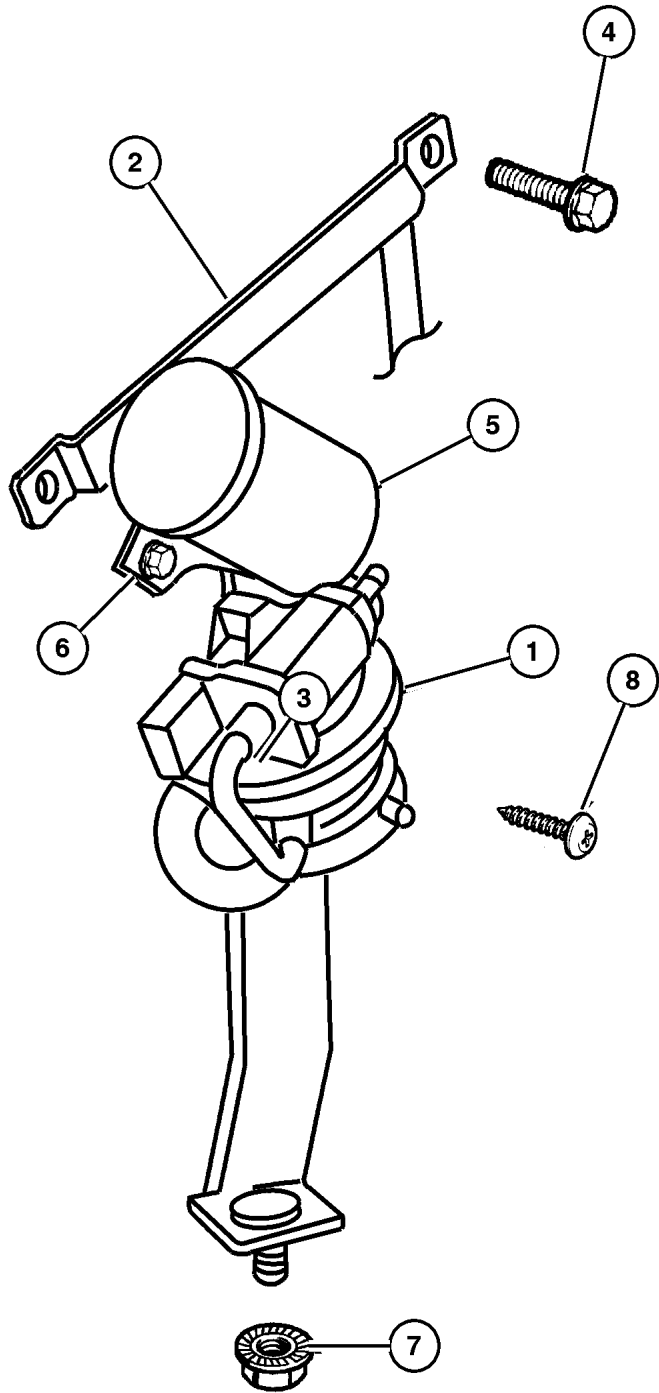Leak Detection Pump 5.2L (ELF), 5.9L (EML), 5.9L (EMM), 8.0L (EWA) Engine
Figure 025-450



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

EL0 = All 5.2L 8 Cyl Gas Engines

EM0 = All 5.9L 8 Cyl Gas Engines

EW0 = All 8.0L Gas Engines


1	4669 336AD	1				EL0, EM0, EW0			PUMP, Leak Detection
2	4897 709AA	1				EL0, EM0, EW0			BRACKET PACKAGE, LDP/DCP And Filter
3	5303 0877	1				EL0, EM0, EW0			HOSE, Filter to Leak Detection Pump
4	6101 839	3				EL0, EM0, EW0			SCREW AND WASHER, Hex Head, M8x1.25x40
5	4612 901	1				EL0, EM0, EW0			FILTER, Fuel Vapor Vent
6									SCREW, M6x1.00x11.00, (NOT SERVICED) (Not Serviced)
7	6100 051	1				EL0, EM0, EW0			NUT AND WASHER, Hex Nut-Coned Washer, M8 x 1.25
8	6035 482	3				EL0, EM0, EW0			SCREW, Tapping, .19-16x.375
-9	5017 181AA-	1				EL0, EM0, EW0			BRACKET, Duty Cycle Purge Solenoid

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

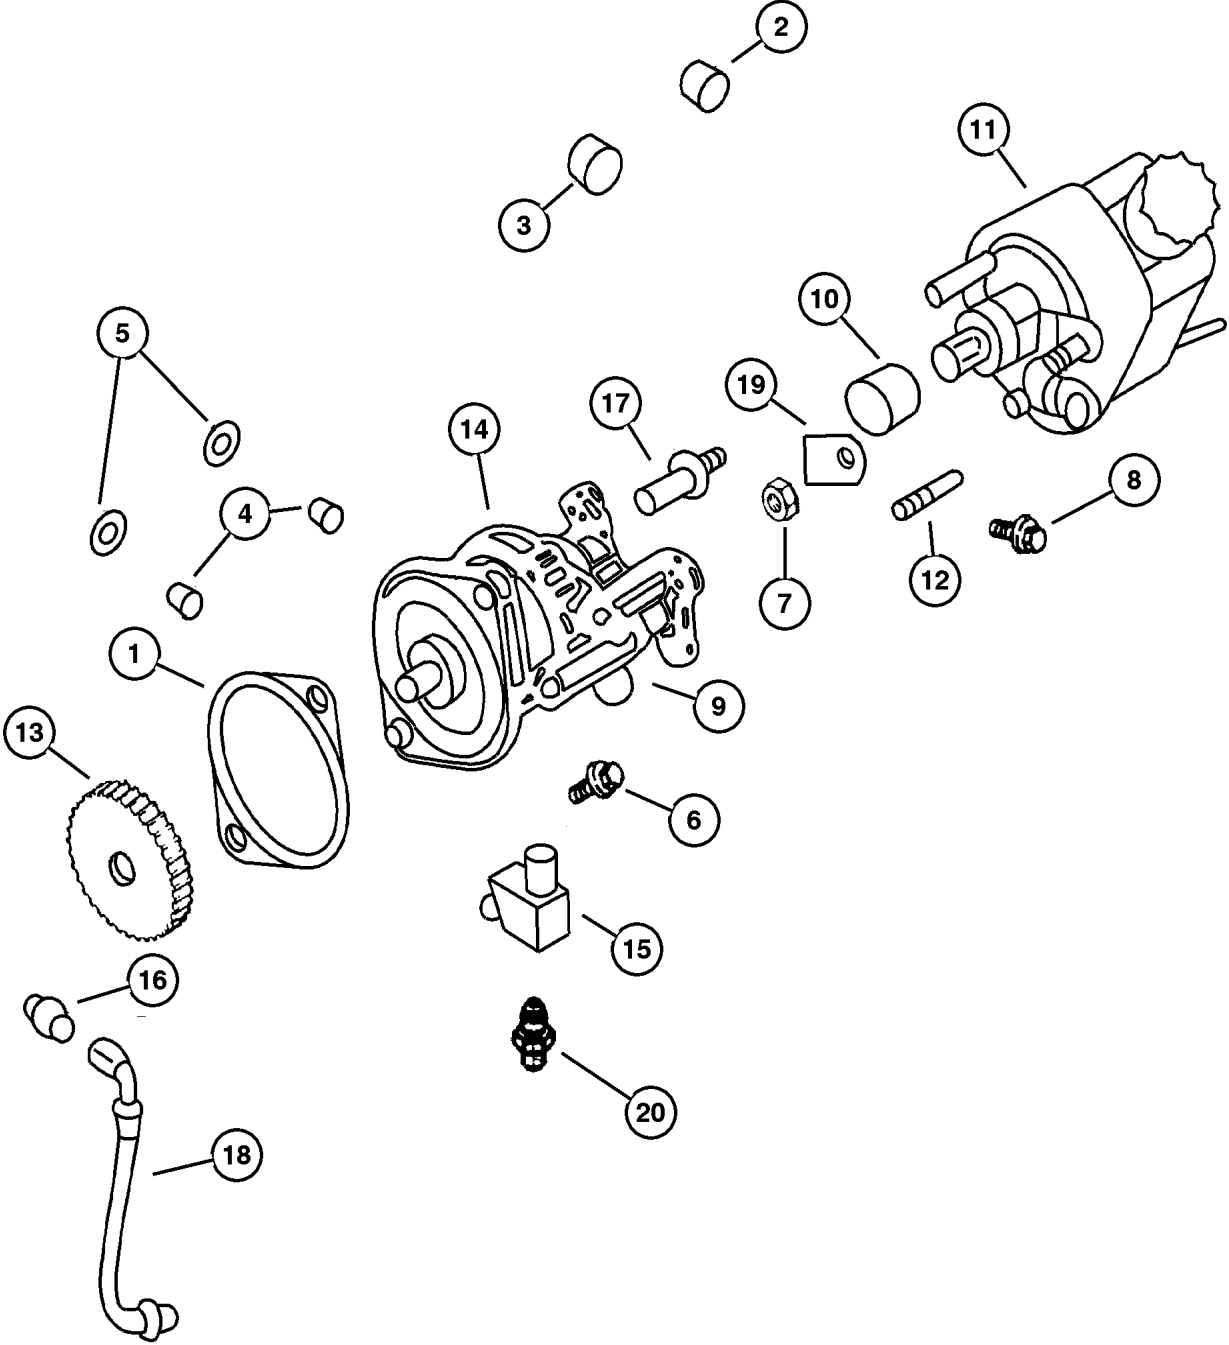Vacuum Pump 5.9L (ETC,ETH) Diesel Engine
Figure 025-470



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:
DBB = All Manual Transmissions
ETC = 5.9L Cummins 24V Diesel Engine
ETH = 5.9L HO Cummins Turbo Diesel Engine


1									GASKET, Hydraulic Pump
	4638 531	1				ETC			
		1				ETH	DBB		
2									PLUG, Pipe
	4429 568	1				ETC	DBB		
		1				ETH	DBB		
3									PLUG, Pipe
	4429 369	1				ETC			
		1				ETH	DBB		
4									PLUG, Expansion
	5003 614AA	4				ETC			
		2				ETH	DBB		
5									O RING
	5003 604AA	2				ETC			
		1				ETH	DBB		
6									SCREW, Hex Head, m12X1.75X.35
	4429 637	1				ETC			
		1				ETH	DBB		
7									NUT, Hex Flange, M10x1.5
	4429 862	1				ETC			
		1				ETH	DBB		
8									SCREW, Hex Head, M8x1.25x12
	5011 818AA	1				ETC			
		1				ETH	DBB		
9									NUT, Hex Flange, M10x1.5
	4429 862	1				ETC			
		1				ETH	DBB		
10									HUB, Hydraulic Brake Pump
	4728 162	1				ETC			
		1				ETH	DBB		
11									PUMP, Power Steering
	4883 960AA	1				ETC			
12									STUD
	4761 972	4				ETC			
		4				ETH	DBB		
13									GEAR, Accessory Drive
	5011 797AA	1				ETC			

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

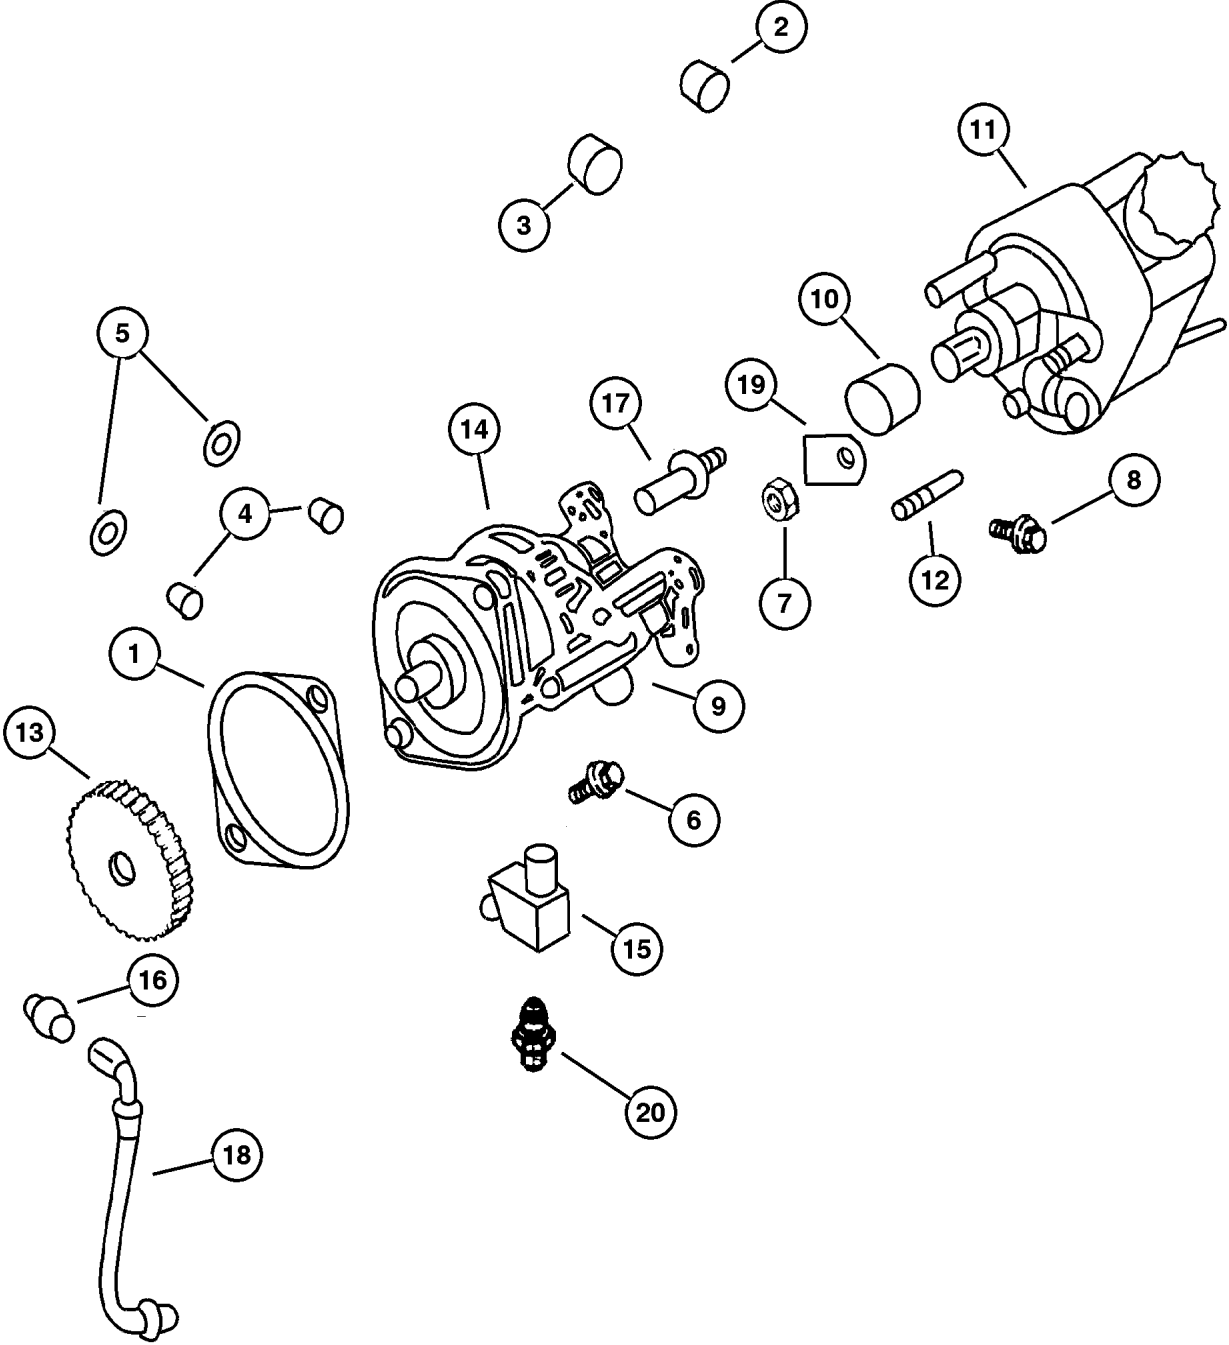Vacuum Pump 5.9L (ETC,ETH) Diesel Engine
Figure 025-470



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1				ETH	DBB		
14	5011 796AA	1				ETC			PUMP, Vacuum
		1				ETH	DBB		
15	5011 617AA	1				ETC			CHECK VALVE, Vacuum Pump
		1				ETH	DBB		
16	5003 637AA	1				ETC			NIPPLE, Pump
		1				ETH	DBB		
17	5011 421AA	1				ETC			SCREW
		1				ETH	DBB		
18	5011 428AA	1				ETC			HOSE, Vacuum Pump
	5015 841AA	1				ETH	DBB		ETC Only
19	5011 799AA	1				ETC			ETC+XCK and ETH All
		1				ETH	DBB		BRACKET, Vacuum Pump
20	4638 529	1				ETC			CONNECTOR, Vacuum, With Caps
		1				ETH	DBB		
-21	5140 342AA-	1				ETC			SEAL KIT, Vacuum Pump
		1				ETH	DBB		

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Air Pump 5.9L (EMM), 8.0L (EWA) Engine
Figure 025-510

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------


Note:									
EMM = Magnum 5.9L SMPI V8 Engine									
EW0 = All 8.0L Gas Engines									
1									SCREW AND WASHER, Hex Head, M6x1x18
	6501 714	3				EMM			
		3				EW0			
2									PULLEY, Air Pump
	5300 8638	1				EMM			
		1				EW0			
3									BOLT, .375-16x5.0, (NOT SERVICED) (Not Serviced)
4									PUMP, Fuel Injection
	5303 0503	1				EMM			
		1				EW0			
5									BRACKET, Air Pump And Tensioner
	5300 8344	1				EMM			
	53005 621AB	1				EW0			
6	53010 013AB	1				EW0			BRACE, Alternator
7									BOLT, .312-18x.75, (NOT SERVICED) (Not Serviced)

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

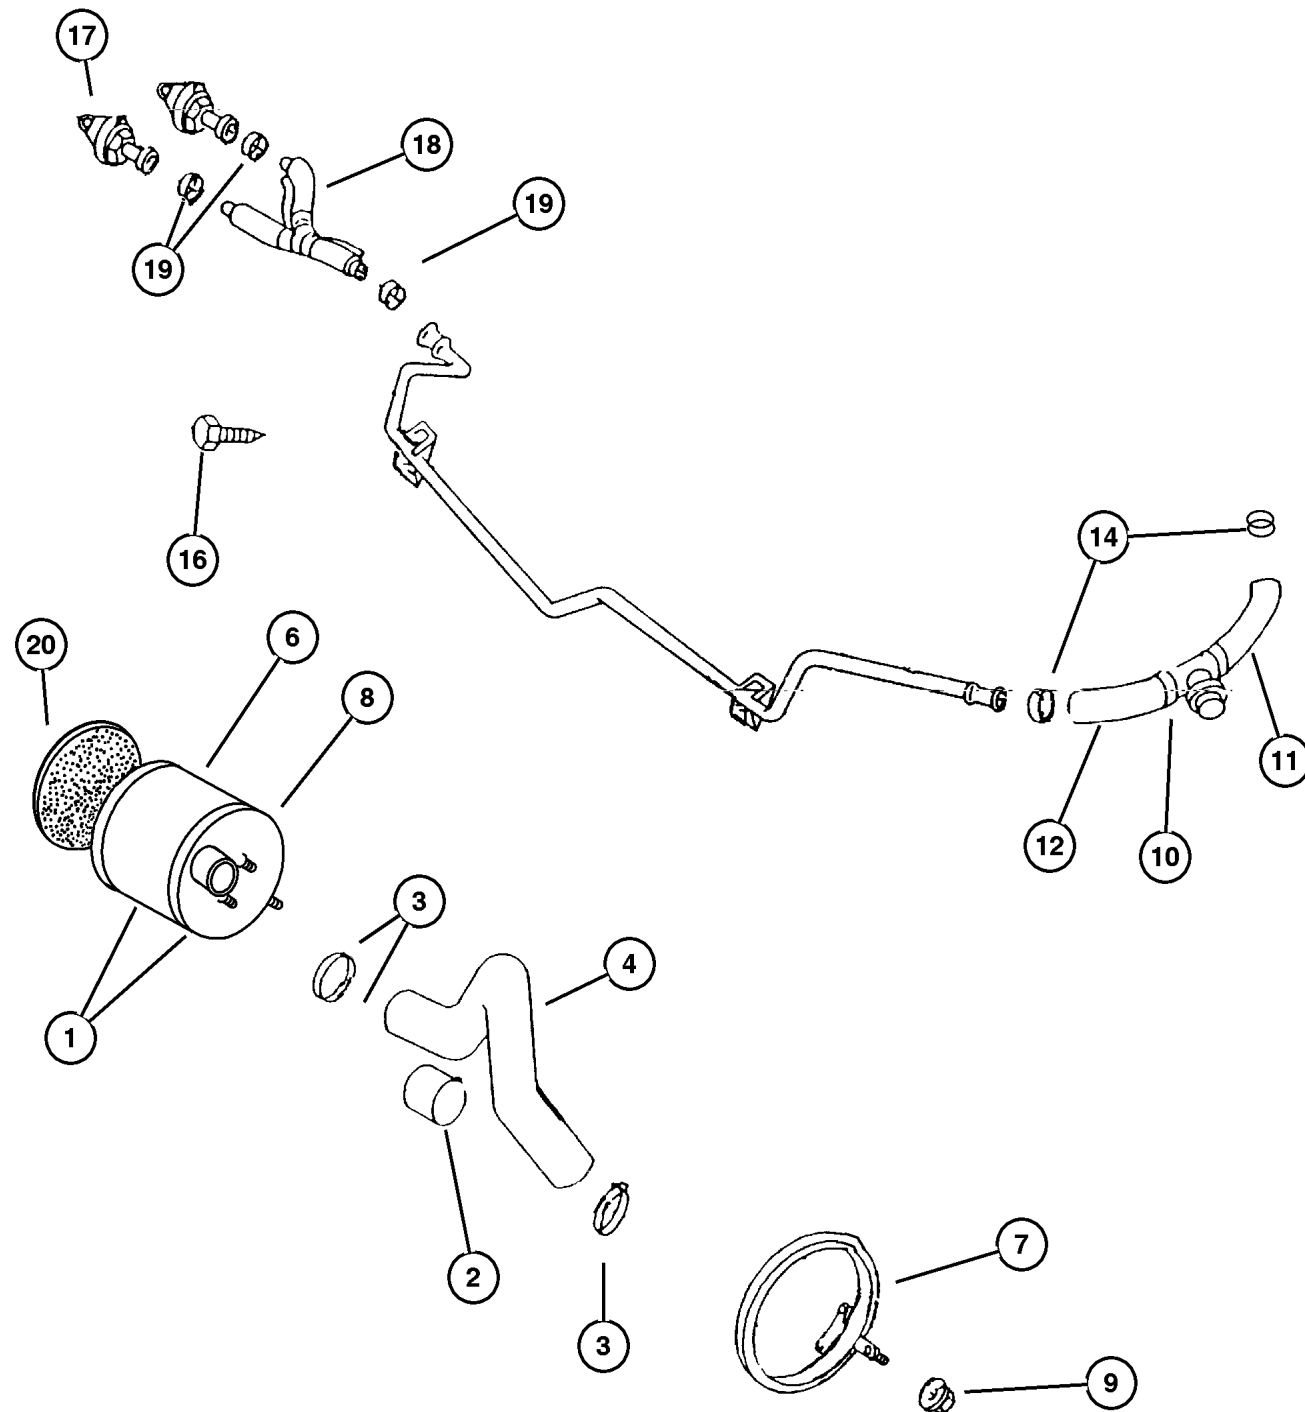Air Injection Plumbing 8.0L (EWA) Engine Figure 025-520



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note:									
EMM = Magnum 5.9L SMPI V8 Engine									
EW0 = All 8.0L Gas Engines									
1	4324 506	1				EW0			FILTER, Air Pump
2	5304 1014	1				EW0			CAP, Air Pump Filter
3	5304 1045	1				EW0			CLAMP, Hose
4									TUBE, Air Pump Inlet
	5304 0053	1				EW0			Up to Built Date 12/16/99
	53040 053AB	1				EW0			After Built Date 12/16/99
-5	5303 1546	1				EW0			REDUCER, Air Pump Inlet
6	5013 449AA	1				EW0			BODY, Air Cleaner
7	5304 1077	1				EW0			BRACKET, Air Pump Silencer Filter
8	5013 450AA	1				EW0			COVER, Air Cleaner
9	6033 560	3				EW0			NUT AND WASHER, Hex Nut-Coned Washer, .25-20
10	5303 0577	1				EW0			VALVE, Air Injection
11	5303 0217	1				EW0			HOSE, Relief Valve
12	5303 0535	1				EMM			TUBE, Fuel
-13	5304 1060	1				EW0			HOSE, Relief Valve
14	2448 762	2				EW0			CLAMP, Hose
-15	53030 661AB-	1			34	EW0			TUBE, Aspirator Downstream
16	6502 468	4				EW0			SCREW, Hex Flange Head, M8x1.25x20
17	5303 0467	2				EW0			VALVE, Air Injection
18									TUBE, Aspirator Downstream
	53031 224AB	1	2, 7		33	EW0			
	53031 557AB	1	3, 8		34	EMM			
		1	2, 3, 7, 8		32, 34	EW0			
19									CLAMP, Hose
	2448 761	3	2, 3, 7, 8		34	EW0			
		3	2, 7		33	EW0			
20	5013 448AA	1				EW0			FILTER, Air

DODGE RAM QUAD CAB/CLUB CAB (BE)


SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Group – DBE

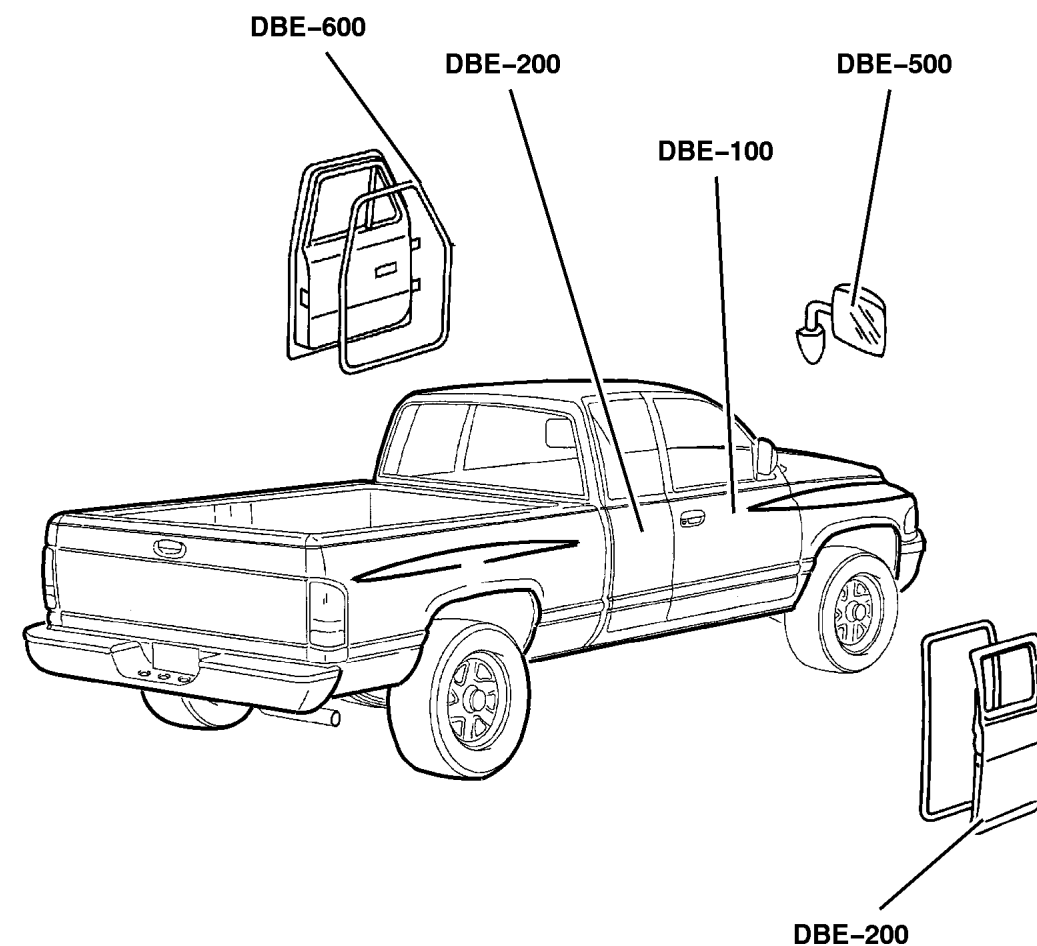Doors and Related Parts





DBE-100 Front Door	DBE-200 Rear Door	DBE-500 Exterior Mirror	DBE-600 Weatherstrips and Seals

GROUP DBE - Doors and Related Parts

Illustration Title	Group-Fig. No.
Front Door	
Door, Front Shell and Hinges	Fig. DBE-110
Door, Front Glass and Regulators	Fig. DBE-120
Door, Front Lock and Controls	Fig. DBE-130
Rear Door	
Half Door, and Hinges	Fig. DBE-210
Half Door, Glass and Controls	Fig. DBE-220
Exterior Mirror	
Exterior Mirror	Fig. DBE-515
Weatherstrips and Seals	
Front Door	Fig. DBE-610
Half Door	Fig. DBE-620

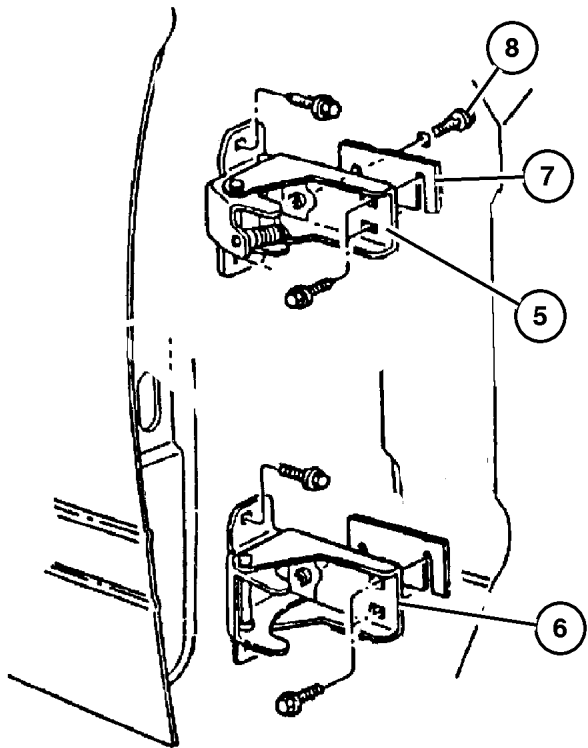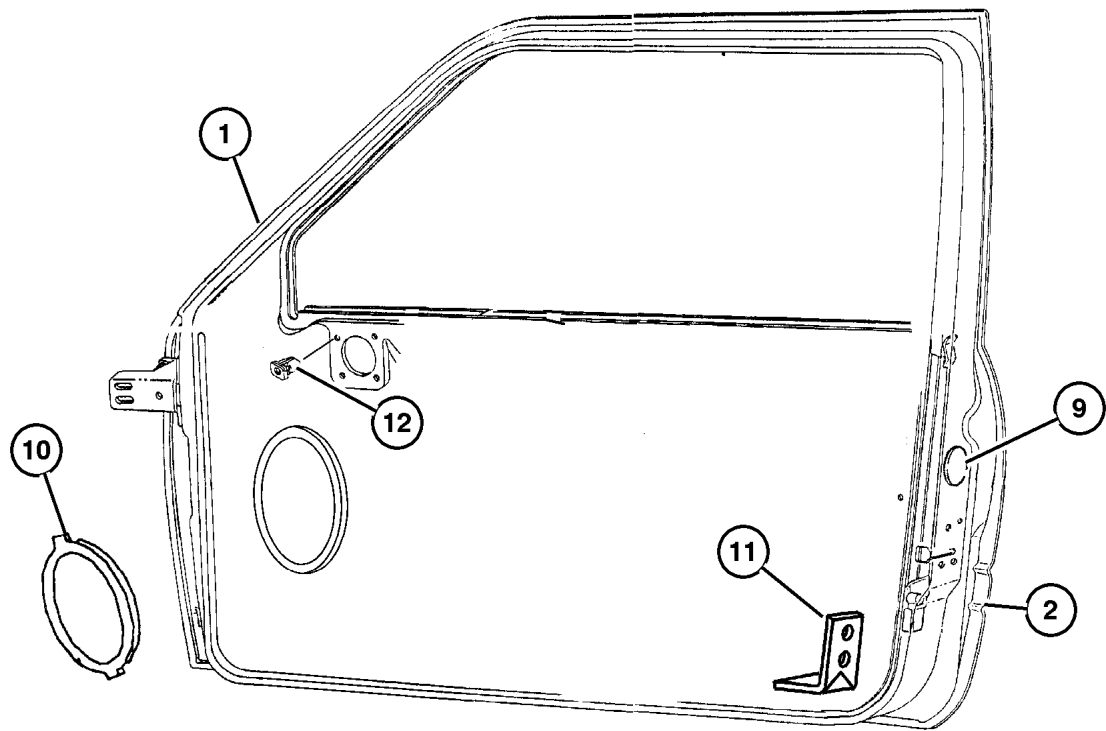Door, Front Shell and Hinges
Figure DBE-110



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									DOOR, Front
	55023 572AE	1	1, 6		31				Right
	55023 573AE	1	1, 6		31				Left
	55274 978AD	1			33, 34				Right
	55274 979AD	1			33, 34				Left
2									PANEL, Door Outer
	5527 4972	1			33, 34				Right
	5527 4973	1			33, 34				Left
	5502 3570	1	1, 6		31				Right
	5502 3571	1	1, 6		31				Left
-3									WATERDAM, Front Door
	5513 4612	1							Right
	5513 4613	1							Left
-4	55275 459AA-	2			33, 34				TAPE, Anti Chip
5									HINGE, Door
	55075 956AB	1							Upper Right
	55075 957AB	1							Upper Left
6	55275 464AA	2							HINGE, Door, Lower
7	5507 4736	AR							SHIM, Door Hinge
8	6503 538	8							SCREW AND WASHER, Hex Head, M8x1.25x30
9	4440 486	2							PLUG, Body, 19.05mm x 31.75mm
10	5513 5002	2							PATCH, Waterdam Speaker
11									REINFORCEMENT, Door Inner
	5534 6416	2	1, 6		31				
		1			33, 34				
12	6034 715	8							CLIP, Speaker


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Door, Front Glass and Regulators

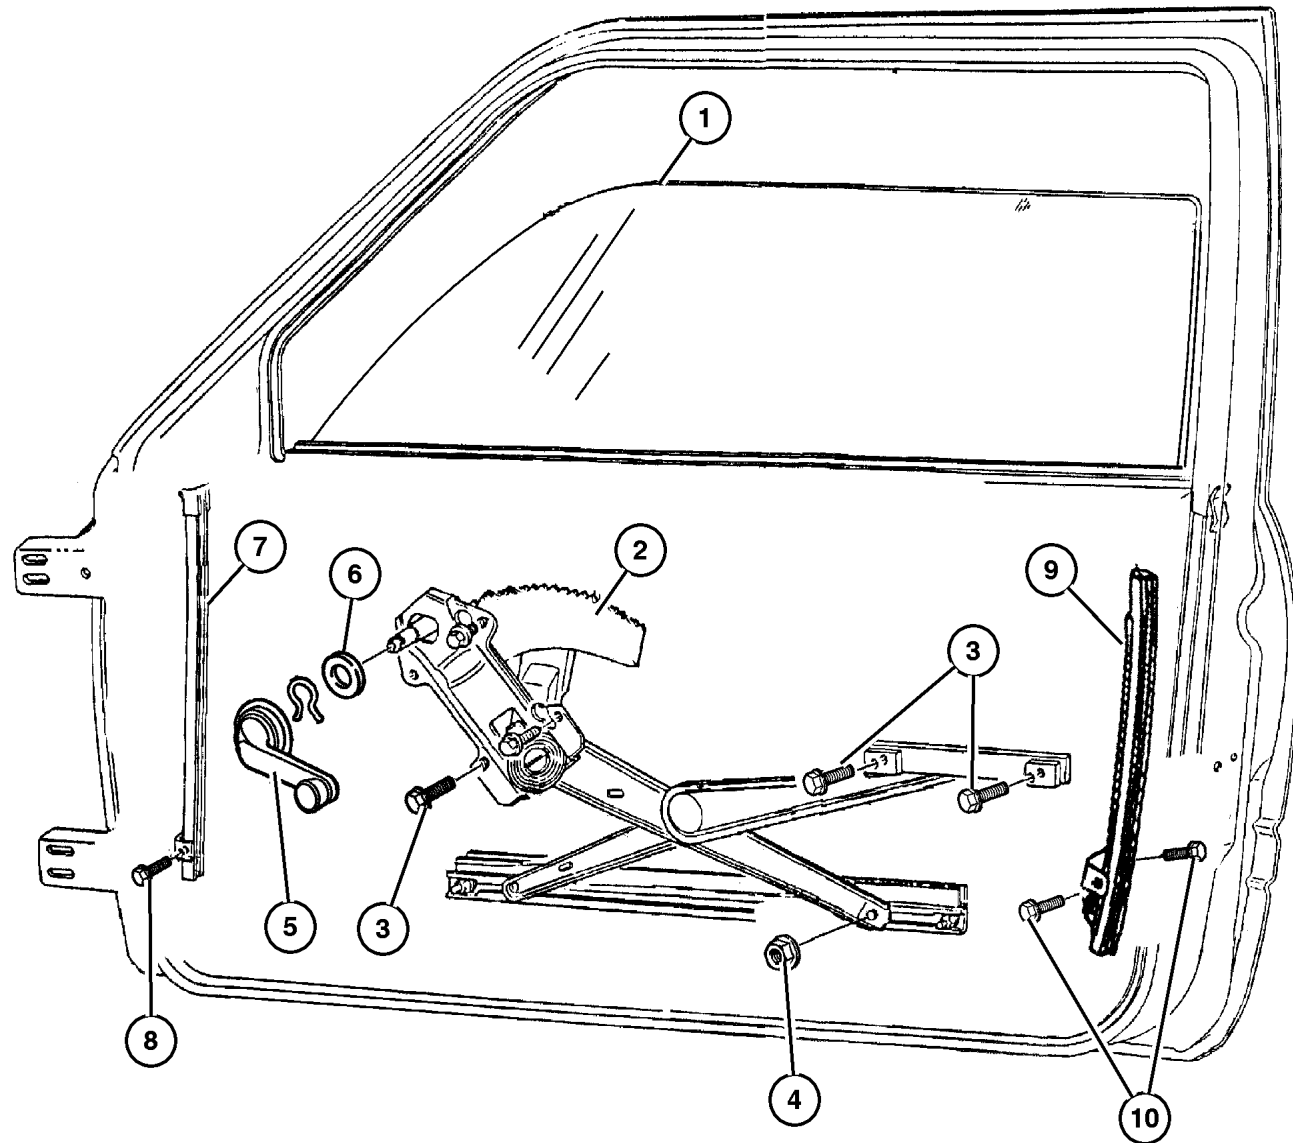Figure DBE-120

[illegible]

DODGE RAM QUAD CAB/CLUB CAB (BE)

L = Ram Truck (All)

LINE

1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

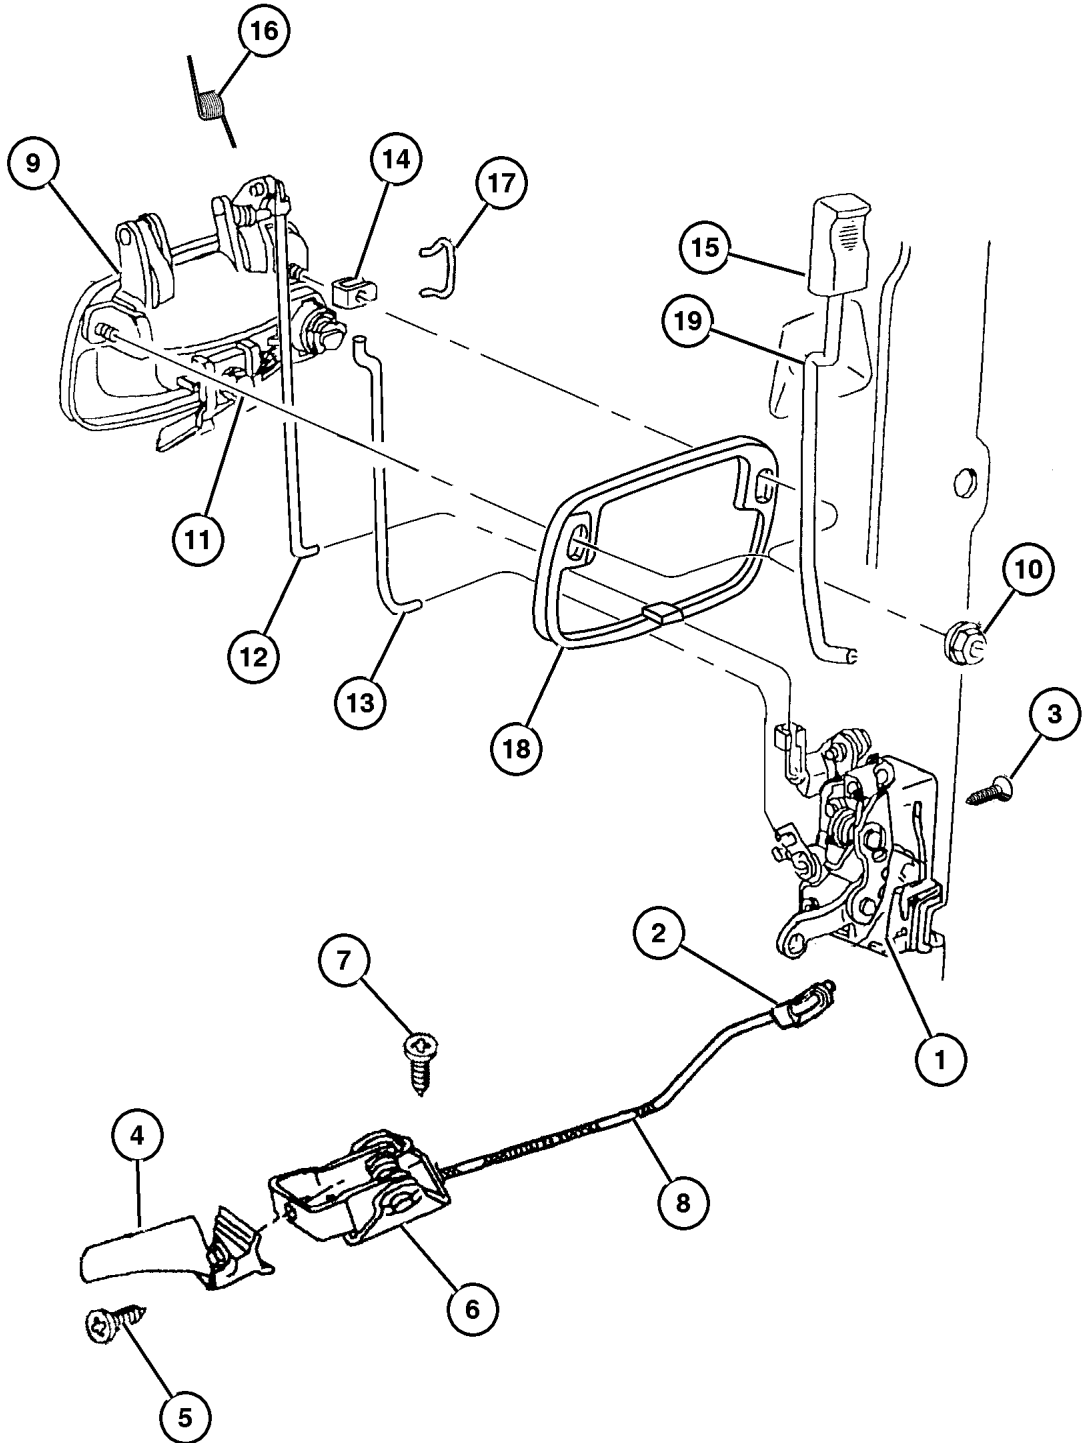
TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Door, Front Lock and Controls
Figure DBE-130




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									LATCH, Front Door
	5507 6288	1							Manual, Right
	5507 6289	1							Manual, Left
	5507 6290	1							Electric, Right
	5507 6291	1							Electric, Left
2									CLIP, Latch Link
	4658 674	1							Right
	4658 675	2							Left
3	6033 876	6							SCREW, Tapping, M6.3x1.8x38.1
4									HANDLE, Interior Door
	5507 5338	1							Right
	5507 5339	1							Left
5	6503 124	4							SCREW, Hex Head Tapping,
									M6x1x20
6									REMOTE CONTROL, Door
	5507 6124	1							Right
	5507 6125	1							Left
7	6503 124	4							SCREW, Hex Head Tapping,
									M6x1x20
8									LINK, Remote Handle to Latch
	5507 4726	1							Right
	5507 4727	1							Left
9									HANDLE, Front Door Exterior
	5527 5022	1							Right
	5527 5023	1							Left
10	6101 443	4							NUT AND WASHER, Hex, M5x.80
11									SCREW, (NOT SERVICED) (Not
									Serviced)
12	5507 4724	2							LINK, Exterior Door Handle
13									LINK, Key Cylinder To Latch
	5507 6004	1							Right
	5507 6005	1							Left
14									CLIP, Lever Key Cylinder, (NOT
									SERVICED) (Not Serviced)
15									KNOB, Door
	JS24 MAZ	1							Agate
	JS24 RC3	1							Gray
	JS24 SK5	1							Tan
16									SPRING, Outside Door Handle,
									(NOT SERVICED) (Not Serviced)

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

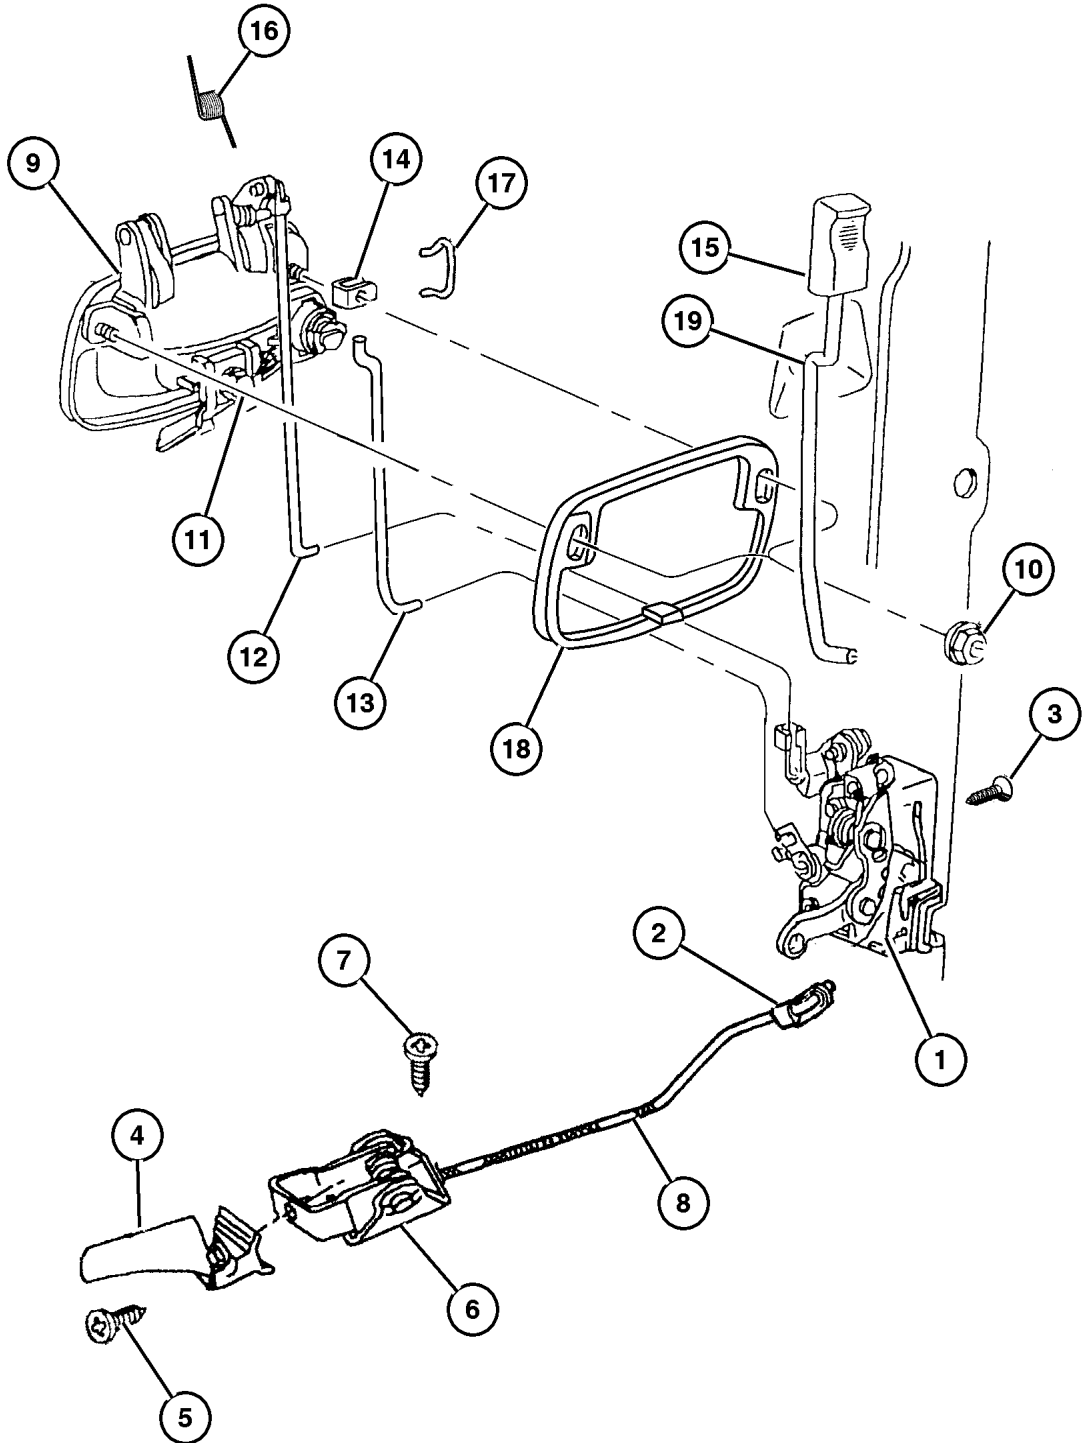Door, Front Lock and Controls
Figure DBE-130



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
17									CLIP, (NOT SERVICED) (Not Serviced)
18									BRACKET, (NOT SERVICED) (Not Serviced)
19									ROD, Inside Lock to Latch
	5507 6354	1							Right
	5507 6355	1							Left

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Half Door, and Hinges
Figure DBE-210


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									DOOR, Side Cargo
	55274 970AB	1			33, 34				Right
	55274 971AB	1			33, 34				Left
-2									PANEL, Front Door Outer Repair
	55274 962AB-	1			33, 34				Right
	55274 963AB-	1			33, 34				Left
3	5527 5157	4			33, 34				HINGE, Door
4	5527 5238	2			33, 34				CHECK, Rear Door
5									WATERDAM, Rear Door, (NOT SERVICED) (Not Serviced)
6									EXHAUSTER, Quarter Panel
	55055 836AB	1			33, 34				Right
	55055 837AB	1			33, 34				Left
7									PLATE, Front Door Striker
	5525 6000	2	1, 6		31				
		2			33, 34				
-8	4520 288	2							STRIKER, Door Latch

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

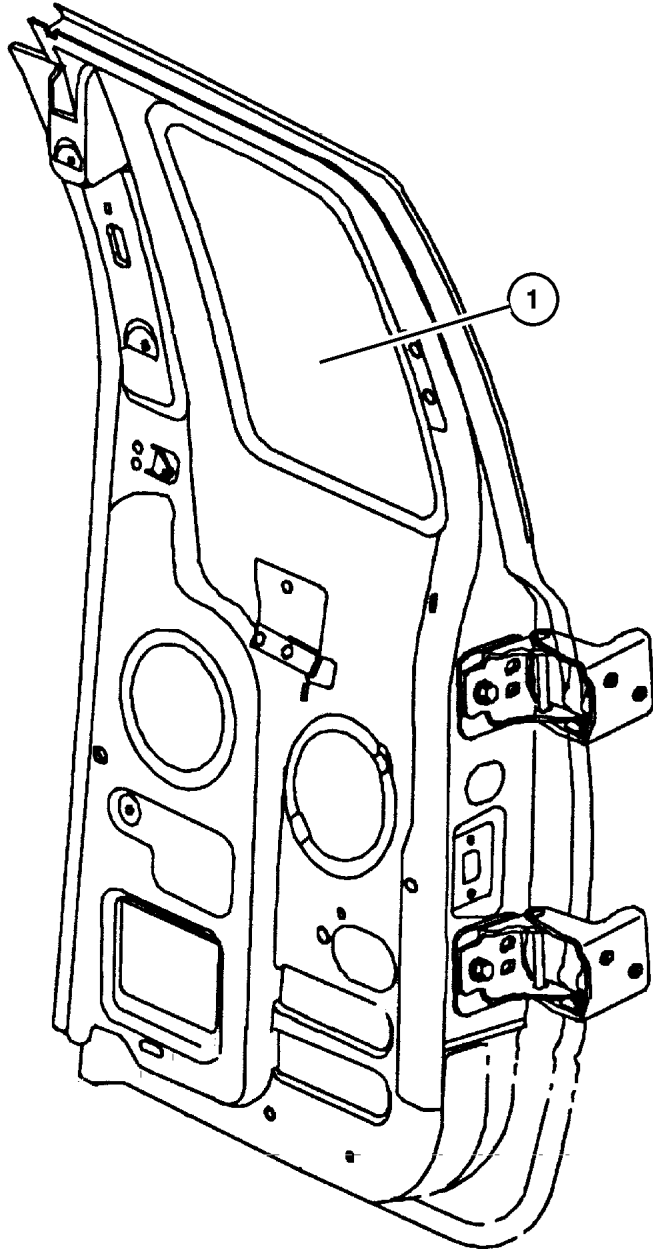Half Door, Glass and Controls Figure DBE-220



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									GLASS, Quarter
	55275 054AC	1			33, 34				Right
	55275 055AC	1			33, 34				Left
-2									LATCH, Body Side Glass, 04897392AB, (NOT SERVICED)
									(Not Serviced)
-3	6505 407AA-	4			33, 34				SCREW, Half Door Surface Handle Attaching
-4	6502 640	8			33, 34				BOLT, Hex Flange Head, M6x1.0x17
-5									LATCH, Cargo Door
	55275 098AD-	1			33, 34				Upper, Right
	55275 099AD-	1			33, 34				Upper, Left
	5527 5100	1			33, 34				Lower, Right
	5527 5101	1			33, 34				Lower, Left
-6									ROD, Cargo Door Latch to Lock
	55275 114AB-	1			33, 34				Right
	55275 115AB-	1			33, 34				Left
	55275 456AA-	1			33, 34				Upper, Right
	55275 457AA-	1			33, 34				Upper, Left
-7									HANDLE, Cargo Door Shutface
	5527 5108	1			33, 34				Right
	5527 5109	1			33, 34				Left
-8	5527 5106	2			33, 34				CABLE, DOOR, CARGO



DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

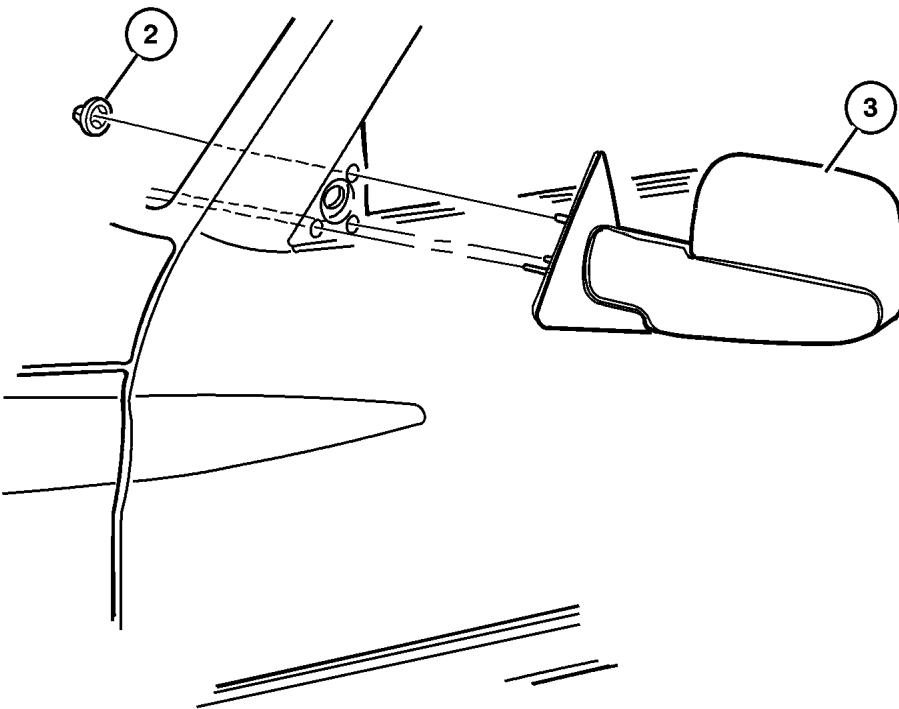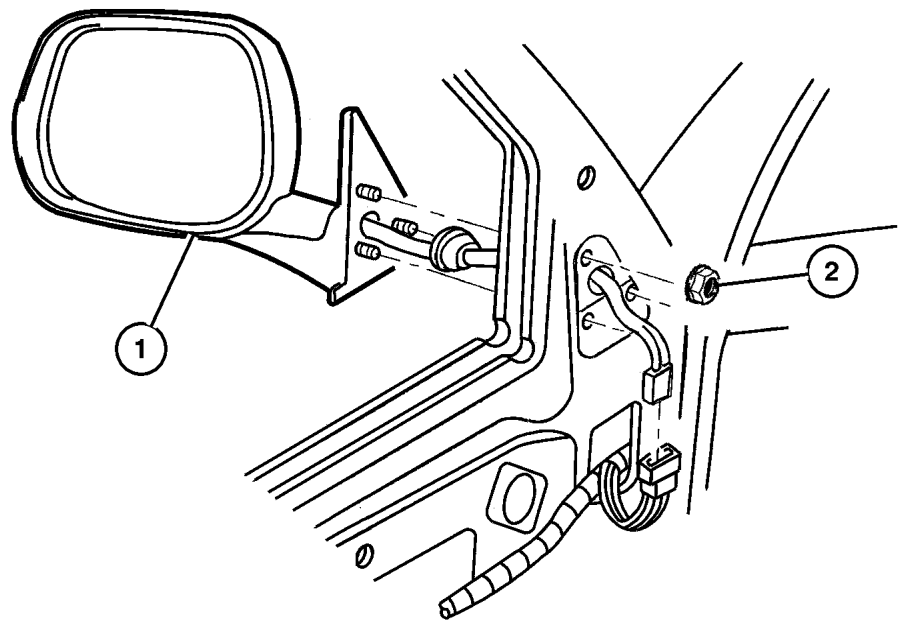Exterior Mirror
Figure DBE-515



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
------	----------------	-----	------	--------	------	--------	-------	------	-------------

Note:

GPC = Mirrors - Chrome, Trailer Tow

GPU = Mirrors - 6 x 9 Black

GPV = Mirrors - 6 x 9 Power Heated, Black

GTS = Mirrors - Power Heated, Fold-Away

1									MIRROR, Outside Rearview
	55076 478AB	1							Manual - Foldaway (GPU), Right
	55076 479AB	1							Manual - Foldaway (GPU), Left
	55076 488AB	1							Elect - Heated Foldaway (GTS),
									Right
	55076 489AB	1							Elect - Heated Foldaway (GPV,
									GTS), Left
	55076 744AC	1							Elect - Heated (GPV), Right
	55077 122AB	1							Elect Heated Foldaway (Europe)
									(GTS), Right
	4746 372	1							Manual (GPC), Right,Left
2	J420 0408	6							NUT AND WASHER, Hex Nut-Coned
									Washer, M5 x 0.80
3									MIRROR KIT, Trailor Tow
	55156 334AA	1							Right
	55156 335AA	1							Left
-4									GLASS, Mirror Replacement
	5019 890AA-	1							Foldaway (GPU), Right
	5019 891AA-	1							Foldaway (GPU), Left
	5019 892AA-	1							Elect - Heated Foldaway (GTS),
									Right
	5019 893AA-	1							Elect - Heated Foldaway (GTS),
									Left
		1							Elect - Heated (GPV), Left


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

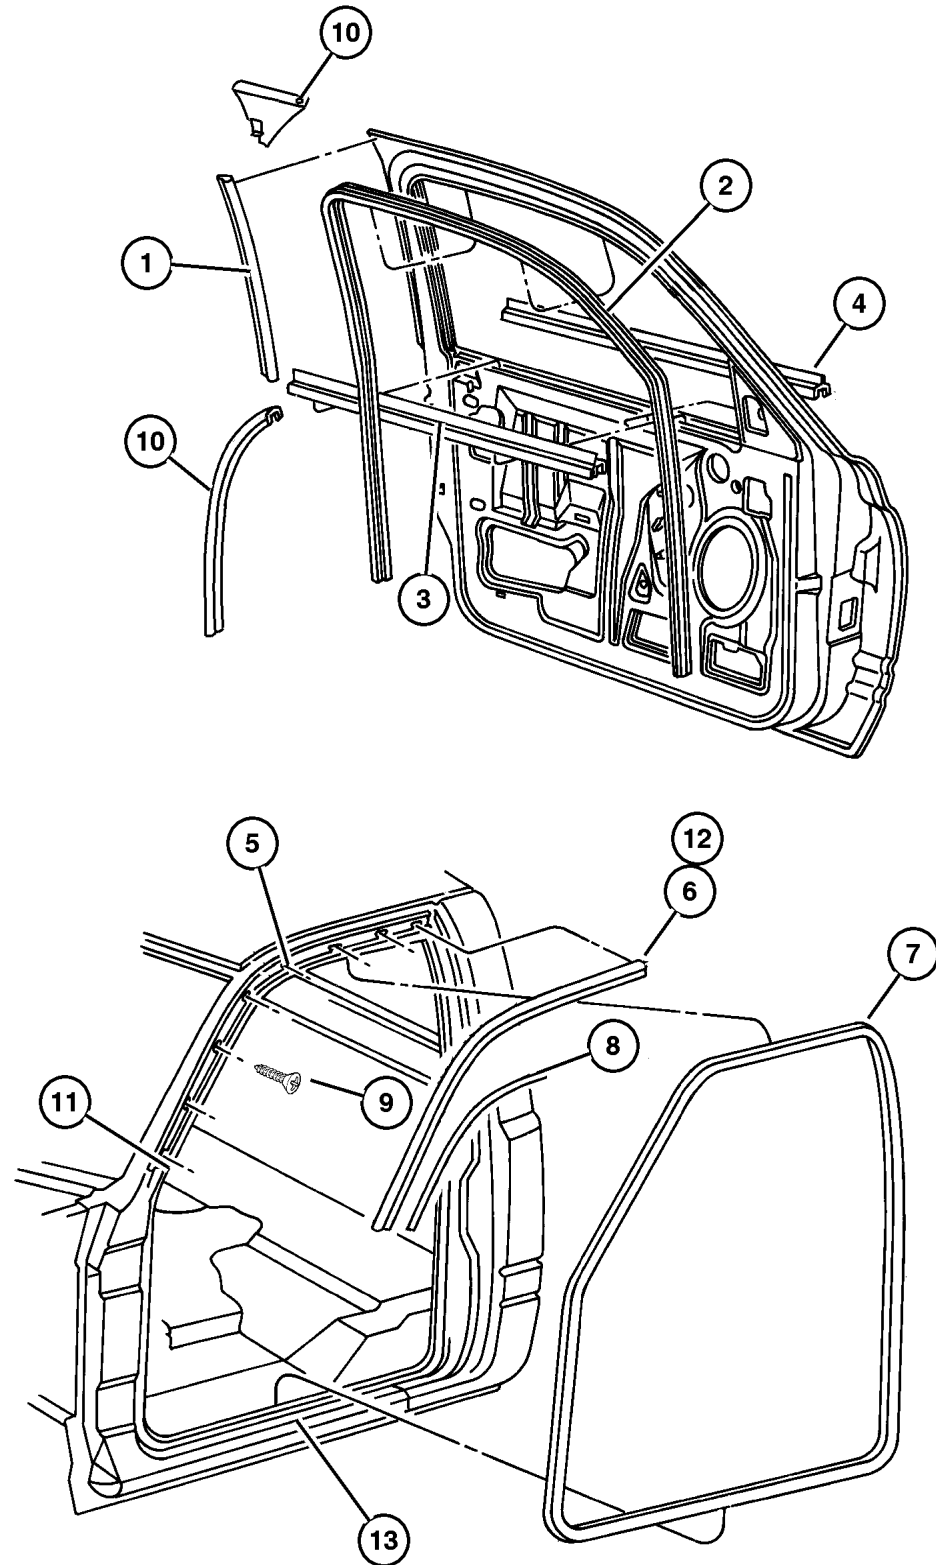Front Door Figure DBE-610



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	5513 5304	2	1, 6		31				SEAL, B-Pillar
2	5513 5252	1							SEAL, Glass Run, Front Right
	5513 5253	1							Left
3	5513 4598	2							WEATHERSTRIP, Front Door Belt
4	55275 504AA	1							WEATHERSTRIP, Door Belt Right
	55275 505AA	1							Left
5									RETAINER, Bodyside Seal
	55135 004AC	1	1, 6		31				Right
	55135 005AC	1	1, 6		31				Left
	55275 056AC	1			33, 34				Right
	55275 057AC	1			33, 34				Left
6	55275 436AE	2	1, 6		31				WEATHERSTRIP, Body Side Right
	55275 437AB	AR	1, 6		31				Left
7									WEATHERSTRIP, Front Door
	55276 282AA	2			33, 34				
	55276 286AA	2	1, 6		31				
8	55275 394AB	2							MOLDING, Door
9	0153 341	20							SCREW, Pan Head, .64-18x.50
10									SEAL, (NOT SERVICED) (Not Serviced)
11	55275 508AA	1							SEAL, Body Side Right
	55275 509AA	1							Left
12	55275 460AC	2			33, 34				SEAL, Body Side
13	55275 424AA	1			33, 34				SEAL, Front Door Right
	55275 425AA	1			33, 34				Left

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines


TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Half Door
Figure DBE-620

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									WEATHERSTRIP, Cargo Door
	55275 040AG	1			33, 34				Right
	55275 041AG	1			33, 34				Left
2	55275 426AA	2			33, 34				WEATHERSTRIP, Cargo Door
-3	55276 503AA-	1			33, 34				WEATHERSTRIP, Front Door

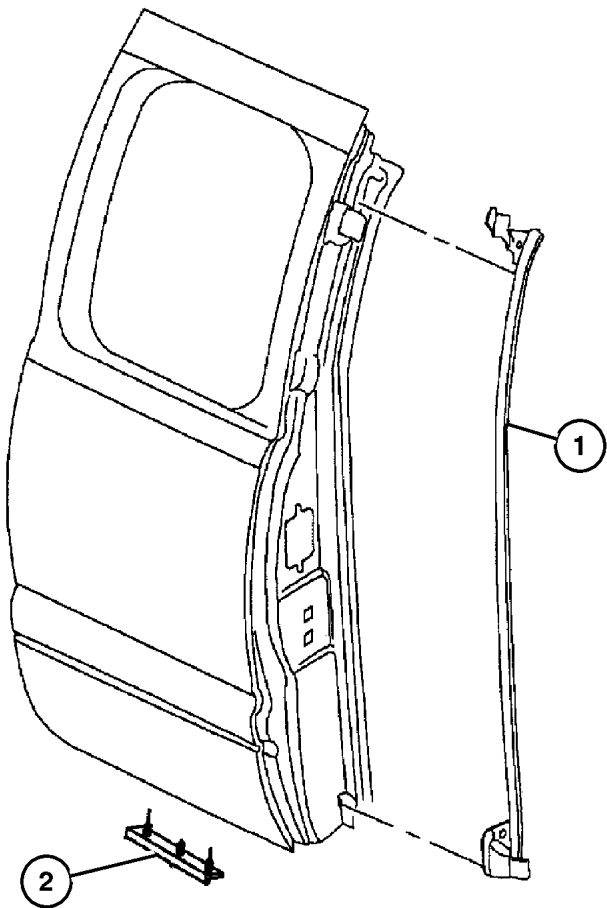

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Group – EBE

Exterior Ornamentation

GROUP EBE - Exterior Ornamentation

Illustration Title Group-Fig. No.

Nameplates

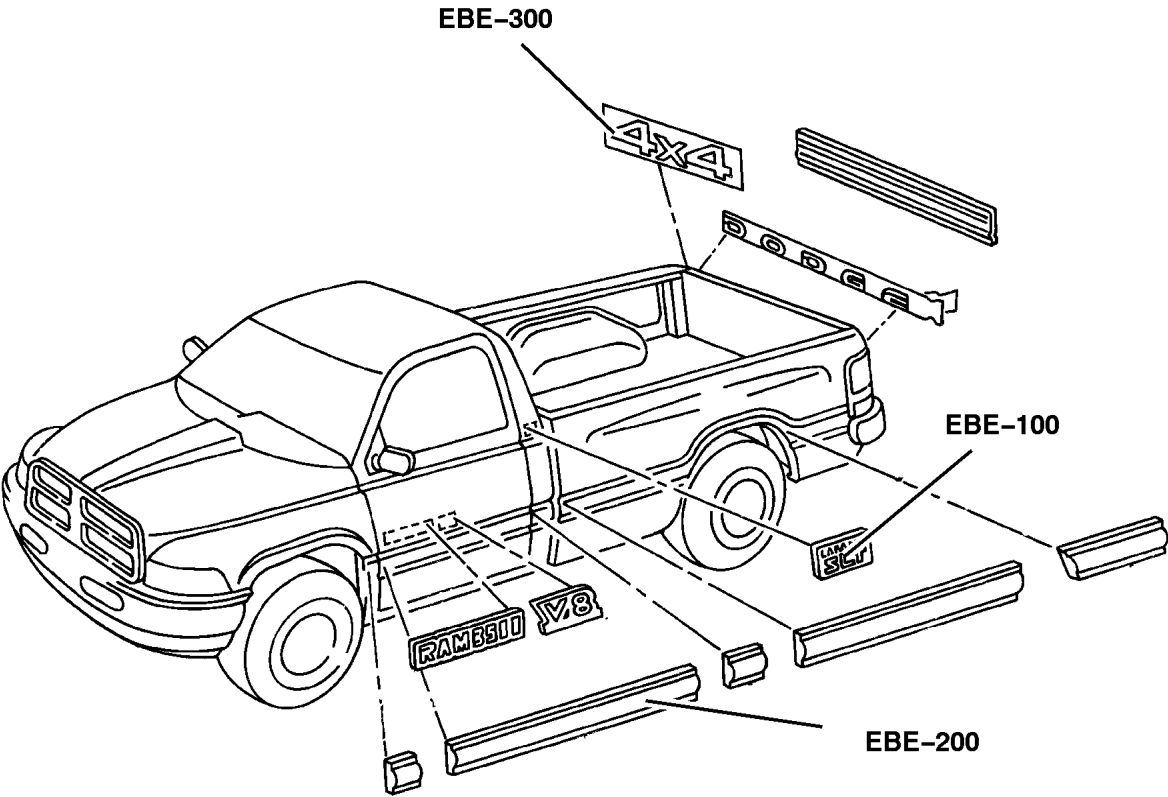
Nameplates Fig. EBE-140






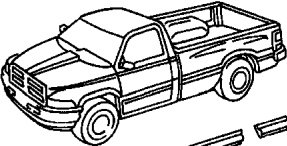
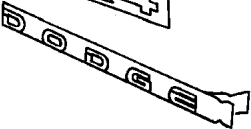

Moldings and Ornamentation

Moldings Fig. EBE-210


Decals and Tapestripes

Tape Stripes and Decals Fig. EBE-350



<div>EBE-100</div> <div>Nameplates</div> <div></div>	<div>EBE-200</div> <div>Moldings and Ornamentation</div> <div></div>	<div>EBE-300</div> <div>Decals and Tapestripes</div> <div></div>	
--	--	---	--

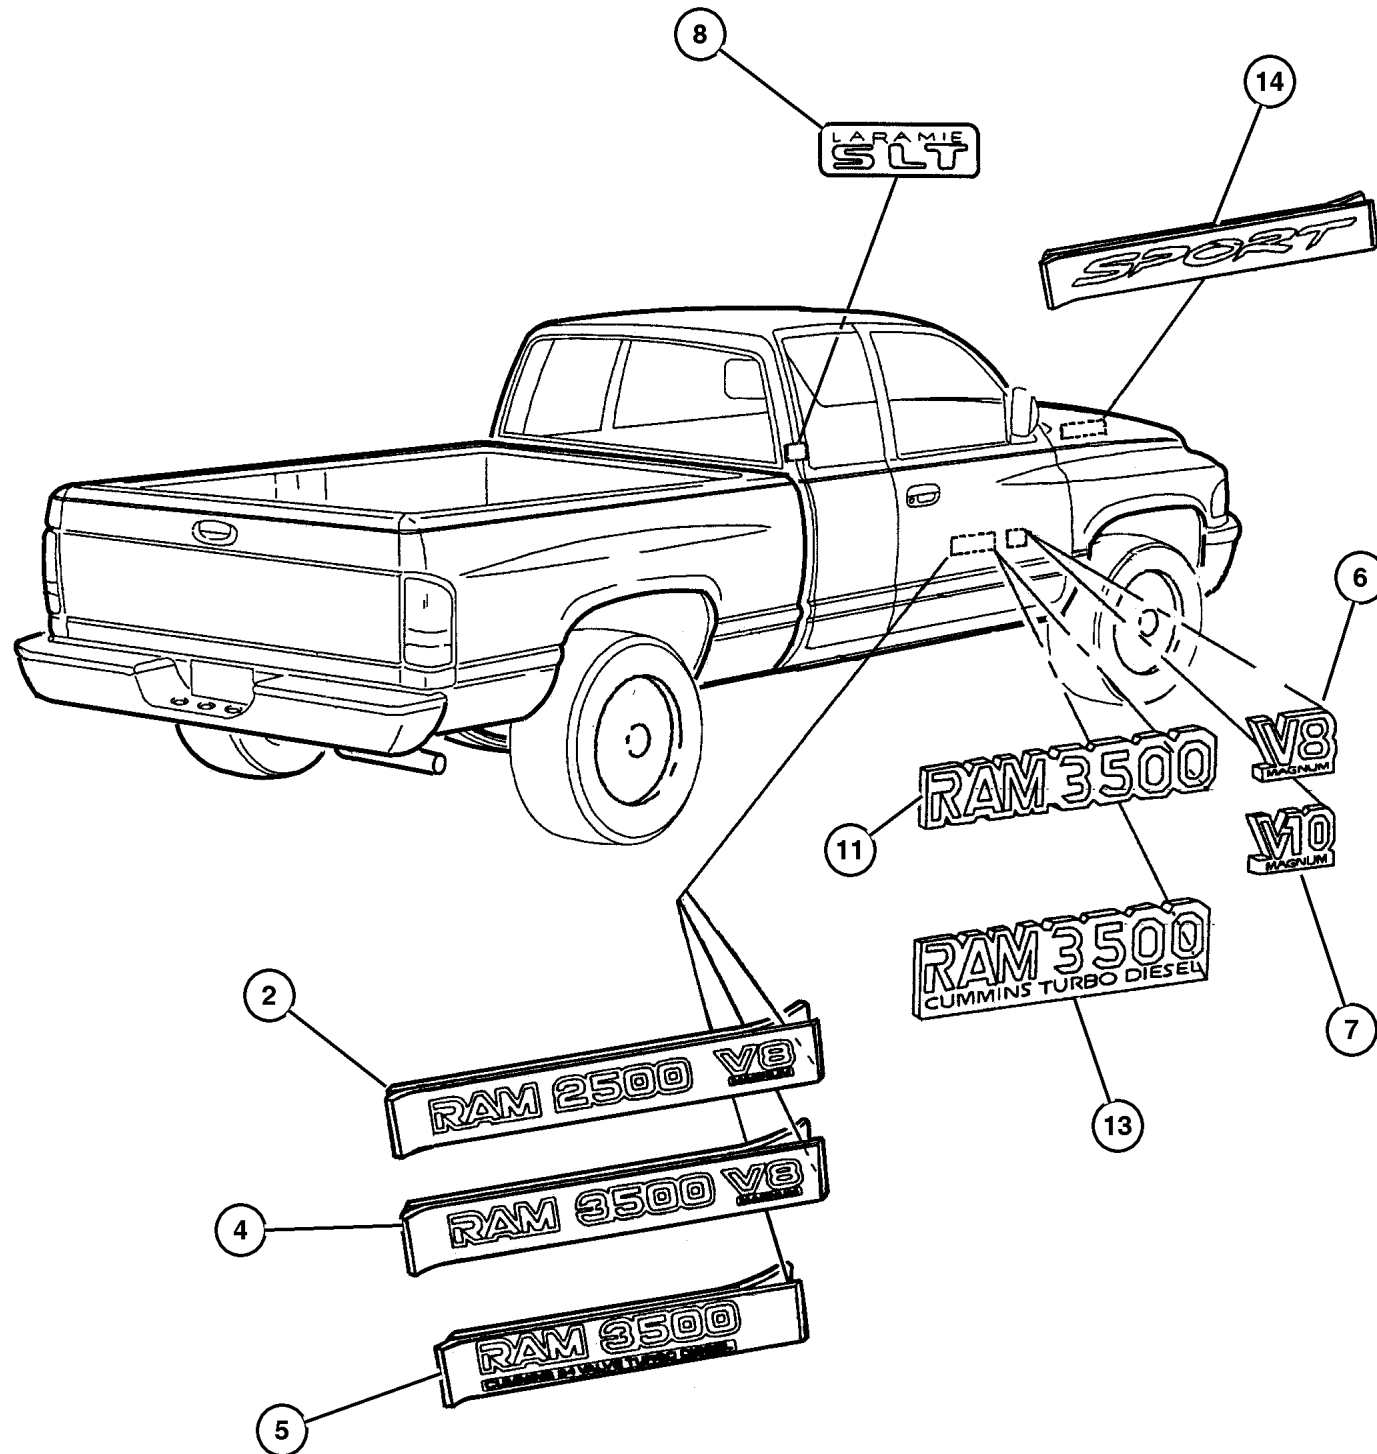Nameplates
Figure EBE-140



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-1									NAMEPLATE, Ram 1500, Decal
	5GL05 CA1AA-	2	1, 6						Silver, V8
	5GL05 PCHAA-	2	1, 6						Blue, V8
2									NAMEPLATE, Ram 2500, Decal
	5GL07 CA1AA	2	2, 7		33, 34				Silver, V8
	5GL07 PCHAA	2	2, 7		33, 34				Blue, V8
	5GL11 CA1AA	2	2, 7		33, 34				Silver, V10
	5GL11 PCHAA	2	2, 7		33, 34				Blue, V10
-3									NAMEPLATE, Ram 2500 Cummins,
									Decal
	5GL09 CA1AA-	2	2, 7		33, 34				Silver
	5GL09 PCHAA-	2	2, 7		33, 34				Blue
4									NAMEPLATE, Ram 3500, Decal
	5GL08 CA1AA	2	3, 8		34				Silver, V8
	5GL08 PCHAA	2	3, 8		34				Blue, V8
	5GL12 CA1AA	2	3, 8		34				Silver, V10
	5GL12 PCHAA	2	3, 8		34				Blue, V10
5									NAMEPLATE, Ram 3500 Cummins,
									Decal
	5GL10 CA1AA	2	3, 8		34				Silver
	5GL10 PCHAA	2	3, 8		34				Blue
6	55296 307AB	2							NAMEPLATE, Door, V8 MAGNUM
7	55295 306AB	2							NAMEPLATE, Door, V10 MAGNUM
8	55274 860AB	2							NAMEPLATE, Cab, Laramie SLT
-9	55295 310AB-	2	1, 6						NAMEPLATE, Front Fender, Ram
									1500
-10	55295 311AB-	2	2, 7						NAMEPLATE, Front Fender, Ram
									2500
11	55295 312AB	2	3, 8		34				NAMEPLATE, Front Fender, Ram
									3500
-12	55295 313AC-	2	2, 7						NAMEPLATE, Front Fender, Ram
									2500 Cummins
13	55295 314AC	2	3, 8		34				NAMEPLATE, Front Fender, Ram
									3500 Cummins
14									NAMEPLATE, Sport, Decal
	5GL04 CA1AA	2							Silver
	5GL04 PCHAA	2							Blue


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

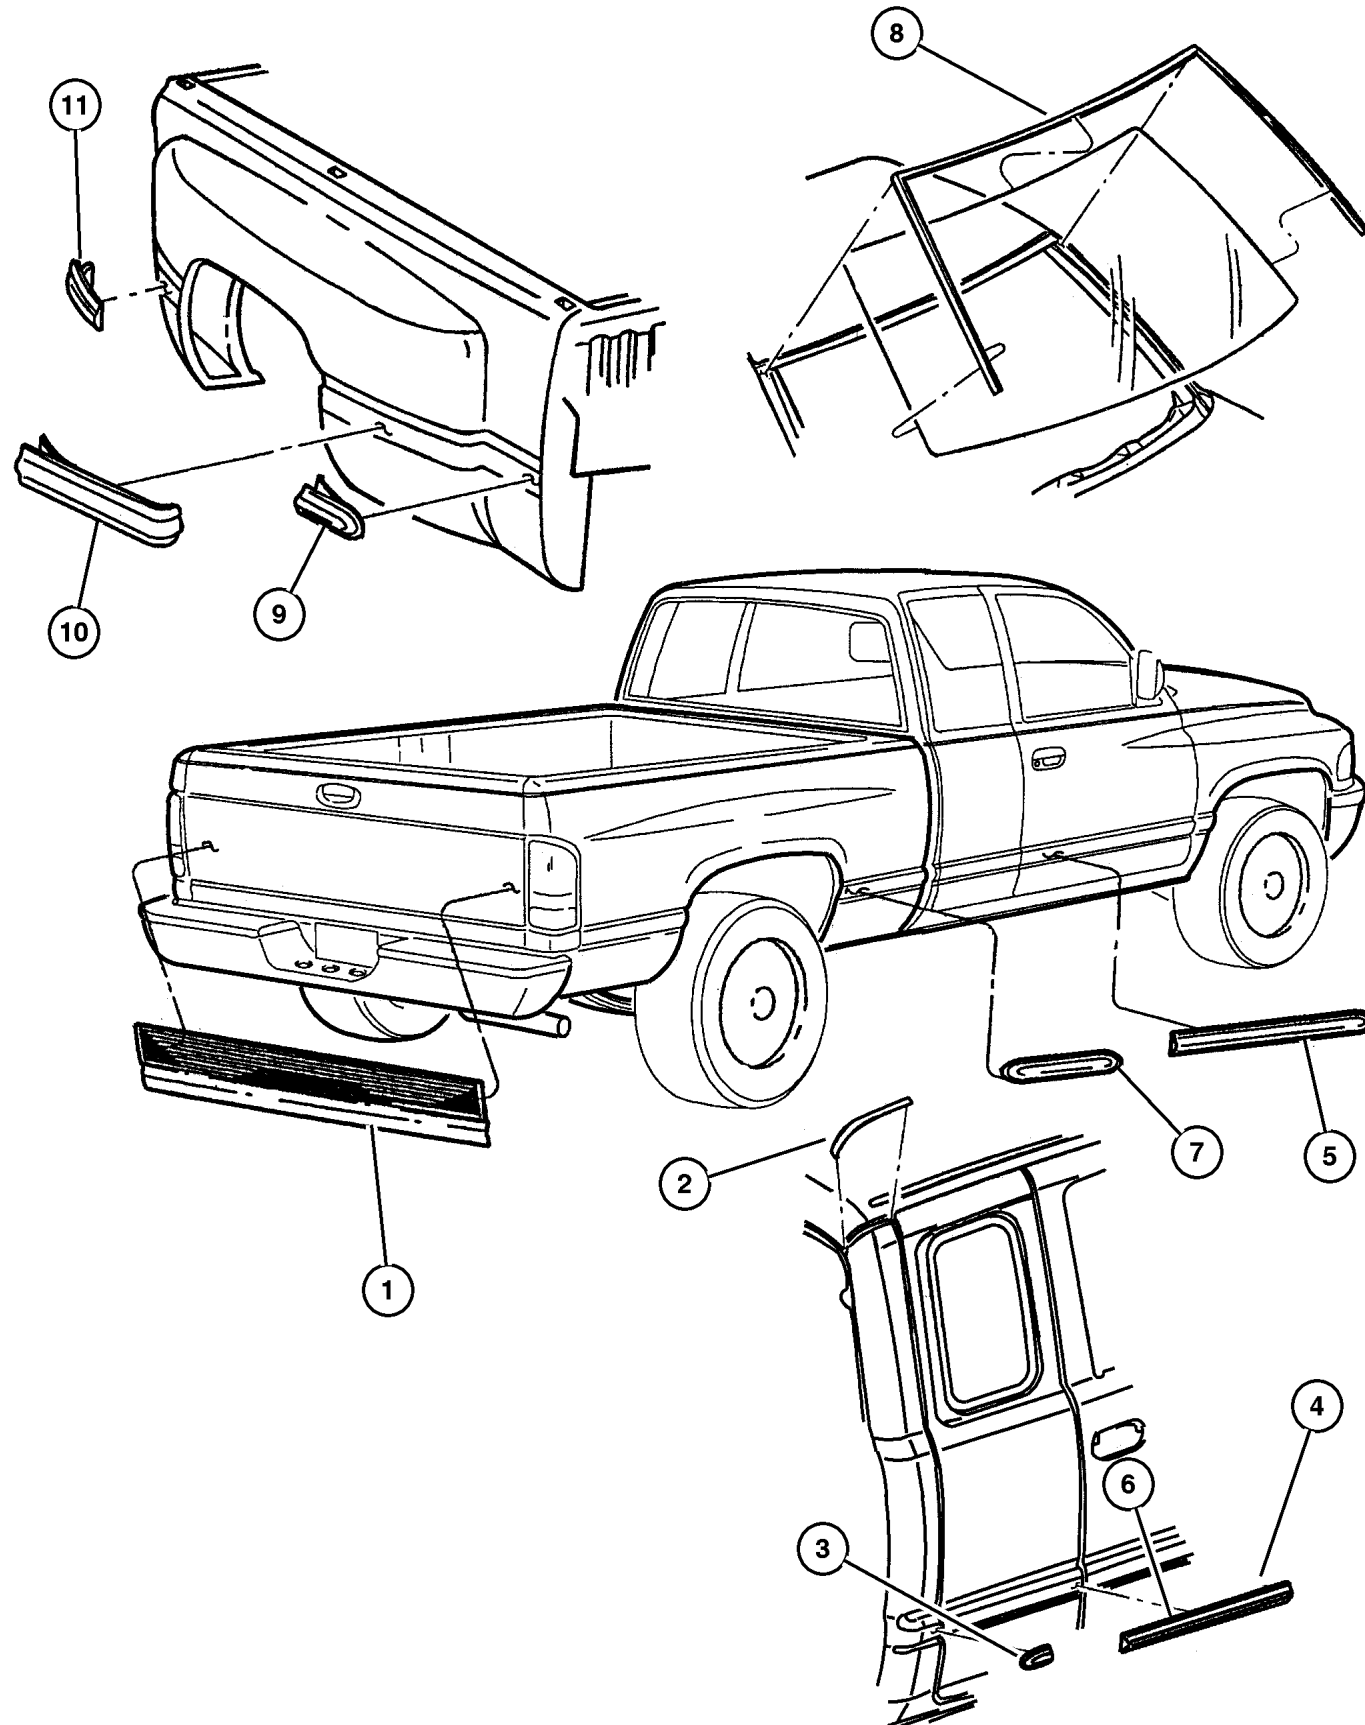Mouldings Figure EBE-210



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	5529 5060	1							APPLIQUE, Tailgate
2	55275 438AA	1	1, 6		31				MOLDING, Roof Quarter Joint Right
	55275 439AA	1	1, 6		31				Left
	5527 5358	1			33, 34				Right
	5527 5359	1			33, 34				Left
3	5507 6542	2			33, 34				MOLDING, Cargo Door
4	5507 6538	1			33, 34				MOLDING, Cargo Door Right
	5507 6539	1			33, 34				Left
5	5507 6536	1							MOLDING, Front Door Right
	5507 6537	1							Left
6	55076 888AA	1	1, 6		31				MOLDING, Cab Right
	55076 889AA	1	1, 6		31				Left
7	55076 891AA	2	1, 2, 6, 7		31, 33				MOLDING, Box Side Panel Right
	55076 902AA	2	1, 2, 6, 7		32, 34				Left
8	5527 5017	1							MOLDING, Windshield
9	55076 900AA	2	3, 8		34				MOLDING, Box Side Panel
10	55076 898AA	1	3, 8		34				MOLDING, Fender Rear Right
	55076 899AA	1	3, 8		34				Left
11	55076 892AA	1	3, 8		34				MOLDING, Fender Rear Right
	55076 893AA	1	3, 8		34				Left

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

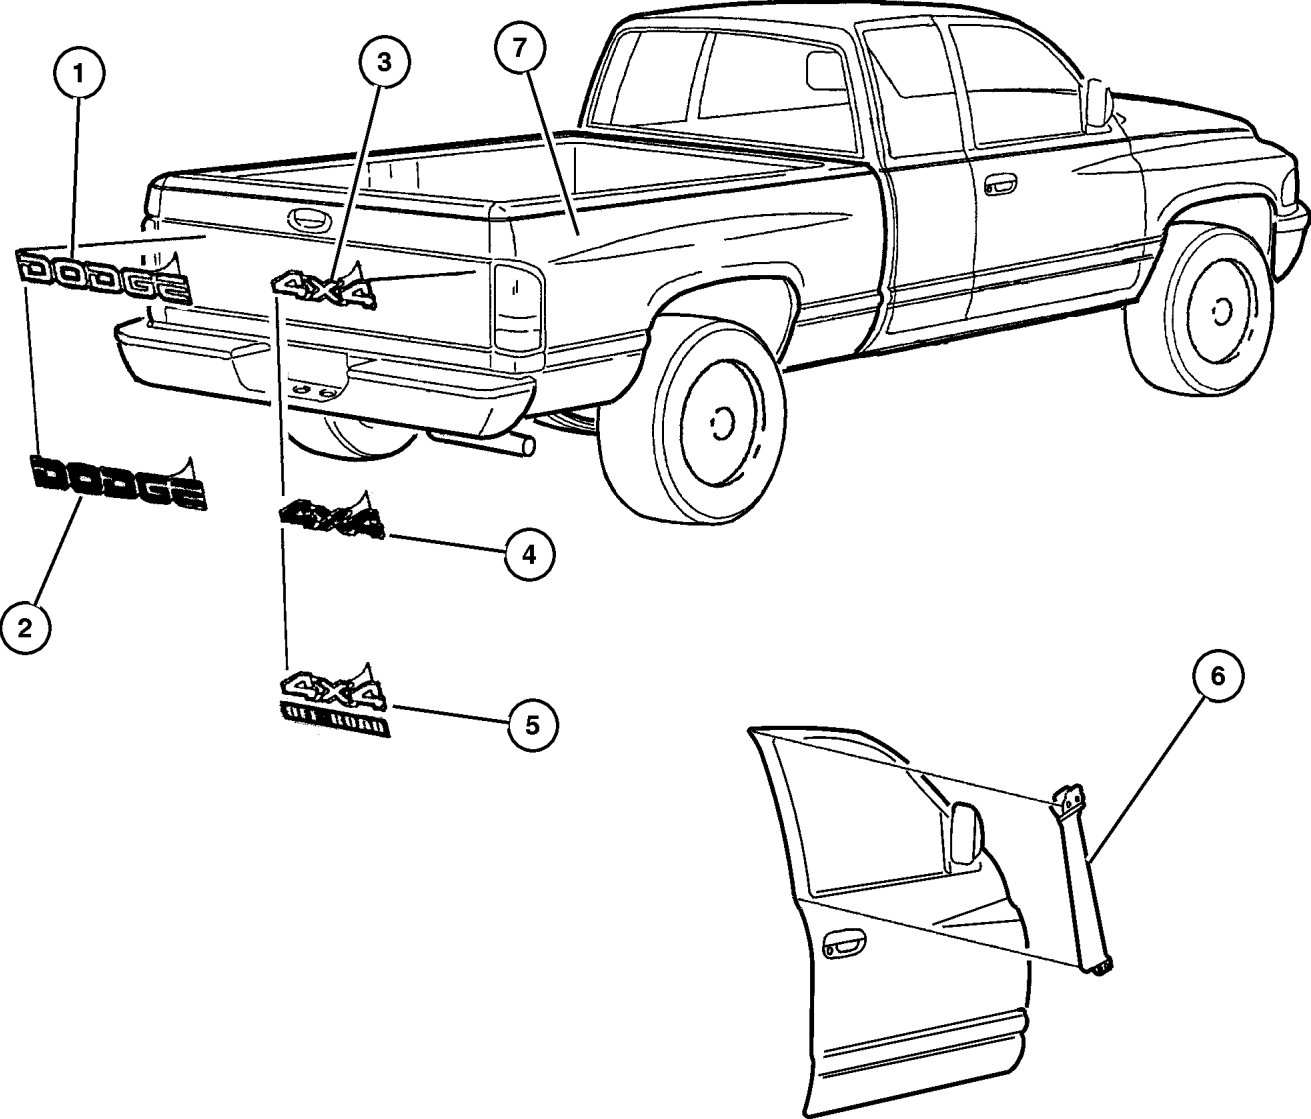
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Tape Stripes and Decals
Figure EBE-350



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	5GL13 CA1AA	1							DECAL, Dodge, Sport Appearance
	5GL13 PCHAA	1							Silver
									Blue
2	5DV7 3PX9	1							DECAL, Dodge
	5DV7 3TA1	1							Black
	5GL13 CA1AA	1							Silver
	5GL13 GX9AA	1							Silver, Outlined
	5GL13 PCHAA	1							Black, Outlined
									Blue, Outlined
3	5GL14 CA1AA	1	6, 7, 8						DECAL, 4x4, Sport Appearance
	5GL14 PCHAA	1	6, 7, 8						Silver
									Blue
4	5DV7 6PX9	1	6, 7, 8						DECAL, 4 x 4
	5DV7 6TA1	1	6, 7, 8						Black
									Silver
5	5GY40 CA1AA	1	6, 7, 8						DECAL, 4x4, OFF ROAD
	5GY40 GX9AA	1	6, 7, 8						Silver
	5GY40 PCHAA	1	6, 7, 8						Black
									Blue
6	55077 366AA	1							TAPE, Pillar, Blackout
	55077 367AA	1							Right
									Left
7									DECAL, None, Off-Road, 5HU29Ca1, GX9AA, (NOT SERVICED) (Not Serviced)


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

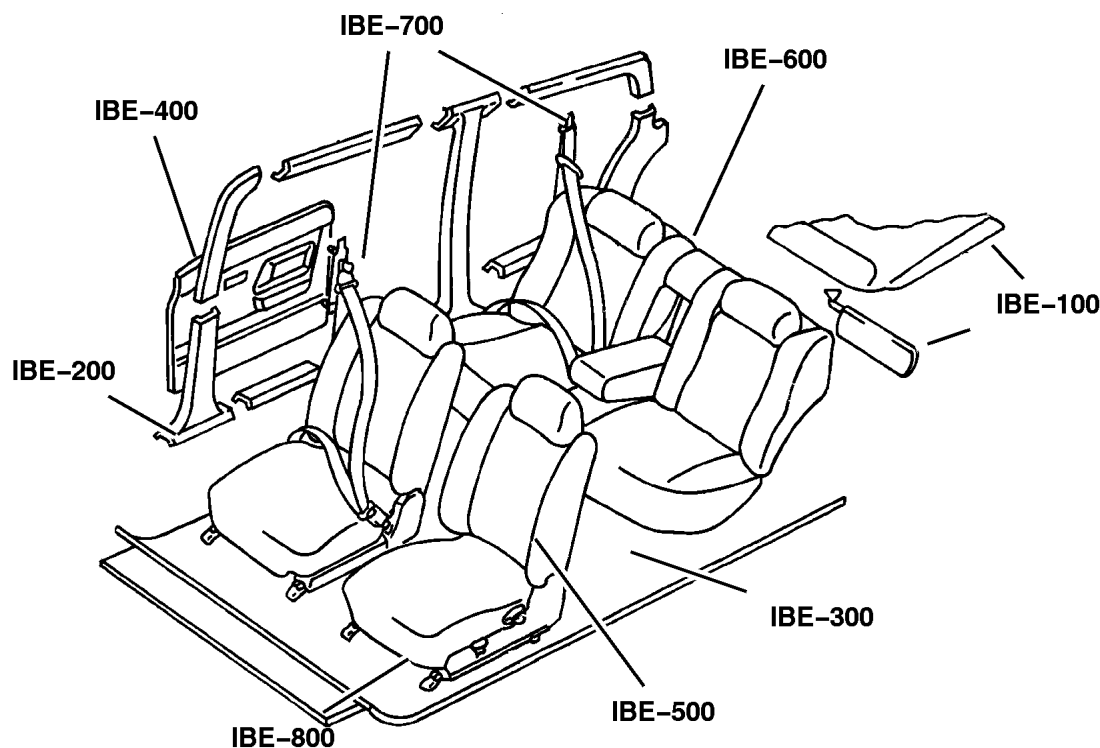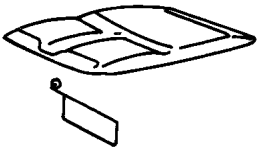
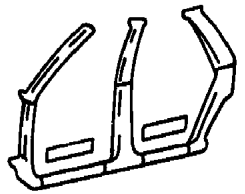
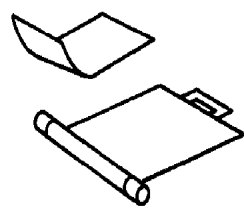
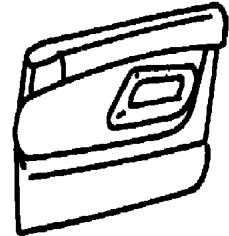
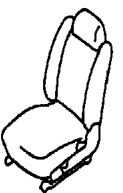
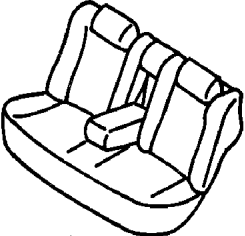

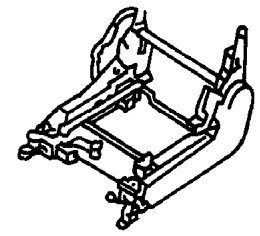
AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Group – IBE

Interior Trim



IBE-100 Headliner and Visor	IBE-200 Moldings, Scuff Plates	IBE-300 Carpet	IBE-400 Door Trim Panels
			
IBE-500 Front Seats and Attaching Parts	IBE-600 Rear Seats	IBE-700 Seat Belts	IBE-800 Adjusters, Covers, Shields, and Risers
			

GROUP IBE - Interior Trim

Illustration Title Group-Fig. No.

Headliner and Visor

Headliner, Sunvisors, Coat Hooks and Assist Straps Fig. IBE-110

Moldings, Scuff Plates

A-Pillar Fig. IBE-210

Cowl And Sill Fig. IBE-220

Quarter Trim Panels Fig. IBE-230

Trim, Cab Back Fig. IBE-240

Carpet

Carpets, Mats Fig. IBE-310

Door Trim Panels

Front Door Trim Panel Fig. IBE-410

Rear Door Trim Panels Fig. IBE-420

Front Seats and Attaching Parts

Seat, Front, Trim Code DP Fig. IBE-510

Seat, Front, Trim Code R1 Fig. IBE-520

Seat, Front, Trim Code S9 Fig. IBE-530

Seats, Front, Trim Codes SX, TY Fig. IBE-540

Seat, Front, Trim Code DZ Fig. IBE-550

Rear Seats

Rear Seat Fig. IBE-610

Seat Belts

Belts, Lap Fig. IBE-710

Belt Shoulder, Front & Rear, Belt Lap Rear Seat Fig. IBE-720


Adjusters, Covers, Shields, and Risers

Seat, Floor Attaching Fig. IBE-810

Adjusters and Recliners Fig. IBE-820

Headliner, Sunvisors, Coat Hooks and Assist Straps

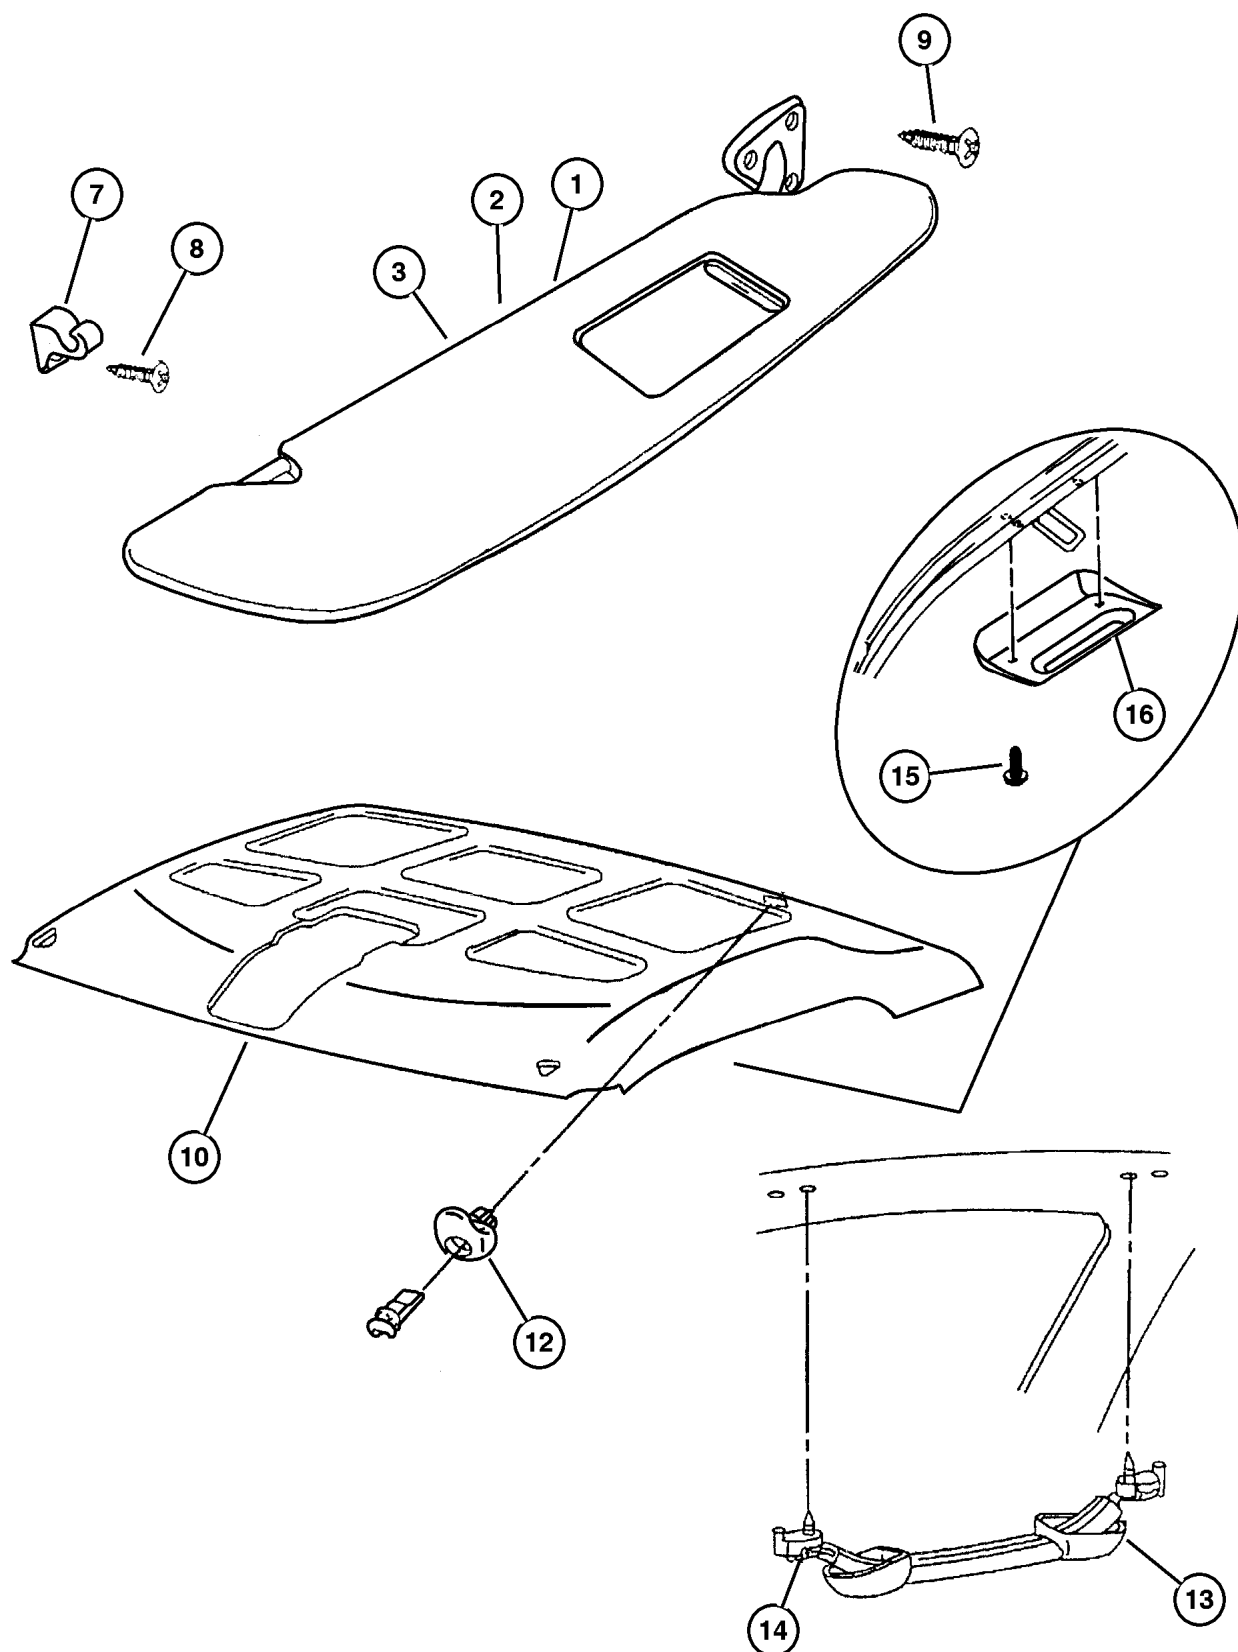Figure IBE-110



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	5ES00 TL2AD	1						O0	Right
	5ES01 TL2AD	1						O0	Left
2	5ES02 TL2AD	1						O0	VISOR, W/Mirror, Right
3									VISOR, Illuminated
	5FV64 TL2AD	1						O0	Right
	5FV65 TL2AD	1						O0	Left
-4									LABEL, Transfer Case Shift
	5210 5334	1	6, 7, 8						
	52105 360AA-	1	6, 7, 8						CANADA
-5									LABEL, Diesel Starting
	53040 084AA-	1							CANADA
	53040 085AA-	1							
-6	55350 848AA-	2							LABEL, Air Bag Warning
7	5EZ9 2SL2	2						O0	BRACKET, Sunvisor
8	0152 383	2							SCREW, Pan Head, .19-16x.75
9	1150 1150	6							SCREW, Oval Head Tapping, .164x18x.984
10									HEADLINER
	5ET10 TL2AD	1			33, 34			O0	Without Overhead Console
	5FE26 TL2AC	1	1, 6		31			O0	Without Overhead Console
	5FG27 TL2AF	1	1, 6		31			O0	With Overhead Console
	5ET05 TL2AG	1			33, 34			O0	With Overhead Console
-11									PIN, Push
	5FU8 2TL2	2						O0	Backlite Area, Shorter
	5GG00 TL2AA-	2						O0	Dome Light Area, Longer
12	5FY27 TL2AB	2						O0	HOOK, Coat
13	5DZ3 9SL2	1						O0	HANDLE, Roof Grab
14									SCREW, .164-18x1.00, (NOT SERVICED) (Not Serviced)
15									SCREW, M5x0.8x16.00, (NOT SERVICED) (Not Serviced)
16									COVER, Striker
	5FV5 2TL2	1			33, 34			O0	Right
	5FV5 3TL2	1			33, 34			O0	Left

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

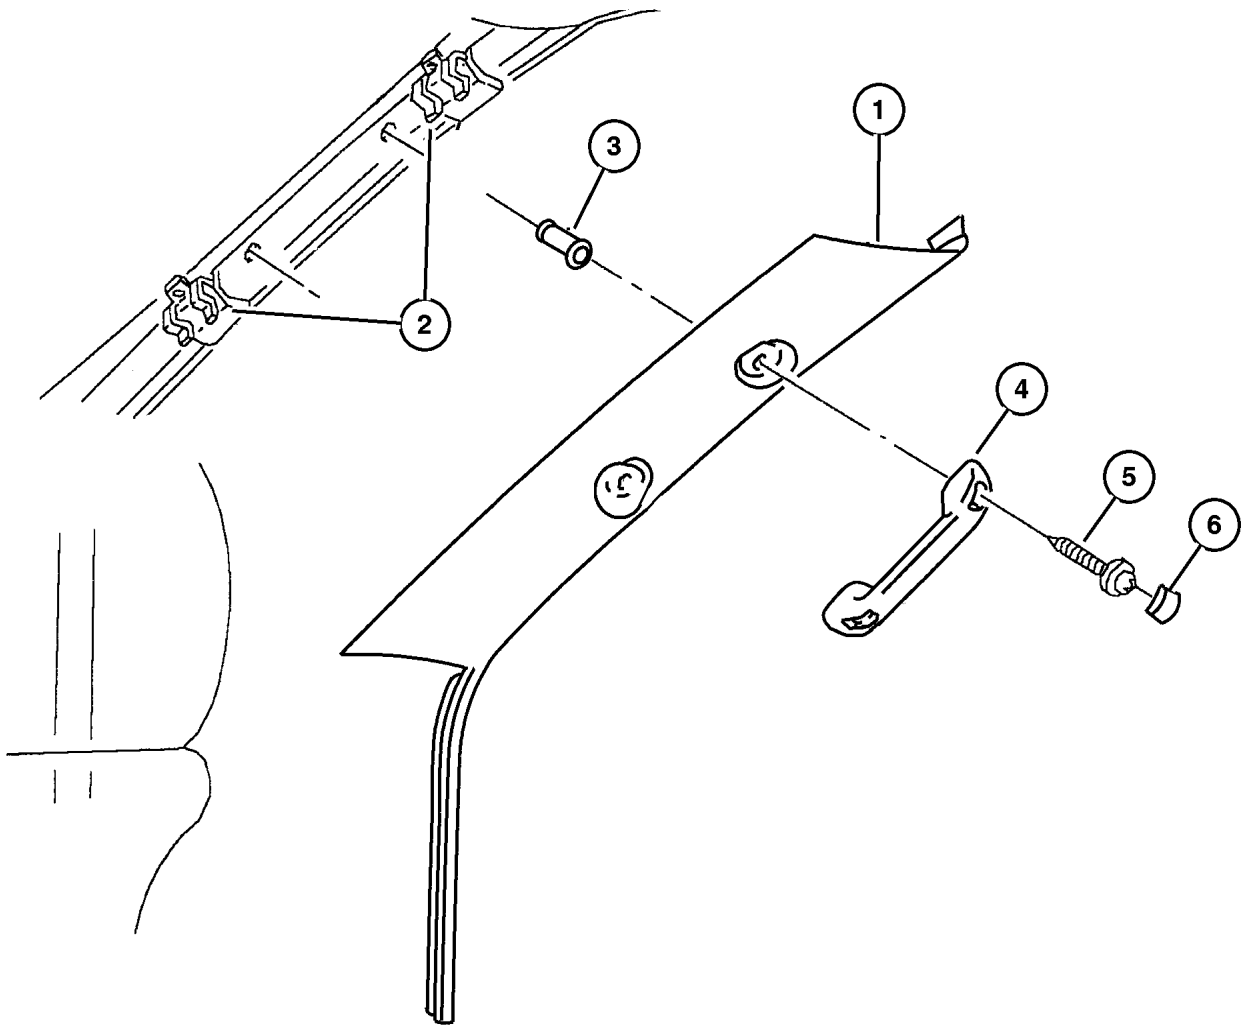
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

A-Pillar
Figure IBE-210




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									PANEL, A Pillar Trim
	5ES4 4LAZ	1						O0	[AZ], Without Infinity Sound, Right
	5ES4 4RC3	1						O0	[C3], Without Infinity Sound, Right
	5ES4 4RK5	1						O0	[K9], Without Infinity Sound, Right
	5ES5 7LAZ	1						O0	[AZ], Without Infinity Sound, Left
	5ES5 7RC3	1						O0	[C3], Without Infinity Sound, Left
	5ES5 7RK5	1						O0	[K9], Without Infinity Sound, Left
	5GK68 LAZAA	1						O0	[AZ], With Infinity Sound, Right
	5GK68 RC3AA	1						O0	[C3], With Infinity Sound, Right
	5GK68 RK5AA	1						O0	[K9], With Infinity Sound, Right
	5GK69 LAZAA	1						O0	[AZ], With Infinity Sound, Left
	5GK69 RC3AA	1						O0	[C3], With Infinity Sound, Left
	5GK69 RK5AA	1						O0	[K9], With Infinity Sound, Left
2	5521 4846	2						O0	CLIP, Trim Panel
3	6503 910	1							NUT
4									HANDLE, Roof Grab
	5DX76 LAZAC	1						O0	[AZ]
	5DX76 RC3AC	1						O0	[C3]
	5DX76 RK5AC	1						O0	[K9]
5	6504 432	2							SCREW, Pan Head, M6-1.00x29.00, [AZ]
6									PLUG, Assist and Grab Handle
	H526 TAZ	2						O0	
	H526 TC3	2						O0	[C3]
	H526 TK5	2						O0	[K9]

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

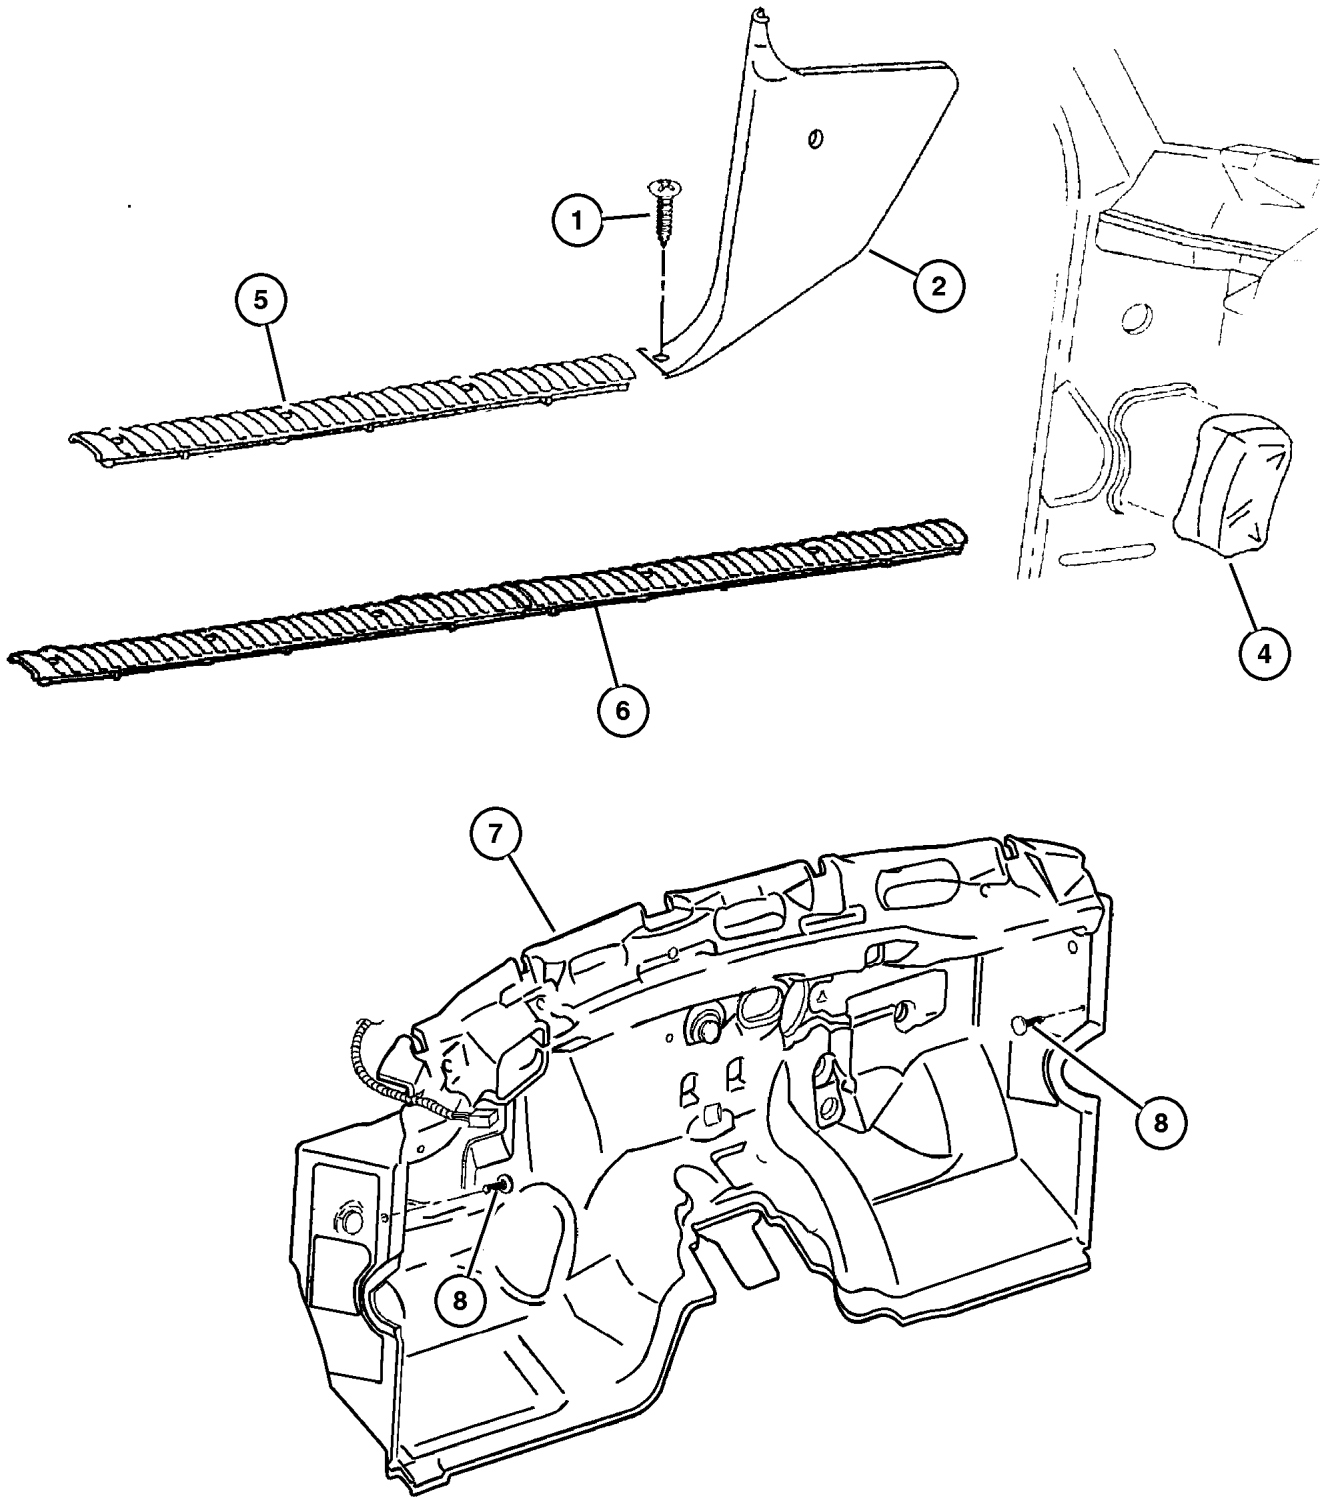Cowl And Sill
Figure IBE-220




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									SCREW, Pan Head, .19-16x1.50
	0154 562	12			33, 34				
		8	1, 6		31				
2									PANEL, Cowl
	5FH9 0LAZ	1						O0	[AZ], Right
	5FH9 0RC3	1						O0	[C3], Right
	5FH9 0RK5	1						O0	[K9], Right
	5FH91 LAZAB	1						O0	[AZ], Left
	5FH91 RC3AB	1						O0	[C3], Left
	5FH91 RK5AB	1						O0	[K9], Left
-3	5521 4846	2						O0	CLIP, Trim Panel
4	4386 474	2							SILENCER, Wheelhouse
5									PANEL, Side Sill
	5FH8 0LAZ	1	1, 6		31			O0	[AZ], Right
	5FH8 0RC3	1	1, 6		31			O0	[C3], Right
	5FH8 0RK5	1	1, 6		31			O0	[K9], Right
	5FH8 1LAZ	1	1, 6		31			O0	[AZ], Left
	5FH8 1RC3	1	1, 6		31			O0	[C3], Left
	5FH8 1RK5	1	1, 6		31			O0	[K9], Left
6									MOLDING, Side Sill
	5FY04 LAZAA	1			33, 34			O0	[AZ], Right
	5FY04 RC3AA	1			33, 34			O0	[C3], Right
	5FY04 RK5AA	1			33, 34			O0	[K9], Right
	5FY05 LAZAA	1			33, 34			O0	[AZ], Left
	5FY05 RC3AA	1			33, 34			O0	[C3], Left
	5FY05 RK5AA	1			33, 34			O0	[K9], Left
7									INSULATION, Dash Panel
	55350 755AB	1							Gas Only
	55350 884AA	1							Diesel
8	6031 321	4							PIN, Retainer

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

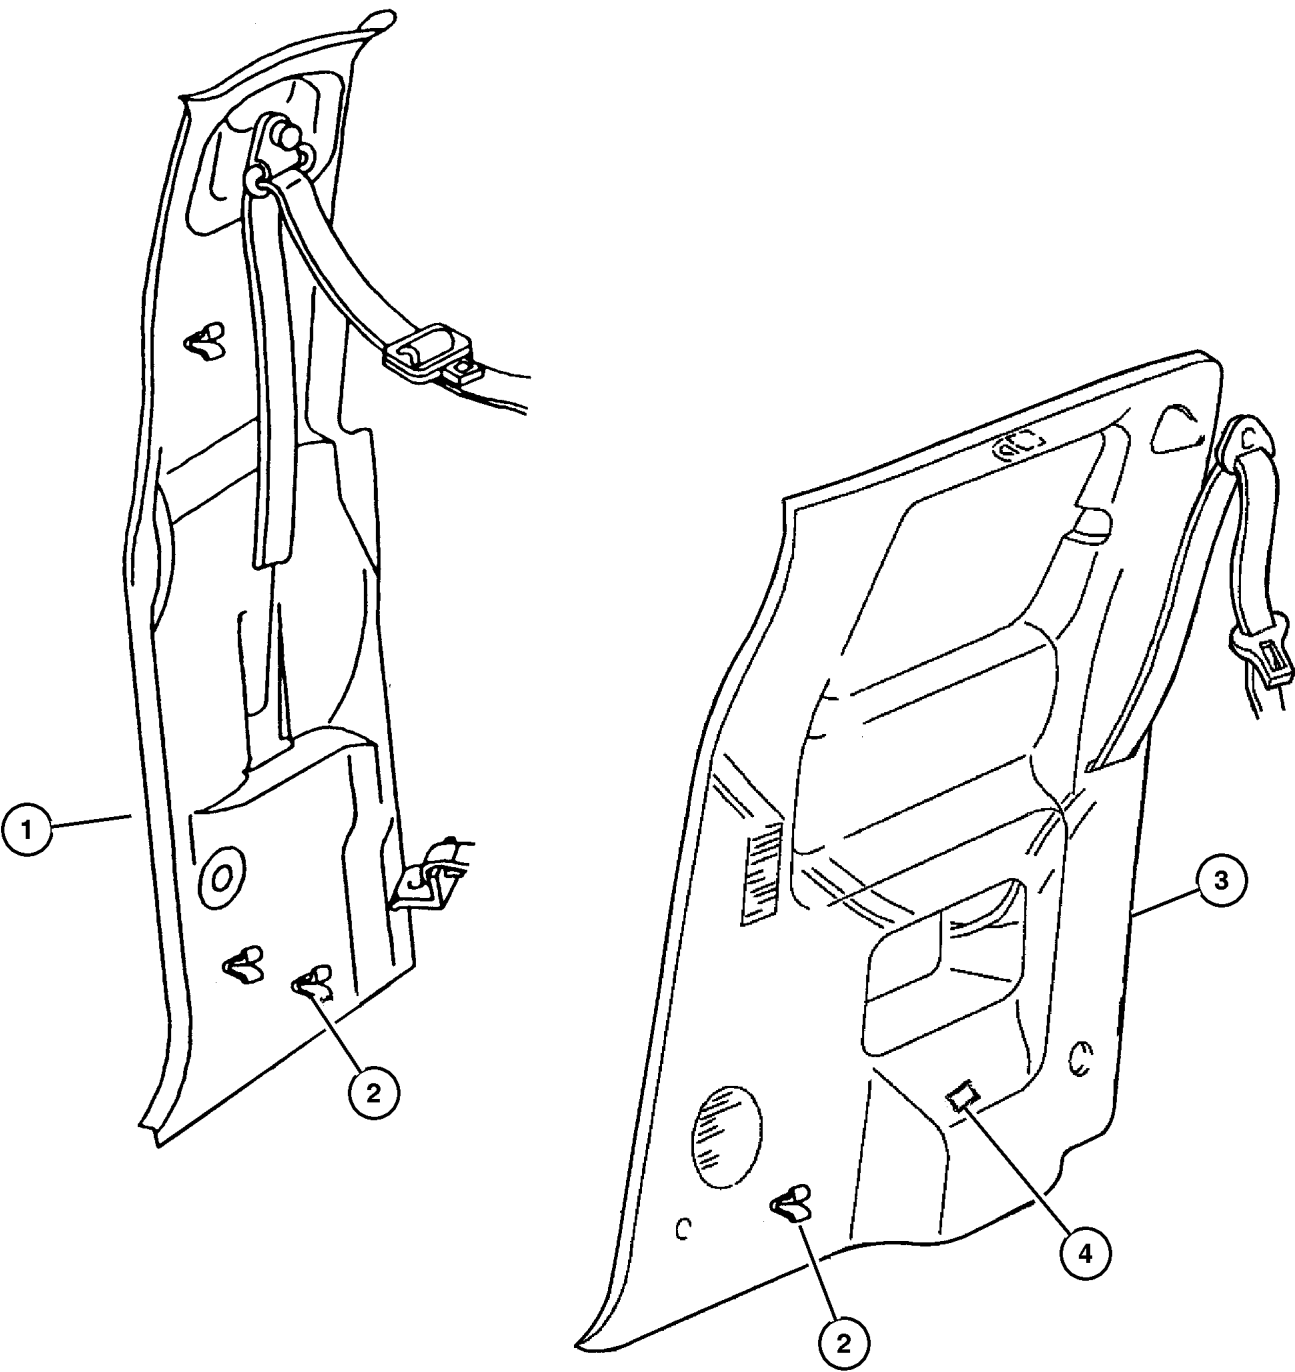
Quarter Trim Panels
Figure IBE-230



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	PANEL, C Pillar								
	5ES66 LAZAB	1			33, 34			O0	[AZ], Right
	5ES66 RC3AB	1			33, 34			O0	[C3], Right
	5ES66 RK5AB	1			33, 34			O0	[K9], Right
	5ES67 LAZAB	1			33, 34			O0	[AZ], Left
	5ES67 RC3AB	1			33, 34			O0	[C3], Left
	5ES67 RK5AB	1			33, 34			O0	[K9], Left
2	5521 4846	5			33, 34			O0	CLIP, Trim Panel
3	PANEL, Quarter Trim								
	5FH82 LAZAB	1	1, 6		31			O0	[AZ], Right
	5FH82 RC3AB	1	1, 6		31			O0	[C3], Right
	5FH82 RK5AB	1	1, 6		31			O0	[K9], Right
	5FH83 LAZAB	1	1, 6		31			O0	[AZ], Left
	5FH83 RC3AB	1	1, 6		31			O0	[C3], Left
	5FH83 RK5AB	1	1, 6		31			O0	[K9], Left
4	55350 643AB	2							BUMPER, Seat Cushion

Trim, Cab Back
Figure IBE-240

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									PANEL, Cab Back Trim
	5FZ52 LAZAA	1						O0	[AZ]
	5FZ52 RC8AA	1						O0	[C3]
2									FASTENER, Trim Panel Attaching
	5DV6 2LAZ	5						O0	[AZ]
	5DV6 2RC8	5						O0	[C3]
3									BAG, Jack Tool Storage
	52020 344AA	1	1, 6						
		1	2, 7						
		1	3, 8		34				

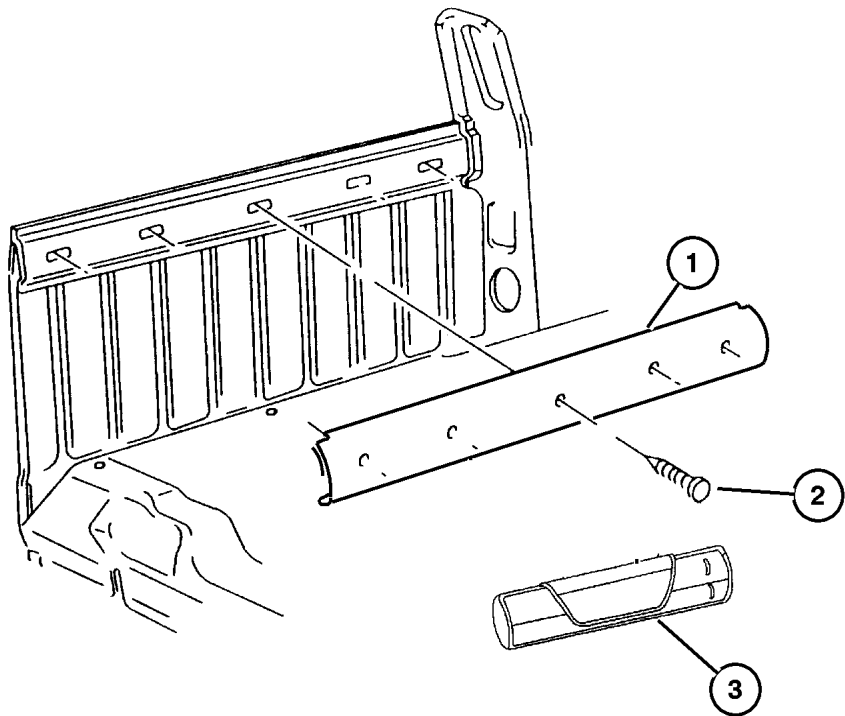


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Carpets, Mats
Figure IBE-310

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									CARPET, Floor
	5ES73 LAZAD	1			33, 34			O0	[AZ]
	5ES73 RC8AD	1			33, 34			O0	[C3]
	5ES73 VK9AD	1			33, 34			O0	[K9]
	5FW89 LAZAD	1	1, 2, 6, 7		31			O0	[AZ]
	5FW89 RC8AD	1	1, 2, 6, 7		31			O0	[C3]
	5FW89 VK9AD	1	1, 2, 6, 7		31			O0	[K9]
-2	55350 782AA-	2			33, 34				COVER, Carpet Anchor Hole MAT, Floor
3									
	5ES76 DX9AC	1			33, 34			O0	
	5FW88 DX9AC	1	1, 6		31			O0	
4									MAT KIT, Floor - Front
	5FJ56 LAZAB	1						O0	[AZ]
	5FJ56 RC8AB	1						O0	[C3]
	5FJ56 VK9AB	1						O0	[K9]

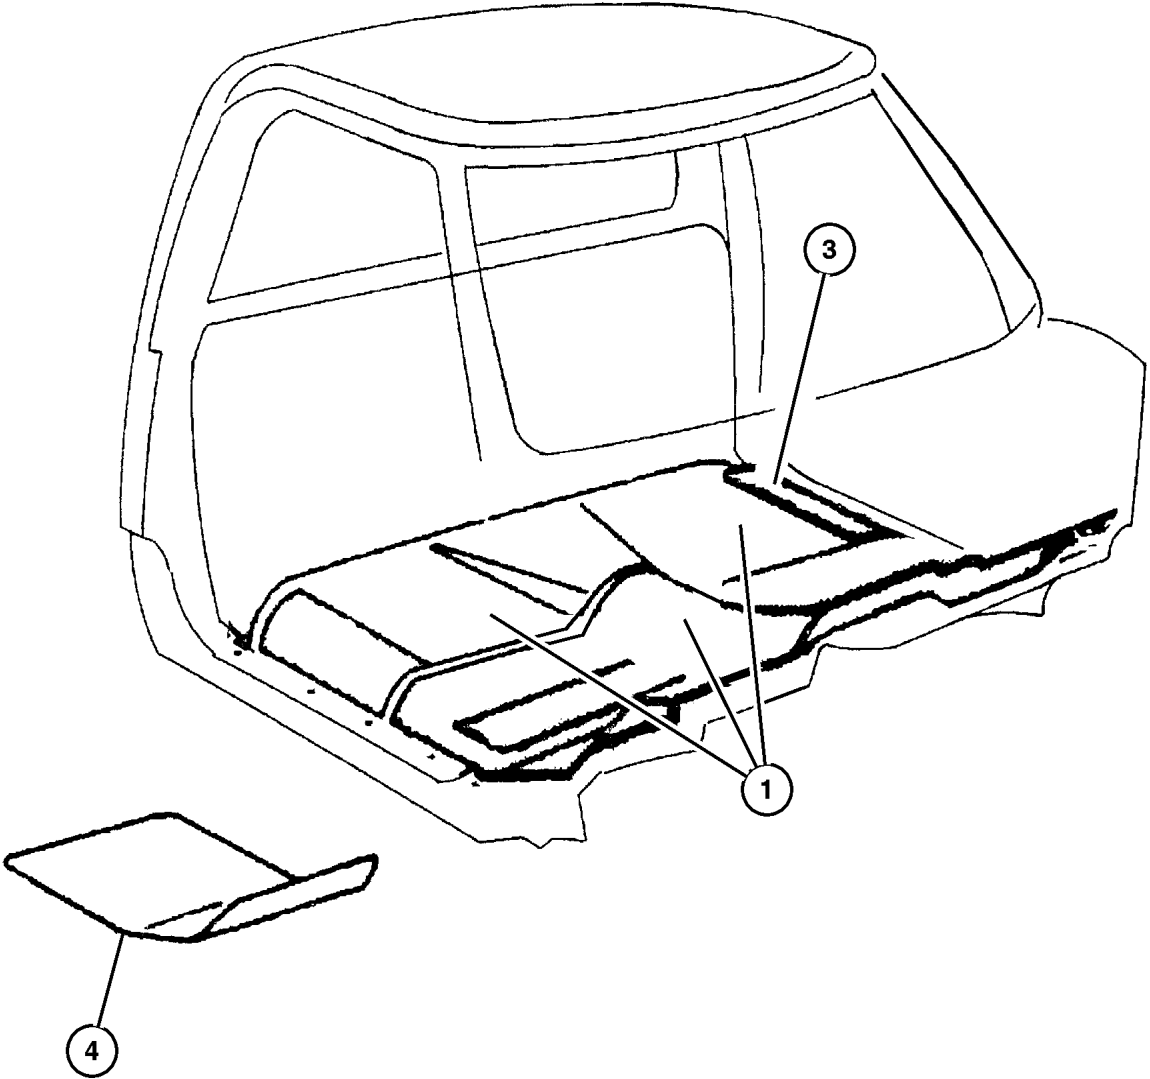


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

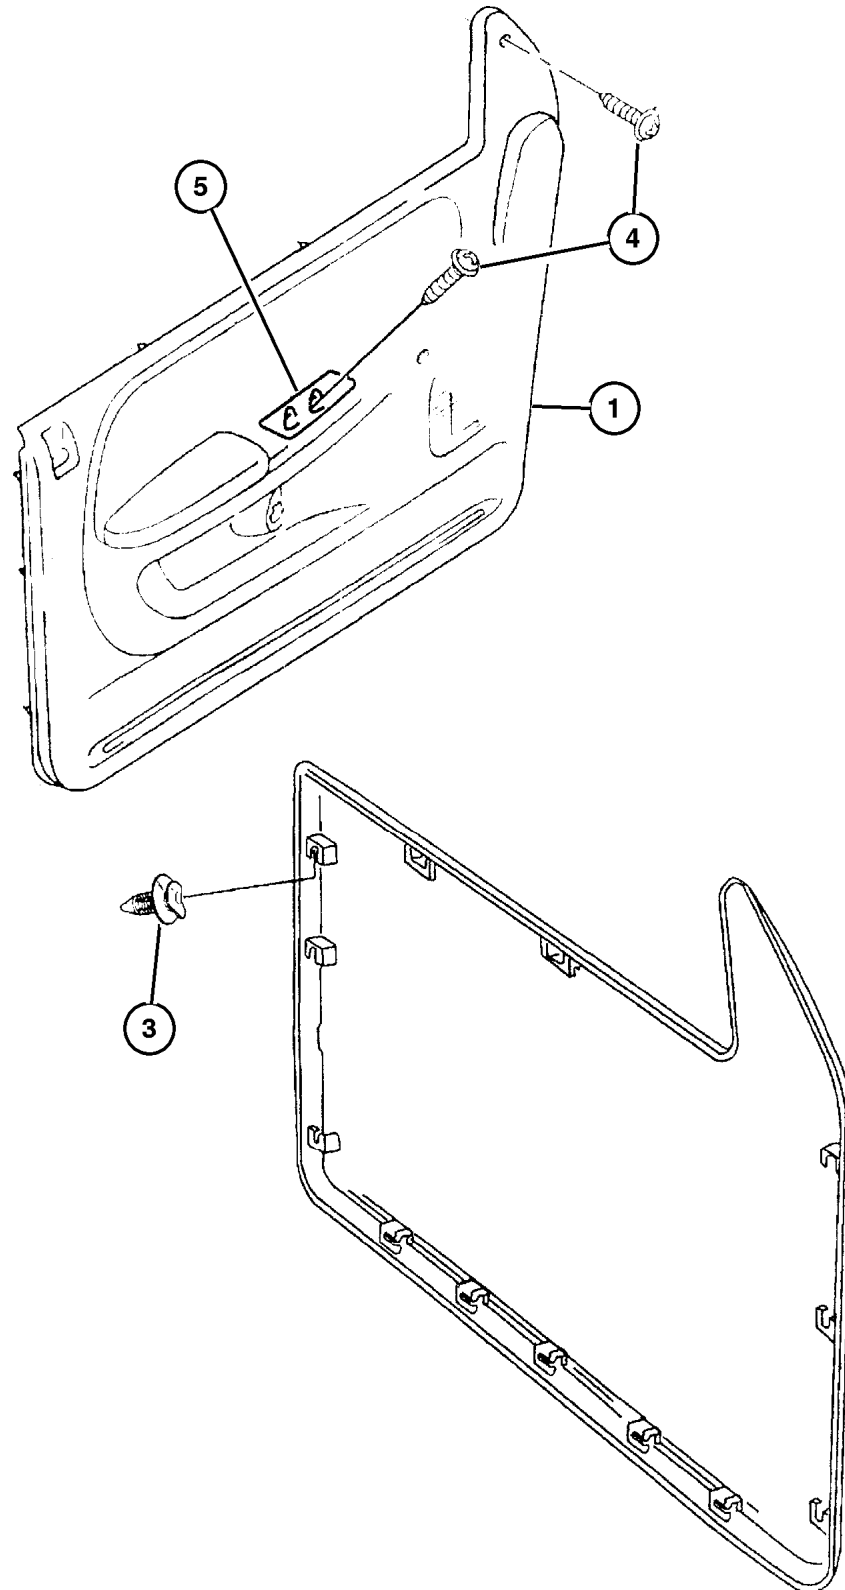Front Door Trim Panel Figure IBE-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE; When replacing Door Trim Panel installer must replace X-mas tree style pin 6505878AA. [P.A.R.] = Paint As Required									
1									PANEL, Door Trim Front
	RZ69 1AZAA	1	1, 6		31			DP	[AZ], Left
	RZ69 1K9AA	1	1, 6		31			DP	[K9], Left
	RZ68 1AZAA	1	1, 6		31			DP	[AZ], Right
	RZ68 1K9AA	1	1, 6		31			DP	[K9], Right
	RH73 1K9AA	1			33, 34			DP	[K9], Left
	RH73 1AZAA	1			33, 34			DP	[AZ], Left
	RH72 1K9AA	1			33, 34			DP	[K9], Right
	RH72 1AZAA	1			33, 34			DP	[AZ], Right
	RH73 1K9AA	1			33, 34			DZ	[K9], Left
	RH73 1AZAA	1			33, 34			DZ	[AZ], Left
	RH72 1K9AA	1			33, 34			DZ	[K9], Right
	RH72 1AZAA	1			33, 34			DZ	[AZ], Right
	RH70 1K9AA	1			33, 34			R1	[K9], Right
	RH70 1C3AA	1			33, 34			R1	[C3], Right
	RH60 LAZAA	1	1, 6		31			R1	[AZ], Right
	RH61 1C3AA	1	1, 6		31			R1	[C3], Left
	RH61 1K9AA	1	1, 6		31			R1	[K9], Left
	RH61 LAZAA	1	1, 6		31			R1	[AZ], Left
	RH60 1C3AA	1	1, 6		31			R1	[C3], Right
	RH60 1K9AA	1	1, 6		31			R1	[K9], Right
	RH71 LAZAA	1			33, 34			R1	[AZ], Left
	RH71 1K9AA	1			33, 34			R1	[K9], Left
	RH71 1C3AA	1			33, 34			R1	[C3], Left
	RH70 LAZAA	1			33, 34			R1	[AZ], Right
	PL59 LAZ	1	1, 6		31			S9	[AZ], Left
	RH69 RC3AA	1			33, 34			S9	[C3], Left
	PL59 TC3	1	1, 6		31			S9	[C3], Left
	RH68 RC3AA	1			33, 34			S9	[C3], Right
	PL68 LAZ	1	1, 6		31			S9	[AZ], Right
	PL68 RC3	1	1, 6		31			S9	[C3], Right
	RH68 LAZAA	1			33, 34			S9	[AZ], Right
	RH69 LAZAA	1			33, 34			S9	[AZ], Left
	PL59 LAZ	1	1, 6		31			SX	[AZ], Left
	RH69 LAZAA	1			33, 34			SX	[AZ], Left
	RH69 RC3AA	1			33, 34			SX	[C3], Left
	PL59 RC3	1	1, 6		31			SX	[C3], Left
	PL68 RC3	1	1, 6		31			SX	[C3], Right


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

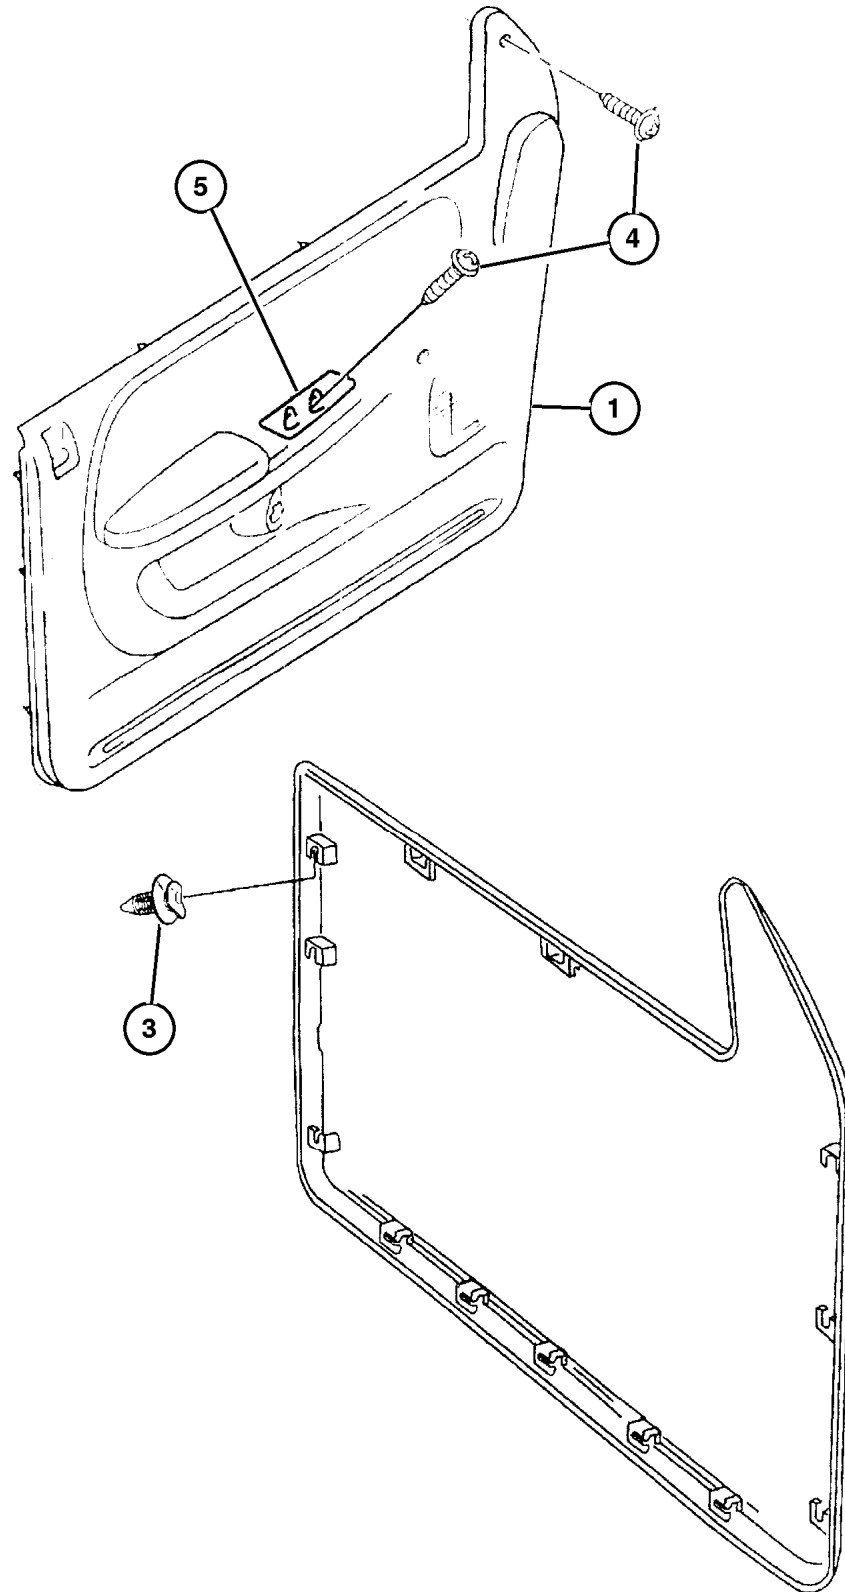Front Door Trim Panel Figure IBE-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	PL68 LAZ	1	1, 6		31			SX	[AZ], Right
	RH68 RC3AA	1			33, 34			SX	[C3], Right
	RH68 LAZAA	1			33, 34			SX	[AZ], Right
		1			33, 34			TY	[AZ], Right
	RH68 RC3AA	1			33, 34			TY	[C3], Right
	RH69 LAZAA	1			33, 34			TY	[AZ], Left
	RH69 RC3AA	1			33, 34			TY	[C3], Left
-2	KM64 1AZ	1			33, 34			DP	PLUG, Mirror Switch, [P.A.R.]
		1			33, 34			DZ	
		1			33, 34			R1	
	KM64 LAZ	1	1, 6		31			S9	
		1	1, 6		31			SX	
3	6505 878AA	12	1, 6		31			DP	PIN, Door Panel
		13			33, 34			O0	
		12	1, 6		31			R1	
		10	1, 6		31			S9	
		13	1, 6		31			SX	
4									SCREW, .164-18x1.00, (NOT SERVICED) (Not Serviced)
5									PULL CUP, Front Door Trim Panel
	5535 0343	1			33, 34			DP	Left
	5535 0342	1			33, 34			DP	Right
		1			33, 34			DZ	Right
	5535 0343	1			33, 34			DZ	Left
	4741 405	1	1, 6		31			R1	Left
	4741 404	1	1, 6		31			R1	Right
	5535 0343	1			33, 34			R1	Left
	5535 0342	1			33, 34			R1	Right
	4741 405	1	1, 6		31			S9	Left
	5535 0342	1			33, 34			S9	Right
	4741 404	1	1, 6		31			S9	Right
	5535 0343	1			33, 34			S9	Left
	55350 756AA	1			33, 34			SX	Right
	4741 402	1	1, 6		31			SX	Right
	4741 403	1	1, 6		31			SX	Left
	55350 757AA	1			33, 34			SX	Left
	55350 756AA	1			33, 34			TY	Right
	55350 757AA	1			33, 34			TY	Left


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

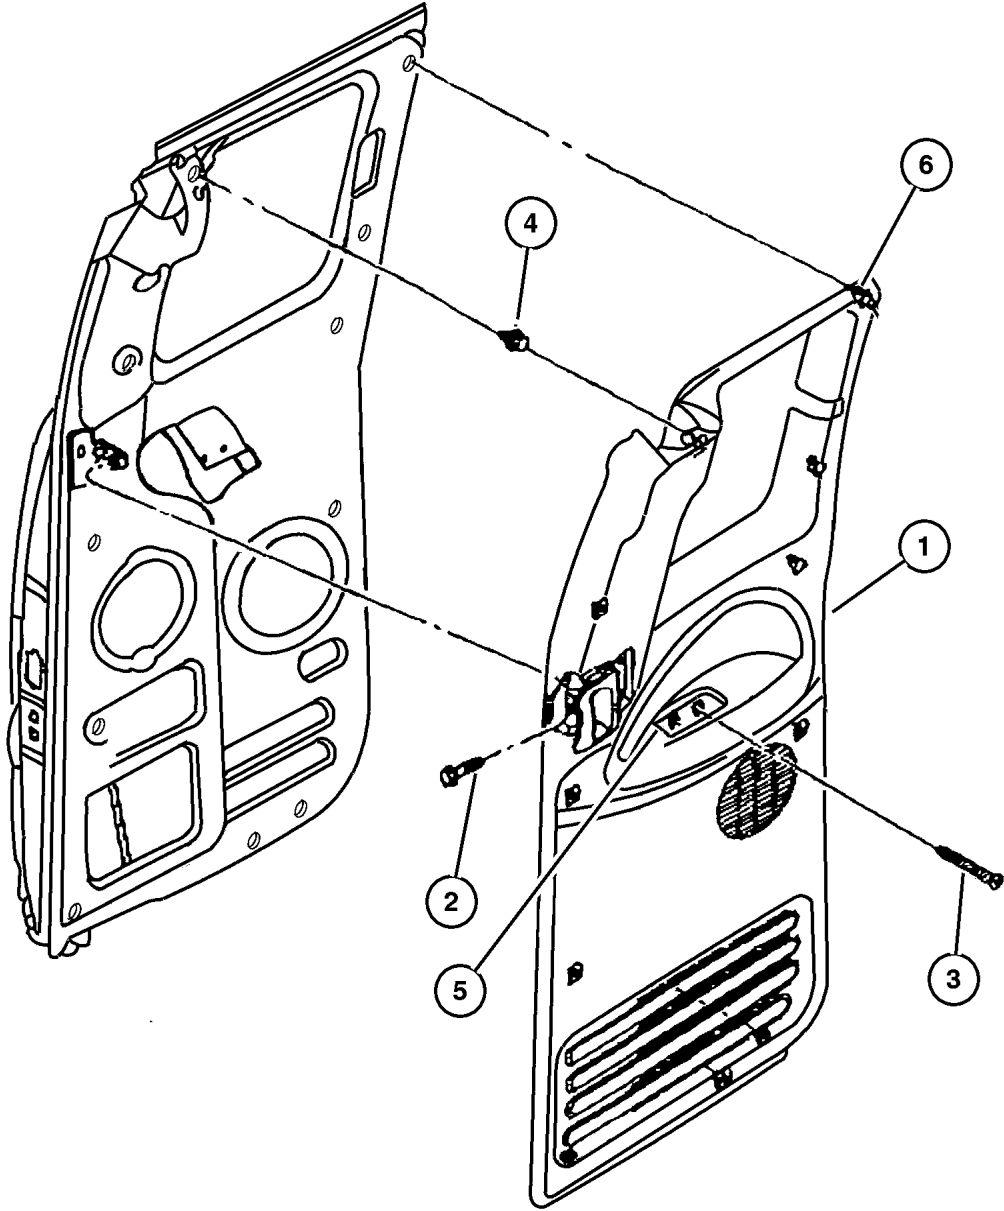Rear Door Trim Panels
Figure IBE-420




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
NOTE; When replacing Door Trim Panel installer must replace X-mas tree style pin 6505878AA.									
1									PANEL, Rear Door Trim
	5EV54 LAZAC	1			33, 34			O0	[AZ], Right
	5EV54 RC3AC	1			33, 34			O0	[C3], Right
	5EV54 RK5AC	1			33, 34			O0	[K9], Right
	5EV55 LAZAC	1			33, 34			O0	[AZ], Left
	5EV55 RC3AC	1			33, 34			O0	[C3], Left
	5EV55 RK5AC	1			33, 34			O0	[K9], Left
2	6035 372	2			33, 34				SCREW, Pan Head Tapping, M6. 3x1.8x22.23
3									SCREW, .164-18x1.00, (NOT SERVICED) (Not Serviced)
4	6505 878AA	8			33, 34			O0	PIN, Door Panel
5									CUP, Door Pull
	5535 0344	1			33, 34			O0	Right
	5535 0345	1			33, 34			O0	Left
6	5521 4846	3						O0	CLIP, Trim Panel

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

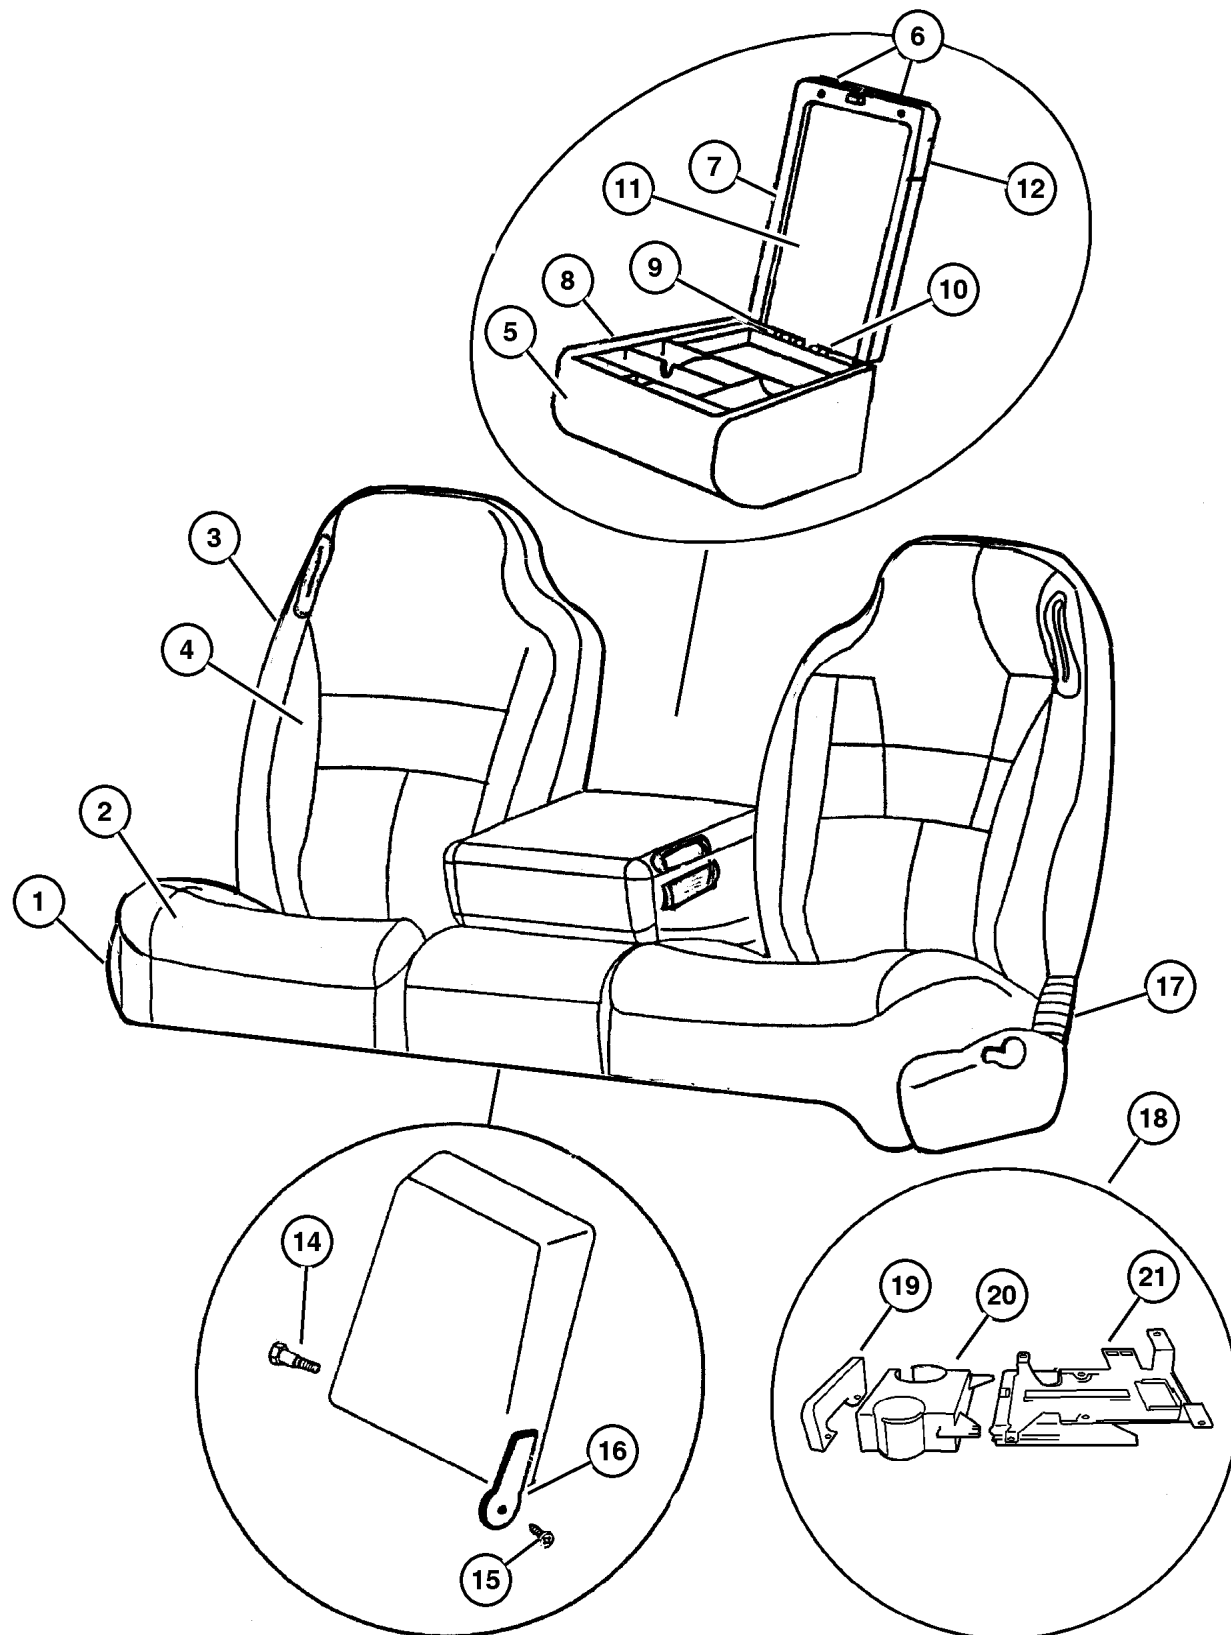Seat, Front, Trim Code DP Figure IBE-510



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1 CUSHION, Front Seat									
1	TB90 1AZAA	1			33, 34			DP	[AZ], Passenger
		1	1, 6		31			DP	[AZ], Passenger
	TB90 1K5AA	1			33, 34			DP	[K9], Passenger
		1	1, 6		31			DP	[K9], Passenger
	TB91 1AZAA	1			33, 34			DP	[AZ], Driver
		1	1, 6		31			DP	[AZ], Driver
	TB91 1K5AA	1			33, 34			DP	[K9], Driver
		1	1, 6		31			DP	[K9], Driver
	TC94 1AZAA	1			33, 34			DP	[AZ], Center
		1			33, 34			DP	[K9], Center
	2 COVER, Front Seat Cushion								
	SP00 1AZAA	1			33, 34			DP	[AZ], Passenger
		1	1, 6		31			DP	[AZ], Passenger
	SP00 1K5AA	1			33, 34			DP	[K9], Passenger
		1	1, 6		31			DP	[K9], Passenger
	SP01 1AZAA	1			33, 34			DP	[AZ], Driver
		1	1, 6		31			DP	[AZ], Driver
	SP01 1K5AA	1			33, 34			DP	[K9], Driver
		1	1, 6		31			DP	[K9], Driver
	SP57 1AZAA	1			33, 34			DP	[AZ], Center
		1	1, 6		31			DP	[AZ], Center
	SP57 1K5AA	1			33, 34			DP	[K9], Center
		1	1, 6		31			DP	[K9], Center
3 SEAT BACK, Front									
	TD04 1AZAA	1			33, 34			DP	[AZ], Passenger
		1			33, 34			DP	[K9], Passenger
	TD05 1AZAA	1			33, 34			DP	[AZ], Driver
		1			33, 34			DP	[K9], Driver
	TD06 1AZAA	1	1, 6		31			DP	[AZ], Passenger
		1	1, 6		31			DP	[K9], Passenger
	TD07 1AZAA	1	1, 6		31			DP	[AZ], Driver
		1	1, 6		31			DP	[K9], Driver
4 COVER, Front Seat Back									
	SP58 1AZAA	1			33, 34			DP	[AZ], Passenger
		1	1, 6		31			DP	[AZ], Passenger
	SP58 1K5AA	1			33, 34			DP	[K9], Passenger
		1	1, 6		31			DP	[K9], Passenger
	SP59 1AZAA	1			33, 34			DP	[AZ], Driver
		1	1, 6		31			DP	[AZ], Driver

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Seat, Front, Trim Code DP
Figure IBE-510

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
5	SP59 1K5AA	1			33, 34			DP	[K9], Driver
		1	1, 6		31			DP	[K9], Driver
	SS38 1AZAA	1			33, 34			DP	BASE, Armrest
		1	1, 6		31			DP	[AZ]
6	SS38 1K5AA	1			33, 34			DP	[K9]
		1	1, 6		31			DP	[K9]
	SS23 1AZAA	1			33, 34			DP	LID, Armrest Bin
		1	1, 6		31			DP	[AZ]
7	SS23 1K5AA	1			33, 34			DP	[K9]
		1	1, 6		31			DP	[K9]
	4778 673	1			33, 34			DP	BEZEL, Armrest, Lid
		1	1, 6		31			DP	
8	5278 455AA	1			33, 34			DP	BEZEL, Armrest, Bin
		1	1, 6		31			DP	
9	4773 684	1			33, 34			DP	PIN, Armrest Lid Hinge
		1	1, 6		31			DP	
10	4773 685	1			33, 34			DP	SPRING, Armrest Lid Hinge
		1	1, 6		31			DP	
11	5278 456AA	1			33, 34			DP	LINER, Armrest Lid
		1	1, 6		31			DP	
12	4797 715	1			33, 34			DP	BEZEL, Armrest
		1	1, 6		31			DP	Lid Latch Release Button
-13	5278 457AA-	1			33, 34			DP	Lid Latch Release Button
		1	1, 6		31			DP	SPRING, Coinholder
14	4773 507	1			33, 34			DP	BOLT, Armrest Pivot
		1	1, 6		31			DP	Center Armrest
15									Center Armrest
									SCREW, (NOT SERVICED) (Not
16	4773 418	1			33, 34			DP	Serviced)
									COVER, Bracket
									Right

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Seat, Front, Trim Code DP
Figure IBE-510


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	1, 6		31			DP	Right
	4773 419	1			33, 34			DP	Left
		1	1, 6		31			DP	Left
17	5010 197AA	2			33, 34			DP	BELLOWS, Seat Mechanism
		2	1, 6		31			DP	
18	4883 916AA	1			33, 34			DP	CUPHOLDER
		1	1, 6		31			DP	
19	5015 994AA	1			33, 34			DP	FACE PLATE, Cupholder
		1	1, 6		31			DP	
20	5003 198AA	1			33, 34			DP	DRAWER, Cupholder
		1	1, 6		31			DP	
21	5015 995AA	1			33, 34			DP	HOUSING, Cup Holder
		1	1, 6		31			DP	

DODGE RAM QUAD CAB/CLUB CAB (BE)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.	
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.	
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual	
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual	
			EAA = All Engines	DEE = 6 Speed HD Manual	
			EAG = All Gas Engines		

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

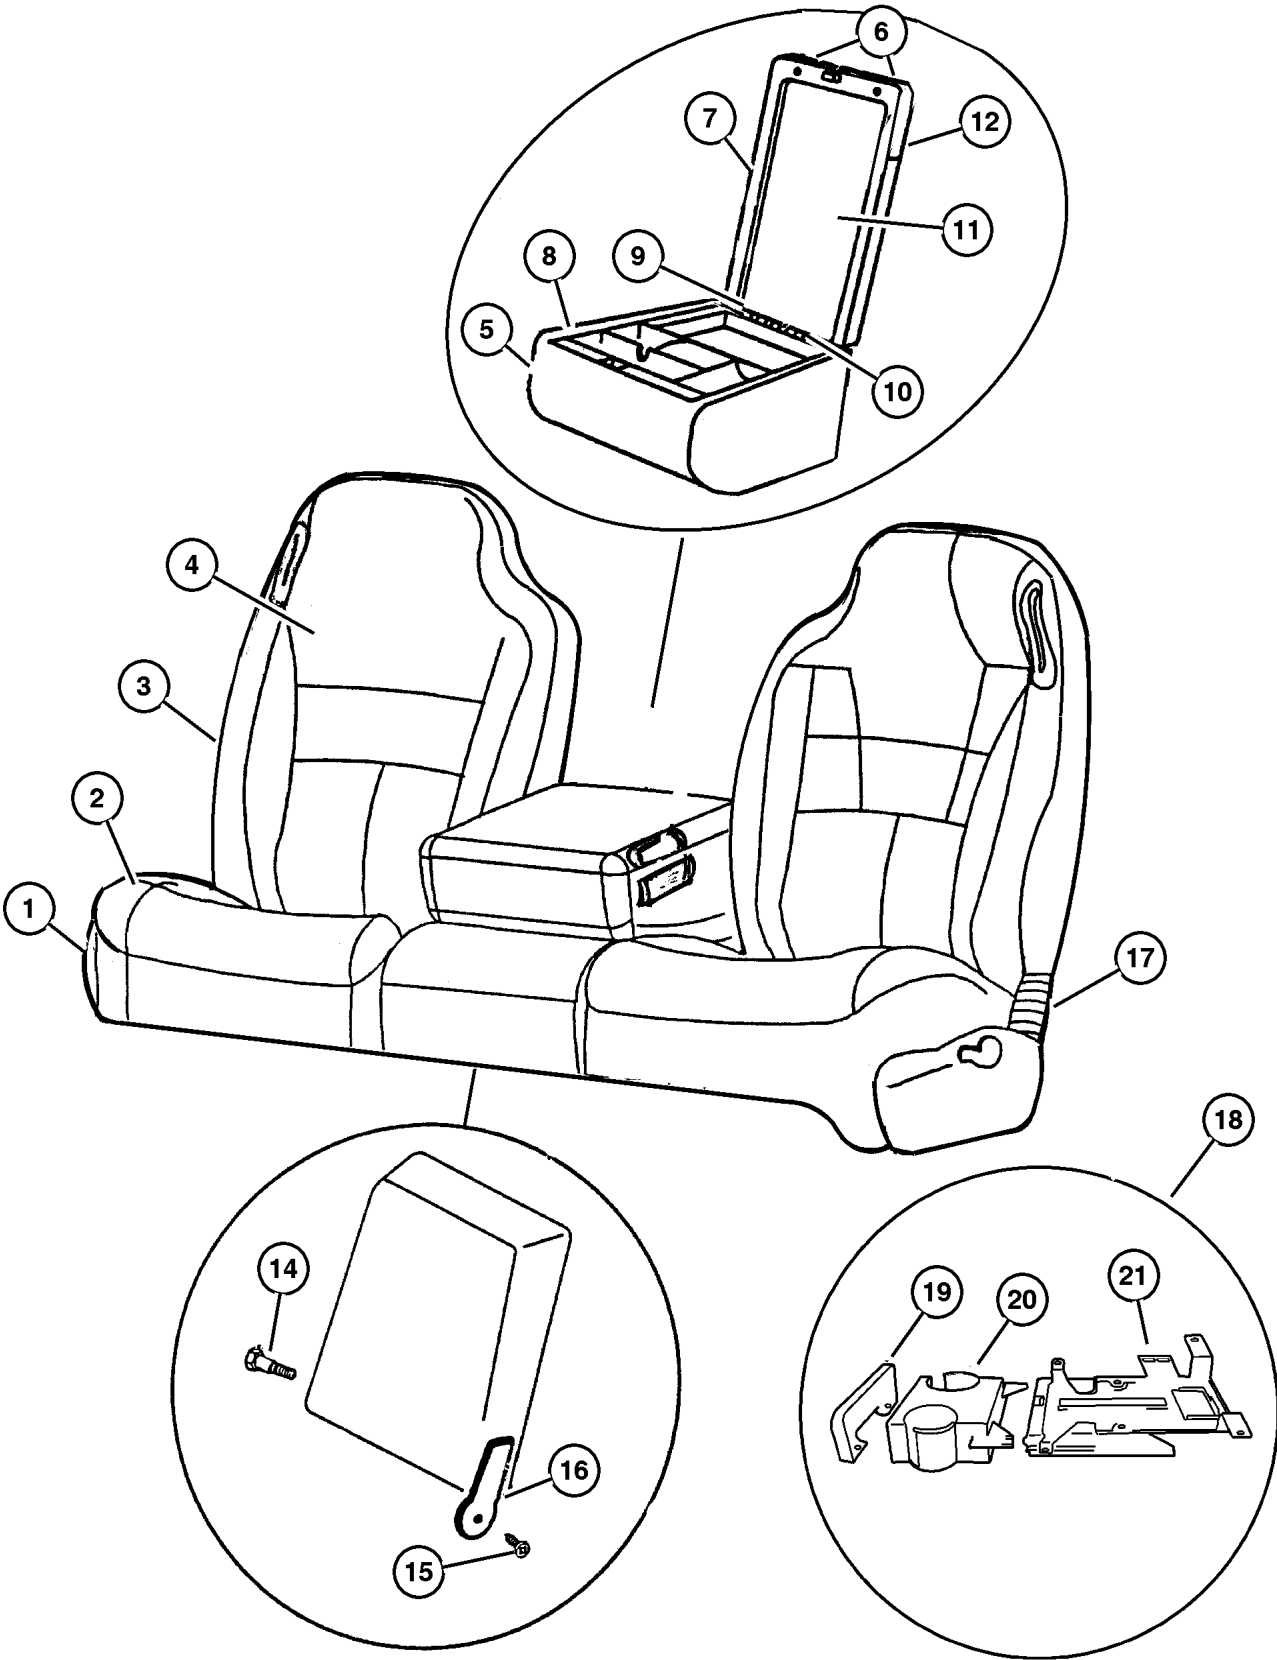Seat, Front, Trim Code R1
Figure IBE-520




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1 CUSHION, Front Seat									
	TD03 1AZAA	1			33, 34			R1	[AZ], Center
		1	1, 6		31			R1	[AZ], Center
	TD03 1C3AA	1			33, 34			R1	[C3], Center
		1	1, 6		31			R1	[C3], Center
	TD03 1K5AA	1			33, 34			R1	[K9], Center
		1	1, 6		31			R1	[K9], Center
	TD08 1AZAA	1			33, 34			R1	[AZ], Passenger
		1	1, 6		31			R1	[AZ], Passenger
	TD08 1C3AA	1			33, 34			R1	[C3], Passenger
		1	1, 6		31			R1	[C3], Passenger
	TD08 1K5AA	1			33, 34			R1	[K9], Passenger
		1	1, 6		31			R1	[K9], Passenger
	TD09 1AZAA	1			33, 34			R1	[AZ], Driver,Manual
		1	1, 6		31			R1	[AZ], Driver,Manual
	TD09 1C3AA	1			33, 34			R1	[C3], Driver,Manual
		1	1, 6		31			R1	[C3], Driver,Manual
	TD09 1K5AA	1			33, 34			R1	[K9], Driver,Manual
		1	1, 6		31			R1	[K9], Driver,Manual
	TD11 1AZAA	1			33, 34			R1	[AZ], Driver,Power
		1	1, 6		31			R1	[AZ], Driver,Power
	TD11 1C3AA	1			33, 34			R1	[C3], Driver,Power
		1	1, 6		31			R1	[C3], Driver,Power
	TD11 1K5AA	1			33, 34			R1	[K9], Driver,Power
		1	1, 6		31			R1	[K9], Driver,Power
2 COVER, Front Seat Cushion									
	SP04 1AZAA	1			33, 34			R1	[AZ], Passenger
		1	1, 6		31			R1	[AZ], Passenger
	SP04 1C3AA	1			33, 34			R1	[C3], Passenger
		1	1, 6		31			R1	[C3], Passenger
	SP04 1K5AA	1			33, 34			R1	[K9], Passenger
		1	1, 6		31			R1	[K9], Passenger
	SP05 1AZAA	1			33, 34			R1	[AZ], Driver,Manual
		1	1, 6		31			R1	[AZ], Driver,Manual
	SP05 1C3AA	1			33, 34			R1	[C3], Driver,Manual
		1	1, 6		31			R1	[C3], Driver,Manual
	SP05 1K5AA	1			33, 34			R1	[K9], Driver,Manual
		1	1, 6		31			R1	[K9], Driver,Manual
	SP80 1AZAA	1			33, 34			R1	[AZ], Center
		1	1, 6		31			R1	[AZ], Center

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

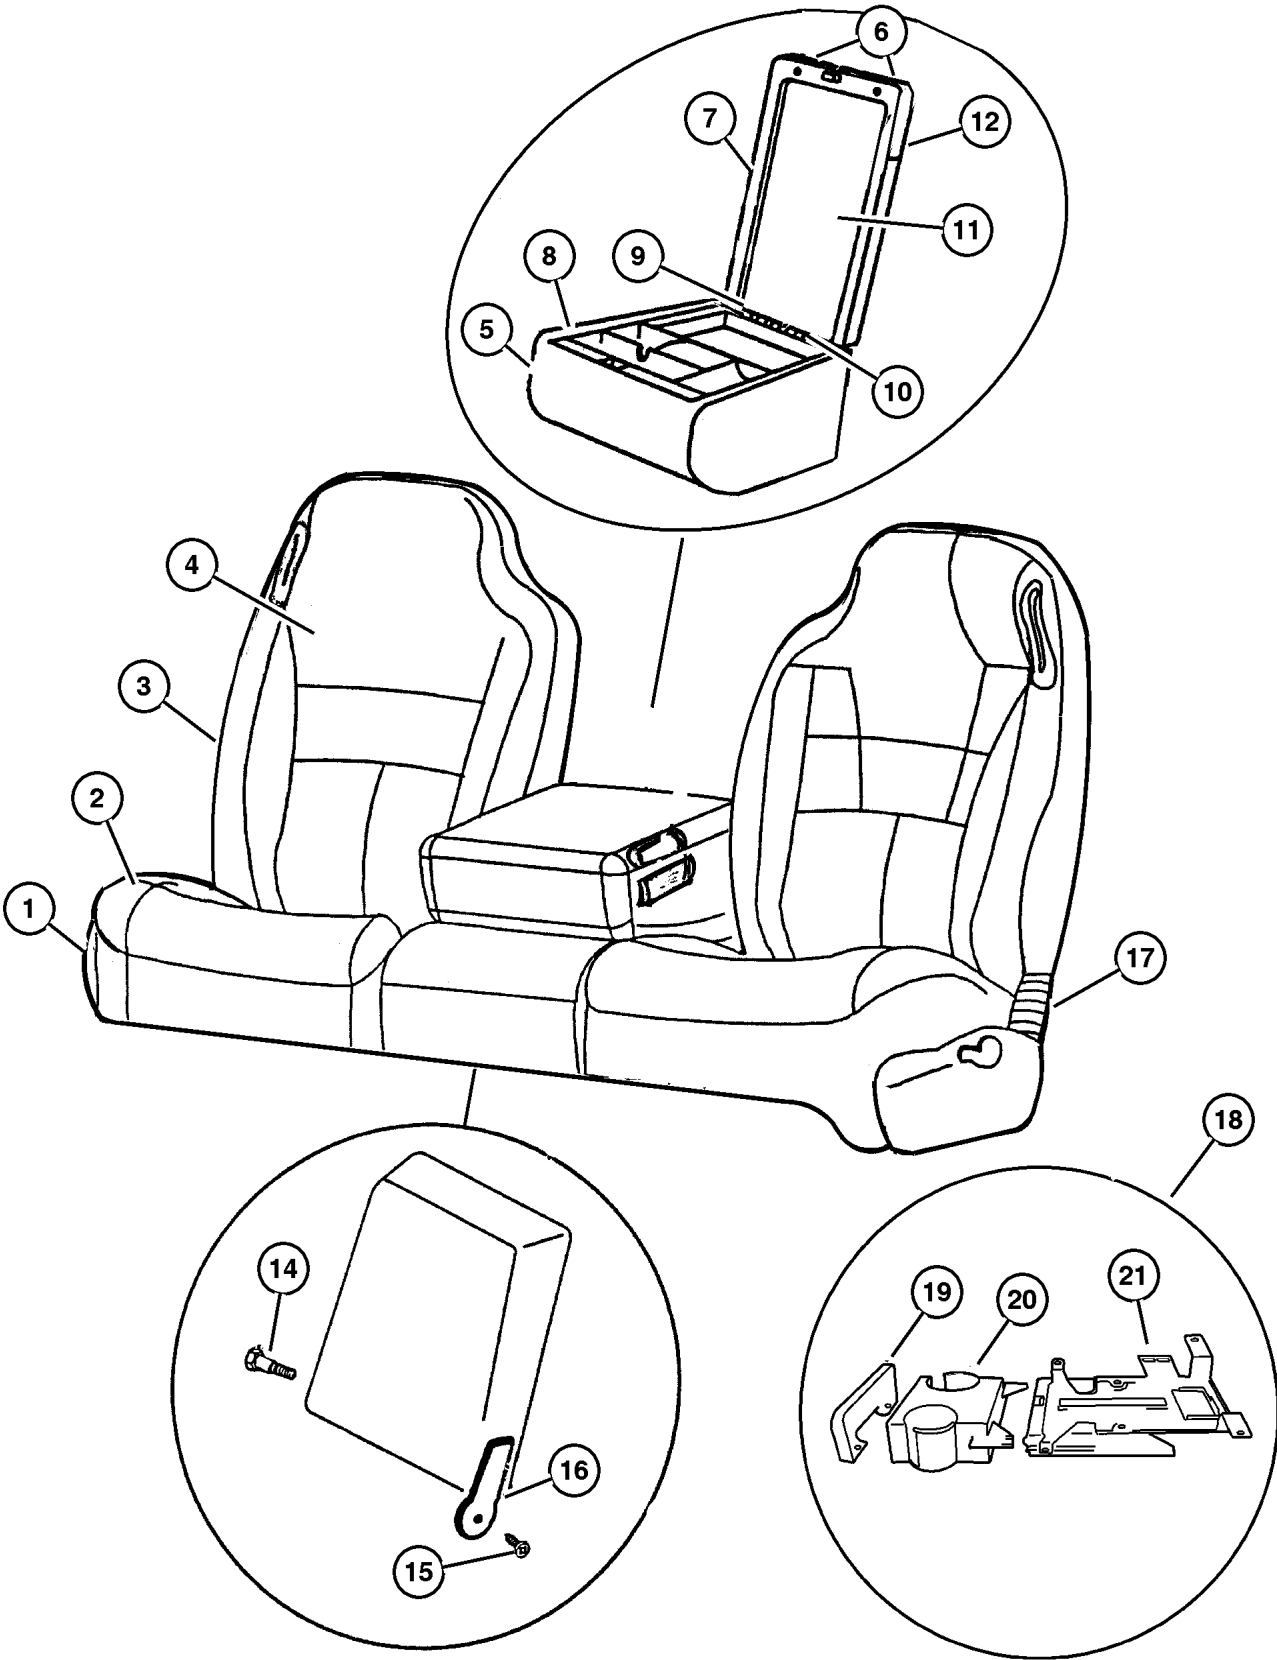Seat, Front, Trim Code R1
Figure IBE-520



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	SP80 1C3AA	1			33, 34			R1	[C3], Center
		1	1, 6		31			R1	[C3], Center
	SP80 1K5AA	1			33, 34			R1	[K9], Center
		1	1, 6		31			R1	[K9], Center
	SQ92 1AZAA	1			33, 34			R1	[AZ], Driver,Power
		1	1, 6		31			R1	[AZ], Driver,Power
	SQ92 1C3AA	1			33, 34			R1	[C3], Driver,Power
		1	1, 6		31			R1	[C3], Driver,Power
	SQ92 1K5AA	1			33, 34			R1	[K9], Driver,Power
		1	1, 6		31			R1	[K9], Driver,Power
3									SEAT BACK, Front
	TD14 1AZAA	1			33, 34			R1	[AZ], Passenger
	TD14 1C3AA	1			33, 34			R1	[C3], Passenger
	TD14 1K5AA	1			33, 34			R1	[K9], Passenger
	TD15 1AZAA	1			33, 34			R1	[AZ], Driver,Manual
	TD15 1C3AA	1			33, 34			R1	[C3], Driver,Manual
	TD15 1K5AA	1			33, 34			R1	[K9], Driver,Manual
	TD17 1AZAA	1			33, 34			R1	[AZ], Driver,Power
	TD17 1C3AA	1			33, 34			R1	[C3], Driver,Power
	TD17 1K5AA	1			33, 34			R1	[K9], Driver,Power
	TD18 1AZAA	1	1, 6		31			R1	[AZ], Passenger
	TD18 1C3AA	1	1, 6		31			R1	[C3], Passenger
	TD18 1K5AA	1	1, 6		31			R1	[K9], Passenger
	TD19 1AZAA	1	1, 6		31			R1	[AZ], Driver,Manual
	TD19 1C3AA	1	1, 6		31			R1	[C3], Driver,Manual
	TD19 1K5AA	1	1, 6		31			R1	[K9], Driver,Manual
	TD59 1AZAA	1	1, 6		31			R1	[AZ], Driver,Power
	TD59 1C3AA	1	1, 6		31			R1	[C3], Driver,Power
	TD59 1K5AA	1	1, 6		31			R1	[K9], Driver,Power
4									COVER, Front Seat Back
	SP78 1AZAA	1			33, 34			R1	[AZ], Passenger
		1	1, 6		31			R1	[AZ], Passenger
	SP78 1C3AA	1			33, 34			R1	[C3], Passenger
		1	1, 6		31			R1	[C3], Passenger
	SP78 1K5AA	1			33, 34			R1	[K9], Passenger
		1	1, 6		31			R1	[K9], Passenger
	SP79 1AZAA	1			33, 34			R1	[AZ], Driver
		1	1, 6		31			R1	[AZ], Driver
	SP79 1C3AA	1			33, 34			R1	[C3], Driver
		1	1, 6		31			R1	[C3], Driver


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

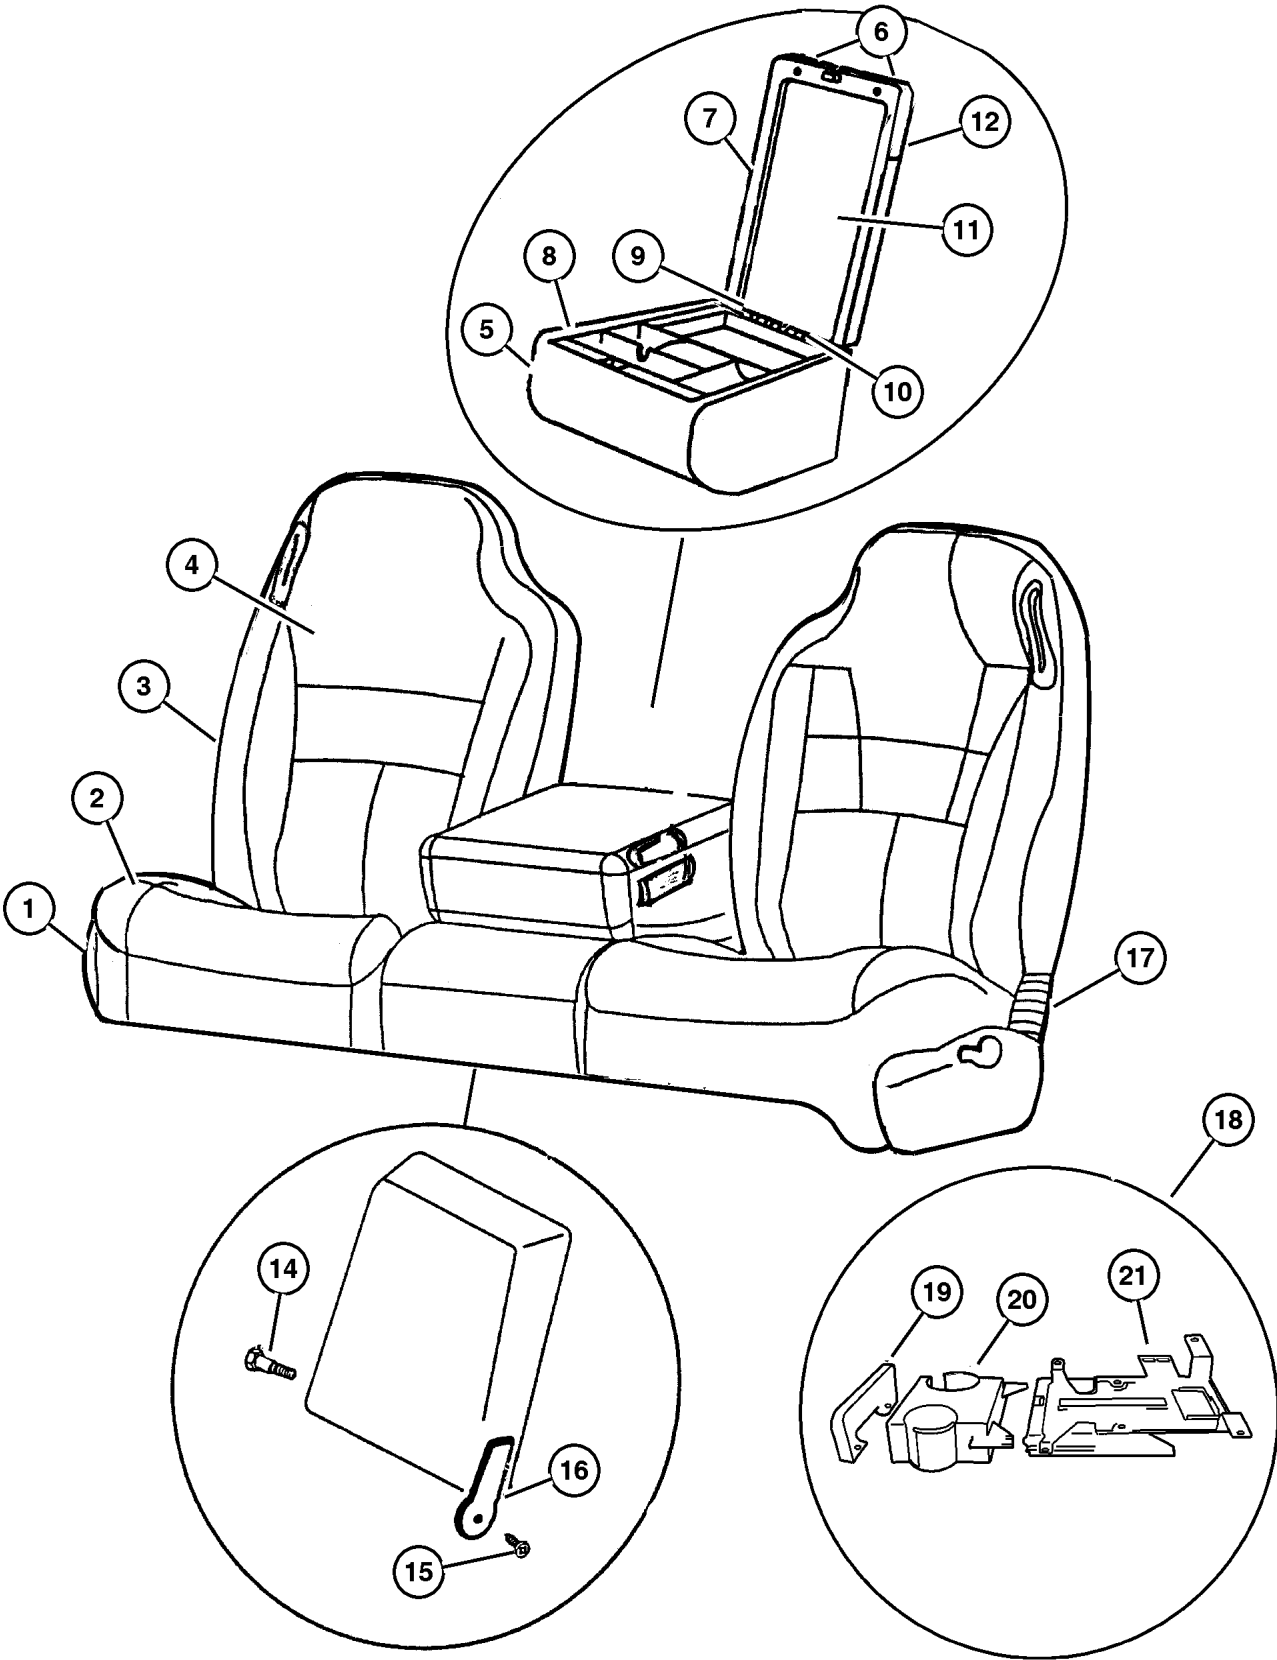Seat, Front, Trim Code R1
Figure IBE-520




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
5	SP79 1K5AA	1			33, 34			R1	[K9], Driver
		1	1, 6		31			R1	[K9], Driver
									BASE, Armrest
	SS37 1AZAA	1			33, 34			R1	[AZ], Up to 5/10/00
		1	1, 6		31			R1	[AZ], Up to 5/10/00
	SS37 1C3AA	1			33, 34			R1	[C3], Up to 5/10/00
		1	1, 6		31			R1	[C3], Up to 5/10/00
	SS37 1K5AA	1			33, 34			R1	[K9], Up to 5/10/00
		1	1, 6		31			R1	[K9], Up to 5/10/00
	WG31 1AZAA	1			33, 34			R1	[AZ], After 5/10/00
		1	1, 6		31			R1	[AZ], After 5/10/00
	WG31 1C3AA	1			33, 34			R1	[C3], After 5/10/00
6		1	1, 6		31			R1	[C3], After 5/10/00
	WG31 1K5AA	1			33, 34			R1	[K9], After 5/10/00
		1	1, 6		31			R1	[K9], After 5/10/00
									LID, Armrest Bin
	SS23 1AZAA	1			33, 34			R1	[AZ]
		1	1, 6		31			R1	[AZ]
	SS23 1C3AA	1			33, 34			R1	[C3]
		1	1, 6		31			R1	[C3]
	SS23 1K5AA	1			33, 34			R1	[K9]
		1	1, 6		31			R1	[K9]
									BEZEL, Armrest, Lid
	4778 673	1			33, 34			R1	
7		1	1, 6		31			R1	
									BEZEL, Armrest, Bin
	5278 455AA	1			33, 34			R1	
		1	1, 6		31			R1	
									PIN, Armrest Lid Hinge
	4773 684	1			33, 34			R1	
		1	1, 6		31			R1	
									SPRING, Armrest Lid Hinge
	4773 685	1			33, 34			R1	
		1	1, 6		31			R1	
									LINER, Armrest Lid
	5278 456AA	1			33, 34			R1	
11		1	1, 6		31			R1	
									BEZEL, Armrest
	4797 715	1			33, 34			R1	Lid Latch Release Button
		1	1, 6		31			R1	Lid Latch Release Button
									SPRING, Coinholder
	-13								

DODGE RAM QUAD CAB/CLUB CAB (BE)					
SERIES	LINE	BODY	ENGINE	TRANSMISSION	
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.	
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.	
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual	
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual	
			EAA = All Engines	DEE = 6 Speed HD Manual	
			EAG = All Gas Engines		

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

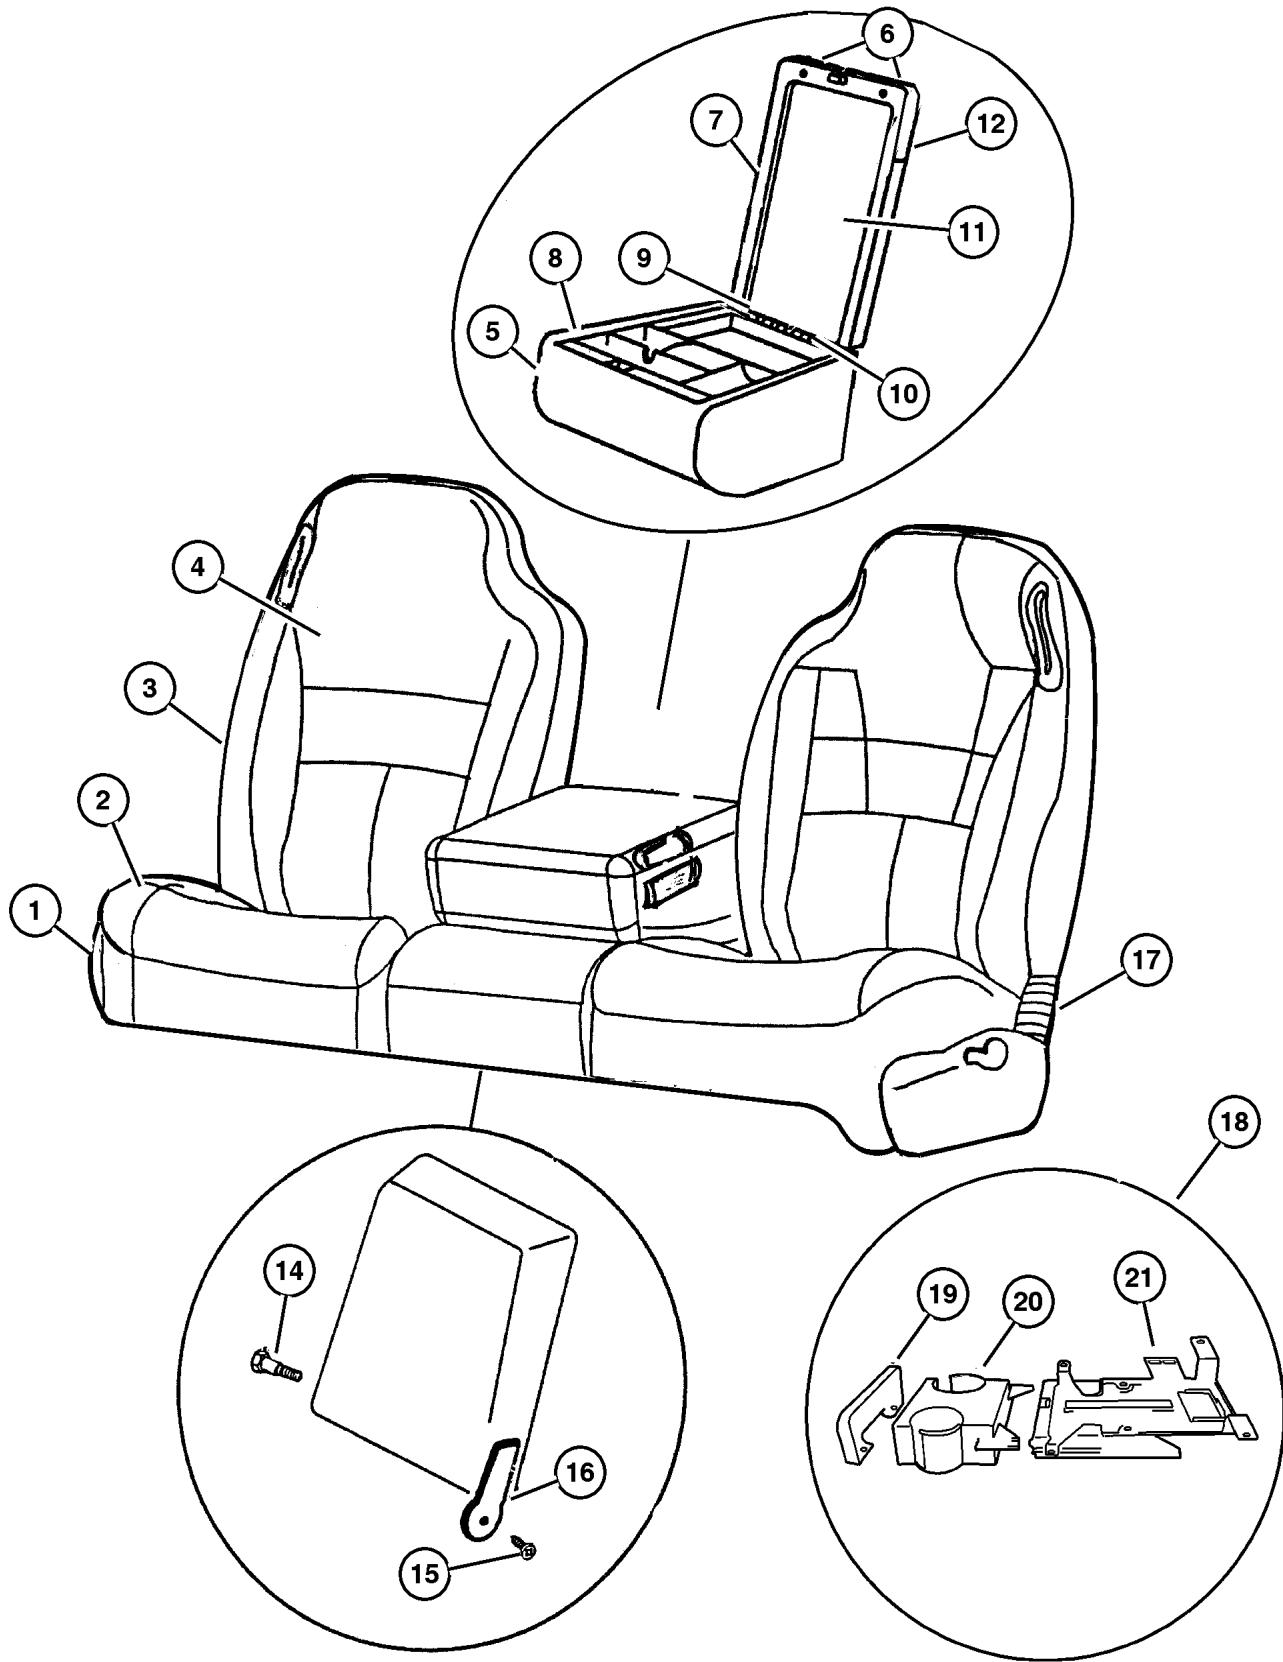Seat, Front, Trim Code R1
Figure IBE-520




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5278 457AA-	1			33, 34			R1	
14		1	1, 6		31			R1	BOLT, Armrest Pivot
	4773 507	1			33, 34			R1	
		1	1, 6		31			R1	
15									SCREW, (NOT SERVICED) (Not Serviced)
16									COVER, Bracket
	4773 418	1			33, 34			R1	Right
		1	1, 6		31			R1	Right
	4773 419	1			33, 34			R1	Left
		1	1, 6		31			R1	Left
17									BELLOWS, Seat Mechanism
	5010 197AA	2			33, 34			R1	
		2	1, 6		31			R1	
18									CUPHOLDER
	4883 916AA	1			33, 34			R1	Rear,Center
		1	1, 6		31			R1	Rear,Center
19									FACE PLATE, Cupholder
	5015 994AA	1			33, 34			R1	
		1	1, 6		31			R1	
20									DRAWER, Cupholder
	5003 198AA	1			33, 34			R1	
		1	1, 6		31			R1	
21									HOUSING, Cup Holder
	5015 995AA	1			33, 34			R1	
		1	1, 6		31			R1	

DODGE RAM QUAD CAB/CLUB CAB (BE)									
SERIES	LINE	BODY	ENGINE	TRANSMISSION					
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.					
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.					
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual					
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual					
			EAA = All Engines	DEE = 6 Speed HD Manual					
			EAG = All Gas Engines						

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

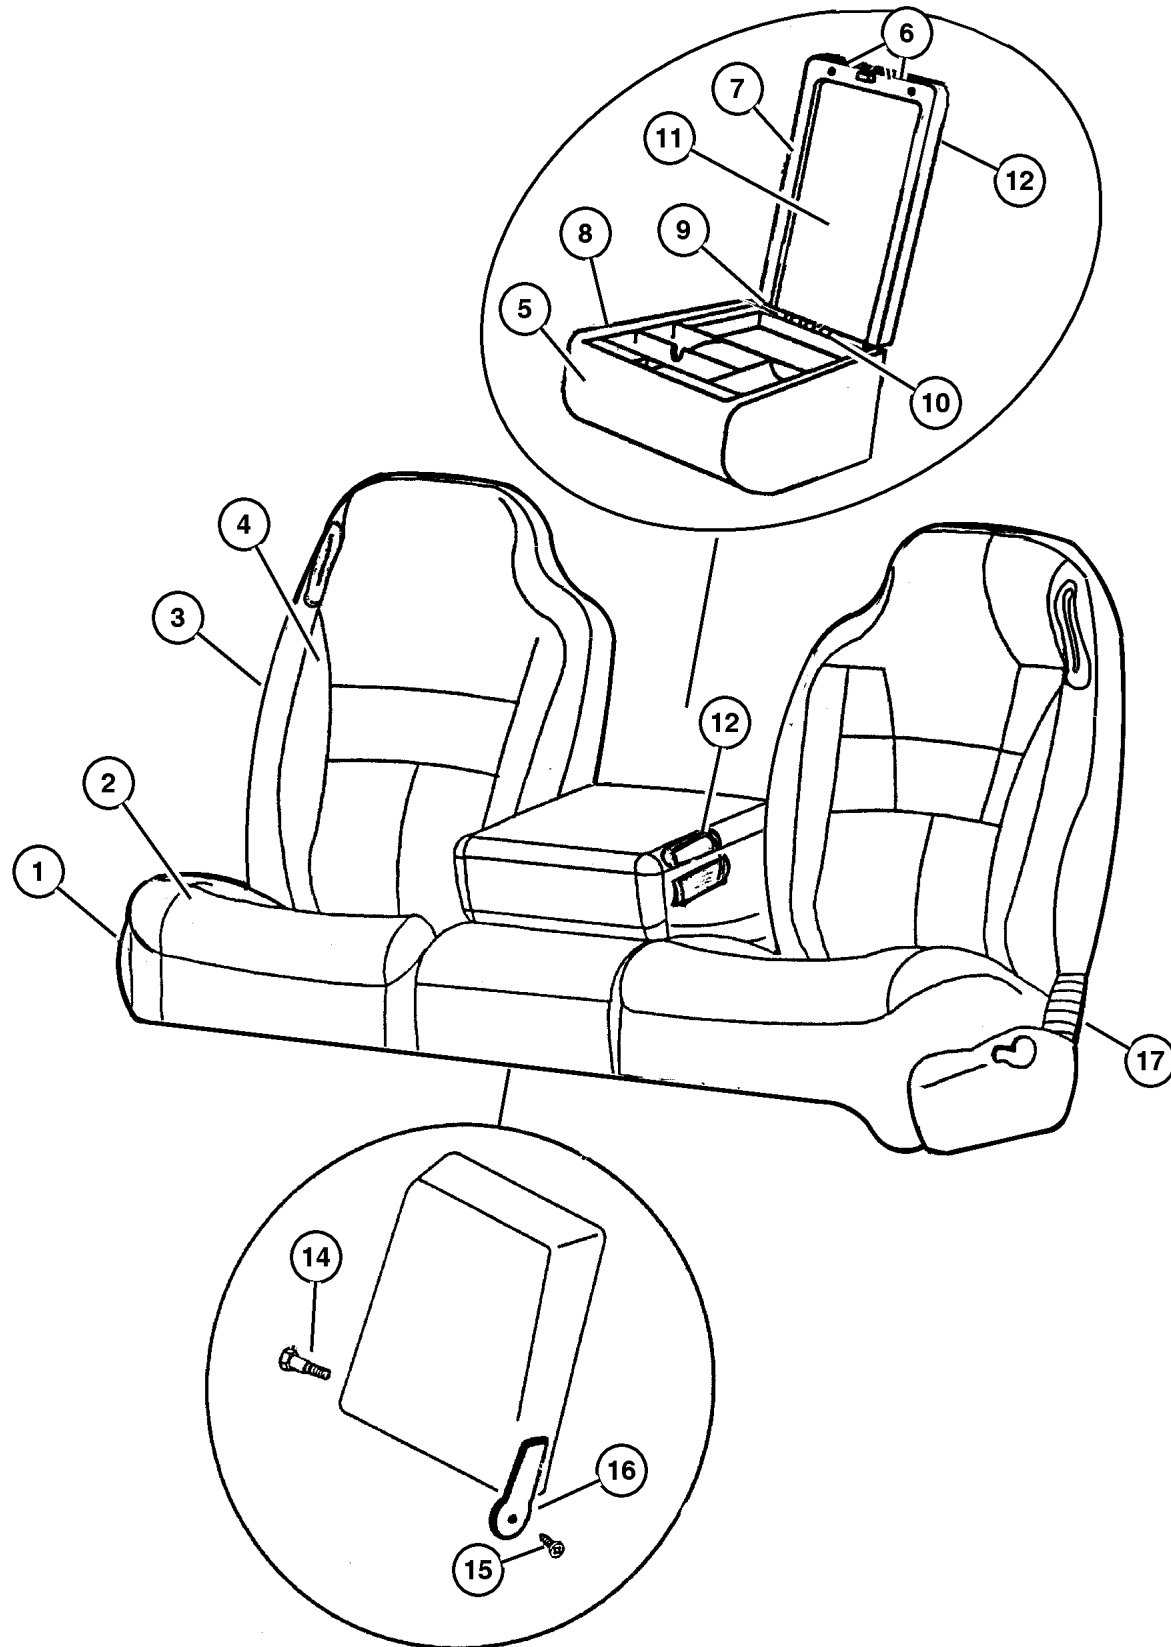Seat, Front, Trim Code S9
Figure IBE-530



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									CUSHION, Front Seat
	TD13 1AZAA	1			33, 34			S9	[AZ]
		1	1, 6		31			S9	[AZ], Center
	TD13 1C3AA	1			33, 34			S9	[C3], Center
		1	1, 6		31			S9	[C3], Center
	TD20 1AZAA	1			33, 34			S9	[AZ], Passenger
		1	1, 6		31			S9	[AZ], Passenger
	TD20 1C3AA	1			33, 34			S9	[C3], Passenger
		1	1, 6		31			S9	[C3], Passenger
	TD21 1AZAA	1			33, 34			S9	[AZ], Driver
		1	1, 6		31			S9	[AZ], Driver
	TD21 1C3AA	1			33, 34			S9	[C3], Driver
		1	1, 6		31			S9	[C3], Driver
2									COVER, Front Seat Cushion
	SP94 1AZAA	1			33, 34			S9	[AZ], Center
		1	1, 6		31			S9	[AZ], Center
	SP94 1C3AA	1			33, 34			S9	[C3], Center
		1	1, 6		31			S9	[C3], Center
	SP98 1AZAA	1			33, 34			S9	[AZ], Passenger
		1	1, 6		31			S9	[AZ], Passenger
	SP98 1C3AA	1			33, 34			S9	[C3], Passenger
		1	1, 6		31			S9	[C3], Passenger
	SP99 1AZAA	1			33, 34			S9	[AZ], Driver
		1	1, 6		31			S9	[AZ], Driver
	SP99 1C3AA	1			33, 34			S9	[C3], Driver
		1	1, 6		31			S9	[C3], Driver
3									SEAT BACK, Front
	TD26 1AZAA	1			33, 34			S9	[AZ], Passenger
	TD26 1C3AA	1			33, 34			S9	[C3], Passenger
	TD27 1AZAA	1			33, 34			S9	[AZ], Driver
	TD27 1C3AA	1			33, 34			S9	[C3], Driver
	TD30 1AZAA	1	1, 6		31			S9	[AZ], Passenger
	TD30 1C3AA	1	1, 6		31			S9	[C3], Passenger
	TD31 1AZAA	1	1, 6		31			S9	[AZ], Driver
	TD31 1C3AA	1	1, 6		31			S9	[C3], Driver
4									COVER, Front Seat Back
	SP92 1AZAA	1			33, 34			S9	[AZ], Passenger
		1	1, 6		31			S9	[AZ], Passenger
	SP92 1C3AA	1			33, 34			S9	[C3], Passenger
		1	1, 6		31			S9	[C3], Passenger

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

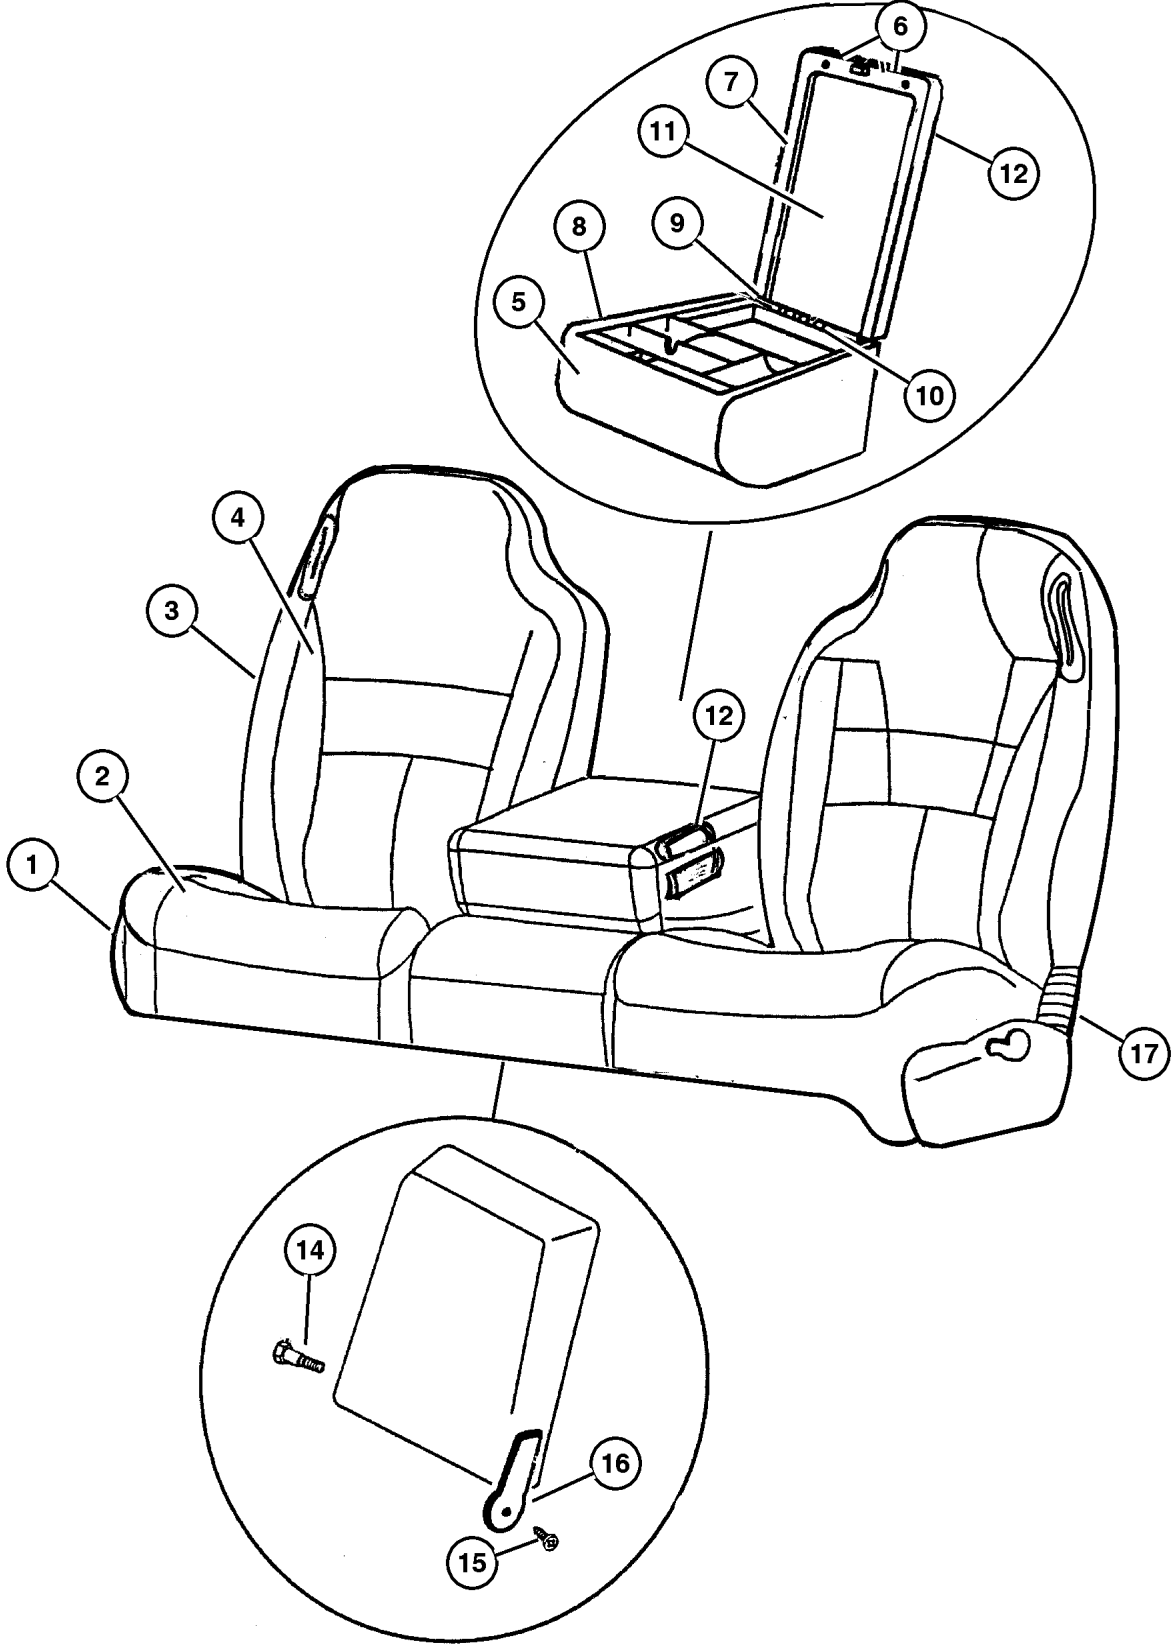
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Seat, Front, Trim Code S9
Figure IBE-530




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	SP93 1AZAA	1			33, 34			S9	[AZ], Driver
		1	1, 6		31			S9	[AZ], Driver
	SP93 1C3AA	1			33, 34			S9	[C3], Driver
		1	1, 6		31			S9	[C3], Driver
5									BASE, Armrest
	SS36 1AZAA	1			33, 34			S9	[AZ]
		1	1, 6		31			S9	[AZ]
	SS36 1C3AA	1			33, 34			S9	[C3]
		1	1, 6		31			S9	[C3]
6									LID, Armrest Bin
	SS23 1AZAA	1			33, 34			S9	[AZ]
		1	1, 6		31			S9	[AZ]
	SS23 1C3AA	1			33, 34			S9	[C3]
		1	1, 6		31			S9	[C3]
7									BEZEL, Armrest, Lid
	4778 673	1			33, 34			S9	
		1	1, 6		31			S9	
8									BEZEL, Armrest, Bin
	5278 455AA	1			33, 34			S9	
		1	1, 6		31			S9	
9									PIN, Armrest Lid Hinge
	4773 684	1			33, 34			S9	
		1	1, 6		31			S9	
10									SPRING, Armrest Lid Hinge
	4773 685	1			33, 34			S9	
		1	1, 6		31			S9	
11									LINER, Armrest Lid
	5278 456AA	1			33, 34			S9	
		1	1, 6		31			S9	
12									BEZEL, Armrest
	4797 715	1			33, 34			S9	Lid Latch Release Button
		1	1, 6		31			S9	Lid Latch Release Button
-13									SPRING, Coinholder
	5278 457AA-	1			33, 34			S9	
		1	1, 6		31			S9	
14									BOLT, Armrest Pivot
	4773 507	1			33, 34			S9	
		1	1, 6		31			S9	
15									SCREW, (NOT SERVICED) (Not Serviced)
16									COVER, Bracket

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

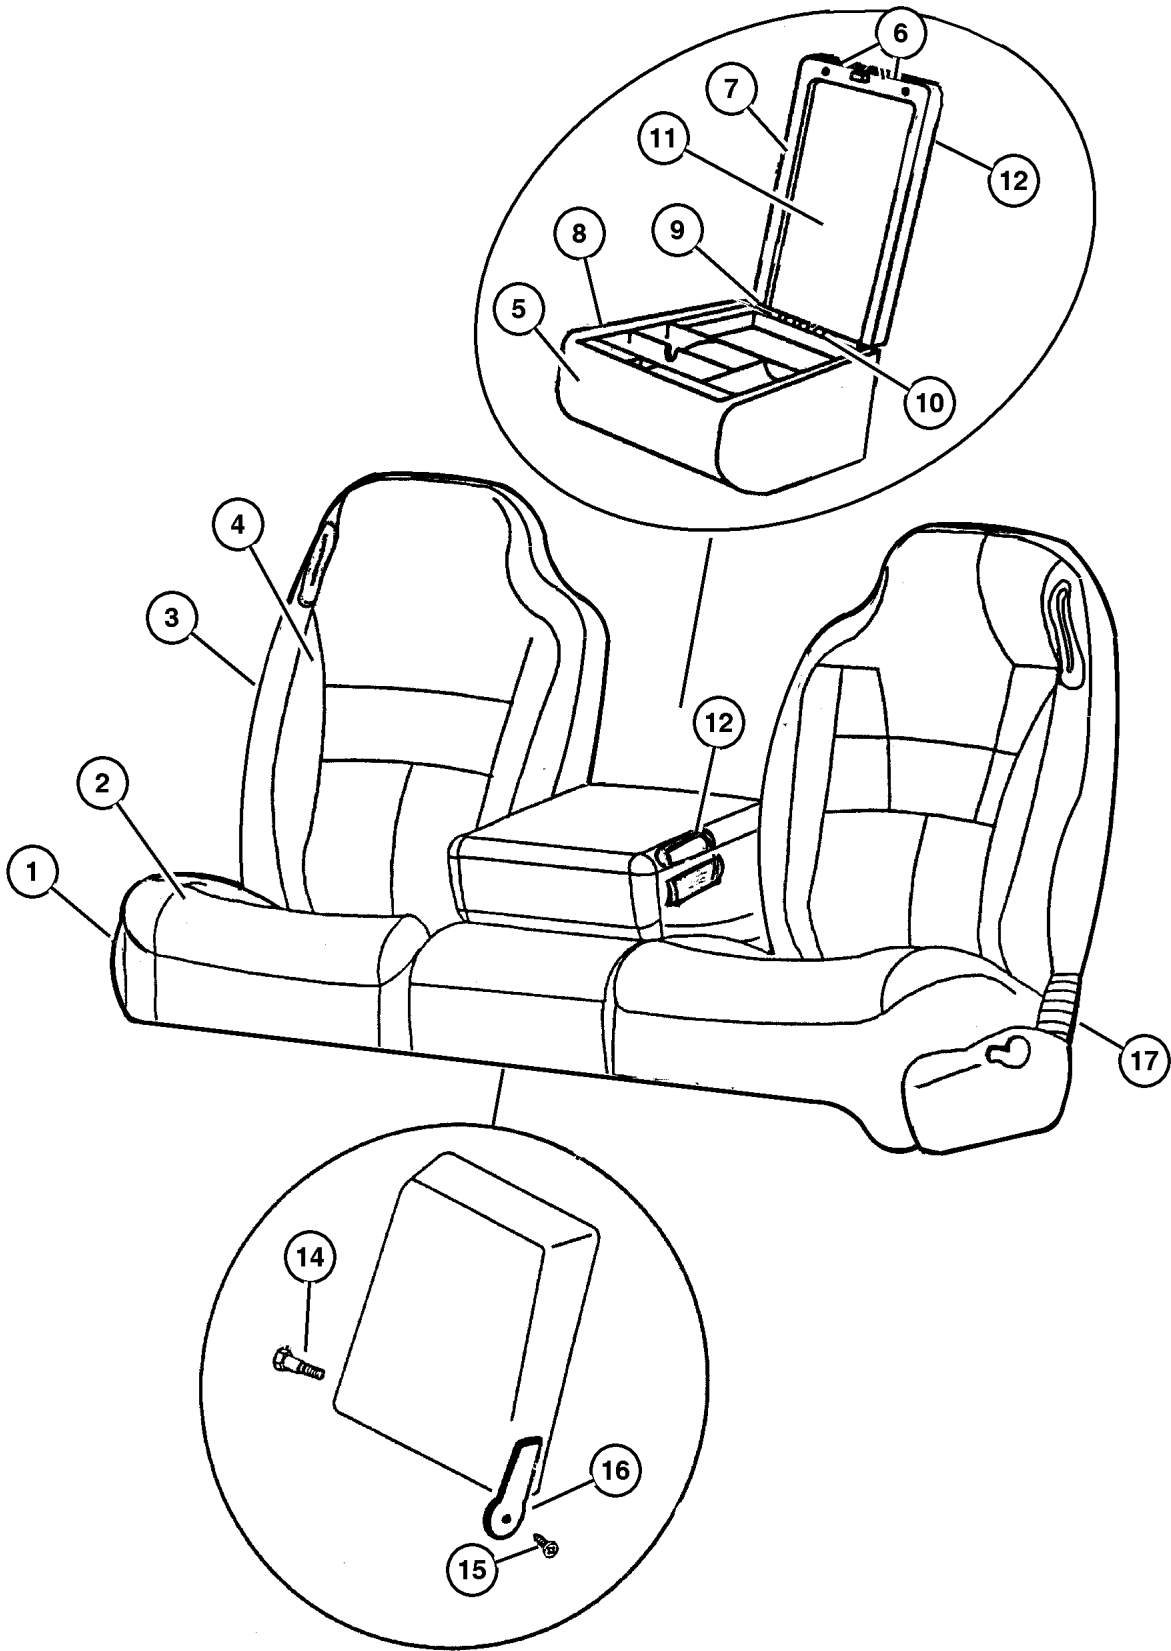Seat, Front, Trim Code S9
Figure IBE-530




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4773 418	1			33, 34			S9	Right
		1	1, 6		31			S9	Right
	4773 419	1			33, 34			S9	Left
		1	1, 6		31			S9	Left
17									BELLOWS, Seat Mechanism
	5010 197AA	2			33, 34			S9	
		2	1, 6		31			S9	

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

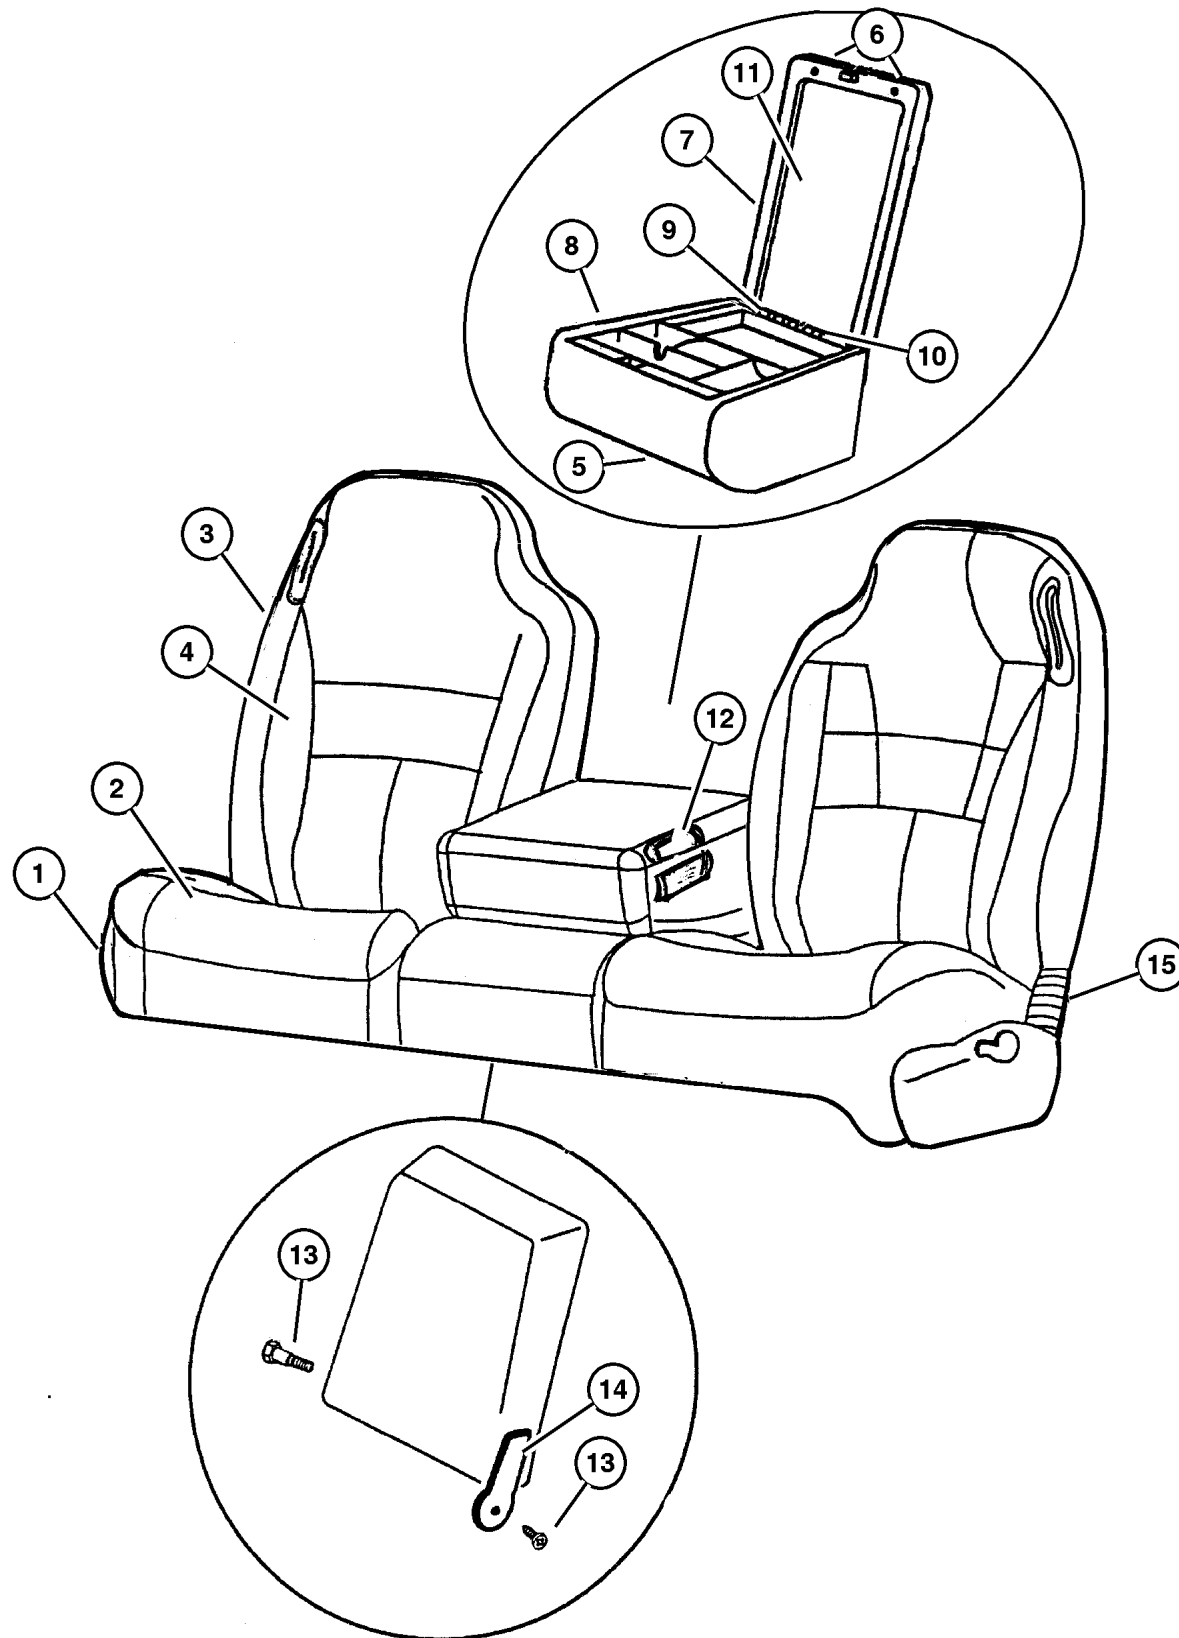Seats, Front, Trim Codes SX, TY
Figure IBE-540



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									CUSHION, Front Seat
	TD36 1C3AA	1	1, 6		31			SX	[C3], Center
	TD34 1AZAA	1			33, 34			SX	[AZ], Passenger
		1	1, 6		31			SX	[AZ], Passenger
	TD36 1C3AA	1			33, 34			SX	[C3], Center
	TD34 1C3AA	1			33, 34			SX	[C3], Passenger
		1	1, 6		31			SX	[C3], Passenger
	TD36 1AZAA	1	1, 6		31			SX	[AZ], Center
	TD35 1AZAA	1			33, 34			SX	[AZ], Driver
		1	1, 6		31			SX	[AZ], Driver
	TD36 1AZAA	1			33, 34			SX	[AZ], Center
	TD35 1C3AA	1			33, 34			SX	[C3], Driver
		1	1, 6		31			SX	[C3], Driver
	TD36 1AZAA	1			33, 34			TY	[AZ], Center
	TD35 1C3AA	1			33, 34			TY	[C3], Driver
	TD35 1AZAA	1			33, 34			TY	[AZ], Driver
	TD36 1C3AA	1			33, 34			TY	[C3], Center
	TD34 1C3AA	1			33, 34			TY	[C3], Passenger
	TD34 1AZAA	1			33, 34			TY	[AZ], Passenger
2									COVER, Front Seat Cushion
	SQ09 1AZAA	1			33, 34			SX	[AZ], Center
		1	1, 6		31			SX	[AZ], Center
	SQ11 1C3AA	1	1, 6		31			SX	[C3], Driver
	SQ09 1C3AA	1			33, 34			SX	[C3], Center
		1	1, 6		31			SX	[C3], Center
	SQ11 1C3AA	1			33, 34			SX	[C3], Driver
	SQ10 1AZAA	1			33, 34			SX	[AZ], Passenger
		1	1, 6		31			SX	[AZ], Passenger
	SQ11 1AZAA	1	1, 6		31			SX	[AZ], Driver
	SQ10 1C3AA	1			33, 34			SX	[C3], Passenger
		1	1, 6		31			SX	[C3], Passenger
	SQ11 1AZAA	1			33, 34			SX	[AZ], Driver
	SQ10 1C3AA	1			33, 34			TY	[C3], Passenger
	SQ10 1AZAA	1			33, 34			TY	[AZ], Passenger
	SQ11 1AZAA	1			33, 34			TY	[AZ], Driver
	SQ09 1C3AA	1			33, 34			TY	[C3], Center
	SQ09 1AZAA	1			33, 34			TY	[AZ], Center
	SQ11 1C3AA	1			33, 34			TY	[C3], Driver
3									SEAT BACK, Front
	TD40 1AZAA	1			33, 34			SX	[AZ], Passenger

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

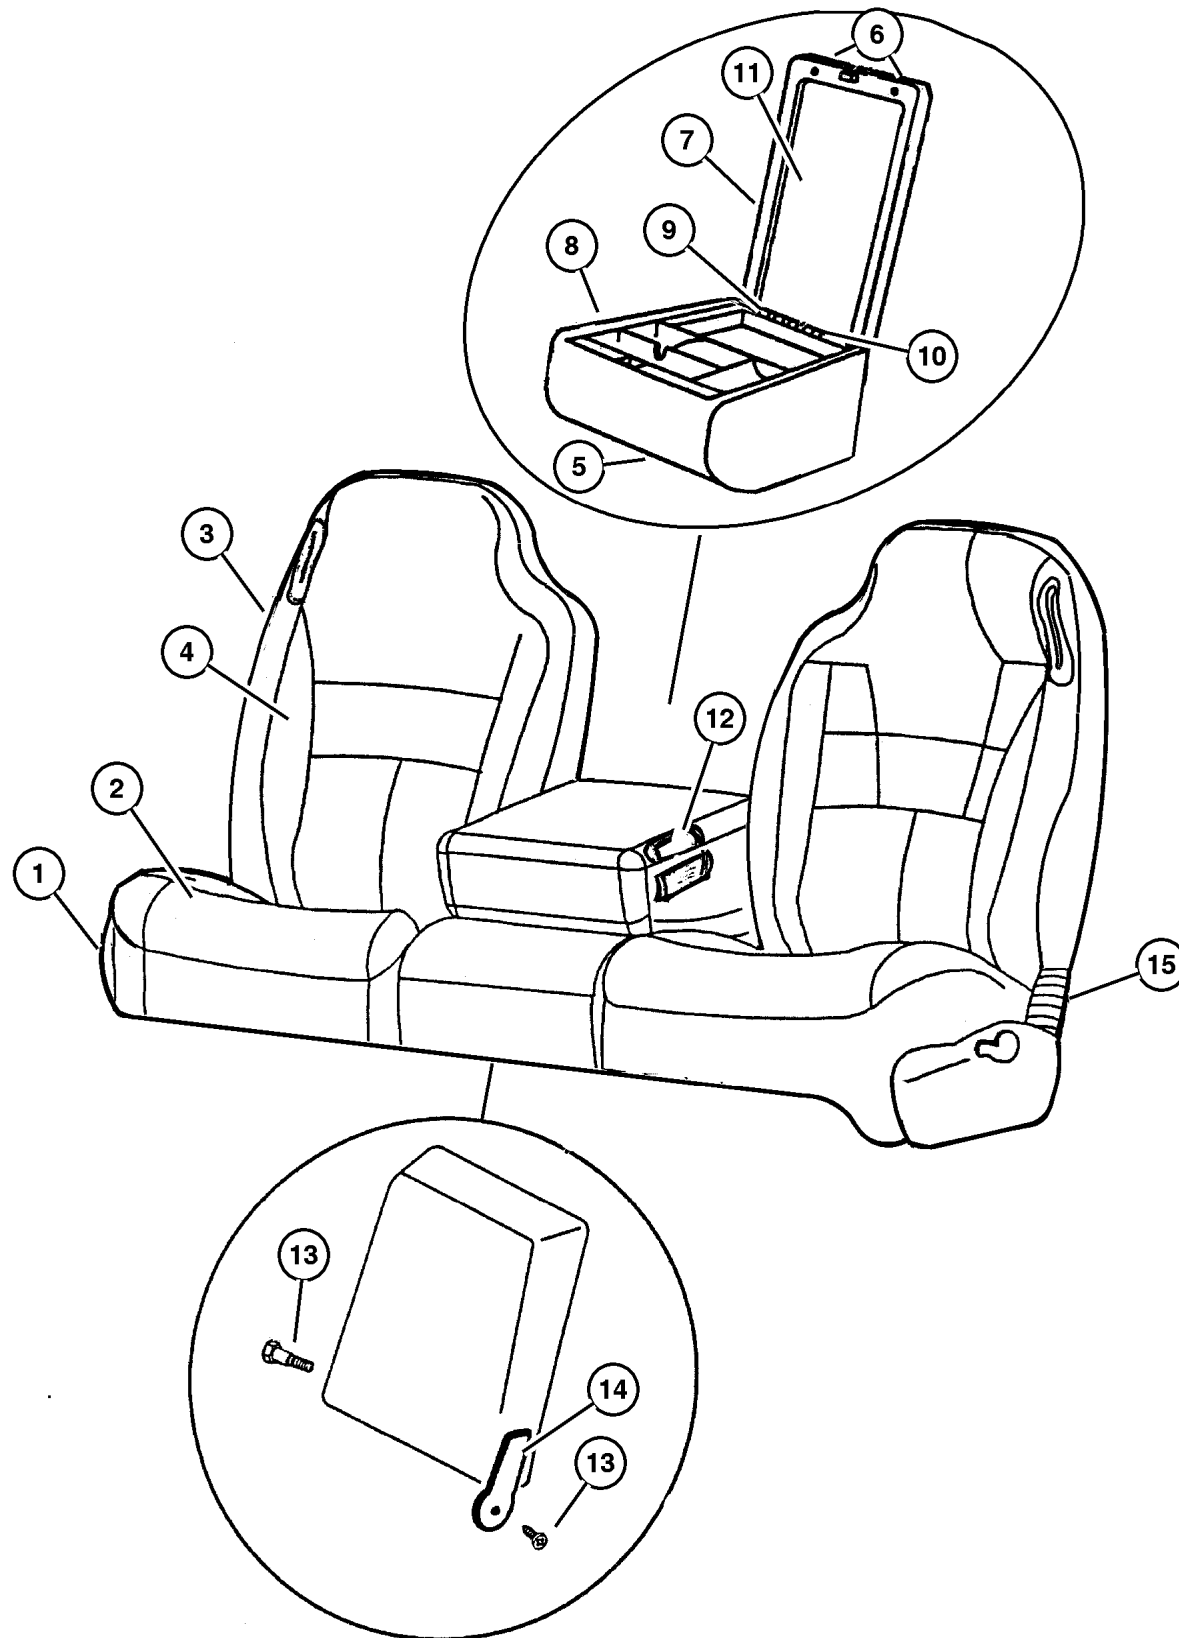
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Seats, Front, Trim Codes SX, TY
Figure IBE-540



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	TD40 1C3AA	1			33, 34			SX	[C3], Passenger
	TD41 1AZAA	1			33, 34			SX	[AZ], Driver
	TD41 1C3AA	1			33, 34			SX	[C3], Driver
	TD45 1C3AA	1	1, 6		31			SX	[C3], Driver
	TD44 1AZAA	1	1, 6		31			SX	[AZ], Passenger
	TD45 1AZAA	1	1, 6		31			SX	[AZ], Driver
	TD44 1C3AA	1	1, 6		31			SX	[C3], Passenger
	TD45 1AZAA	1			33, 34			TY	[AZ], Driver
	TD44 1C3AA	1			33, 34			TY	[C3], Passenger
	TD45 1C3AA	1			33, 34			TY	[C3], Driver
	TD44 1AZAA	1			33, 34			TY	[AZ], Passenger
4	SP70 1AZAA	1			33, 34			SX	[AZ], Passenger
		1	1, 6		31			SX	[AZ], Passenger
	SP71 1C3AA	1	1, 6		31			SX	[C3], Driver
	SP70 1C3AA	1			33, 34			SX	[C3], Passenger
		1	1, 6		31			SX	[C3], Passenger
	SP71 1C3AA	1			33, 34			SX	[C3], Driver
	SP71 1AZAA	1			33, 34			SX	[AZ], Driver
		1	1, 6		31			SX	[AZ], Driver
		1			33, 34			TY	[AZ], Driver
	SP70 1C3AA	1			33, 34			TY	[C3], Passenger
	SP70 1AZAA	1			33, 34			TY	[AZ], Passenger
	SP71 1C3AA	1			33, 34			TY	[C3], Driver
5									BASE, Armrest
	SS28 1C3AA	1	1, 6		31			SX	[C3]
	SS28 1AZAA	1			33, 34			SX	[AZ]
		1	1, 6		31			SX	[AZ]
	SS28 1C3AA	1			33, 34			SX	[C3]
		1			33, 34			TY	[C3]
	SS28 1AZAA	1			33, 34			TY	[AZ]
6									LID, Armrest Bin
	SS23 1C3AA	1	1, 6		31			SX	[C3]
	SS23 1AZAA	1			33, 34			SX	[AZ]
		1	1, 6		31			SX	[AZ]
	SS23 1C3AA	1			33, 34			SX	[C3]
		1			33, 34			TY	[C3]
	SS23 1AZAA	1			33, 34			TY	[AZ]
7									BEZEL, Armrest, Lid
	4778 673	1	1, 6		31			SX	

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

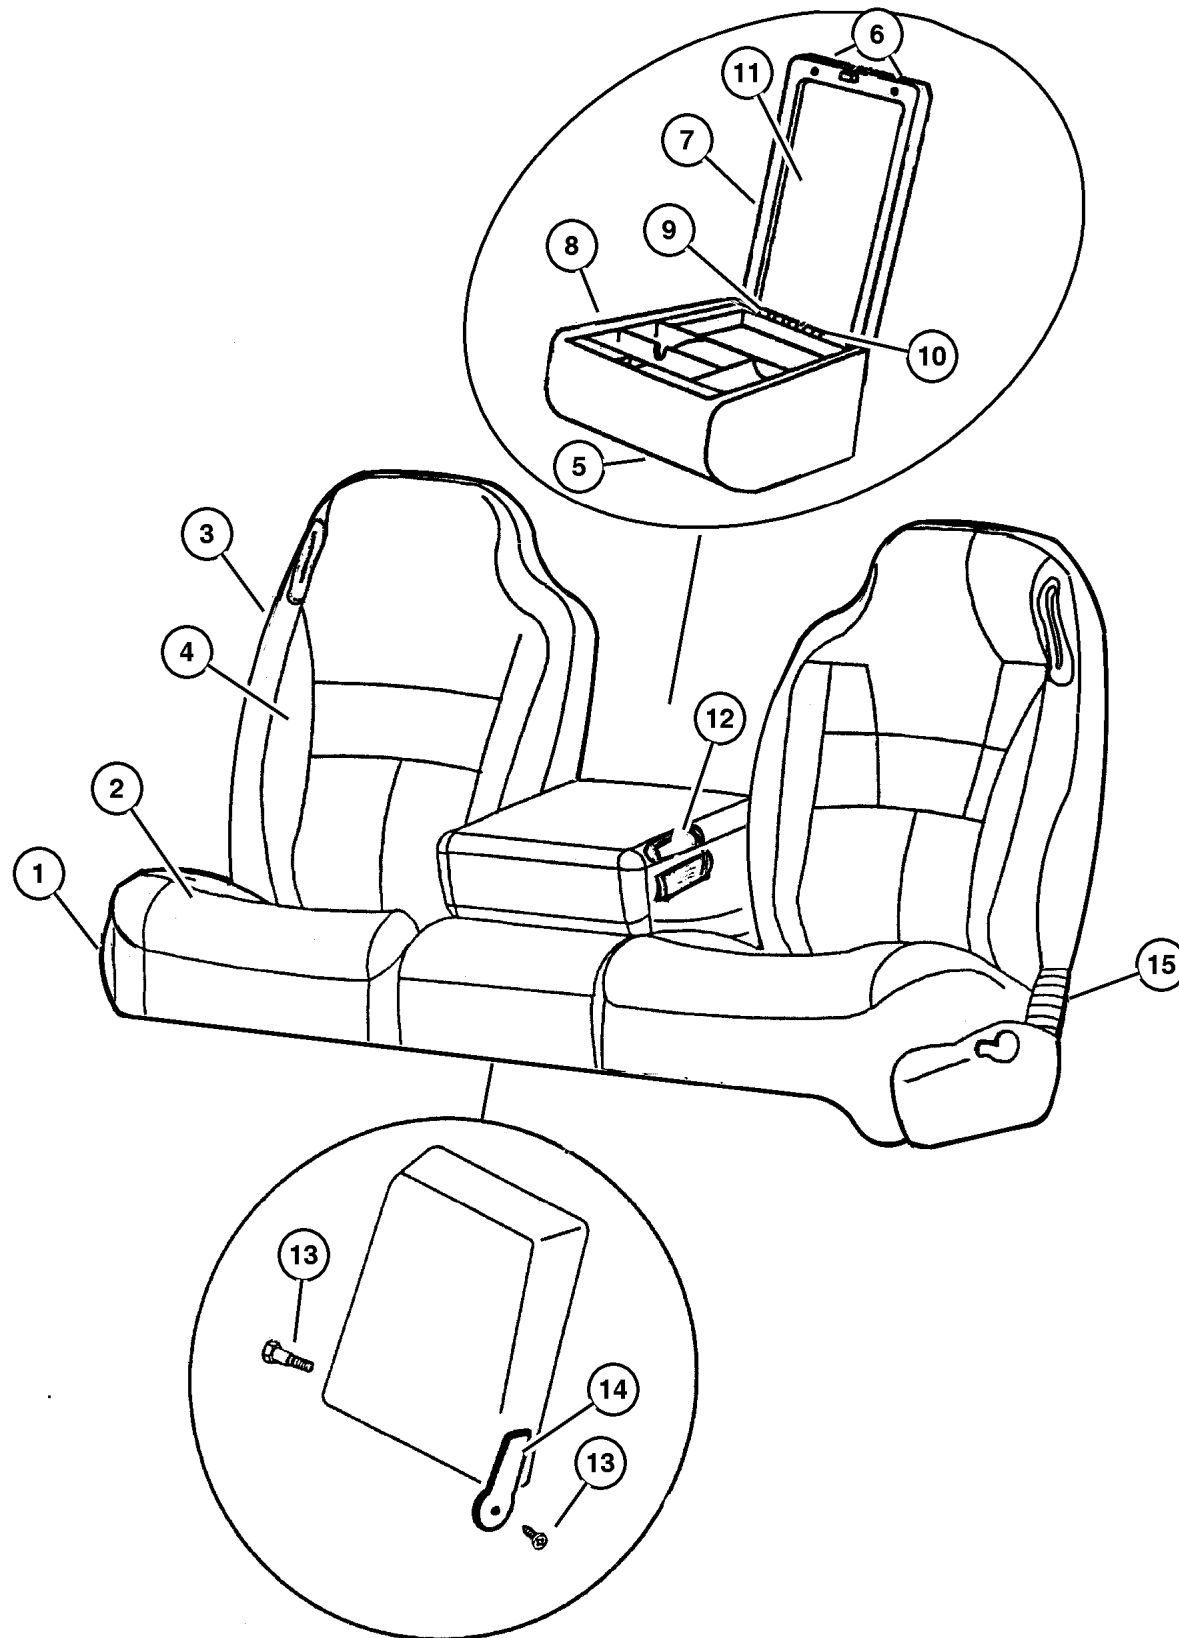
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Seats, Front, Trim Codes SX, TY Figure IBE-540



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1			33, 34			SX	
		1			33, 34			TY	
8	5278 455AA	1	1, 6		31			SX	BEZEL, Armrest, Bin
		1			33, 34			SX	
9	4773 684	1	1, 6		31			TY	PIN, Armrest Lid Hinge
		1			33, 34			SX	
10	4773 685	1	1, 6		31			TY	SPRING, Armrest Lid Hinge
		1			33, 34			SX	
11	5278 456AA	1	1, 6		31			TY	LINER, Armrest Lid
		1			33, 34			SX	
12	4797 715	1	1, 6		31			TY	BEZEL, Armrest
		1			33, 34			SX	
13	4773 507	1			33, 34			TY	BOLT, Armrest Pivot
		1			33, 34			SX	
		1	1, 6		31			TY	
14	4773 419	1	1, 6		31			SX	COVER, Bracket
	4773 418	1			33, 34			SX	Left
		1	1, 6		31			SX	Right
	4773 419	1			33, 34			SX	Left
		1			33, 34			TY	Left
	4773 418	1			33, 34			TY	Right
15	5010 197AA	2	1, 6		31			SX	BELLOWS, Seat Mechanism
		2			33, 34			SX	
		2			33, 34			TY	
-16	5278 457AA-	1	1, 6		31			SX	SPRING, Coinholder
		1			33, 34			SX	

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines


TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Seats, Front, Trim Codes SX, TY

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1			33, 34			TY	

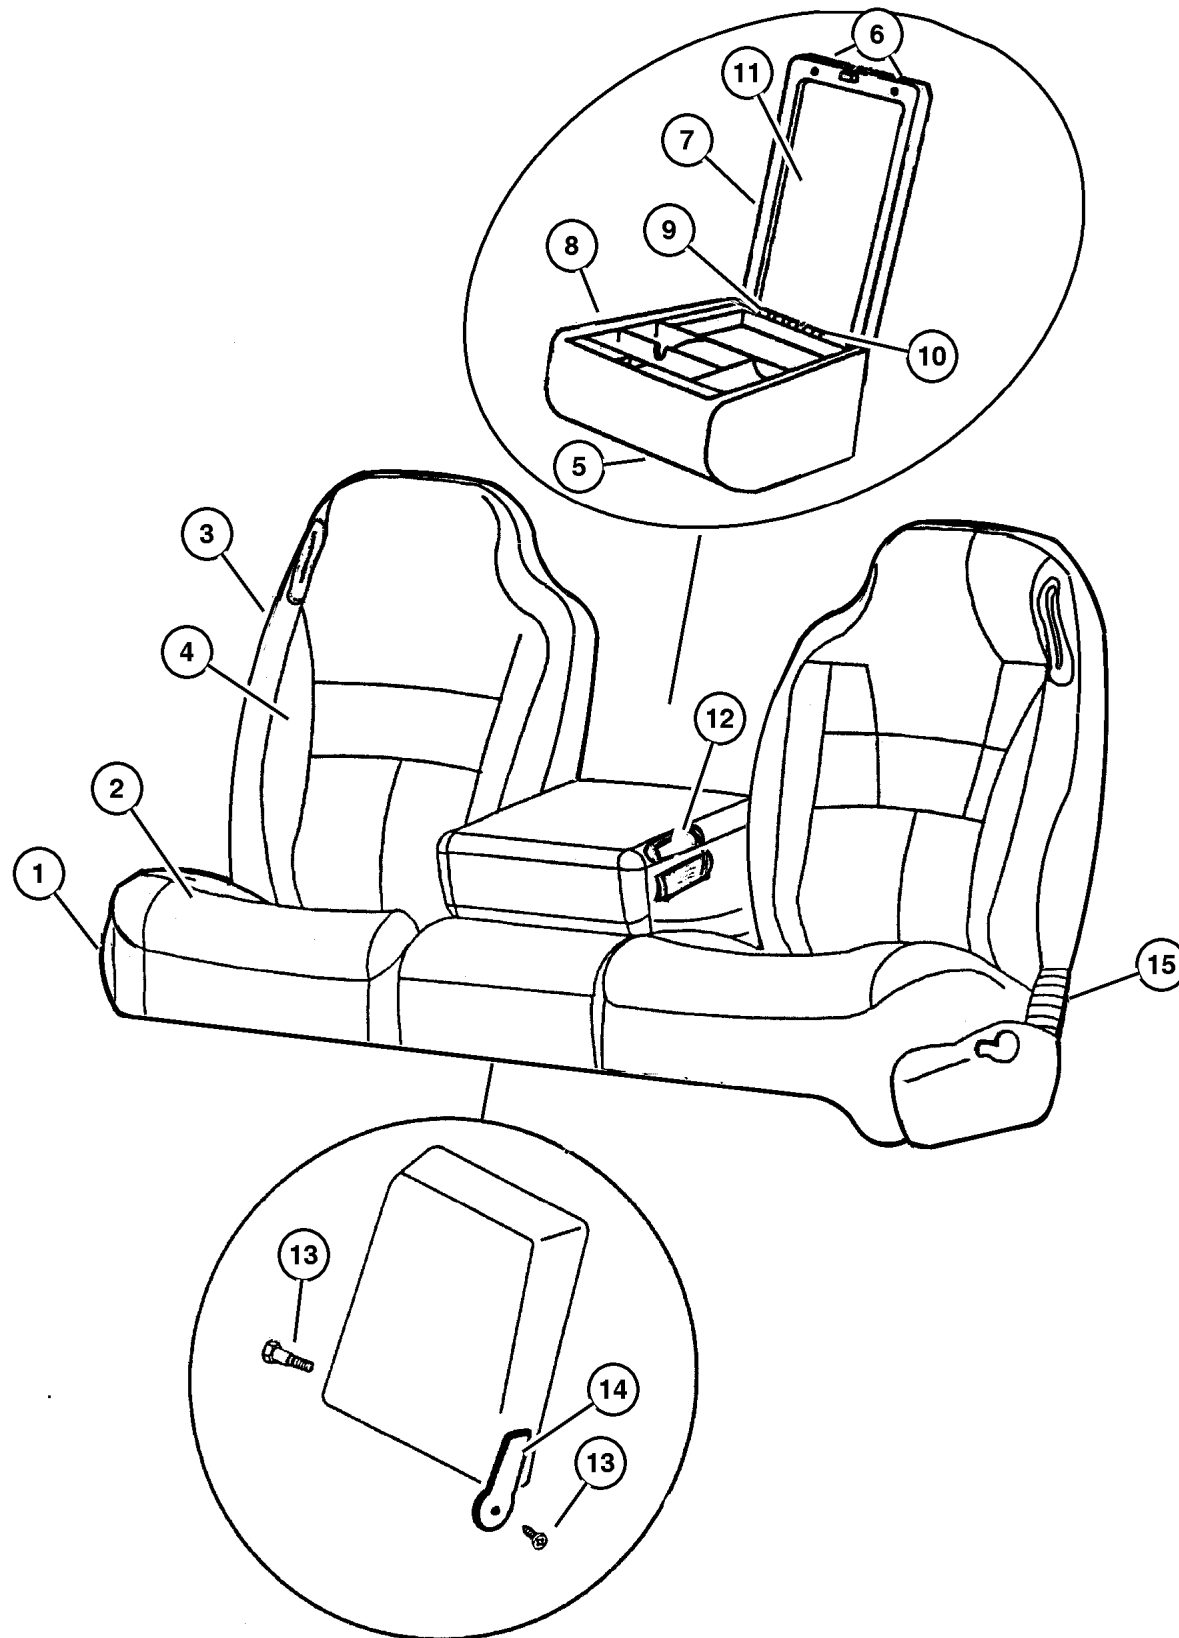

DODGE RAM QUAD CAB/CLUB CAB (BE)

L = Ram Truck (All)

LINE

1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

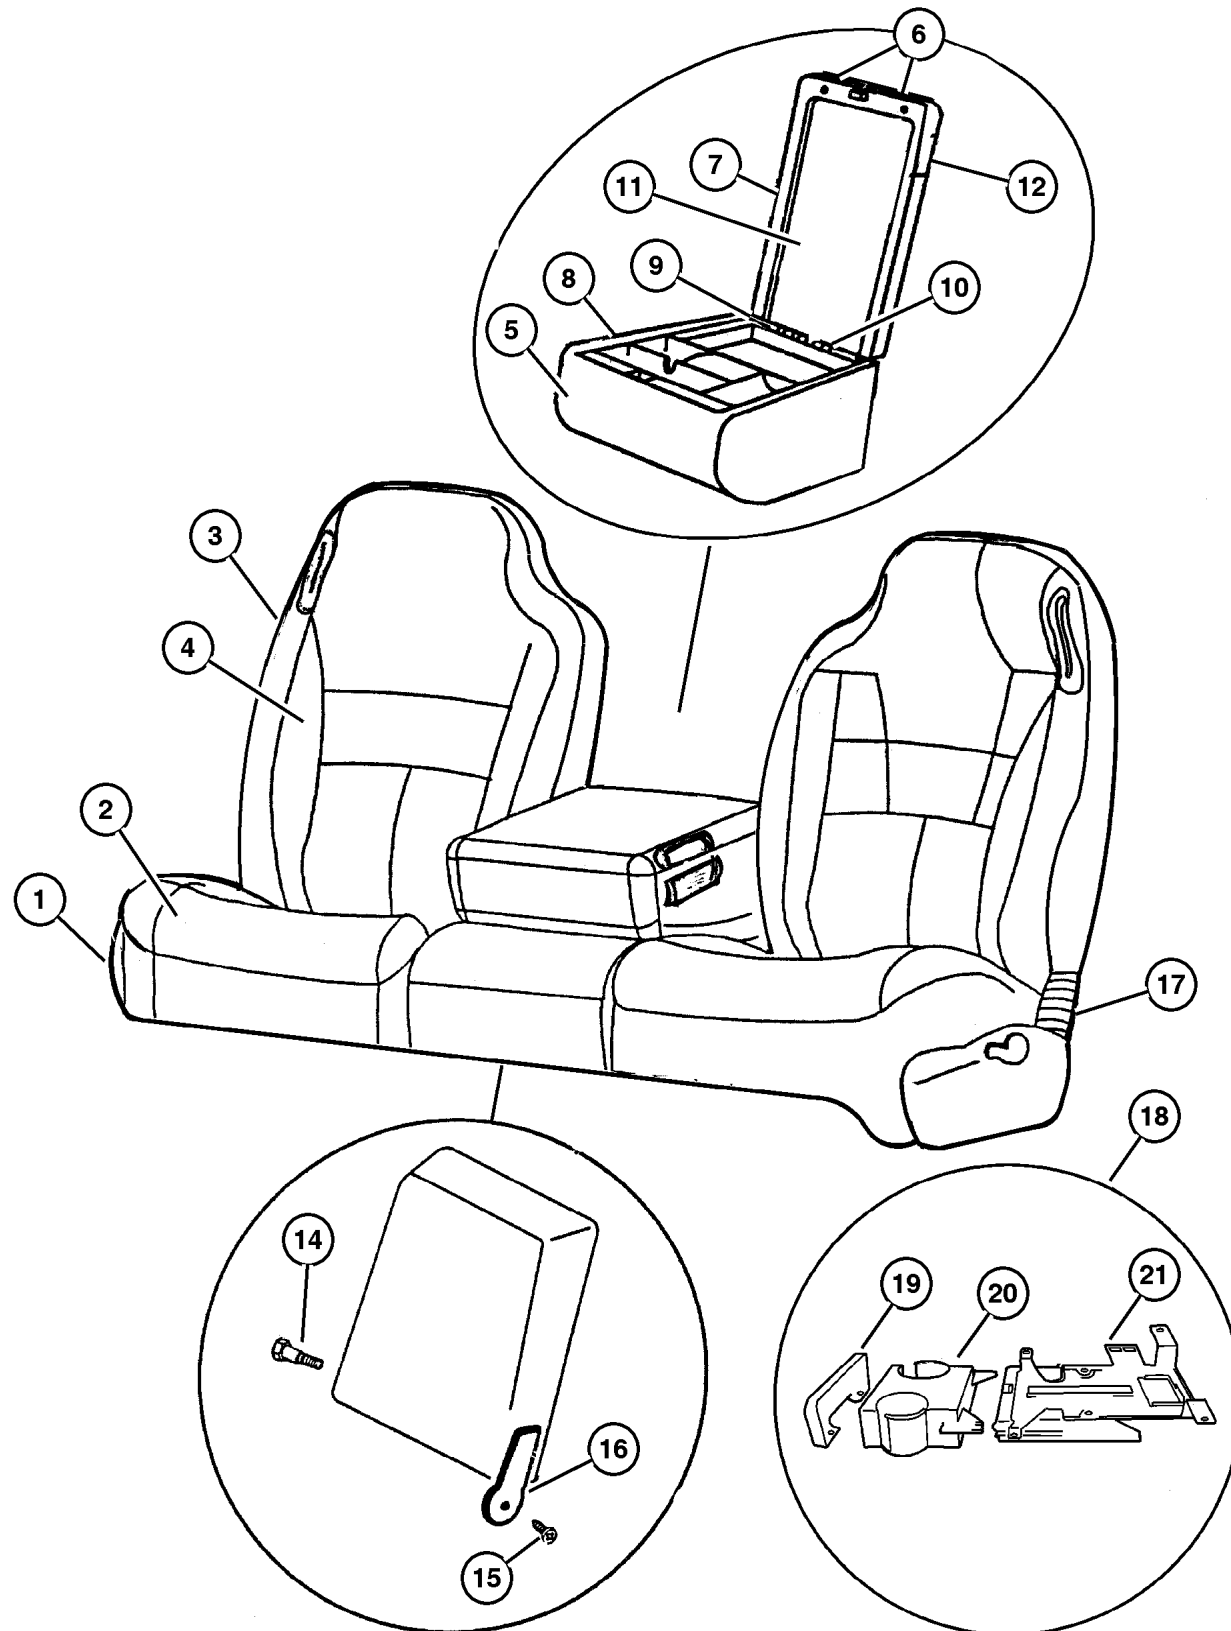
TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Seat, Front, Trim Code DZ
Figure IBE-550



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									CUSHION, Front Seat
	TC94 1AZAA	1			33, 34			DZ	[AZ], Center
	TC94 1K5AA	1			33, 34			DZ	[K9], Center
	TD54 1AZAA	1			33, 34			DZ	[AZ], Passenger
	TD54 1K5AA	1			33, 34			DZ	[K9], Passenger
	TD55 1AZAA	1			33, 34			DZ	[AZ], Driver
	TD55 1K5AA	1			33, 34			DZ	[K9], Driver
2									COVER, Front Seat Cushion
	SP57 1AZAA	1			33, 34			DZ	[AZ], Center
	SP57 1K5AA	1			33, 34			DZ	[K9], Center
	TD52 1AZAA	1			33, 34			DZ	[AZ], With Heat Pad, Passenger
	TD52 1K5AA	1			33, 34			DZ	[K9], With Heat Pad, Passenger
	TD53 1AZAA	1			33, 34			DZ	[AZ], With Heat Pad, Driver
	TD53 1K5AA	1			33, 34			DZ	[K9], With Heat Pad, Driver
3									SEAT BACK, Front
	TD56 1AZAA	1			33, 34			DZ	[AZ], Passenger
	TD56 1K5AA	1			33, 34			DZ	[K9], Passenger
	TD57 1AZAA	1			33, 34			DZ	[AZ], Driver
	TD57 1K5AA	1			33, 34			DZ	[K9], Driver
4									COVER, Front Seat Back
	TD50 1AZAA	1			33, 34			DZ	[AZ], With Heat Pad, Passenger
	TD50 1K5AA	1			33, 34			DZ	[K9], With Heat Pad, Passenger
	TD51 1AZAA	1			33, 34			DZ	[AZ], With Heat Pad, Driver
	TD51 1K5AA	1			33, 34			DZ	[K9], With Heat Pad, Driver
5									BASE, Armrest
	SS38 1AZAA	1			33, 34			DZ	[AZ]
	SS38 1K5AA	1			33, 34			DZ	[K9]
6									LID, Armrest Bin
	SS23 1AZAA	1			33, 34			DZ	[AZ]
	SS23 1K5AA	1			33, 34			DZ	[K9]
7	4778 673	1			33, 34			DZ	BEZEL, Armrest, Lid
8	5278 455AA	1			33, 34			DZ	BEZEL, Armrest, Bin
9	4773 684	1			33, 34			DZ	PIN, Armrest Lid Hinge
10	4773 685	1			33, 34			DZ	SPRING, Armrest Lid Hinge
11	5278 456AA	1			33, 34			DZ	LINER, Armrest Lid
12	4797 715	1			33, 34			DZ	BEZEL, Armrest
-13	5278 457AA-	1			33, 34			DZ	SPRING, Coinholder
14	4773 507	1			33, 34			DZ	BOLT, Armrest Pivot
15									SCREW, (NOT SERVICED) (Not Serviced)
16									COVER, Bracket

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

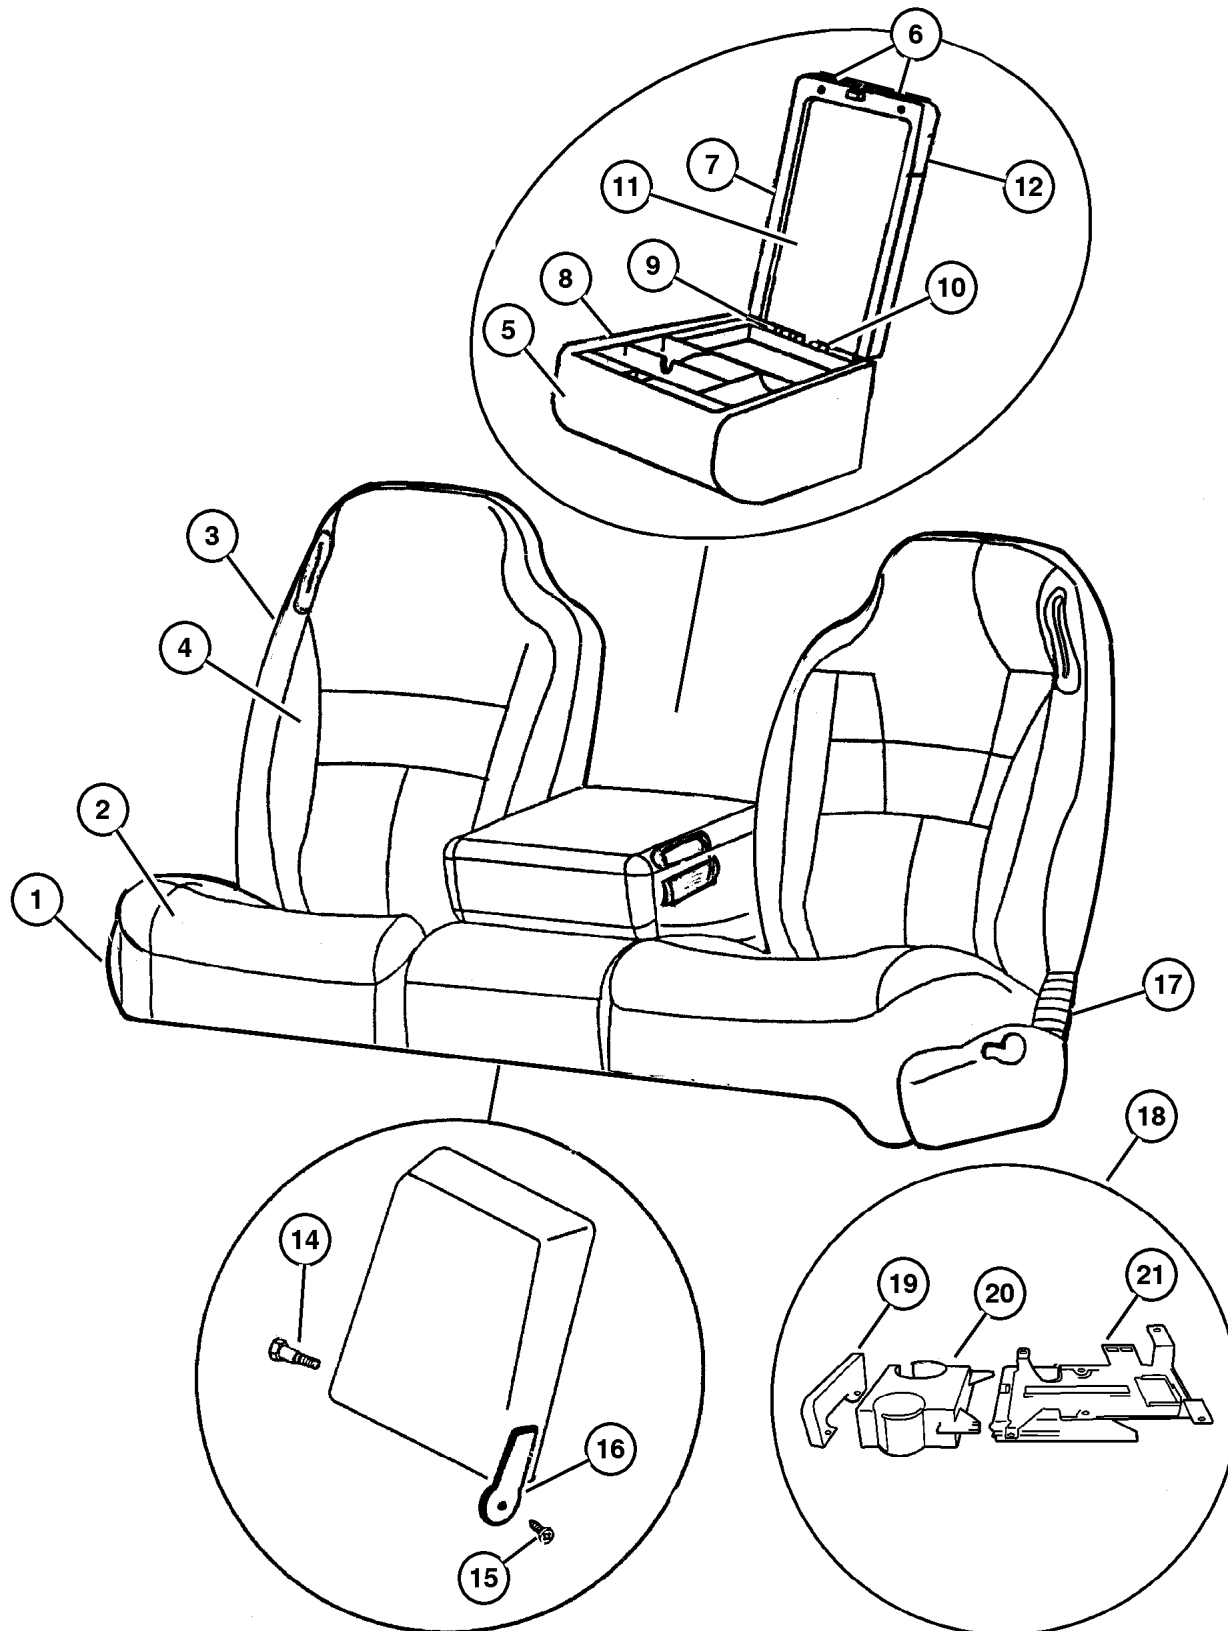
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Seat, Front, Trim Code DZ Figure IBE-550



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	4773 418	1			33, 34			DZ	Right
	4773 419	1			33, 34			DZ	Left
17	5010 197AA	2			33, 34			DZ	BELLOWS, Seat Mechanism
18	4883 916AA	1			33, 34			DZ	CUPHOLDER
19	5015 994AA	1			33, 34			DZ	FACE PLATE, Cupholder
20	5003 198AA	1			33, 34			DZ	DRAWER, Cupholder
21	5015 995AA	1			33, 34			DZ	HOUSING, Cup Holder

DODGE RAM QUAD CAB/CLUB CAB (BE)

**DODGE RAM TRUCK
SERIES**
L = Ram Truck (All)

LINE

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

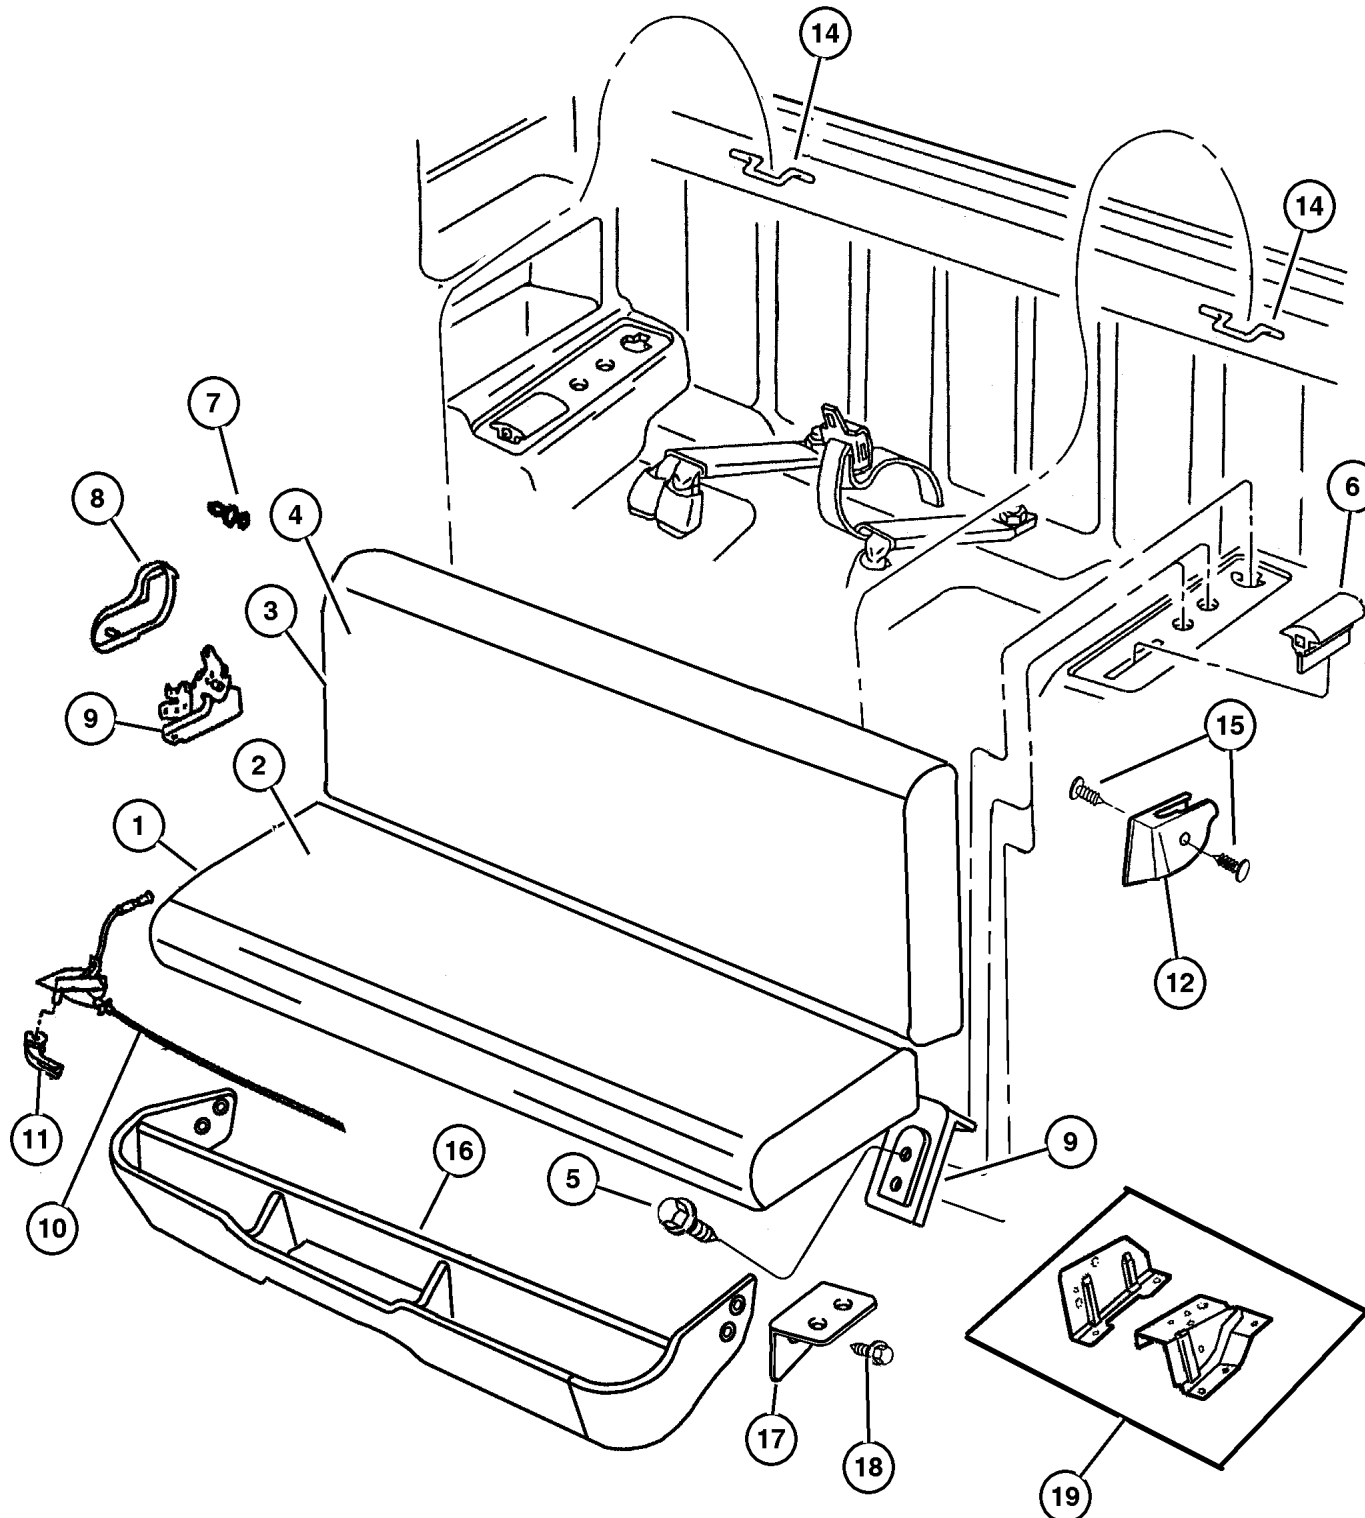
ENGINE
ELF, ELO = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Rear Seat
Figure IBE-610



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1 CUSHION, Rear Seat									
1	TD00 1AZAA	1			33, 34			DP	[AZ]
		1	1, 6		31			DP	[AZ]
		1			33, 34			DZ	[AZ]
1	TD00 1K5AA	1	1, 6		31			DP	[K9]
		1			33, 34			DZ	[K9]
		1			33, 34			DP	[K9]
1	TD10 1AZAA	1			33, 34			R1	[AZ]
		1	1, 6		31			R1	[AZ]
		1			33, 34			R1	[C3]
1	TD10 1C3AA	1	1, 6		31			R1	[C3]
		1			33, 34			R1	[K9]
		1			33, 34			R1	[K9]
1	TD22 1AZAA	1	1, 6		31			S9	[AZ]
		1			33, 34			S9	[AZ]
		1			31			S9	[C3]
1	TD22 1C3AA	1	1, 6		31			S9	[C3]
		1			33, 34			S9	[C3]
		1			33, 34			S9	[C3]
1	TD37 1AZAA	1	1, 6		31			SX	[AZ]
		1			33, 34			SX	[AZ]
		1			31			SX	[C3]
1	TD37 1C3AA	1	1, 6		31			SX	[C3]
		1			33, 34			SX	[C3]
		1			33, 34			SX	[C3]
2 COVER, Rear Seat Cushion									
2	SP61 1AZAA	1			33, 34			DP	[AZ]
		1	1, 6		31			DP	[AZ]
		1			33, 34			DZ	[AZ]
2	SP61 1K5AA	1	1, 6		31			DP	[K9]
		1			33, 34			DZ	[K9]
		1			33, 34			DP	[K9]
2	SP82 1AZAA	1			33, 34			R1	[AZ]
		1	1, 6		31			R1	[AZ]
		1			33, 34			R1	[C3]
2	SP82 1C3AA	1			33, 34			R1	[C3]
		1	1, 6		31			R1	[C3]
		1	1, 6		31			R1	[K9]
2	SP97 1AZAA	1	1, 6		31			S9	[AZ]
		1			33, 34			S9	[AZ]
		1			31			S9	[C3]
2	SQ13 1AZAA	1	1, 6		31			SX	[AZ]
		1			33, 34			SX	[AZ]
		1			33, 34			SX	[AZ]

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

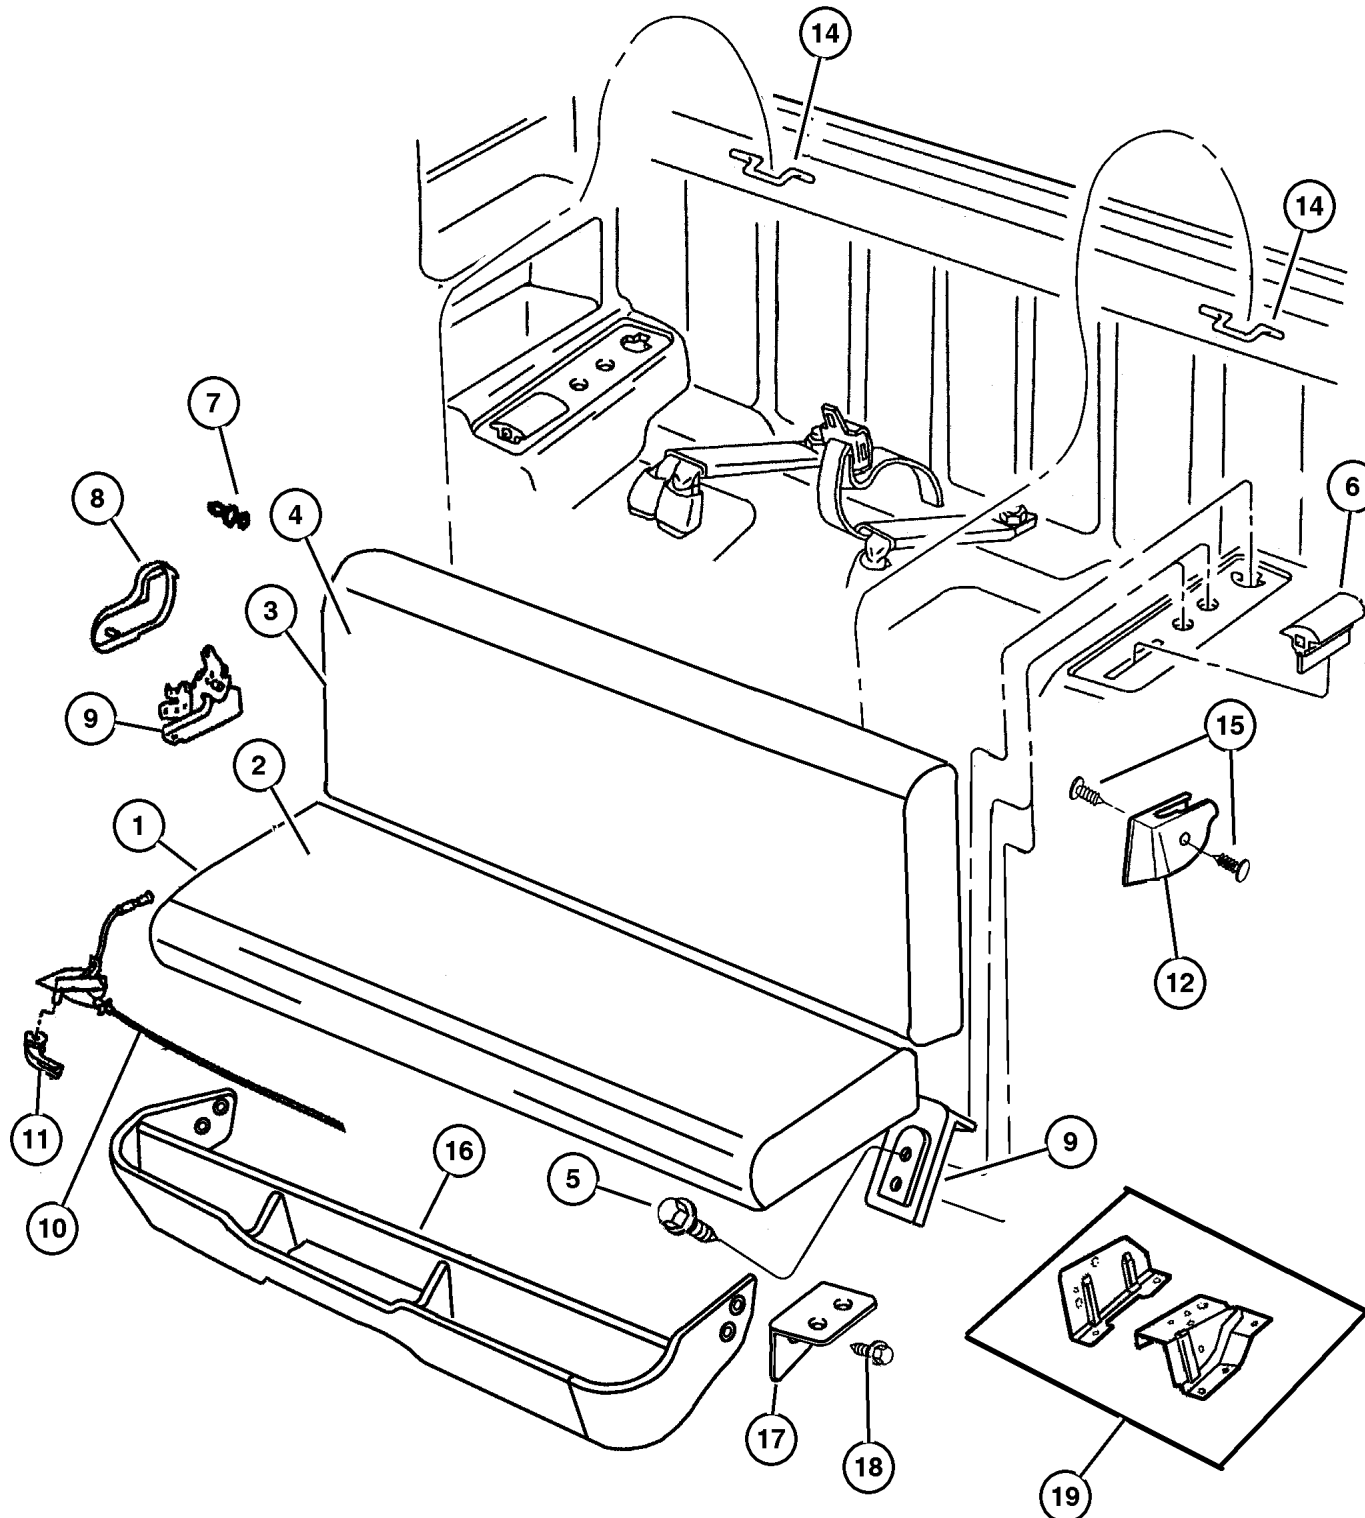
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Rear Seat Figure IBE-610



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
3	SQ13 1C3AA	1	1, 6		31			SX	[C3]
		1			33, 34			SX	[C3]
									SEAT BACK, Rear
	TD01 1AZAA	1			33, 34			DP	[AZ]
		1	1, 6		31			DP	[AZ]
	TD01 1K5AA	1			33, 34			DZ	[AZ]
		1	1, 6		31			DP	[K9]
		1			33, 34			DZ	[K9]
		1			33, 34			DP	[K9]
	TD12 1AZAA	1			33, 34			R1	[AZ]
4		1	1, 6		31			R1	[AZ]
	TD12 1C3AA	1			33, 34			R1	[C3]
		1	1, 6		31			R1	[C3]
	TD12 1K5AA	1			31			R1	[K9]
		1	1, 6		33, 34			R1	[K9]
	TD23 1AZAA	1			31			S9	[AZ]
		1			33, 34			S9	[AZ]
	TD23 1C3AA	1			31			S9	[C3]
		1	1, 6		33, 34			S9	[C3]
	TD38 1AZAA	1			31			SX	[AZ]
		1			33, 34			SX	[AZ]
	TD38 1C3AA	1			31			SX	[C3]
		1	1, 6		33, 34			SX	[C3]
									COVER, Rear Seat Back
	SP60 1AZAA	1			33, 34			DP	[AZ]
		1	1, 6		31			DP	[AZ]
		1			33, 34			DZ	[AZ]
	SP60 1K5AA	1			33, 34			DP	[K9]
		1	1, 6		31			DP	[K9]
		1			33, 34			DZ	[K9]
	SP81 1AZAA	1			33, 34			R1	[AZ]
		1	1, 6		31			R1	[AZ]
	SP81 1C3AA	1			33, 34			R1	[C3]
		1	1, 6		31			R1	[C3]
	SP81 1K5AA	1			33, 34			R1	[K9]
		1	1, 6		31			R1	[K9]
	SP95 1AZAA	1			33, 34			S9	[AZ]
		1	1, 6		31			S9	[AZ]
	SP95 1C3AA	1			33, 34			S9	[C3]
		1	1, 6		31			S9	[C3]

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

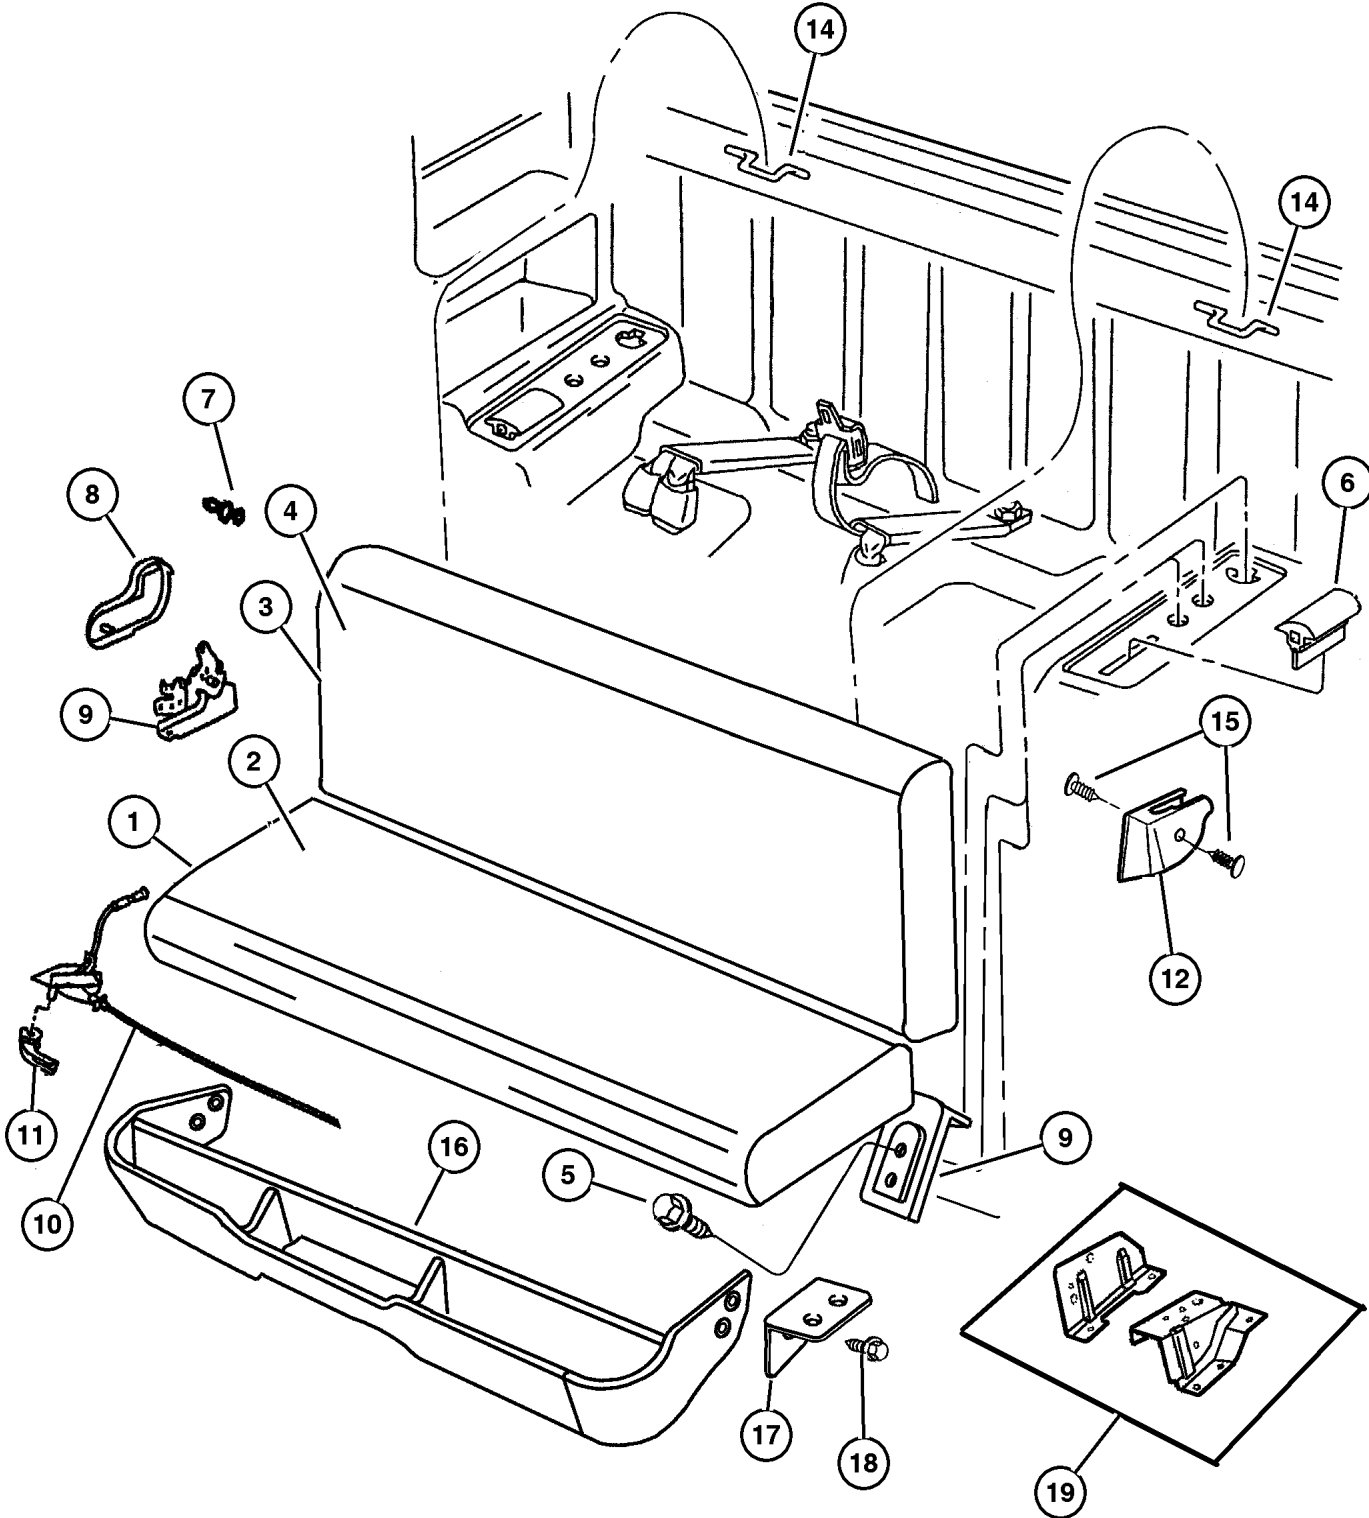
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Rear Seat
Figure IBE-610




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	SQ12 1AZAA	1			33, 34			SX	[AZ]
		1	1, 6		31			SX	[AZ]
	SQ12 1C3AA	1			33, 34			SX	[C3]
		1	1, 6		31			SX	[C3]
5	6500 664	4							SCREW AND WASHER, Hex Head, M8x1.25x35
6	55350 643AB	2							BUMPER, Seat Cushion
7									BUSHING, Pivot
	4778 684	2			33, 34			SX	
		2			33, 34			S9	
		2			33, 34			R1	
		2			33, 34			DP	
		2			33, 34			DZ	
		2	1, 6		31			SX	
		2	1, 6		31			S9	
		2	1, 6		31			R1	
		2	1, 6		31			DP	
8									COVER, Seat latch
	4778 682	1			33, 34			SX	Right
		1			33, 34			S9	Right
		1			33, 34			R1	Right
		1			33, 34			DP	Right
		1			33, 34			DZ	Right
		1	1, 6		31			SX	Right
		1	1, 6		31			S9	Right
		1	1, 6		31			R1	Right
		1	1, 6		31			DP	Right
	4778 683	1			33, 34			SX	Left
		1			33, 34			S9	Left
		1			33, 34			R1	Left
		1			33, 34			DP	Left
		1			33, 34			DZ	Left
		1	1, 6		31			SX	Left
		1	1, 6		31			S9	Left
		1	1, 6		31			R1	Left
		1	1, 6		31			DP	Left
9									LATCH, Seat
	5010 284AA	1	1, 6		31			SX	Right
		1	1, 6		31			S9	Right
		1	1, 6		31			R1	Right

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

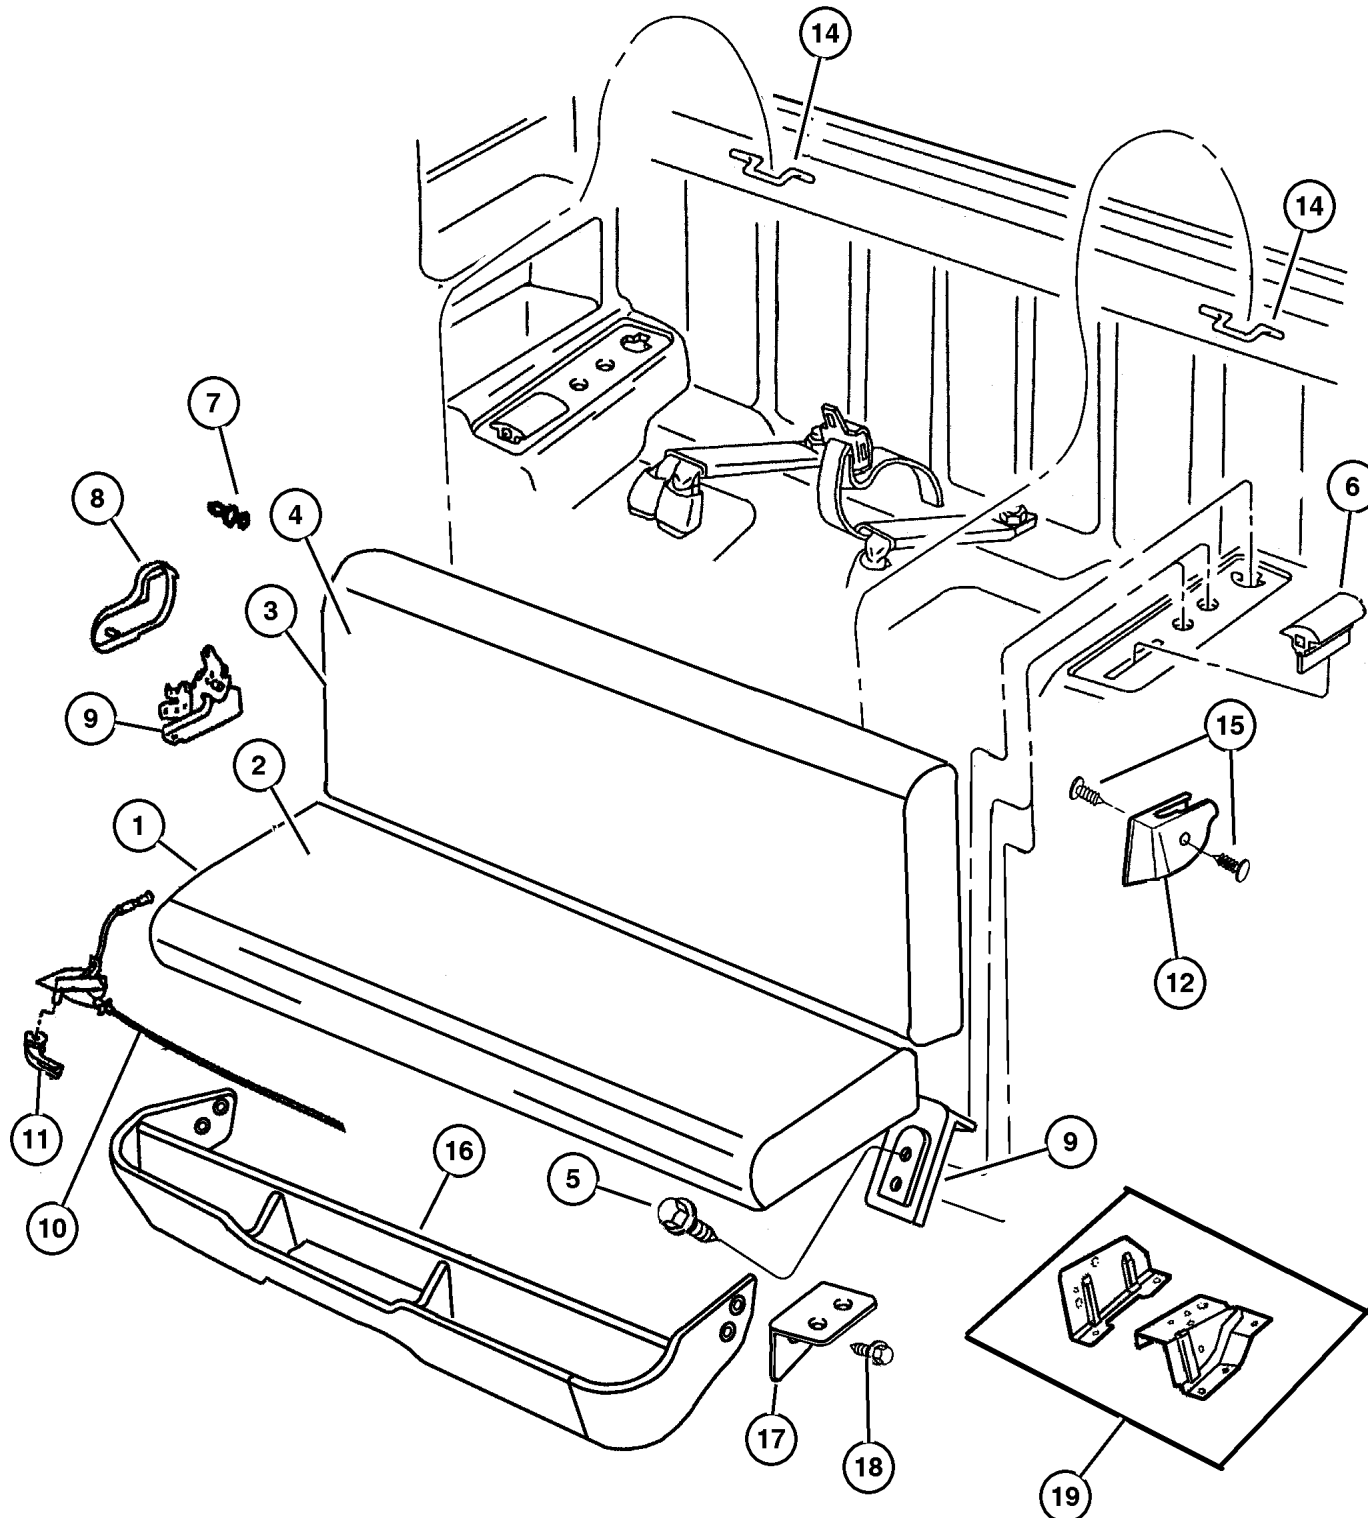Rear Seat
Figure IBE-610



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1			33, 34			SX	Right
		1			33, 34			S9	Right
		1			33, 34			R1	Right
		1			33, 34			DP	Right
	5010 285AA	1	1, 6		31			SX	Left
		1	1, 6		31			S9	Left
		1	1, 6		31			R1	Left
		1			33, 34			SX	Left
		1			33, 34			S9	Left
10		1			33, 34			R1	Left
		1			33, 34			DP	Left
	5015 489AA	1			33, 34			SX	LATCH, Seat
		1			33, 34			S9	
		1			33, 34			DP	
		1	1, 6		31			S9	
		1			33, 34			R1	
		1			33, 34			DZ	
		1	1, 6		31			SX	
		1	1, 6		31			R1	
		1	1, 6		31			DP	
11									HANDLE, Recliner
	5519 6020	1			33, 34			S9	Right
		1			33, 34			SX	Right
		1			33, 34			R1	Right
		1			33, 34			DP	Right
		1			33, 34			DZ	Right
		1	1, 6		31			SX	Right
		1	1, 6		31			S9	Right
		1	1, 6		31			R1	Right
		1	1, 6		31			DP	Right
	5519 6021	1			33, 34			SX	Left
		1			33, 34			S9	Left
		1			33, 34			R1	Left
		1			33, 34			DP	Left
		1			33, 34			DZ	Left
		1	1, 6		31			SX	Left
		1	1, 6		31			S9	Left
		1	1, 6		31			R1	Left
		1	1, 6		31			DP	Left
12									COVER, Quarter Trim Opening

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

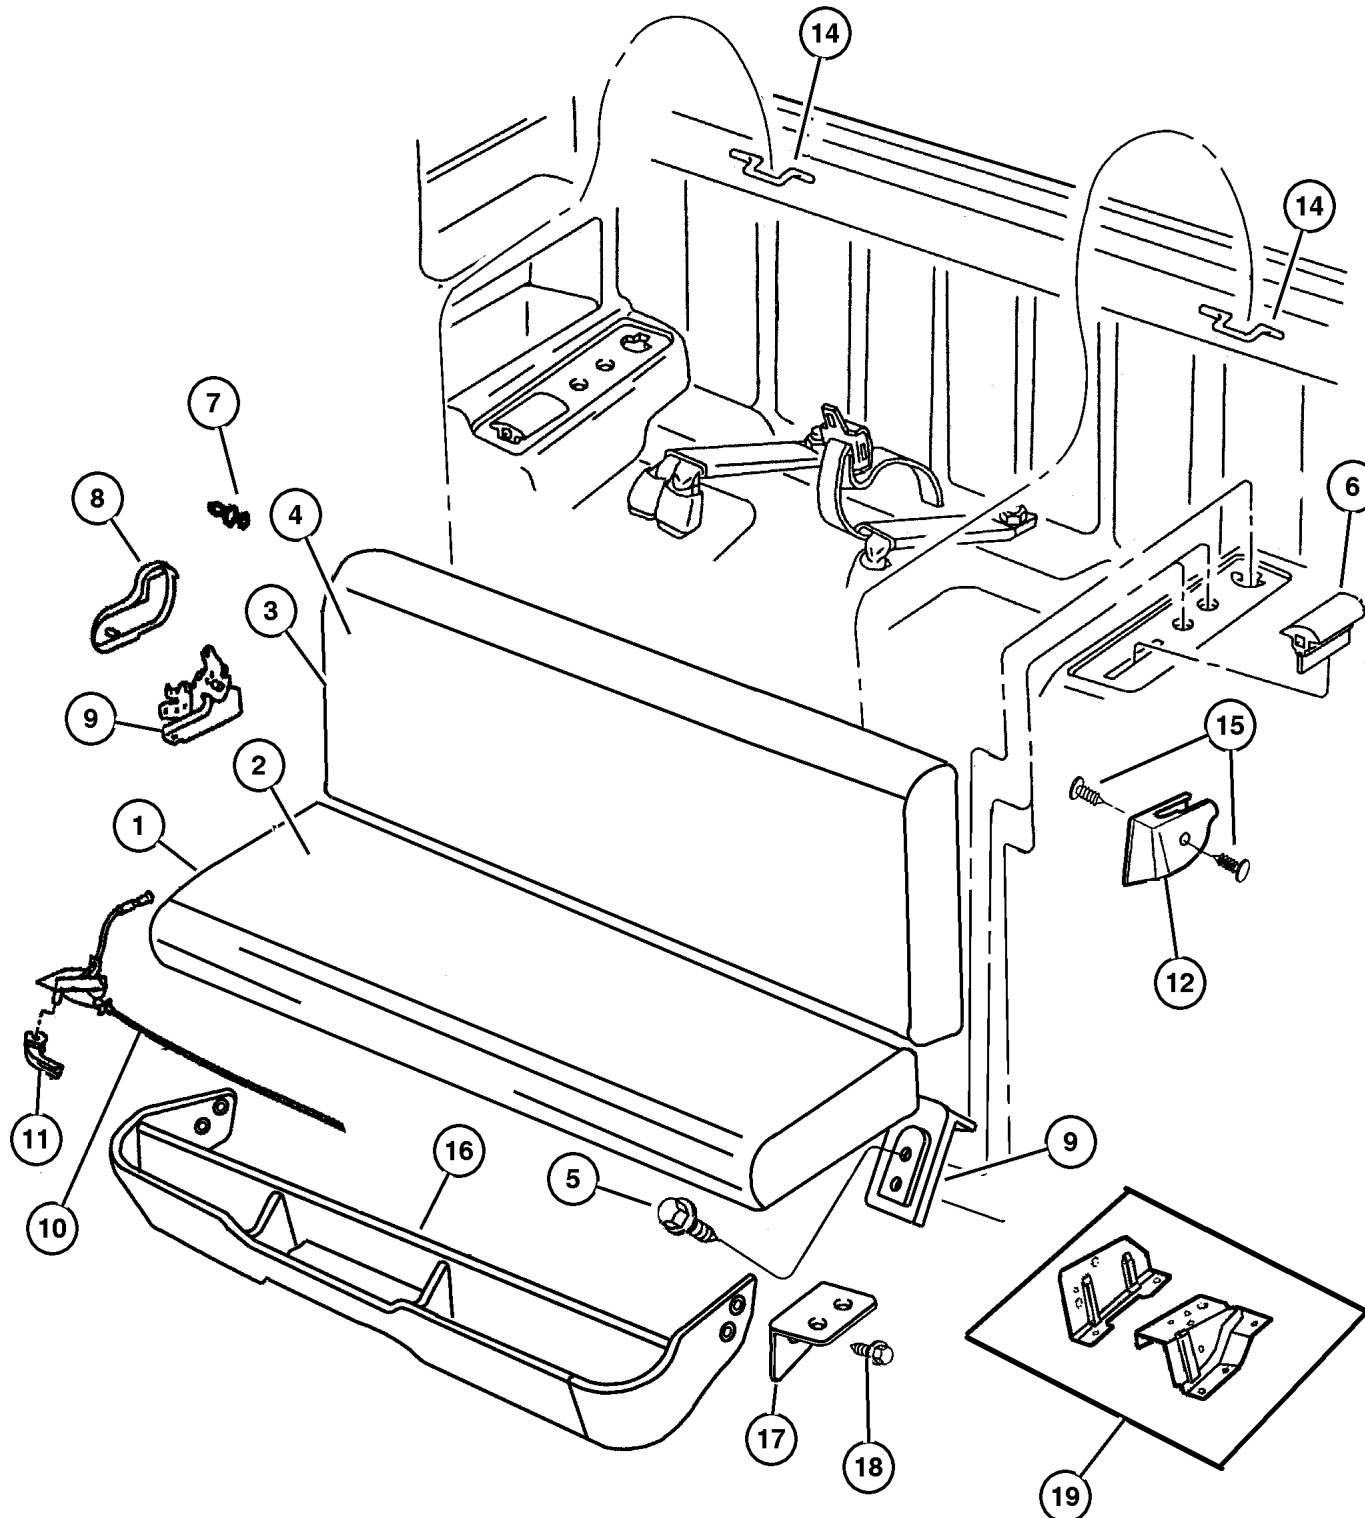
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Rear Seat
Figure IBE-610



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5FH8 6LAZ	1			33, 34			O0	[AZ], Right
	5FH8 6RC3	1			33, 34			O0	[C3], Right
	5FH8 6RK5	1			33, 34			O0	[K9], Right
	5FH8 7LAZ	1			33, 34			O0	[AZ], Left
	5FH8 7RC3	1			33, 34			O0	[C3], Left
	5FH8 7RK5	1			33, 34			O0	[K9], Left
-13									SPRING, Seat Latch Return
	4778 719	1			33, 34			SX	
		1			33, 34			S9	
		1			33, 34			R1	
		1			33, 34			DP	
		1			33, 34			DZ	
		1	1, 6		31			SX	
		1	1, 6		31			S9	
		1	1, 6		31			R1	
		1	1, 6		31			DP	
14	5505 0160	2							FOOTMAN LOOP, Hold Down
15									FASTENER, Push Pin
	5GE96 LAZAA	6			33, 34			O0	[AZ]
	5GE96 RC3AA	6			33, 34			O0	[C3]
	5GE96 RK5AA	6			33, 34			O0	[K9]
16									BIN, Storage
	5012 913AA	1			33, 34			SX	
		1			33, 34			R1	
		1			33, 34			DP	
		1			33, 34			DZ	
17									LATCH, Storage Bin Lid
	5012 914AA	1			33, 34			SX	Right
		1			33, 34			R1	Right
		1			33, 34			DZ	Right
		1			33, 34			DP	Right
	5012 915AA	1			33, 34			SX	Left
		1			33, 34			R1	Left
		1			33, 34			DZ	Left
		1			33, 34			DP	Left
18									BOLT
	5012 916AA	4			33, 34			SX	
		4			33, 34			R1	
		4			33, 34			DP	
		1			33, 34			DZ	
19									SUPPORT, Rear Seat

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines


TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Rear Seat
Figure IBE-610

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5527 5000	1							Right
	5527 5001	1							Left

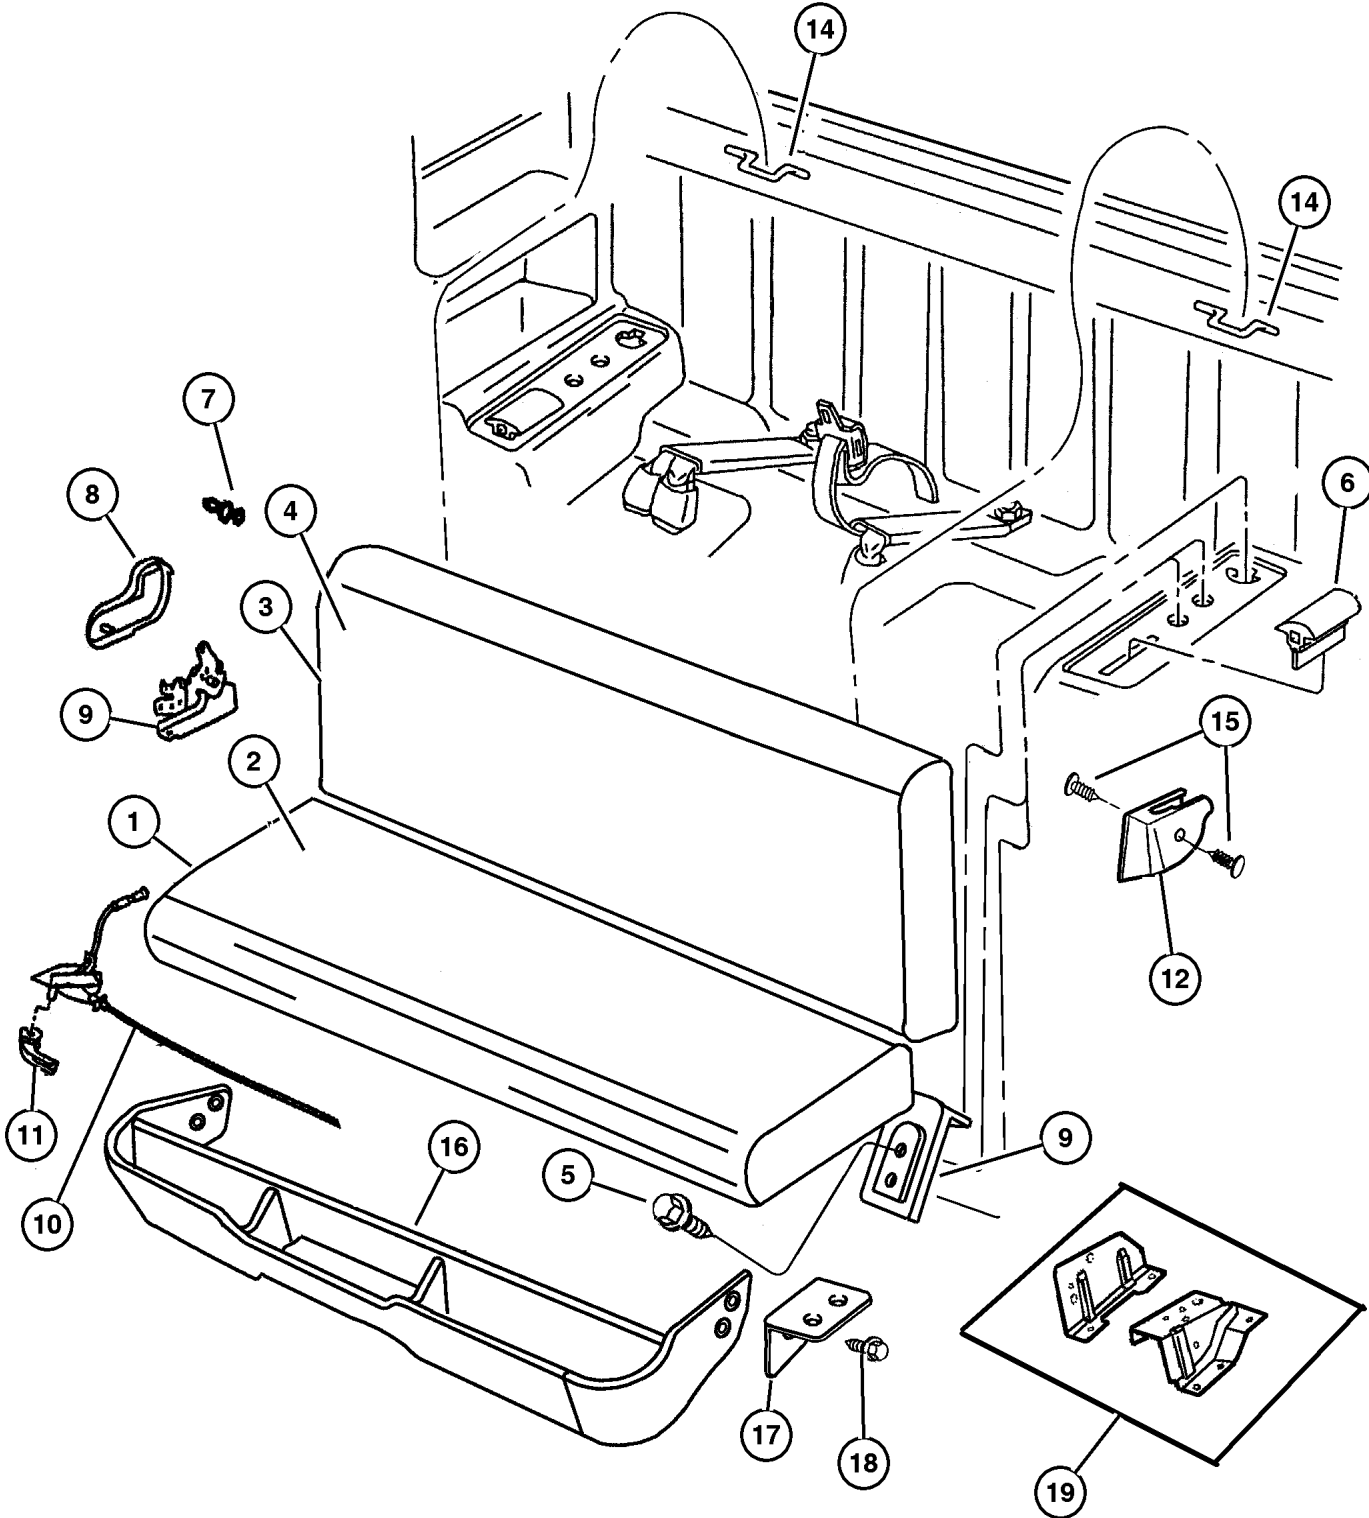


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

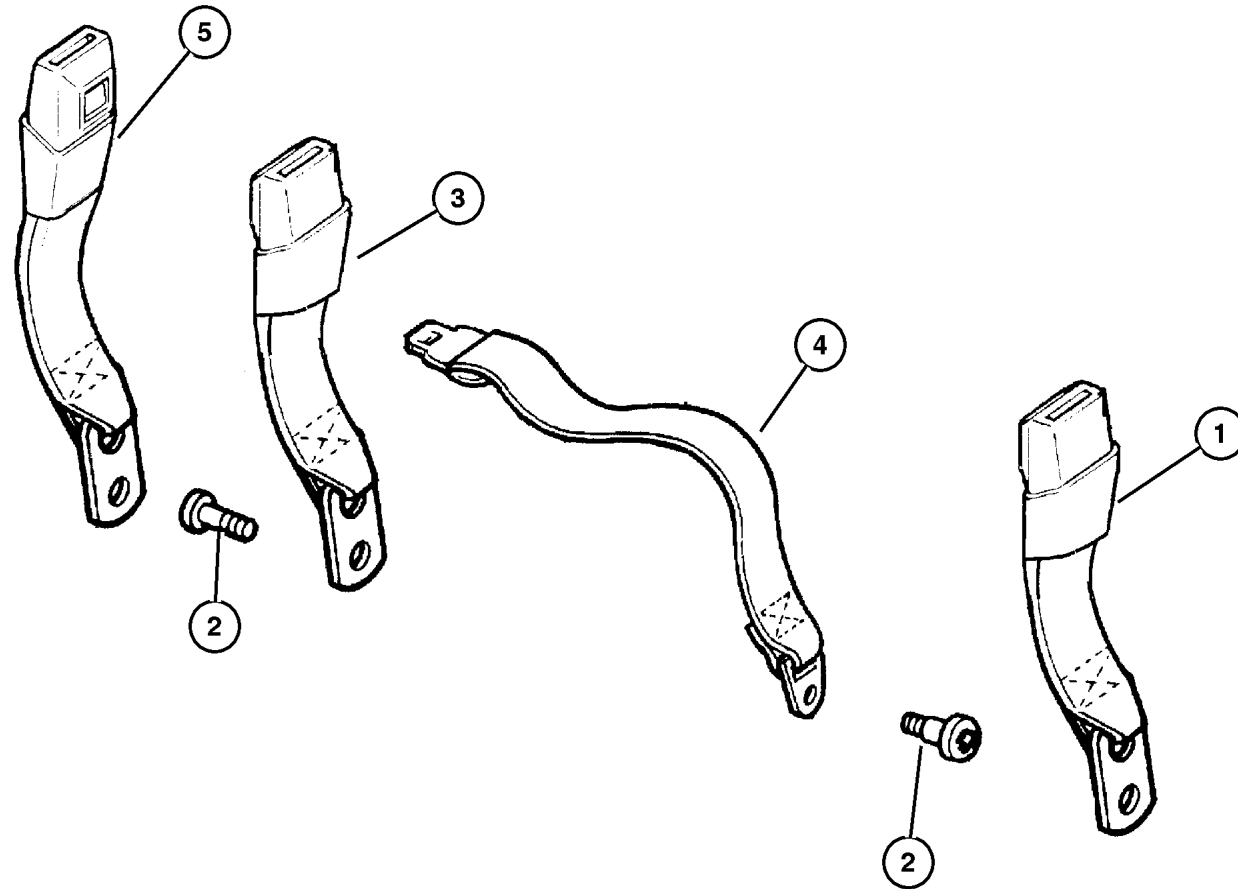Belts, Lap Figure IBE-710



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Order Color ['AZ', C3] should use Agate.									
Order Color ['K9'] should use Camel.									
1	5GT65 LAZAA	1			33, 34			S9	SEAT BELT, Front Inner, Driver
		1			33, 34			TY	[AZ, C3], Left
		1			33, 34			DP	[AZ, C3], Left
		1			33, 34			R1	[AZ, C3], Left
		1			33, 34			SX	[AZ, C3], Left
		1			33, 34			DZ	[AZ, C3], Left
		1	1, 6		31			DP	[AZ, C3], Left
		1	1, 6		31			R1	[AZ, C3], Left
		1	1, 6		31			S9	[AZ, C3], Left
		1	1, 6		31			SX	[AZ, C3], Left
	5GT65 RK5AA	1			33, 34			DP	[K9], Left
		1			33, 34			R1	[K9], Left
		1			33, 34			DZ	[K9], Left
		1	1, 6		31			DP	[K9], Left
		1	1, 6		31			R1	[K9], Left
2	5010 812AA	2			33, 34			TY	BOLT, Seat Belt Anchor
		2			33, 34			SX	
		2			33, 34			S9	
		2			33, 34			R1	
		2			33, 34			DP	
		2			33, 34			DZ	
		2	1, 6		31			SX	
		2	1, 6		31			S9	
		2	1, 6		31			R1	
		2	1, 6		31			DP	
3	5GE46 1AZAA	1	1, 6		31			DP	LAP BELT, Buckle Half
		1	1, 6		31			R1	[AZ, C3]
		1	1, 6		31			S9	[AZ, C3]
		1	1, 6		31			SX	[AZ, C3]
		1			33, 34			DP	[AZ, C3]
		1			33, 34			R1	[AZ, C3]
		1			33, 34			S9	[AZ, C3]
		1			33, 34			SX	[AZ, C3]
		1			33, 34			TY	[AZ, C3]
		1			33, 34			DZ	[AZ, C3]

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

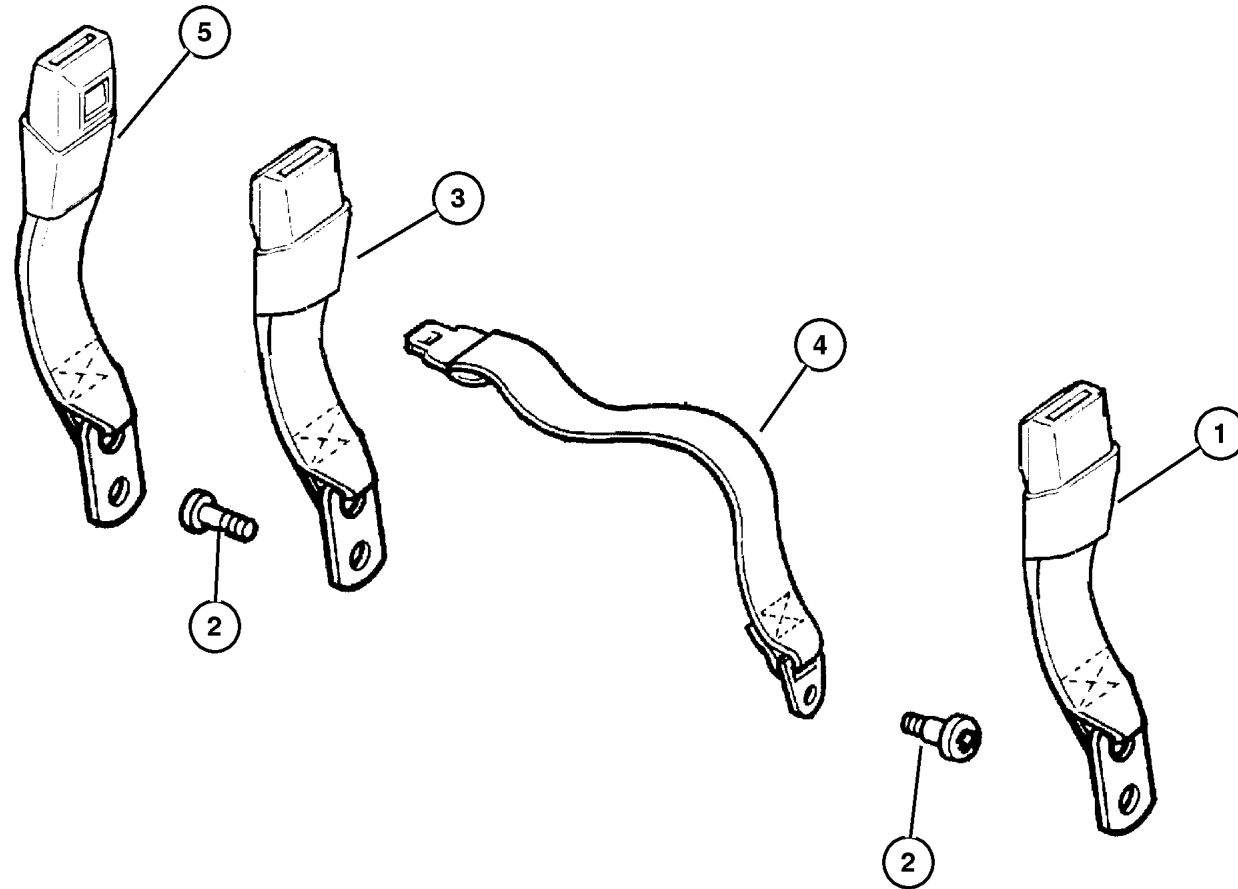
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Belts, Lap Figure IBE-710



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5GE46 1K5AA	1	1, 6		31			DP	[K9]
		1	1, 6		31			R1	[K9]
		1			33, 34			DP	[K9]
		1			33, 34			R1	[K9]
		1			33, 34			DZ	[K9]
4	5GE47 LAZAA	1	1, 6		31			DP	LAP BELT, Tip Half
		1	1, 6		31			R1	[AZ, C3]
		1	1, 6		31			S9	[AZ, C3]
		1	1, 6		31			SX	[AZ, C3]
		1			33, 34			DP	[AZ, C3]
		1			33, 34			R1	[AZ, C3]
		1			33, 34			S9	[AZ, C3]
		1			33, 34			SX	[AZ, C3]
		1			33, 34			TY	[AZ, C3]
		1			33, 34			DZ	[AZ, C3]
	5GE47 RK5AA	1	1, 6		31			DP	[K9]
		1	1, 6		31			R1	[K9]
		1			33, 34			DP	[K9]
		1			33, 34			R1	[K9]
		1			33, 34			DZ	[K9]
5	5GT64 LAZAA	1			33, 34			R1	SEAT BELT, Front Inner, Passenger
		1			33, 34			S9	[AZ, C3], Right
		1			33, 34			SX	[AZ, C3], Right
		1			33, 34			DP	[AZ, C3], Right
		1			33, 34			DZ	[AZ, C3], Right
		1	1, 6		31			DP	[AZ, C3], Right
		1	1, 6		31			R1	[AZ, C3], Right
		1	1, 6		31			S9	[AZ, C3], Right
		1	1, 6		31			SX	[AZ, C3], Right
	5GT64 RK5AA	1			33, 34			R1	[K9], Right
		1			33, 34			DP	[K9], Right
		1			33, 34			DZ	[K9], Right
		1	1, 6		31			DP	[K9], Right
		1	1, 6		31			R1	[K9], Right
-6	4856 560	1	1, 2, 6, 7		31, 32			DP	EXTENDER, Seat Belt
		1			33, 34			DP	
		1			33, 34			TY	

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

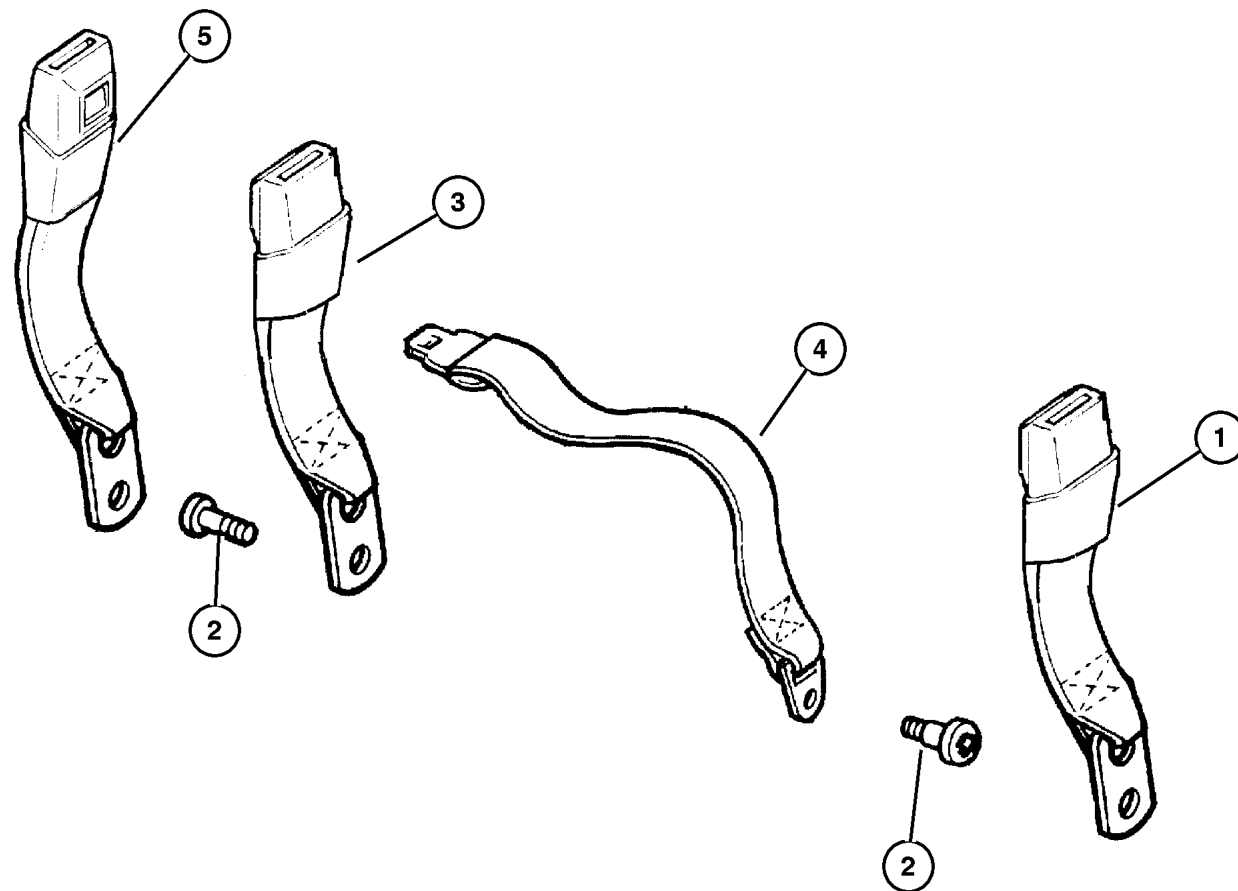
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Belts, Lap Figure IBE-710



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1	1, 2, 6, 7		31, 32			S9	
		1	1, 2, 6, 7		31, 32			SX	
		1	1, 2, 6, 7		31, 32			R1	
		1			33, 34			R1	
		1			33, 34			S9	
		1			33, 34			SX	
		1						DZ	

DODGE RAM QUAD CAB/CLUB CAB (BE)

**BODGE RAM QUAD
SERIES**
L = Ram Truck (All)

LINE

1, 6 = 1500

$$2, 7 = 2500$$
$$3, 8 = 3500$$

BODY

31 = Club Cab (138WB)

33 = QuadCab(138WB)

34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.

ETC, ET0, ETH = 5.9L 6 Cil.

EML, EMM, EMO = 5.9L 8 C

EWA, EW0 = 8.0L

EAA = All Engines
EAG = All Gas Engines

TRANSMISSION

DGP = 47RE 4 Speed Auto.

DGT, DG0 = 46RE 4 Speed Auto.

DDX, DDC = 5 Speed HD Mar

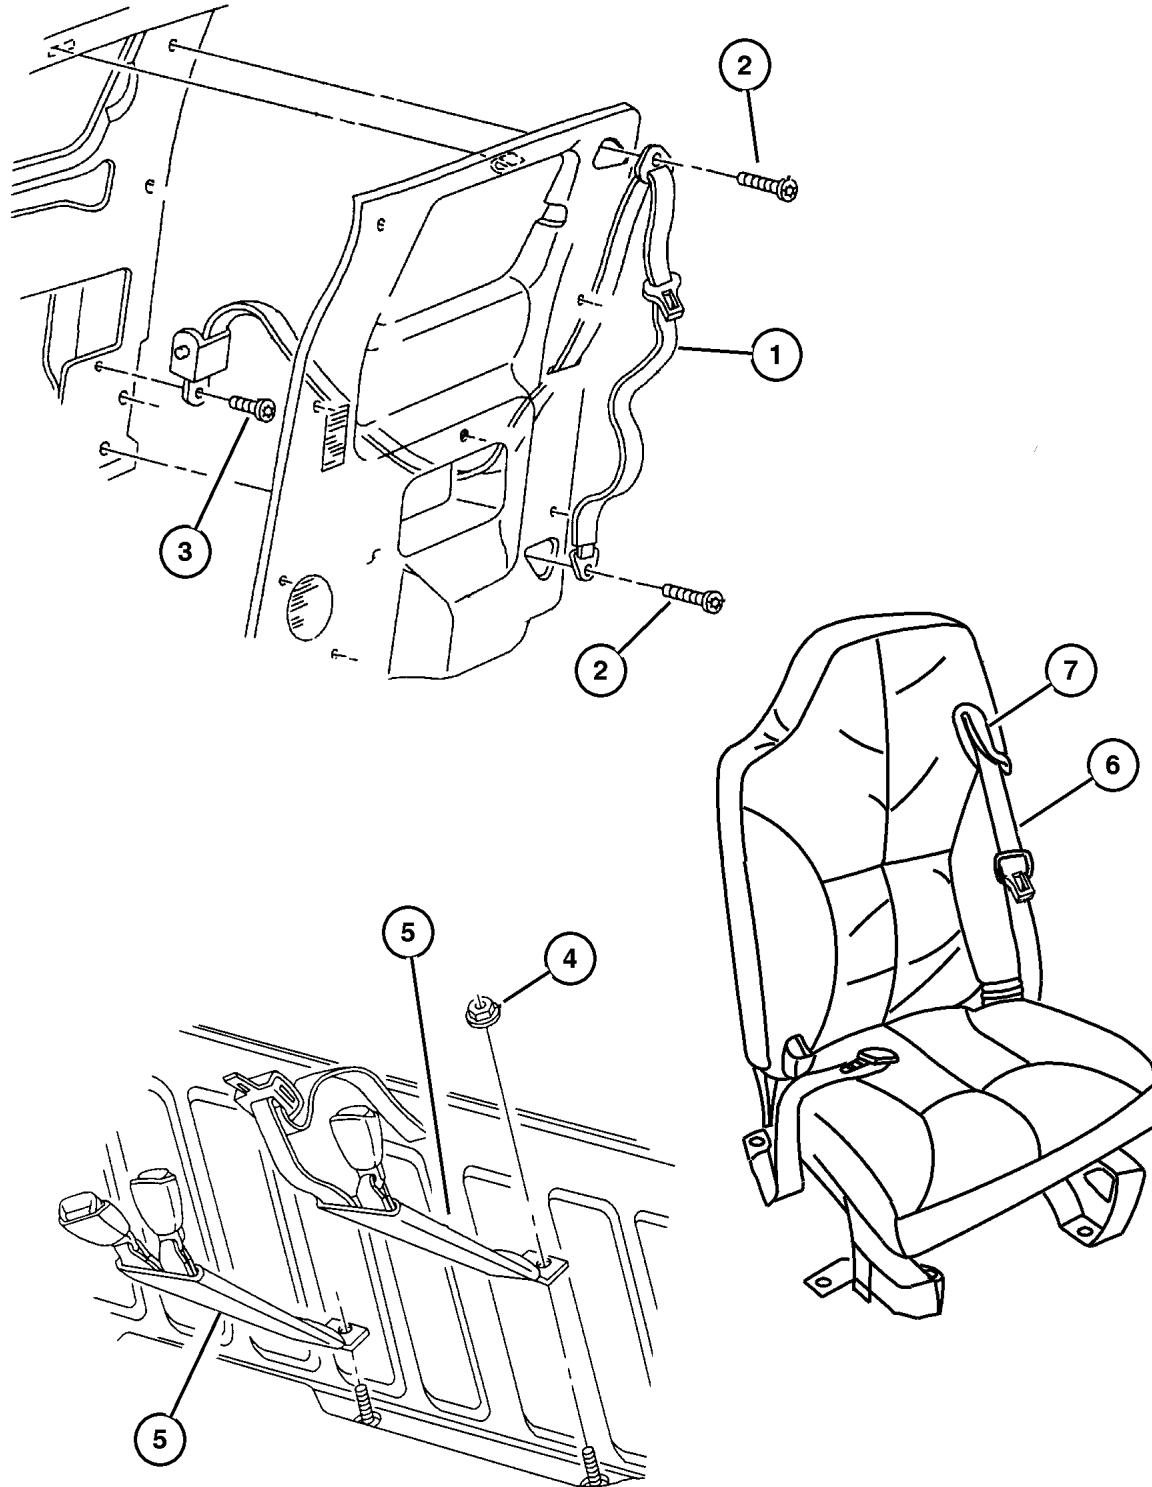
DDP, DD0 = 5 Speed Manual

DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Belt Shoulder, Front & Rear, Belt Lap Rear Seat Figure IBE-720



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									SEAT BELT, Rear Outer
	5GT78 LAZAB	2						O0	[AZ, C3]
	5GT78 RK5AB	2						O0	[K9]
2	6034 395	4							SCREW, Pan Head, .437-20x1.79
3	6036 108AA	2							SCREW, Pan Head
4	0152 477	2							NUT, Hex Flange Lock, .437-20
5									SEAT BELT, Rear Inner
	5EX5 8SAZ	1						O0	[AZ, C3], Right
	5EX5 8TK5	1						O0	[K9], Right
	5EX5 9SAZ	1						O0	[AZ, C3], Left
	5EX5 9TK5	1						O0	[K9], Left
6									SEAT BELT, Front Outer
	5GD70 1AZAA	1			33, 34			R1	[C3], Right
		1			33, 34			S9	[C3], Right
		1			33, 34			SX	[C3], Right
		1			33, 34			TY	[C3], Right
		1	1, 6		31			R1	[C3], Right
		1	1, 6		31			S9	[C3], Right
		1	1, 6		31			SX	[C3], Right
	5GD70 LAZAA	1			33, 34			DP	[AZ], Right
		1			33, 34			R1	[AZ], Right
		1			33, 34			S9	[AZ], Right
		1			33, 34			SX	[AZ], Right
		1			33, 34			DZ	[AZ], Right
		1	1, 6		31			DP	[AZ], Right
		1	1, 6		31			R1	[AZ], Right
		1	1, 6		31			S9	[AZ], Right
		1	1, 6		31			SX	[AZ], Right
	5GD70 RK5AA	1			33, 34			DP	[K9], Right
		1			33, 34			R1	[K9], Right
		1			33, 34			DZ	[K9], Right
		1	1, 6		31			DP	[K9], Right
		1	1, 6		31			R1	[K9], Right
	5GD71 1AZAA	1			33, 34			R1	[C3], Left
		1			33, 34			S9	[C3], Left
		1			33, 34			SX	[C3], Left
		1			33, 34			TY	[C3], Left
		1	1, 6		31			R1	[C3], Left
		1	1, 6		31			S9	[C3], Left
		1	1, 6		31			SX	[C3], Left

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Belt Shoulder, Front & Rear, Belt Lap Rear Seat
Figure IBE-720



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5GD71 LAZAA	1			33, 34			DP	[AZ], Left
		1			33, 34			R1	[AZ], Left
		1			33, 34			S9	[AZ], Left
		1			33, 34			SX	[AZ], Left
		1			33, 34			DZ	[AZ], Left
		1	1, 6		31			DP	[AZ], Left
		1	1, 6		31			R1	[AZ], Left
		1	1, 6		31			S9	[AZ], Left
		1	1, 6		31			SX	[AZ], Left
	5GD71 RK5AA	1			33, 34			DP	[K9], Left
		1			33, 34			R1	[K9], Left
		1			33, 34			DZ	[K9], Left
		1	1, 6		31			DP	[K9], Left
		1	1, 6		31			R1	[K9], Left
7									BEZEL, Seat Belt, (NOT SERVICED) (Not Serviced)
-8	5017 032AA-	1							ANCHOR PACKAGE, Child Seat Tether

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

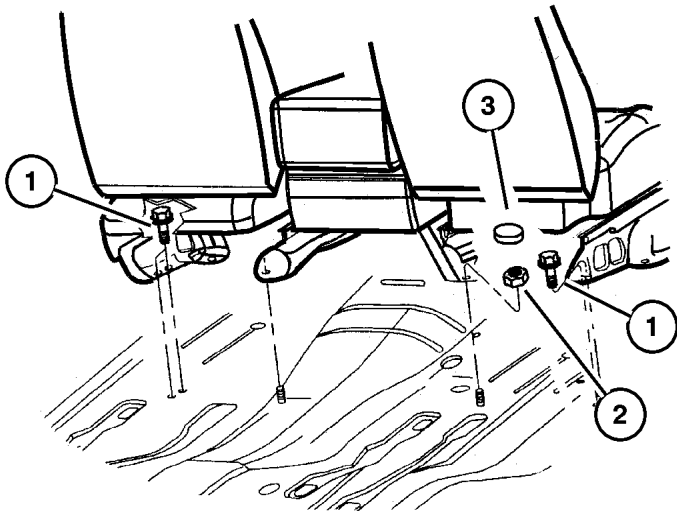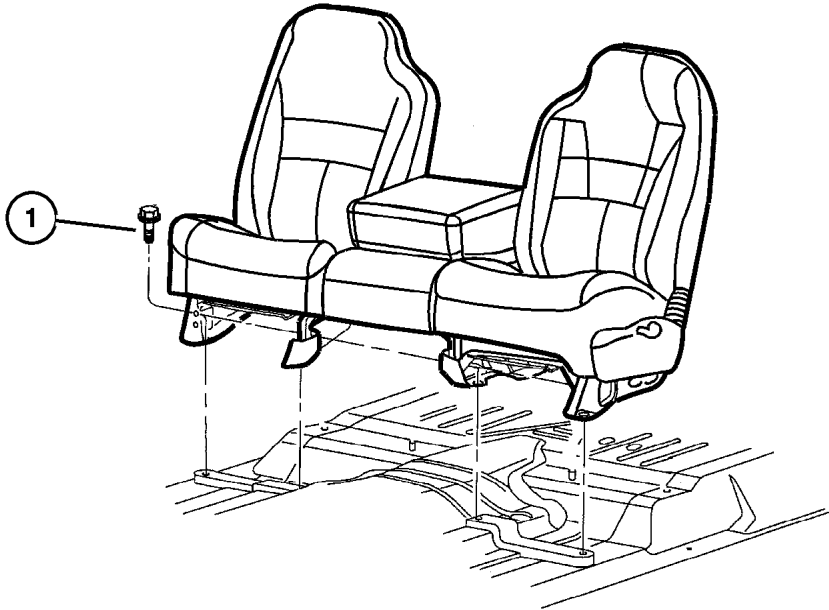Seat, Floor Attaching
Figure IBE-810




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	6505 401AA	4							SCREW AND WASHER, M10x1.5x45
2	0152 477	2							NUT, Hex Flange Lock, .437-20
3	5GA09 DX9AB	1	1, 6		31			O0	COVER, Seat Anchor

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

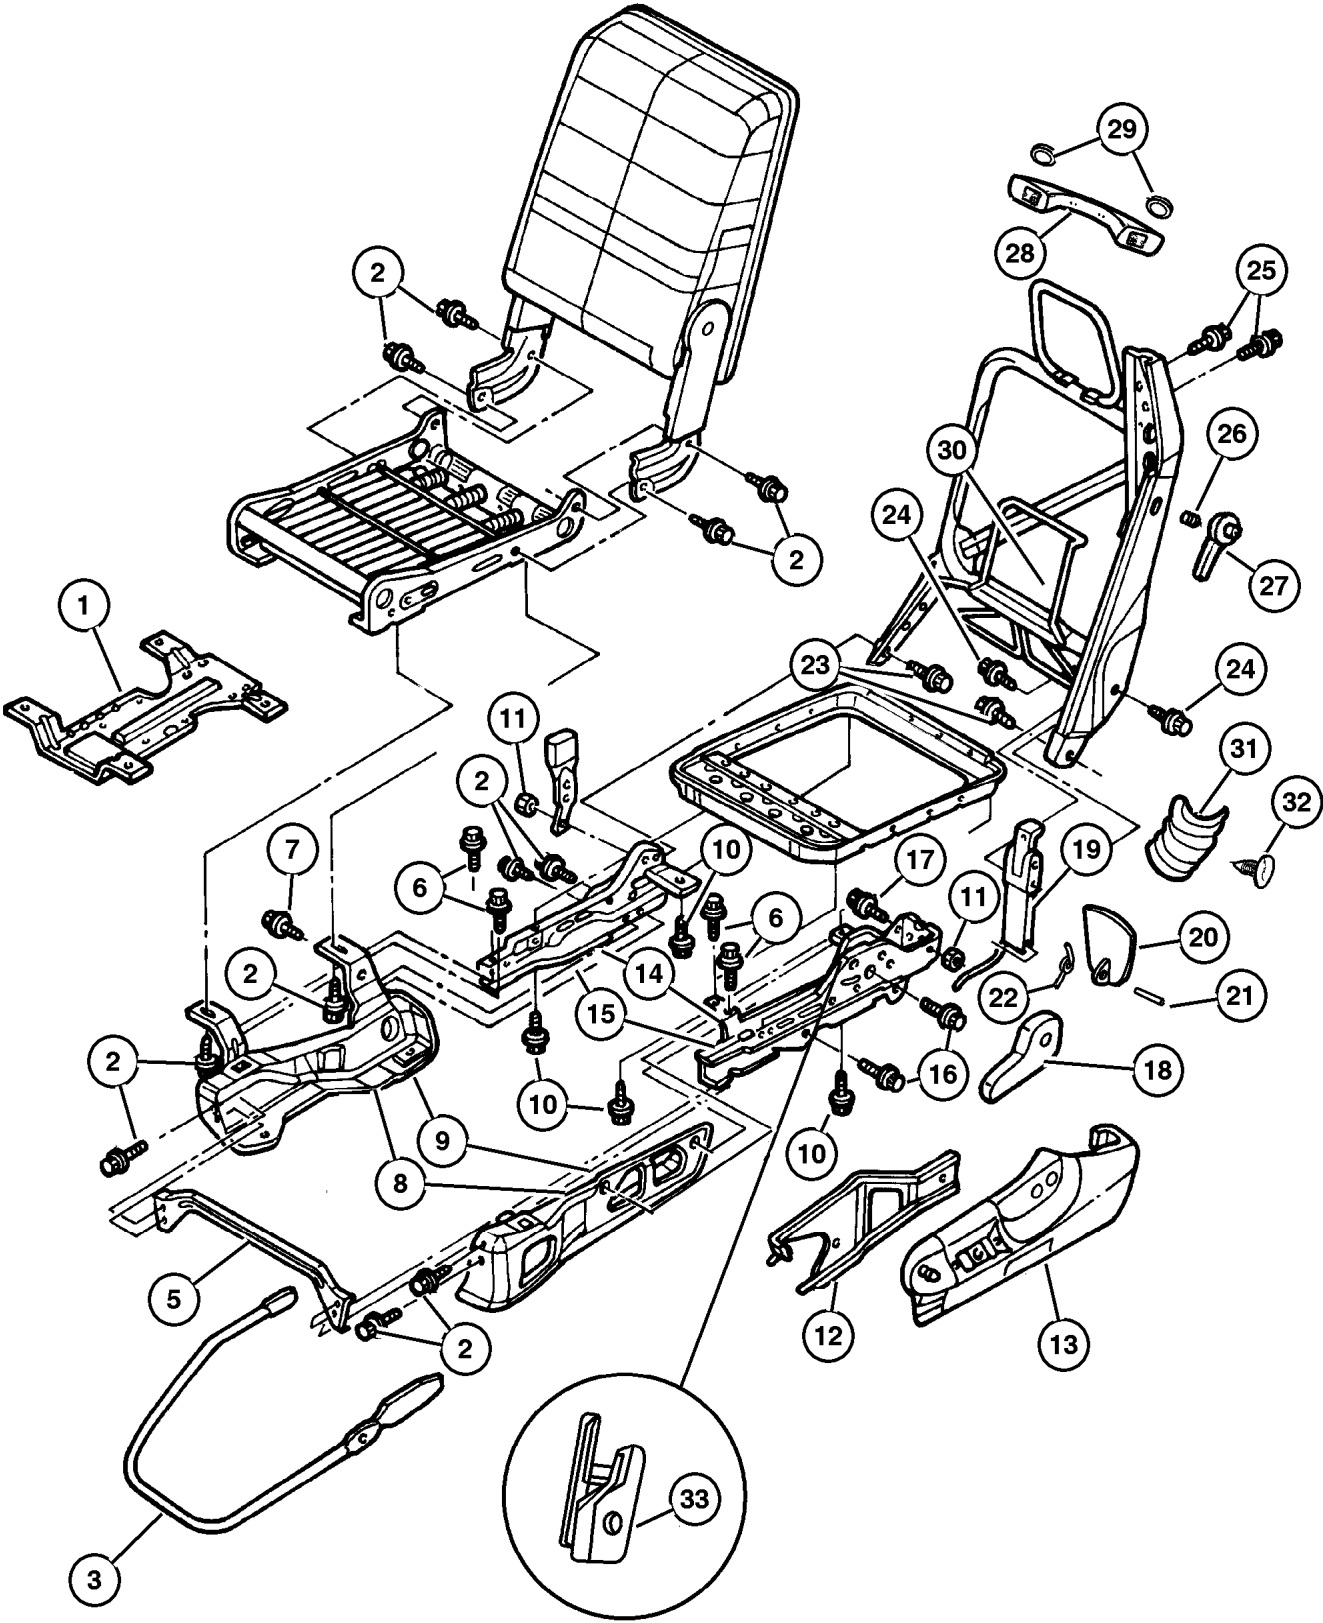Adjusters and Recliners
Figure IBE-820




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	5010 212AA	1			33, 34			TY	BRACKET, Control Unit
		1			33, 34			SX	
		1			33, 34			S9	
		1			33, 34			R1	
		1	1, 6		31			SX	
		1	1, 6		31			S9	
		1	1, 6		31			R1	
2	4773 714	8			33, 34			TY	BOLT
		8			33, 34			SX	
		8			33, 34			S9	
		8			33, 34			R1	
		8			33, 34			DP	
3	5010 314AA	2			33, 34			TY	TOWEL BAR, Seat Adjuster Handle
		2			33, 34			SX	
		2			33, 34			S9	
		1			33, 34			R1	
		1			33, 34			DP	
		1			33, 34			DZ	
		2	1, 6		31			SX	
		2	1, 6		31			S9	
		1	1, 6		31			R1	
		1	1, 6		31			DP	
-4	5010 307AA-	2			33, 34			TY	SPRING, Return Assist
		2			33, 34			S9	
		2			33, 34			SX	
		2			33, 34			R1	
		1			33, 34			DP	
		1			33, 34			DZ	
		2	1, 6		31			SX	
		2	1, 6		31			S9	
		1	1, 6		31			R1	
		1	1, 6		31			DP	
5	5010 281AA	2			33, 34			TY	REINFORCEMENT, Seat Mount
		2			33, 34			SX	

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

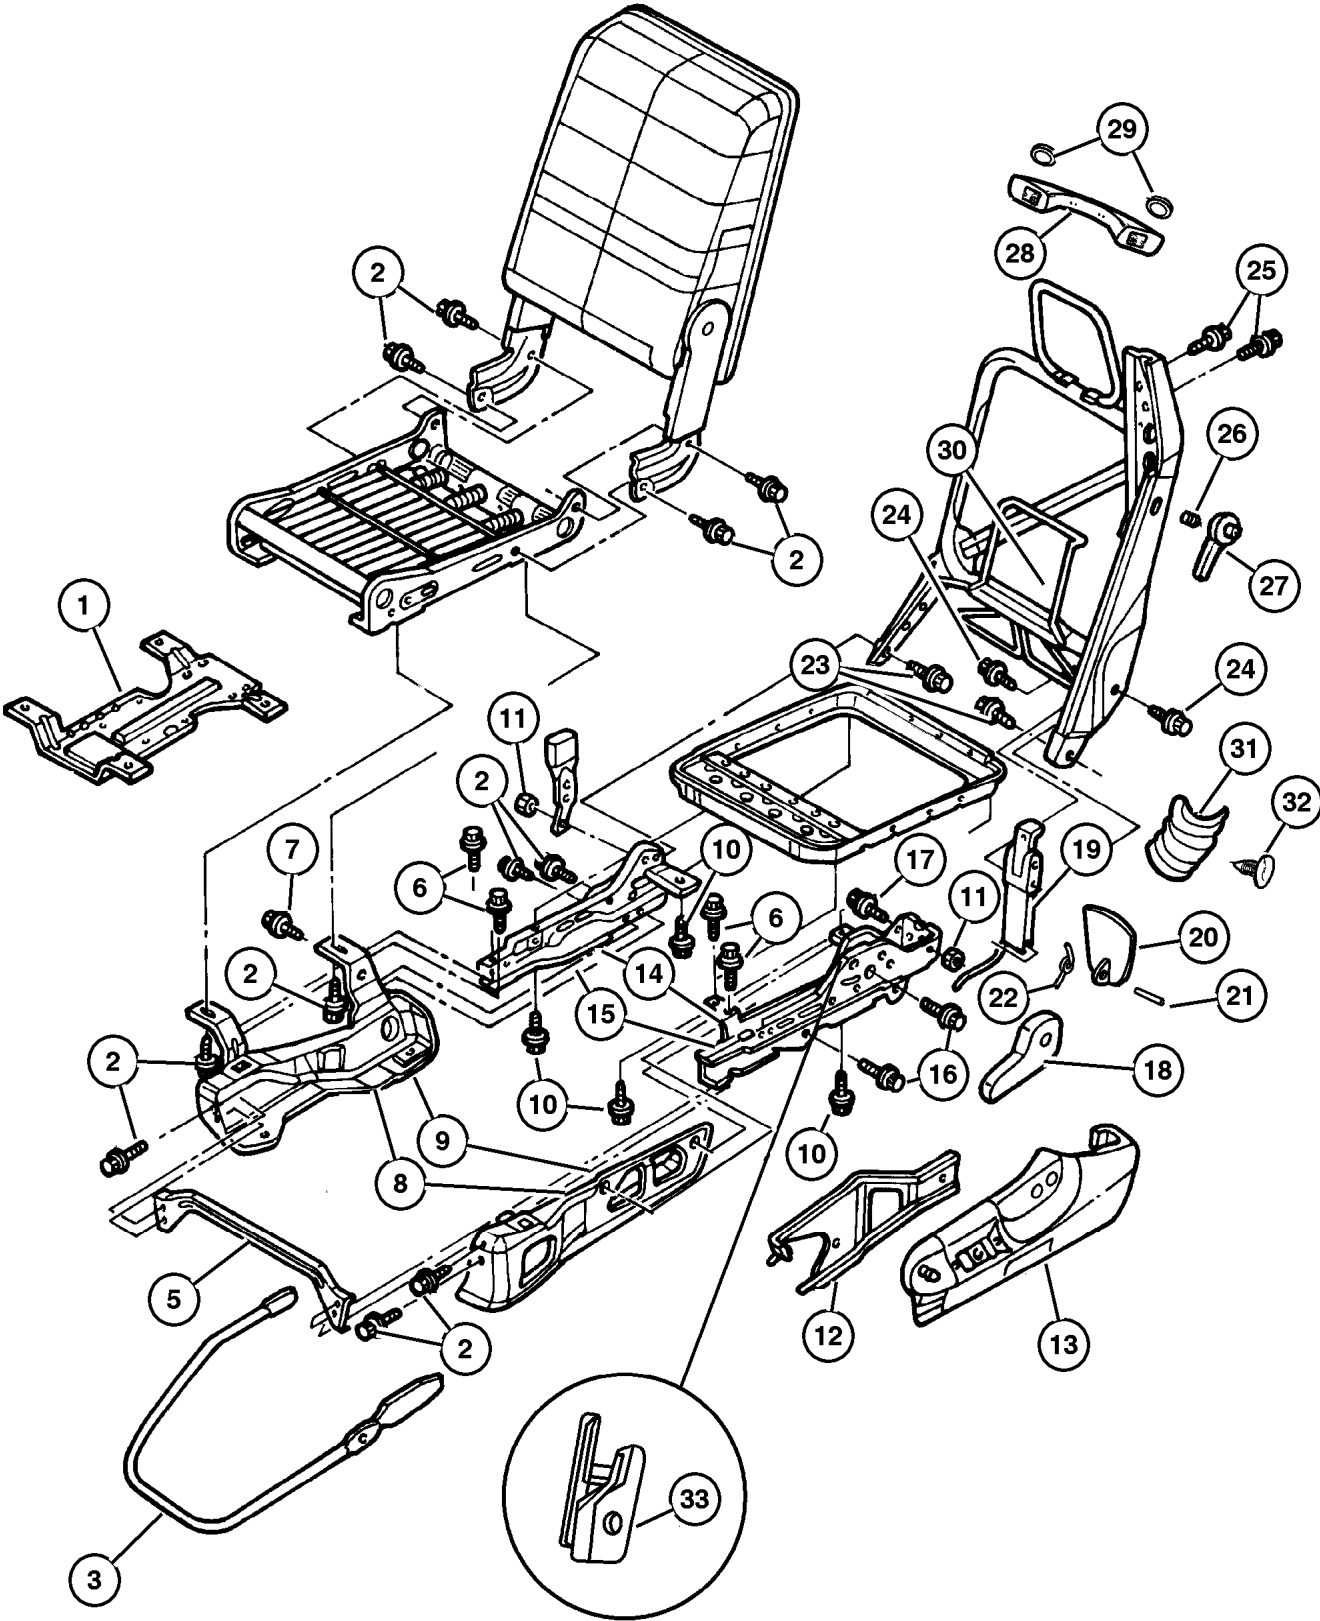Adjusters and Recliners
Figure IBE-820



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		2			33, 34			S9	
		1			33, 34			R1	
		1			33, 34			DP	
		1			33, 34			DZ	
		2	1, 6		31			SX	
		2	1, 6		31			S9	
		1	1, 6		31			R1	
		1	1, 6		31			DP	
6									BOLT, Seat
	5010 191AA	8			33, 34			TY	
		8			33, 34			SX	
		8			33, 34			S9	
		8			33, 34			R1	
		8			33, 34			DP	
		8			33, 34			DZ	
		8	1, 6		31			SX	
		8	1, 6		31			S9	
		8	1, 6		31			R1	
		8	1, 6		31			DP	
7									BOLT, Seat Belt Anchor
	5010 812AA	2			33, 34			TY	
		2			33, 34			SX	
		2			33, 34			S9	
		2			33, 34			R1	
		2			33, 34			DP	
		2			33, 34			DZ	
		2	1, 6		31			SX	
		2	1, 6		31			S9	
		2	1, 6		31			R1	
		2	1, 6		31			DP	
8									CONTROL, Seat release, EZ entry
	5010 253AA	1	1, 6		31			SX	
		1	1, 6		31			S9	
		1	1, 6		31			R1	
		1	1, 6		31			DP	
9									RISER, Seat
	5010 291AA	1			33, 34			TY	Inboard,Passenger
		1			33, 34			SX	Inboard,Passenger
		1			33, 34			S9	Inboard,Passenger
		1			33, 34			R1	Inboard,Passenger

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

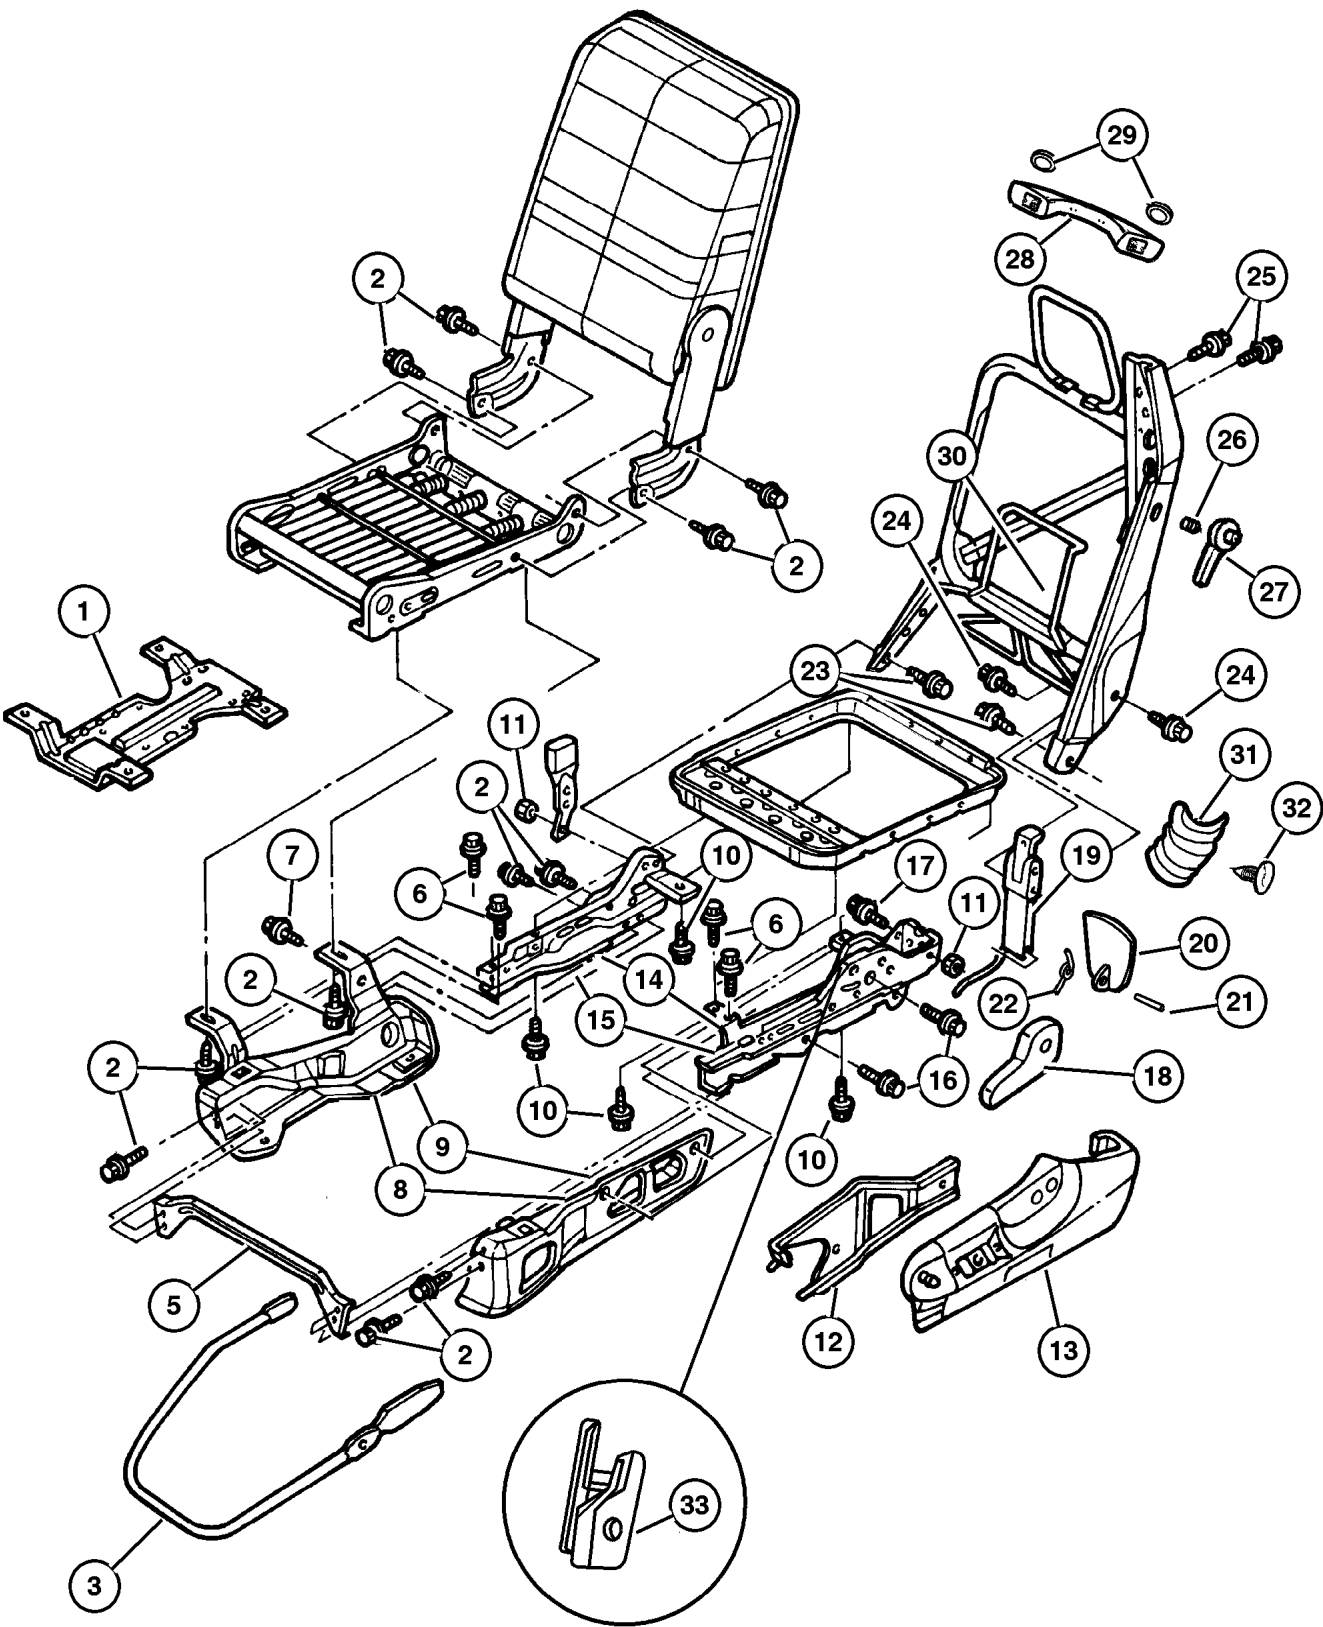
LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

Adjusters and Recliners
Figure IBE-820



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1			33, 34			DP	Inboard,Passenger
		1			33, 34			DZ	Inboard,Passenger
	5010 296AA	1			33, 34			TY	Outboard,Passenger
		1			33, 34			SX	Outboard,Passenger
		1			33, 34			S9	Outboard,Passenger
		1			33, 34			R1	Outboard,Passenger
		1			33, 34			DP	Outboard,Passenger
		1			33, 34			DZ	Outboard,Passenger
	5010 297AA	1			33, 34			TY	Inboard,Driver
		1			33, 34			SX	Inboard,Driver
		1			33, 34			S9	Inboard,Driver
		1			33, 34			R1	Inboard,Driver
		1			33, 34			DP	Inboard,Driver
		1			33, 34			DZ	Inboard,Driver
		1	1, 6		31			SX	Inboard,Driver
		1	1, 6		31			S9	Inboard,Driver
		1	1, 6		31			R1	Inboard,Driver
		1	1, 6		31			DP	Inboard,Driver
	5010 298AA	1			33, 34			TY	Outboard,Driver
		1			33, 34			SX	Outboard,Driver
		1			33, 34			S9	Outboard,Driver
		1			33, 34			R1	Outboard,Driver
		1			33, 34			DP	Outboard,Driver
		1	1, 6		31			SX	Outboard,Driver
		1	1, 6		31			S9	Outboard,Driver
		1	1, 6		31			R1	Outboard,Driver
		1	1, 6		31			DP	Outboard,Driver
10									BOLT, Adjuster to Seat Frame
	5010 312AA	4	1, 6		31			SX	
		4	1, 6		31			S9	
		4	1, 6		31			R1	
		4	1, 6		31			DP	
		8			33, 34			TY	
11									NUT, Hex, M12x1.25
	5010 277AA	2			33, 34			TY	
		2			33, 34			SX	
		2			33, 34			S9	
		2			33, 34			R1	
		2			33, 34			DP	


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

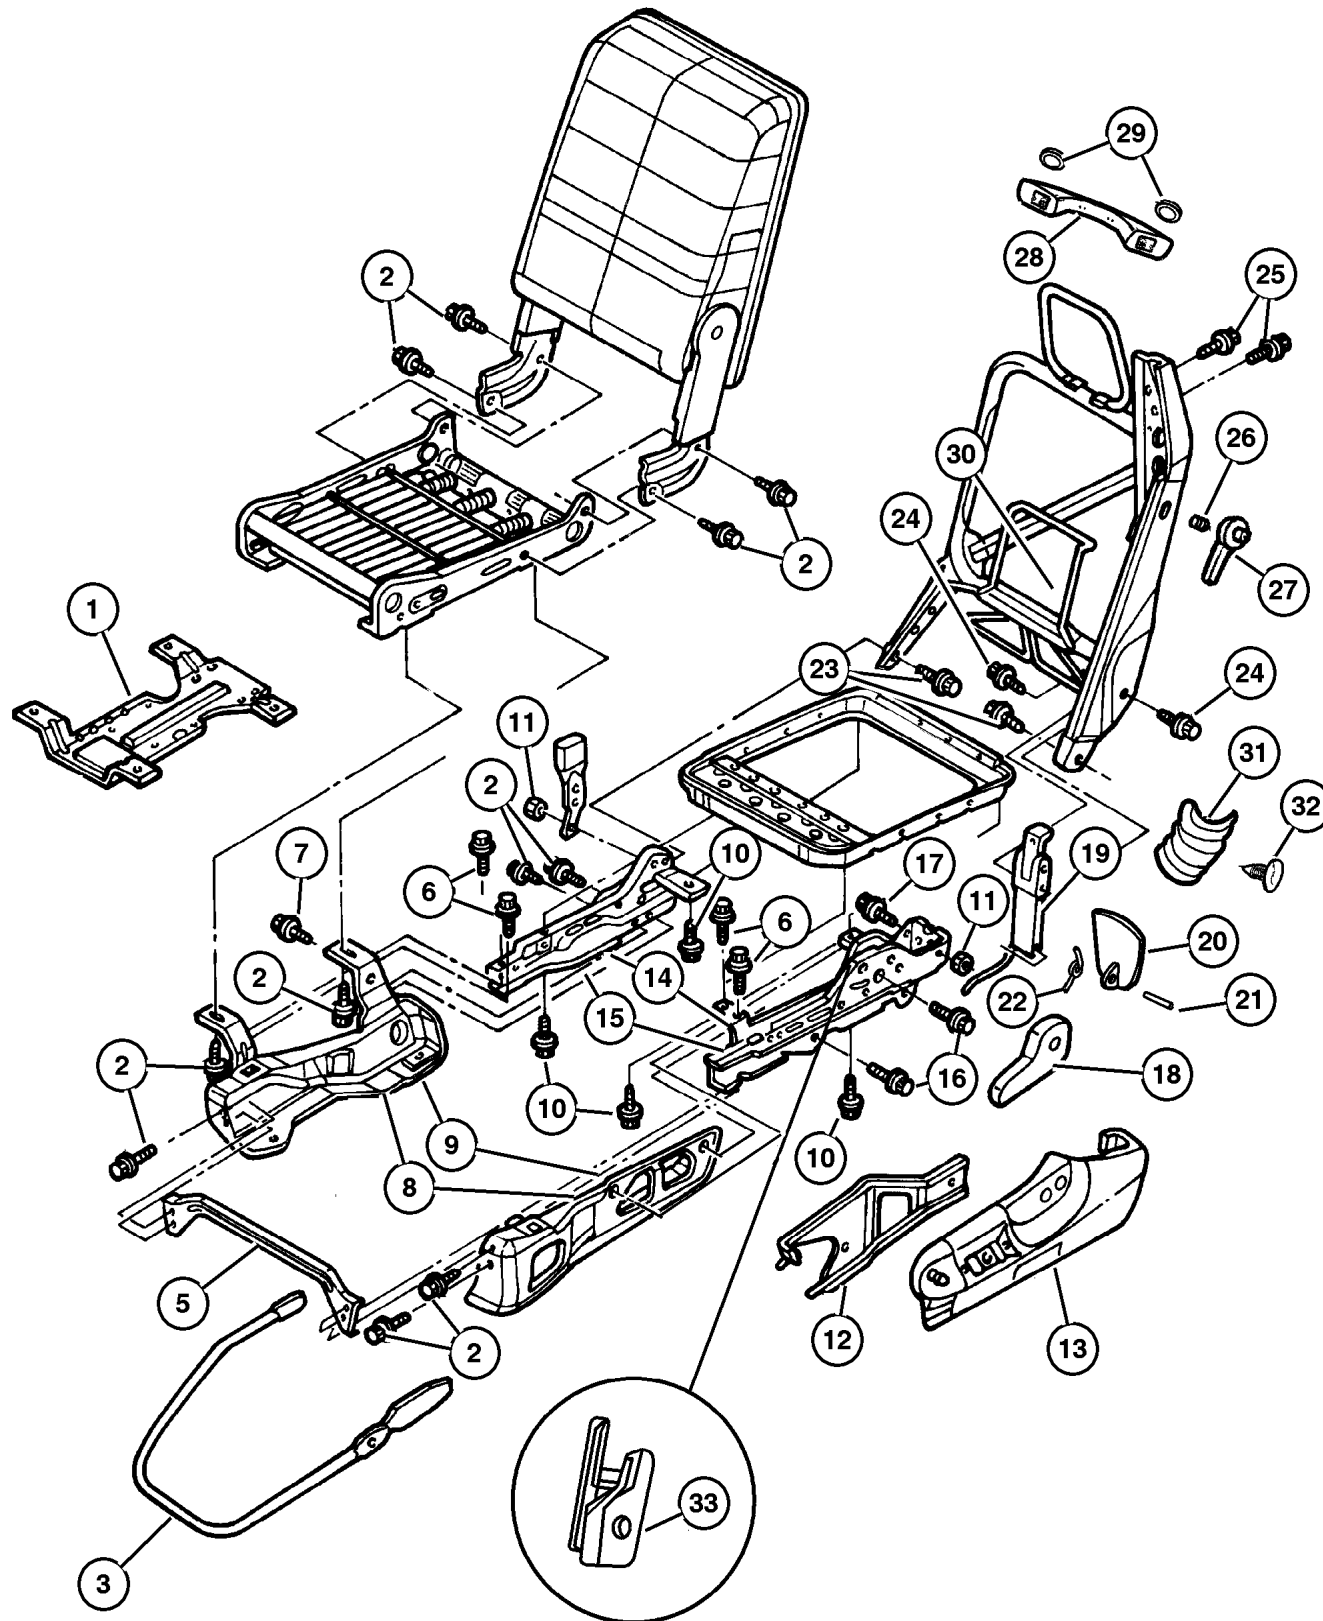Adjusters and Recliners Figure IBE-820



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		2			33, 34			DZ	
		2	1, 6		31			SX	
		2	1, 6		31			S9	
		2	1, 6		31			R1	
		2	1, 6		31			DP	
12	5010 299AA	1			33, 34			TY	BRACKET, Seat Driver
		1			33, 34			SX	Driver
		1			33, 34			S9	Driver
		1			33, 34			R1	Driver
		1			33, 34			DP	Driver
		1			33, 34			DZ	Driver
		1	1, 6		31			SX	Driver
		1	1, 6		31			S9	Driver
		1	1, 6		31			DP	Driver
	5010 300AA	1			33, 34			TY	Passenger
		1			33, 34			SX	Passenger
		1			33, 34			S9	Passenger
		1			33, 34			R1	Passenger
		1			33, 34			DP	Passenger
		1			33, 34			DZ	Passenger
		1	1, 6		31			SX	Passenger
		1	1, 6		31			S9	Passenger
		1	1, 6		31			R1	Passenger
		1	1, 6		31			DP	Passenger
13	RT66 1AZAA	1	1, 6		31			DP	SHIELD, Seat Cushion [AZ], Passenger,Manual
	RT73 1K9AA	1			33, 34			DP	[K9], Driver,Power
		1	1, 6		31			DP	[K9], Driver,Power
	RT66 1AZAA	1			33, 34			DP	[AZ], Passenger,Manual
	RT73 1AZAA	1	1, 6		31			DP	[AZ], Driver,Power
		1			33, 34			DP	[AZ], Driver,Power
	RT66 1K9AA	1			33, 34			DP	[K9], Passenger,Manual
		1	1, 6		31			DP	[K9], Passenger,Manual
	UC16 1K5AA	1			33, 34			DZ	[K9], Passenger,Power
	UC16 1AZAA	1			33, 34			DZ	[AZ], Passenger,Power
	RT73 1K9AA	1			33, 34			DZ	[K9], Driver,Power
	RT73 1AZAA	1			33, 34			DZ	[AZ], Driver,Power
	RT66 1AZAA	1	1, 6		31			R1	[AZ], Passenger,Manual

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

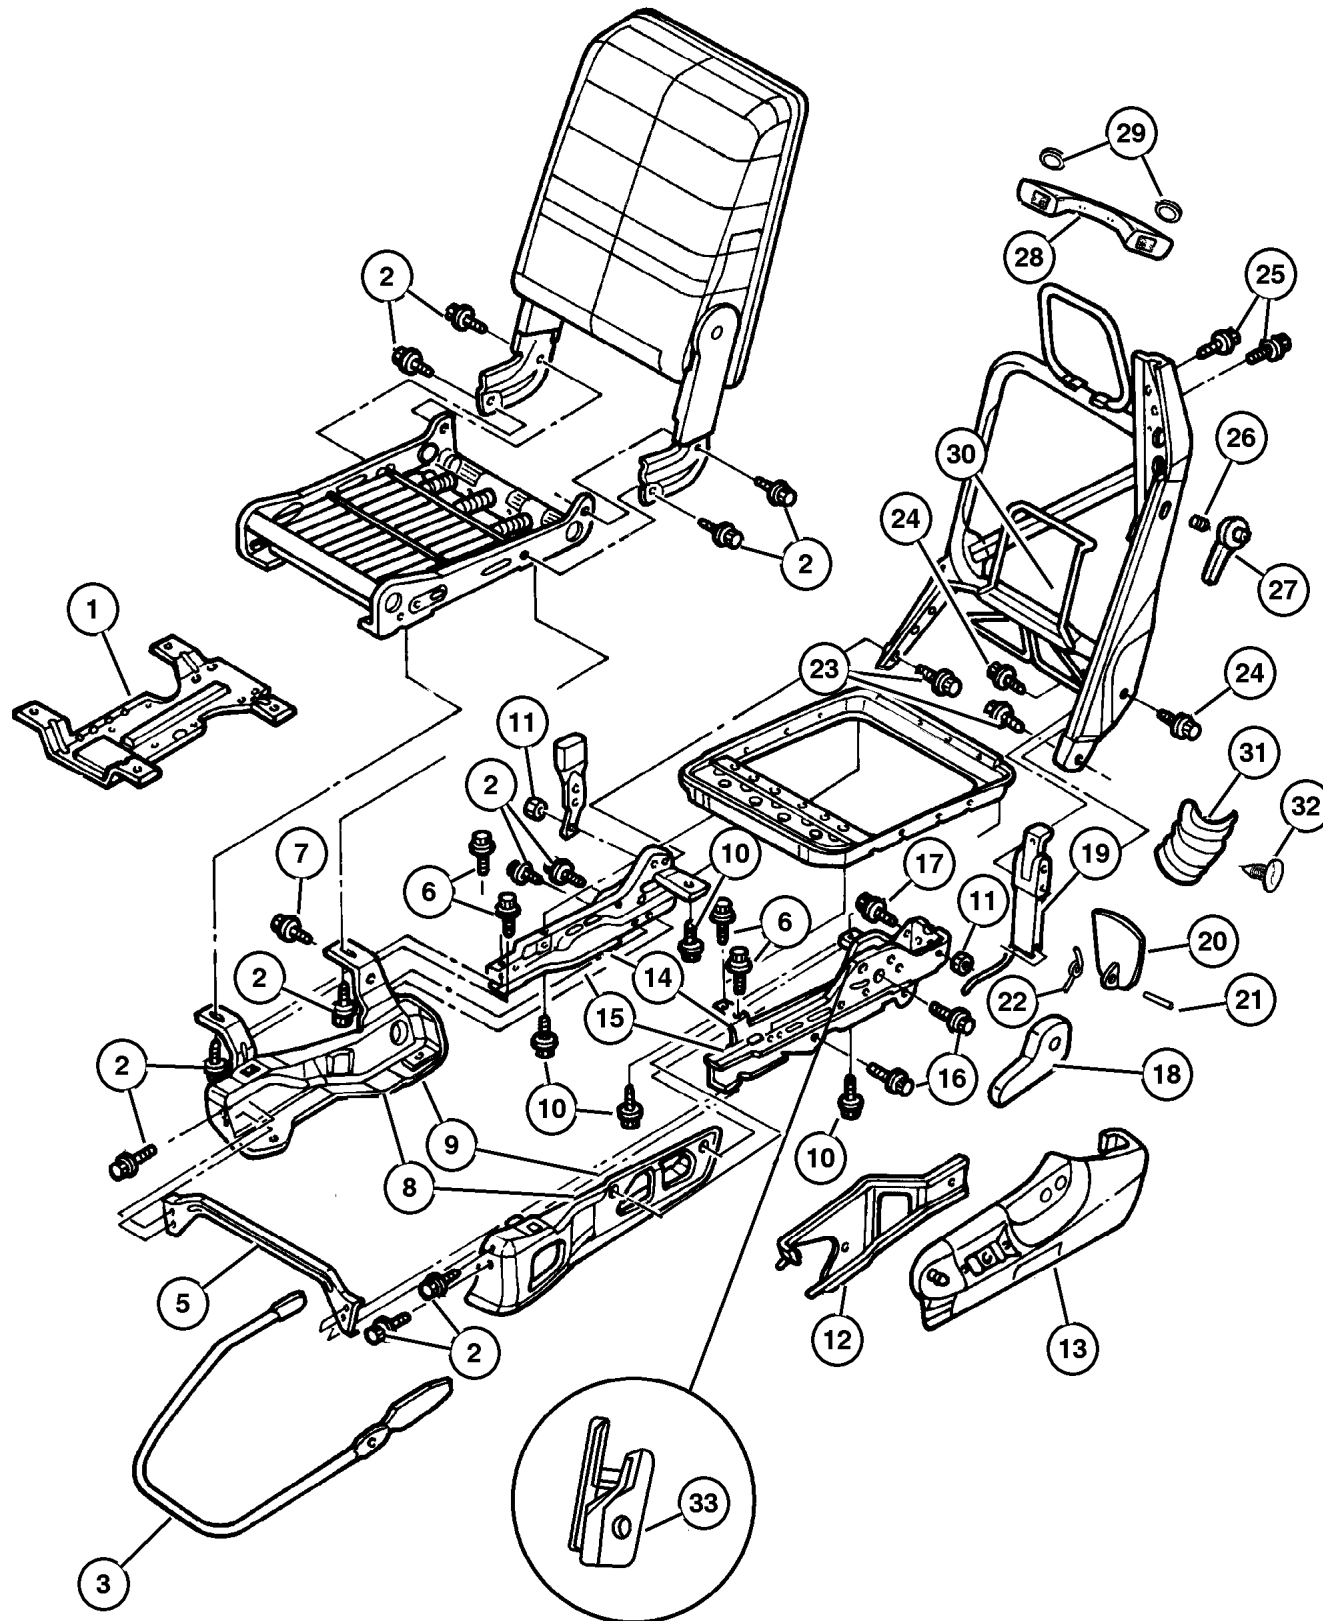
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Adjusters and Recliners Figure IBE-820



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1			33, 34			R1	[AZ], Passenger,Manual
	RT66 1C3AA	1			33, 34			R1	[C3], Passenger,Manual
		1	1, 6		31			R1	[C3], Passenger,Manual
	RT66 1K9AA	1	1, 6		31			R1	[K9], Passenger,Manual
		1			33, 34			R1	[K9], Passenger,Manual
	RT73 1K9AA	1			33, 34			R1	[K9], Driver,Power
	RT72 1AZAA	1	1, 6		31			R1	[AZ], Driver,Manual
	RT73 1K9AA	1	1, 6		31			R1	[K9], Driver,Power
	RT73 1C3AA	1			33, 34			R1	[C3], Driver,Power
		1	1, 6		31			R1	[C3], Driver,Power
	RT73 1AZAA	1			33, 34			R1	[AZ], Driver,Power
		1	1, 6		31			R1	[AZ], Driver,Power
	RT72 1C3AA	1	1, 6		31			R1	[C3], Driver,Manual
	RT72 1K9AA	1	1, 6		31			R1	[K9], Driver,Manual
	RT66 1C3AA	1	1, 6		31			S9	[C3], Passenger,Manual
		1			33, 34			S9	[C3], Passenger,Manual
	RT66 1AZAA	1	1, 6		31			S9	[AZ], Passenger,Manual
	RT72 1C3AA	1			33, 34			S9	[C3], Driver,Manual
	RT72 1AZAA	1	1, 6		31			S9	[AZ], Driver,Manual
	RT72 1C3AA	1	1, 6		31			S9	[C3], Driver,Manual
	RT72 1AZAA	1			33, 34			S9	[AZ], Driver,Manual
	RT66 1AZAA	1			33, 34			S9	[AZ], Passenger,Manual
	RT72 1AZAA	1			33, 34			SX	[AZ], Driver,Manual
	RT66 1C3AA	1			33, 34			SX	[C3], Passenger,Manual
	RT72 1AZAA	1	1, 6		31			SX	[AZ], Driver,Manual
	RT72 1C3AA	1	1, 6		31			SX	[C3], Driver,Manual
	RT66 1AZAA	1	1, 6		31			SX	[AZ], Passenger,Manual
	RT72 1C3AA	1			33, 34			SX	[C3], Driver,Manual
	RT66 1C3AA	1	1, 6		31			SX	[C3], Passenger,Manual
	RT66 1AZAA	1			33, 34			SX	[AZ], Passenger,Manual
	RT72 1C3AA	1			33, 34			TY	[C3], Driver,Manual
	RT66 1C3AA	1			33, 34			TY	[C3], Passenger,Manual
	RT66 1AZAA	1			33, 34			TY	[AZ], Passenger,Manual
	RT72 1AZAA	1			33, 34			TY	[AZ], Driver,Manual
14									ADJUSTER, Power Seat, Includes Motors
	5010 175AA	1			33, 34			DZ	Driver
		1	1, 6		31			DP	Driver
		1	1, 6		31			R1	Driver
		1			33, 34			DP	Driver

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

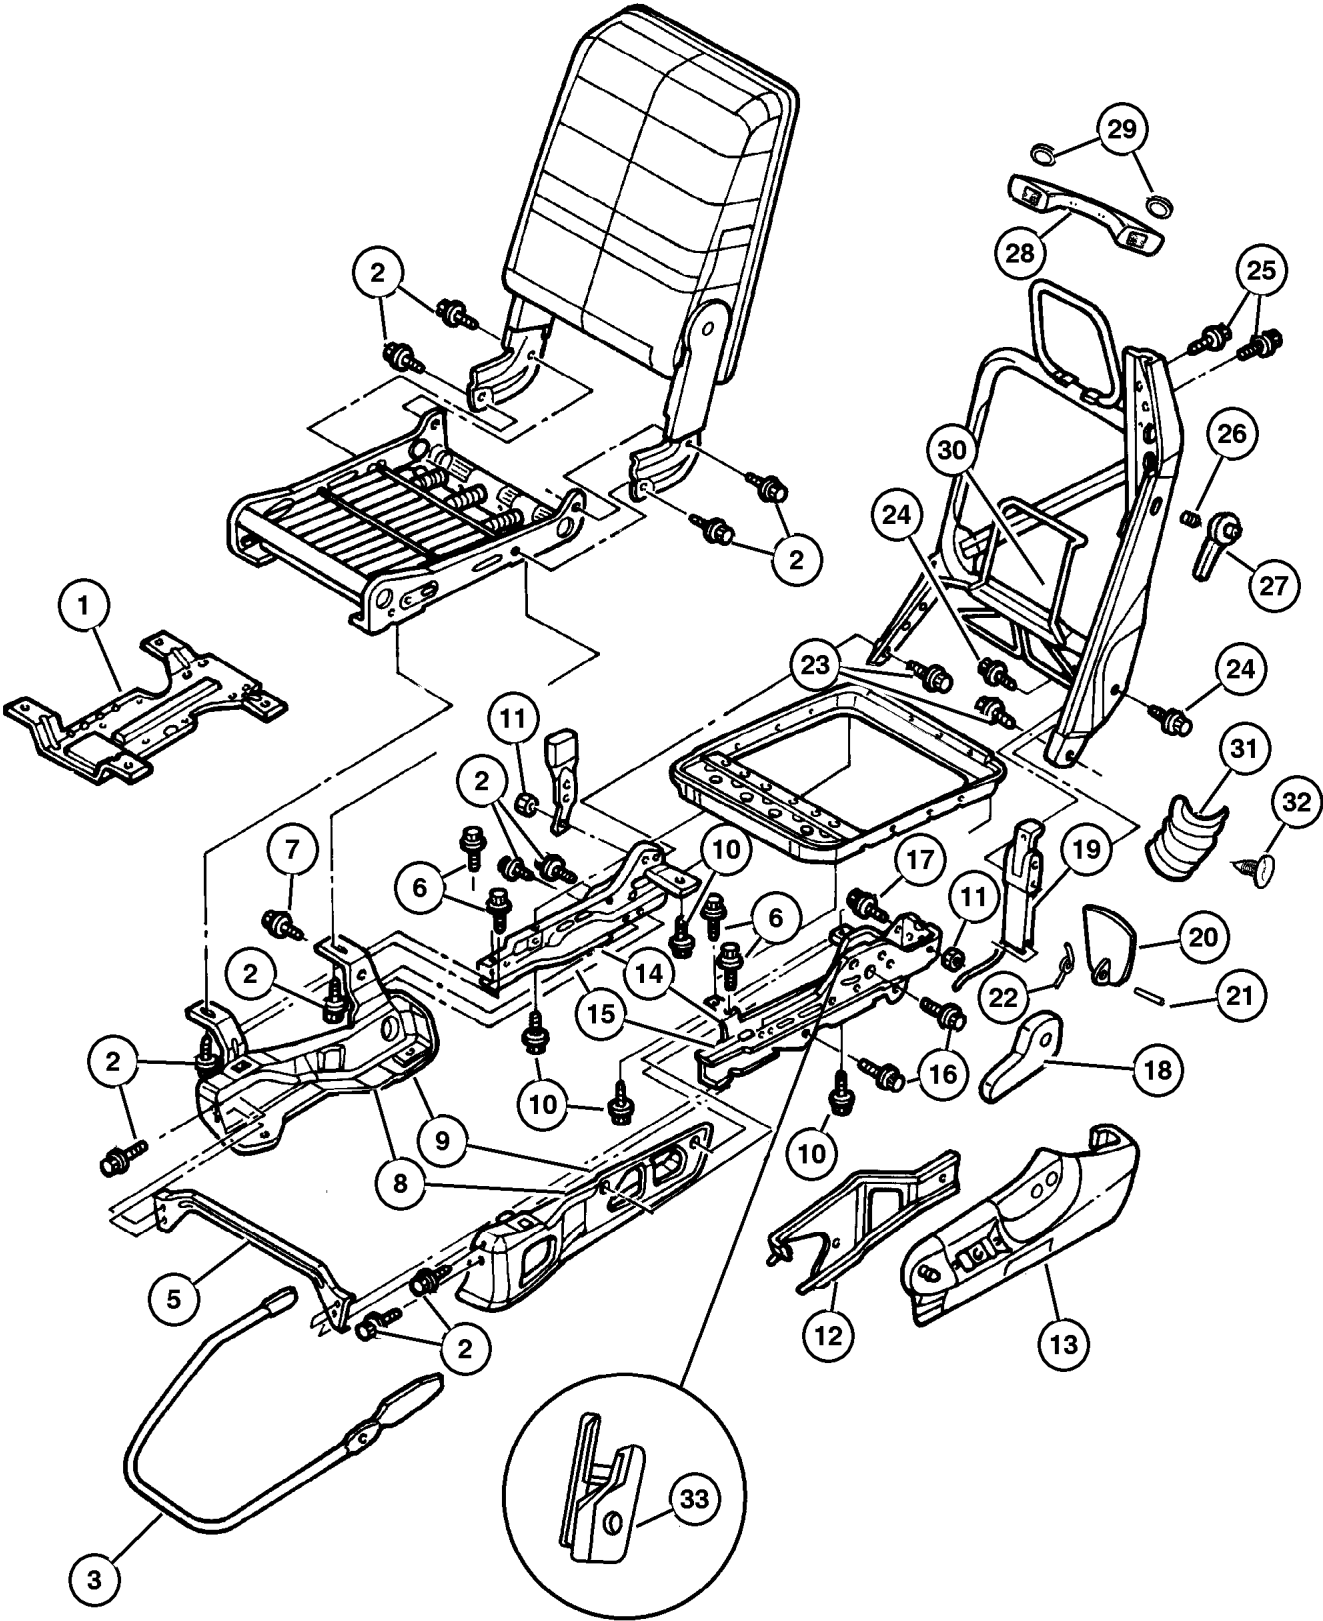
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Adjusters and Recliners
Figure IBE-820



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
15		1			33, 34			R1	Driver
	5017 818AA	1			33, 34			DZ	Passenger
	5010 172AA	1			33, 34			TY	ADJUSTER, Manual Seat
		1			33, 34			SX	Driver,Inboard
		1			33, 34			S9	Driver,Inboard
		1			33, 34			R1	Driver,Inboard
		1	1, 6		31			SX	Driver,Inboard
		1	1, 6		31			S9	Driver,Inboard
	5010 174AA	1	1, 6		31			R1	Driver,Inboard
		1			33, 34			TY	Driver,Outboard
		1			33, 34			S9	Driver,Outboard
		1			33, 34			R1	Driver,Outboard
		1	1, 6		31			SX	Driver,Outboard
		1	1, 6		31			S9	Driver,Outboard
		1	1, 6		31			R1	Driver,Outboard
	5010 177AA	1			33, 34			TY	Without Easy Entry, Passenger, Inboard
		1			33, 34			SX	Without Easy Entry, Passenger, Inboard
		1			33, 34			S9	Without Easy Entry, Passenger, Inboard
		1			33, 34			R1	Without Easy Entry, Passenger, Inboard
		1			33, 34			DP	Without Easy Entry, Passenger, Inboard
		1			33, 34			DZ	Without Easy Entry, Passenger, Inboard
		1	1, 6		31			SX	Without Easy Entry, Passenger, Inboard
		1	1, 6		31			S9	Without Easy Entry, Passenger, Inboard
		1	1, 6		31			R1	Without Easy Entry, Passenger, Inboard
		1	1, 6		31			DP	Without Easy Entry, Passenger, Inboard
	5010 178AA	1			33, 34			TY	Passenger,Outboard
		1			33, 34			SX	Passenger,Outboard
		1			33, 34			S9	Passenger,Outboard
		1			33, 34			R1	Passenger,Outboard

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES

L = Ram Truck (All)

LINE

1, 6 = 1500

2, 7 = 2500

3, 8 = 3500

BODY

31 = Club Cab (138WB)

33 = QuadCab(138WB)

34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.

ETC, ET0, ETH = 5.9L 6 Cil.

EML, EMM,EM0 = 5.9L 8 Cil.

EWA, EW0 = 8.0L 10 Cyl.

EAA = All Engines

EAG = All Gas Engines

TRANSMISSION

DGP = 47RE 4 Speed Auto.

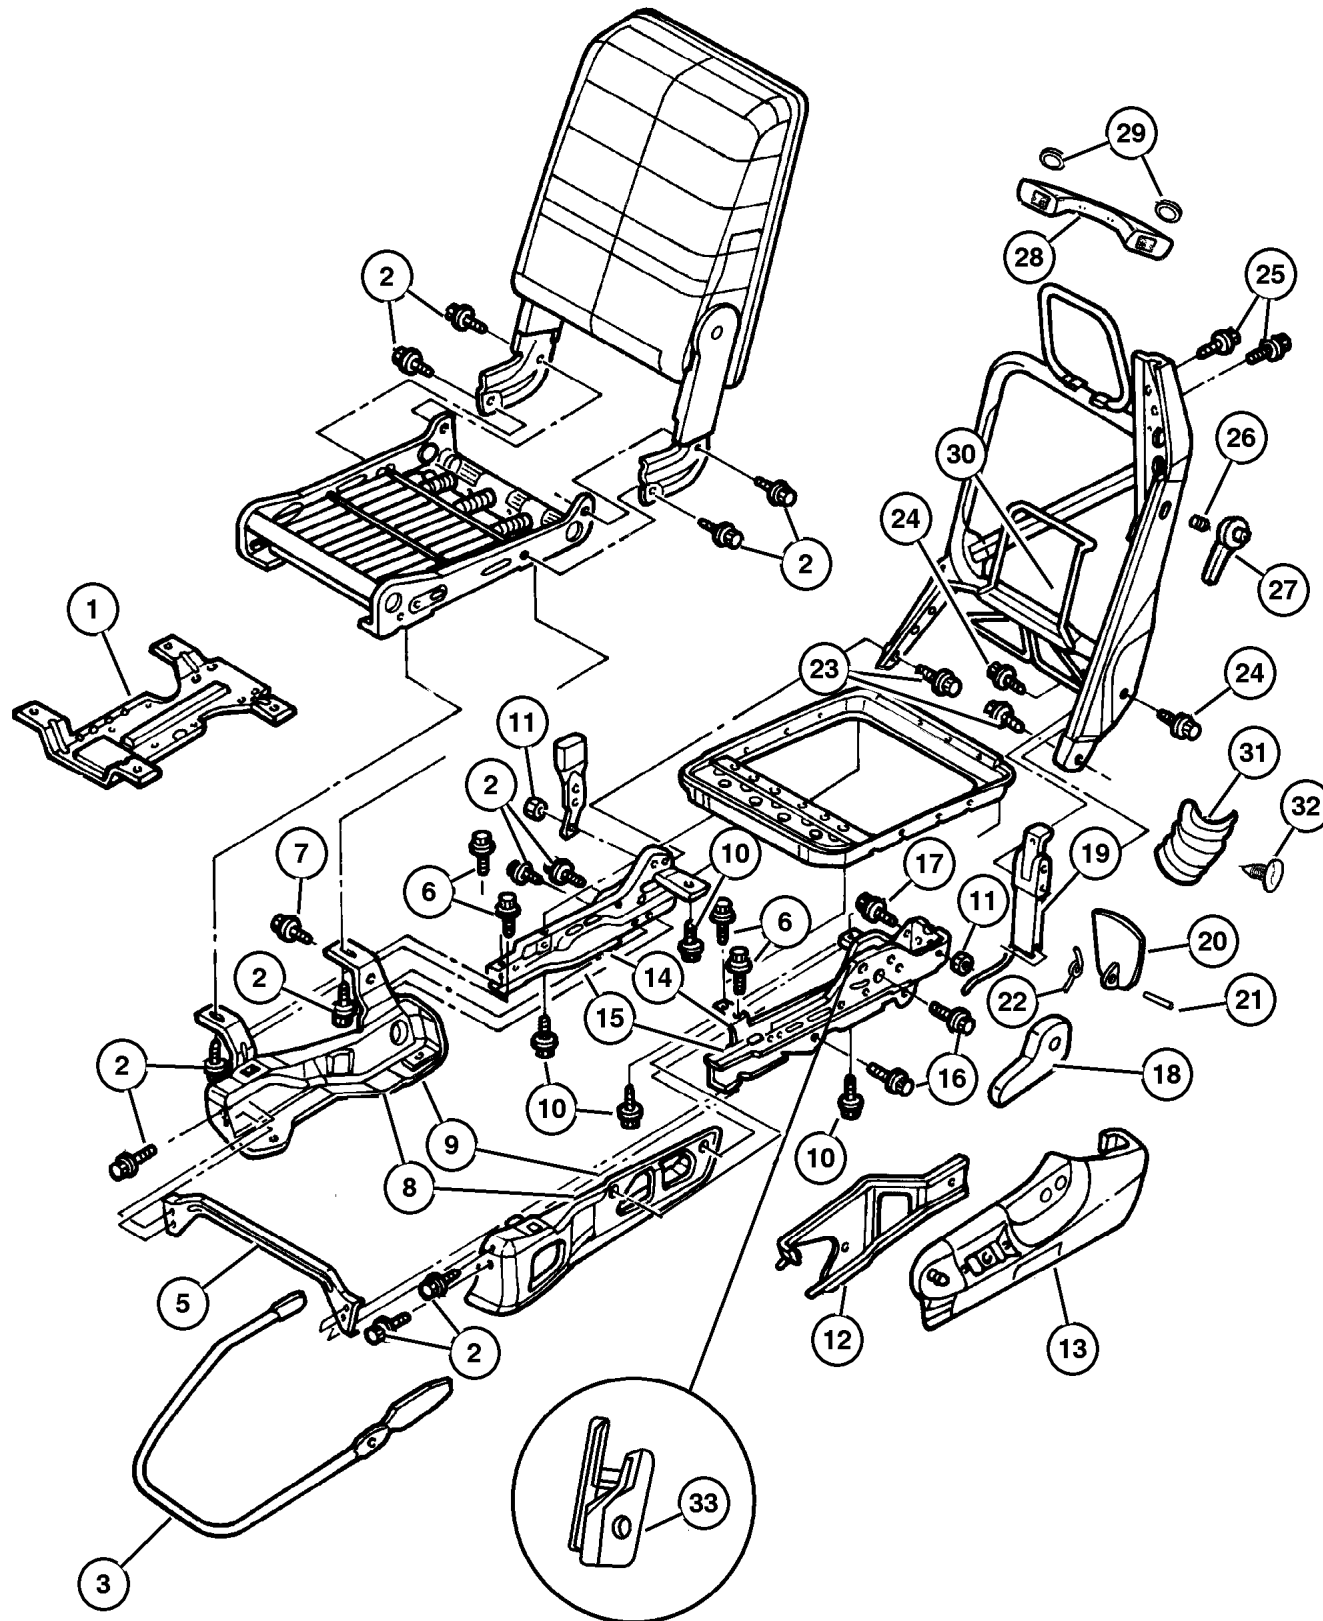
DGT, DG0 = 46RE 4 Speed Auto.

DDX, DDC = 5 Speed HD Manual

DDP, DD0 = 5 Speed Manual

DEE = 6 Speed HD Manual

Adjusters and Recliners Figure IBE-820



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1			33, 34			DP	Passenger,Outboard
		1			33, 34			DZ	Passenger,Outboard
		1	1, 6		31			SX	Passenger,Outboard
		1	1, 6		31			S9	Passenger,Outboard
		1	1, 6		31			R1	Passenger,Outboard
	5013 439AA	1	1, 6		31			DP	Passenger,Outboard
		1	1, 6		31			SX	With Easy Entry, Passenger, Inboard
		1	1, 6		31			S9	With Easy Entry, Passenger, Inboard
		1	1, 6		31			R1	With Easy Entry, Passenger, Inboard
		1	1, 6		31			DP	With Easy Entry, Passenger, Inboard
16	5010 191AA	8			33, 34			TY	BOLT, Seat
		8			33, 34			SX	
		8			33, 34			S9	
		8			33, 34			R1	
		8			33, 34			DP	
		8			33, 34			DZ	
		8	1, 6		31			SX	
		8	1, 6		31			S9	
		8	1, 6		31			R1	
		8	1, 6		31			DP	
17	5010 816AA	2			33, 34			TY	BOLT, Recliner
		2			33, 34			S9	
		2			33, 34			SX	
		2			33, 34			R1	
		2			33, 34			DP	
		2			33, 34			DZ	
		2	1, 6		31			SX	
		2	1, 6		31			S9	
		2	1, 6		31			R1	
		2	1, 6		31			DP	
18	5010 258AA	1			33, 34			TY	HANDLE, Seat Recliner
		1			33, 34			S9	Passenger
		1			33, 34			R1	Passenger

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

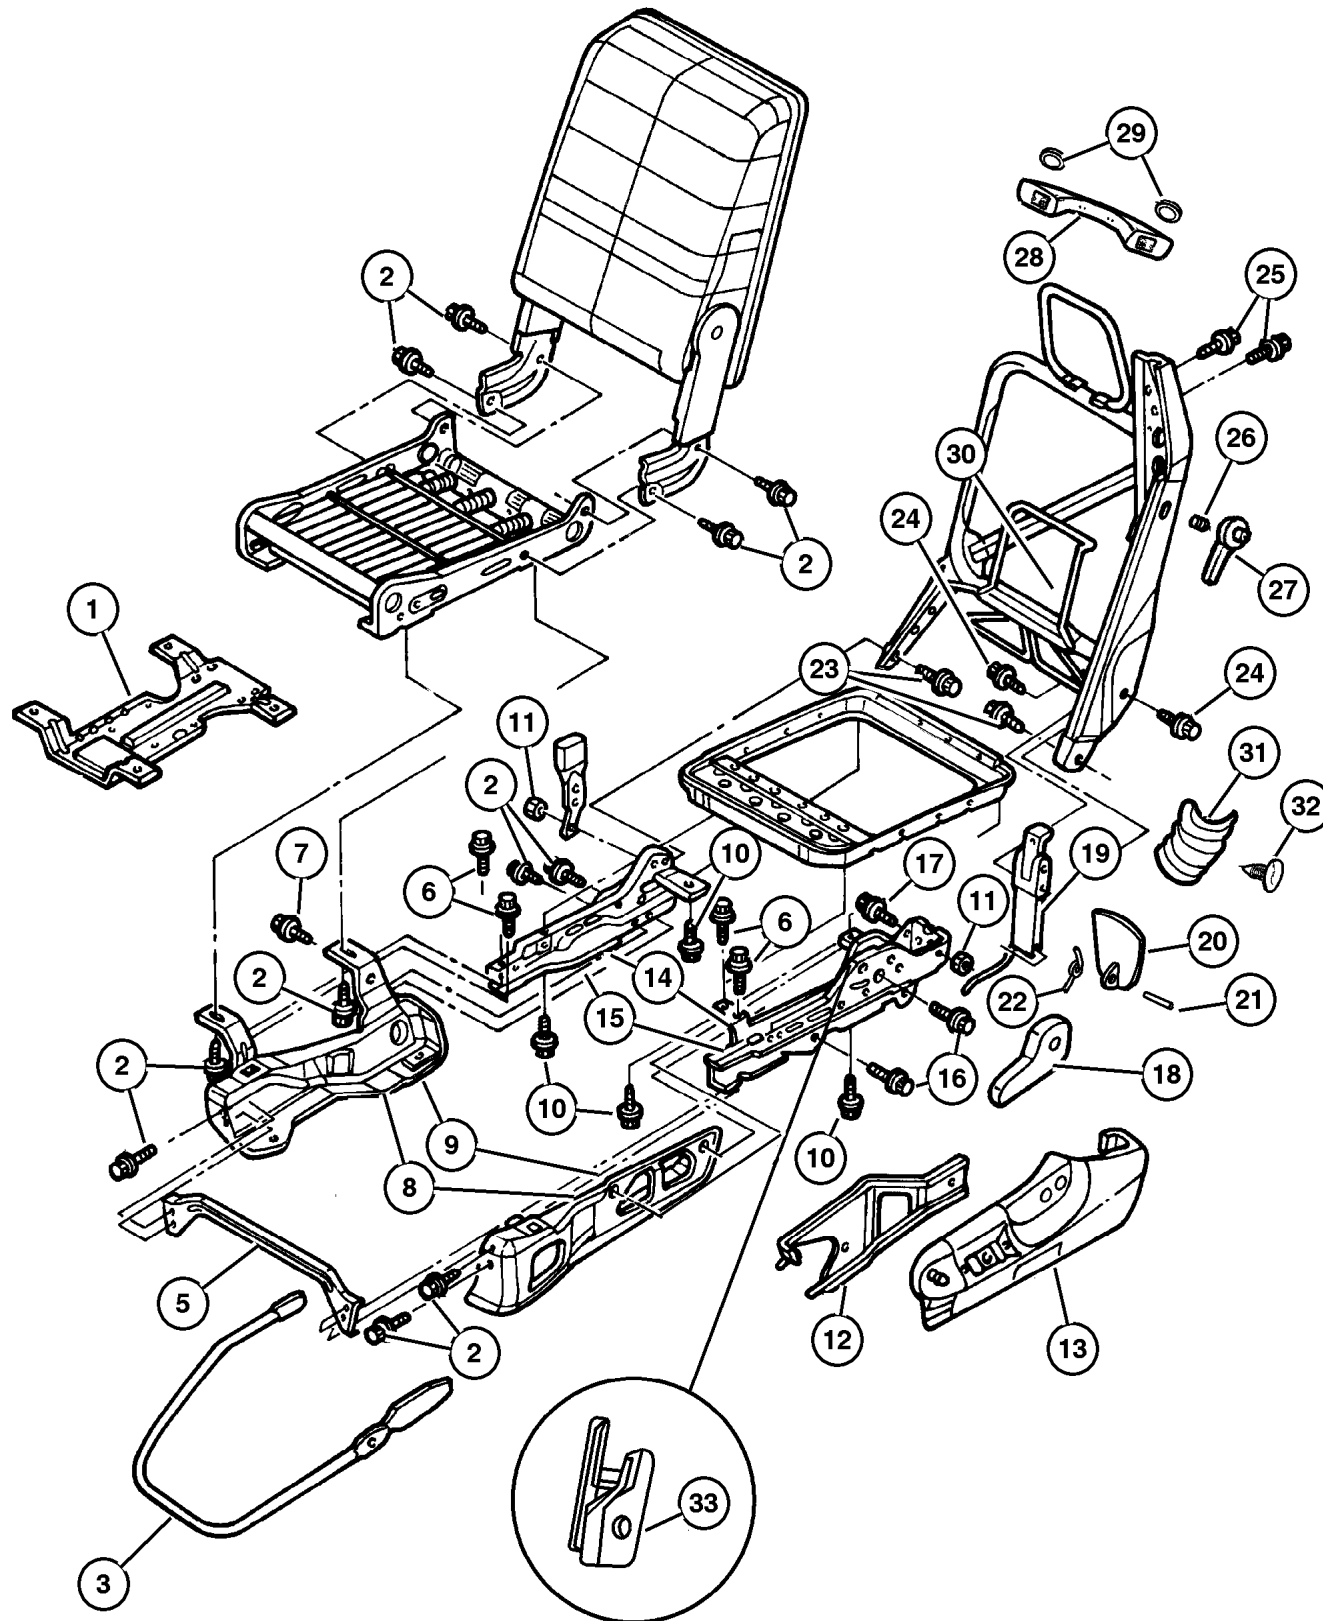
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Adjusters and Recliners Figure IBE-820



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		1			33, 34			DP	Passenger
		1			33, 34			SX	Passenger
		1			33, 34			DZ	Passenger
		1	1, 6		31			SX	Passenger
		1	1, 6		31			S9	Passenger
		1	1, 6		31			R1	Passenger
		1	1, 6		31			DP	Passenger
5010 259AA		1			33, 34			TY	Driver
		1			33, 34			S9	Driver
		1			33, 34			SX	Driver
		1			33, 34			R1	Driver
		1			33, 34			DP	Driver
		1			33, 34			DZ	Driver
		1	1, 6		31			SX	Driver
		1	1, 6		31			S9	Driver
		1	1, 6		31			R1	Driver
		1	1, 6		31			DP	Driver
19									RECLINER, Front Seat Back, Two doors have 2 cables, Four doors have one cable.
5010 286AA		1			33, 34			TY	Passenger
		1			33, 34			SX	Passenger
		1			33, 34			S9	Passenger
		1			33, 34			R1	Passenger
		1			33, 34			DP	Passenger
5010 287AA		1			33, 34			DZ	Passenger
		1			33, 34			TY	Driver
		1			33, 34			SX	Driver
		1			33, 34			S9	Driver
		1			33, 34			R1	Driver
		1			33, 34			DP	Driver
		1			33, 34			DZ	Driver
5010 288AA		1	1, 6		31			SX	Passenger
		1	1, 6		31			S9	Passenger
		1	1, 6		31			R1	Passenger
		1	1, 6		31			DP	Passenger
5010 289AA		1	1, 6		31			SX	Driver
		1	1, 6		31			S9	Driver
		1	1, 6		31			R1	Driver
		1	1, 6		31			DP	Driver
20									SHIELD, Seat Adjuster


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

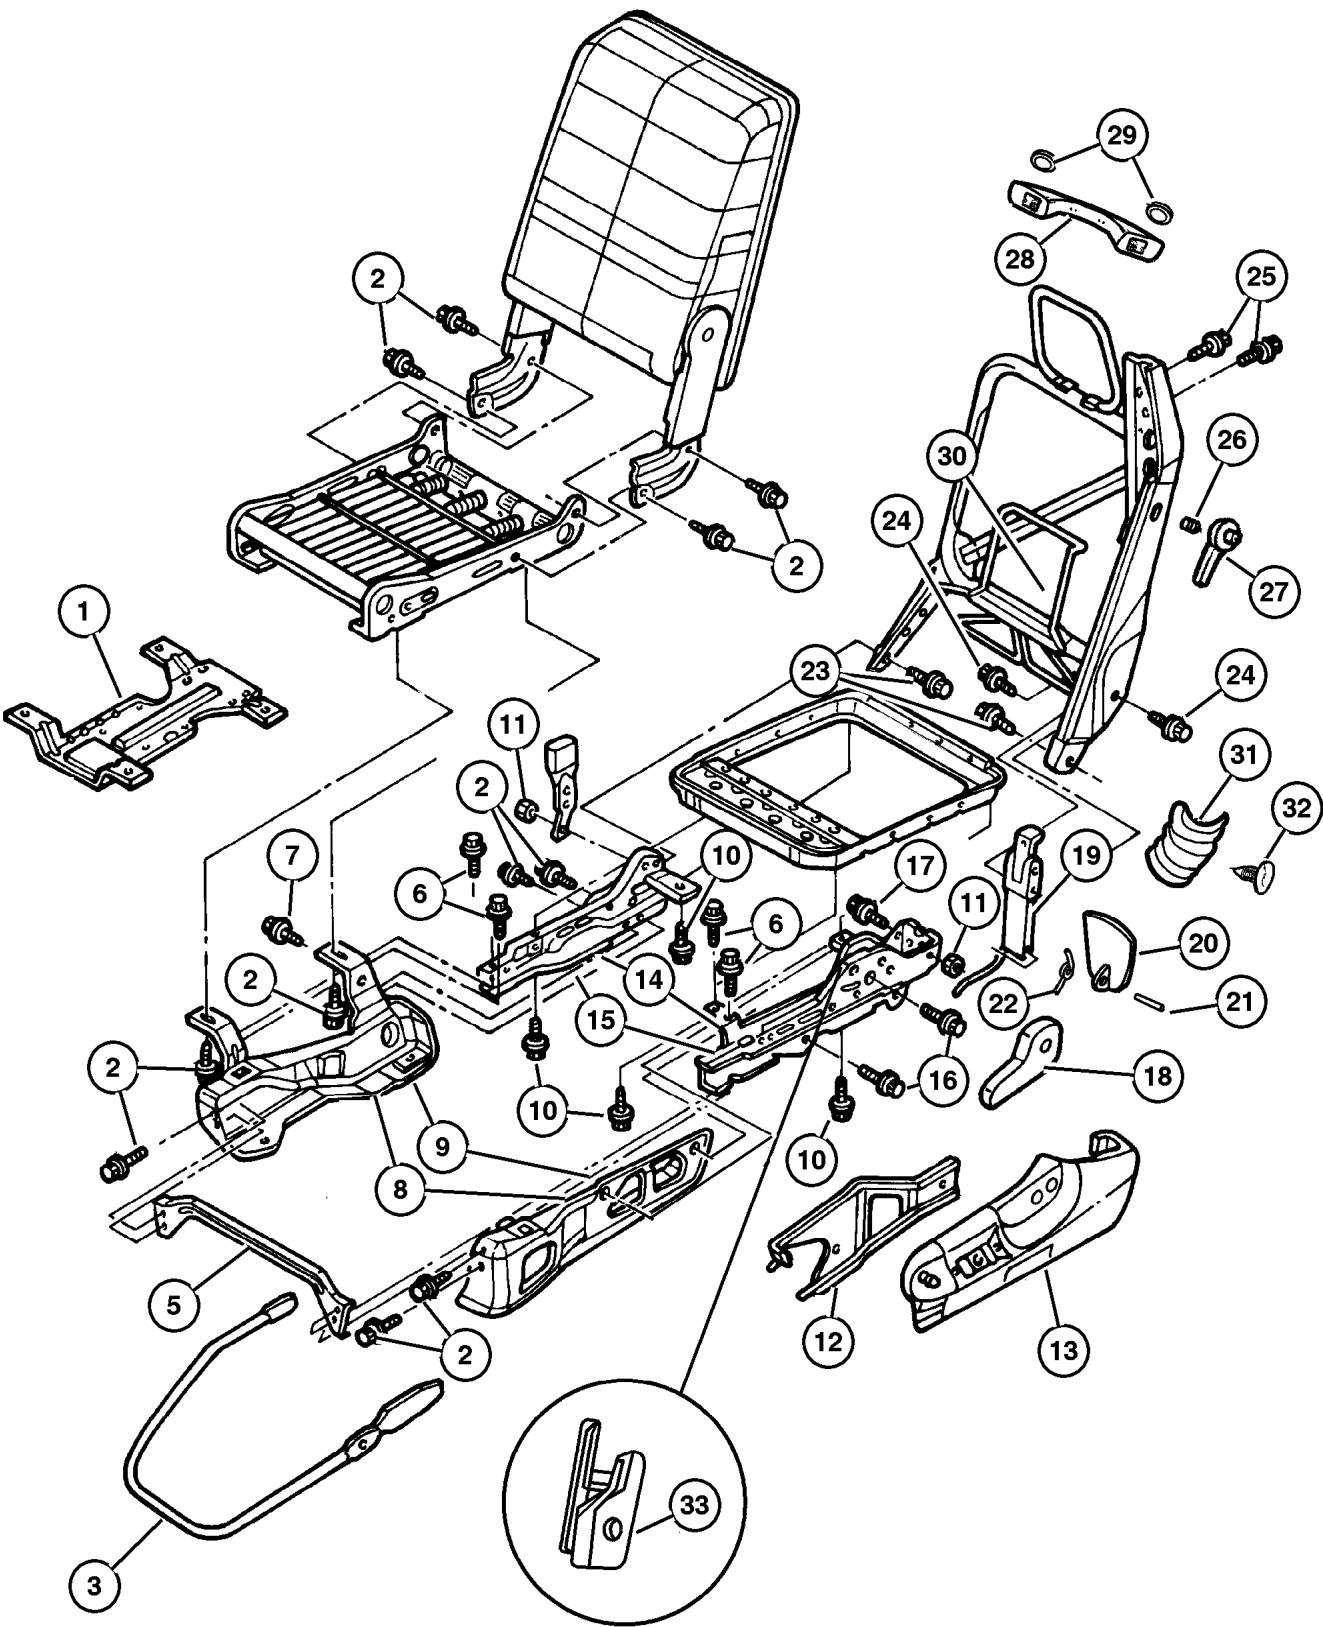Adjusters and Recliners
Figure IBE-820




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5010 305AA	2			33, 34			TY	
		2			33, 34			SX	
		2			33, 34			S9	
		2			33, 34			R1	
		2			33, 34			DP	
		2			33, 34			DZ	
		2	1, 6		31			SX	
		2	1, 6		31			S9	
		2	1, 6		31			R1	
		2	1, 6		31			DP	
21	5010 826AA	2			33, 34			TY	PIN, Roll
		2			33, 34			SX	
		2			33, 34			S9	
		2			33, 34			R1	
		2			33, 34			DP	
		2			33, 34			DZ	
		2	1, 6		31			SX	
		2	1, 6		31			S9	
		2	1, 6		31			R1	
		2	1, 6		31			DP	
22	5010 308AA	1			33, 34			TY	SPRING, Return Assist
		1			33, 34			SX	Passenger
		1			33, 34			S9	Passenger
		1			33, 34			R1	Passenger
		1			33, 34			DP	Passenger
		1			33, 34			DZ	Passenger
		1	1, 6		31			SX	Passenger
		1	1, 6		31			S9	Passenger
		1	1, 6		31			R1	Passenger
		1	1, 6		31			DP	Passenger
	5010 309AA	1			33, 34			TY	Driver
		1			33, 34			SX	Driver
		1			33, 34			S9	Driver
		1			33, 34			R1	Driver
		1			33, 34			DP	Driver
		1			33, 34			DZ	Driver
		1	1, 6		31			SX	Driver
		1	1, 6		31			S9	Driver

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

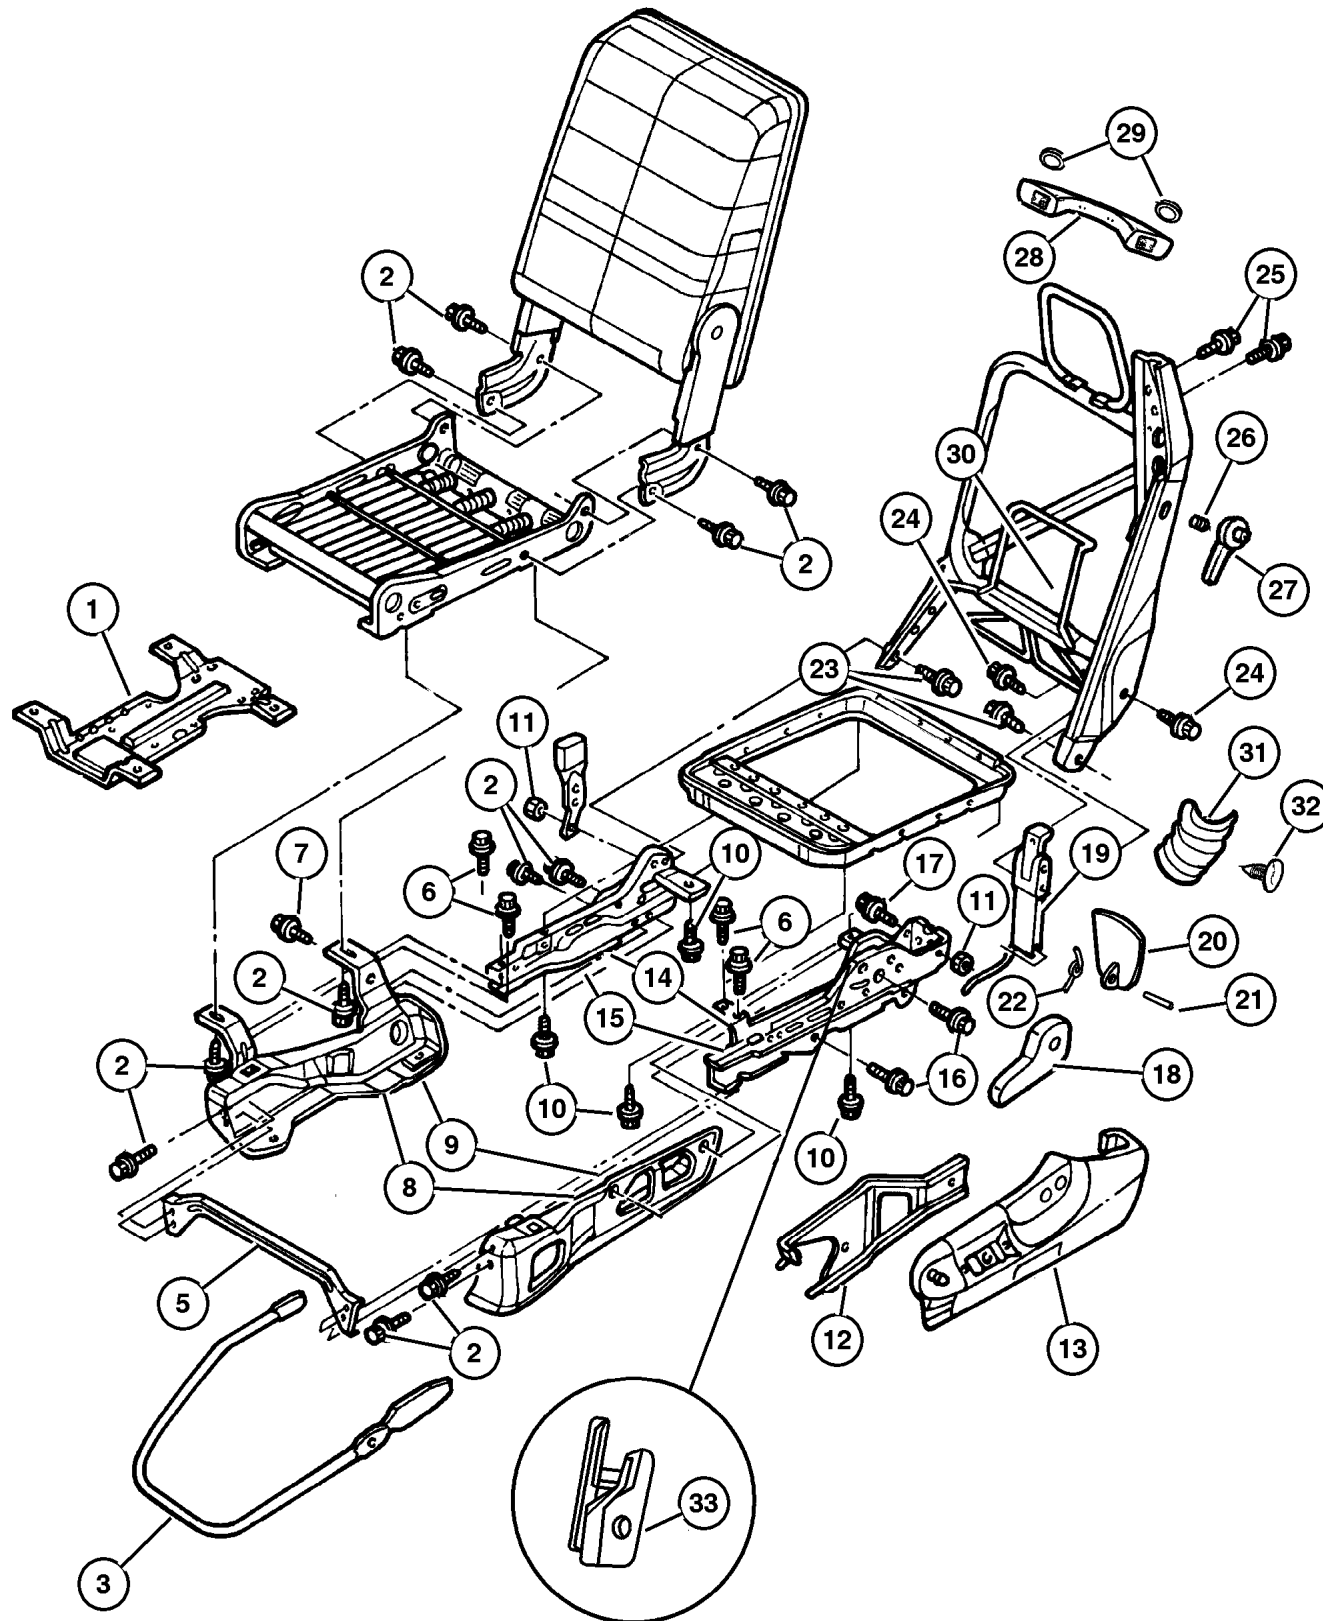Adjusters and Recliners Figure IBE-820



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
23	5010 813AA	1	1, 6		31			R1	Driver
		1	1, 6		31			DP	Driver
		2			33, 34			TY	Inboard,Passenger,Driver
		2			33, 34			SX	Inboard,Passenger,Driver
		2			33, 34			S9	Inboard,Passenger,Driver
		2			33, 34			R1	Inboard,Passenger,Driver
		2			33, 34			DP	Inboard,Passenger,Driver
		2			33, 34			DZ	Inboard,Passenger,Driver
		2	1, 6		31			SX	Inboard,Passenger,Driver
		2	1, 6		31			S9	Inboard,Passenger,Driver
		2	1, 6		31			R1	Inboard,Passenger,Driver
		2	1, 6		31			DP	Inboard,Passenger,Driver
		1			33, 34			TY	Outboard,Passenger
		1			33, 34			SX	Outboard,Passenger
		1			33, 34			S9	Outboard,Passenger
24	5010 815AA	1			33, 34			R1	Outboard,Passenger
		1			33, 34			DP	Outboard,Passenger
		1			33, 34			DZ	Outboard,Passenger
		1	1, 6		31			SX	Outboard,Passenger
		1	1, 6		31			S9	Outboard,Passenger
		1	1, 6		31			R1	Outboard,Passenger
		1	1, 6		31			DP	Outboard,Passenger
		4			33, 34			TY	Outboard,Passenger
		4			33, 34			SX	Outboard,Passenger
		4			33, 34			S9	Outboard,Passenger
25	5010 210AA	4			33, 34			R1	Outboard,Passenger
		4			33, 34			DP	Outboard,Passenger
		4			33, 34			DZ	Outboard,Passenger
		4	1, 6		31			SX	Outboard,Passenger
		4	1, 6		31			S9	Outboard,Passenger
		4	1, 6		31			R1	Outboard,Passenger
		4	1, 6		31			DP	Outboard,Passenger
		4	1, 6		31			TY	Outboard,Passenger
		4			33, 34			SX	Outboard,Passenger
		4			33, 34			S9	Outboard,Passenger
25	5010 818AA	4			33, 34			R1	Outboard,Passenger
		4			33, 34			DP	Outboard,Passenger
		4			33, 34			SX	Outboard,Passenger
		4			33, 34			S9	Outboard,Passenger
		4			33, 34			R1	Outboard,Passenger

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

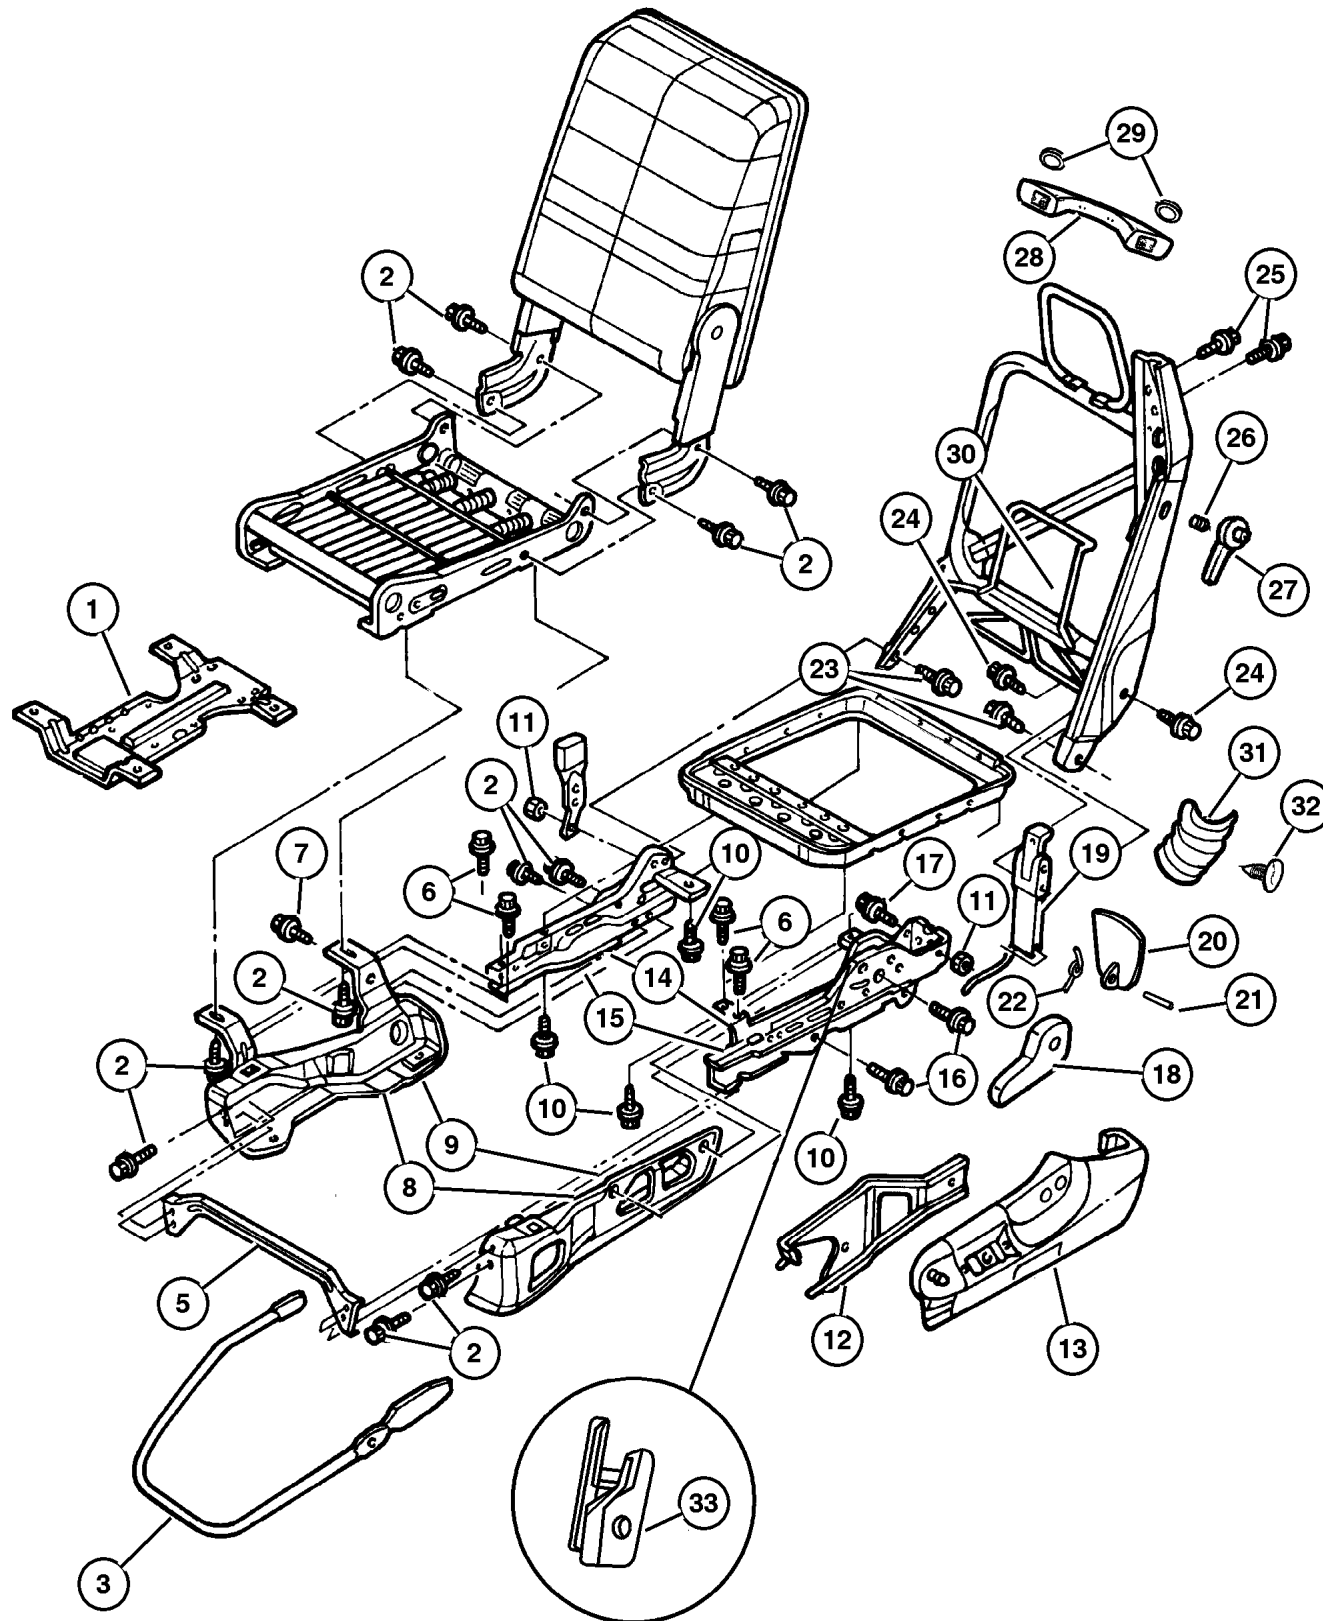
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Adjusters and Recliners Figure IBE-820



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
		4			33, 34			DZ	
		4	1, 6		31			SX	
		4	1, 6		31			S9	
		4	1, 6		31			R1	
		4	1, 6		31			DP	
26	5010 841AA	1	1, 6		31			SX	SPRING, Seat Latch Return
		1	1, 6		31			S9	
		1	1, 6		31			R1	
		1	1, 6		31			DP	
27	5010 260AA	1	1, 6		31			SX	HANDLE, Seat Recliner
		1	1, 6		31			S9	Passenger Dump
		1	1, 6		31			R1	Passenger Dump
		1	1, 6		31			DP	Passenger Dump
	5010 261AA	1	1, 6		31			SX	Driver Dump
		1	1, 6		31			S9	Driver Dump
		1	1, 6		31			R1	Driver Dump
		1	1, 6		31			DP	Driver Dump
28	RS18 1AZAA	2			33, 34			S9	HANDLE, Seat Back
		2			33, 34			SX	[AZ]
		2			33, 34			R1	[AZ]
		2			33, 34			DZ	[AZ]
		1			33, 34			DP	[AZ]
	RS18 1C3AA	2			33, 34			SX	[C3]
		2			33, 34			S9	[C3]
		2			33, 34			R1	[C3]
	RS18 1K5AA	2			33, 34			R1	[K9]
		2			33, 34			DP	[K9]
		2			33, 34			DZ	[K9]
29	RS80 1AZAA	4			33, 34			SX	CAP, Assist Handle Screw Cover
		4			33, 34			S9	[AZ]
		4			33, 34			R1	[AZ]
		4			33, 34			DZ	[AZ]
		1			33, 34			DP	[AZ]
	RS80 1C3AA	4			33, 34			SX	[C3]
		4			33, 34			S9	[C3]
		4			33, 34			R1	[C3]

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

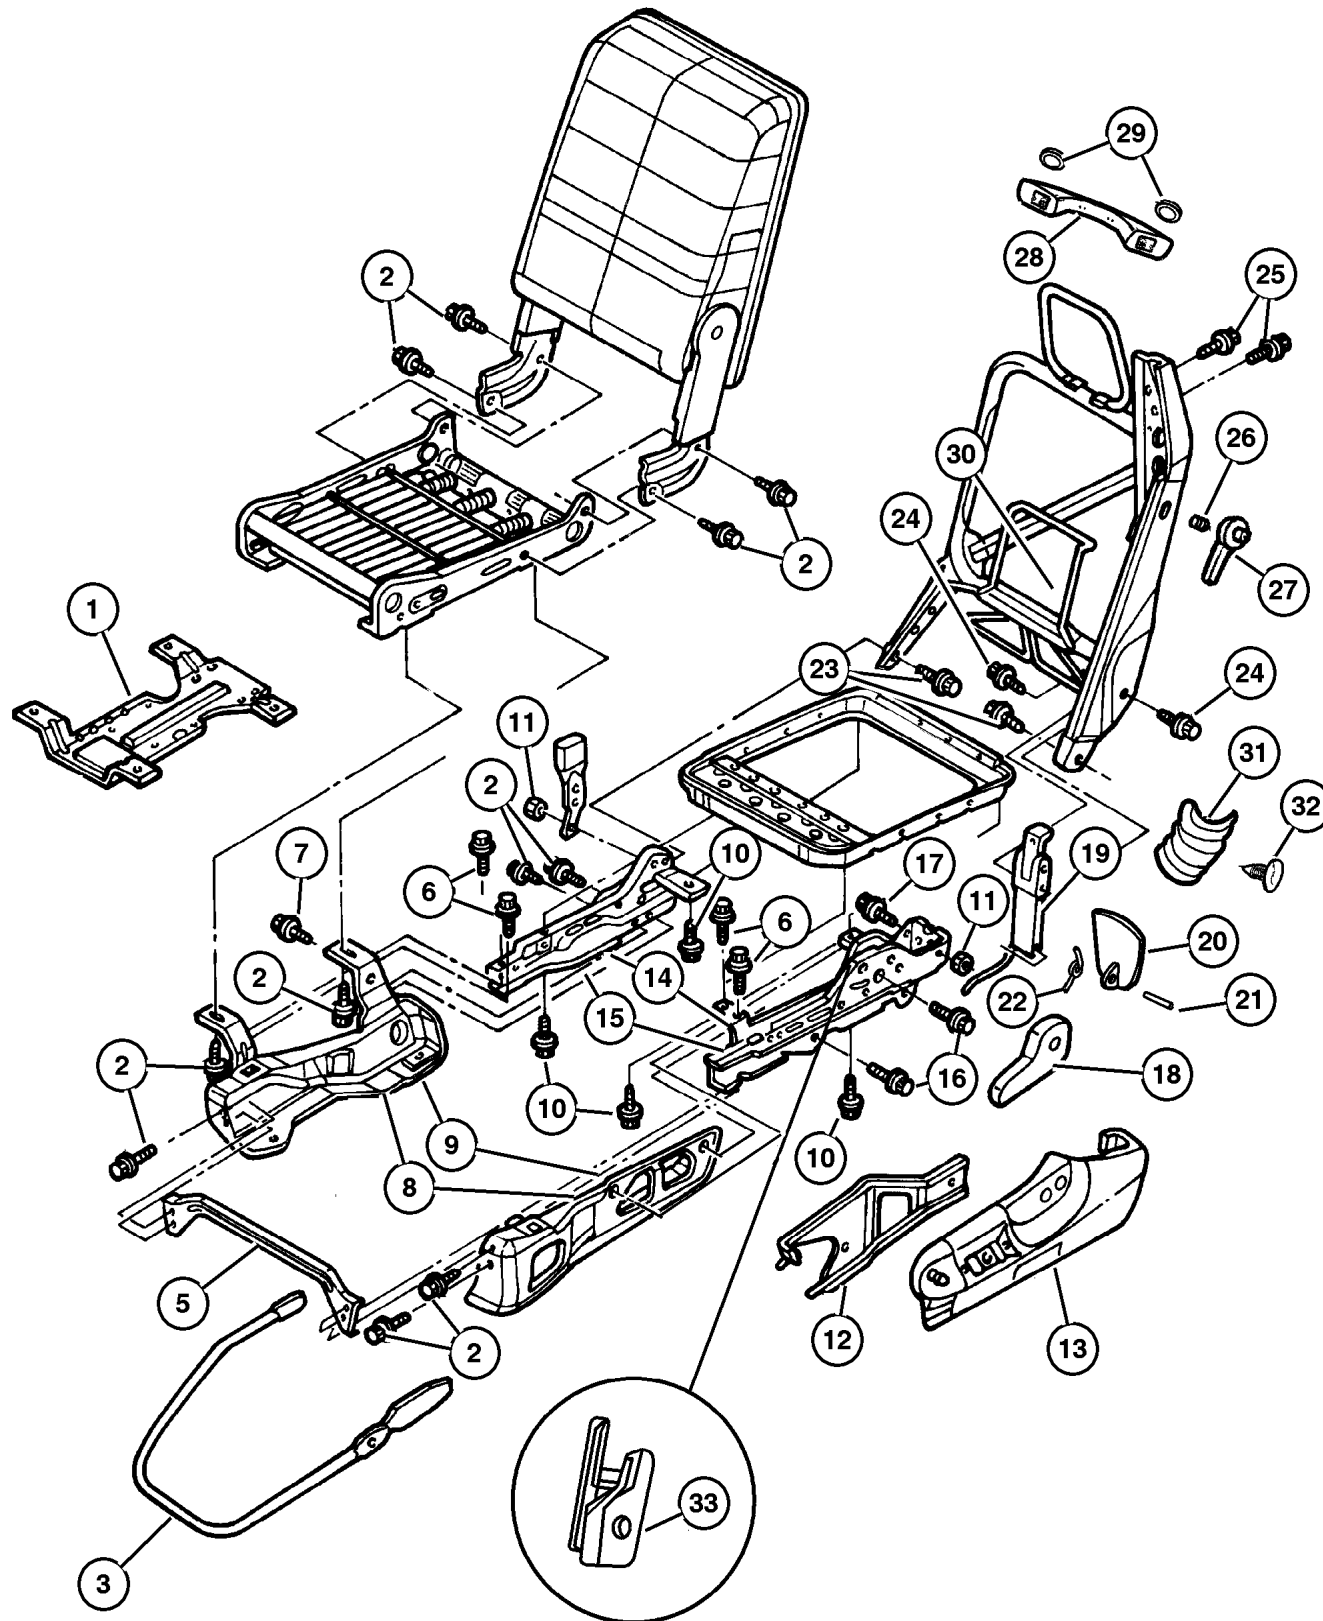
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Adjusters and Recliners Figure IBE-820



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
30	RS80 1K5AA	4			33, 34			R1	[K9]
		4			33, 34			DP	[K9]
		4			33, 34			DZ	[K9]
									LUMBAR, Support
30	5010 279AA	1			33, 34			R1	
		1			33, 34			DP	
		1			33, 34			DZ	Driver
		1	1, 6		31			R1	
		1	1, 6		31			DP	
31	5017 856AA	1			33, 34			DZ	Passenger BELLOWS, Seat Mechanism
	5010 197AA	2			33, 34			TY	
		2			33, 34			SX	
		2			33, 34			S9	
		2			33, 34			R1	
		2			33, 34			DP	
		2			33, 34			DZ	
		2	1, 6		31			SX	
		2	1, 6		31			S9	
		2	1, 6		31			R1	Without Easy Entry
32								DP	
									RETAINER, Push On
	5010 315AA	6			33, 34			TY	
		6			33, 34			SX	
		6			33, 34			S9	
		6			33, 34			R1	
		6			33, 34			DP	
		6			33, 34			DZ	
		6	1, 6		31			SX	
		6	1, 6		31			S9	
33								R1	
								DP	
									CAM, Memory Dump
	5014 198AA	1	1, 6		31			SX	Blue, Passenger
		1	1, 6		31			S9	Blue, Passenger
		1	1, 6		31			R1	Blue, Passenger
		1	1, 6		31			DP	Blue, Passenger
	5014 199AA	1	1, 6		31			SX	Gray, Driver
		1	1, 6		31			S9	Gray, Driver
		1	1, 6		31			R1	Gray, Driver

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

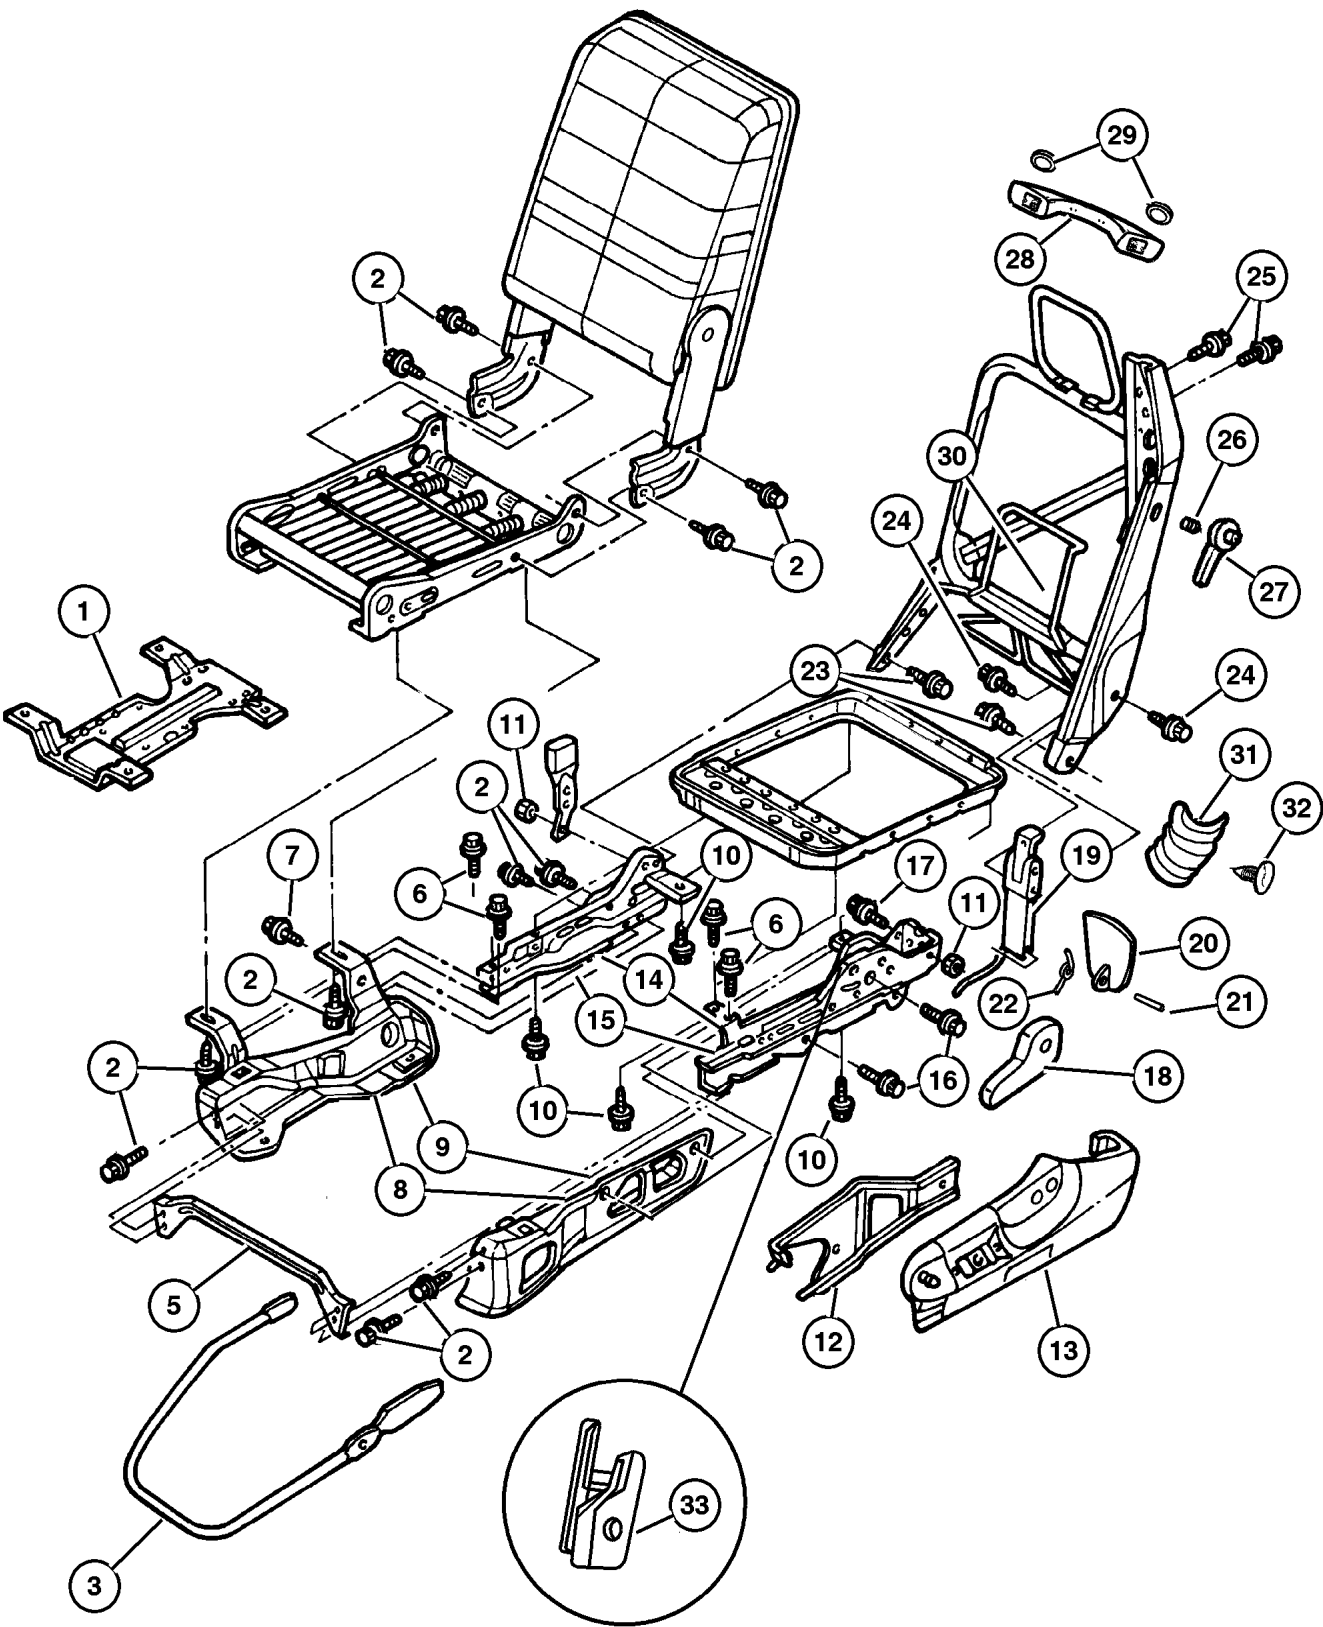
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Adjusters and Recliners
Figure IBE-820



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-34	5010 820AA-	1	1, 6		31			DP	Gray, Driver
		1	1, 6		31			SX	CABLE, Seat Adjuster
		1	1, 6		31			S9	
		1	1, 6		31			R1	
-35	5010 827AA-	1	1, 6		31			DP	SPRING, Seat Latch Return
		1	1, 6		31			SX	Inboard
		1	1, 6		31			S9	Inboard
		1	1, 6		31			R1	Inboard
-36	5010 895AA-	1	1, 6		31			DP	Inboard
		1	1, 6		31			SX	SPRING, Seat Latch Return
		1	1, 6		31			S9	Outboard
		1	1, 6		31			R1	Outboard
-37	5010 894AA-	1	1, 6		31			DP	Outboard
		1	1, 6		31			SX	SPRING, Seat Track Adjuster, Easy
		1	1, 6		31			S9	Entry Assist Between Adjusters
		1	1, 6		31			R1	
		1	1, 6		31			DP	


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

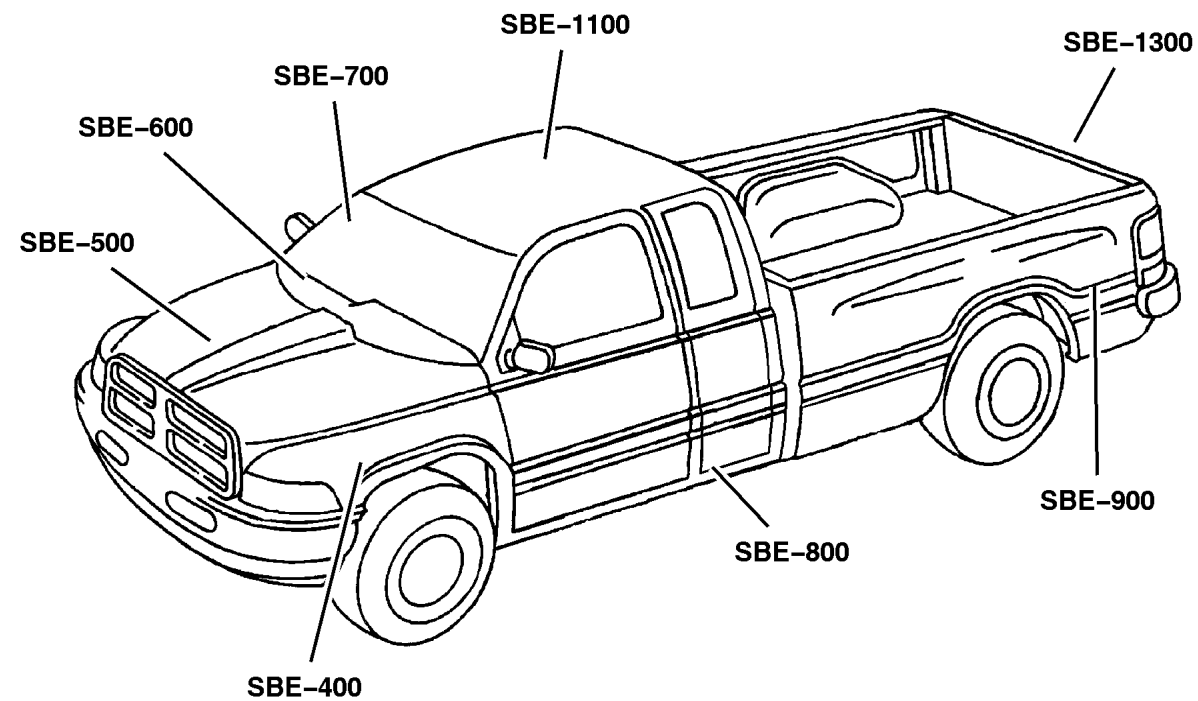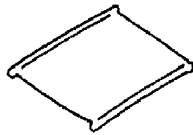

Group – SBE

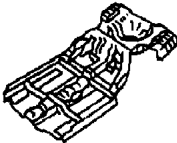

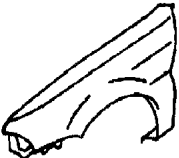
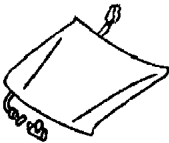
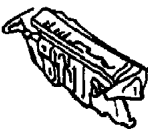

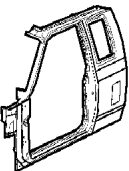

Body Sheet Metal Except Doors



Group – SBE

Body Sheet Metal Except Doors

SBE-1100 Roof Panel 	SBE-1300 Tailgate 		
---	---	--	--


SBE-200 Floor Pans 	SBE-300 Plugs 	SBE-400 Front Fenders 	SBE-500 Hood and Hood Release 
SBE-600 Cowl and Dash Panel 	SBE-700 Glass and Rear View Mirror 	SBE-800 Aperture Panel 	SBE-900 Quarter Panel and Pillar 

GROUP SBE - Body Sheet Metal Except Doors

Illustration Title	Group-Fig. No.
Floor Pans	
Floor Pan	Fig. SBE-210
Floor Box And Panel	Fig. SBE-220
Plugs	
Plugs	Fig. SBE-310
Front Fenders	
Fender Front	Fig. SBE-410
Hood and Hood Release	
Hood And Hood Release	Fig. SBE-510
Cowl and Dash Panel	
Cowl And Dash Panel	Fig. SBE-610
Glass and Rear View Mirror	
Glass, Windshield, Backlite, Quarter, Inside Mirror	Fig. SBE-710
Aperture Panel	
Aperture Panel Bodyside, 2 Door	Fig. SBE-810
Aperture Panel Bodyside, 4 Door	Fig. SBE-820
Quarter Panel and Pillar	
Quarter Panel	Fig. SBE-910
Roof Panel	
Roof Panel	Fig. SBE-1110
Tailgate	
Tailgate	Fig. SBE-1310



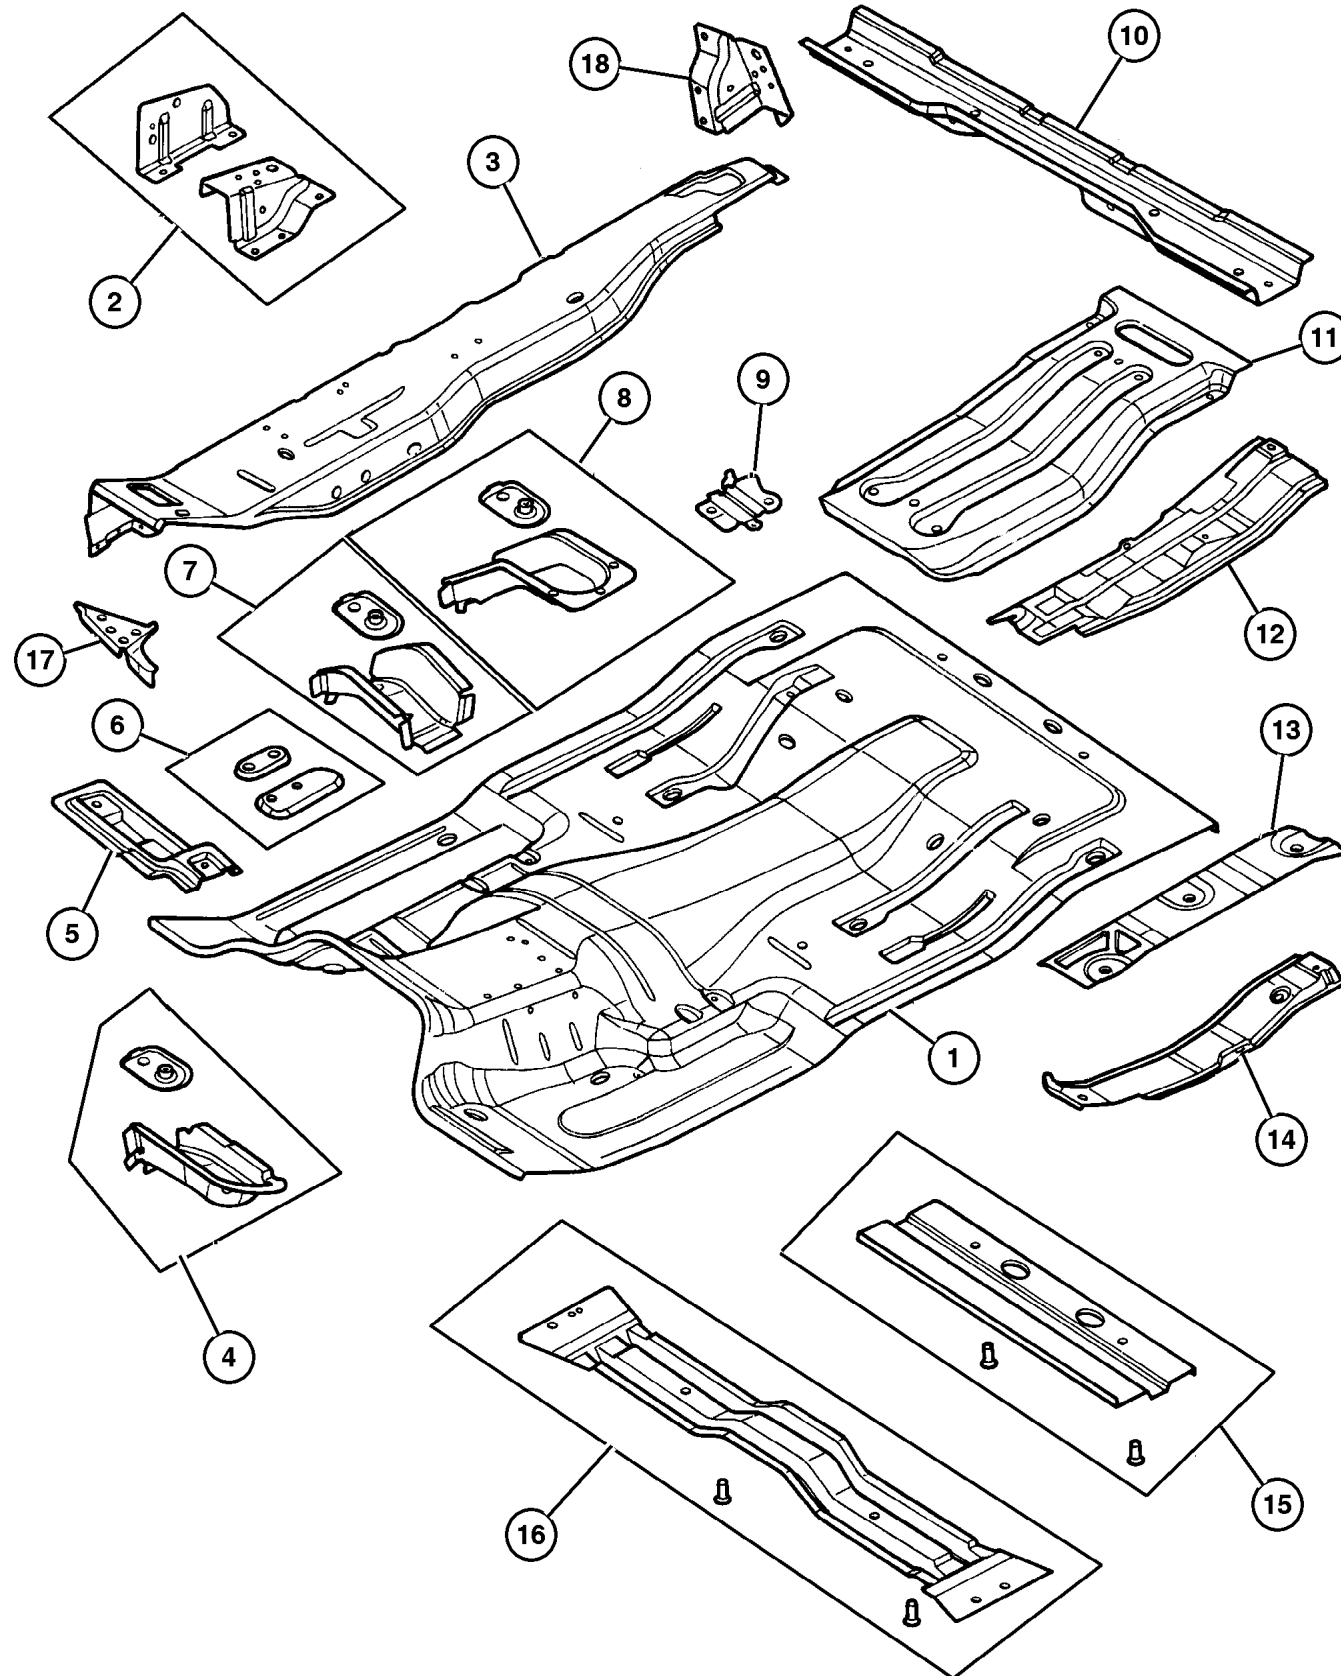**Floor Pan
Figure SBE-210**



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	55275 180AC	1							PANEL, Front Floor Pan
2	5527 5000	1							SUPPORT, Rear Seat Right
	5527 5001	1							Left
3	5527 5152	1							PANEL, Floor Outer Right
	5527 5153	1							Left
4	5527 4926	1							SUPPORT, Underbody Hold Down Right
	55274 927AB	1							Left
5	5527 5084	2							SUPPORT, Front Seat, Front
6	5527 5087	1							SUPPORT, Front Seat, Left,Rear
7	5527 5184	1							SUPPORT, Underbody Hold Down Right,Middle
	5527 5185	1							Left,Middle
8	5527 4580	2							SUPPORT, Underbody Hold Down
9	55275 327AB	1							BRACKET, Jack
10	5527 5362	1							CROSSMEMBER, Rear Floor
11	5527 4638	1							REINFORCEMENT, Floor Pan
12	5527 5296	1							SHIELD, Heat, Upper Right
13	5527 4656	1							SHIELD, Heat, Center
14	55274 655AB	1							SHIELD, Heat, Upper Left
15	5525 4778	1							REINFORCEMENT, Seat Belt Anchor
16	5527 5165	1							REINFORCEMENT, Front Seat
17	5527 4570	1							SUPPORT, Cowl Side Right
	5527 4571	1							Left
18	5527 4628	1	1, 6		31				EXTENSION, Cab Back Right
	5527 4629	1	1, 6		31				Left
	5527 5420	1			33, 34				Right
	5527 5421	1			33, 34				Left

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

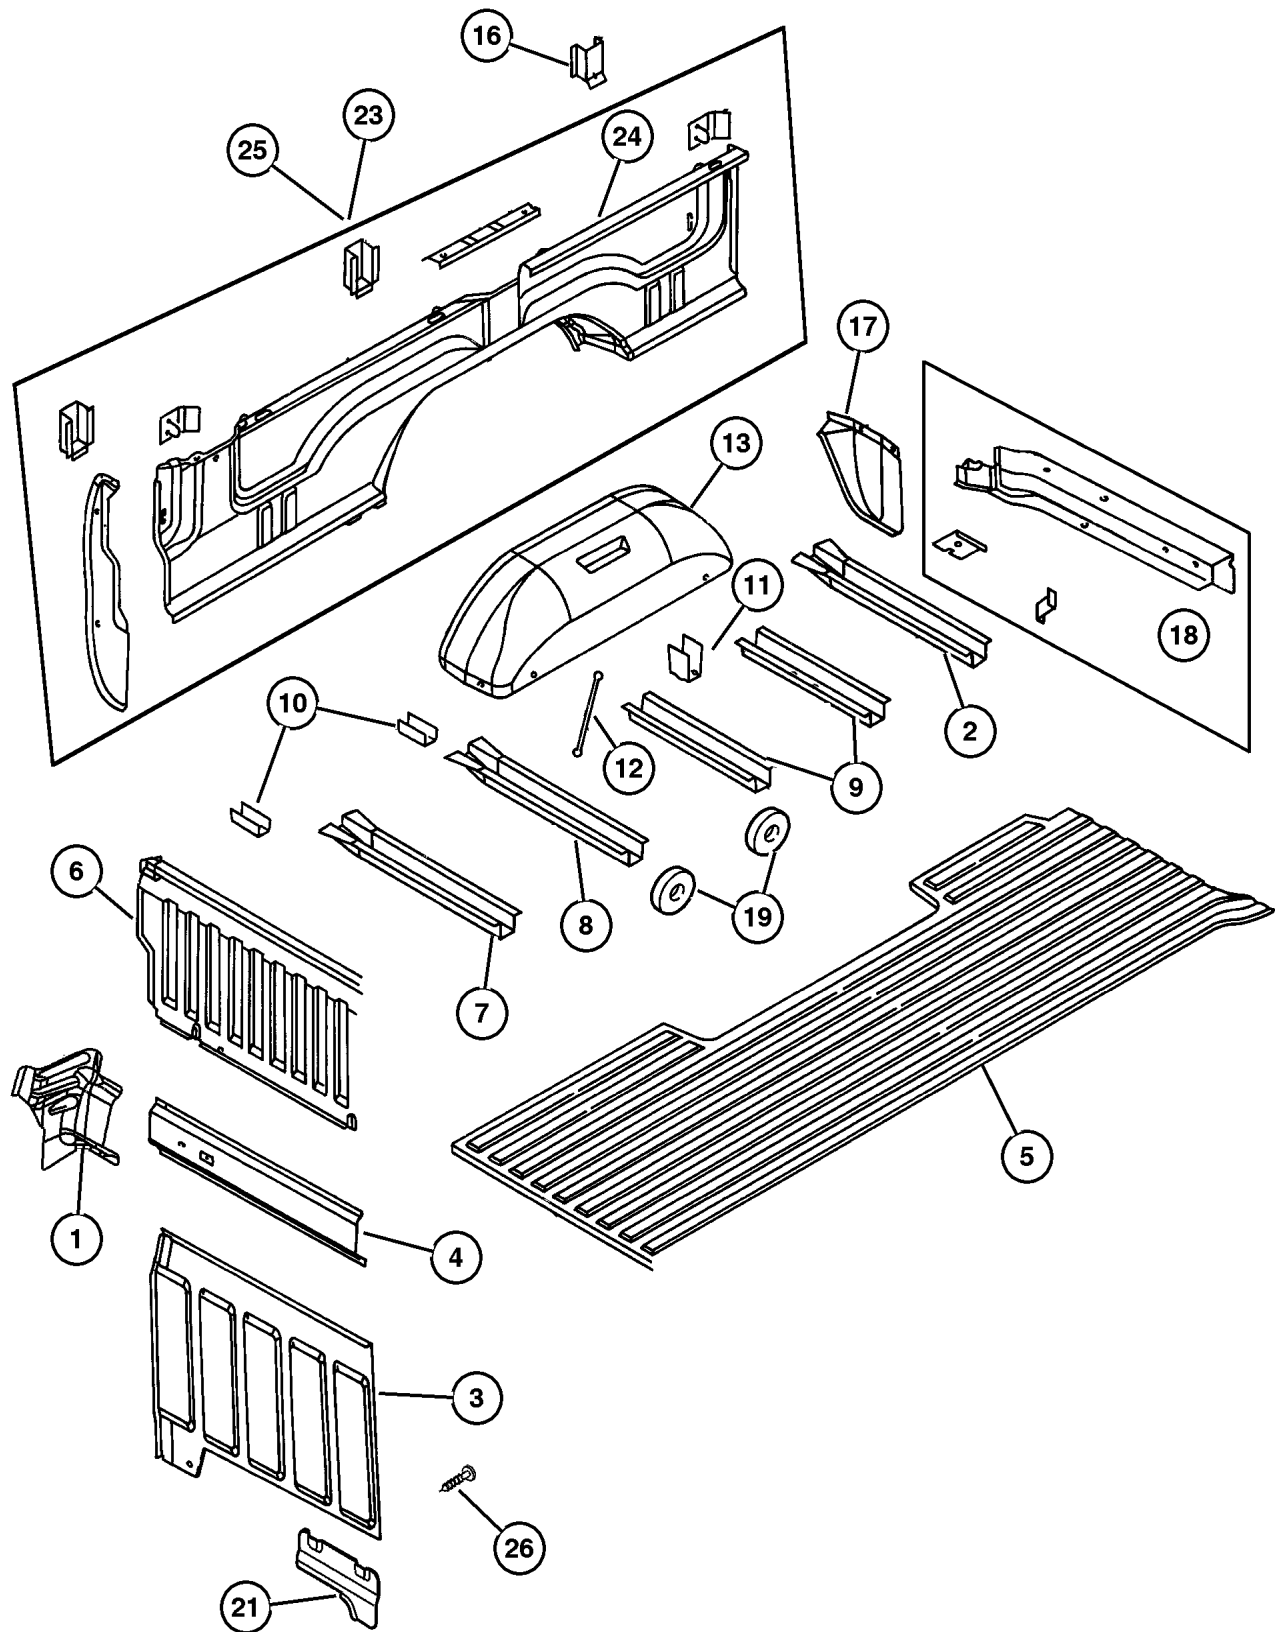
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Floor Box And Panel
Figure SBE-220



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									EXTENSION, Cab Back
	5527 4628	1	1, 6		31				Right
	5527 4629	1	1, 6		31				Left
	5527 5420	1			33, 34				Right
	5527 5421	1			33, 34				Left
2	5534 5618	1							CROSSMEMBER, Rear Box
3	5527 5107	1							PANEL, Cab Back
4	55023 544AB	1							REINFORCEMENT, Cab Back
5									PANEL, Box Floor
	55275 375AB	1			34				
	5527 5374	1	1, 2, 6, 7		31, 33				
6	5502 3626	1							PANEL, Front Box
7	5527 5253	1							CROSSMEMBER, Rear Box
8									CROSSMEMBER, Rear Box
	5527 4766	2	1, 2, 6, 7		31, 33				6 1/2 Foot Box
	55275 476AA	1			34				8 Foot Box
	5527 4766	2			34				6 1/2 Foot Box
9									CROSSMEMBER, Rear Box
	5527 4770	2			34				#3 and #4 For 8 Foot Box
		1	1, 2, 6, 7		31, 33				#3 For 6 1/2 Box
10	5534 6091	2							TAPPING PLATE, Floor
									Crossmember, Tie Downs, Also Served in Crossmember #1 and #2
11									BRACKET, Box Floor Center, (NOT SERVICED) (Not Serviced)
12									BRACE, Box Side Wheelhouse
	5534 5735	2							Left
	5534 5734	2							Right
13	5502 3614	2							WHEELHOUSE, Rear Inner
-14	5513 5298	4	1, 6		31				PLATE, Inner Quarter Baffle
-15	6502 328	4	1, 6		31				PIN, Push, M5.80x13.00
16	55274 806AB	1							REINFORCEMENT, Quarter Rear
									Corner, Right
17									EXTENSION, Wheel House
	5534 4824	1	1, 2						Right
	5534 4825	2	3, 8		34				Left
18	5527 5186	1							SILL, Box
19	55275 466AA	4							ISOLATOR
-20	5527 5188	2							TAPPING PLATE, Sill to Frame

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Floor Box And Panel
Figure SBE-220

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
21									REINFORCEMENT, Cab Back to
									Floor
	5527 5092	1							Right
	5527 5093	1							Left
-22									SCREW AND WASHER, Hex Head,
									M10x1.5x45
	6503 298	6	1, 2, 6, 7		31, 33				Box Hold Down
		8			34				Box Hold Down
23									PANEL, Box Side
	4856 377	1	1, 2, 6, 7		31, 33				6 1/2 Foot Box, Left
	4856 381	1			34				8 Foot Box, Left
	4856 376	1	1, 2, 6, 7		31, 33				6 1/2 Foot Box, Right
	4856 380	1			34				8 Foot Box, Right
24									PANEL, Box Side Outer
	5502 3618	1	1, 2, 6, 7		31, 33				6 1/2 Foot Box, Right
	5502 3620	1			34				8 Foot Box, Right
	5502 3619	1	1, 2, 6, 7		31, 33				6 1/2 Foot Box, Left
	5502 3621	1			34				8 Foot Box, Left
25									PANEL, Box Side, Dual Wheels
	4856 384	1			34				Right
	4856 385	1			34				Left
26	6503 221	2							PIN


DODGE RAM QUAD CAB/CLUB CAB (BE)								
SERIES	LINE	BODY	ENGINE	TRANSMISSION				
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.				
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.				
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual				
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual				
			EAA = All Engines	DEE = 6 Speed HD Manual				
			EAG = All Gas Engines					

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Plugs
Figure SBE-310

ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	4440 486	2							PLUG, Body, 19.05mm x 31.75mm, Left
2	55276 319AA	2							PLUG, Floor
3	4475 385	2							PLUG, Plenum Lower Push Rod Access
4	5503 5931	2							SEAL, Plenum Drain
5	4674 441	2							PLUG, Body, .75 Diameter, Body Side
6	1774 076	2							PLUG, Body Side
7	55257 380AA	8							PLUG, Floor Pan Outer Drain
8	4586 055	AR							PLUG, Floor Pan
-9	5600 6990	1							PLUG, Sealing, Antenna Hole
-10	52108 193AB-	1							PLUG, Dash Panel Clutch Opening
-11	4084 000	2							PLUG, Hood, Rear Round
-12	4475 385	2							PLUG, Hood Rear Oval

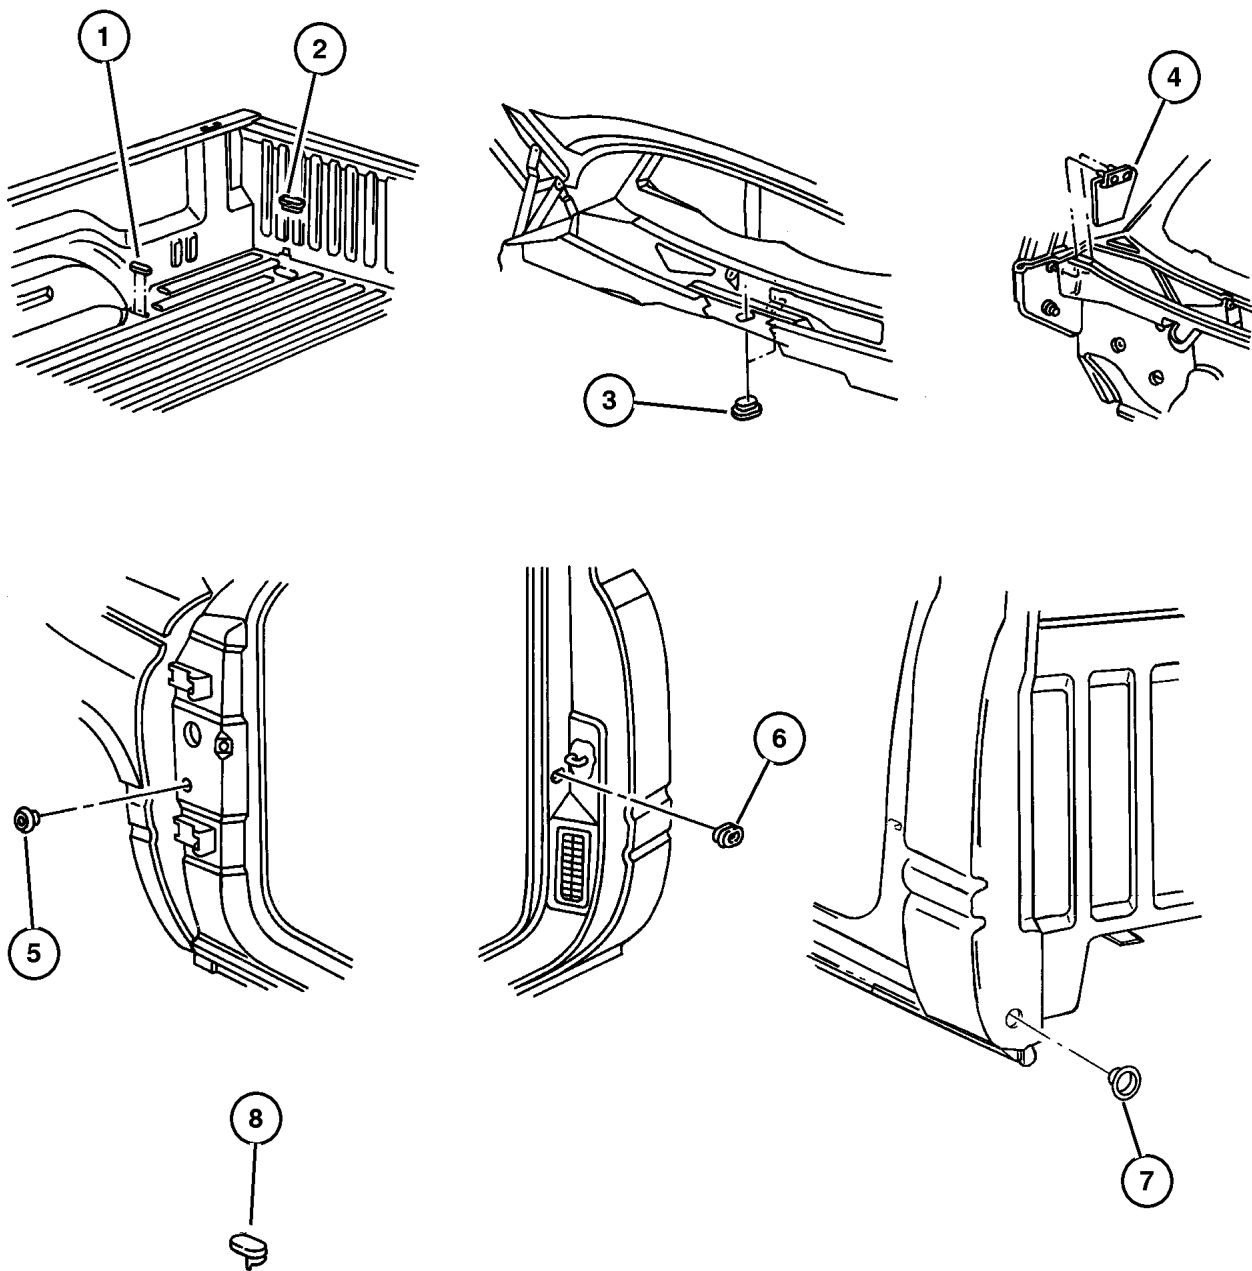


DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

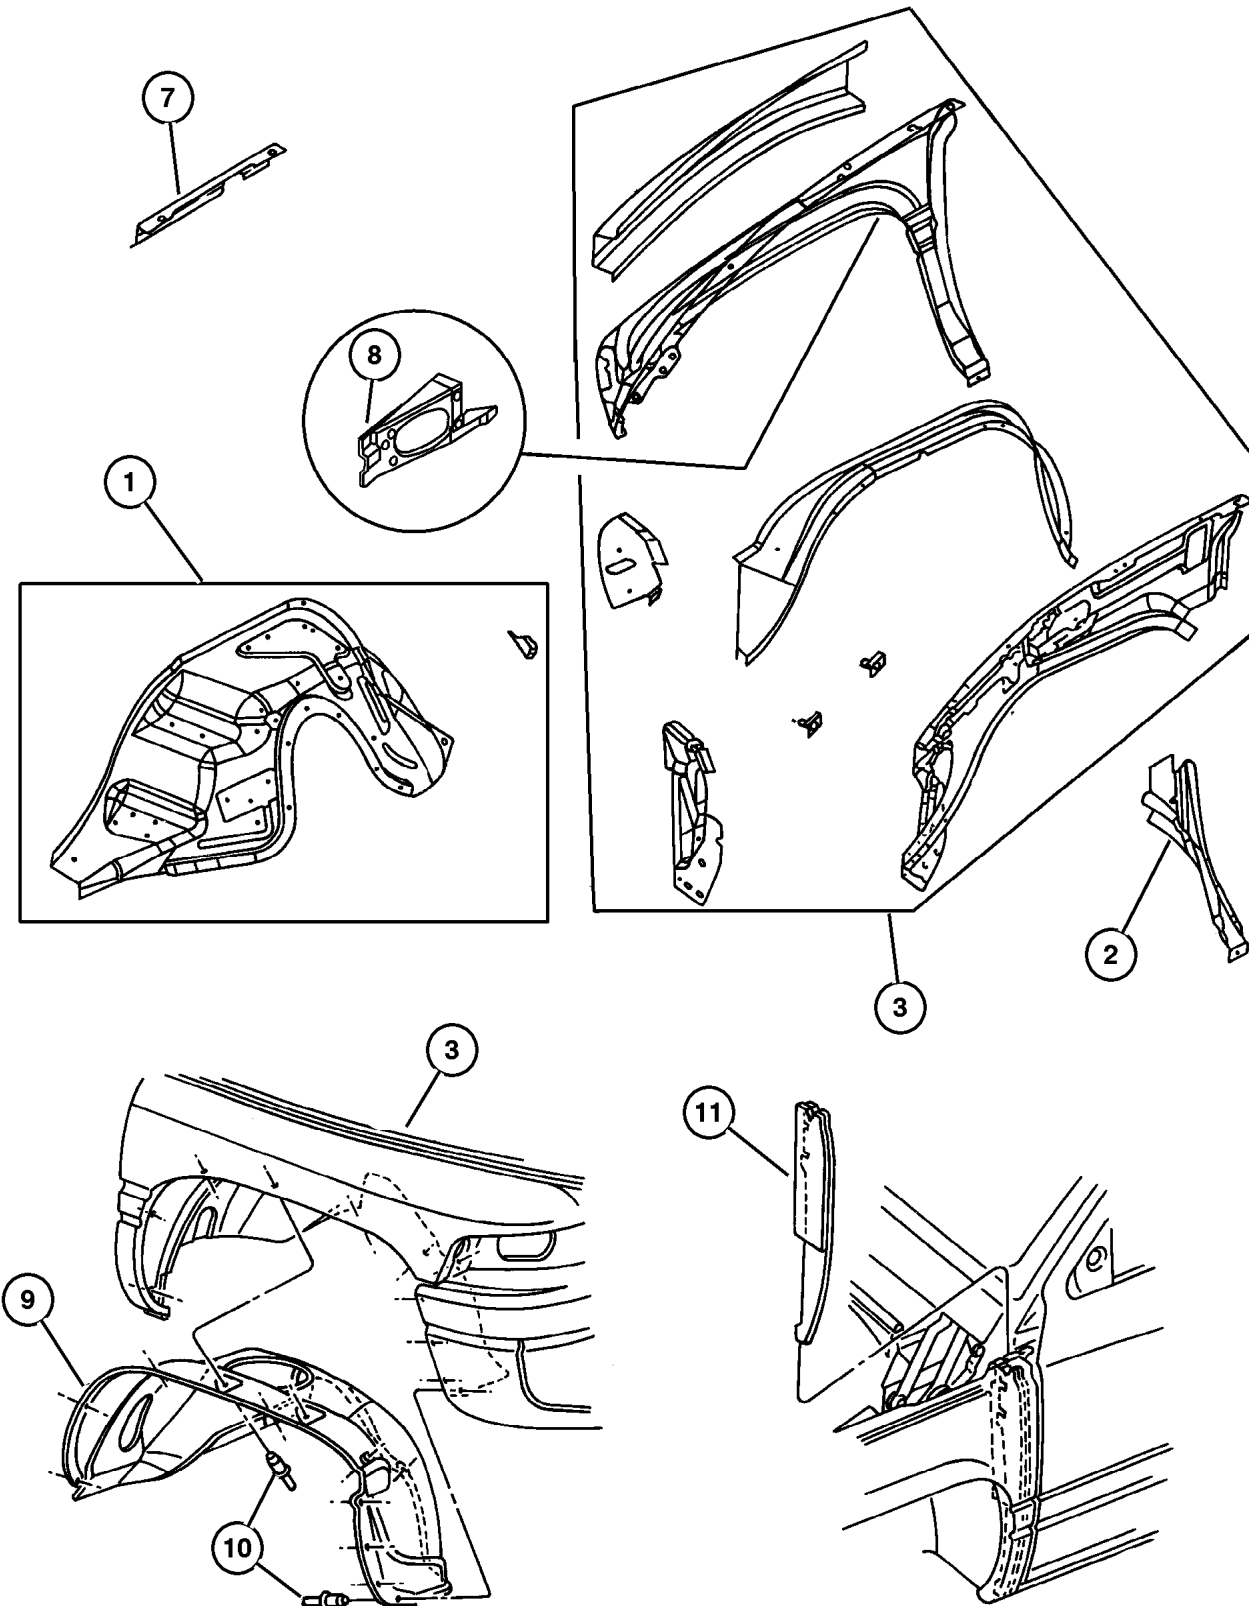Fender Front
Figure SBE-410



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									WHEELHOUSE, Front Inner
	55275 310AH	1							Right
	55275 311AH	1							Left
2									REINFORCEMENT, Fender
	5502 3530	1							Right
	5502 3531	1							Left
3									PANEL, Fender
	55234 708AG	1							Right
	55234 709AG	1							Left
-4	6503 757	2							SCREW AND WASHER, Hex Head, M8-1.25x22.00, Fender Outer to Aperture
-5	6502 282	12							SCREW, Hex Head, M8x1.25x30, Fender Inner to Radiator Closure
-6	6503 461	AR							SCREW, Fender Outer to Radiator Closure
7									REINFORCEMENT, Fender
	5523 4648	1							Upper,Right
	5523 4649	1							Upper,Left
8									REINFORCEMENT, Fender
	55275 396AB	1							Right
	55275 397AB	1							Left
9									SHIELD, Wheelhouse
	5534 6052	1	6, 7, 8						4 Wheel Drive, Right
	5534 6053	1	6, 7, 8						4 Wheel Drive, Left
	5534 6014	1	1, 2, 3						2 Wheel Drive, Right
	5534 6015	1	1, 2, 3						2 Wheel Drive, Left
10	3420 1631	18							RIVET, M6.25x28 Black
11									SEAL, Fender To Cowl
	55135 108AB	1							Right
	55135 109AB	1							Left
-12									LABEL, Battery Jump Start
	5304 0076	2							
	5304 0081	1							CANADA

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines


TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Hood And Hood Release

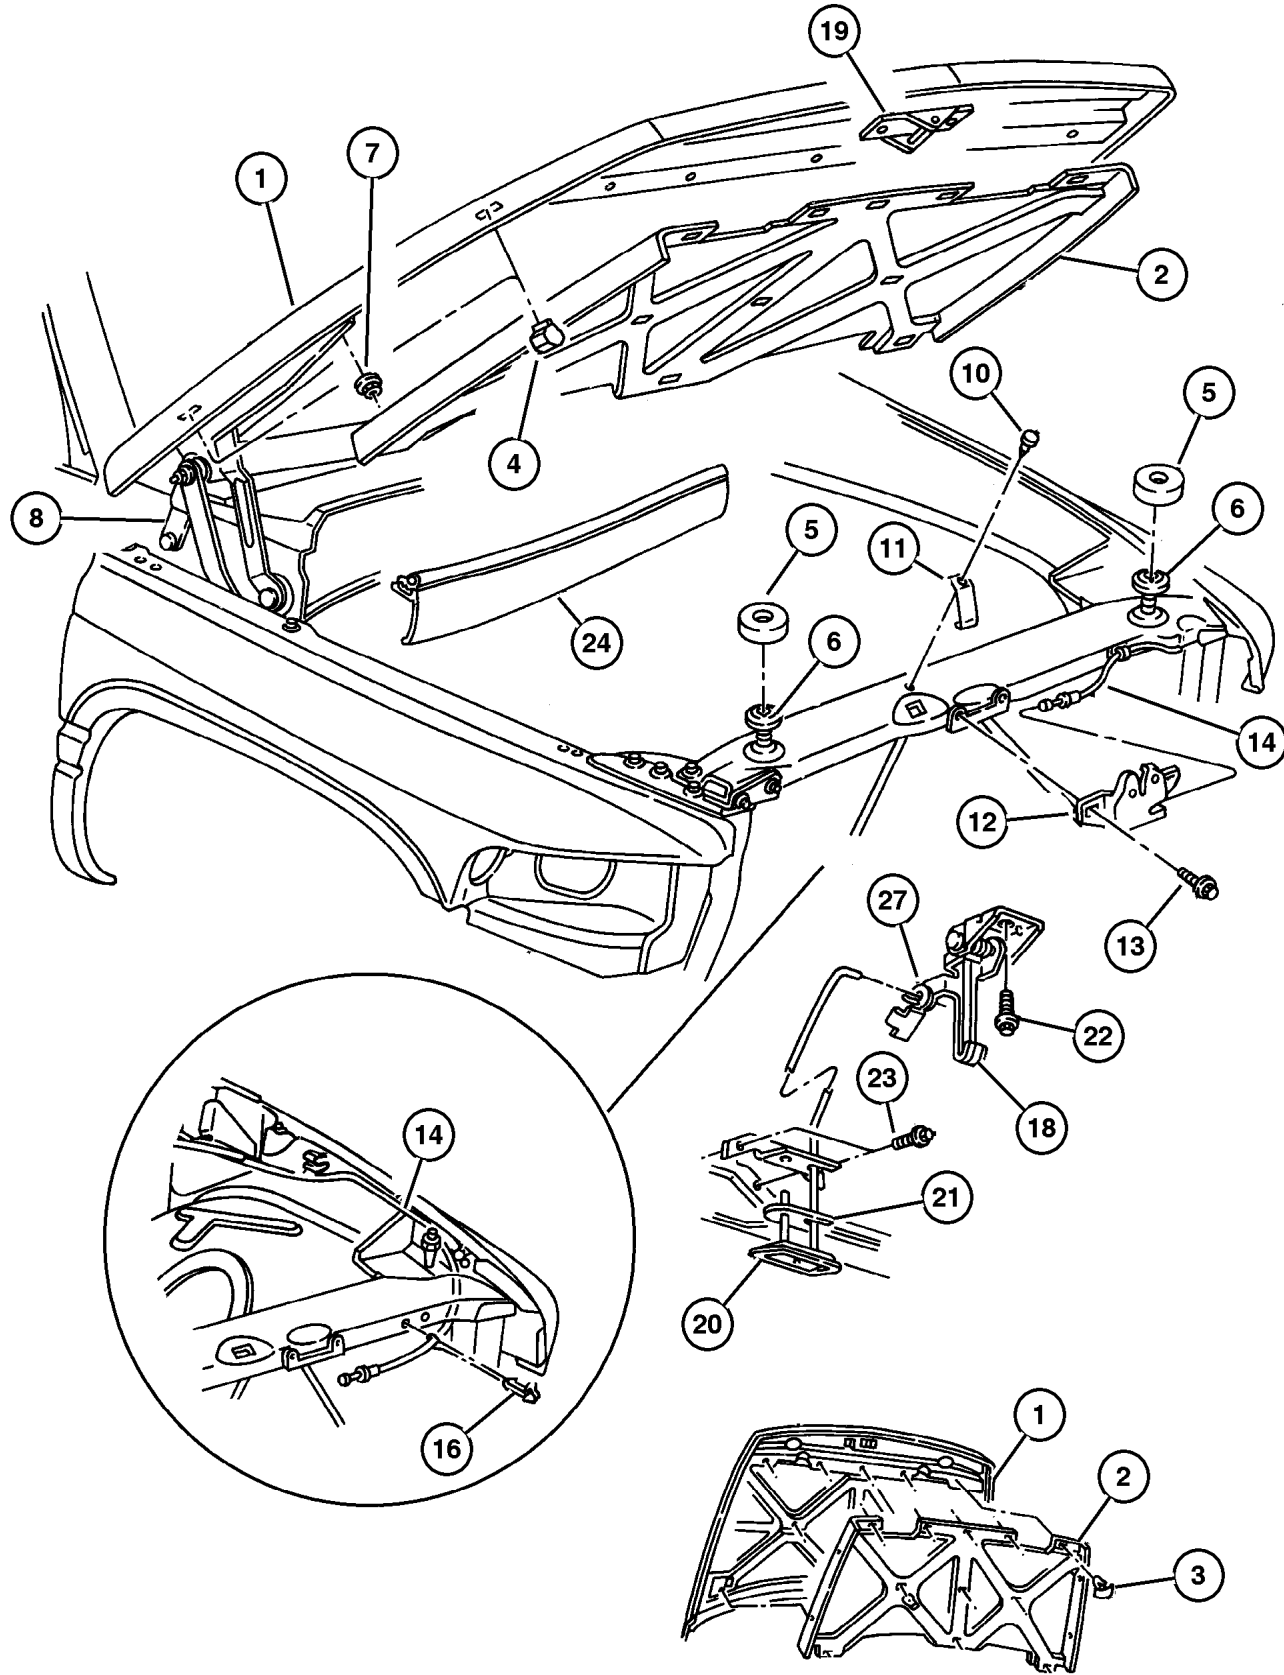Figure SBE-510

[illegible]


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

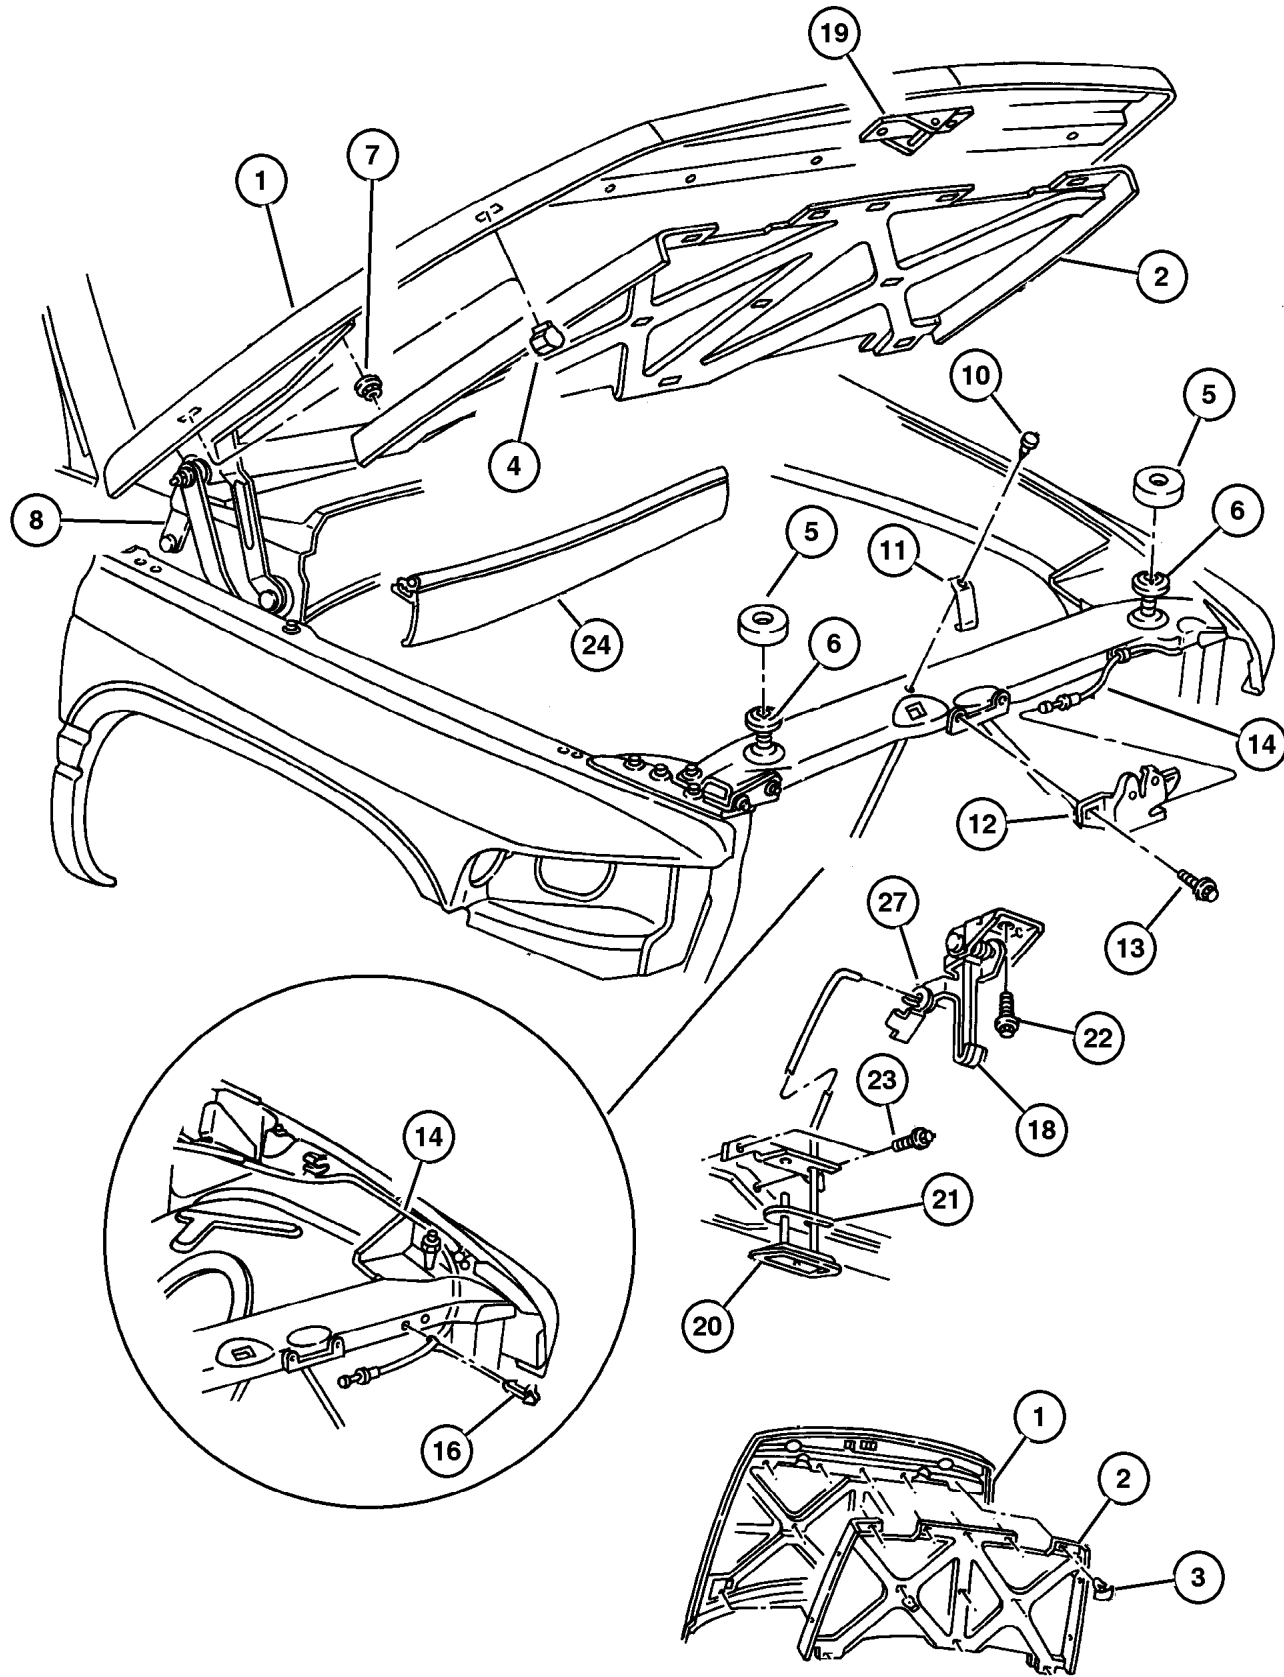Hood And Hood Release
Figure SBE-510



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-28	6100 557	2							BOLT AND CONED WASHER, Hex Head, M6x20x14, Attach Clip Cable to Body

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Cowl And Dash Panel
Figure SBE-610


ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	55274 586AB	1							PANEL, Dash
2	5527 5298	1							PANEL, Cowl And Plenum
3									PANEL, Plenum End
	5527 4644	1							Right
	5527 4645	1							Left
4	55274 643AB	1							PANEL, Cowl And Plenum
5	5502 3557	1							SUPPORT, Steering Column, Upper
6									PANEL, Cowl Side
	5527 5302	1							Right
	5527 5303	1							Left
-7	6502 871	2							BOLT, M6.3x22.80, Attach Panel to Cowl Vent Grille
8	5527 4575	1							SUPPORT, Steering Column, Lower
9									SEAL, Cowl
	5513 5342	1							Right
	5513 5343	1							Left
10	6503 274	4							NUT, Push On
11	55215 683AD	1							INSULATION, Dash Panel, Diesel
12	55036 871AB	1							PANEL, Cowl Top
13									INSULATION, Dash Panel
	55350 212AD	1							Diesel
	55350 755AB	1							Gas Only
14	6503 339	5							NUT, Plastic
15	6503 338	AR							STUD, .250-20x16.2
16									REINFORCEMENT, Hood Hinge
	5527 4588	1							Right
	5527 4589	1							Left
17	5523 4637	1							REINFORCEMENT, Brake Booster
18	52108 193AB	1							PLUG, Dash Panel Opening

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

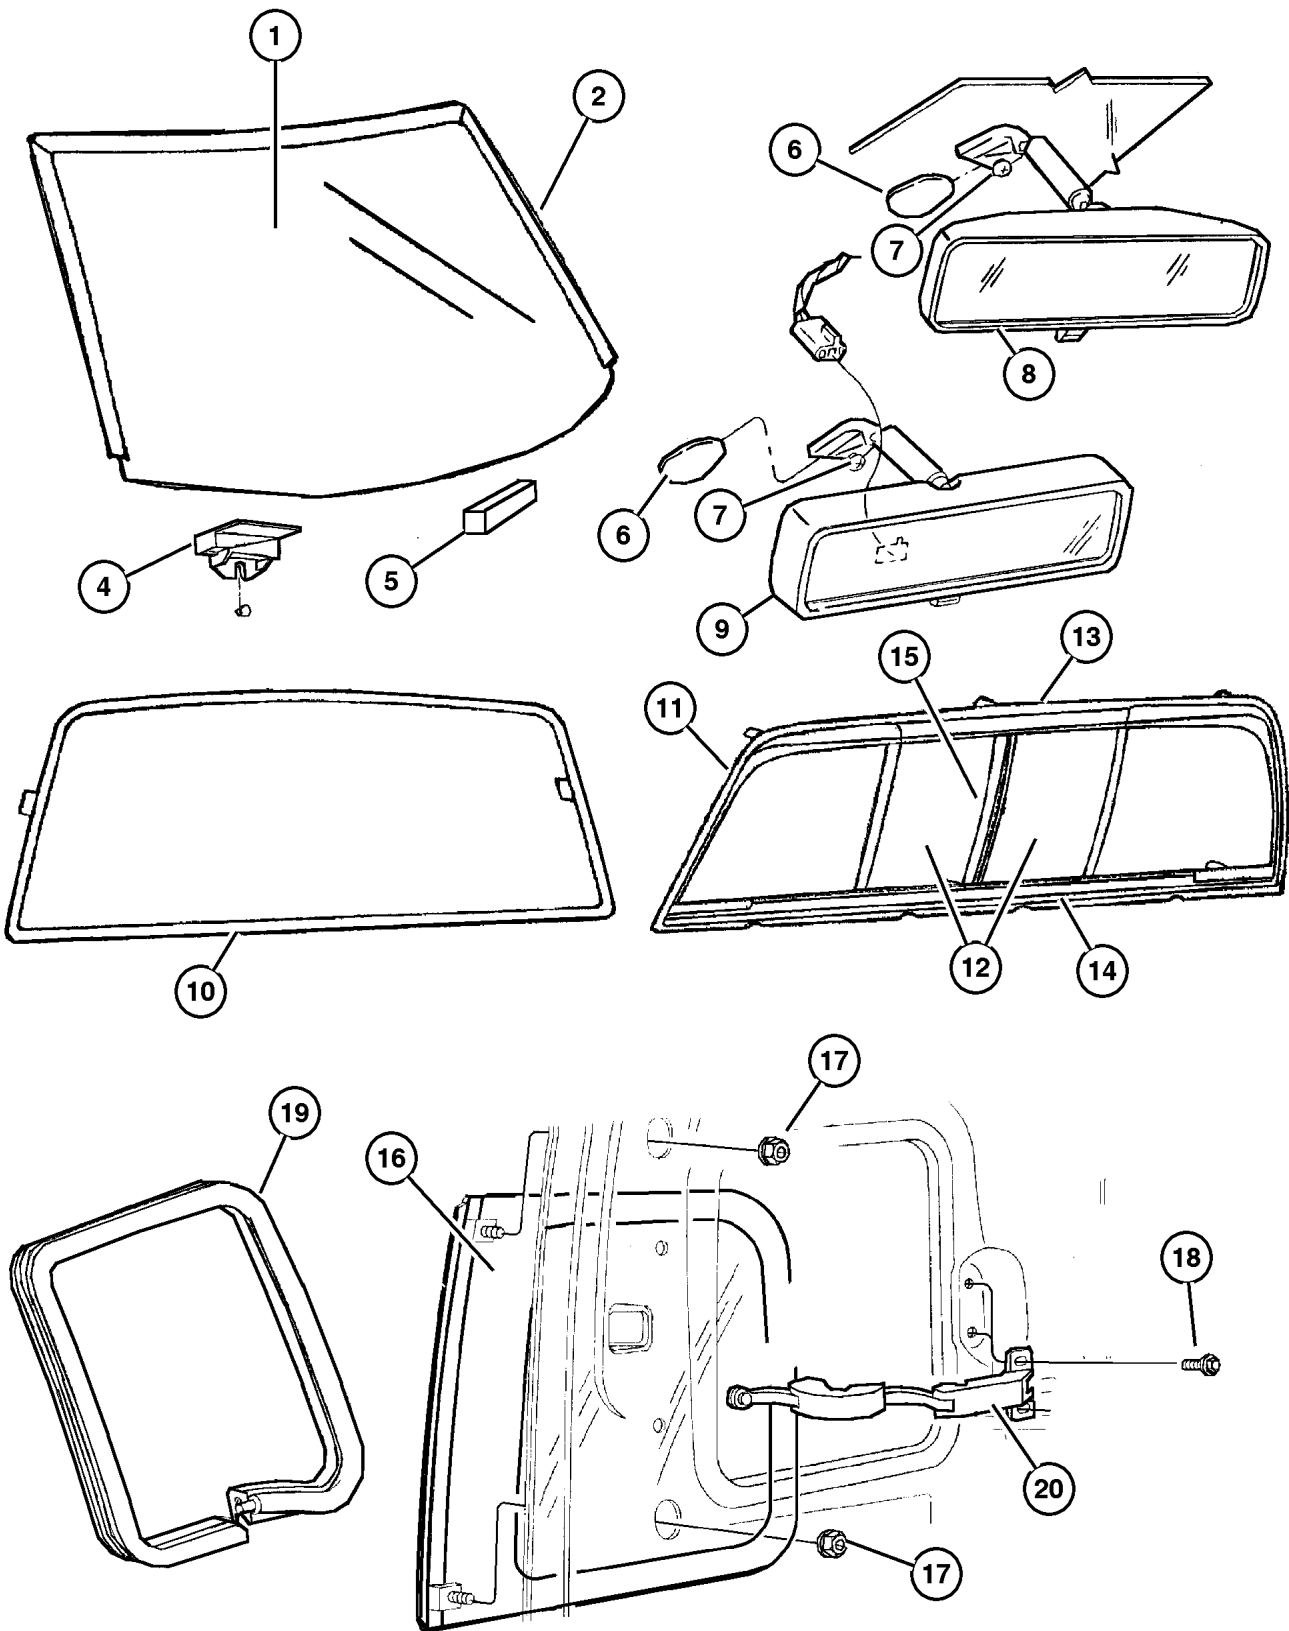Glass, Windshield, Backlite, Quarter, Inside Mirror
Figure SBE-710



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	55076 400AD	1							WINDSHIELD
2	5527 5017	1							MOLDING, Windshield
-3	4864 015	1							INSTALLATION PACKAGE, Windshield Glass
4	55275 388AB	2							SPACER, Windshield
5	4278 662	1							SPACER
6	5507 6401	1							BUTTON, Rear View Mirror
7	6031 094	1							SCREW, Pan Head Tapping, .19- 16x.375
8	5507 6403	1							MIRROR, Inside Rear View
9	5507 6402	1							MIRROR, Inside Rear View, Electric
10	5534 6646	1							BACKLITE, Tinted
11	55346 644AE	1							BACKLITE, Solar
12									GLASS, Backlite, Sliding
	5012 880AB	1							Right
	5012 881AB	1							Left
13	5011 532AA	1							CHANNEL, Sliding Backlite, Upper
14	5011 533AA	1							CHANNEL, Sliding Backlite, Lower
15	4773 094AB	1							LATCH, Sliding Window
16									GLASS, Quarter Window, Club Cab Only, For Quad Cab See Doors
	4897 130AA	1	1, 6		31				Right
	4897 131AA	1	1, 6		31				Left
17	6500 284	2							NUT, Hex, M6x1.00
18	6503 958	4	1, 6		31				SCREW AND WASHER, Self Tapping, M6x1x22
19	5513 5048	2	1, 6		31				SEAL, Quarter Window
20	4673 452	AR	1, 6		31				LATCH, Vent Window


DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500 2, 7 = 2500 3, 8 = 3500	31 = Club Cab (138WB) 33 = QuadCab(138WB) 34 = Quad Cab (154 WB)	ELF, EL0 = 5.2L 8 Cil. ETC, ET0, ETH = 5.9L 6 Cil. EML, EMM,EM0 = 5.9L 8 Cil. EWA, EW0 = 8.0L 10 Cyl. EAA = All Engines EAG = All Gas Engines	DGP = 47RE 4 Speed Auto. DGT, DG0 = 46RE 4 Speed Auto. DDX, DDC = 5 Speed HD Manual DDP, DD0 = 5 Speed Manual DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

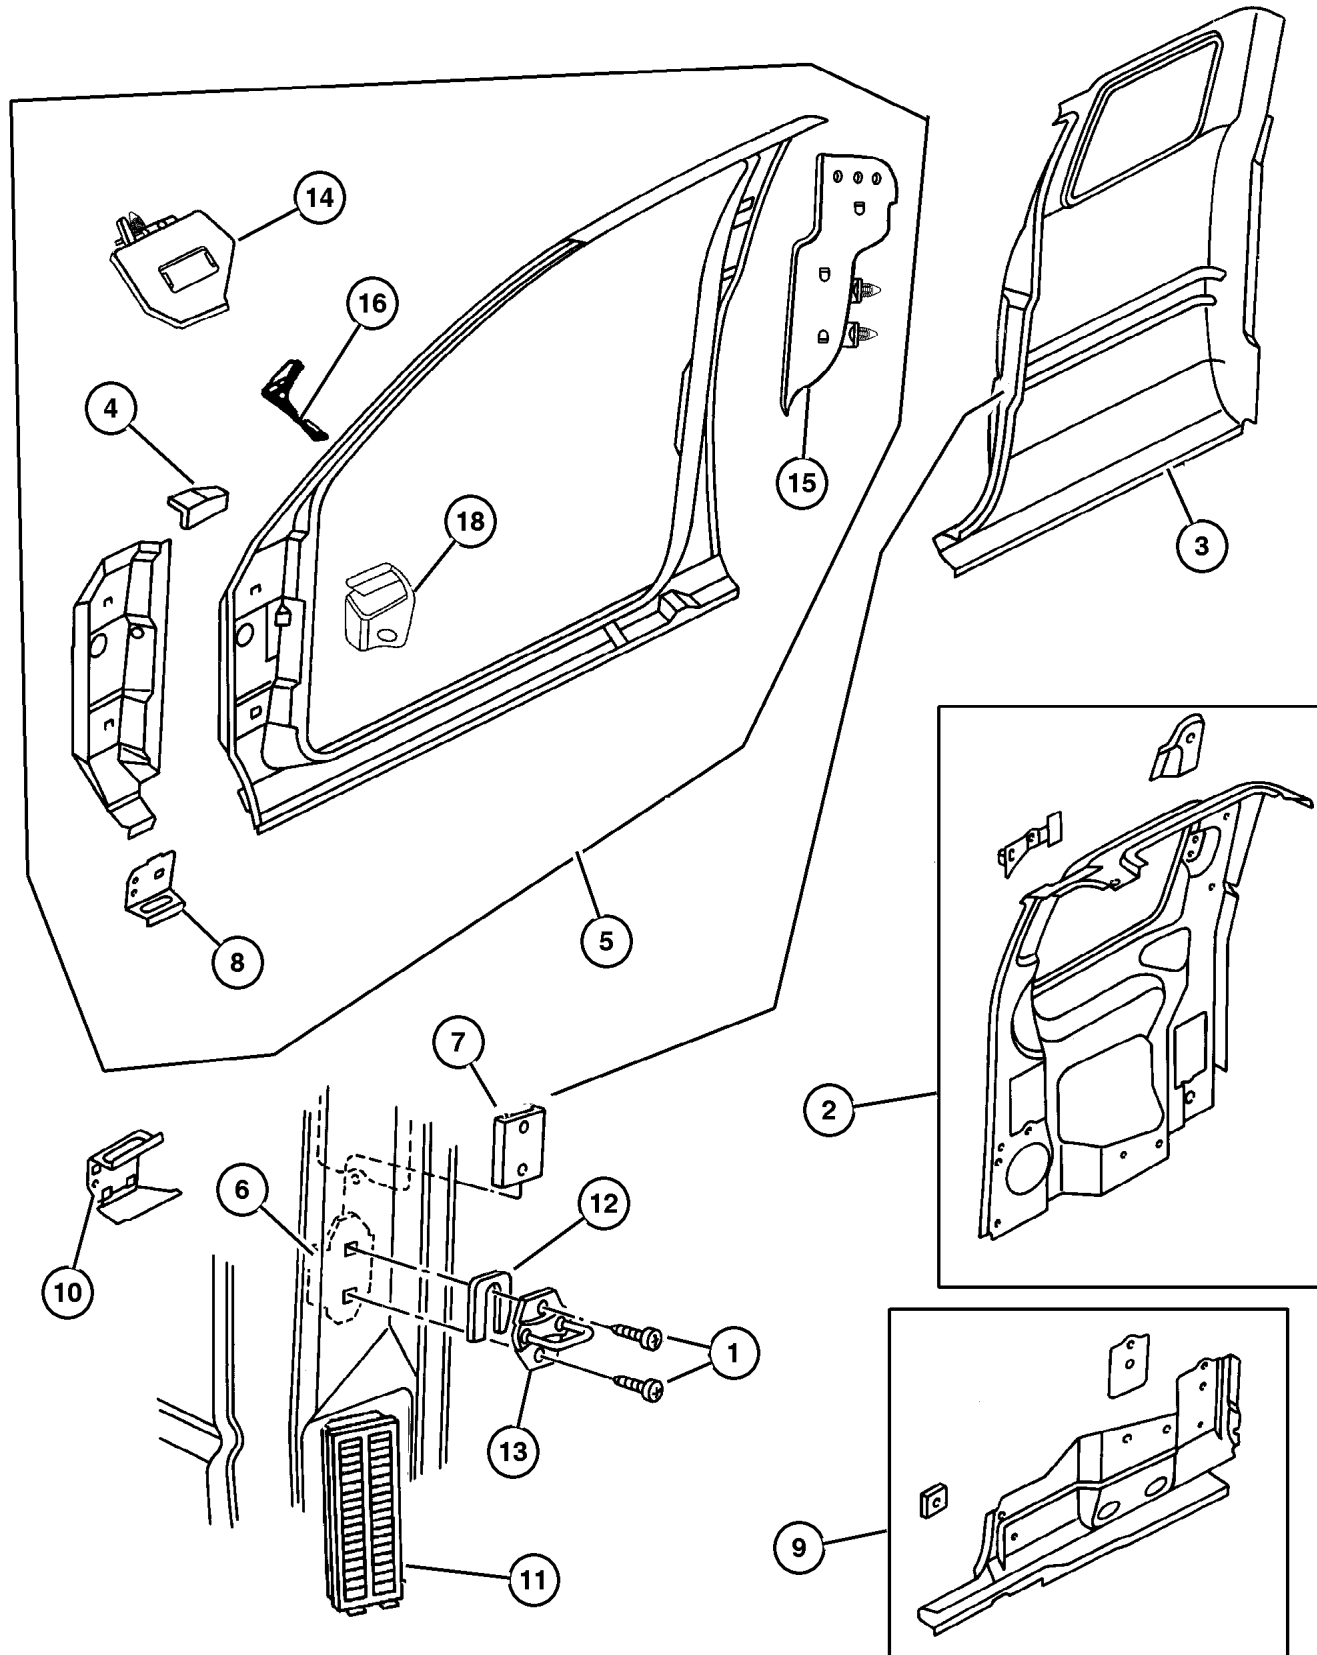Aperture Panel Bodyside, 2 Door Figure SBE-810



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
Note: Item #5 is to be modified for a club cab. Remove panel 55274840-1 which is used on a standard cab.									
1	6503 120	4							SCREW AND WASHER, Button Head Torx
2									PANEL, Quarter Inner Right
	5527 5266	1	1, 6		31				
	5527 5267	1	1, 6		31				Left
3									PANEL, Quarter Right
	5527 4622	1	1, 6		31				Left
	5527 4623	1	1, 6		31				
4									BRACKET, Aperture to Fender Right
	5527 5222	1							Left
	5527 5223	1							
5									PANEL, Body Side Aperture Rear
	5003 138AB	1	1, 6		31				Right
	5003 139AB	1	1, 6		31				Left
6	4512 871AB	2	1, 6		31				RETAINER, Door Lock Striker
7	5525 6000	2	1, 6		31				PLATE, Front Door Striker
8									TAPPING PLATE, Side Pillar Hinge Right
	5527 4600	1	1, 6		31				Left
	5527 4601	1	1, 6		31				
9									PANEL, Quarter Inner Right
	55275 268AB	1	1, 6		31				Left
	55275 269AB	1	1, 6		31				
10									BAFFLE, Body Side Hinge Pillar Right
	5527 5366	1	1, 6		31				Left
	5527 5367	1	1, 6		31				
11	5503 6334	2	1, 6		31				EXHAUSTER, Quarter Panel
12									SPACER, Door Latch Striker Gold
	4520 289	AR							Silver
	5507 5483	AR							
13	4520 288	2							STRIKER, Door Latch
14									BAFFLE, A Pillar Right
	5513 5346	1							Left
	5513 5347	1							
15									BAFFLE, B Pillar Right
	5513 5172	1	1, 6		31				Left
	5513 5173	1	1, 6		31				
16									GUSSET, Cowl Plenum To Cowl Side Right
	55274 562AC	1							Left
	55274 563AC	1							

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

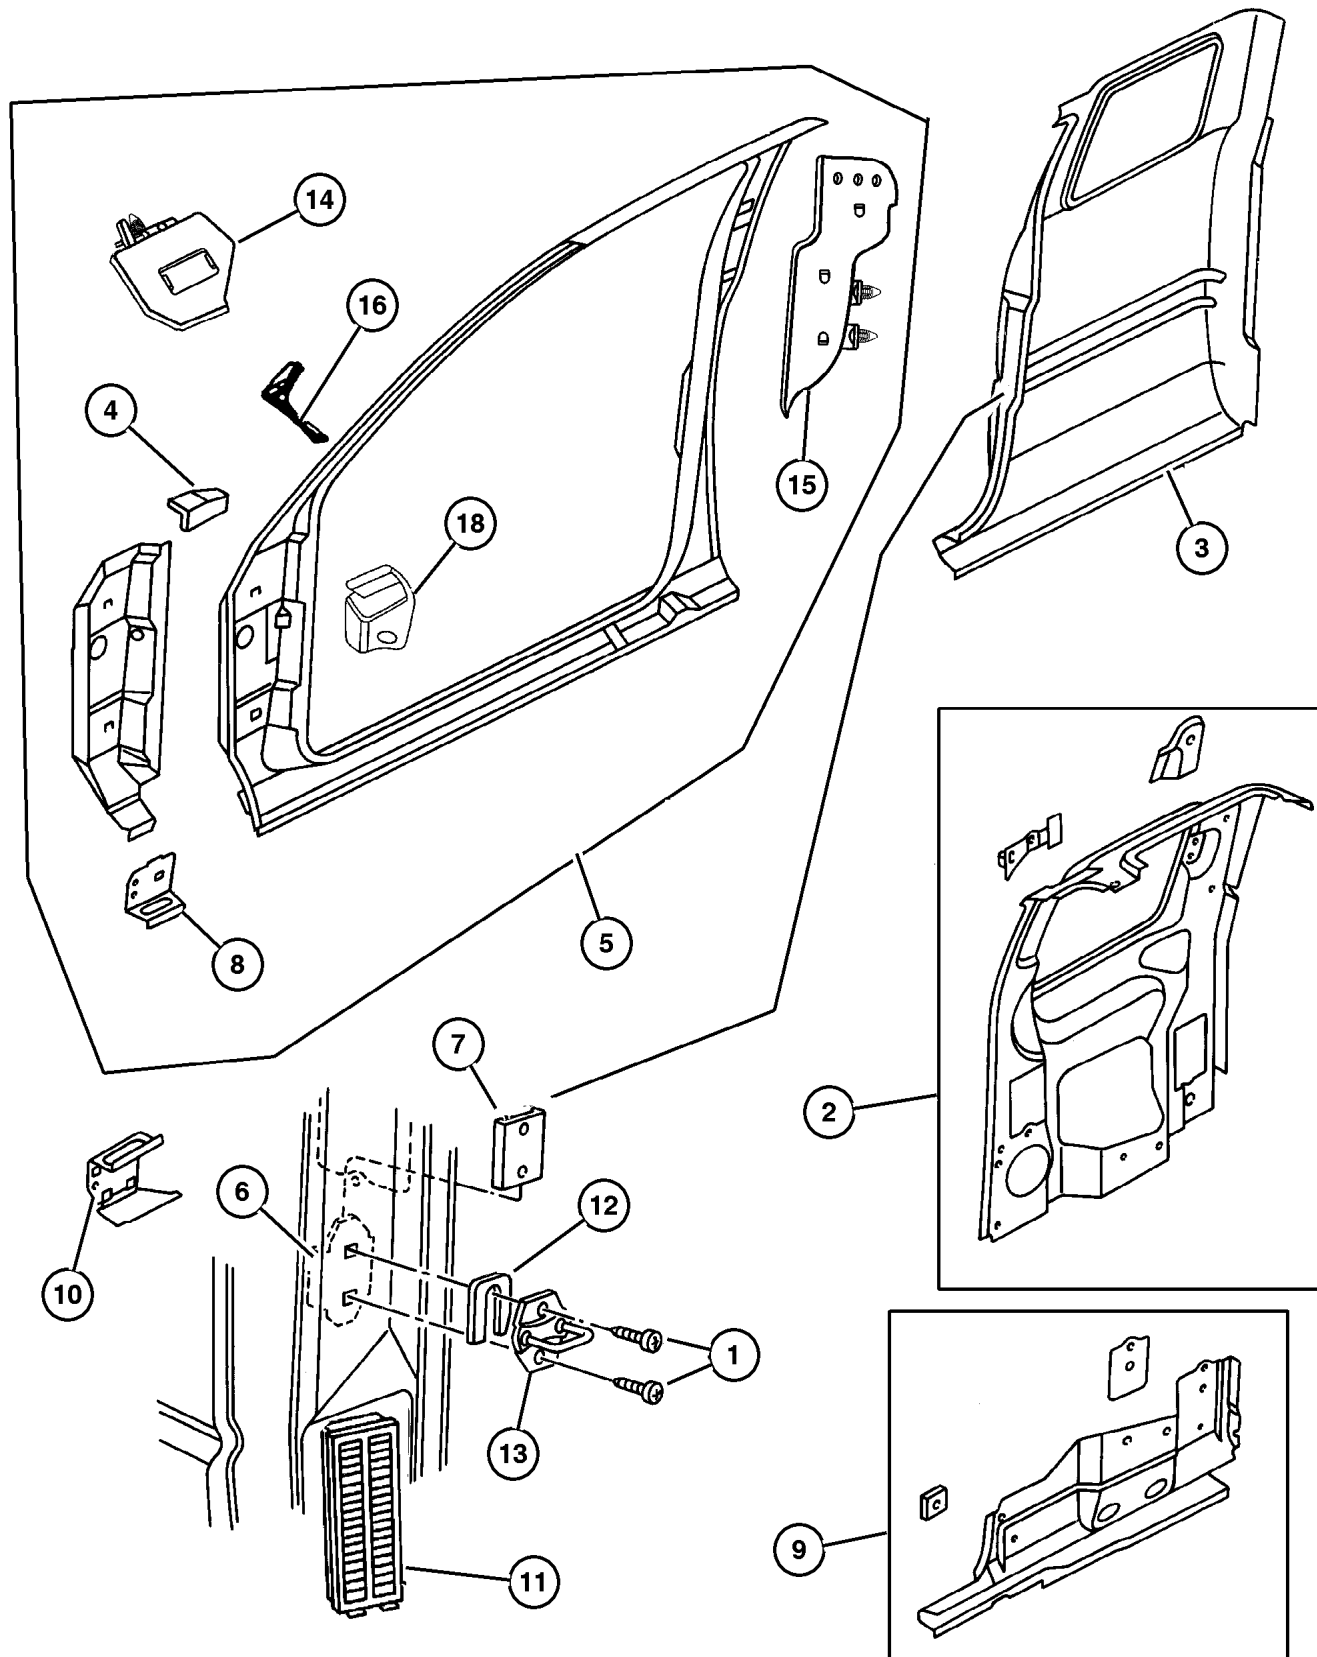
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

**Aperture Panel Bodyside, 2 Door
Figure SBE-810**



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
-17	6502 328	1	1, 6		31				PIN, Push, M5.80x13.00
18									SEAL, Body Side
	55275 508AA	1							Right
	55275 509AA	1							Left

DODGE RAM QUAD CAB/CLUB CAB (BE)

**DODGE RAM QUAD
SERIES**
L = Ram Truck (All)

LINE

1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY

31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

ENGINE

ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM, EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

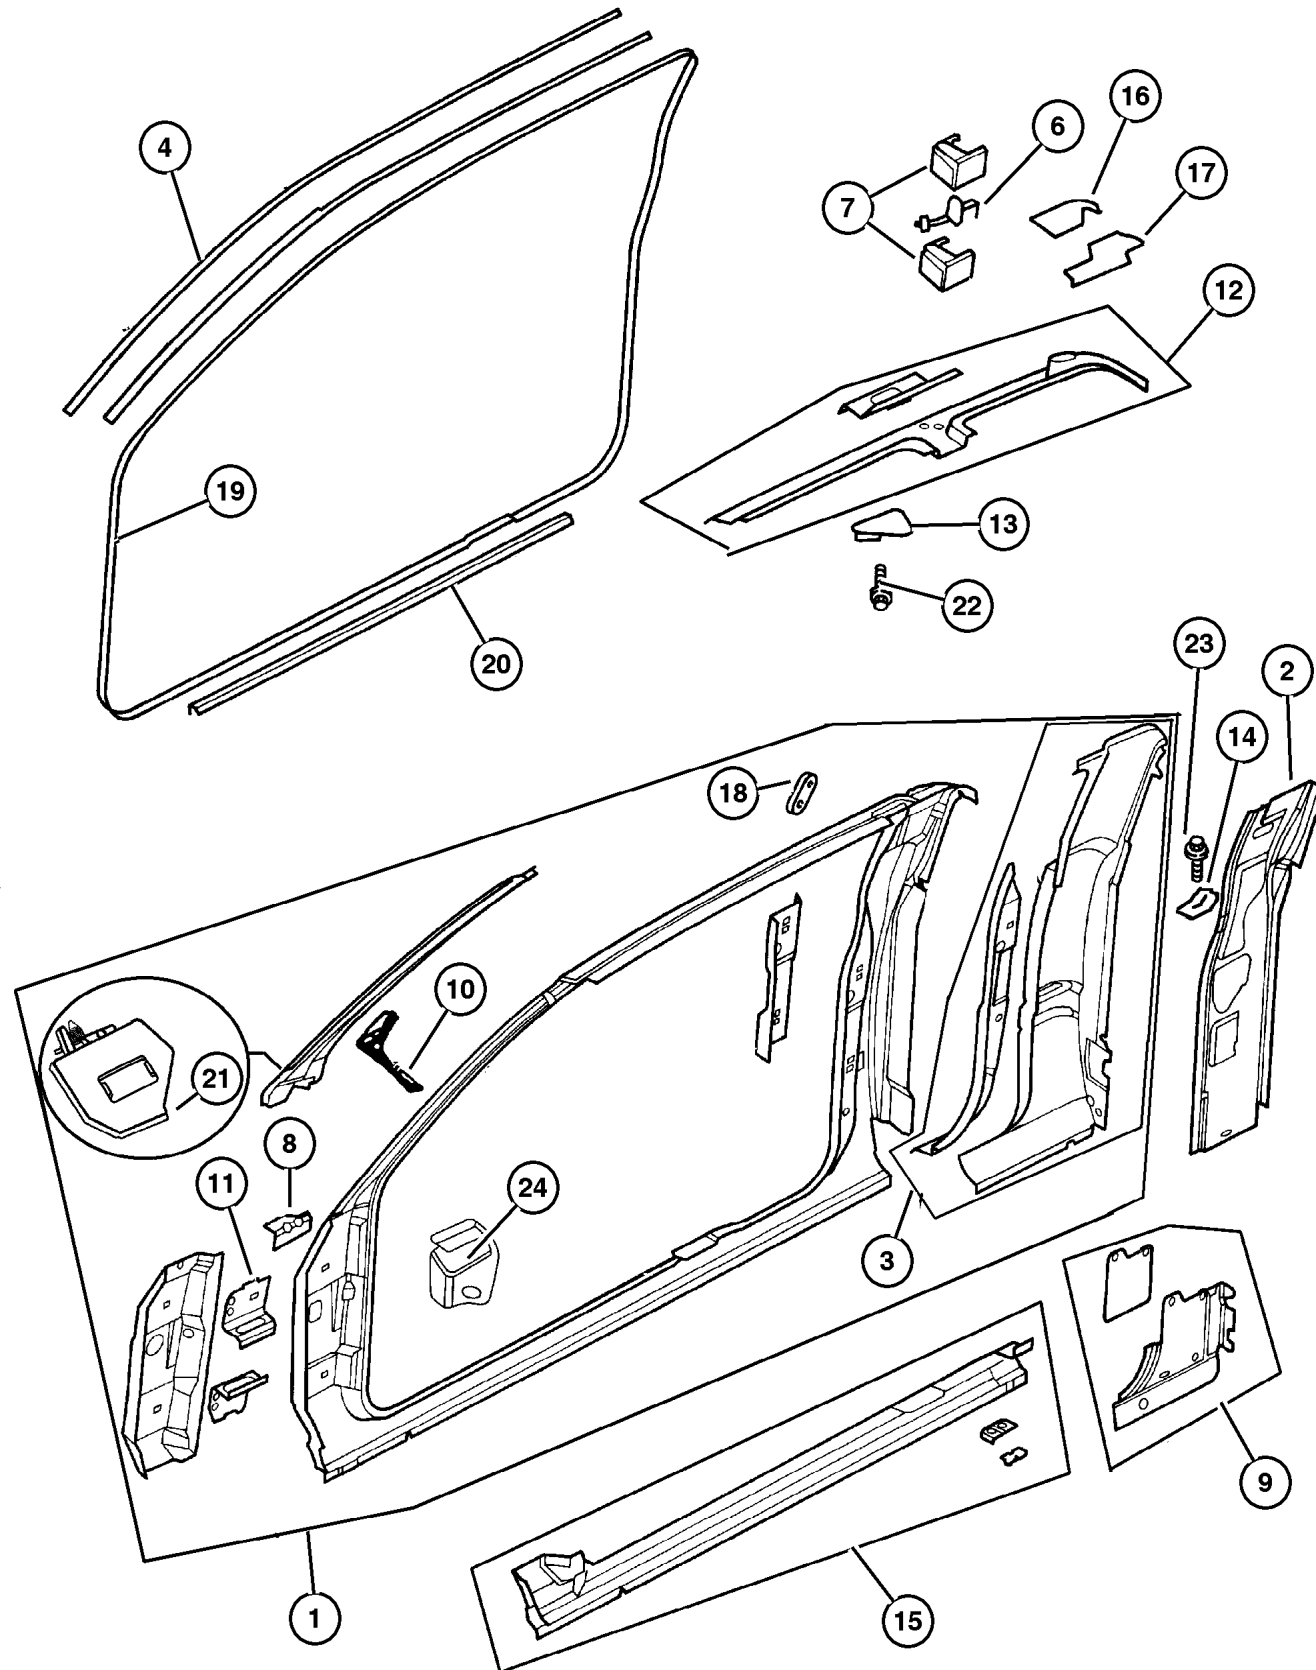
TRANSMISSION

DGP = 47RE 4 Speed Auto.
DGT, DGO = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Aperture Panel Bodyside, 4 Door Figure SBE-820



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									PANEL, Body Side Aperture Rear
	5013 088AB	1			33, 34				Right
	5013 089AB	1			33, 34				Left
2									PANEL, Quarter Inner
	5527 5136	1			33, 34				Right,Upper
	5527 5137	1			33, 34				Left,Upper
3									PANEL, Quarter
	5527 5140	1			33, 34				Right,Outer
	5527 5141	1			33, 34				Left,Outer
4	55275 460AC	2			33, 34				SEAL, Body Side, Upper,Secondary
-5									RETAINER, Bodyside Seal
	55275 056AC-	1			33, 34				Right
	55275 057AC-	1			33, 34				Left
6	5527 5238	2			33, 34				CHECK, Rear Door
7	5527 5157	4			33, 34				HINGE, Door
8									BRACKET, Aperture to Fender
	5527 5222	1							Right
	5527 5223	1							Left
9									PANEL, Quarter Inner
	5527 5212	1			33, 34				Right,Lower
	5527 5213	1			33, 34				Left,Lower
10									GUSSET, Cowl Plenum To Cowl
	55274 562AC	1							Side
	55274 563AC	1							Right
									Left
11									TAPPING PLATE, Side Pillar Hinge
	5527 4601	1			33, 34				Left
	5527 4600	1			33, 34				Right
12									RAIL, Roof
	5527 5226	1			33, 34				Right,Inner
	5527 5227	1			33, 34				Left,Inner
13									STRIKER, Door Latch
	5527 5102	1			33, 34				Right,Upper
	5527 5103	1			33, 34				Left,Upper
14									STRIKER, Door
	5527 5104	1			33, 34				Right,Lower
	5527 5105	1			33, 34				Left,Lower
15									REINFORCEMENT, Sill
	5527 5172	1			33, 34				Right
	5527 5173	1			33, 34				Left
16									BAFFLE, C Pillar

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

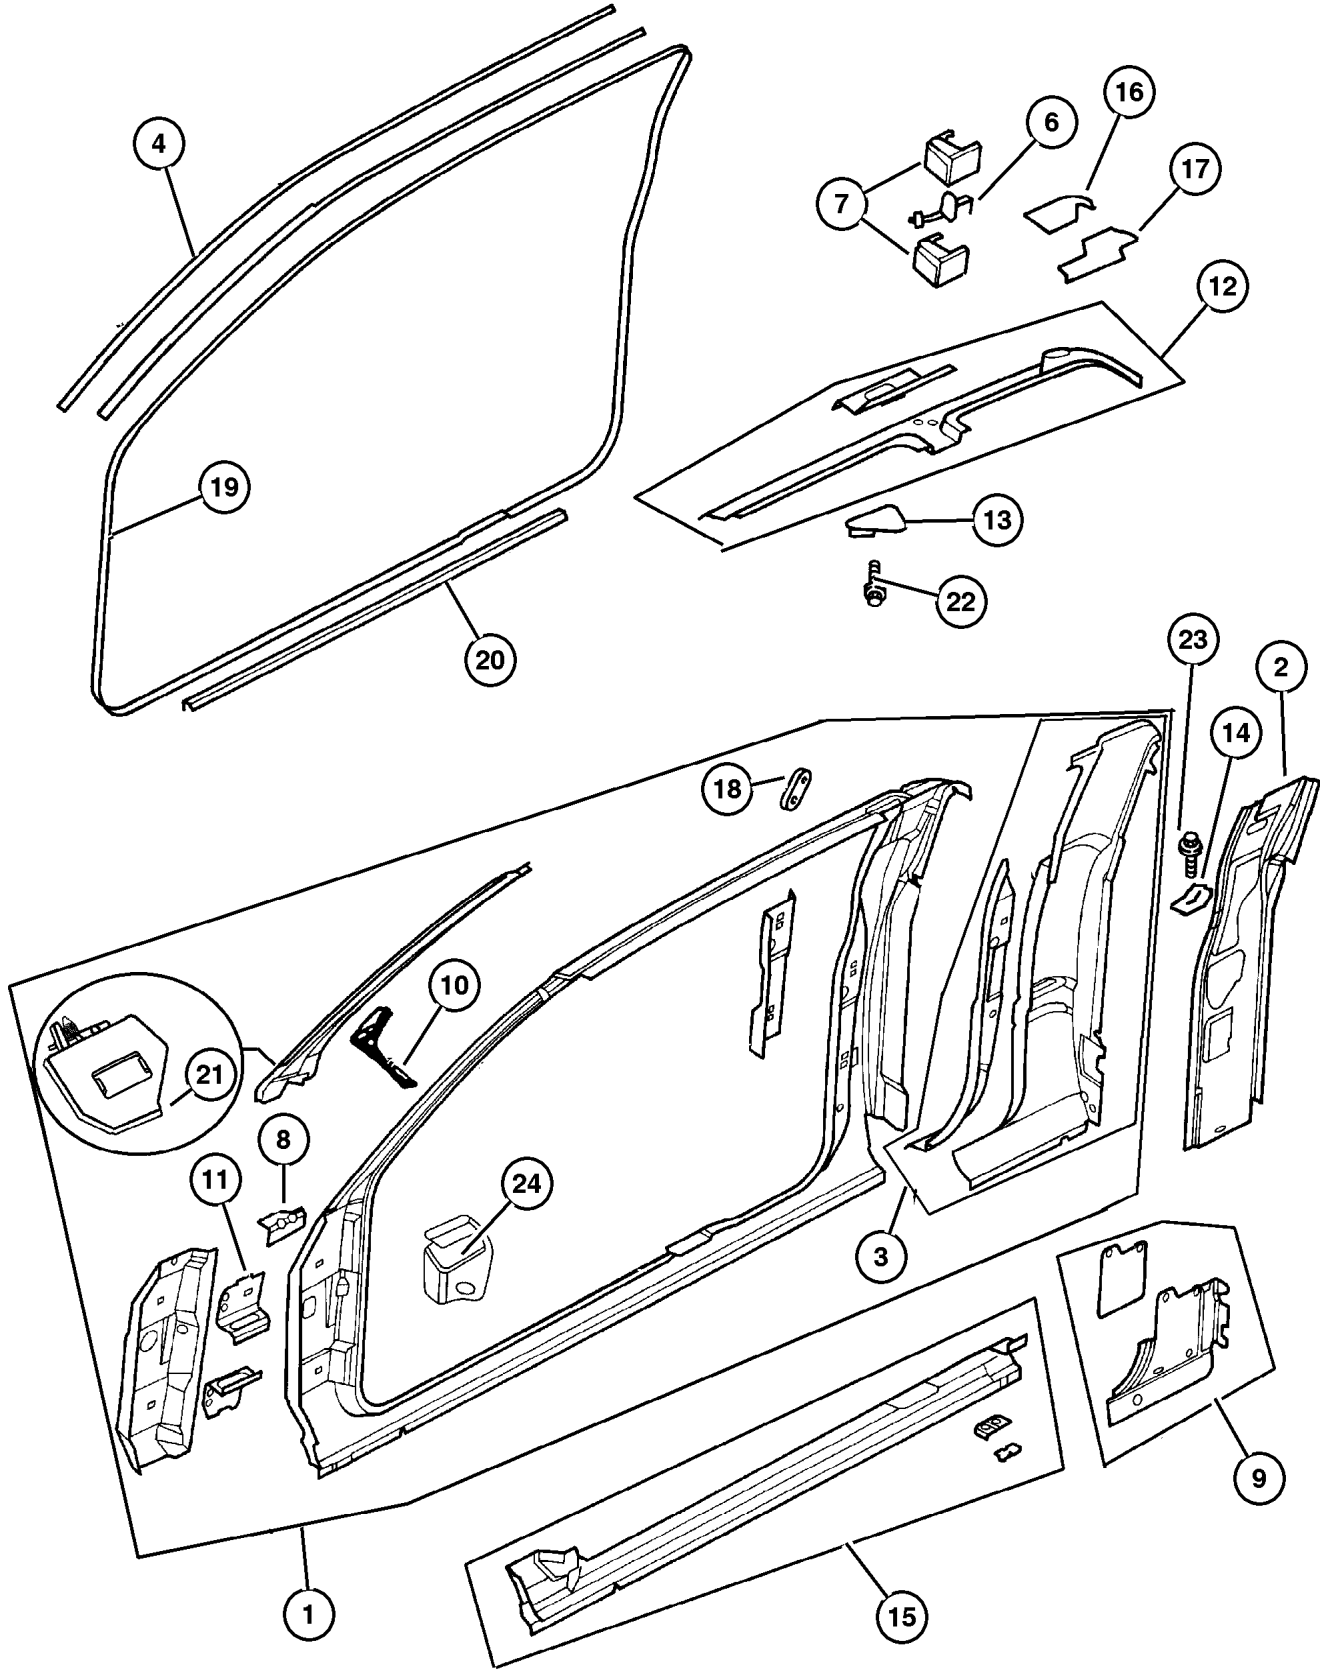
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Aperture Panel Bodyside, 4 Door
Figure SBE-820




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
17	55275 208AC	1			33, 34				Right,Outer
	55275 209AC	1			33, 34				Left,Outer
	55275 210AC	1			33, 34				BAFFLE, C Pillar
	55275 211AC	1			33, 34				Right,Inner
	55275 211AC	1			33, 34				Left,Inner
18	4490 835AB	2			33, 34				REINFORCEMENT, Shoulder Belt
19	55276 282AA	2			33, 34				WEATHERSTRIP, Front Door
20	55275 424AA	1			33, 34				SEAL, Front Door
	55275 425AA	1			33, 34				Right
	55275 425AA	1			33, 34				Left
21	5513 5346	1							BAFFLE, A Pillar
	5513 5347	1							Right
	5513 5347	1							Left
22	6100 583	6			33, 34				BOLT AND CONED WASHER, Hex
23	6505 553AA	4			33, 34				Head, M8x25x20
24	55275 508AA	1							SCREW
	55275 509AA	1							SEAL, Body Side
	55275 509AA	1							Right
									Left

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

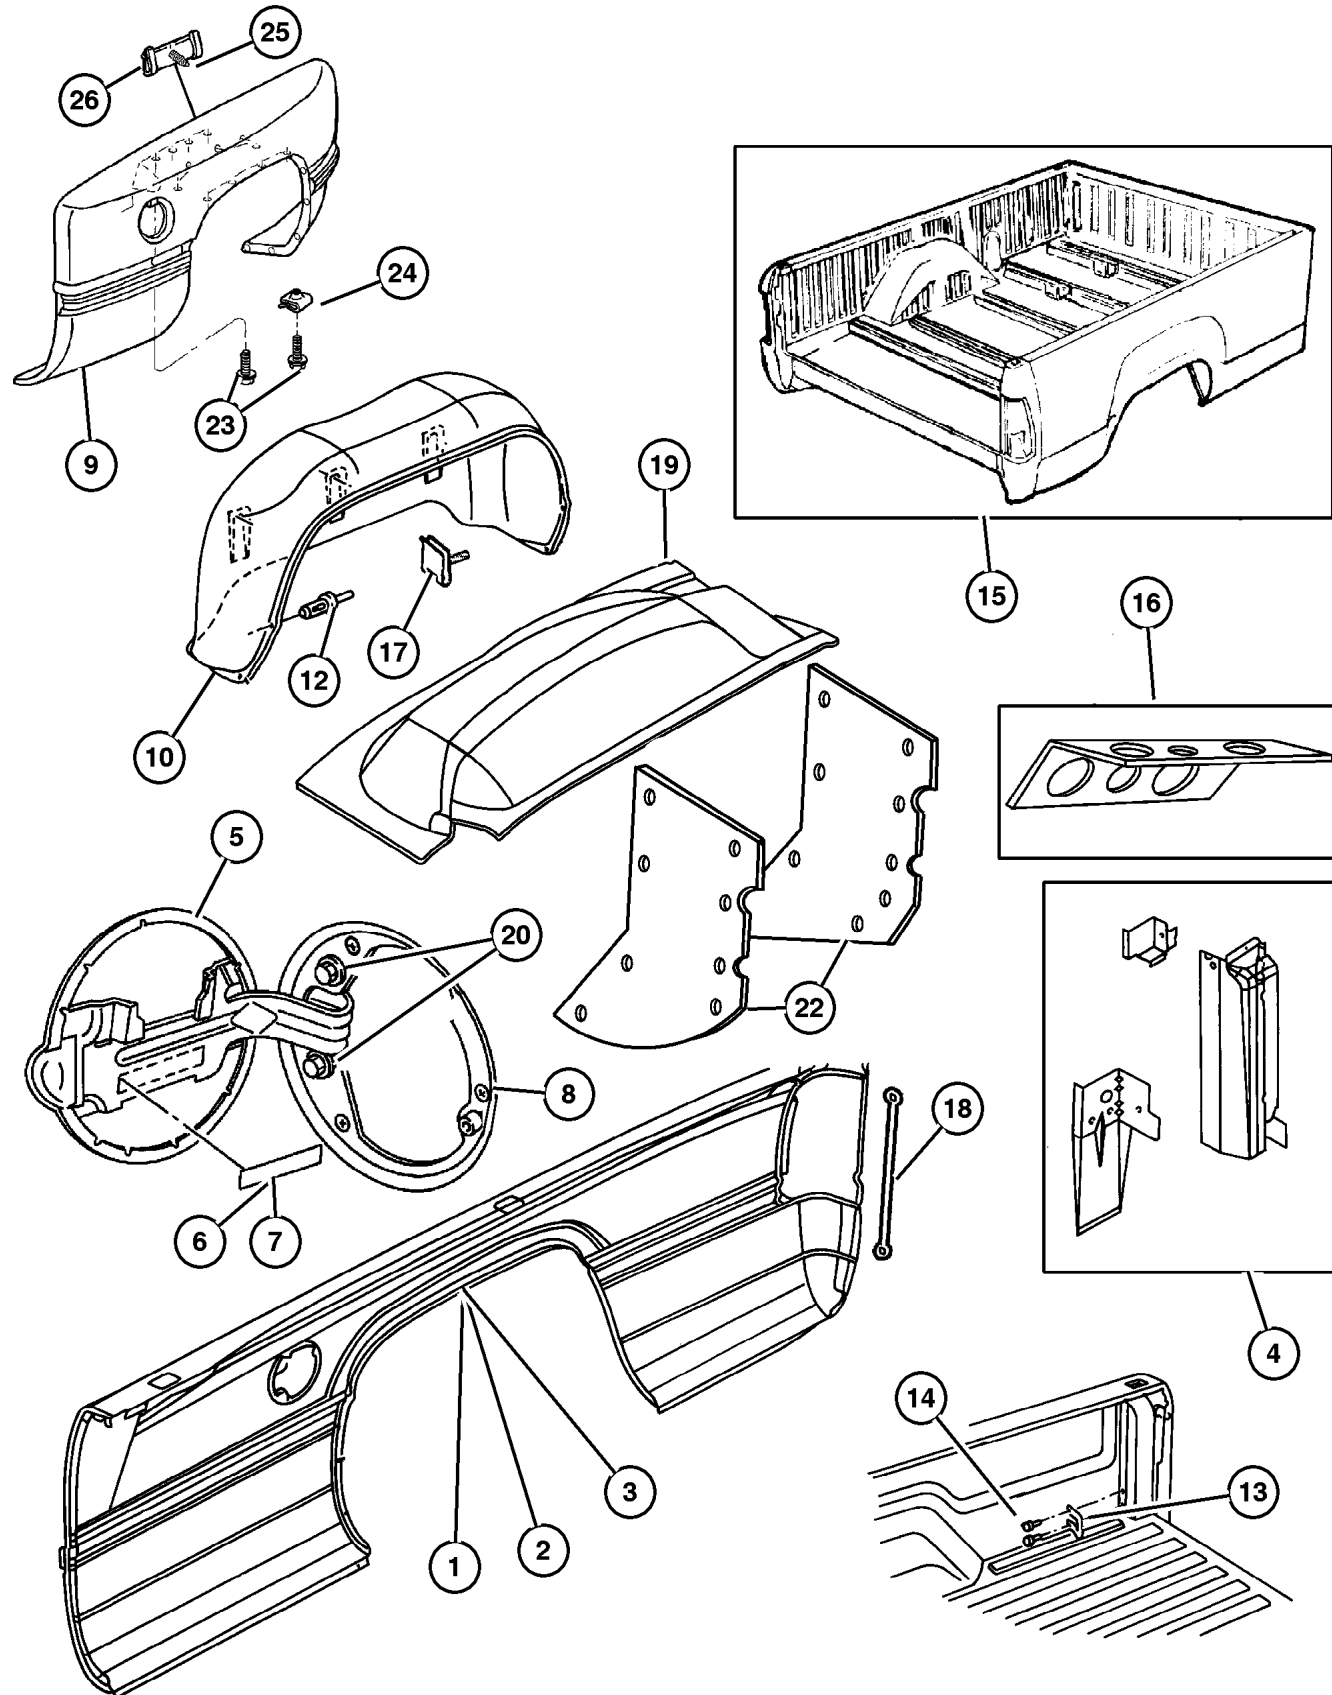Quarter Panel
Figure SBE-910



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1									PANEL, Box Side
	4856 376	1	1, 2, 6, 7		31, 33				6 1/2 Foot Box, Right
	4856 377	1	1, 2, 6, 7		31, 33				6 1/2 Foot Box, Left
	4856 380	1			34				8 Foot Box, Right
	4856 381	1			34				8 Foot Box, Left
2									PANEL, Box Side Outer
	5502 3618	1	1, 2, 6, 7		31, 33				6 1/2 Foot Box, Right
	5502 3619	1	1, 2, 6, 7		31, 33				6 1/2 Foot Box, Left
	5502 3620	1			34				8 Foot Box, Right
	5502 3621	1			34				8 Foot Box, Left
3									PANEL, Box Side, Dual Wheels
	4856 384	1			34				Right
	4856 385	1			34				Left
4									REINFORCEMENT, Quarter Rear Corner
	55274 806AB	1							Right
	55274 807AB	1							Left
5									DOOR, Fuel Fill
	55076 234AB	1							Dual Wheel
	55076 235AB	1							Label, Unleaded Fuel Only
6									English
	4206 059	1							French
	4490 411	1							Label, Fuel, Diesel
7									BUMPER, Fuel Door
	4428 652	1							
8									
	5507 6327	2							Dual Wheel
	5534 5963	2	3, 8		34				FENDER, Dual Wheel
9									Right
	5003 144AA	1	3, 8		34				Left
	5003 145AA	1	3, 8		34				SHIELD, Wheelhouse
10									BOLT, M6.3x22.80
-11									RIVET, M6.25x28 Black
12									STRIKER, Door Latch
	3420 1631	14	6, 7, 8		34				BOLT AND CONED WASHER, Hex Head, M8x25x17
13									BOX, Pickup
	5503 3171	2							6 1/2 Foot Box
	6100 575	2							8 Foot Box
15									Dual Wheel, 8 Foot Box
	4874 783AB	1	1, 2, 6, 7		31, 33				REINFORCEMENT, Box Side
	4874 785AB	1			34				
	4882 570AB	1			34				
16									

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

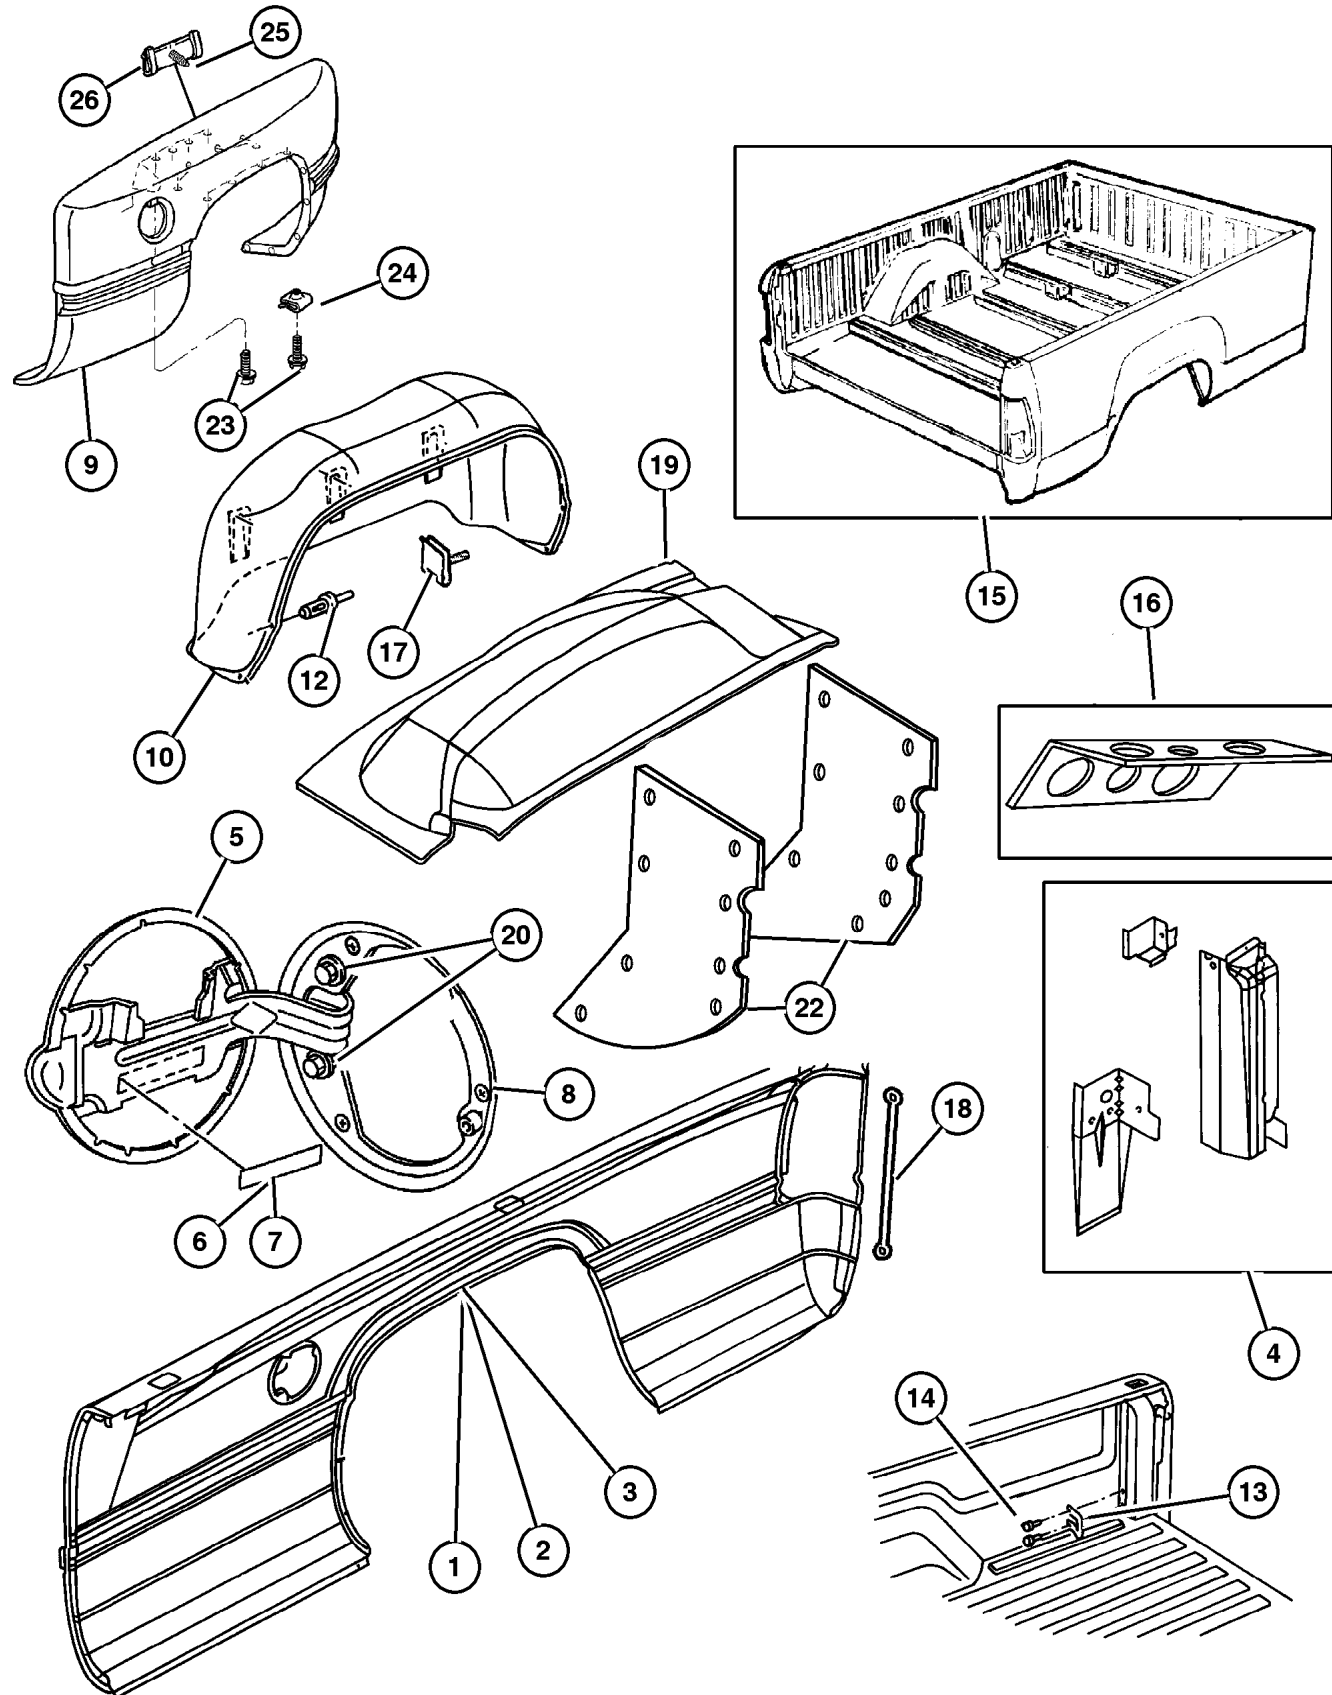
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Quarter Panel
Figure SBE-910



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
	5527 4780	2							Right
	5527 4781	2							Left
17	6503 735	18	3, 8		34				SCREW, Stake, M6x1x20
18									BRACKET, Stop Lamp
	5534 4816	1							Right
	5534 4817	1							Left
19	5534 5598	2	3, 8		34				EXTENSION, Wheel House, Dual Wheel
20	6503 259	2							SCREW, Tapping, M6x1x20
-21	3420 2335	4							FASTENER, M7.4 Christmas Tree
22									SHIELD, Splash
	5527 5260	1	3, 8		34				Right,Front
	5527 5261	1	3, 8		34				Left,Front
	5527 5262	1	3, 8		34				Right,Rear
	5527 5263	1	3, 8		34				Left,Rear
23	6503 267	40	3, 8		34				SCREW, Round Head, M6x1x25
24	6101 712	40	3, 8		34				NUT, U, M6x1
25									SCREW AND WASHER, Hex Head, M10x1.5x45
	6503 298	8			34				
		6	1, 2, 6, 7		31, 33				
26	6502 780	16	3, 8		34				STUD, M6x1.0x18.0
-27	4386 472	2	1, 6		31				SILENCER, Wheelhouse, Rear Wheelhouse Front

DODGE RAM QUAD CAB/CLUB CAB (BE)

SERIES
L = Ram Truck (All)

LINE
1, 6 = 1500
2, 7 = 2500
3, 8 = 3500

BODY
31 = Club Cab (138WB)
33 = QuadCab(138WB)
34 = Quad Cab (154 WB)

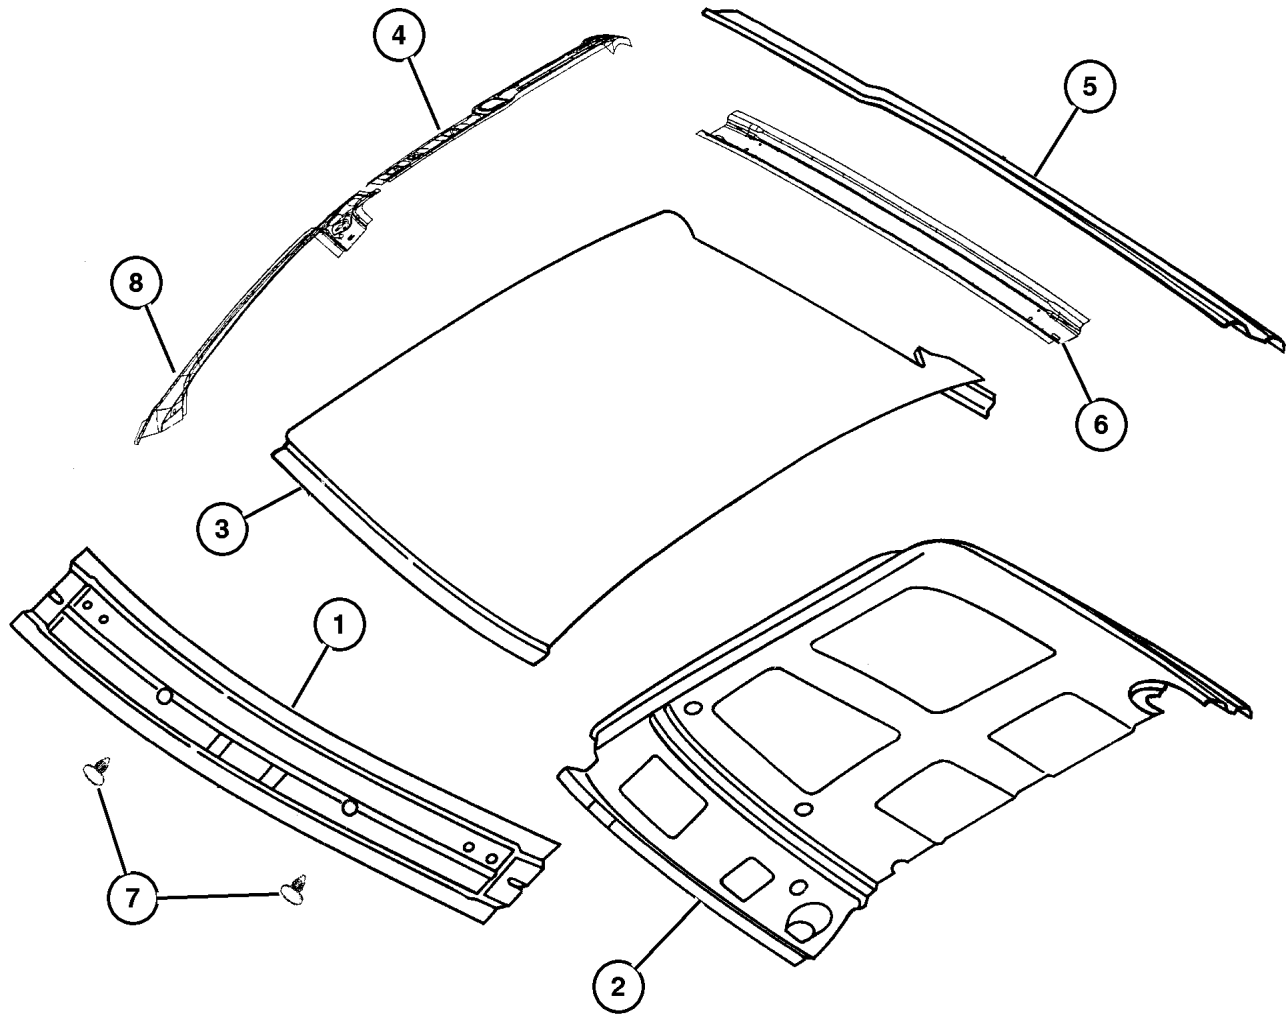
ENGINE
ELF, EL0 = 5.2L 8 Cil.
ETC, ET0, ETH = 5.9L 6 Cil.
EML, EMM,EM0 = 5.9L 8 Cil.
EWA, EW0 = 8.0L 10 Cyl.
EAA = All Engines
EAG = All Gas Engines

TRANSMISSION
DGP = 47RE 4 Speed Auto.
DGT, DG0 = 46RE 4 Speed Auto.
DDX, DDC = 5 Speed HD Manual
DDP, DD0 = 5 Speed Manual
DEE = 6 Speed HD Manual

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

Roof Panel
Figure SBE-1110




ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	5527 5322	1							HEADER, Roof Front
2	55275 164AC	1							ROOF, Inner
3	5527 4932	1	1, 6		31				ROOF
	5527 4996	1			33, 34				
4	5527 4625	1	1, 6		31				RAIL, Roof Left
	5527 5226	1			33, 34				Right
	5527 4624	1	1, 2, 6, 7		31, 32				Right
	5527 5227	1			33, 34				Left
5	55023 541AB	1							HEADER, Roof Rear
6	4778 709	1							BOW, Roof
7	6030 441	2							PIN, Retainer
8	55275 280AB	1							FRAME, Windshield Side Right
	55275 281AB	1							Left

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005

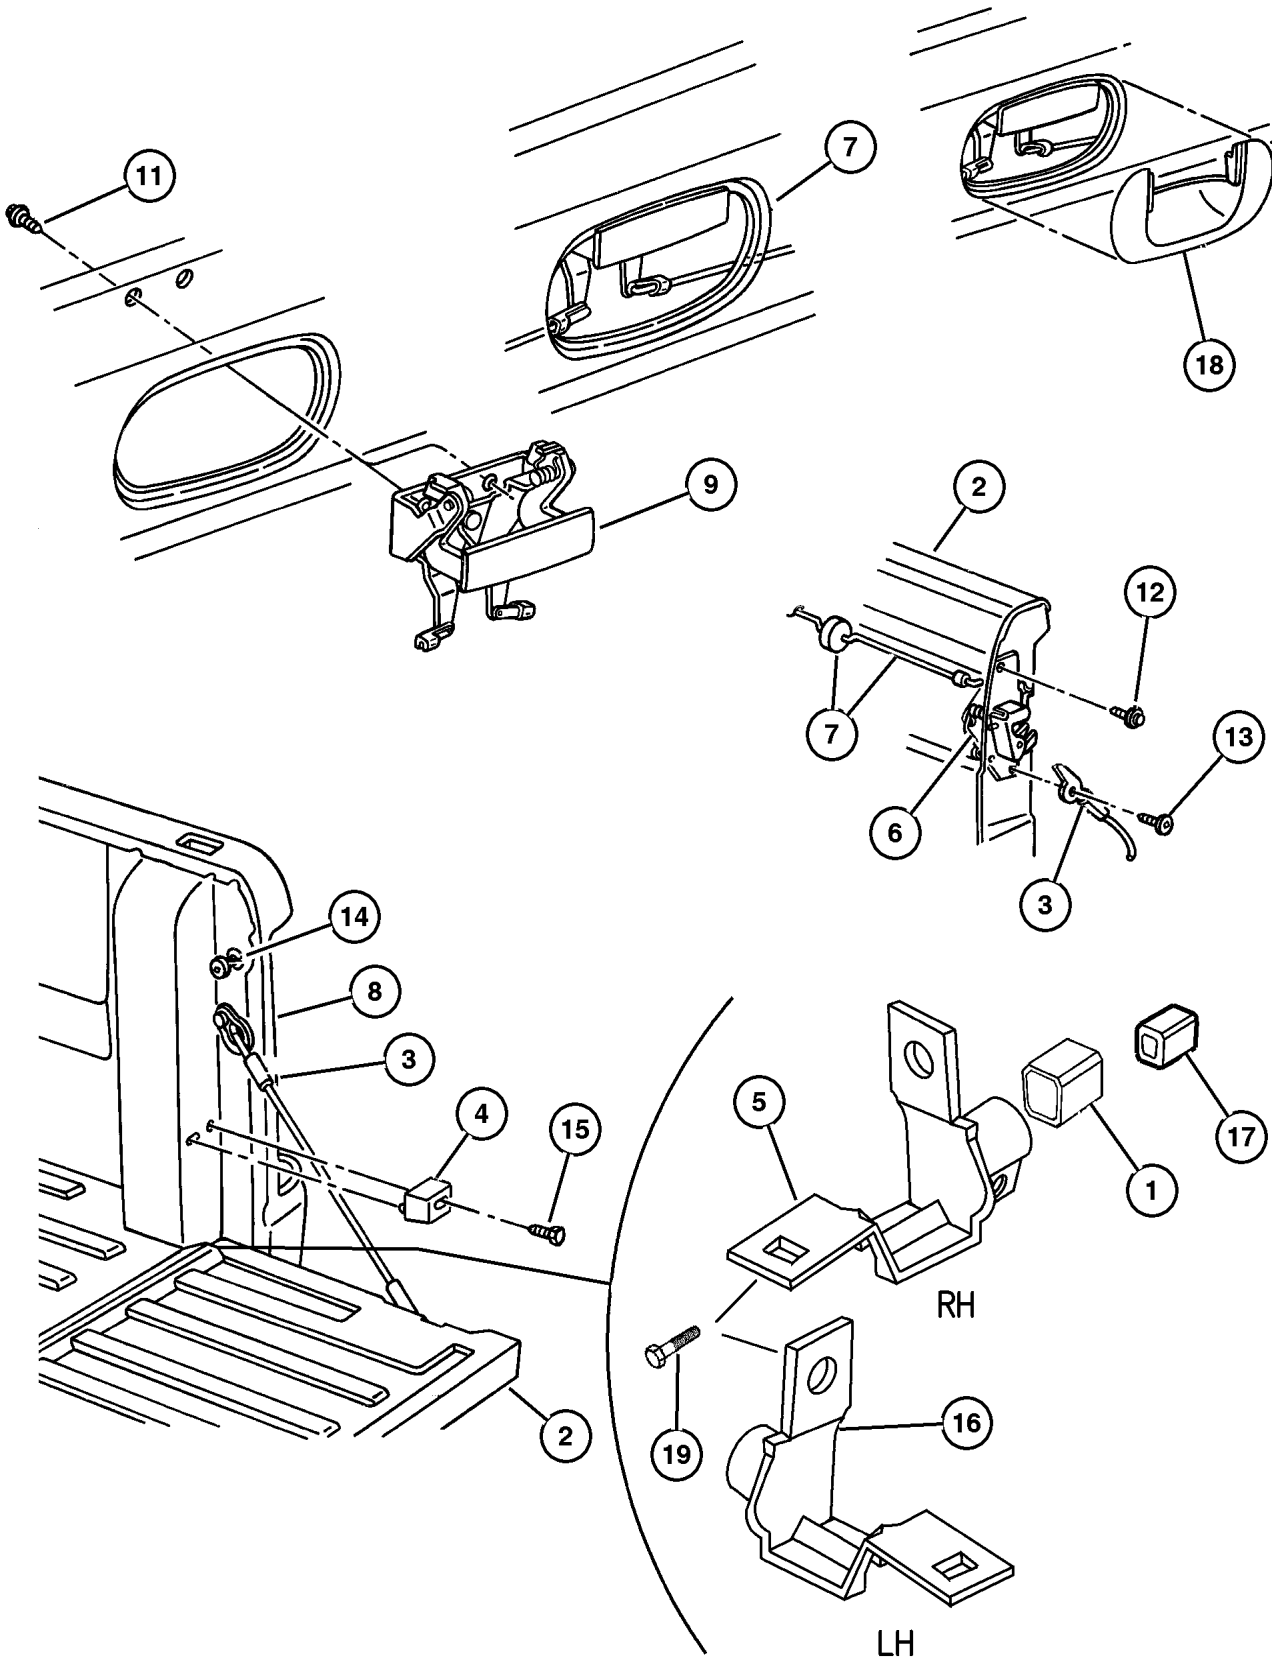Tailgate
Figure SBE-1310



ITEM	PART NUMBER	QTY	LINE	SERIES	BODY	ENGINE	TRANS	TRIM	DESCRIPTION
1	5527 5016	1							PIVOT, Tailgate
2	55274 833AC	1							TAILGATE Dual Wheel
	55274 915AC	1							
3									CABLE, Tailgate
	55345 124AB	1							Right
	55345 125AB	1							Left
4	5527 4842	2							BUMPER, Tailgate
5	5527 4916	1							PIVOT, Tailgate
6									LATCH, Tailgate
	55275 485AA	1							Left
	55275 484AA	1							Right
7	55075 698AC	2							ROD, Tailgate Handle to Latch
8									REINFORCEMENT, Box Side
	5527 5020	1							Right
	5527 5021	1							Left
9	55074 580AB	1							HANDLE, Liftgate
-10	4658 674	1							CLIP, Latch Link
11									SCREW AND WASHER, Tapping, M6-1.0x20.0, M6x1.00x20.00, (NOT SERVICED) (Not Serviced)
12	6036 019AA	2							SCREW
13	6036 018AA	2							BOLT, Shoulder
14	6034 460	2							STRIKER, Tailgate Latch, .375-16x1. 988
15									SCREW, .19-16x.50, (NOT SERVICED) (Not Serviced)
16	5527 4917	1							PIVOT, Tailgate, Left
17	55274 936AC	2							BUSHING, Tailgate Pivot
18	5507 4751	1							ESCUTCHEON, Tail Gate Handle
19	6025 351	4							SCREW AND WASHER, Hex Head, .312-18x1.00

DODGE RAM QUAD CAB/CLUB CAB (BE)				
SERIES	LINE	BODY	ENGINE	TRANSMISSION
L = Ram Truck (All)	1, 6 = 1500	31 = Club Cab (138WB)	ELF, EL0 = 5.2L 8 Cil.	DGP = 47RE 4 Speed Auto.
	2, 7 = 2500	33 = QuadCab(138WB)	ETC, ET0, ETH = 5.9L 6 Cil.	DGT, DG0 = 46RE 4 Speed Auto.
	3, 8 = 3500	34 = Quad Cab (154 WB)	EML, EMM,EM0 = 5.9L 8 Cil.	DDX, DDC = 5 Speed HD Manual
			EWA, EW0 = 8.0L 10 Cyl.	DDP, DD0 = 5 Speed Manual
			EAA = All Engines	DEE = 6 Speed HD Manual
			EAG = All Gas Engines	

AR = Use as required - = Non illustrated part # = New this model year

September 16, 2005